

 
Starter Guide

Please read this guide before operating this equipment.
After you finish reading this guide, store it in a safe place for future reference.




Set Up the Machine


Do You Have Everything?

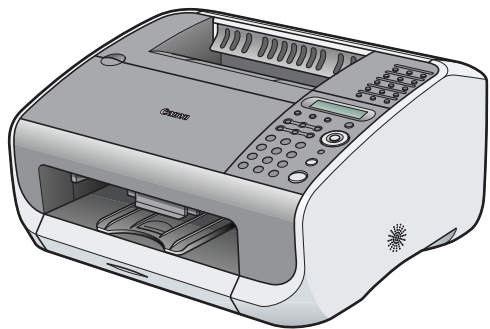


● Machine

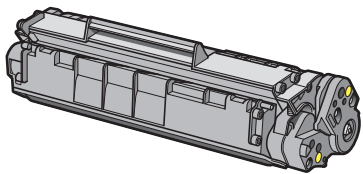 


● Cartridge

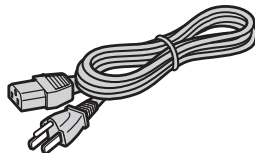 

● Power Cord

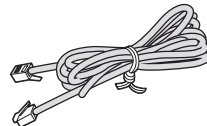 


● Telephone Cable

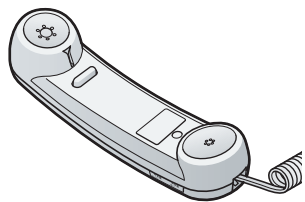 


● Handset



 ● Handset Cradle

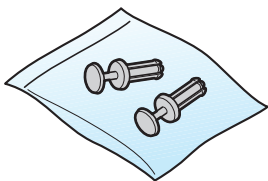

● Plugs with Pins

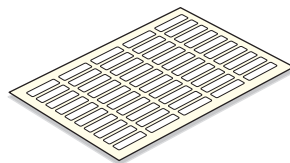 


● Destination Labels
● Starter Guide
● Basic Guide
● User Software CD

● Limited Warranty Notice
● Cartridge Warranty Notice

Before Setting Up the Machine

 - Remove all shipping tape on the machine.
- Always hold the bottom when you lift the machine.
- The machine illustration may differ slightly from your machine.

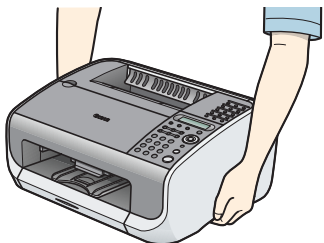

Manuals for the Machine

 
- Starter Guide (This Document): Machine set-up and software installation
- Basic Guide: Basic features
- Advanced Guide (in User Software CD): Advanced fax features, status monitor, and reports and lists
- Software Guide (in User Software CD): Driver set-up and printing from a computer

Assistance:


If you have a problem with your machine and you cannot solve it by referring to the manuals listed above, please contact our Canon Authorized Service Facilities or the Canon Customer Care Center at 1-800-828-4040 between the hours of 8:00 A.M. to 8:00 P.M. EST Monday through Friday and 10:00 A.M. to 8:00 P.M. on Saturday.

Install Cartridge

1

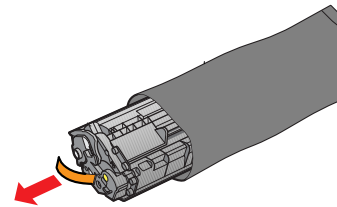


 Remove the cartridge from the bag.
Keep the bag for future use.

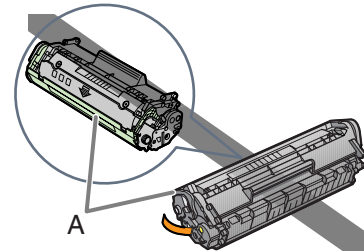


CAUTION
Do not open the drum protective shutter (A).

 2

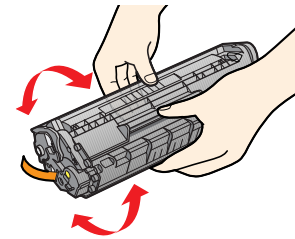


Gently rock the cartridge several times to distribute
toner inside.

 3

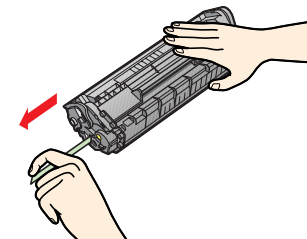


Pull out the seal completely.
NOTE
Do not pull out the seal at an angle.

 4

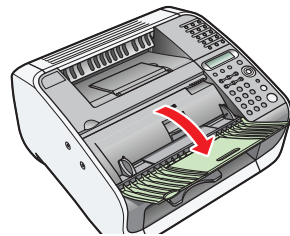


Open the document feeder tray.

 5

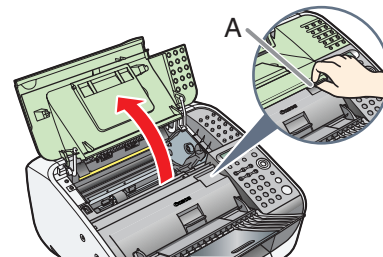


Open the cartridge cover by the notch (A).

 6

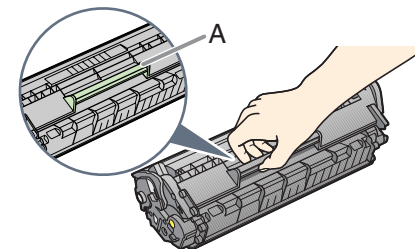


Hold the cartridge by its handle (A).

 7

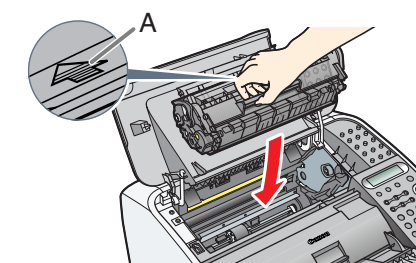


Insert the cartridge in the machine as far as it will
go. The arrow (A) on the cartridge should be facing
away from you and pointing down.

 8

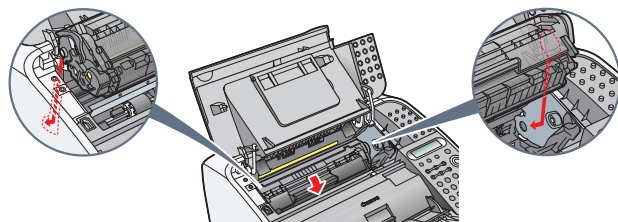


Push down the cartridge to make sure it is properly
set in the machine.

 9

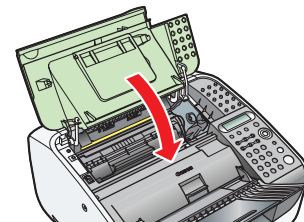

Close the cartridge cover.
NOTE
Be careful not to get your fingers caught.

 10

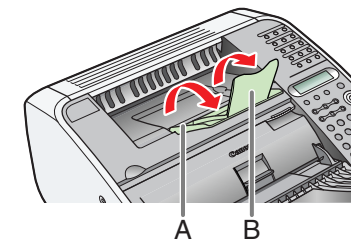


Open the paper delivery tray (A) and the extension
(B).

Load Paper

Load Paper

 
1

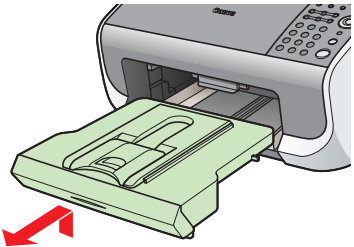

Lift the paper stack cover and pull it out completely.


NOTE
Make sure the back end of the cover does not catch the front paper guide.

 2

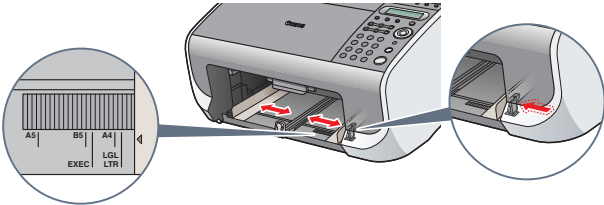


Pinch and slide the side paper guides to the size of paper.

 3

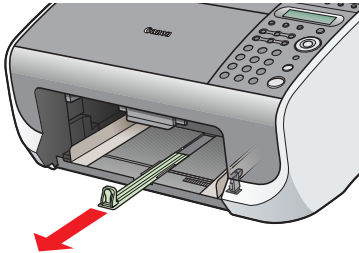


Pull out the paper guide rail as far as it will go.

 4

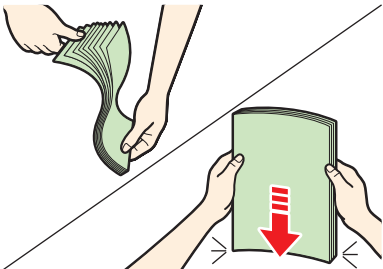

Fan the paper stack and even the edges.

 
5

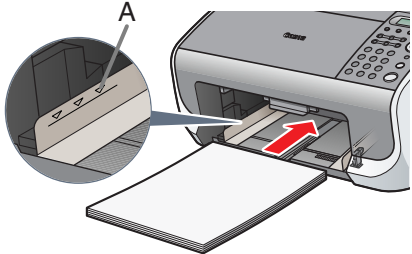

Insert the paper stack print side up.


NOTE
Make sure the stack height does not exceed the limit mark (A).

 6

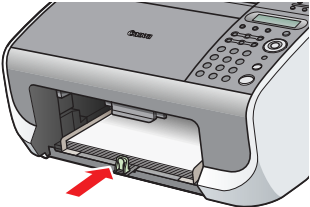

Push back the paper guide rail to the front edge of paper.

 7

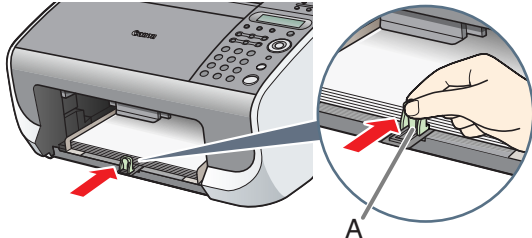


Insert the paper stack cover.

NOTE

- If loading paper shorter than Letter, pinch and slide the front paper guide (A) to match the paper size.
- If loading paper other than Letter, make sure to set the correct paper size in the machine. (See Chapter 3, “Print Media,” in the Basic Guide.)

 8

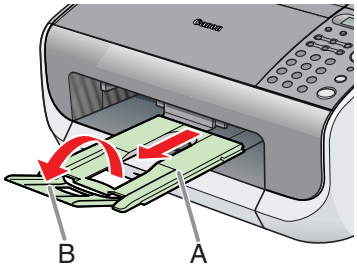


Pull out the document delivery tray (A) and the extension (B).

! Do not open or close the document delivery tray extension without extending the document delivery tray first.

Connect Telephone Cables and Install Handset

 
Connect Telephone Cables

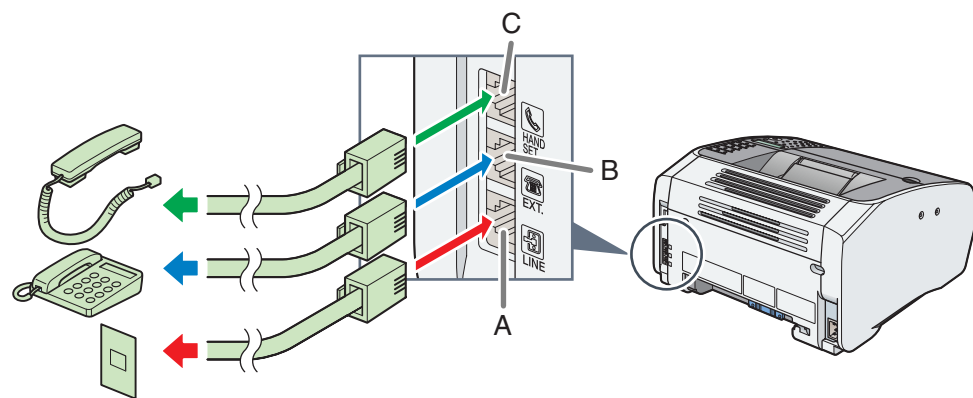

Connect the supplied telephone cable to the line jack (A) and the wall jack.
Connect the handset cable to the handset jack (C).
Connect any external device to the external device jack (B) if required.


Install Handset

 1

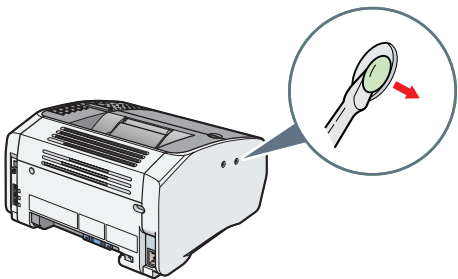

Use a screwdriver to remove the covers on the left side of the machine.

 2

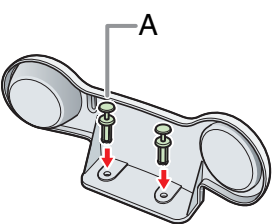


Insert the plugs with pins (A) into the holes on the handset cradle.

NOTE


Do not insert the pins all the way into the plugs at this point.

 3

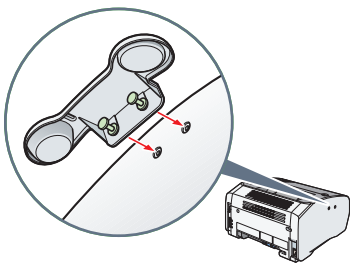


Insert the plugs (with the cradle) into the holes on the machine.

 4

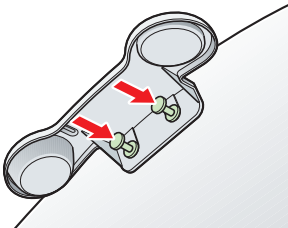


Carefully push the pins into the plugs as far as they will go.

 5

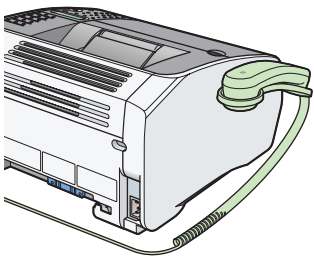

Place the handset on the cradle.

 6

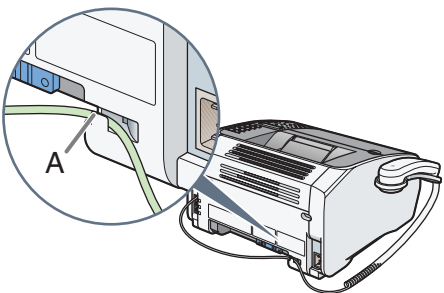

Hook the handset cable on the retainer (A) at the back of the machine to retain the slack.

 
NOTE

If using the handset or an external telephone, make sure to set the fax receive mode to <FAX/TEL>, <MANUAL>, or <DRPD>. For instructions on how to set the receive mode, see "Set the Receive Mode," on p. 16.


Connect Power Cord

Connect Power Cord

1

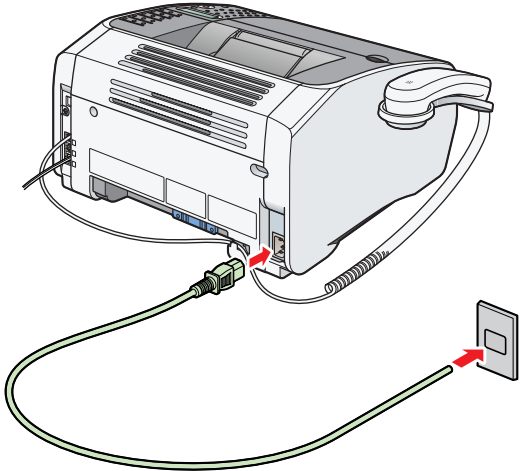

2



Connect the power cord into the rear socket and the wall outlet to turn on the machine.

The machine enters the standby mode.

 
What if...

- **<CARTRIDGE COVER OPEN> is displayed:**
Make sure that the cartridge cover is closed properly.
(See "Install Cartridge," on p. 3.)
- **<NO TONER CARTRIDGE> is displayed:**
Make sure that the cartridge is installed properly.
(See "Install Cartridge," on p. 3.)
- **<PAPER SIZE ERROR> is displayed:**
Make sure that Letter-size paper is loaded in the machine. (See "Load Paper," on p. 5.)
If you loaded paper other than Letter, make sure to set the correct paper size in the machine.
(See Chapter 3, "Print Media," in the Basic Guide.)

Set the Machine for Sending Faxes

Register Sender Information

The sender information you register in the machine appears in the header of each page received by your recipient.

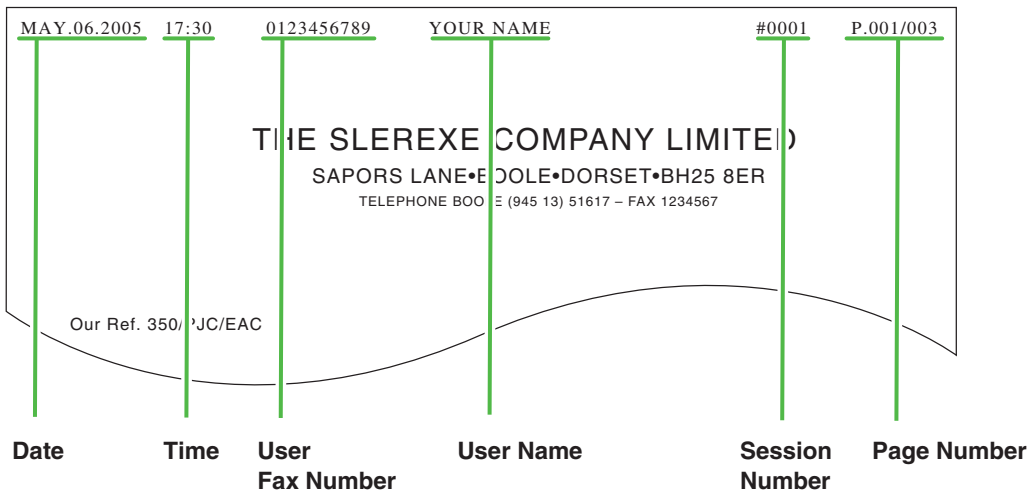


NOTE

Before sending a fax, you MUST register your fax number, user name, and the current date and time in the machine.

Entering Information

 Use the following buttons to enter information in the machine.

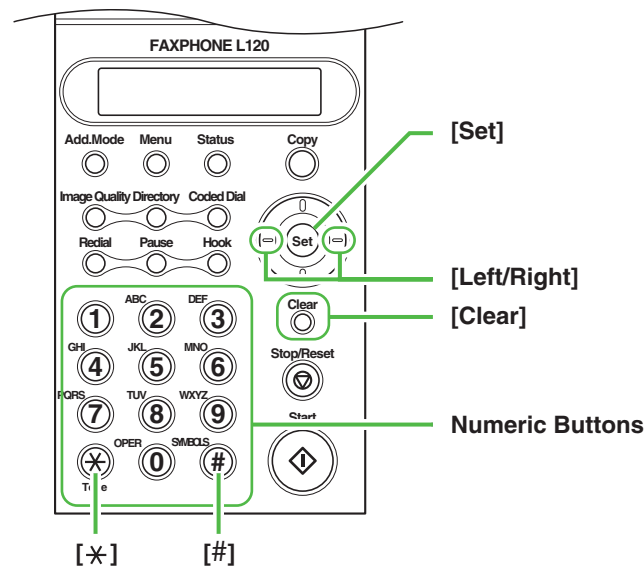

- Use the numeric buttons to enter characters. Press the numeric button repeatedly until the required character appears.
- Press [#] to enter spaces or symbols.
- Press [*] to switch between input modes:
 - [A]: Letter mode
 - [1]: Number mode
- Press [Left/Right] to move the cursor.
- Press [Clear] to delete the character at the cursor position. Hold [Clear] to delete the entire entry.
- Press [Set] to confirm the entry.


You can enter the following characters in each input mode:

	[A]	[1]
1		1
2	ABCabc	2
3	DEFdef	3
4	GHIghi	4
5	JKLjkl	5
6	MNOmno	6
7	PQRSpqrs	7
8	TUVtuv	8
9	WXYZwxyz	9
0	0	0
#	(space) - . * # ! " , ; : ^ ` _ = / ' ? \$ @ % & + () [] { } < >	#
*	→ [A] → [1] →	

Set the Machine for Receiving Faxes

Select the Receive Mode that Suits Your Needs

 
Follow the chart below to determine the right receive mode for your needs.

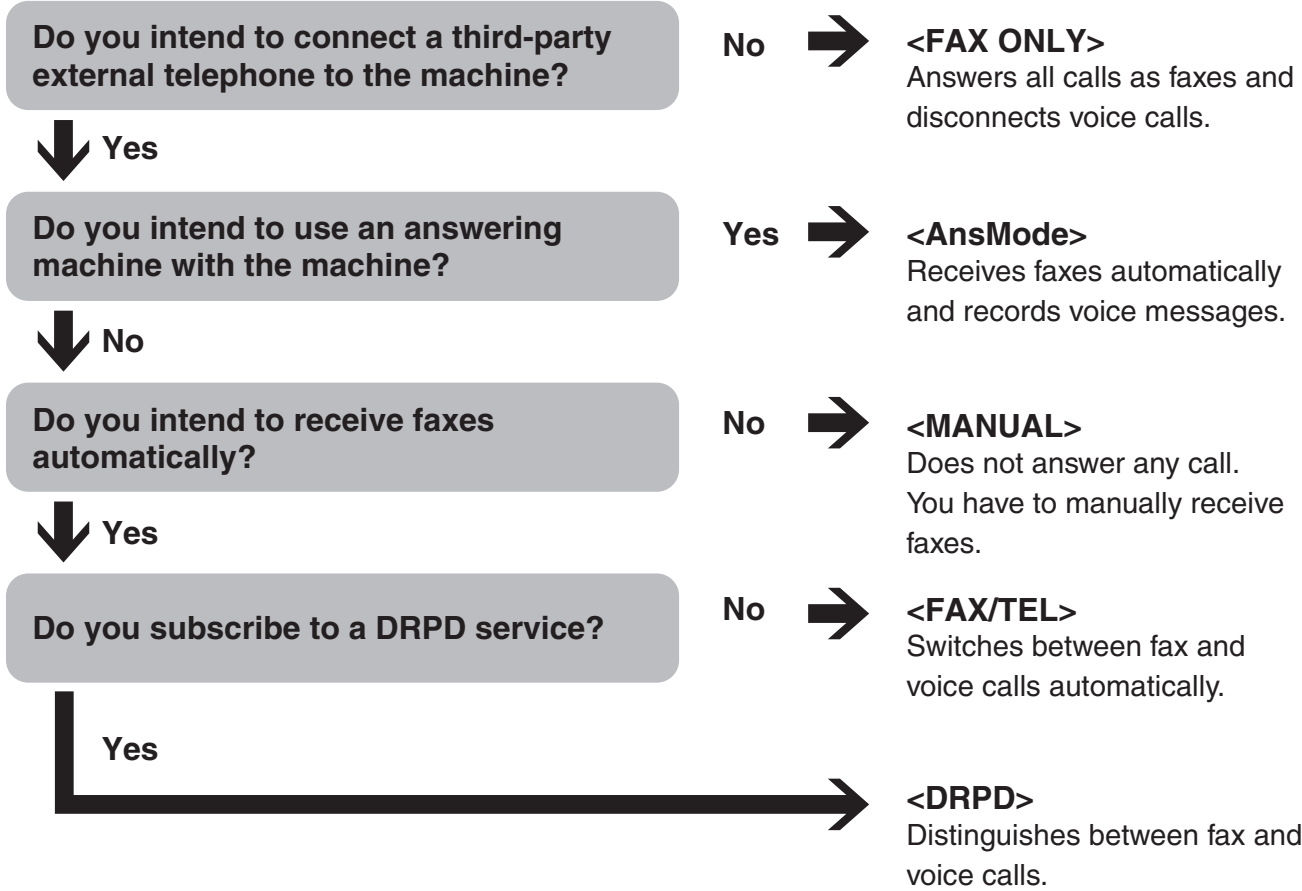

NOTE

- The answering machine must be connected directly to the machine for <AnsMode> to work.
- Voice mail is not supported with <AnsMode>.
- The <DRPD> mode requires subscription to a DRPD (Distinctive Ring Pattern Detection) service. Contact your telephone company for availability.

 Set the Receive Mode

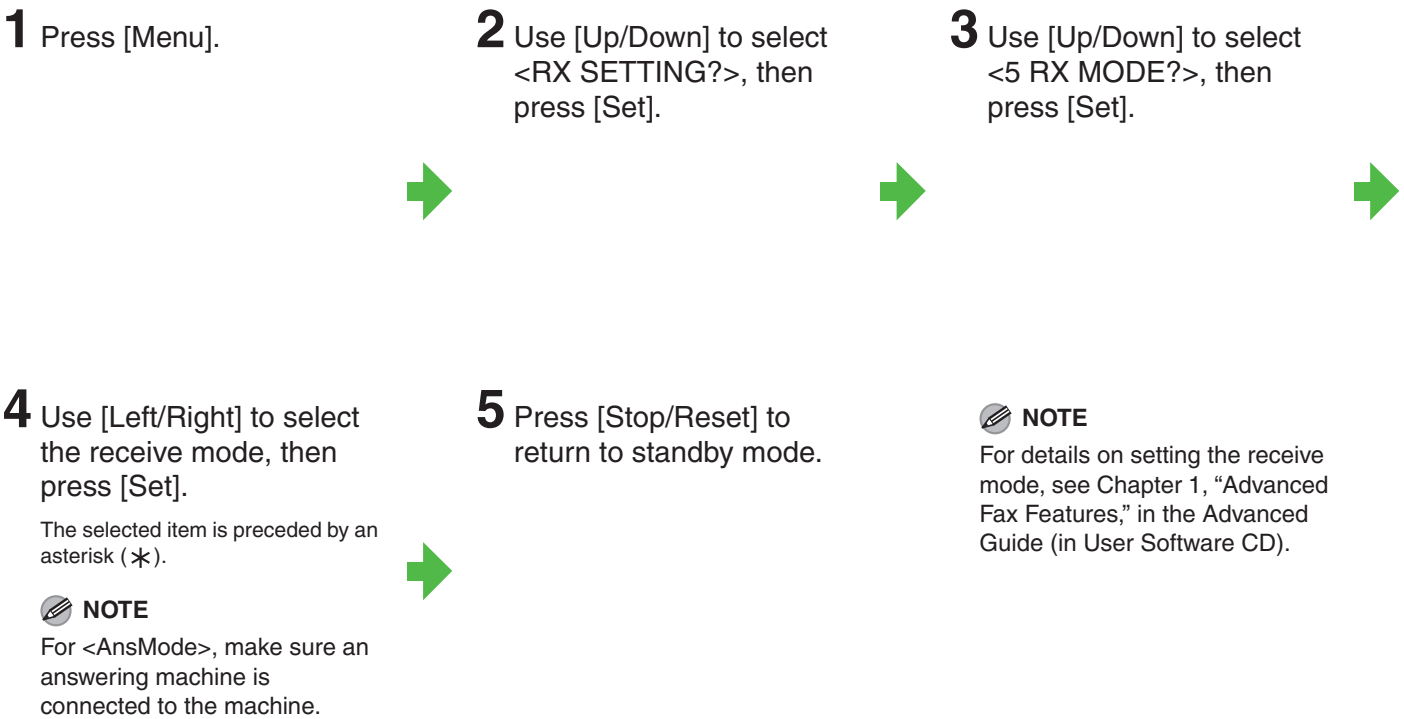

NOTE

For <AnsMode>, make sure an answering machine is connected to the machine.

NOTE

For details on setting the receive mode, see Chapter 1, "Advanced Fax Features," in the Advanced Guide (in User Software CD).

Install the Printer Driver

Installation Procedure

Before Installation:

- **Do not connect the USB cable before installing the software. If you connect the USB cable before installing the software and the Found New Hardware Wizard screen appears, click [Cancel].**
- **For Windows 2000/XP, log on as Administrator to install the software.**
- **Make sure the machine is turned on before connecting the USB cable.**
- **On the screen shown at each step, click on the circled button to proceed.**

System Requirements

 
Microsoft Windows 98/98SE
CPU: Intel 80486DX/66 MHz or faster
Memory: 24 MB or more
Available Hard Disk Space: 355 MB or more

Microsoft Windows Me
CPU: Intel Pentium/150 MHz or faster
Memory: 32 MB or more
Available Hard Disk Space: 295 MB or more

Microsoft Windows 2000 Professional
CPU: Intel Pentium/133 MHz or faster
Memory: 64 MB or more
Available Hard Disk Space: 655 MB or more

Microsoft Windows XP (32-bit version)
CPU: Intel Pentium/Celeron series 300 MHz or faster
Memory: 128 MB or more
Available Hard Disk Space: 1.5 GB or more


1

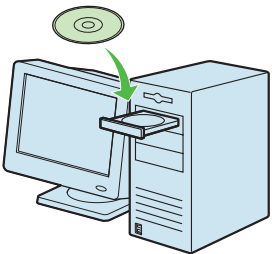

2



 3

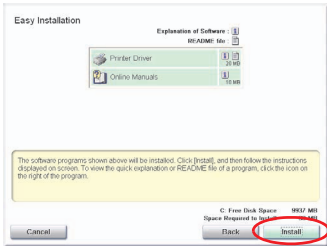


If the L120 CD-ROM Setup screen is not displayed, on the Windows desktop, double-click [My Computer]. Open the CD-ROM icon, then double-click [Mlnst (Mlnst.exe)].


4



 
5

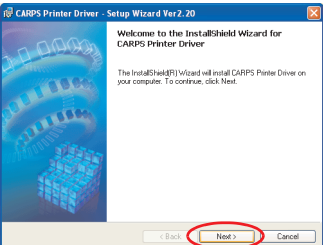


6

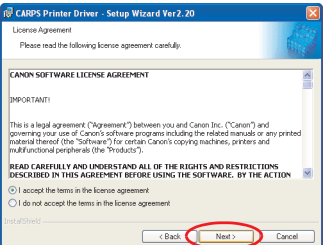 


7

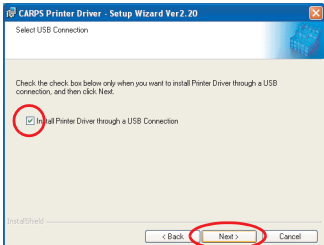 


8

 

9

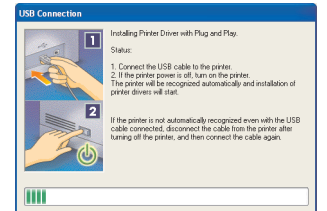 


10

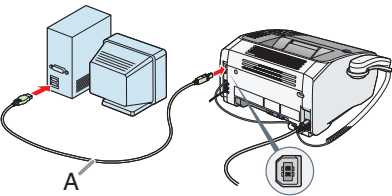 


Connect the machine and your computer with a USB cable (A).

 
11

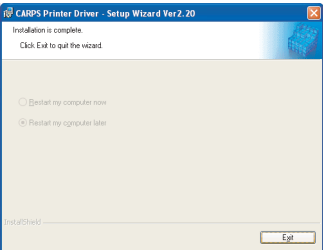


12

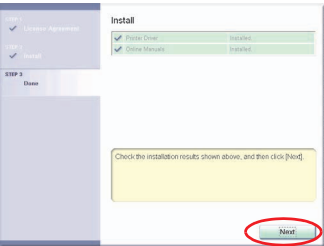 

13

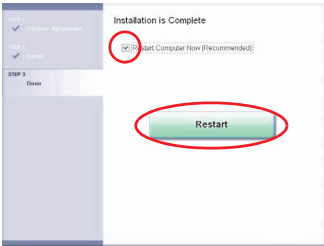 

14

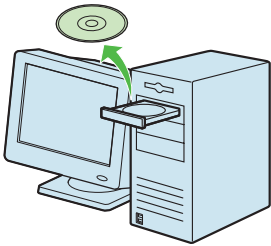 

You have now completed machine set-up.

Canon and FAXPHONE are registered trademarks, and UHQ is a trademark of Canon Inc. Microsoft and Windows are registered trademarks of Microsoft Corporation. All other product and brand names are registered trademarks, trademarks or service marks of their respective owners. Specifications subject to change without notice.



CANON INC.

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

CANON U.S.A., INC.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

CANON CANADA INC.

6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada

CANON EUROPA N.V.

Bovenkerkerweg 59-61 1185 XB Amstelveen, The Netherlands

CANON FRANCE S.A.S.

17, quai du Président Paul Doumer 92414 Courbevoie Cedex, France

CANON (U.K.) LTD.

Woodhatch, Reigate, Surrey, RH2 8BF, United Kingdom

CANON DEUTSCHLAND GmbH

Europark Fichtenhain A10, 47807 Krefeld, Germany

CANON ITALIA S.p.A.

Via Milano, 8 20097 San Donato Milanese (MI) Italy

CANON LATIN AMERICA, INC.

703 Waterford Way Suite 400, Miami, Florida 33126, U.S.A.

CANON AUSTRALIA PTY. LTD

1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia

CANON CHINA CO.,LTD

15F, North Tower, Beijing Kerry Centre, 1 Guang Hua Road, Chao Yang District, 100020, Beijing, China

CANON SINGAPORE PTE. LTD.

1 HarbourFront Avenue #04-01 Keppel Bay Tower, Singapore 098632

CANON HONGKONG CO., LTD

19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong

120V