


Large Format Printer

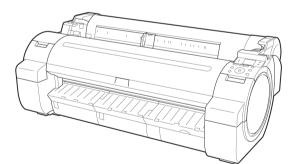

Basic Guide



	Manuals for thi	s printer	
	Setup Guide		
Ba	asic Guide		
	User's Guide	Electronic	manual
	Paper Referen	ce Guide	Electronic manual

Read this manual before attempting to operate the printer. Keep this manual in a handy location for future referencing.

Preface	
ASafety Precautions Manuals for this printer	
Handling Paper	
Handling rolls Handling sheets	9
Maintenance and Consumables	
Ink Tanks Printheads Maintenance Cartridge Cleaning the Printer	27 34
Printer Parts	
Operations and Display Screen Printer parts	
Printer Relocation	
Preparing to Transfer the Printer	60
Software Installation	
Installing the Printer Driver (Windows) Installing the Printer Driver (Mac OS X)	69
Convenient Printer Driver Features	
Adjustments for Better Print Quality	
Adjustments for Better Print Quality Adjusting the Printhead	
Adjustments for Better Print Quality Adjusting the Printhead Adjusting the feed amount Troubleshooting Problems Regarding Paper Printing does not start The printer stops during a print job Problems with the printing quality Cannot print over a network Installation problems HP-GL/2 problems	
Adjustments for Better Print Quality Adjusting the Printhead Adjusting the feed amount Troubleshooting Problems Regarding Paper Printing does not start The printer stops during a print job Problems with the printing quality Cannot print over a network Installation problems	
Adjustments for Better Print Quality Adjusting the Printhead Adjusting the feed amount Troubleshooting Problems Regarding Paper Printing does not start. The printer stops during a print job Problems with the printing quality Cannot print over a network Installation problems HP-GL/2 problems Other problems	

imagePROGRAF

Safety Precautions

Safety Precautions	2
egal Notices	4

Safety Precautions

Follow the warnings and precautions below to use the printer safely. Do not perform any operations or procedures other than as described in this manual. Doing so may result in unexpected accidents and can cause a fire or electrical shocks.

Printer location



Do not set up the printer in any location exposed to alcohol, thinner, or other volatile liquids. If these substances come
into contact with electrical components inside the printer, there is a risk of fire or electrical shock.



• Never install the printer on an unstable or vibrating surface. If it falls over, this could cause personal injury.

- Caution Never set up the printer in a location that is exposed to high humidity or large amounts of dust, or exposed to direct sunlight, high temperature, or open flame. This could cause a fire or electrical shock. Use the printer location in an environment where temperature and humidity are within the ranges of 15 °C to 30 °C (59 °F to 86 °F) and 10 to 80% RH (with no condensation).
 - Never place the printer on a heavy wool or shag carpet. The fibers may enter the printer and cause a fire.
 - Keep the area around the power outlet clear of items so that you can disconnect the power cable immediately if the printer starts operating abnormally. In the event of a printer malfunction, remove the power cable from the outlet as soon as possible to prevent fire and electrical shocks.
 - Do not install the printer near sources of strong electromagnetic fields, whether equipment that generates such fields or places where such fields occur. This could damage the printer or cause malfunction.

Power Supply

- Never handle the power cable with wet hands. Doing so may cause electrical shock.
- Warning Insert the power cable securely and completely into the power source. If the power cable is not inserted completely, this could cause a fire or electrical shock.
 - Do not use any power cable other than the one provided. This could cause a fire or electrical shock. Never use the power cable with any other electrical device.
 - Never cut the power cable or attempt to modify it, and never stretch it or bend it forcefully. Never place a heavy object
 on the power cable. Damaged sections of the power cable could cause a short circuit and may cause a fire or electrical
 shock.
 - Never connect the power cable to a power strip or any power source shared by other electrical devices. This could
 cause a fire or electrical shock.
 - Never knot the power cable or wrap it around itself. This could cause a fire or electrical shock.
 - Periodically disconnect the power cable and use a dry cloth to wipe away dust that has collected on the plug and the
 area around the power outlet. Leaving the power cable plugged in and not cleaned for a long period, especially in an
 area subject to dust, oil, and humidity, could cause the insulation material to deteriorate and lead to a fire.

iPF765



• Always grip the plug to remove the power cable from the power outlet. Pulling on the power cable could damage the cable and lead to a fire or electrical shock.

- Never use an extension cord. This could cause a fire or electrical shock.
- Never use any power source other than 100–120 / 220–240 V AC. This could cause a fire or electrical shock. The printer operating conditions are described below. Use the printer under the following conditions.
 Power supply voltage: 100–120 / 220–240 V AC
 Power supply frequency: 50/60 Hz

In an Emergency



• If the printer emits smoke or strange odors, continuing to use the printer may cause a fire or electrical shock. Switch the printer off immediately and remove the power plug from the power outlet. Contact the nearest service center.

Cleaning the Printer



For cleaning, use a cloth dampened in water. Never use flammable solvents such as alcohol, benzene, or thinner. If
these substances come into contact with electrical components inside the printer, there is a risk of fire or electrical
shock.



 Always disconnect the power cable from the outlet before cleaning the printer. If the printer is switched on accidentally, moving parts inside the printer may cause personal injuries.

Pacemakers



⁷ This printer generates a low-level magnetic field. Anyone wearing a pacemaker who experiences discomfort while working around the printer should leave the area. Consult a physician before continuing to work around the printer.

Moving the Printer



• Moving the printer requires at least three people, holding it on both sides and from behind. Be careful to avoid back strain and other injuries.

When moving the printer, firmly grasp the Carrying Handles under each side and in back. The printer may be unsteady if
you hold it at other positions, which poses a risk of injury from dropping the printer.

Printhead, Ink Tanks, and Maintenance Cartridge



 Always store consumables in a safe location out of the reach of small children. If a child licks or ingests ink accidentally, seek medical assistance immediately.

If ink accidentally gets in your eyes, immediately rinse with water.
 If ink gets on your skin, immediately clean it off with soap and water.
 If irritation persists in your eyes or on your skin, contact a physician immediately.


- Avoid dropping or shaking printheads, ink tanks, and maintenance cartridges. Spilled ink can stain clothing and the work area.
- Never touch the electrical contacts of the Printhead after printing. The contacts become extremely hot and can cause minor burns.

Preface

Other



- Never disassemble the printer or attempt repairs. There are high voltage parts inside the printer that can cause a fire or electrical shock.
- Never use flammable sprays around the printer. The gas of flammable sprays can cause a fire or electrical shock, if it contacts high voltage points inside the printer.
- After removing the Cutter Unit, never touch the cutting edge (a). This could cause personal injury.

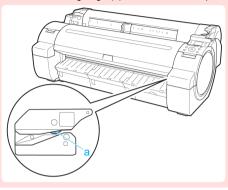

- Never place anything on the printer such as small metal objects (paper clips, staples), liquids, any type of liquid container that contains flammable liquids (alcohol, benzene, etc.). If such objects fall into the printer, this could cause a fire or electrical shock.
 - Never insert your hand into the printer while it is printing. Moving parts inside the printer can cause injuries.
 - To prevent a fire hazard or dangerous electric shock, if a foreign object falls into or a liquid spills into the printer, press
 the Power button immediately to switch the printer off, unplug the printer power cable from the outlet, and then call for
 service. If you continue to use the printer, this could cause a fire or electrical shock.



- Connect the interface cable correctly. To avoid damage, before connection make sure that the shape of the cable connector matches the connection point on the printer.
- · During printing, turn on the ventilation system in the room.
- · We recommend ensuring ample space for installation.

Legal Notices

FCC Regulations (U.S.A)

Canon Large Format Printer	iPF765
----------------------------	--------

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of FCC Rules. Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment. Canon U.S.A. Inc. One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. 516-328-5600

For CA, USA Only

Included battery contains Perchlorate Material - special handling may apply. See http://www.dtsc.ca.gov/hazardouswaste/perchlorate/ for detail.

Trademarks

- Canon, the Canon logo, and imagePROGRAF are trademarks or registered trademarks of CANON INC.
- Microsoft and Windows are trademarks of Microsoft Corporation, registered in the U.S. and other countries.
- · Macintosh is trademark of Apple Inc., registered in the U.S. and other countries.
- Other company and product names in this manual are trademarks or registered trademarks of their respective owners.

Copyright

• Unauthorized reproduction of this user manual in whole or part is prohibited.

Legal Notice

- It is illegal to reproduce currency, bills, negotiable securities and other documents prohibited by law. Reproduction of such items may be subject to criminal prosecution.
- It is illegal to reproduce legal certificates, licenses, travel tickets, and certain public and private documents prohibited from reproduction by law. Reproduction of such items may be subject to criminal prosecution.
- Please note that intellectual property protected by copyright may not be reproduced without the express permission of the copyright holder except for personal or household use under limited circumstances.

Safety Precautions

Manuals for this printer

Manuals for this printer	. 6
Viewing the User Manual	. 6
About This User Manual	7

Manuals for this printer

This printer has the following manuals.

Name	Contents	Medium
Setup Guide	Instructions for unpacking and setting up the printer, and for in- stalling the software and electronic manuals.	Printed Manuals
Basic Guide	Descriptions of basic printer operations.	
User's Guide	Detailed instructions for using the printer.	Electronic manuals
Paper Reference Guide	This guide describes about the types and specifications of the available media on the printer.	

Setup Guide	Basic Guide	User's Guide	Paper Reference Guide

Viewing the User Manual

Install the User Manual on your computer before viewing the manual.

1

Install the Software and the Electronic Manuals.

Note that the driver installation procedure varies depending on the type of connection. (See "Installing the Software (Windows).") \rightarrow P.67 (See "Installing the Software (Mac OS X).") \rightarrow P.69

2

Display imagePROGRAF Support Information.

Windows

Double-click the **iPFxxxx Support** desktop icon. (iPFxxxx indicates the printer model.)



Mac OS X

Click the **iPF Support** icon in the Dock.



3 When the imagePROGRAF Support Information is displayed, click the User Manual icon or the Paper Reference Guide icon.

Canon	📣 ImagePROGR.
imagePROGRAF Support Information	IPFx
Using Your ImagePROGRAF Printer	Stay Informed
Vser's Manual Wew the printer user's manual. Paper Reference Guide	Visit the imagePROGRAF website for news and printing tips Visit the imagePROGRAF webpage
few information about paper that can be used with the printer. Set the latest version of the Media Configuration Tool to make sure the sude includes information on newly added paper.	Copyright CANON INC. 200

Click Visit the imagePROGRAF webpage in Stay Informed to access the imagePROGRAF web site.

Note

About This User Manual

Symbols

The following symbols are used in this user manual to indicate safety information and explanations on restrictions or precautions in use.

Warning	Indicates warning items for which operating error poses a risk of death or serious injury. To ensure safe use, always follow these warnings.
Caution	Indicates caution items for which operating error poses a risk of injury. To ensure safe use, always follow these cautions.
Important	Indicates important information and restrictions that definitely are to be followed during operation. Be sure to read this information to prevent troubles, malfunctions, or damage to equipment or property by operating errors.
Note	Indicates helpful reference information and supplemental information on particular topics.

• Button names and user interface elements

Key and button names on the control panel and user interface elements in software (such as menus and buttons) are indicated as follows in this user manual.

Control panel buttons	Example: Press the OK button.
Control panel messages	Example: Head Cleaning is displayed.
Software interface items (menus and buttons)	Example: Click OK.
Keyboard keys	Example: Press the Tab key.

Cross-reference

Other pages or manuals that provide related information are indicated as follows in this user manual.

Cross-reference in the same user manual	Example: see "Turning the Printer On and Off." →User's Guide Click the link to jump to the corresponding page.
Cross-reference in related manuals	Example: See the Paper Reference Guide.
Other cross-reference	Example: See the printer driver help.

Figures and software screens

• Figures in this user manual may be different from the actual appearance of the printer in some cases.

• Screens depicted in this user manual for the printer driver or other software may be different from the actual screens because of subsequent updates.

May we request

- The information in this user manual is subject to change without notice.
- We strive to ensure accuracy of information in this user manual, but if you notice errors or omissions, please contact us.

Handling Paper

Handling rolls

Attaching the Roll Holder to Rolls	. 9
Loading Rolls in the Printer	12
Removing the Roll from the Printer	15

Attaching the Roll Holder to Rolls

When printing on rolls, attach the Roll Holder to the roll. Rolls have a two- or three-inch paper core. Use the correct attachment for the paper core. The printer comes equipped with the 2-Inch Paper Core Attachment installed.


Using Rolls with a 2-Inch Paper Core		Using Rolls with a 3-Inch Paper Core	
Holder Stopper (Left Side)	Roll Holder (Right Side)	Holder Stopper (Left Side)	Roll Holder (Right Side)
2-Inch Paper Core Attachment	No Attachment Needed	3-Inch Paper Core Attachment L	3-Inch Paper Core Attachment R



Important

 Set the roll on a table or other flat surface so that it does not roll or fall. Rolls are heavy, and dropping a roll may cause injury.

- · When handling the roll, be careful not to soil the printing surface. This may affect the printing quality. We recommend wearing clean cloth gloves when handling rolls to protect the printing surface.
- Use scissors or a cutting tool to cut the edge of the roll paper if it is uneven, dirty, or has tape residue. Otherwise, it may cause feeding problems and affect the printing quality. Be careful not to cut through any barcodes printed on the roll.
- Align the edges of the paper on both ends of the roll. Misalignment may cause feeding problems.

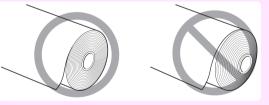


For details on supported sizes and types of rolls, see Paper Sizes or the Paper Reference Guide. (See "Paper Sizes.") →User's Guide (See "Types of Paper.") →User's Guide Note

 To view instructions as you attach the Roll Holder, press the Navigate button. (See "Viewing Instructions With the Navigate Button.") →User's Guide

Handling rolls


1 Lift the Holder Stopper lever (a) from the shaft side to unlock it. Holding the Holder Stopper at the position indicated (b), remove it from the Roll Holder.

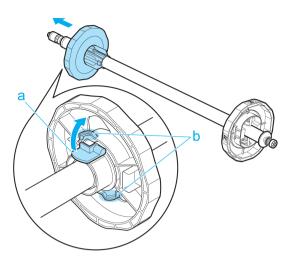


Insert the respective attachments for the roll paper core on the Roll Holder and Holder Stopper.

• Using rolls with a 2-inch paper core

	Dell Helder (Diabt
Holder Stopper (Left Side)	Roll Holder (Right Side)
	Jo attachment is leeded.

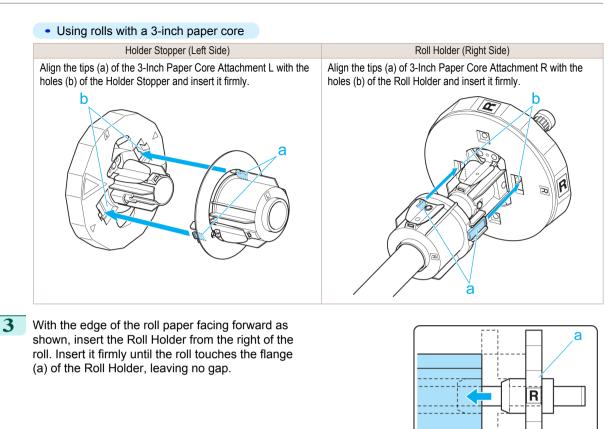

4 Insert the Holder Stopper from the left in the Roll Holder as shown. Holding it at the position shown (b), push it firmly in until the flange (a) of the Holder Stopper touches the roll. Lock the Holder Stopper lever (c) by pushing it down toward the shaft side.

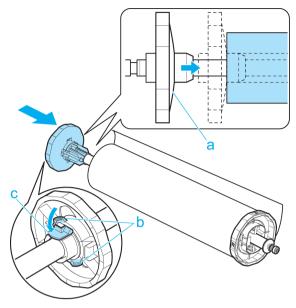

Loading Rolls in the Printer

Follow these steps to load rolls in the printer.



• Before loading rolls, make sure the printer is clean inside the Top Cover and around the Ejection Guide. If these areas are dirty, we recommend cleaning them in advance. (See "Cleaning Inside the Top Cover.") (-P.39)

Press the Load button.




2 Press ▲ or ▼ to select Load Roll Paper, and then press the OK button.



If any paper has been advanced that will not be used, a message is shown requesting you to remove it.
 Press ▲ or ▼ to select "Yes", and then press the OK button. Remove the paper and go to the next step.


- 3
- Positioning your hands as shown, open the Roll Cover.

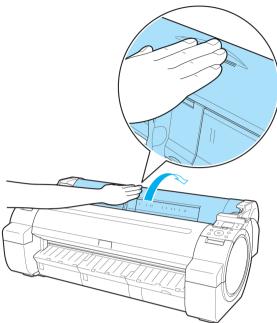

Handling rolls


Handling Paper

4 Holding the Roll Holder flange (a), rest the Roll Holder shaft on the Roll Ledge (b). At this time, position the holder so that the **R** label (c) on the [W label (c) on the Roll Holder flange is aligned with the **R** label (d) on the printer .

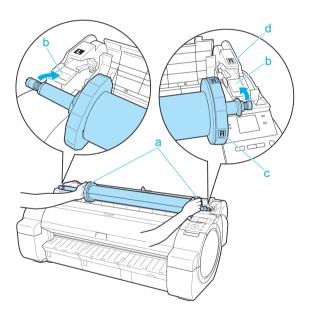

Basic Guide

5 Holding the Roll Holder flange (a), guide the holder along the Roll Loading Slots (b) on both ends, keeping the holder level as you load it in the Roll Holder Slot.

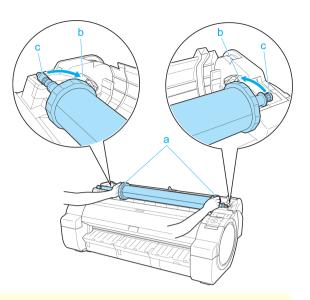


Caution


• Do not force the Roll Holder into the printer with the right and left ends reversed. This may damage the printer and Roll Holder.

- Do not release the flanges until the holder is loaded in the Roll Holder Slot.
- Be careful not to pinch your fingers between the Roll Loading Slots (b) and the Roll Holder shaft (c) when loading rolls.

Advance the roll to insert the leading edge in the Paper Feed Slot (a) until you hear a tone.

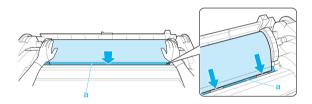

- Be careful not to soil the printing surface of roll paper as you insert it in the slot. This may affect the printing quality. We recommend wearing clean cloth gloves when handling rolls to protect the printing surface.
 - If the paper is wrinkled or warped, straighten it out before loading it.
 - Load paper straight so it is not fed askew.

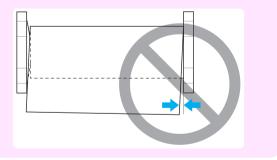

Once paper feeding starts, you will need to do the following, based on the **ManageRemainRoll** setting and the barcode printed on rolls. (See "Keeping Track of the Amount of Roll Paper Left.") —User's Guide

ManageRemain- Roll	Barcodes	Printer Operation After the Paper is Fed	
Off	Printed	A menu for selection of the type of paper is automatically shown on the Display Screen.	
	Not printed	Press \blacktriangle or \blacktriangledown to select the type of paper, and then press the OK button.	
On	Printed	The type and amount of paper left is automatically detected based on the barcode printed on the roll.	


ManageRemain- Roll	Barcodes	Printer Operation After the Paper is Fed
On	Printed	There is no need to specify the type and length of the paper.
	Not printed	A menu for selection of the paper type and length is automatically shown on the Display Screen. Press \blacktriangle or \blacksquare to select the type and length of paper loaded, and then press the OK button.



For details on types of paper to select, see the Paper Reference Guide. (See "Types of Paper.") -User's Guide




Holding it at the positions indicated, close the Roll Cover.

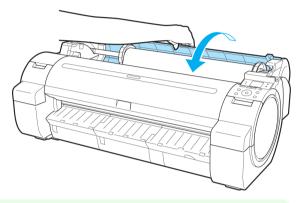



Removing the Roll from the Printer

Remove rolls from the printer as follows.

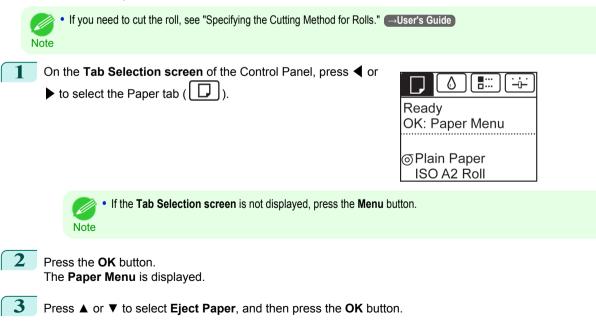

4 Press ▲ or ▼ to select "**Yes**", and then press the **OK** button. The roll is now rewound and ejected.


Positioning your hands as shown, open the Roll




 If you have selected ManageRemainRoll > On in the Control Panel menu, a barcode is printed on the leading edge of the roll.

Do not remove the roll before the barcode is printed. You will be unable to keep track of the amount of roll paper left. (See "Keeping Track of the Amount of Roll Paper Left.") -User's Guide



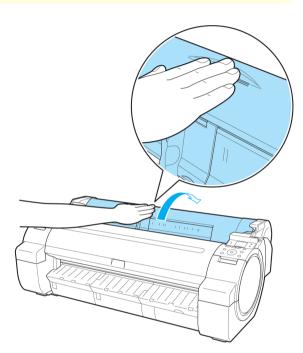

6 Using both hands, rotate the Roll Holder toward the back to rewind the roll.

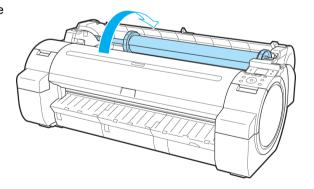


5

Cover.




Holding the Roll Holder flange (a), remove the holder from the Roll Holder Slot.

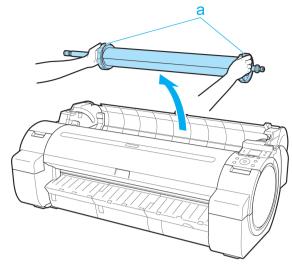



• For instructions on removing the Roll Holder from rolls, see "Removing the Roll Holder from Rolls." →User's Guide

8 Holding it at the positions indicated, close the Roll Cover.

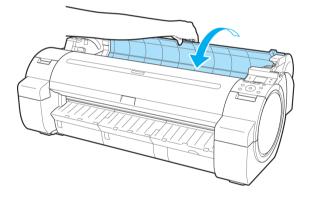

• To load new paper in the printer at this point, see "Loading Rolls in the Printer." -P.12

17

Note

Handling sheets

_oading Sheets in the Printer	18
Removing Sheets	20

Loading Sheets in the Printer

Follow these steps to load sheets in the printer.



- One sheet of paper can be loaded in the Paper Feed Slot at a time. Do not load more than one sheet at a time. This
 may cause paper jams.
- Before feeding paper or printing, make sure the sheet is flat against the Roll Cover. The sheet may jam if it curls before feeding or printing and the trailing edge drops toward the front.
- Store unused paper in the original package, away from high temperature, humidity, and direct sunlight.
- Note Paper that is wrinkled or warped may jam. If necessary, straighten the paper and reload it.
 - · Load the paper straight. Loading paper askew will cause an error.
 - Select sheets as the paper source.
 - · If a print job was received


Sheets are automatically selected, and the media type and size specified by the print job are shown on the Display Screen. Go to the next step.

- If no print job was received
 - 1. Press the Load button.




Press ▲ or ▼ to select Load Cut Sheet, and then press the OK button.

• If any paper has been advanced that will not be used, a message is shown requesting you to remove it. Press ▲ or ▼ to select "Yes", and then press the OK button. Remove the paper and go to the next step. 2 Slide the Width Guide (a) to align it with the mark for the size of paper you will load.

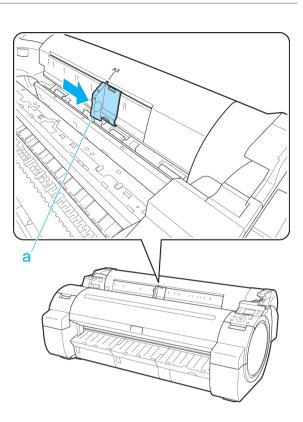


3 Load a single sheet printing-side up in the Paper Feed Slot, with the right edge aligned with the Paper Alignment Guide (a) to the right of the Roll Cover.

Insert the paper until the leading edge makes contact and you hear a tone.

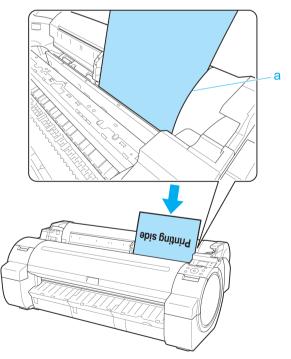

4 Move the Width Guide (a) carefully to match the size of paper loaded.

Set the Width Guide against the edge of the paper to prevent the paper from becoming crooked or wrinkled.

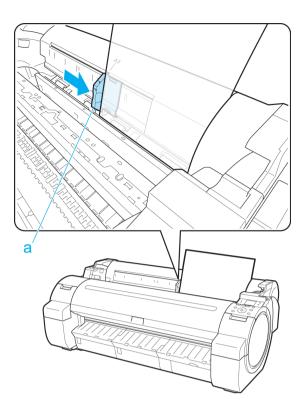

- Press the OK button.
 - If a print job was received
 The printer now starts printing the print job.
 - If no print job was received

A menu for selection of the type of paper is automatically shown on the Display Screen. Press \blacktriangle or \checkmark to select the type of paper, and then press the **OK** button. The printer now starts feeding the paper.




For details on types of paper to select, see the Paper Reference Guide. (See "Types of Paper.")
 →User's Guide

Removing Sheets


Note

Remove sheets from the printer as follows.

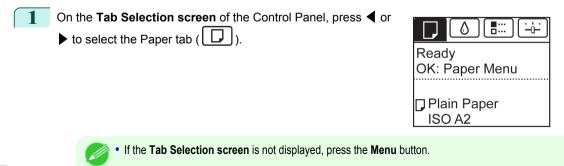




- 3 Press ▲ or ▼ to select Eject Paper, and then press the OK button.
- 4 Press ▲ or ▼ to select "Yes", and then press the OK button. The paper is ejected from the front of the printer.
- 5 Holding the paper, push the Release Lever back and remove the sheet.

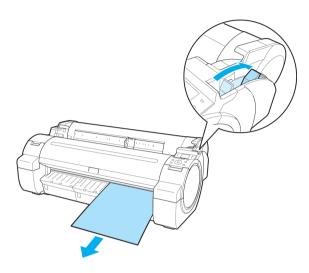



Pull the Release Lever forward.

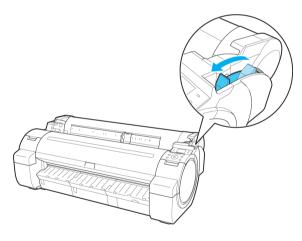

Handling sheets

Maintenance and Consumables

Ink Tanks


Ink Tanks	22
Replacing Ink Tanks	22

Ink Tanks

When purchasing ink tanks, make sure a **J** is printed on the label, along with the following [W is printed on the label, along with the following Ink Tank serial numbers.

• 130 ml (4.4 fl oz) per color

- BK Ink Tank PFI-102BK
- MBK Ink Tank PFI-102MBK
- C Ink Tank PFI-102C
- M Ink Tank PFI-104M
- Y Ink Tank PFI-102Y

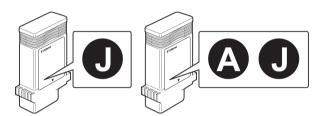

Note

For instructions on Ink Tank replacement, see "Replacing Ink Tanks." -P.22

Replacing Ink Tanks

Compatible ink tanks

Ink tanks that can be used in the printer are labeled with a white letter **J** in a black circle on the side. Request ink tanks with the same label when you purchase new ones. For details, see "Ink Tanks." \rightarrow P.22

Precautions when handling ink tanks

Take the following precautions when handling ink tanks.



• For safety, keep ink tanks out of the reach of children.

- If ink is accidentally ingested, contact a physician immediately.
- There may be ink around the ink supply section of ink tanks you removed. Handle ink tanks carefully during replacement. The ink may stain clothing.




- Do not install used ink tanks in another model of printer.
 This will prevent correct ink level detection, which may damage the printer or cause other problems.
- We recommend using up an Ink Tank in the course of printing within six months after breaking the seal. Printing quality
 may be affected if you use older ink tanks.
- Do not leave the printer without ink tanks installed for extended periods (a month or more). Residual ink may become clogged inside the printer and affect printing quality.

Ink Tanks


Maintenance and Consumables

Make sure the printer is ready for Ink Tank replacement


You can replace ink tanks if the Display Screen advises you to check the amount of ink left or replace ink tanks.

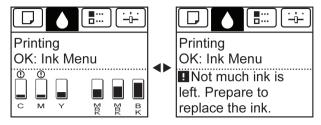


If a message requests you to replace an Ink Tank, press the **OK** button. In this case, you can skip the step **Access the menu for ink tank replacement.** Follow the instructions in **Remove the ink tanks**.

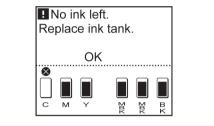



• Do not remove an Ink Tank during initialization immediately after turning on the printer, or during printhead cleaning.

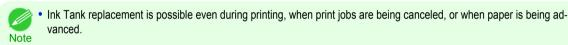


Access the menu for Ink Tank replacement

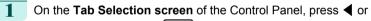

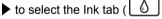

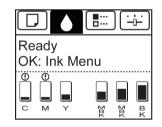

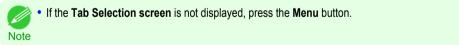


2 Press the OK button. The Ink Menu is displayed.

3 Press ▲ or ▼ to select **Rep. Ink Tank**, and then press the **OK** button. A message on the Display Screen requests you to open the Ink Tank Cover. Remove the Ink Tank at this point.

Remove the Ink Tank




Open the Ink Tank Cover and check the ink lamps. Ink lamps flash when there is little ink left.

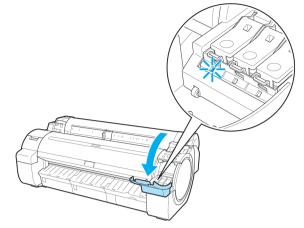


0

 \bigcirc o

2 Press the tip of the Ink Tank Lock Lever of the color for replacement horizontally and pull the Ink Tank Lock Lever up to open it.

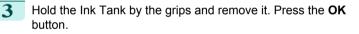

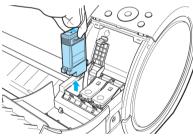



Note

 If there is still ink in the Ink Tank you removed, store it with the ink holes (a) facing up. Otherwise, ink may leak and cause stains. Put the Ink Tank in a plastic bag and seal it.




• Dispose of used ink tanks according to local regulations.

24

Ink Tanks


Maintenance and Consumables


Ink Tanks

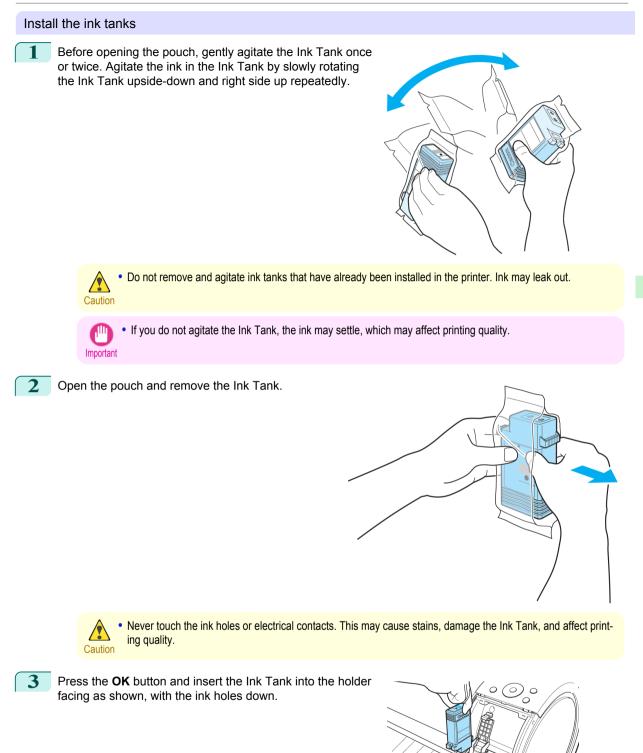

Ink tanks cannot be loaded in the holder if the color or orientation is incorrect.
 If the Ink Tank does not fit in the holder, do not force it into the holder. Make sure the color of the Ink Tank
 Lock Lever matches the color of the Ink Tank and check the orientation of the Ink Tank before reloading it.

4 Push the Ink Tank Lock Lever closed until it clicks into place.

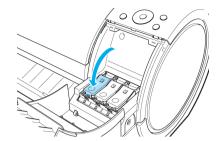

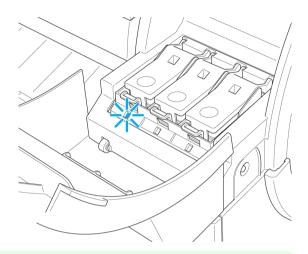


Make sure the Ink Lamp is lit in red.



• If the Ink Lamp is not lit, reload the tank.



Close the Ink Tank Cover.

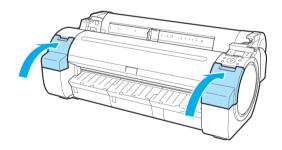


Printheads

Printhead	27
Replacing the Printhead	

Printhead

A replacement Printhead.

Printhead PF-04

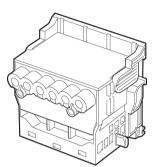

For instructions on replacing the Printhead, see "Replacing the Printhead." →P.27

Replacing the Printhead

When to replace the Printhead

Replace the Printhead in the following situations.

- If the printing quality does not improve even after one or two cycles of Head Cleaning B from the printer menu
- If the Display Screen indicates "Open top cover and replace the printhead."
- If your Canon dealer has advised you to replace the Printhead

Compatible printheads

For information on compatible printheads, see "Printhead." →P.27

Precautions when handling the Printhead

Take the following precautions when handling the Printhead.



• For safety, keep the Printhead out of the reach of children.

- If ink is accidentally ingested, contact a physician immediately.
- Do not touch the Printhead immediately after printing. The Printhead becomes extremely hot, and there is a risk of burns.



- There may be ink around the nozzles of the Printhead you remove. Handle the Printhead carefully during replacement. The ink may stain clothing.
- Do not open the Printhead pouch until immediately before installation. After removing the Printhead from the pouch, install it right away. If the Printhead is left after the pouch is opened, the nozzles may dry out, which may affect printing quality.

Access the menu for Printhead replacement



When replacing the Printhead immediately after printing, wait a few minutes before replacing it. The metal parts of the Printhead become hot during printing, and there is a risk of burns from touching these parts.



1

2

3

Prepare a new Ink Tank when ink levels are low.

ting Roll Paper After Printing.") →User's Guide

▶ to select the Settings/Adj. tab (----)).


Note • Your hands may become dirty during Printhead replacement. Use the gloves provided with the new Printhead for replacement.

Clean inside the Top Cover. (See "Cleaning Inside the Top Cover.") →P.39


On the Tab Selection screen of the Control Panel, press 4 or

If the roll is not ejected because of the cutting method selected, cut it manually and remove it. (See "Cut-

Maintenance and Consumables

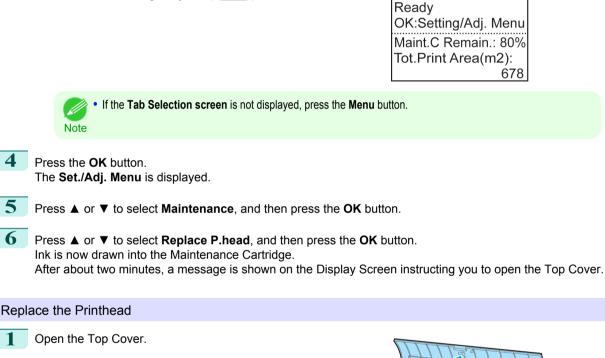

Instructions are now shown on the Display Screen regarding Printhead replacement.

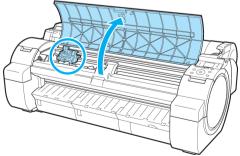


...

0




 During Printhead replacement, do not move the Carriage from the position indicated. If you accidentally move the Carriage, you will hear a warning tone, and Printhead replacement is no longer possible.
 If you move the Carriage by mistake, close the Top Cover. The Carriage will be moved to the position as indicated. 2 If the Printhead Fixer Cover or Printhead Fixer Lever is dirty, use a damp cloth that you have wrung out completely to wipe it clean.

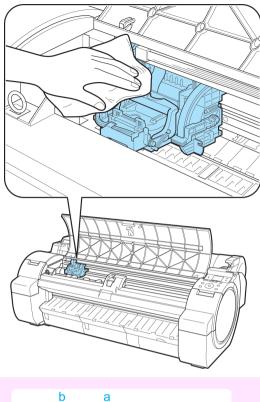



• Do not touch the Linear Scale (a) or Carriage Shaft (b). Touching these parts may damage them.

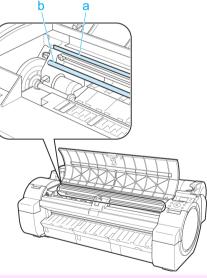

• Never touch the metal contacts of the Carriage. This may damage the printer.


Maintenance and Consumables

Printheads

3 Pull the Printhead Fixer Lever forward all the way to open it completely. Pull up the Printhead Fixer Cover to open it complete-4 ly. 5 Remove the Printhead and press the **OK** button. • Dispose of the used Printhead in accordance with local regulations. Note

Maintenance and Consumables


Printheads

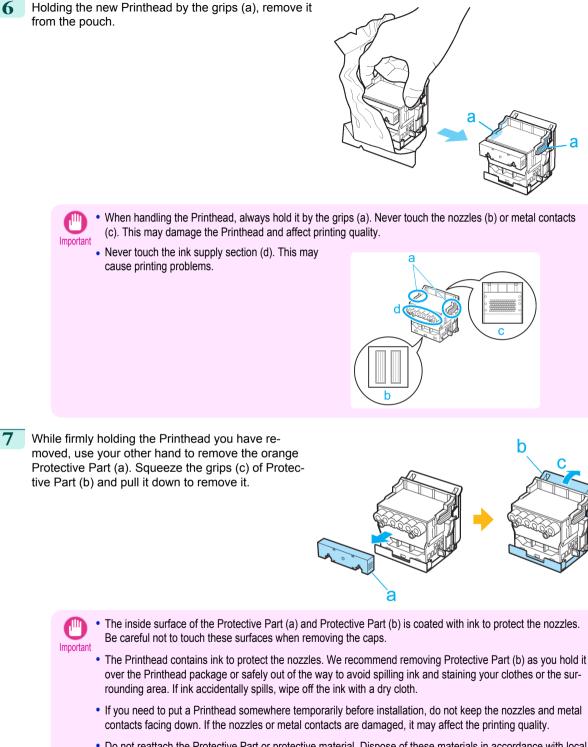



• Do not reattach the Protective Part or protective material. Dispose of these materials in accordance with local regulations.


8 With the nozzles facing down and the metal contacts toward the back, insert the Printhead into the Carriage. Carefully push the printhead firmly into the Carriage, ensuring that the nozzles and metal contacts do not touch the carriage.

to lock the Printhead in place.

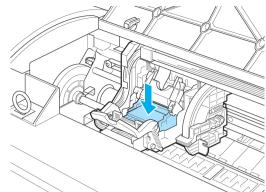

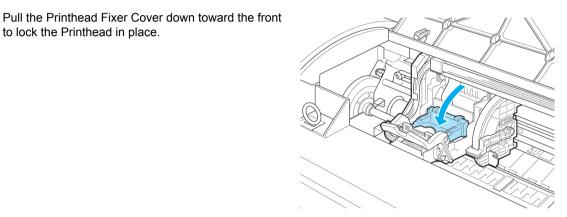

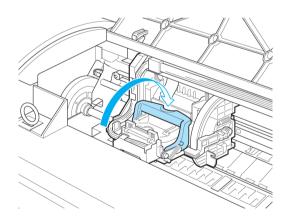

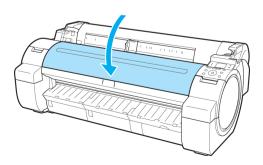

10 Push the Printhead Fixer Lever toward the back of the printer until it clicks.

11 Close the Top Cover.

Ink now fills the system. It takes about seven minutes to complete.



Never remove an Ink Tank while the system is filling with ink.

Important • After Printhead has been replaced and filled with ink, Head Posi. Adj. (Auto(Advanced)) is performed if you have selected Rep.P.head Print > On in the Control Panel menu. (See "Menu Settings.") →User's Guide In this case, follow the instructions on the Display Screen for Printhead adjustment. If Rep.P.head Print is Off, perform Head Posi. Adj. (Auto(Advanced)) yourself. (See "Automatic Adjustment to Straighten Lines and Colors (Head Posi. Adj.).") →P.77

Maintenance Cartridge

Maintenance Cartridge	34
Replacing the Maintenance Cartridge	34

Maintenance Cartridge

A replacement Maintenance Cartridge.

Maintenance Cartridge MC-10



Maintenance Cartridge

For instructions on replacing the Maintenance Cartridge, see "Replacing the Maintenance Cartridge." (-P.34)

Replacing the Maintenance Cartridge

Compatible maintenance cartridges

For information on compatible maintenance cartridges, see "Maintenance Cartridge." (-P.34)

Precautions when handling the Maintenance Cartridge

Take the following precautions when handling the Maintenance Cartridge.



Note


- For safety, keep the Maintenance Cartridge out of the reach of children.
- If ink is accidentally ingested, contact a physician immediately.
- To prevent ink from leaking from a used Maintenance Cartridge, avoid dropping the cartridge or storing it at an angle. Otherwise, ink may leak and cause stains.
- Ink adheres to the top of the Maintenance Cartridge after it has been used. Handle the Maintenance Cartridge carefully during replacement. The ink may stain clothing.




- Do not remove the Maintenance Cartridge except to replace it.
- Do not install a used Maintenance Cartridge in another printer.

Make sure the printer is ready for Maintenance Cartridge replacement

You can replace Maintenance Cartridge if the Display Screen advises you to check the remaining capacity or replace the Maintenance Cartridge.

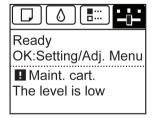

If a message is displayed requesting Maintenance Cartridge replacement, you can skip the step Access the menu for Maintenance Cartridge replacement. Follow the instructions in Replace the Maintenance Cartridge.

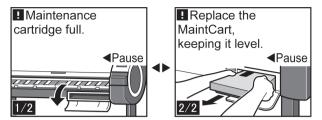

Do not replace the Maintenance Cartridge during initialization immediately after turning on the printer, during Printhead

Caution cleaning, or when ink is being absorbed. Ink may leak out.
 Access the menu for Maintenance Cartridge replacement
 On the Tab Selection screen of the Control Panel, press ◀ or
 to select the Settings/Adj. tab (----).

Ready
OK:Setting/Adj. Menu
I Maint. cart.
The level is low
I fithe Tab Selection screen is not displayed, press the Menu button.
Press the OK button.


The Set./Adj. Menu is displayed.

3 Press ▲ or ▼ to select Maintenance, and then press the OK button.

4 Press ▲ or ▼ to select **Repl. maint cart**, and then press the **OK** button. A message on the Display Screen advises you to open the Maintenance Cartridge Cover.

Replace the Maintenance Cartridge

1 Open the box, remove the plastic bag and packaging material, and take out the Maintenance Cartridge.

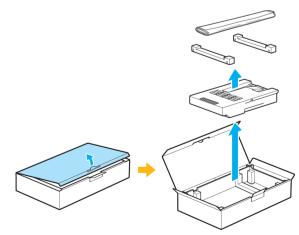

Important

Basic Guide

Maintenance Cartridge

2

3

At this point, open the Maintenance Cartridge Cover.

the Maintenance Cartridge.

· Never touch the metal contacts (a). This may damage

Hold the used Maintenance Cartridge by the grip (a) with one hand and put your other hand under the Maintenance Cartridge to hold it firmly on the bottom, keeping it level as you pull it out.


Used maintenance cartridges are heavy. Always grasp the cartridge firmly and keep the cartridge level during removal and storage. If you drop a used Maintenance Cartridge or store it at an angle, ink may leak and cause stains.

The remaining Maintenance Cartridge capacity is recorded on each printer. Do not install a used Maintenance




36


4

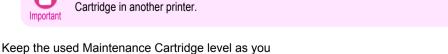


Caution


put it in the plastic bag. Expel excess air from the plastic bag and seal the zipper.

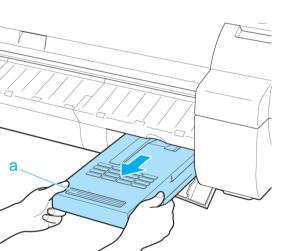

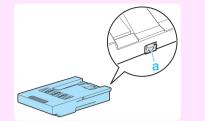

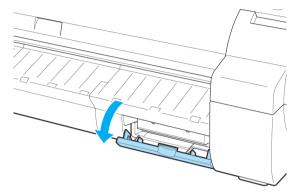

5 Confirm the Maintenance Cartridge is right-side up, put it in the box with the packaging material attached, and store it so that it stays level.

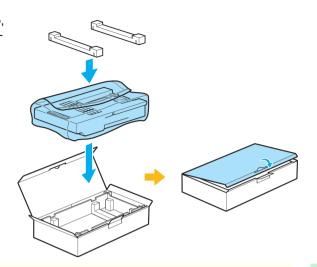






• Always put the used Maintenance Cartridge back in the box and store the box on a flat surface. Otherwise, ink may leak and cause stains.




 In accordance with active and ongoing environmental programs, Canon supports recycling of used maintenance cartridges. Follow the instructions provided with the new Maintenance Cartridge that describe how to process the used Maintenance Cartridge.

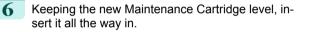

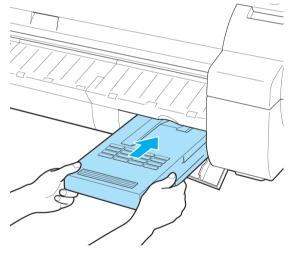

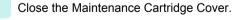

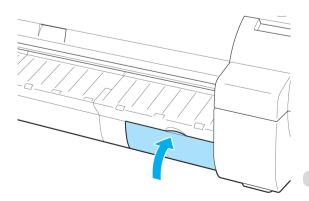

37



Press the **OK** button.

The printer now initializes the Maintenance Cartridge.



Cleaning the Printer

iPF765

Cleaning Inside the Top Cover	. 39
Cleaning the Printhead	41


Cleaning Inside the Top Cover

Clean inside the Top Cover about once a month to maintain better printing quality and help prevent problems. Also clean inside the Top Cover in the following situations to ensure optimal operation.

- If the printed surface or the underside of paper is dirty after printing
- After you have used up a roll
- · After borderless printing


Important

- · After printing on small paper
- · After printing on paper that generates a lot of cutting debris
- If you have replaced the roll
- · After printing on paper that generates a lot of paper dust
- After printing on adhesive paper

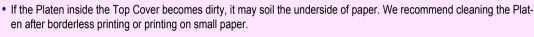


- If the Ejection Guide is dirty, it may soil the edge of the paper when the paper is cut. We recommend cleaning the Ejection Guide even if it does not appear dirty, because it may actually be covered with paper dust.
- Printing on adhesive paper may leave adhesive on the Platen, Paper Retainer, or other parts. To prevent paper jams, we recommend cleaning inside the Top Cover after printing.

Open the Top Cover.

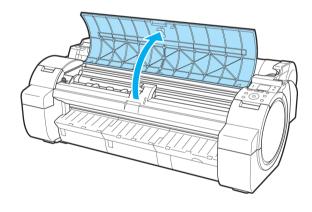


2 If paper dust has accumulated in the Vacuum holes (a) on the Platen or in the Borderless Printing Ink Grooves (b), use the Cleaning Brush (c), provided with the printer, to wipe it away.

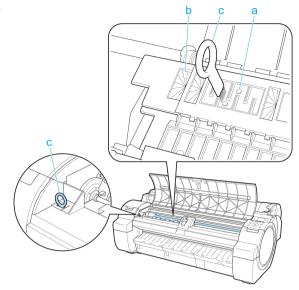



• If the Cleaning Brush is dirty, rinse it in water.

Using a damp cloth that you have wrung out completely, wipe inside the Top Cover to clean it. Wipe away any ink residue on the Platen as a whole (a), the Paper Retainer (b), Borderless Printing Ink Grooves (c), and Ejection Guide (d).

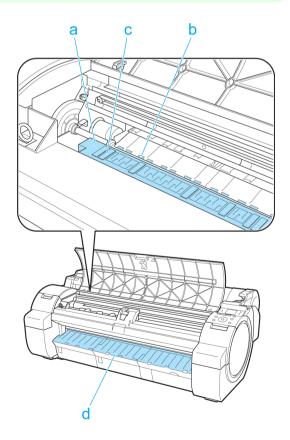


3


Maintenance and Consumables




- Do not use a dry cloth to wipe inside the Top Cover. This may create a static charge, which may attract dust
 and affect the printing quality.
- Never use flammable solvents such as alcohol, benzene, or thinner. If these substances come into contact with electrical components inside the printer, there is a risk of fire or electrical shock.
- Do not touch the Linear Scale (a) or Carriage Shaft (b).

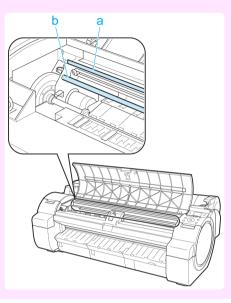

• When cleaning between the Platen and Ejection Guide, use a damp cloth that you have wrung out completely to wipe over the Output Tray and along grooves.

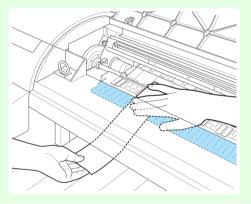

Close the Top Cover.

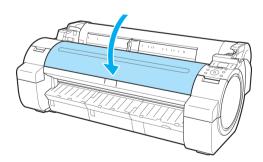

Cleaning the Printhead

If printing is faint, cleaning the Printhead may improve results.

Choose one of two Printhead cleaning modes (**Head Cleaning A** or **Head Cleaning B**), depending on the problem 41 to resolve.

Head Cleaning A

Use this mode if printing is faint or contains foreign substances. This method of cleaning consumes the least amount of ink.

It takes about three and a half minutes to complete.

• Head Cleaning B

Use this mode if no ink is ejected at all, or if **Head Cleaning A** does not solve the problem. It takes about four minutes to complete.

Do not remove the Maintenance Cartridge or ink tanks during either Head Cleaning A or Head Cleaning B. Caution . If printing does not improve after Head Cleaning B, try repeating Head Cleaning B once or twice. If this still does not improve printing, the Printhead may have reached the end of its useful life. Contact your Canon dealer for assistance. Note Nozzles are periodically checked to ensure they are clear. Configure the settings on the Control Panel menu in Nozzle Check. (See "Menu Settings.") →User's Guide Perform cleaning as follows. On the Tab Selection screen of the Control Panel, press 4 or 1 8... ▶ to select the Settings/Adj. tab (| →). Readv OK:Setting/Adj. Menu Maint.C Remain.: 80% Tot.Print Area(m2): 678 If the Tab Selection screen is not displayed, press the Menu button. Note 2 Press the **OK** button. The Set./Adj. Menu is displayed. 3 Press ▲ or ▼ to select Maintenance, and then press the OK button. 4 Press ▲ or ▼ to select Head Cleaning, and then press the OK button. 5 Press ▲ or ▼ to select Head Cleaning A or Head Cleaning B, and then press the OK button. Head cleaning is now executed.


6 Print a test pattern to check the nozzles, and determine whether cleaning has cleared the nozzles. (See "Checking for Nozzle Clogging.") →User's Guide

Printer Parts

Operations and Display Screen

Control Panel	43
Menu Operations	44
Menu Structure	48

Control Panel

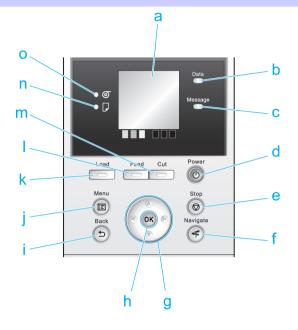

a Display Screen

Shows printer menus, as well as the printer status and messages.

b Data Lamp (green)

Flashing

During printing, the Data lamp flashes when the printer is receiving or processing print jobs. Otherwise, this lamp flashes when the print job is paused or the printer is updating the firmware.

• Off

There are no active print jobs when the Data lamp is off.

c Message Lamp (orange)

• On

A warning message is displayed.

Flashing

An error message is displayed.

• Off

The printer is off or is operating normally.

d Power button (green)

Turns the printer on and off. (See "Turning the Printer On and Off.") →User's Guide The **Power** button is lit when the printer is on or in Sleep mode.

e Stop button

Cancels print jobs in progress and ends the ink drying period.

f Navigate button

Enables you to check instructions for loading and removing paper or replacing ink tanks or printheads, as well as other operations. (See "How to View Instructions With Navigate.")
User's Guide

g Arrow buttons

• **4** button

Press this button on the **Tab Selection screen** to move to another tab.

In menu items requiring numerical input, press this button to move to another digit.

A button

Press this button when viewing menus to display the next menu item or setting value.

• button

Press this button on the **Tab Selection screen** to move to another tab.

In menu items requiring numerical input, press this button to move to another digit.

▼ button

Press this button when viewing menus to display the next menu item or setting value.

h OK button

Press this button on the Tab Selection screen to display the menu of the tab shown.

Pressing this button in menu items of each tab for which 💽 is displayed at left will move to the lower level of the menu item, enabling you to execute menu commands or set menu values.

Also press this button if the Display Screen indicates to press the **OK** button.

i Back button

Displays the screen before the current screen.

j Menu button

Displays the Tab Selection screen. (See "Menu Settings.") →User's Guide

k Load button

(See "Loading Sheets in the Printer.") \rightarrow P.18)

Feed button

Pressing this button when rolls are loaded enables you to reposition the paper. (See "Feeding Roll Paper Manually.") →User's Guide

m Cut button

Pressing this button when rolls are loaded cuts the paper, if you have specified **Automatic** or **Eject** in **Cutting Mode** in the Control Panel menu. (See "Specifying the Cutting Method for Rolls.") —User's Guide

n Cut Sheet lamp (green)

Lit when sheets are selected as the paper source.

• Roll Media lamp (green)

Lit when rolls are selected as the paper source.




To recover from Sleep mode, any button can be pressed except the Power button.

Menu Operations

To view available menus organized on tabs, select a tab on the **Tab Selection screen** and press the **OK** button. For details, see "Menu Settings." User's Guide

• Menus (when the Ink tab is selected and the OK button is pressed)

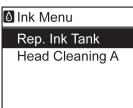

• If the Tab Selection screen is not displayed, pressing OK will not display menus.

Menus can be selected after you resolve the problem.

Simply press buttons on the Control Panel to access menus on various tabs from the **Tab Selection screen** and set or execute **Menu** items.

The following section describes menu operations and how they are presented in this User Manual.


- Accessing menus →P.45
- Specifying menu items →P.46
- Specifying numerical values →P.46
- Executing menu commands →P.47

Accessing menus

Note

Printer menus are grouped by function.

Menus are displayed with the upper line selected. You can use the buttons on the Control Panel to access each menu.

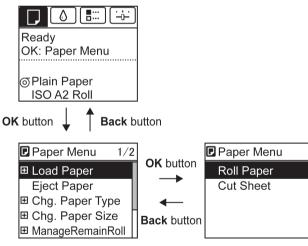

Press Back to access a higher menu in the menu list, and press OK to access a lower one. If not all menu items are displayed, hold down ▲ or ▼ to scroll through higher and lower menu items. Items you select are highlighted.



The scroll bar at right indicates the current position in the overall menu.


• Lower menus are available if 💽 is displayed at right next to the second and subsequent rows. To access the lower menus, select the menu and press the **OK** button.



Specifying menu items

Menu items can be set as follows.

Press ▲ or ▼ to select the desired setting, and then press the **OK** button. After two seconds, the display reverts to the upper level menu.

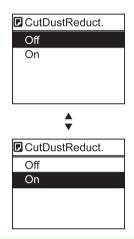

• If a confirmation message is displayed regarding the setting you entered, press the **OK** button. The setting is applied, and the printer is now in **Standby**.


Specifying numerical values

Note

Note

Follow these steps to enter numbers. In this example, network settings items are entered.

Press the \blacktriangleleft or \blacktriangleright button to move to the next field for input.

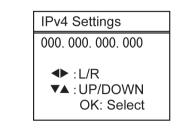



Hold down ▲ or ▼ to increase or decrease the value continuously.

3 Repeat steps 1 and 2 to complete the settings, and then press the **OK** button.



• If a confirmation message is displayed regarding the setting you entered, press the **OK** button. The setting is applied, and the printer is now in **Standby**.

Executing menu commands

Menu commands can be executed as follows.



Press \blacktriangle or \lor to select the action to execute, and then press the **OK** button. The menu command is now executed.

Menu Structure

The menu structure is shown categorized by tab. The * on the right side of an item indicates the default value. The printer menu is classified into regular menu items available when no print job is in progress and menu during printing items only available while printing is in progress. see "Printer Menu Operations." -User's Guide

Regular menu	Menu during printing
Paper Menu	Not displayed
Ink Menu	The same Ink Menu as normal is displayed.
Job Menu	The same Job Menu as normal is displayed.
Set./Adj. Menu	A limited Set./Adj. Menu containing the following items is displayed.
	 Adj. Fine Feed (*1) Printer Info

*1: Only displayed in the menu during printing. Not displayed in the regular menu.

For instructions on menu operations, see "Menu Operations." →P.44 For details on menu items, see "Menu Settings." →User's Guide

Paper Menu

The Paper Menu is not displayed during printing.

First Level	Second Level	Third Level	Fourth Level	Fifth Level
Load Paper	Roll Paper I Cut Sheet			
Eject Paper				
Chg. Paper Type (*1)	Roll Paper	·(The paper type is dis	splayed here.) (*1)	
	Cut Sheet	·(The paper type is dis	splayed here.) (*1)	
Chg. Paper Size	Sheet Size	· (The size of paper is	displayed here.) (*2)	
		CustomPaperSize	(Set the length and width)	
	•Roll Length (*3)	(Set the length)		
	Roll Width (*4)	(Set the width)		
ManageRemainRoll	····(Off*i On			
Paper Details	···· (The paper type is dis-	Head Height	Automatic * Highest	
	played here.) (*1)		Low Lowest Super Lo	
		Skew Check Lv.	High Accuracy Standard	
		Cutting Mode (*6)	Automatic Eject Man	ual
		Cut Speed	Fast Standard	
			Slow	
		Trim Edge First	Automatic I Off I On	
		CutDustReduct.	·····Off I On	
		··· VacuumStrngth	Automatic * Strongest	Strong Standard
		vacuumoungui	Weak Weakest	
		Scan Wait Time	Dry time	Off * 1 sec. 3
				sec. 5 sec. 7
				sec. 9 sec.
			···· Area (*5)	Entire area * Lead-
			Off 30 sec. 1 min.	ing edge
		Roll DryingTime	min. 1 30 sec. 1 min. 1 60 min.	3 mm. : 5 mm. : 10
		NearEnd RollMrgn		
		· NearEnd Sht Mrgn		
		Bordless Margin	····· Automatic I Fixed	
		Width Detection	·····Off I On *	

iPF765

	First Level	Second Level	Third Level	Fourth Level	Fifth Level
			Return Defaults		
	Paper Details)			
(F	Keep Paper Type	·····Off* On			

- *1: For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See Paper Reference Guide.) Types of paper in the printer driver and related software (as well as on the Control Panel) are updated when you install the printer driver from the User Software CD-ROM or if you update paper information with the Media Configuration Tool. (See "Updating paper information.") -User's Guide
- *2: For information on the sizes of paper the printer supports, see "Paper Sizes." -User's Guide
- *3: Available only if ManageRemainRoll is On.
- *4: Available only if Width Detection is Off.
- *5: Leading edge is not available as a setting option in the Paper Detailed Settings dialog box of the printer driver.
- *6: see "Specifying the Cutting Method for Rolls." →User's Guide

💧 Ink Menu

	First Level
Rep. Ink Tank	
Head Cleaning A	

🚛 Job Menu


First Leve	I Second Level	Third Level	Fourth Level	Fifth Level
Print Job	Job List	(Choose a print job.)	Delete Preempt Jobs	s (*1)
· Stored Job	(Mailbox List	(Enter a password if	Job List	·····(Print Delete
		one has been set.)	Print Job List	
· Job Log	····· (Choose from information	Document Name		
	about the latest three print	· User Name		
	jobs.)	Page Count		
		· Job Status	OK CANCELED)
		· Print Start Time	yyyy/mm/dd hh:mm:ss)
		· Print End Time	yyyy/mm/dd hh:mm:ss)
		·· Print Time	·····(xxxsec.)
		·· Print Size	(xxxxxxxsq.mm)
		·· Media Type		
		Interface	USB I Network I	
			HDD	
		Ink Consumed	(The ink color is dis-	·····(xxx.xxx ml
Print Job Log			played here.)	
Pause Print	Off * On)		
HDD Information	n Total capacity I Box f	ree space		


*1: If a pending job is selected, Print Anyway is displayed.


🕂 Set./Adj. Menu

Limited items are displayed during printing. The displayed items are indicated by annotations.


Printer Parts

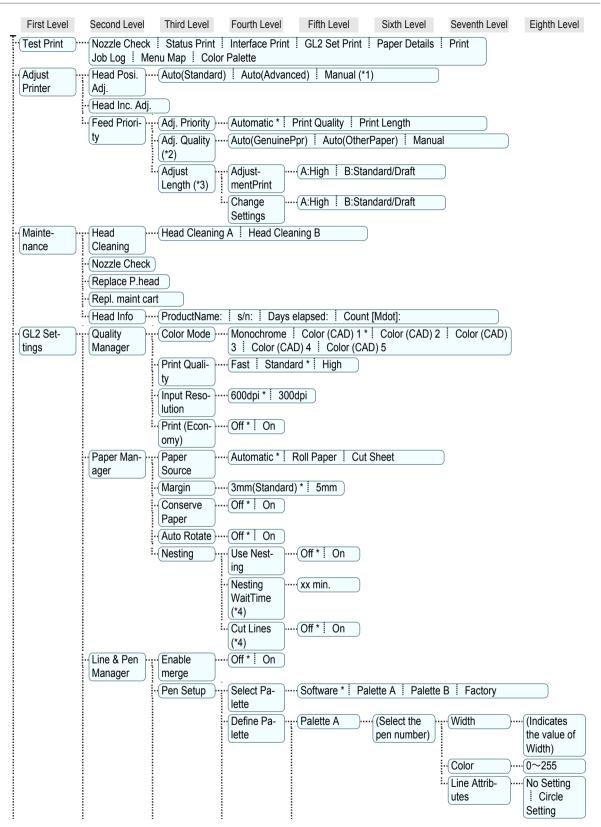

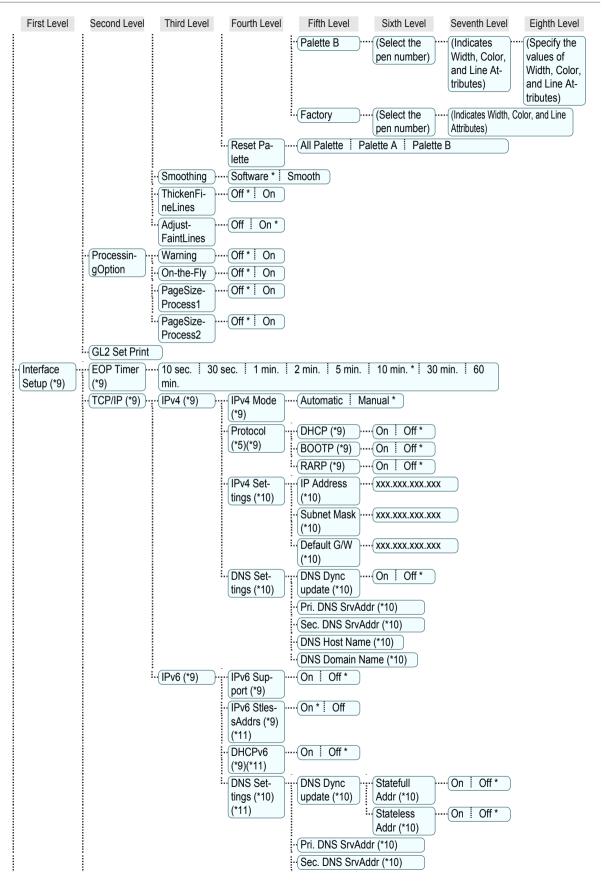

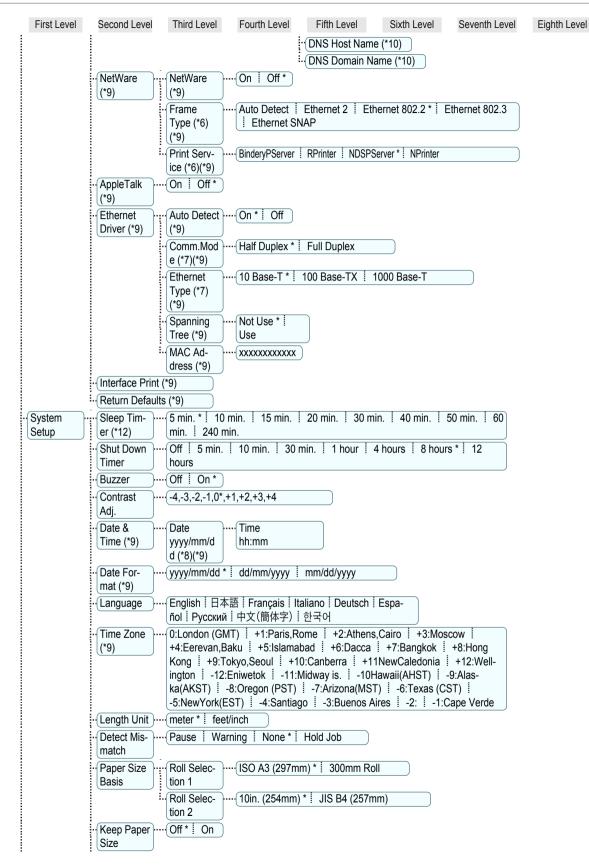

Eighth Level

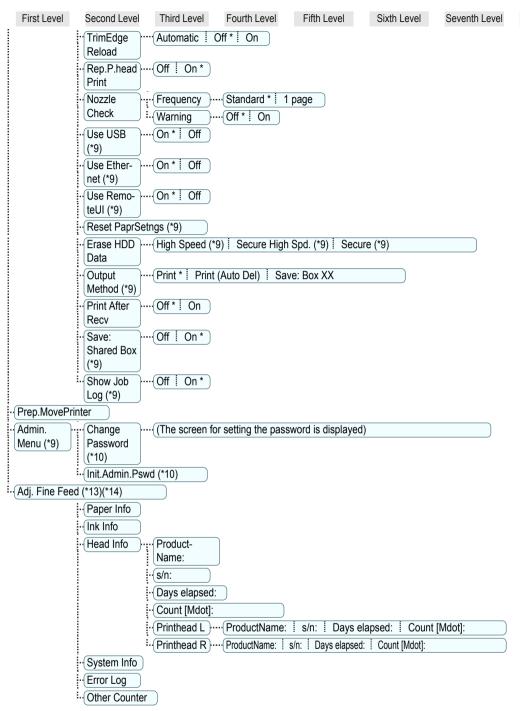


- *1: Available after you have used Auto(Advanced) in Head Posi. Adj. once.
- *2: Available if Adj. Priority is Automatic or Print Quality.
- *3: Available if Adj. Priority is Automatic or Print Length.
- *4: Available only if Use Nesting is On.
- *5: Not displayed if IPv4 Mode is Manual.
- *6: Not displayed if **NetWare** is **Off**.
- *7: Not displayed if Auto Detect is On.
- *8: Follows the setting in **Date Format**.
- *9: Viewing and configuration is possible for administrators, and only viewing for other users.

- *10: Viewing and configuration is possible for administrators only.
- *11: Not displayed if IPv6 Support is Off.
- *12: Default setting for the time to enter the power save mode/Sleep mode is recommended.
- *13: Displayed as the menu during printing while printing is in progress.
- *14: Not displayed in the regular menu.

Front	55
Side	
Top Cover (Inside)	
Roll Cover (Inside)	
Carriage	
Ink Tank Cover (Inside)	59

Front

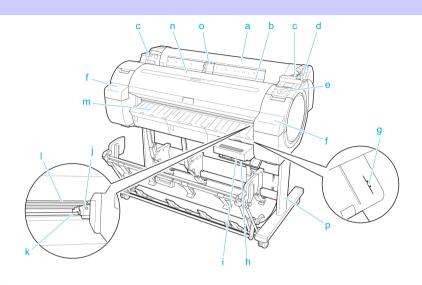

a Roll Cover

Open this cover to load rolls. (See "Roll Cover (Inside).") →P.58

b Paper Feed Slot

When loading paper, insert it here.

c Roll Ledge

When loading rolls, rest the Roll Holder here before loading it in the Roll Holder Slot.

d Release Lever

When releasing the Paper Retainer, push this lever back.

e Control Panel

Use this panel to operate the printer and check the printer status. (See "Control Panel.") →P.43

f Ink Tank Cover

Open this cover to replace an Ink Tank. (See "Ink Tank Cover (Inside).") →P.59

g Paper Alignment Line

An orange line for alignment of paper.

h Maintenance Cartridge Cover

Open this cover to replace the Maintenance Cartridge.

i Maintenance Cartridge

Absorbs ink used for maintenance purposes such as head cleaning. (Replace the cartridge when it is full.)

j Cutter Unit

A round-bladed cutter for automatic roll cutting.

k Cutter Rail

The Cutter Unit passes over this rail to cut paper.

Front

Printer parts

Output Tray

All printed documents are ejected from this slot.

m Ejection Guide

Guides printed documents as they are ejected.

n Top Cover


Open this cover to install the Printhead and remove any jammed paper from inside the printer, as needed. (See "Top Cover (Inside).") →P.57

• Width Guide

When loading the sheets , move the guide to match the paper size.

p Stand

A stand that holds the printer. Equipped with casters to facilitate moving it. (See "Stand.") -User's Guide

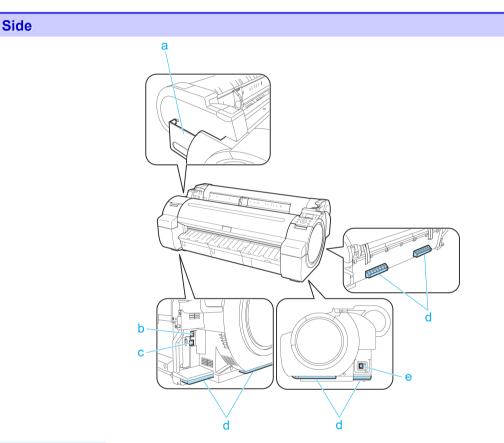

a Manual Pocket

Store printer manuals in this pocket.

b Ethernet Port

Connect an Ethernet cable to this port. The lamp is lit if the Ethernet cable is connected correctly and communication is possible between the computer and printer.

C USB Port

56

Connect a USB cable to this port. The printer is compatible with Hi-Speed USB connections.


d Carrying Handles

When carrying the printer, have three people hold it by these handles on the back at both ends.

e Power Supply Connector

Connect the power cord to this connector.

Top Cover (Inside)

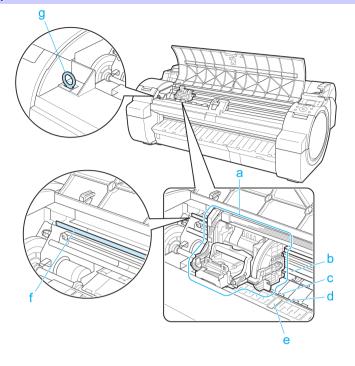

a Carriage

Moves the Printhead. The carriage serves a key role in printing. (See "Carriage.") →P.58

b Carriage Shaft

The Carriage slides along this shaft.

c Paper Retainer

Important in supplying the paper. This retainer holds paper as it is fed.

d Platen

The Printhead moves across the platen to print. Vacuum holes on the platen hold paper in place.

e Borderless Printing Ink Grooves

For catching ink outside the edges of paper during borderless printing.


f Linear Scale

The linear scale serves a key role in detecting the Carriage position. Be careful not to touch this part when cleaning inside the Top Cover or clearing paper jams.

g Cleaning Brush

When cleaning inside the printer under the Top Cover, use this brush to sweep away paper dust on the Platen.

Roll Cover (Inside)

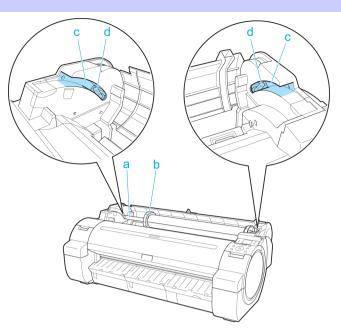

a Roll Holder

Load the roll on this holder.

b Holder Stopper


Secure rolls on the Roll Holder with this part.

c Roll Loading Slots Slide the Roll Holder along these slots.

d Roll Holder Slot

Load the Roll Holder into this holder slot.

Carriage

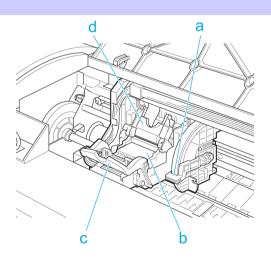

a Angle Adjustment Lever

Use this lever to fine-tune the printer to correct misalignment of printed lines.


58 b Printhead

The printhead is equipped with ink nozzles. The carriage serves a key role in printing.

c Printhead Fixer Lever

Locks the Printhead Fixer Cover.

d Printhead Fixer Cover Holds the Printhead in place.

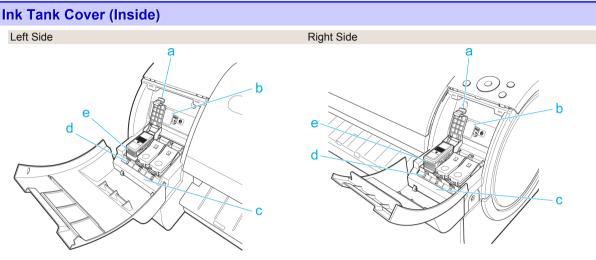


a Ink Tank Lock Lever

A lever that locks the Ink Tank in place and protects it. Lift and press down the lever when replacing an Ink Tank.

b Ink Set Label

An lnk Tank that can be used in the printer is labeled with a white letter [W that can be used in the printer is labeled with a white letter **J:: type="normal"J** in a black circle on the side. When purchasing an lnk Tank, make sure a **J** is printed on the label. (See "lnk Tanks.") \rightarrow P.22

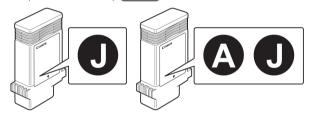

c Ink Color Label

Load an Ink Tank that matches the color and name on this label.

d Ink Lamp (Red)

Indicates the state of the Ink Tank as follows when the Ink Tank Cover is opened.

• On

The Ink Tank is installed correctly.

• Off

No Ink Tank is installed, or the ink level detection function has been released.

• Flashing Slowly

Not much ink is left.

• Flashing Rapidly

There is no ink left.

e Ink Tank

Cartridges of ink in various colors.

Printer Relocation

Preparing to Transfer the Printer

 Preparing to Transfer the Printer
 60

 Reinstalling the Printer
 63

Preparing to Transfer the Printer

To protect the internal parts in transit, always follow these steps before transferring the printer to a new location. Refer to the Setup Guide for details on packing the printer and installing it after transfer.



• Avoid tilting the printer excessively in transit. This may cause ink in the printer to leak and cause stains. If it is necessary to tilt the printer in transit, contact your Canon dealer.



When you execute prepare to transfer, ink is drawn into the Maintenance Cartridge. Depending on the amount of free space in the mounted Maintenance Cartridge, you may need to replace it with a new one at this time.
 Note that replacement is not required if there is 60% or more free space. (See "Checking the Remaining Maintenance Cartridge Capacity.") ->User's Guide

• Depending on the state of the printer, part replacement may be necessary when preparing to transfer the printer (that is, when you execute the printer menu item to prepare for transfer).

Remove paper

Remove the paper.

- Rolls (See "Removing the Roll from the Printer.") →P.15
- Sheets (See "Removing Sheets.") →P.20

Access the Move Printer menu

On the Tab Selection screen of the Control Panel, press 4 or

▶ to select the Settings/Adj. tab (



Ready OK:Setting/Adj. Menu Maint.C Remain.: 80% Tot.Print Area(m2): 678

• If the Tab Selection screen is not displayed, press the Menu button.

2 Press the **OK** button.

Note

The Set./Adj. Menu is displayed.


Press ▲ or ▼ to select Prep.MovePrinter, and then press the OK button. Once preparations are finished, a message on the Display Screen requests you to open the Ink Tank Cover.




 If consumables must be replaced, the message "Consumables must be replaced. Call for service." is shown on the Display Screen and preparation is not possible. If this message is displayed, press the OK button and contact your Canon dealer for assistance. 3

Remove the Ink Tank

Open the Ink Tank Cover.

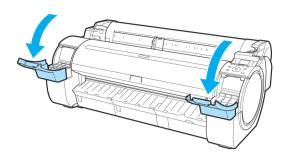


2 Pressing the tip of the Ink Tank Lock Lever horizontally, lift the Ink Tank Lock Lever to release the lock.

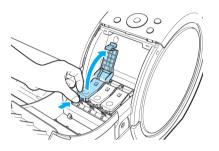

Holding the ink tanks by the grips, remove them.

Repeat steps 2 and 3 to remove all ink tanks.

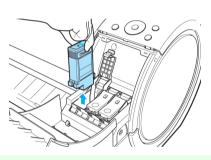




• Store the ink tanks you removed with the ink holes (a) facing up. Otherwise, ink may leak and cause stains.





Printer Relocation



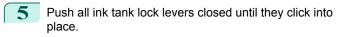

At this point, ink is drawn out from inside the tubes.

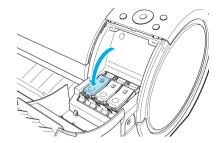

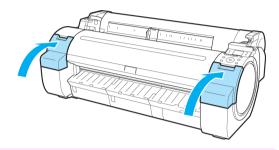



Close the Ink Tank Cover.

• Do not remove the Maintenance Cartridge during this process.

7 When the processing is complete, "Completed! Turn Power Off!!" is displayed. Press the Power button to turn the power off.



Pack the printer

Disconnect the power cord and interface cable.




• Turn off the printer before you unplug it. It may damage the printer if you unplug it before it is off and transfer it in that state. If you accidentally unplug the printer, plug it in again, reinstall the ink tanks, and follow this procedure again.


- 2 Tape down printer covers to secure them, in the reverse order of tape removal during installation.
- 3 Remove the Stand by reversing the installation procedure, when it was attached to the printer.
- 4 Disassemble and repackage the Stand by following the installation procedure in reverse.
- 5 Repack the Roll Holder, Holder Stopper, and printer in shipping materials, and then package them in a shipping box.

Reinstalling the Printer

The basic workflow for reinstalling the printer is as follows. For detailed instructions, see the Setup Guide.


Assemble the stand

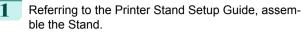

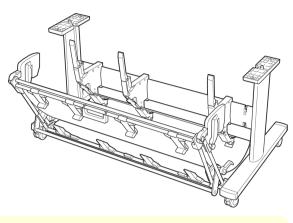


• The Stand must be assembled by at least two people on a flat surface. Attempting assembly by yourself poses a risk of injury or bending the Stand.


- When assembling the Stand, lock the casters.
- Before moving the assembled stand, lift the support rod to the position shown (a) and unlock all four casters. Moving the stand with the support rod lowered or the casters locked may cause injury or damage the area of installation or basket cloth.

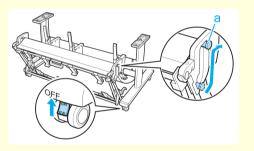



Install the printer

Mount the printer on the assembled Stand and tighten the screws firmly.

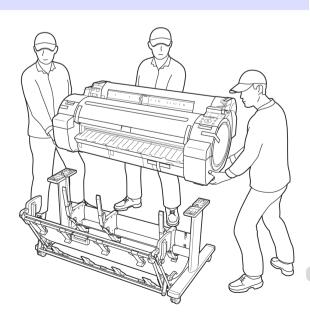

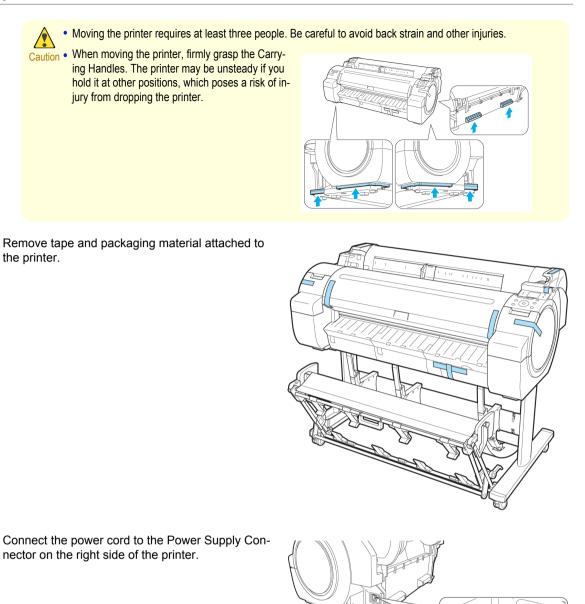

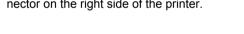

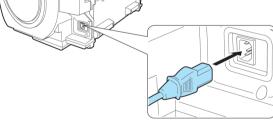



3

Plug the power cord into the outlet.

Power

1

Sto


Navigate

4


Feed

OK

Cut

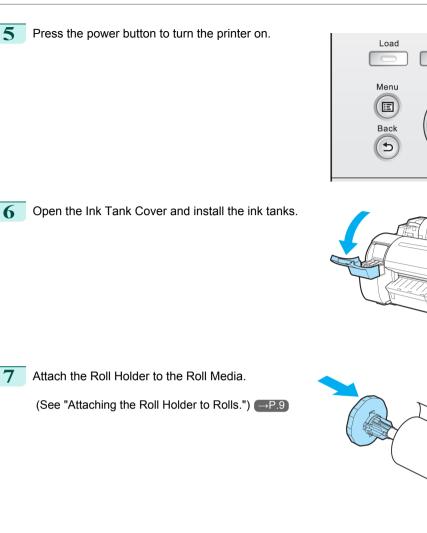

- 8
- Load the roll Roll Media in the printer. (See "Loading Rolls in the Printer.") \rightarrow P.12

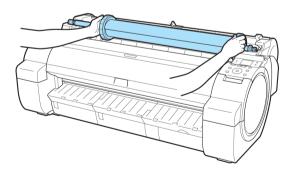

 Install the printer driver and manual. Note that the driver installation procedure varies depending on the type of connection. (See "Installing the Software (Windows).")
 →P.67 (See "Installing the Software (Mac OS X).")
 →P.69





• When the printer is connected to a network (via TCP/IP), the printer's IP address may be changed if you reinstall the printer.

In this case, be sure to reconfigure the printer's IP address.

Software Installation

Installing the Printer Driver (Windows)

Installing the Software (Windows)

The basic instructions for installing the software are as follows. For detailed instructions, see the Setup Guide.

Supported connection methods

The printer driver works over USB or network (TCP/IP) connections. The driver installation procedure varies depending on the type of connection. Follow these steps to install the software and Electronic manuals.

Installing the software and electronic manuals



• When setting up a USB connection, connect the USB cable during printer driver installation following the instructions displayed.

If you accidentally connect the USB cable first, the printer driver may not be installed correctly.

• When the printer is connected to a network (via TCP/IP), the printer's IP address may be changed if you reinstall the printer. In this case, be sure to reconfigure the printer's IP address.

Turn the computer on.


When setting up a TCP/IP (network) connection, after making sure the printer is on, connect the LAN cable to the Ethernet port on the back of the printer and to your network hub port.

2 Insert the provided User Software CD-ROM for the appropriate operating system in the CD-ROM drive.



Follow the instructions displayed to complete installation.



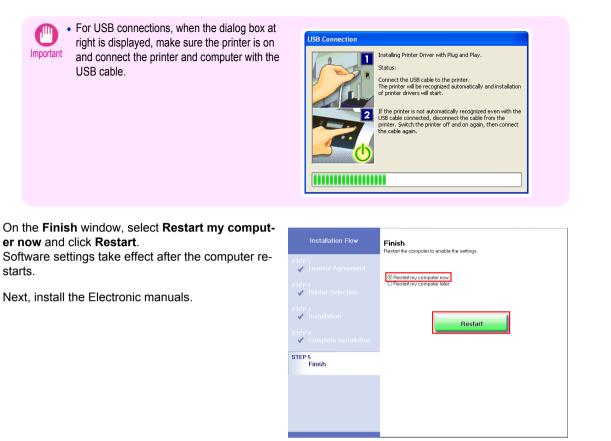

When the Install User Manual dialog box is displayed, insert the provided User Manuals CD-ROM in the CD-ROM drive and follow the instructions displayed to complete installation.

4

starts.

Installing the Printer Driver (Mac OS X)

Installing the Software (Mac OS X)

The basic instructions for installing the software are as follows. For detailed instructions, see the Setup Guide.

Supported connection methods

The printer driver works over USB or network (Bonjour or IP) connections. Follow these steps to install the software and Electronic manuals.

Installing the software and electronic manuals



• When the printer is used over a network, the printer's IP address may be changed if you reinstall the printer. In this case, be sure to reconfigure the printer's IP address.




After making sure the computer and printer are not connected by a cable, turn the computer on.

2

3

Insert the provided User Software CD-ROM for the appropriate operating system in the CD-ROM drive.

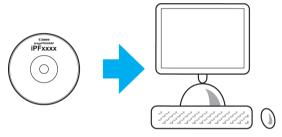

Follow the instructions displayed to complete installation.

Canon	imagePROGRAF
	Installs the checked software. Click Next.
-	$ \begin{tabular}{lllllllllllllllllllllllllllllllllll$
	 Cf Functions to add to the printer driver imageROCRAF Preview: For checking the layout before printing imageROCRAF Free Layout : For printing multiple images together on a roll Color imageRUNKE Enlargement Copy : For printing enlarged copies of images scanned on Color imageRUNKER digital MFCS
	Media Configuration Tool Media Configuration Tool is the software utility that registers new media types to the printer and related software.
	Set the manual in the infrared set of the set of the manual in the infrared set of the set of th
ж	Cancel

4	After installation, click Quit.	000	
	Installation of the software is now finished. Next, connect the printer and computer.	© License © Installation Type © Processing © Finish Up	Finish Up The operation was successful. Installation powered by VISE X

- 5 After confirming the printer is on, connect the printer to your computer or the network.
- **6** Click **Next** and follow the instructions displayed to register the printer to set up and update the paper information.

Next, install the Electronic manuals.

00	imagePROGRAF PrinterSetup
Introduction	Follow these instructions to add the printer to the printer list and make it availabl for printing.
Select Printer	To register the printer, click Next.
Enter Printer Name	To exit without registering the printer, click Exit.
Registration Complete	
	Exit Next

Insert the provided User Manuals CD-ROM in the CD-ROM drive and follow the instructions displayed to complete installation.


Convenient Printer Driver Features

Print Preview	71
Rotate Page 90 degrees (Converse Paper)	73
Borderless Printing	
Large-Format Printing	
Enlarged/Reduced Printing	

Print Preview

Using the print preview function enables the following.

- Check an image of the document as arranged on the paper, in the position it will be printed. You can reduce printing costs by checking how documents will be printed beforehand, without the need to print them.
- Change the layout orientation relative to the paper. You can save paper by correcting the direction in which the document is arranged on the paper, if necessary.

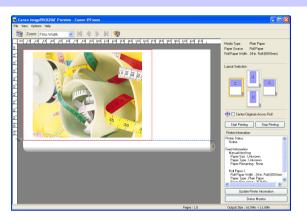

Configuring Settings in Windows


- 1. Access the Main sheet.
- 2. Select the Open Preview When Print Job Starts check box.
- 3. Check details in the Information dialog box displayed next and click OK to close the Information dialog box.
- After you click OK, when you print a job, the imagePROGRAF Preview window will be displayed.

Canon iPExxxx Printing Preferences Page Setup Layout Favorites Utility Support Media Type : Plain Paper Get Inf Easy Sett Print Targe lor Line D Letter(8.5"×11") . e Line I ÷ ul Color Rep Print Quality Standard (600dpi) ting normal documents hs and graphics. Suitable for prin ntain a mixture View Settings Open Preview When Print Job Starts Status Monitor... About Defaults OK Cancel Apply Help



• Under some settings and in some environments, PageComposer may be started.

- 1. In the File menu of the source application, choose the appropriate menu item for printer settings to display the **Print** dialog box.
- 2. Access the Main pane.
- **3.** Select the **Print Preview** check box.
- 4. After you click **Print**, the **Canon imagePROGRAF Preview** window will be displayed.

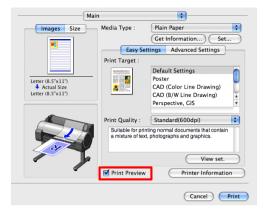


Note

Rotate Page 90 degrees (Converse Paper)

You can conserve roll paper by specifying particular settings as suitable for your original.

When you print an original that is in portrait orientation, the original is rotated 90 degrees before printing if it fits within the roll width. This enables you to conserve paper.

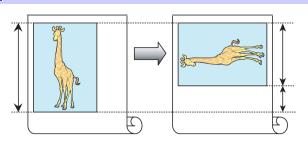

• If the page would exceed the roll paper width after rotation, you can use this function with Scale to fit Roll Paper Width to print rotated pages.


Configuring Settings in Windows

- 1. Access the Page Setup sheet.
- 2. Select the Rotate Page 90 degrees (Conserve Paper) check box.




Configuring Settings in Mac OS X

- 1. Access the Page Setup pane.
- 2. Select the Rotate Page 90 degrees check box.

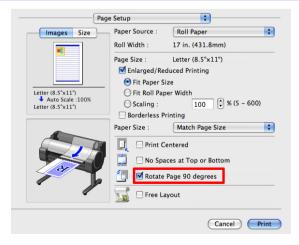

Borderless Printing

In regular printing, a margin required by the printer is added around the original. With borderless printing, you can print documents without the margin, so that the printed image covers the entire surface of the paper.

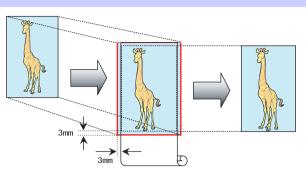


Configuring Settings in Windows

- 1. Access the Page Setup sheet.
- 2. Select the Borderless Printing check box to display the Information dialog box.
- 3. Click the width of the loaded roll in the Roll Paper Width list.
- 4. Click OK to close the Information dialog box.
- 5. Select Fit Paper Size, Scale to fit Roll Paper Width, or Print Image with Actual Size.

Seanon iPFxxxx Printing Preferences				
Main Page Setup Layout Favorites Utility Support				
	Page Size :	Letter(8.5"x11")		
	→ Borderless Printing Met	Borderless Printing		
	Fit Paper Size			
	 Scale to fit Ro 			
	O Print Image wi			
Letter(8.5"×11") : 8.50 in × 11.00 in	Paper Size :	Auto		
Borderless(Roll Width) 17-in. Roll (431.8mm) :	- Orientation			
17.00 in x 22.09 in	A 💿 F	Portrait 🔬 🔿 Landscape		
	📶 🗌 Rotate Page	90 degrees (Conserve Paper)		
	Paper Source :	Roll Paper		
- K-	Roll Paper Width :	17-in. Roll (431.8mm)		
		Roll Paper Options		
		Size Options Defaults		
	ОК	Cancel Apply Help		

Configuring Settings in Mac OS X

- 1. Access the Page Setup pane.
- 2. Select the Enlarged/Reduced Printing check box.
- 3. Select the Borderless Printing check box.
- 4. Select either Fit Paper Size or Fit Roll Paper Width.

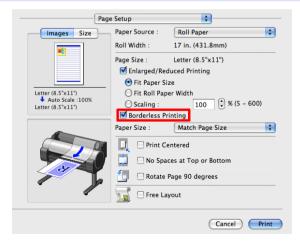




 Borderless printing is possible when the Page Size setting matches the size of paper loaded in the printer and you select XXXX-Borderless (where XXXX is the size of the original) in Paper Size in the Page Attributes dialog box. (Mac OS X only)

Large-Format Printing

You can create vertical or horizontal banners by printing originals in banner formats on rolls.

Originals created in Microsoft Word or other applications in your preferred size can be enlarged to fill the width of roll paper by completing simple printer driver settings.

The printer supports roll printing up to a maximum length of 18.0 m (19.7 yd).

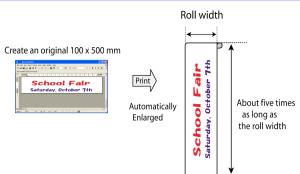


Configuring Settings in Windows

- 1. Access the Page Setup sheet.
- 2. Click Size Options and register the original size.
- 3. Select the Enlarged/Reduced Printing check box.
- 4. After you click **Fit Roll Paper Width**, the **Information** dialog box is displayed.
- 5. Click the width of the loaded roll in the **Roll Paper** Width list, and then click **OK**.




Configuring Settings in Mac OS X

- 1. Access the Page Setup pane.
- 2. Make sure the width of the loaded roll is displayed in **Roll Width**.
- Make sure the size of the original you have prepared is displayed in Page Size. If you have not registered Custom Paper Sizes, resize the original to fit the roll width.
- 4. Select the Enlarged/Reduced Printing check box.
- 5. Click Fit Roll Paper Width.

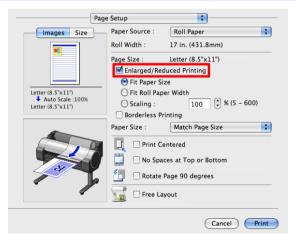

Enlarged/Reduced Printing

Originals can be printed at larger or smaller sizes, as desired.

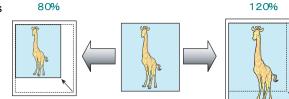

Configuring Settings in Windows

- 1. Access the Page Setup sheet.
- 2. Click the width of the loaded roll in the **Roll Paper** Width list.
- 3. In the **Page Size** list, click the size of the original as specified in the source application.
- 4. Select the Enlarged/Reduced Printing check box.
- 5. Select Fit Paper Size, Fit Roll Paper Width, or Scaling.



Configuring Settings in Mac OS X

- 1. Access the Page Setup pane.
- 2. Make sure the width of the loaded roll is displayed in Roll Width.
- Make sure the size of the original you have prepared is displayed in Page Size.
- 4. Select the Enlarged/Reduced Printing check box.
- 5. Select Fit Paper Size, Fit Roll Paper Width, or Scaling.

Cinc.	Paper Source :	Roll Paper
Images Size	Paper Source .	Roll Paper
	Roll Width :	17 in. (431.8mm)
	Page Size :	Letter (8.5"x11")
	🗹 Enlarged/Re	duced Printing
	Fit Paper S	ize
Letter (8.5"x11")	Fit Roll Pa	per Width
Auto Scale :100% Letter (8.5"x11")	O Scaling :	100 🗘 % (5 - 600)
	Borderless F	rinting
	Paper Size :	Match Page Size
	Print C	entered
9	No Spi	aces at Top or Bottom
	Carl Rotate	Page 90 degrees
	🗾 🗆 Free L	ayout

Adjustments for Better Print Quality

Adjusting the Printhead

Automatic Adjustment to Straighten Lines and Colors (Head Posi. Adj.)

If printed vertical lines are warped or colors are out of alignment, execute **Head Posi. Adj.** to adjust the Printhead alignment.

There are two modes for automatic Printhead adjustment: Auto(Standard) and Auto(Advanced).

Auto(Standard) will fix most slight image distortion or color misalignment, but if not, try Auto(Advanced).

Use **Auto(Standard)** or **Auto(Advanced)** to have the printer print and read a test pattern for automatic adjustment of the Printhead.



- Always make sure the loaded paper matches the type of paper specified on the printer. Adjustment cannot be completed correctly unless the loaded paper matches the settings.
- This function is not available with CAD Tracing Paper, CAD Translucent Matte Film, or CAD Clear Film. If adjustment is not possible as expected using highly transparent film or similar media, try another type of paper, or try **Manual** adjustment.

(See "Manual Straightening of Lines and Colors (Head Posi. Adj.).") →User's Guide



Important

- When printing on special paper, or if printing is not improved after **Auto(Advanced)**, try **Manual**. (See "Manual Straightening of Lines and Colors (Head Posi. Adj.).") →User's Guide
- Use Auto(Standard) if you have switched to another type of paper or if you want the boundaries between colors to appear as clear as possible.
- Use Auto(Advanced) to fine-tune the space between nozzles or colors if you have switched the printhead or if clearer
 printing is required. We recommend Auto(Advanced) for printing at the highest level of quality.
- · We recommend using the type of paper you use most often for adjustment.

Paper to Prepare

Rolls	An unused roll at least 10 inches wide	
Sheets	Auto(Standard) : One sheet of unused paper of at least A4/Letter size Auto(Advanced) : Five sheets of unused paper of at least A4/Letter size (or one sheet when using A2 or larger)	

Perform adjustment as follows.

- Load the paper.
 - Attaching the Roll Holder to Rolls →P.9
 - Loading Rolls in the Printer →P.12
 - Loading Sheets in the Printer →P.18

2	On the Tab Selection screen of the Control Panel, press ◀ or ► to select the Settings/Adj. tab (().	Ready OK:Setting/Adj. Menu Maint.C Remain.: 80% Tot.Print Area(m2): 678
	• If the Tab Selection screen is not displayed, press the Menu b Note	putton.
3	Press the OK button. The Set./Adj. Menu is displayed.	
4	4 Press \blacktriangle or \blacksquare to select Adjust Printer , and then press the OK button.	
5	Press ▲ or ▼ to select Head Posi. Adj. , and then press the OK button.	
6	Press ▲ or ▼ to select Auto(Standard) or Auto(Advanced) , and A test pattern is printed for adjustment. Adjustment is now finished if you have printed on a roll or a sheet	
7	7 If you are printing on sheets smaller than A2 size for Auto(Advanced) , a confirmation message is dis played requesting you to continue printing. Press the OK button and follow the instructions displayed.	

Adjusting the feed amount

Selecting a Feed Amount Adjustment Method (Feed Priority)	79
Adjusting Line Length (Adjust Length)	80

Selecting a Feed Amount Adjustment Method (Feed Priority)

Methods of adjusting the amount paper is fed are set in **Adj. Priority**. Adjust **Adj. Priority** to suit your particular printing application.

- **Print Quality** : Adjusts the feed amount to reduce banding across the sheet in printed documents. **Adj. Quality** settings are applied. When **Adj. Fine Feed** is executed, the **Adj. Fine Feed** settings are applied in addition to the **Adj. Quality** settings.
- **Print Length** : Adjusts the feed amount for better accuracy of lines in printed documents. The settings of **A:High** or **B:Standard/Draft** in **Adjust Length** are applied.
- Automatic : Print Quality or Print Length is selected, depending on Print Priority as selected in the printer driver at the time of printing.

Image or Office Document : Print Quality is selected. Line Drawing/Text : Print Length is selected.



 Either A:High or B:Standard/Draft in the Adjust Length menu is applied, depending on printer driver settings at the time of printing.

- If you have selected Easy Settings in the printer driver, follow these steps to confirm the Print Priority setting.
 - Windows: Click View Settings on the Main tab to display the View Settings dialog box.
 - Mac OS X: Click View set. on the Main pane to display the View settings dialog box.

Follow these steps to configure the settings.

Load the paper.

Note

- Attaching the Roll Holder to Rolls →P.9
- Loading Rolls in the Printer →P.12
- Loading Sheets in the Printer →P.18

2 On the Tab Selection screen of the Control Panel, press 4 or

▶ to select the Settings/Adj. tab (____).



Ready OK:Setting/Adj. Menu Maint.C Remain.: 80% Tot.Print Area(m2): 678

• If the Tab Selection screen is not displayed, press the Menu button.

3 Press the OK button. The Set./Adj. Menu is displayed.
4 Press ▲ or ▼ to select Adjust Printer, and then press the OK button.

5 Press \blacktriangle or \blacktriangledown to select **Feed Priority**, and then press the **OK** button.

6 Press \blacktriangle or \blacktriangledown to select **Adj. Priority**, and then press the **OK** button.

Press ▲ or ▼ to select Automatic, Print Quality, or Print Length, and then press the OK button.

79

Adjusting Line Length (Adjust Length)

To ensure that lines in CAD drawings are printed at exactly the right length, use **Adjust Length** to adjust the amount that paper is advanced.

There are two options in Adjust Length : AdjustmentPrint and Change Settings.

AdjustmentPrint

After a test pattern is printed, you will measure the discrepancy based on the results of printing.

Change Settings

No test pattern is printed. Instead, you will measure a document already printed to determine the discrepancy.

Additionally, two modes are available in both **AdjustmentPrint** and **Change Settings** : **A:High** or **B:Standard/ Draft**. Choose the mode that suits your particular printing application.

• A:High

This setting is applied when Highest or High is selected in Print Quality in the printer driver.

B:Standard/Draft

This setting is applied when Standard or Fast is selected in Print Quality in the printer driver.



 Always check the Adj. Priority values before using Adjust Length. (See "Selecting a Feed Amount Adjustment Method (Feed Priority).") -P.79

• Use paper of the same type and size for adjustment as you will use for printing.

Paper to Prepare

When Using Rolls	An unused roll at least 10 inches wideHigh-precision ruler
When Using Sheets	One sheet of unused paper of at least A4/Letter sizeHigh-precision ruler

Perform adjustment as follows.


Load the paper.

- Attaching the Roll Holder to Rolls →P.9
- Loading Rolls in the Printer →P.12
- Loading Sheets in the Printer →P.18



 Always make sure the loaded paper matches the type of paper specified. Adjustment cannot be completed correctly unless the loaded paper matches the settings.

2 On the Tab Selection screen of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab (-----).

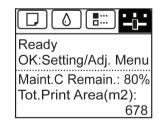

• If the Tab Selection screen is not displayed, press the Menu button.



3

4


80

Press the **OK** button. The **Set./Adj. Menu** is displayed.

Press ▲ or ▼ to select Adjust Printer, and then press the OK button.

8

- 5 Press ▲ or ▼ to select Feed Priority, and then press the OK button.
- **6** Press \blacktriangle or \triangledown to select **Adjust Length**, and then press the **OK** button.
- 7 Press ▲ or ▼ to select AdjustmentPrint or Change Settings, and then press the OK button. When you select AdjustmentPrint, a test pattern is printed for you to measure the scale and calculate the discrepancy. The scale bar prints Millimeter in 50 mm increments and Inch in 1inch increments.

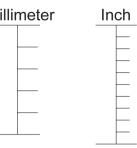

- A test pattern is printed in black when you choose A:High or in magenta if you choose B:Standard/Draft.
- Note To cancel printing the test pattern for adjustment, hold down the Stop button. When "Stop printing?" is displayed, press ▲ or ▼ to select "Yes", and then press the OK button.
- Press ▲ or ▼ to enter the amount of discrepancy, and then press the **OK** button.
- If the scale is shorter than the actual size, use a positive setting value. If it is longer, use a negative value. The feed amount can be adjusted in 0.02% increments.

Troubleshooting

Problems Regarding Paper

Clearing Jammed Paper (Paper Feed Slot)	82
Clearing Jammed Roll Paper	84
Clearing a Jammed Sheet	87
Roll paper cannot be inserted into the paper feed slot	90
Cannot load sheets	90
Paper is not cut neatly	90
Paper is not cut	91
Depression on the leading edge is left	91
The size of clear film cannot be detected	91
Roll Paper is Continuously Ejected	91

Clearing Jammed Paper (Paper Feed Slot)


Follow these steps to remove any scraps left in the Paper Feed Slot after you clear jammed sheets or roll paper.

Turn the printer off. (See "Turning the Printer On and Off.") →User's Guide



Push the Release Lever back.

- 3
- Positioning your hands as shown, open the Roll Cover.

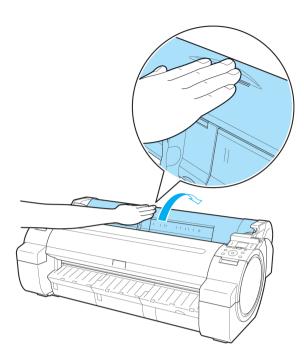


4 Fold an A4 sheet lengthwise four times and insert it through the gap of the Paper Feed Slot. Push the scrap out toward the Platen.

Remove the scrap when it is pushed out onto the Platen.

Holding it at the positions indicated, close the Roll

If any scraps remain inside the paper feed slot, repeat steps 4 and 5.

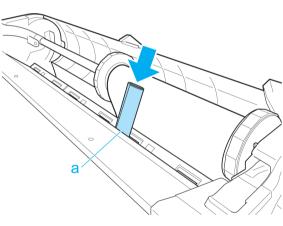

Problems Regarding Paper

Troubleshooting


5

6

7

Cover.

8 Pull the Release Lever forward.

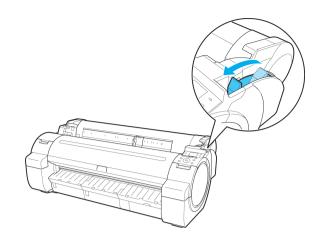


Clearing Jammed Roll Paper

If paper from a roll becomes jammed, "**Paper jam.**" is shown on the Display Screen of the Control Panel. Remove the jammed paper as follows.




Open the Roll Cover. Use a commercially available cutter or the like to cut the paper of the loaded roll.

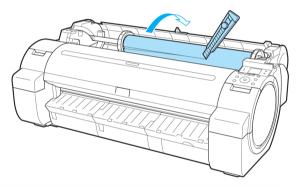




• When cutting paper, be careful to avoid injury or damage to the printer.

2 Push the Release Lever back.

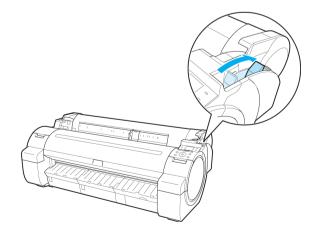




- Remove the jammed paper.
 - If paper is jammed inside the Top Cover
 - Open the Top Cover and move the Carriage to the left or right side manually, away from the jam.

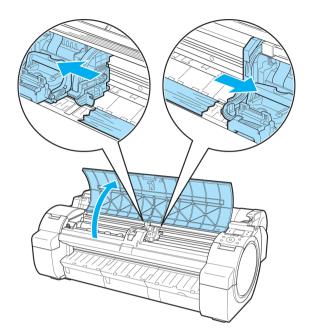


- 2. Clear any jammed paper from inside the Top Cover. After removing the paper, make sure there are no other scraps of paper in the printer.
- **3.** Close the Top Cover.

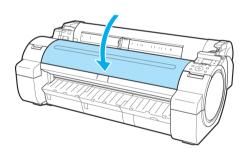

In • Do not move the Carriage over jammed paper. This may damage the Printhead.


Important • Do not touch the Linear Scale (a) or Carriage Shaft (b). This may stain your hands and damage the printer.

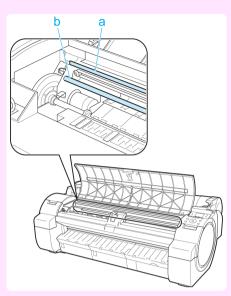

• If paper from a roll is jammed by the Paper Feed Slot


- 1. Open the Roll Cover.
- 2. Remove the jammed paper from the Paper Feed Slot.

After removing the paper, make sure there are no other scraps of paper in the printer.

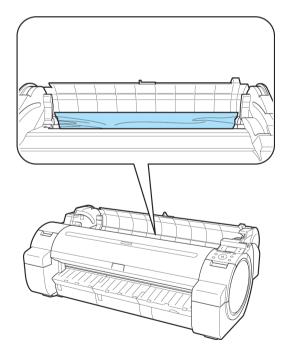


• If the paper is jammed by the Ejection Guide Remove the jammed paper from the Output Tray.

After removing the paper, make sure there are no other scraps of paper in the printer.

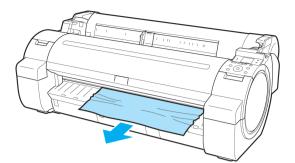

4 Pull the Release Lever forward.

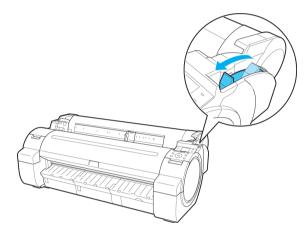


Clearing a Jammed Sheet

If a sheet becomes jammed, "**Paper jam.**" is shown on the Display Screen of the Control Panel. Remove the jammed paper as follows.




Push the Release Lever back.

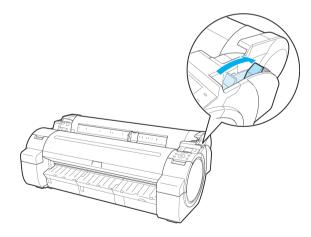




Remove the jammed paper.

- If paper is jammed inside the Top Cover
 - 1. Open the Top Cover and move the Carriage to the left or right side manually, away from the jam.

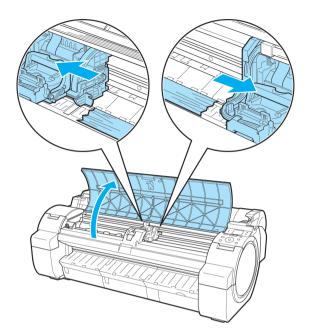


- 2. Clear any jammed paper from inside the Top Cover. After removing the paper, make sure there are no other scraps of paper in the printer.
- **3.** Close the Top Cover.

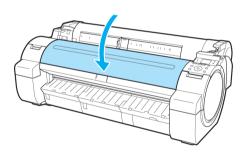


Po not move the Carriage over jammed paper. This may damage the Printhead.

Important • Do not touch the Linear Scale (a) or Carriage Shaft (b). This may stain your hands and damage the printer.

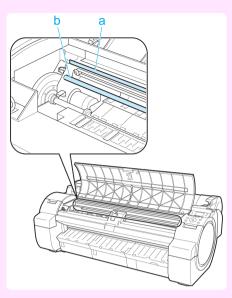


• If the paper is jammed by the Paper Feed Slot Remove the jammed paper from the Paper Feed Slot.

After removing the paper, make sure there are no other scraps of paper in the printer.

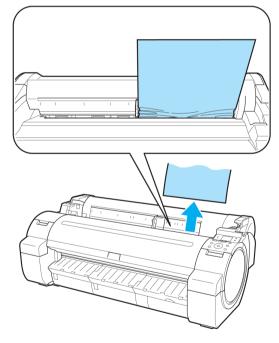


• If the paper is jammed by the Ejection Guide Remove the jammed paper from the Output Tray.

After removing the paper, make sure there are no other scraps of paper in the printer.

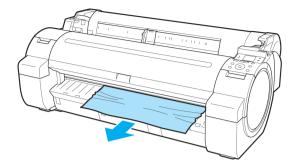



Pull the Release Lever forward.

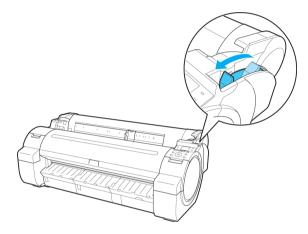

oll paper cannot be inserted into the paper feed slot			
Cause	Corrective Action		
The roll paper is warped.	Straighten out curls and reload the roll.		
Paper is jammed by the paper feed slot.	Remove the jammed paper. (See "Clearing Jammed Roll Paper.") \rightarrow P.84 (See "Clearing a Jammed Sheet.") \rightarrow P.87		
The paper source selection is incorrect.	Press the Load button and select the paper source.		
Cannot load sheets			
Cause	Corrective Action		

Cause	Corrective Action
The paper source selection is incorrect.	Press the Load button and select the paper source.

Paper is not cut neatly

r upor lo not out noutly		
	Cause	Corrective Action
	The paper is bent or curled at the cut position.	Straighten out any curling by the edges of the paper.
	Paper rises by the ends of the cut position before it is cut.	Reload the paper correctly.
	You are using paper that cannot be cut with the Cutter Unit.	Specify Manual in Cutting Mode in the Control Panel menu and use scissors or a cutting tool to cut the roll after printing. (See "Specifying the Cutting Method for Rolls.") → User's Guide
	Cut Speed is not configured correctly in the Control Panel menu.	Change the Cut Speed setting in the Control Panel menu. (See "Menu Structure.") →P.48

90

Cause	Corrective Action
During cutting, printed documents fall out at an angle.	In the Control Panel menu, set Cutting Mode to Eject . Hold documents after print- ing, as they are cut. (See "Specifying the Cutting Method for Rolls.") → User's Guide

Paper is not cut			
	Cause	Corrective Action	
	In the printer driver, No or Print Cut Guideline is specified in Auto Cut .	Specify Yes in Auto Cut in the printer driver.	
	In the Control Panel menu, Cutting Mode is set to Eject or Manual .	If the Cutting Mode is Eject , press the Cut button to cut the paper. If the Cutting Mode is Manual , cut rolls with scissors or the like.	

Depression on the leading edge is left

	Cause	Corrective Action
1 0	in the printer for a long time with- it may leave a depression on the	When printing quality is most important, we recommend setting TrimEdge Reload to On or Automatic so that the paper edge is automatically cut before printing. (See "Menu Structure.") →P.48

The size of clear film cannot be detected

Cause	Corrective Action
The Platen is soiled with ink or other substances.	Open the Top Cover and clean the entire Platen. (See "Cleaning Inside the Top Cover.") \rightarrow P.39

Roll Paper is Continuously Ejected

Cause	Corrective Action
Although sheets are se- lected as the paper source, a roll was ad- vanced.	After roll ejection stops, follow these steps to reload the roll. 1. Push the Release Lever back. 2. Open the Roll Cover.
	3. Using both hands, rotate the Roll Holder toward the back to rewind the roll. At this time, ensure that both ends of the roll are rewound evenly.
	4. Pull the Release Lever forward.
	 Load the roll. At this time, be sure to press the Load button and select Load Roll Paper. (See "Loading Rolls in the Printer.") →P.12

Printing does not start

The Data lamp on the Control Panel does not light up	92
The printer does not respond even if print jobs are sent	
Ink Filling is displayed	
The display screen indicates Agitating	92

The Data lamp on the Control Panel does not light up

Cause	Corrective Action
The printer is not on.	Make sure the power cord is securely plugged in, all the way. Press the Power button to turn on the printer.
The target printer was not selected when printing.	In Windows, select the printer by clicking Select Printer or Printer in the printing dialog box and try printing again.
	In Mac OS X, open the dialog box of the printer driver, select the printer from the list of Printer , and try printing again.
The print job is paused.	In Windows, restart the print job as follows.
	1. Select the printer icon in the Printers and Faxes (or Printers) window.
	2. Clear Pause Printing in the File menu to restart the print job.
	In Mac OS X, restart the print job as follows.
	1. Click Print & Fax. (This is identified as Printer Setup Utility or Print Center in other versions of Mac OS X.)
	2. Select the printer, and then Resume Printer (or Start Jobs) in the Printers menu to restart the print job.

The printer does not respond even if print jobs are sent

Cause	Corrective Action
In the Control Panel menu, Pause Print is On .	Set Pause Print to Off . (See "Pausing Printing.") →User's Guide
In the Control Panel menu, Use USB or Use Ethernet is set to Off.	Set Use USB or Use Ethernet to On. (See "Menu Settings.") →User's Guide
You have selected Save in mail box in Output Method on the printer.	Print the job saved on the printer's hard disk. (See "Printing Saved Jobs.") →User's Guide
Print jobs are pending.	Manage the jobs on hold and print as needed. (See "Printing Jobs on Hold.")

Ink Filling.. is displayed

Cause	Corrective Action
The printer was forced off during opera-	Wait until the system has been filled with ink. This process may take about seven and a half
tion.	minutes.

The display screen indicates Agitating

Cause	Corrective Action
Ink agitation is in pro- gress.	Please wait until ink agitation is finished. The time for agitation varies depending on how long the printer has been off. (Between about 30 seconds and two minutes.)

The printer stops during a print job

An error message is shown on the Display Screen	93
The printer ejects blank, unprinted paper	93

An error message is shown on the Display Screen

Status		Corrective Action
An error message is displayed during printi	ng.	Check the error message and take action as necessary. (See "Error Messages.")
The last portion of roll paper was used duri could not be advanced because the trailing		Remove the used roll and insert a new roll. (See "Removing the Roll from the Printer.") →P.15 (See "Removing Rolls From the Roll Holder.") →User's Guide (See "Loading and Printing on Rolls.") →User's Guide

The printer ejects blank, unprinted paper

Status	Corrective Action
The leading edge of the roll paper was cut to straighten it.	The leading edge of rolls may be cut to straighten it if you have selected Trim Edge First > On or Automatic in the Control Panel menu. (See "Cutting the Leading Edge of Roll Paper Automatically.") -User's Guide
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and make sure the Printhead is in good condi- tion for printing. (See "Checking for Nozzle Clogging.") →User's Guide
A print job was received from an incompatible printer driver.	Use the correct imagePROGRAF printer driver for the printer and try printing again.
The printer has received print data that in- cludes HP RTL commands when Auto Rotate is On in the Control Panel menu.	In the Control Panel, set Auto Rotate to Off and print again. (See "Menu Settings.") → User's Guide
The printer is damaged.	Contact your Canon dealer for assistance.

Problems with the printing quality

Printing is faint	94
Paper rubs against the Printhead	94
The edges of the paper are dirty	95
The surface of the paper is dirty	96
The back side of the paper is dirty	96
Printed colors are inaccurate	96
Banding in different colors occurs	97
Colors in printed images are uneven	97
Image edges are blurred or white banding occurs	
The contrast becomes uneven during printing	98
The length of printed images is inaccurate in the feeding direction	98
Images are printed crooked	99
Documents are printed in monochrome	99
Line thickness is not uniform	99
Lines are misaligned	

Printing is faint

Cause	Corrective Action
You may be printing on the wrong side of the paper.	Print on the printing surface.
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and see if they are clogged. (See "Checking for Nozzle Clogging.") →User's Guide
Because the printer was left without ink tanks installed for some time, ink has become clogged in the ink supply sys- tem.	After the ink tanks have been installed for 24 hours, run Head Cleaning B from the Control Panel. (See "Cleaning the Printhead.") \rightarrow P.41
Paper is jammed inside the Top Cover.	 Follow the steps below to remove the jammed piece of paper inside the Top Cover. Open the Top Cover and make sure the Carriage is not over the Platen. Remove any scraps of paper inside the Top Cover. (See "Clearing Jammed Roll Paper.") -P.84 (See "Clearing a Jammed Sheet.") -P.87 Close the Top Cover.
The ink was not dry when paper was cut.	Specify a longer drying period in the Control Panel menu, in Paper Details > Roll DryingTime . (See "Menu Settings.") → User's Guide
Printing may be faint if Print Quality in Advanced Settings in the printer driver is set to Standard or Fast .	In Advanced Settings of the printer driver, choose Highest or High in Print Quality. Printing in Fast or Standard mode is faster and consumes less ink than in Highest or High modes, but the printing quality is lower. (See "Giving Priority to Particular Graphic Elements and Colors for Printing.") →User's Guide
You are printing on paper that tends to generate dust when cut.	In the Control Panel menu, set CutDustReduct. in Paper Details to On . (See "Reducing Dust from Cutting Rolls.") → User's Guide

Paper rubs against the Printhead

Cause	Corrective Action
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") \rightarrow P.12 (See "Loading Sheets in the Printer.") \rightarrow P.18
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
	 Press the Stop button and stop printing. Change the type of paper in the printer driver and try printing again.

94

Cause	Corrective Action
Paper has been loaded incorrectly, caus- ing it to wrinkle.	Reload the paper. (See "Loading Rolls in the Printer.") →P.12 (See "Loading Sheets in the Printer.") →P.18
The Printhead is set too low in the Control Panel menu.	In the Control Panel menu, set Head Height to Automatic . (See "Adjusting the Printhead Height.") →User's Guide
You are printing on heavyweight paper or paper that curls or wrinkles easily after absorbing ink.	When printing on Heavyweight Coated Paper or other paper-based media, choose a Vac- uumStrngth setting of Strong or Strongest in the Control Panel menu. If the paper still rubs, set Head Height to Highest in the Control Panel menu. (See "Adjusting the Vacuum Strength.") →User's Guide (See "Adjusting the Printhead Height.") →User's Guide
	When printing on CAD Tracing Paper or other film-based media, choose a VacuumStrngth setting of Standard, Strong, or Strongest in the Control Panel menu. If the paper still rubs, set Head Height to Highest in the Control Panel menu. (See "Adjusting the Vacuum Strength.") →User's Guide (See "Adjusting the Printhead Height.") →User's Guide
	When printing on paper 0.1 mm (0.004 in) thick or less, choose a VacuumStrngth setting of Weakest in the Control Panel menu. If the paper still rubs, set Head Height to Highest in the Control Panel menu. (See "Adjusting the Vacuum Strength.") User's Guide (See "Adjusting the Printhead Height.") User's Guide
When you have loaded paper, the paper you have loaded does not match the type selected on the Control Panel.	Be sure to select the correct type of paper in the Control Panel menu when loading paper. (See "Loading Rolls in the Printer.") \rightarrow P.12 (See "Loading Sheets in the Printer.") \rightarrow P.18

The edges of the paper are dirty

Cause	Corrective Action	
The Platen has become dirty after border- less printing or printing on small paper.	Open the Top Cover and clean the Platen. (See "Cleaning Inside the Top Cover.") →P.39	
er does not match the type specified in the	Make sure the same type of paper is specified on the printer as in the printer driver. (See "Changing the Type of Paper.") \rightarrow User's Guide	
printer driver.	Make sure the same paper type is specified in the printer driver as on the printer.	
	1. Press the Stop button and stop printing.	
	2. Change the type of paper in the printer driver and try printing again.	
The paper is wrinkled or warped.	Straighten out the wrinkles or curls and reload the paper. Do not use paper that has been printed on previously. (See "Loading Rolls in the Printer.") \rightarrow P.12 (See "Loading Sheets in the Printer.") \rightarrow P.18	
A cut line is printed because CutDustRe- duct. is On in the Control Panel menu to re- duce cutting dust.	If this function is not needed, set CutDustReduct. to Off in the Control Panel menu. (See "Menu Settings.") —User's Guide	
The Printhead is set too low in the Control Panel menu.	In the Control Panel menu, set Head Height to Automatic . (See "Adjusting the Printhead Height.") → User's Guide	
You are printing on heavyweight paper or paper that curls or wrinkles easily after absorbing ink.	When printing on Heavyweight Coated Paper or other paper-based media, choose a Vac- uumStrngth setting of Strong or Strongest in the Control Panel menu. If the paper still rubs, set Head Height to Highest in the Control Panel menu. (See "Adjusting the Vacuum Strength.") →User's Guide (See "Adjusting the Printhead Height.") →User's Guide	
	When printing on CAD Tracing Paper or other film-based media, choose a VacuumStrngth setting of Standard, Strong, or Strongest in the Control Panel menu. If the paper still rubs, set Head Height to Highest in the Control Panel menu. (See "Adjusting the Vacuum Strength.") →User's Guide (See "Adjusting the Printhead Height.") →User's Guide	
The Ejection Guide is soiled.	Clean the Ejection Guide.	

 Cause
 Corrective Action

 The Ejection Guide is soiled.
 (See "Cleaning the printer exterior.") → User's Guide

The surface of the paper is dirty

Cause	Corrective Action	
The Paper Retainer is soiled.	Clean the Paper Retainer. (See "Cleaning Inside the Top Cover.") →P.39	
You are using a paper that does not dry easily.	In the Control Panel menu, set Roll DryingTime to at least 1 min. (See "Menu Settings.") →User's Guide	
	When paper that does not dry easily is used for printing, it may curl during printing and touch the Out- put Tray. In this case, in the Control Panel menu, complete the settings for Dry time and Area in Scan Wait Time . However, note that printing will now take longer. (See "Menu Settings.") —User's Guide	

The back side of the paper is dirty

Cause	Corrective Action
The Platen has become dirty after borderless printing or printing on small paper.	Open the Top Cover and clean the Platen. (See "Cleaning Inside the Top Cover.") →P.39
The Platen has become soiled because you have set Width Detection to Off in the Control Panel menu.	Set Width Detection to On in the Control Panel menu, and then open the Top Cover and clean the Platen. (See "Cleaning Inside the Top Cover.") →P.39
	Open the Top Cover and clean the Platen. After this, manually advance the roll onto the Platen before printing. (See "Cleaning Inside the Top Cover.") →P.39 (See "Feeding Roll Paper Manually.") →User's Guide
The Paper Retainer is soiled.	Clean the Paper Retainer. (See "Cleaning Inside the Top Cover.") →P.39

Printed colors are inaccurate

Cause	Corrective Action
Color adjustment has not been activated in the Ad- vanced Settings of the printer driver.	In the Advanced Settings of the printer driver, access Color Settings in Color Mode to adjust colors.
Colors have not been adjusted on the computer or	Refer to the computer and monitor documentation to adjust the colors.
monitor.	Adjust the settings of the color management software, referring to the software documentation as needed.
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and see if they are clogged. (See "Checking for Nozzle Clogging.") →User's Guide
In the Windows printer driver, Application Color Matching Priority is not selected.	Click Special Settings on the Layout sheet of the printer driver and select Application Color Matching Priority in the dialog box.
Printhead characteristics gradually change through re- peated use, and colors may change.	Adjust the Printhead alignment. (See "Automatic Adjustment to Straighten Lines and Colors (Head Posi. Adj.).") →P.77 (See "Adjusting the Printhead Alignment Manually.") →User's Guide
Color may change slightly even on the same model of printer if you use a different version of the firmware or printer driver, or when you print under different settings or in a different printing environment.	Follow these steps to prepare the printing environment.1. Use the same version of firmware or printer driver.2. Specify the same value for all settings items.

Banding in different colors occurs Cause Corrective Action The paper feed amount is out of adjust-Adjust the feed amount. ment. (See "Adjusting the Feed Amount.") →User's Guide Printing does not proceed smoothly be-Exit other applications and cancel other print jobs. cause print jobs are interrupted during transmission. Setting Adj. Priority to Print Quality in the Control Panel menu and adjusting the feed In the Control Panel menu, Adj. Priority is set to Print Length. amount may improve results. (See "Adjusting the Feed Amount.") →User's Guide The Printhead is out of alignment. Adjust the Printhead alignment. (See "Automatic Adjustment to Straighten Lines and Colors (Head Posi. Adj.).") →P.77 Print a test pattern to check the nozzles and see if they are clogged. The Printhead nozzles are clogged. (See "Checking for Nozzle Clogging.") →User's Guide Choose a higher level of **Print Quality** in the **Advanced Settings** of the printer driver and try Streaks may occur if you set the Print Quality too low. printing again. Printing in Fast or Standard mode is faster and consumes less ink than in Highest or High modes, but the printing quality is lower. (See "Giving Priority to Particular Graphic Elements and Colors for Printing.") →User's Guide The type of paper specified in the printer Load paper of the same type as you have specified in the printer driver. driver does not match the type loaded in (See "Loading Rolls in the Printer.") \rightarrow P.12 the printer. (See "Loading Sheets in the Printer.") →P.18 Make sure the same type of paper is specified in the printer driver as you have loaded in the printer. 1. Press the **Stop** button and stop printing. 2. Change the type of paper in the printer driver and try printing again.

Colors in printed images are uneven

Cause	Corrective Action
Line Drawing/Text is selected when printing images in many solid colors.	In Print Priority in the Advanced Settings of the printer driver, choose Image .
You are printing on paper that curls easi- ly.	Printed colors may appear uneven on the leading edge of paper that is susceptible to curling. Select a stronger level in VacuumStrngth in the Control Panel menu to increase suction against the paper, or specify a leading margin of 20 mm (0.79 in) or more. (See "Adjusting the Vacuum Strength (VacuumStrngth).") - User's Guide
Printed colors may be uneven if you set the Print Quality too low.	Choose a higher level of Print Quality in the Advanced Settings of the printer driver. Printing in Fast or Standard mode is faster and consumes less ink than in Highest or High modes, but the printing quality is lower. (See "Giving Priority to Particular Graphic Elements and Colors for Printing.") — User's Guide
Color may be uneven between dark and light image areas.	Select Unidirectional Printing in the Advanced Settings of the printer driver.
When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be slightly uneven at the leading edges.	Specify No in Auto Cut in the printer driver before printing. In this case, the paper can be printed without borders on the left and right sides only. Cut the printed document ejected from the printer, and then use scissors or a cutting tool to cut away the edges on the top and bottom.
	Choose a higher level of Print Quality in the Advanced Settings of the printer driver. (See "Giving Priority to Particular Graphic Elements and Colors for Printing.") — User's Guide
The Printhead is out of alignment.	Adjust the Printhead alignment. (See "Automatic Adjustment to Straighten Lines and Colors (Head Posi. Adj.).") →P.77
Allowing printed documents to dry on top of each other may cause uneven colors.	To avoid uneven colors, we recommend drying each sheet separately.

Cause	Corrective Action
Density may be uneven if you use Glossy Paper or Coated Paper.	In Advanced Settings of the printer driver, choose Highest or High in Print Quality.
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") \rightarrow P.12 (See "Loading Sheets in the Printer.") \rightarrow P.18
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
	1. Press the Stop button and stop printing.
	2. Change the type of paper in the printer driver and try printing again.
Scan Wait Time > Area in the Control Panel menu is set to Leading edge.	When Scan Wait Time > Area is set to Leading edge, colors may be uneven 110–140 mm from the leading edge. (The position varies depending on the Print Quality setting.) In this case, select Scan Wait Time > Area > Entire area. However, note that printing will now take longer. (See "Menu Settings.") →User's Guide

Image edges are blurred or white banding occurs

Cause	Corrective Action	
The Platen suction is too strong.	In the Control Panel menu, set VacuumStrngth to Weakest. (See "Adjusting the Vacuum Strength.") →User's Guide	
The Printhead is set too high in the Control Panel menu.	In the Control Panel menu, set Head Height to Lowest . (See "Adjusting the Printhead Height.") →User's Guide	
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") \rightarrow P.12 (See "Loading Sheets in the Printer.") \rightarrow P.18	
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.	
	 Press the Stop button and stop printing. Change the type of paper in the printer driver and try printing again. 	

The contrast becomes uneven during printing

Cause	Corrective Action
The paper feed amount is out of adjustment.	Adjust the feed amount. (See "Adjusting the Feed Amount.") →User's Guide
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") \rightarrow P.12 (See "Loading Sheets in the Printer.") \rightarrow P.18
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
	1. Press the Stop button and stop printing.
	2. Change the type of paper in the printer driver and try printing again.

The length of printed images is inaccurate in the feeding direction

Cause	Corrective Action
In the Control Panel menu, Adj. Priority is set to Print Quality .	Set Adj. Priority to Print Length in the Control Panel menu, and then execute Adjust Length. (See "Adjusting the Feed Amount.") User's Guide
The type of paper specified in the printer driv- er does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") →P.12 (See "Loading Sheets in the Printer.") →P.18

Cause	Corrective Action
The type of paper specified in the printer driv- er does not match the type loaded in the printer.	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
F	1. Press the Stop button and stop printing.
	2. Change the type of paper in the printer driver and try printing again.

Images are printed	crooked

Cause	Corrective Action
In the Control Panel menu, Skew Check Lv. is set to Loose or Off.	In the Control Panel menu, set Skew Check Lv. to Standard.
In the Control Panel menu, Width Detection is set to Off.	Set Width Detection to On in the Control Panel menu.

Documents are printed in monochrome

Cause	Corrective Action
In the Advanced Settings of the printer driver, Mon- ochrome, Monochrome (BK ink), or Monochrome Bitmap is specified in Color Mode.	In the Advanced Settings of the printer driver, specify Color in Color Mode and try printing again.
The Printhead nozzles are clogged.	Print a test pattern to check the color ink nozzles and see if they are clogged. (See "Checking for Nozzle Clogging.") -User's Guide

Line thickness is not uniform

Corrective Action
 Access the printer driver Properties dialog box from Print in the File menu of the source application, and follow these steps to print. Clear the option Open Preview When Print Job Starts on the Main sheet. Clear the option Page Layout on the Layout sheet. Click the Special Settings button in the Layout sheet to open the Special Settings dialog box, and remove the check from Fast Graphic Process.
Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") \rightarrow P.12 (See "Loading Sheets in the Printer.") \rightarrow P.18
 Make sure the same type of paper is specified in the printer driver as you have loaded in the printer. 1. Press the Stop button and stop printing. 2. Change the type of paper in the printer driver and try printing again.

Lines are misaligned

Cause	Corrective Action
The Printhead alignment is not adjus- ted.	Adjust the Printhead alignment. (See "Automatic Adjustment to Straighten Lines and Colors (Head Posi. Adj.).") →P.77 (See "Adjusting the Printhead Alignment Manually.") →User's Guide (See "Adjusting the Printhead Orientation.") →User's Guide
The type of paper specified in the print- er driver does not match the type loa- ded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") \rightarrow P.12 (See "Loading Sheets in the Printer.") \rightarrow P.18
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
	1. Press the Stop button and stop printing.
	2. Change the type of paper in the printer driver and try printing again.

Cannot print over a network

Cannot connect the printer to the network	100
Cannot print over a TCP/IP network	100
Cannot print over a NetWare network	100
Cannot print over AppleTalk or Bonjour networks	101

Cannot connect the printer to the network

Cause	Corrective Action
not connected cor- rectly to the printer's	 Make sure the printer is connected to the network with the correct Ethernet cable, and then turn the printer on. For instructions on connecting the cable, refer to the Setup Guide. Make sure the Link indicator is lit. The bottom indicator is green if the printer is connected via 1000Base-T, while the top indicator is orange if connected via 100Base-TX and the top indicator is green if connected via 10Base-T. If the Link indicator is not lit, check the following points. Make sure the hub is on. Make sure the end of the Ethernet cable is connected correctly. Insert the Ethernet cable until it clicks and locks in place. Make sure there is no problem with the Ethernet cable. If there is any problem, replace the Ethernet cable. Check the communication mode with the hub. Although the printer normally detects the hub settings cannot be detected. In this case, configure the connection method manually, specifying the communication mode in use. (See "Configuring the Communication Mode Manually.") -User's Guide

Cannot print over a TCP/IP network

Cause	Corrective Action
The printer's IP address is not config- ured correctly.	Make sure the printer's IP address is configured correctly. (See "Configuring the IP Address Using imagePROGRAF Device Setup Utility.") →User's Guide (See "Configuring the IP Address Using the Printer Control Panel.") →User's Guide
The printer's TCP/IP network settings are not configured correctly.	Make sure the printer's TCP/IP network settings are configured correctly. (See "Configuring the Printer's TCP/IP Network Settings.") —User's Guide
The computer you are trying to print from is not configured correctly.	Make sure the computer's TCP/IP network settings are configured correctly. (See "Configuring the Printer Driver Destination (Windows).") →User's Guide (See "Configuring the Destination for TCP/IP Network (Macintosh).") →User's Guide

Cannot print over a NetWare network

Cause	Corrective Action
The printer's NetWare set- tings are not configured cor- rectly.	Make sure the printer's NetWare settings are configured correctly. In particular, make sure a valid frame type is selected. (See "Configuring the Printer's NetWare Network Settings.") →User's Guide
The computer you are trying to print from is not config- ured correctly.	Make sure the computer's NetWare settings are configured correctly. (See "Configuring NetWare Network Settings.") →User's Guide
The NetWare server and services are not configured correctly.	 Check the following points. Make sure the NetWare file server is running. Make sure there is enough free disk space on the NetWare file server. Insufficient disk space may prevent you from processing large print jobs.
	3. Start NWADMIN or PCONSOLE and confirm that the print service is configured correctly and the print queue is available.

Cause	Corrective Action
The NetWare server and services are not configured	 If data transmission to a printer on another subnet fails, deactivate NCP burst mode in that printer's net- work protocol settings.
correctly.	5. If the printer is used in queue server mode, specify Other/Unknown as the printer type.

Cannot print over AppleTalk or Bonjour networks

Cause	Corrective Action
The AppleTalk protocol is not en- abled on the printer.	Activate AppleTalk on the printer. (See "Configuring the Printer's AppleTalk Network Settings.") →User's Guide
The computer you are trying to print from is not configured correctly.	Make sure the computer's AppleTalk settings are configured correctly. (See "Configuring the Destination for AppleTalk Network (Macintosh).") →User's Guide (See "Configuring the Destination for Bonjour Network (Macintosh).") →User's Guide
The computer and printer are not on the same network.	Due to the nature of Bonjour, you cannot print if the printer is on another network behind a router. Make sure the computer and printer are on the same network. For information about network settings, ask your network administrator.

Installation problems

The computer does not recognize the printer	102
Removing Installed Printer Drivers	102

The computer does not recognize the printer

Cause	Corrective Action
In the Control Panel menu, Use USB or Use Ethernet is set to Off.	Set Use USB or Use Ethernet to On.
	(See "Menu Settings.") →User's Guide

Removing Installed Printer Drivers

Follow these steps to remove installed printer drivers and utilities.

Removing printer drivers (Windows)

Remove the printer driver as follows.



1

2

• The following instructions are for Windows XP. The method of removing printer drivers varies depending on the version of Windows.

From the Windows start menu, select Programs > Canon Printer Uninstaller > imagePROGRAF Printer Driver Uninstaller to display the Delete Printer window.



Installation problems

Select the printer in the list and click **Delete**.



Click **Yes** after the **Warning** message is displayed.

4 Make sure that the printer has been removed from the list, and then click **Exit**.

Removing printer drivers and imagePROGRAF Printmonitor (Macintosh)

Remove the printer driver or imagePROGRAF Printmonitor as follows.

- Insert the User Software CD-ROM provided with the printer in the CD-ROM drive.
- 2 Start the printer driver installer included in the User Software CD-ROM. Open the **OS X** folder and double-click **iPF Driver Installer X**.
- 3 In the upper left menu, choose **Uninstall**, and then click **Uninstall**.
- Follow the instructions on the screen to remove the printer driver or imagePROGRAF Printmonitor.

Removing imagePROGRAF Status Monitor (Windows)

Remove imagePROGRAF Status Monitor as follows.



The following instructions are for Windows XP. The method of removing printer drivers varies depending on the version
of Windows.



Select Control Panel from the start menu.



Select Add or Remove Programs.

Select imagePROGRAF Status Monitor, and then click the Change/Remove button.

Removing imagePROGRAF Device Setup Utility (Windows)

Remove imagePROGRAF Device Setup Utility as follows.



 The following instructions are for Windows XP. The method of removing printer drivers varies depending on the version of Windows.



From the Windows start menu, select **Programs > imagePROGRAF Device Setup Utility > Uninstaller** (imagePROGRAF Device Setup Utility) to start the wizard.



3

In the wizard window, click **Delete**, and then click **Next**.

Follow the instructions on the screen to remove imagePROGRAF Device Setup Utility.

HP-GL/2 problems

With HP-GL/2, printing is misaligned Lines or images are missing in printed HP-GL/2 jobs.	104
Lines are printed too thick or thin in HP-GL/2 print jobs	104
HP-GL/2 jobs are printed in monochrome (or color)	104
Printed colors of lines are inaccurate during HP-GL/2 printing	104
HP-GL/2 jobs are printed 6 mm larger than specified	
HP-GL/2 jobs are printed at maximum size, even if a standard size is specified	
HP-GL/2 printing takes a long time	105
The printer stops when printing a HP-GL/2 job (the carriage stops moving)	

With HP-GL/2, printing is misaligned

Cause	Corrective Action
The plotter origin is incorrect.	Check the printing commands.
The Margin setting in the Control Panel menu is incorrect.	Adjust the Margin setting values in the Control Panel menu.

Lines or images are missing in printed HP-GL/2 jobs.

Cause	Corrective Action
The memory is full.	Check the size of the data in the print job.
An HP-GL/2 command not supported by this printer was received.	Check the print job and settings.
The printer has received print data that includes HP RTL commands when Auto Rotate is On in the Control Panel menu.	In the Control Panel, set Auto Rotate to Off and print again. (See "Menu Settings.") → User's Guide

Lines are printed too thick or thin in HP-GL/2 print jobs

Cause	Corrective Action	
The Width setting in the Control Panel menu is incorrect.	Check the Width setting value specified for Pen no. in Palette A or Palette B in the Control Panel menu. If fine lines are printed faintly, setting ThickenFineLines to On will print the lines more distinctly. (See "Menu Settings.") → User's Guide	

HP-GL/2 jobs are printed in monochrome (or color)

Cause	Corrective Action
The Color Mode setting in the Control Panel menu is incorrect.	Check the Color Mode setting in the Control Panel menu. (See "Menu Settings.") User's Guide However, for optimal Printhead performance, the printer consumes trace amounts of color ink even when Monochrome is selected as Color Mode .

Printed colors of lines are inaccurate during HP-GL/2 printing

Cause	Corrective Action	
AdjustFaintLines is On in the Con- trol Panel menu.	Setting AdjustFaintLines to Off in the Control Panel menu may help produce the expected results. However, lines in some colors may appear broken.	

HP-GL/2 jobs are printed 6 mm larger than specified

Cause	Corrective Action
The page size of the HP-GL/2 print job, as created in the source application, is incorrect.	In the Control Panel menu, set PageSizeProcess1 to On . (See "Menu Settings.") → User's Guide

HP-GL/2 jobs are printed at maximum size, even if a standard size is specified

Cause	Corrective Action
The page size of the HP-GL/2 print job, as created in the source application, is incorrect.	In the Control Panel menu, set PageSizeProcess2 or Conserve Paper to On . The layout will be changed to the optimal layout. (See "Menu Settings.") (→User's Guide)

HP-GL/2 printing takes a long time

Cause	Corrective Action	
Large print jobs with a lot of data take longer to print.	Please wait a while until printing is finished.	
A job was printed when Input Resolution in the Control Panel menu was set to 600dpi .	In the Control Panel menu, set Input Resolution to 300dpi and print again. (See "Menu Settings.") →User's Guide	

The printer stops when printing a HP-GL/2 job (the carriage stops moving)

Cause	Corrective Action
The printer is analyzing the print job.	Please wait a while until printing is finished.
A job was printed when Input Resolution in the Control Panel menu was set to 600dpi .	In the Control Panel menu, set Input Resolution to 300dpi and print again. (See "Menu Settings.") →User's Guide

Other problems

The printer does not go on	106
The printer takes time to start up	
If the Printer Makes a Strange Sound	
Messages advising to check the maintenance cartridge are not cleared	
The printer consumes a lot of ink	107
Ink Level Detection	107

The printer does not go on

Cause	Corrective Action
The printer is unplugged.	Plug the power cord into the outlet, and then turn on the printer.
The specified voltage is not supplied.	Check the voltage of the outlet and breaker. (See "Specifications.") →User's Guide

The printer takes time to start up

Cause	Corrective Action
The printer may have shut down incorrectly last time. This may happen after power outages or if the printer is unplugged before it is turned off. In this case, the next time power is restored, the printer's hard disk is checked, and startup may take some time.	Please wait a while, because it may take several minutes to finish checking the hard disk. If an error message is displayed after the hard disk check, fol- low the instructions indicated to resolve the problem.

If the Printer Makes a Strange Sound

Cause	Corrective Action
The printer	The following sounds do not indicate a problem with the printer.
makes a sound during opera- tion.	 There is a sound of suction from the Platen To prevent paper from rising, paper is held against the Platen by suction from Vacuum holes under it.
	 There is a sound when a different size of paper is used and when the Carriage goes from side to side When paper of a different size is used, a valve is automatically activated to switch the area for paper suction, which may make a sound. This mechanism prevents suction from Vacuum holes where there is no paper. In addition, ink is ejected in sync with the movement of the Carriage back and forth to ensure optimal ink flow. At this time, the valve automatically switches the area for paper suction, which may make a sound.
	 Roll paper makes a fluttering sound during printing There may be a fluttering sound when large paper is advanced.
	 If you suddenly hear the tone for cleaning operations At regular intervals, for printer maintenance, cleaning operations will begin automatically, even if the printer is in Sleep mode.
	 If you suddenly hear the tone for ink agitation At regular intervals, to ensure optimal printing quality, the ink is agitated automatically, even if the printer is in Sleep mode. Ink agitation takes about 30 seconds. The ink is also agitated automatically under the following conditions. Note that other operations are not possible while "Agitating" is displayed on the control panel.
	 After the printer is turned on. (The time for agitation varies depending on how long the printer was off—between about 30 seconds and two minutes.)
	 After data transmission. (After about a minute and a half, printing operations begin. However, printing may start later after data reception, depending on the size of print data.)
	After ink tank replacement. (Ink agitation takes about three and a half minutes.)
	In other cases, contact your Canon dealer.

Troubleshooting

Other problems

Messages advising to check the maintenance cartridge are not cleared

Cause Corrective Action		Corrective Action
	The printer has not detected the new Maintenance Cartridge that	Remove the new Maintenance Cartridge you have just installed and
	was used to replace the old one.	insert it again firmly.

The printer consumes a lot of ink

Cause	Corrective Action	
Many full-page color images are printed.	In print jobs such as photos, images are filled with color. This consumes a lot of ink. This does not indicate a problem with the printer.	
Head Cleaning B in the Control Panel menu is executed fre- quently.	Head Cleaning B in the Control Panel menu consumes a lot of ink. This does not indicate a problem with the printer. Unless the printer has been moved or stored for a long period or you are troubleshooting Printhead problems, we recommend not performing Head Cleaning B, to the extent possible.	
You have just finished initial in- stallation, when more ink is con- sumed to fill the system.	After initial installation or at the first-time use after transfer, ink flows into the system between the Ink Tank and Printhead, which may cause the ink level indicators to drop to 80%. This does not indicate a problem with the printer.	
The Printhead nozzles are clog- ged.	Check for nozzle clogging. (See "Checking for Nozzle Clogging.") →User's Guide	

Ink Level Detection

Ink level detection will be deactivated if you load ink tanks once emptied.

Ink level detection

Ink tanks specified for this printer feature an ink level detection function to prevent the ink from running out during printing, which prevents printer damage. (See "Ink Tanks.") \rightarrow P.22

This function will not work correctly if you use refill ink tanks. As a result, printing stops. Thus, before using refill ink tanks, you must cancel the ink level detection.

Printing with the ink level detection canceled may lead to printer damage and printing problems. Canon Inc. is not liable for any damage that may occur as a result of refilling ink.



• After ink level detection has been released, this function cannot be reactivated for currently loaded lnk Tank. To use ink level detection again, replace the lnk Tank with new ones specified for use with the printer.

• Repeatedly removing and inserting an Ink Tank may damage the connection between the Ink Tank and the printer, which may cause ink leakage from the Ink Tank and damage the printer.

Releasing ink level detection

On the Display Screen, a message indicates that the ink level cannot be detected. After checking the message, press the button.

Remaining level of the ink cannot be correctly detected. Check ink tank.


2	Press ▲ or ▼ to select Information , and then press the OK button.	 Please Check Check Information
3	A confirmation message is shown on the Display Screen about releasing ink level detection. After checking the message, press the ▶ button.	Tank once emptied is used. Printing stopped due to ink level unknown.
4	After checking the message, press the ▶ button.	To continue, you must release ink level detection.
5	Press ▲ or ▼ to select Yes , and then press the OK button.	 Release? No Yes



Release ink level detection after confirming that ink is in ink tank.	•
--	---

Troubleshooting

Other problems

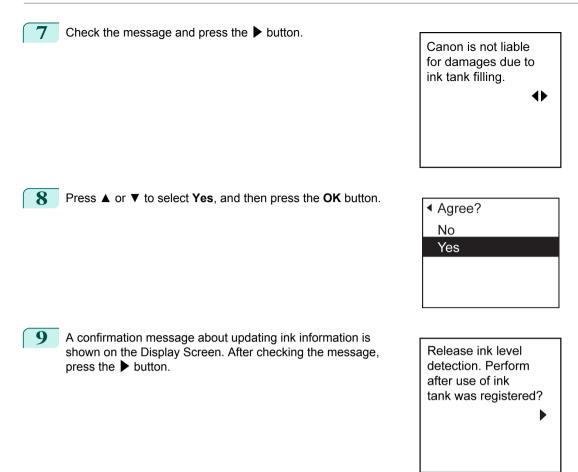

10 Press ▲ or ▼ to select Yes, and then press the OK button.

Ink level detection is now released.

▲ Agree?	
No	
Yes	

Error Message

Messages regarding paper

MediaType Mismatch	110
The paper is too small.	110
The paper is too small.	111
PaprWidth Mismatch	112
Paper size not detected.	112
Insufficient paper for job	113
This paper cannot be used.	113
Roll printing is selected.	113
Roll printing is selected, but sheets are loaded.	114
The roll is empty.	114
Sheet printing is selected.	114
Regular printing is selected, but a roll is loaded.	115
Paper jam	115
Paper is crooked.	115
Paper not aligned with right guide.	116
Cannot detect papr	116
Paper cutting failed.	
End of paper feed.	117
Rel lever is in wrong position.	
Borderless printng not possible.	117
Paper position not suitable for borderless printing.	118
Roll paper is not securely in contact with roll holder	118

MediaType Mismatch

Cause	Corrective Action
When Detect Mismatch in the Control Panel menu is set to Pause , the type of paper loa- ded does not match the type specified in the printer driver.	Follow these steps to ensure the paper type matches on the printer and in the printer driver.
	1. Press \blacktriangle or \blacktriangledown to select Stop Printing , and then press the OK button.
	2. Either change the type of paper specified in the printer driver settings or replace the loaded paper and change the paper type setting on the printer. (See "unknown.") →User's Guide (See "unknown.") →User's Guide
You tried to print a test pattern for printer ad- justment on several sheets, but sheets of dif-	When printing a test pattern for adjustment, use sheets of the same type of paper, in the required quantity. Replace the paper as follows and perform adjustment again.
ferent types of paper were used.	1. Press \blacktriangle or \blacktriangledown to select Stop Printing, and then press the OK button.
	2. Replace the paper. (See "unknown.") →User's Guide
	3. Execute adjustment again from the control panel menu.
	Press \blacktriangle or \blacksquare to select Print , and then press the OK button to resume printing. However, note that this error may cause paper jams and affect the printing quality.
When Detect Mismatch in the Control Panel menu is set to Warning , the type of paper loa- ded does not match the type specified in the printer driver.	You can continue to print, but note that this error may cause problems in the printing re- sults.

The paper is too small.

Error Message

Messages regarding paper

 Cause
 Corrective Action

 When Detect Mismatch in the Control Panel menu is set to Pause or Hold Job, paper smaller than the size specified in the printer driver is loaded.
 Press ▲ or ▼ to select Print, and then press the OK button to resume printing.

Cause	Corrective Action
	However, note that this error may cause paper jams and affect the printing quali- ty.
specified in the printer driver is loaded.	Adjust the paper size setting in the printer driver to match the size loaded in the printer as follows.
	1. Press ▲ or ▼ to select Stop Printing, and then press the OK button.
	2. Change the paper size setting in the printer driver to the size loaded in the printer and try printing again.
	Replace the loaded paper with paper of a size that matches the size setting in the printer driver as follows.
	1. Press ▲ or ▼ to select Change Paper, and then press the OK button to stop printing.
	2. Replace the loaded paper to match the paper width setting in the printer driver and try printing again.
When Detect Mismatch in the Control Panel menu is set to Warning , paper smaller than the size specified in the printer driver is loaded.	You can continue to print, but note that this error may cause problems in the printing results.

The paper is too small.

"Replace paper with A4/LTR (vertical) or larger"

Cause	Corrective Action
The loaded paper is too small.	Replace the paper with paper of A4/Letter (vertical) size or larger as follows.
	1. Press ▲ or ▼ to select Change Paper, press the OK button, and remove the paper. (See "Removing Sheets.") →P.20
 Switch to paper A4/Letter (vertical) or larger. (See "unknown.") →User's Guide The printer will resume printing. 	
	Press ▲ or ▼ to select Stop Printing, and then press the OK button.

"Replace roll with 10 in. wide or larger roll."

Cause	Corrective Action
The loaded paper is too small.	 Replace the roll with a roll 10 inches in width or larger as follows. Press ▲ or ▼ to select Change Paper, and then press the OK button.
	(See "Removing the Roll from the Printer.") →P.15 (See "Removing the Roll Holder from Rolls.") →User's Guide
	 Replace the roll with a roll 10 inches wide or larger. (See "Attaching the Roll Holder to Rolls.") →P.9 (See "Loading Rolls in the Printer.") →P.12 The printer will resume printing.
	Press \blacktriangle or \blacktriangledown to select Stop Printing , and then press the OK button.


"Remove paper and check pap. size"

Cause	Corrective Action
A sheet has come out of the printer during printing.	1. Press the Release Lever back and remove the paper.
	2. Reload the sheet, aligning it with the guide on the right.
	3. Pull the Release Lever forward.
	4. If "Not finished printing. Finish printing remaining jobs? " is shown on the Display Screen, press the OK button. Printing will resume, starting from the page on which the error occurred.
	(See "Loading Sheets in the Printer.") $(\rightarrow P.18)$

PaprWidth Mismatch

	-	-
	Cause	Corrective Action
	When Detect Mismatch in the Control Panel menu is set to Pause or Warning , the width of the loaded roll does not match the width specified in Fit Roll Paper Width in the printer driver.	Press \blacktriangle or \blacktriangledown to select Print , and then press the OK button to resume printing. However, note that this error may cause paper jams and affect the printing quality.
		Press \blacktriangle or \blacktriangledown to select Stop Printing, and then press the OK button.
		Follow these steps to replace the roll to match the width specified in the printer driver.
		 Press ▲ or ▼ to select Change Paper, and then press the OK button. (See "Removing the Roll from the Printer.") →P.15 (See "Removing Rolls From the Roll Holder.") →User's Guide
		 Replace the paper with paper compatible for borderless printing. (See "Attaching the Roll Holder to Rolls.") →P.9 (See "Loading Rolls in the Printer.") →P.12 The printer now starts printing the print job.
		Make sure the roll width selected in the dialog box displayed when you select Fit Roll Paper Width in the printer driver matches the width of the roll loaded in the printer, and then try printing again.

Paper size not detected.

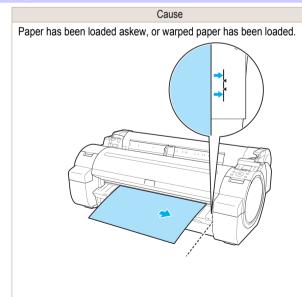

Corrective Action


Follow these steps to reload the roll.

- 1. Push the Release Lever back.
- Adjust the right edge of the roll to make it parallel to the orange Paper Alignment Line.
- 3. Pull the Release Lever forward.
- 4. If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button. Printing will resume, starting from the page on which the error occurred.

(See "Loading Rolls in the Printer.") \rightarrow P.12)

Follow these step to reload a sheet.

1. Push the Release Lever back.

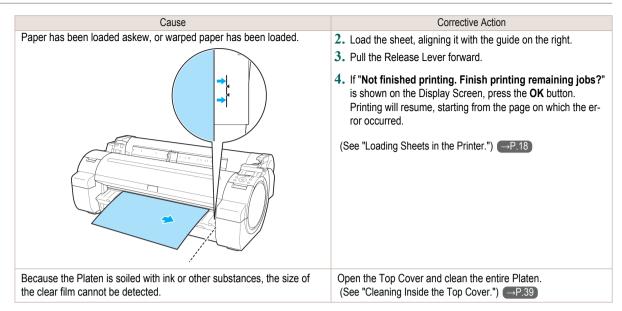

Insufficient paper for job

Cause	Corrective Action
The printer has received a print job longer than the amount of roll paper left when ManageRemainRoll in the Control Panel menu is On .	Press \blacktriangle or \lor to select Print , and then press the OK button to resume printing. However, the roll paper may run out during the print job and you may not be able to print all of the document.
	Press ▲ or ▼ to select Change Paper , and then press the OK button to stop printing. Either change the printer driver Paper Source setting or the GL2 Settings > Paper Source setting in the printer menu or replace the roll with a roll that has enough paper for the print job, and then try printing again. (See "Removing the Roll from the Printer.") →P.15 (See "Loading Rolls in the Printer.") →P.12

This paper cannot be used.

Cause	Corrective Action
Paper smaller than the printer's minimum supported size has been loaded.	Push the Release Lever back and load paper of the correct size. (See "Paper Sizes.") →User's Guide
Paper has been loaded that is too small to print the test pattern for printhead adjustment or nozzle checking.	Push the Release Lever back and load unused paper of A4 size or larger. More than one sheet may be required depending on the adjustment.

Roll printing is selected.

Cause	Corrective Action
You have attempted to print a test print sheet or other printer status information on a roll, but no roll is loaded.	Press ▲ or ▼ to select Load Roll Paper , and then press the OK button. Load the roll, and then print. (See "Attaching the Roll Holder to Rolls.") →P.9 (See "Loading Rolls in the Printer.") →P.12
	To print on sheets, follow these steps.

Cause	Corrective Action
You have attempted to print a test print sheet or other printer status information on a roll, but no roll is loaded.	 Press ▲ or ▼ to select Stop Printing, and then press the OK button to stop printing. Load a sheet and try printing again.
	(See "Loading and Printing on Sheets.") →User's Guide

Roll pri	nting is selected, but sh	eets are loaded.
	Cause	Corrective Action
A print jo is loaded	b for rolls was received when a sheet	 Follow these steps to load and print on a roll. 1. Press ▲ or ▼ to select Eject Cut Sheet, press the OK button, and remove the sheet. (See "Removing Sheets.") →P.20 2. Load a new roll. (See "Loading Rolls in the Printer.") →P.12 The printer now starts printing the print job.
		Press ▲ or ▼ to select Stop Printing, and then press the OK button.

The r	oll ie	omn	tv
Ther	011 15	emp	ιy.

Cause	Corrective Action
The roll is empty.	Follow these steps to replace the used roll with a new roll of the same type and size.
	 Press the Release Lever back and remove the roll. (See "Removing the Roll from the Printer.") →P.15 (See "Removing the Roll Holder from Rolls.") →User's Guide
	2. Load the new roll. (See "Attaching the Roll Holder to Rolls.") →P.9 (See "Loading Rolls in the Printer.") →P.12
	3. If no barcode was printed on the roll, specify the type of paper. (See "Changing the Type of Paper.") →User's Guide
	 When you have selected ManageRemainRoll > On in the control panel menu and a barcode is not printed on the roll, also specify the paper length. (See "Specifying the Paper Length.") →User's Guide
	 5. If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button. Printing will resume, starting from the page on which the error occurred. If no message appears, printing will continue from the next page.
There is remaining roll paper, but be- cause it could not be advanced, it could not be detec- ted.	The unused portion of the roll is heavy, and this is placing a burden on the printer. It may be helpful to change the printing mode, which will change the paper feed timing. Choose a higher level of Print Quality in the Advanced Settings of the printer driver. (See "Giving Priority to Particular Graphic Elements and Colors for Printing.") → User's Guide

Sheet printing is selected.

Cause	Corrective Action
You have attempted to print a test print sheet or other printer status information on a sheet, but no sheet is loaded.	Press ▲ or ▼ to select Load Cut Sheet, and then press the OK button. Load the sheet, and then print. (See "Loading and Printing on Sheets.") →User's Guide
	To print on rolls, follow these steps.
	 Press ▲ or ▼ to select Stop Printing, and then press the OK button to stop printing. Load a roll and try printing again.

Cause	Corrective Action
You have attempted to print a test print sheet or other printer status information on a sheet, but no sheet is loaded.	(See "Loading and Printing on Rolls.") →User's Guide

Regular printing is selected, but a roll is loaded.

Cause	Corrective Action
A print job for printing on sheets was sent when a roll is loaded.	 Press ▲ or ▼ to select Remove Roll Paper, and then press the OK button to stop printing. After removing the roll, load and print on a sheet of the type and size of paper you have specified in the printer driver. (See "Removing the Roll from the Printer.") →P.15 (See "Loading and Printing on Sheets.") →User's Guide

Paper jam

"Push the release lever back."

Cause	Corrective Action
A paper jam occur- red in the printer during printing.	 Push the Release Lever back and remove the jammed paper. (See "Clearing Jammed Roll Paper.") →P.84 (See "Clearing a Jammed Sheet.") →P.87
	2. Load the paper.
	3. Pull the Release Lever forward.
	 If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button.
	Printing will resume, starting from the page on which the error occurred.
	(See "Loading Rolls in the Printer.") \rightarrow P.12 (See "Loading Sheets in the Printer.") \rightarrow P.18


"Manually rewind the roll all the way and press OK."

Cause	Corrective Action
A paper jam occurred when advancing the paper.	 Rewind paper on the Roll Holder manually, all the way, and then press the OK button. Load the paper. If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button. Printing will resume, starting from the page on which the error occurred. (See "Loading Rolls in the Printer.") -P.12

Paper is crooked.

Cause	Corrective Action
Paper loaded crooked was detected when the paper was advanced.	Follow these steps to reload the roll.
	1. Push the Release Lever back.
	 Adjust the right edge of the roll to make it parallel to the orange Paper Alignment Line.
	3. Pull the Release Lever forward.
	(See "Loading Rolls in the Printer.") →P.12

Important

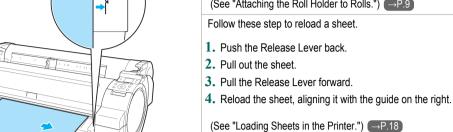

• To disable this message (if it is displayed repeatedly despite reloading paper, for example), choose **Off** or **Loose** in the **Skew Check Lv.** setting of the printer menu. However, this may cause jams and printing problems because paper may be askew when printed. Also, the Platen may become soiled, which may soil the back of the next document when it is printed.

Paper not aligned with right guide.

Cause

Cause	Corrective Action
When paper was loaded, it was not aligned with the guide on the right side.	Follow these step to reload a sheet.
	 Push the Release Lever back. Pull out the sheet. Pull the Release Lever forward. Reload the sheet, aligning it with the guide on the right.

Cannot detect papr		
Cause	Corrective Action	
The paper has come out of the printer.	 Follow these step to reload a sheet. 1. Remove the paper and press the OK button. 2. Reload the sheet, aligning it with the guide on the right. (See "Loading Sheets in the Printer.") →P.18 	
	 Follow these step to reload a sheet. Push the Release Lever back and remove the paper. Pull the Release Lever forward. Reload the sheet, aligning it with the guide on the right. (See "Loading Sheets in the Printer.") -P.18 	

Paper cutting failed.

Cause	Corrective Action
There are sheets left on the Ejection Guide.	 Push the Release Lever back and remove the paper. Load the paper. Pull the Release Lever forward.
	 If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button. Printing will resume, starting from the page on which the error occurred.

Cause	Corrective Action
There are sheets left on the Ejection Guide.	(See "Loading Rolls in the Printer.") →P.12
There is a foreign object by the Output Tray, obstructing the Cutter Unit.	 Lift the Top Cover and remove the foreign object. If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button. Printing will resume, starting from the page on which the error occurred.
You are not using the printer under the recommended envi- ronmental conditions for the paper.	Use the printer only where the recommended environmental conditions for the paper are met. Note that various environmental conditions are recommended for various types of paper. For details on the recommended environmental conditions for paper, see Paper Reference Guide." (See Paper Reference Guide.)
You are using paper that is not compatible with automatic cutting.	 Specify Manual as the cutting method and use scissors or a cutting tool to cut the roll. (See "Specifying the Cutting Method for Rolls.") →User's Guide For information about paper that is compatible with automatic cutting, see the Paper Reference Guide. (See Paper Reference Guide.) Push the Release Lever back and remove the paper.
In other cases, the Cutter Unit may be damaged.	Contact your Canon dealer for assistance.

End of paper feed.

Cause	Corrective Action
You are pressing the \blacktriangle button on the Control Panel and trying to rewind the roll to the edge.	Release the ▲ button.

Rel lever is in wrong position.

Cause	Corrective Action
The Release Lever is pushed back.	Pull the Release Lever forward. Turn off the printer and wait a while before restoring power.

Borderless printng not possible.

Cause	Corrective Action
The print job received specifies a type or width of paper that is not compatible with borderless printing.	 Follow these steps to change the settings of the print job to enable borderless printing. 1. Press ▲ or ▼ to select Stop Printing, and then press the OK button.
	 Make sure the correct printer driver for the printer is selected and try printing again. For information on types of paper compatible with borderless printing, refer to the Paper Reference Guide. (See Paper Reference Guide.)
	Select None when you have set Detect Mismatch on the control panel to Warning . However, note that this error may cause paper jams and affect the printing quality.
	Press \blacktriangle or \blacksquare to select Print With Border , and then press the OK button to continue printing. The document will be printed with a border.
The loaded paper is a size not com- patible with borderless printing.	Press ▲ or ▼ to select Stop Printing , and then press the OK button.
	 Replace the paper with paper compatible for borderless printing as follows. 1. Press ▲ or ▼ to select Change Paper, and then press the OK button. (See "Removing the Roll from the Printer.") →P.15
	 (See "Removing the Roll Holder from Rolls.") →User's Guide 2. Replace the paper with paper compatible for borderless printing.
	(See "Attaching the Roll Holder to Rolls.") →P.9 (See "Loading Rolls in the Printer.") →P.12 The printer now starts printing the print job.

Cause	Corrective Action
The loaded paper is a size not com- patible with borderless printing.	For information on types of paper compatible with borderless printing, refer to the Paper Refer- ence Guide. (See Paper Reference Guide.)
	Press \blacktriangle or \blacksquare to select Print With Border , and then press the OK button to continue printing. The document will be printed with a border.

Paper position not suitable for borderless printing.

Cause	Corrective Action
Because paper expands or contracts de- pending on the environment of use, it may become narrower or wider than the sup- ported width for borderless printing.	Press ▲ or ▼ to select Stop Printing , and then press the OK button. Use each type of paper only where the recommended environmental conditions are met. For details on environmental conditions for various paper, see the Paper Reference Guide. (See Paper Reference Guide.)
	Select None when you have set Detect Mismatch in the Control Panel menu to Warning . However, note that this error may affect the printing quality.
The paper is loaded askew.	Press ▲ or ▼ to select Fix Paper Position and straighten the paper so that the edges are between the ink grooves for borderless printing. Insert the roll firmly until it touches the flange of the Roll Holder. (See "Attaching the Roll Holder to Rolls.") →P.9
	Select None when you have set Detect Mismatch in the Control Panel menu to Warning . However, note that this error may affect the printing quality.
	Press \blacktriangle or \checkmark to select Print With Border , and then press the OK button to continue printing. The document will be printed with a border.

Roll paper is not securely in contact with roll holder.


Cause	Corrective Action
When the roll was loaded, the roll was not inserted firmly all the way on the Roll Holder.	 Follow these steps to reload the roll. Press the OK button and remove the roll holder from the printer. Insert the roll firmly on the Roll Holder until it touches the flange. (See "Attaching the Roll Holder to Rolls.") -P.9 Load the Roll Holder in the printer.

iPF765

Messages regarding ink

Ink insufficient.	119
No ink left.	119
Remaining level of the ink cannot be correctly detected.	119
Unable to detect ink level correctly.	119
Close Ink Tank Cover	119
Ink tank is empty	120
Not much ink is left.	120
No ink tank loaded.	120
Wrong ink tank.	120
Do not pull out ink tank.	120
·	

Ink insufficient.

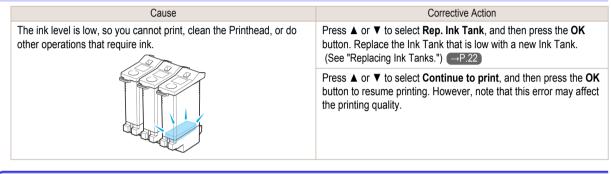

No ink left.

Cause	Corrective Action	
There is no ink left.	Open the Ink Tank Cover and replace the Ink Tank for which the Ink Lamp is flashing. (See "Replacing Ink Tanks.") \rightarrow P.22	


Remaining level of the ink cannot be correctly detected.

Cause	Corrective Action
Ink level detection cannot work correctly if you use refill ink tanks.	The refill ink tank can no longer be used. See the section Ink level detection and take the appropriate action. (See "Ink Level Detection.") \rightarrow P.107

Unable to detect ink level correctly.


Cause	Corrective Action
The remaining ink level could not be correctly detected.	Close the Ink Tank Cover. The buzzer will stop once the error is cleared.

Close Ink Tank Cover

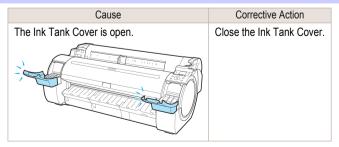

h	Ink tank is empty.		
	Cause	Corrective Action	
	There is no ink left in an ink tank.	Open the Ink Tank Cover and replace the Ink Tank for which the Ink Lamp is flashing. (See "Replacing Ink Tanks.") →P.22	

Not much ink is left.

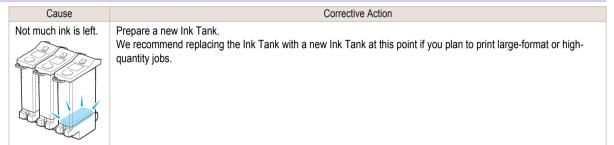

No ink tank loaded.

Cause	Corrective Action
There is no lnk Tank of the indicated color in the printer.	Load or reload the Ink Tank. (See "Replacing Ink Tanks.") →P.22
There is a problem with the Ink Tank.	Replace it with a new Ink Tank. (See "Replacing Ink Tanks.") →P.22

Wrong ink tank.

Cause	Corrective Action
The Ink Tank in the printer is incompatible.	Load an Ink Tank specified for use with the printer. (See "Replacing Ink Tanks.") \rightarrow P.22

Do not pull out ink tank.

Cause	Corrective Action
The remaining ink level could not be correctly d	tected. Install the Ink Tank that was removed. The buzzer will stop once the error is cleared.

Messages regarding printing or adjustment

Cannot adjust paper feed.	121
Check printed document	121

Cannot adjust paper feed. Cause Corrective Action The Printhead nozzles are clogged. Execute Adj. Quality again, as follows. 1. Press the **OK** button to clear the error. 2. Print a test pattern to check the nozzles. (See "Checking for Nozzle Clogging.") →User's Guide 3. Clean the Printhead if the nozzles are clogged. (See "Cleaning the Printhead.") \rightarrow P.41 4. Execute Adj. Quality again. (See "Automatic Banding Adjustment (Adj. Quality).") →User's Guide Highly transparent film is loaded that cannot be used Press the OK button to clear the error, and then adjust the feed amount manually. for automatic feed amount adjustment. (See "Manual Banding Adjustment (Adj. Quality).") →User's Guide

Check printed document.

Cause	Corrective Action
The Printhead nozzles are becoming clogged.	If printing is faint, clean the Printhead. (See "Cleaning the Printhead.") \rightarrow P.41

Messages regarding printheads

Cannot adjust printhead.	122
Wrong printhead.	122
Printhead error	
No printhead	122
Execute printhead cleaning.	

Cannot adjust printhead.

Cause	Corrective Action
The Printhead nozzles are clogged.	Execute Head Posi. Adj. again, as follows.
	1. Press the OK button to clear the error.
	2. Print a test pattern to check the nozzles. (See "Checking for Nozzle Clogging.") →User's Guide
	3. Clean the Printhead if the nozzles are clogged. (See "Cleaning the Printhead.") →P.41
	 4. Execute Head Posi. Adj. again. (See "Automatic Adjustment to Straighten Lines and Colors (Head Posi. Adj.).") →P.77
The Printhead cannot be aligned; highly transparent film is loaded.	Press the OK button to clear the error. We recommend using a type of paper that you often use, other than film, for Printhead adjustment. (See "Automatic Adjustment to Straighten Lines and Colors (Head Posi. Adj.).") \rightarrow P.77
The Printhead is installed crooked.	Straighten the Printhead as follows, and then execute Head Posi. Adj. again.
	1. Press the OK button to clear the error.
	 Use Head Inc. Adj. to adjust the angle of inclination of the Printhead. (See "Adjusting Line Misalignment (Head Inc. Adj.).") →User's Guide
	3. Execute Head Posi. Adj. again. (See "Automatic Adjustment to Straighten Lines and Colors (Head Posi. Adj.).") →P.77

Wrong printhead.		
Cause	Corrective Action	
An incompatible Printhead has been installed.	Open the Top Cover and replace the Printhead with a new one. (See "Replacing the Printhead.") \rightarrow P.27	

Printhead error

Cause	Corrective Action
There is a problem with the Printhead.	Open the Top Cover and replace the Printhead with a new one. (See "Replacing the Printhead.") \rightarrow P.27

No printhead

Cause	Corrective Action
No Printhead is installed.	Install the Printhead. (See "Replacing the Printhead.") \rightarrow P.27)

Execute printhead cleaning.		
Cause	Corrective Action	
The Printhead noz- zles are clogged.	 Follow these steps to clean the Printhead. 1. Stop printing by pressing ▲ or ▼ to select Stop Printing. 2. Clean the Printhead. 	

Cause	Corrective Action
The Printhead noz- zles are clogged.	(See "Cleaning the Printhead.") →P.41 If the message is still displayed when printing, replace the Printhead. (See "Replacing the Printhead.") →P.27
	Press \blacktriangle or \blacktriangledown to select Print , and then press the OK button to resume printing. However, note that this error may affect the printing quality.
	If OK is shown on the Display Screen, clean the Printhead.
	1. Press the OK button on the Control Panel to stop printing.
	 Clean the Printhead. (See "Cleaning the Printhead.") →P.41
	If the message is still displayed when printing, replace the Printhead. (See "Replacing the Printhead.")

Messages regarding the maintenance cartridge

Insert the maintenance cartridge.	124
Wrong maintenance cartridge.	
Maint. cart. The level is low	
No Maintenance Cartridge capacity.	
Maintenance cartridge full.	
Maintenance cartridge problem.	

Insert the maintenance cartridge.

Cause	Corrective Action
The Maintenance Cartridge is not installed.	Install the Maintenance Cartridge.
	(See "Replacing the Maintenance Cartridge.") \rightarrow P.34

Wrong maintenance cartridge.

Cause	Corrective Action	
A Maintenance Cartridge for a different model of printer is installed.	Replace it with the Maintenance Cartridge for your particular model.	

Maint. cart. The level is low

Cause	Corrective Action
The Maintenance Cartridge is al- most full.	You can continue to print, but prepare a new Maintenance Cartridge to use when the message for replacement is displayed.

No Maintenance Cartridge capacity.

	Cause	Corrective Action
	The Maintenance Cartridge cannot absorb enough ink for Printhead cleaning or other operation.	After confirming that the printer has stopped operating, replace the Maintenance Cartridge. (See "Replacing the Maintenance Cartridge.") →P.34

Maintenance cartridge full.			
	Cause	Corrective Action	
	The Maintenance Cartridge is full.	After confirming that the printer has stopped operating, replace the Maintenance Cartridge. (See "Replacing the Maintenance Cartridge.") \rightarrow P.34	

Maintenance cartridge problem.

[Cause	Corrective Action
	An incompatible or used Maintenance Cartridge has been installed.	Install an unused Maintenance Cartridge specified for use with the printer. (See "Replacing the Maintenance Cartridge.") \rightarrow P.34

Messages regarding the hard disk

Hard disk error.	125
File read error.	125
The mail box is full.	125
Mail box full. Now printing without saving data.	125
Mail box nearly full.	
Maximum jobs stored.	125
Too many jobs for mail box.	125

Hard disk error.

Cause	Corrective Action
The format of the printer's hard disk is invalid.	Press the OK button to start reformatting the hard disk. When formatting is finished, data on the printer hard disk is erased and the printer automatically restarts.

File read error.

Cause	Corrective Action
Files on the printer's hard disk have become cor- rupted.	Restart the printer. Only the corrupted files will be deleted, and the printer will restart.

The mail box is full.		
	Cause	Corrective Action
	There is no more space on the printer's hard disk.	Press the Stop button and stop printing.
disk.		Delete print jobs from the queue. (See "Managing the Job Queue (Deleting or Preempting Other Jobs).") →User's Guide
		Delete unneeded jobs stored in personal boxes. (See "Deleting Saved Jobs.") →User's Guide

Mail box full. Now printing without saving data.

Cause	Corrective Action
 No more space is available on the printer's hard disk, so jobs are now printed without saving them. (Print jobs can no longer be saved on the hard disk.)	After printing, this message is cleared.

Mail box nearly full.

Cause	Corrective Action
The free hard disk space left for Personal Boxes in the printer's hard disk does not have	Delete unneeded jobs stored in Personal Boxes.
more than 1 GB, combined.	(See "Deleting Saved Jobs.") →User's Guide

Maximum jobs stored.

Cause	Corrective Action
100 jobs are stored in the personal box.	Delete unneeded jobs stored in personal boxes. (See "Deleting Saved Jobs.") →User's Guide

Too many jobs for mail box.

Cause	Corrective Action	
Saved jobs exceed the personal box capacity.	Press \blacktriangle or \blacktriangledown to select Stop Printing , and then press the OK button.	
	Delete print jobs from the queue. (See "Managing the Job Queue (Deleting or Preempting Other Jobs).") →User's Guide	12
	Delete unneeded jobs stored in personal boxes (box numbers in the range 01–29). (See "Deleting Saved Jobs.") →User's Guide	

Messages regarding HP-GL/2

This type of paper is not compatible with HP-GL/2.	126
GL2: Wxxxx The memory is full. (xxxx is 0501, 0903, or 0904)	126
GL2: W0502 The parameter is out of range.	126
GL2: W0504 This command is not supported.	

This type of paper is not compatible with HP-GL/2.

Cause	Corrective Action
The printer has received a HP-GL/2 print job that cannot be printed on the paper that has been advanced.	 Follow these steps to replace the type of paper in the printer. 1. Press ▲ or ▼ to select Stop Printing, and then press the OK button. 2. Replace the paper with a type compatible with HP-GL/2. For details on paper compatible with HP-GL/2, refer to the Paper Reference Guide. (See "Types of Paper.") User's Guide
	Press \blacktriangle or \blacksquare to select Print , and then press the OK button to resume printing. However, note that this error may cause paper jams and affect the printing quality.

GL2: Wxxxx The memory is full. (xxxx is 0501, 0903, or 0904)

Cause	Corrective Action
The printer memory is full.	Because the entire print job could not be received, the printer may not be able to print the entire original. Check the printing results.
	In the Control Panel menu, setting On-the-Fly to On may enable printing. However, check the printing results because the image may be incomplete in some cases.

GL2: W0502 The parameter is out of range.

Cause	Corrective Action
A parameter specified in a HP-GL/2 command is out of the supported range.	Check the print job.
	If you have specified ProcessingOption > Warning > On in the Control Panel menu, set it to Off instead.

GL2: W0504 This command is not supported.

Cause	Corrective Action
	Check the print job.
	If you have specified ProcessingOption > Warning > On in the Control Panel menu, set it to Off instead.

Other Messages

GARO Wxxxx (x represents a number)	127
ERROR Exxx-xxxx (x represents a letter or number)	. 127
Hardware error. xxxxxxxxxxxx (x represents a letter or number)	. 127
Top cover is open.	. 127
Prepare for parts replacement.	
Parts replacement time has passed.	128
Unknown file.	128
Multi-sensor error	. 128
Error in cutter position.	. 128

GARO Wxxxx (x represents a number)

Cause	Corrective Action
There is a problem with the print job.	Try printing again, using the correct printer driver.
	It is also possible to continue printing in this state. However, you may not be able to obtain the desired printing results.

ERROR Exxx-xxxx (x represents a letter or number)

Cause	Corrective Action
An error requiring service may have occurred. ERROR Exxx-xxxx	Write down the error code and message, turn off the printer, and contact your Canon dealer for assistance.
Call for service.	
OK: Printer Info.	

Hardware error. xxxxxxxxxxx (x represents a letter or number)

Cause	Corrective Action
The last portion of roll paper was used during a print job. The paper w not advanced because the trailing edge is taped to the roll.	as Turn off the printer and remove the roll from the printer before restoring power.
Fastening tape or the Belt Stopper has not been removed inside the T Cover.	Turn off the printer, open the Top Cover and remove the tape or the Belt Stopper before restoring power.
An error requiring service may have occurred. Hardware error. xxxxxxxx-xxxx Turn off printer, wait, then turn on again. OK: Printer Info.	Turn off the printer and wait at least three seconds before re- storing the power. If the message is displayed again, write down the error code and message, turn off the printer, and contact your Canon dealer for assistance.

T	op cover is open.	
	Cause	Corrective Action
	The printer has detected that the Top Cover is	Open the Top Cover fully, remove any foreign objects, and close the Top Cover again.
	open.	If the error occurs again, close the Top Cover, turn off the printer, and wait a while before restoring power.

Prepare for parts replacement.		÷
	Cause	Corrective Action
	It is almost time to replace consumables for which service is required.	You can continue to use the printer for some time until "Parts replacement time has passed." will be displayed. Contact your Canon dealer for assistance.

Parts replacement time has passed.

Cause	Corrective Action	
It is past the recommended time to replace consumables for which service is required.	Contact your Canon dealer for assistance.	

Unknown file.

Cause	Corrective Action
Data sent to keep the printer up to date (such as paper information) is in the wrong format.	Check the data. Turn off the printer and wait a while before restoring power, and then resend the data.
You have uploaded firmware for a different model.	Check the firmware version. Turn off the printer and wait a while before restor- ing power, and then resend the firmware.
	If the message is displayed again, contact your Canon dealer for assistance.

Cause Corrective Action Direct sunlight or strong lighting may be shining on the printer and causing the sensor to malfunction. Take steps to ensure the printer is not used when exposed to direct sunlight or strong lighting. The performance of a sensor inside the printer may be impaired. Turn off the printer and wait at least three seconds before restoring the power. If the message is displayed again, contact your Canon dealer for assistance.

Error in cutter position.

Cause	Corrective Action
The Cutter Unit stops in the middle of cutting.	 Push the Release Lever back and remove the paper. Pull the Release Lever forward.

Error Messages

Borderless printng not possible.	117
Cannot adjust paper feed.	121
Cannot adjust printhead.	
Cannot detect papr	
Check printed document.	
Close Ink Tank Cover	
Do not pull out ink tank	120
End of paper feed.	117
ERROR Exxx-xxxx (x represents a letter or number)	
Error in cutter position.	128
Execute printhead cleaning	122
File read error	125
GARO Wxxxx (x represents a number)	127
GL2: W0502 The parameter is out of range.	
GL2: W0504 This command is not supported.	
GL2: Wxxxx The memory is full. (xxxx is 0501, 0903, or 0904)	126
Hard disk error.	125
Hardware error. xxxxxxxxxxxxx (x represents a letter or number)	
Ink insufficient.	119
Ink tank is empty.	
Insert the maintenance cartridge.	
Insufficient paper for job	
Mail box full. Now printing without saving data.	
Mail box nearly full.	
Maint. cart. The level is low	
Maintenance cartridge full.	
Maintenance cartridge problem.	
Maximum jobs stored.	
MediaType Mismatch	
Multi-sensor error	
No ink left	119
No ink tank loaded.	
No Maintenance Cartridge capacity.	
No printhead	
Not much ink is left.	
Paper cutting failed.	
Paper is crooked.	
Paper jam	115
Paper not aligned with right guide.	
Paper position not suitable for borderless printing Paper size not detected	
PaprWidth Mismatch	
Parts replacement time has passed.	
Prepare for parts replacement.	
Printhead error	
Regular printing is selected, but a roll is loaded.	115
Rel lever is in wrong position.	
Remaining level of the ink cannot be correctly detected.	
Roll paper is not securely in contact with roll holder.	
Roll printing is selected, but sheets are loaded.	
Roll printing is selected.	113
Sheet printing is selected.	114
The mail box is full	
	145

iPF765

The paper is too small. The paper is too small. The roll is empty. This paper cannot be used. This type of paper is not compatible with HP-GL/2. Too many jobs for mail box. Top cover is open.	114 113 126 125
Unable to detect ink level correctly Unknown file.	
Wrong ink tank. Wrong maintenance cartridge. Wrong printhead.	124

Index

Α

Adjust Length	79,	80
Adjust Printer		79

С

CAD	
Cleaning	. 3, 27, 39, 41, 57
Clearing a Jammed Sheet	87
Cutting Mode	44

D

Device Setup Ut	tility	103

Ε

Ejection Guide

F	
Feed Priority	79

G

GARO Wxxxx (x represents a r	number)127

Н

Hardware error	127
Head Cleaning	
Head Cleaning A	
Head Cleaning B	41
Holder Stopper	58, 62

Ι

If a message is displayed	5
Ink level	7
Ink level detection 107	7

L

Large-Format Printing	. 75

Μ

Maintenance Cartridge	. 3,	28,	34,	55,	124
Menu Operations					. 44
Menu Structure					48
Move Printer					60

Ν

Navigate	. 44
NetWare network	100

Ρ

Paper Feed Slot	, 82
Power 2, 43, 56, 62	, 64
Preparing to Transfer the Printer	. 60
Print Priority	. 79
Printer menu	. 45
Printhead 3, 27, 41, 56, 57, 58, 77, 94,	122

R

Removing printer drivers	102
Removing the Roll	15
Rep. Ink Tank	23
Replace P.head	
Replacing Ink Tanks	
Roll Holder	58, 62, 65
Rotate Page 90 degrees	73

S

Strange Sound	106
Support Information	6

W

iPF765 Basic Guide





Canon Inc. 30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

Canon U.S.A., Inc. One Canon Plaza, Lake Success, NY 11042 U.S.A

Canon Europe Ltd. 3 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET United Kingdom

Canon (China) Co., Ltd. 15F Jinbao Building No.89 Jinbao Street, Dongcheng District, Beijing 100005, China

Canon Australia Pty. Ltd. 1 Thomas Holt Drive, North Ryde, Sydney, N.S.W.2113, Australia