


Large Format Printer

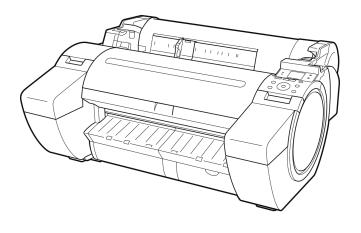

# **iPF680**

## User's Guide



Basic Printing Workflow	15
Enhanced Printing Options	31
Printing CAD Drawings	65 76 87 97
Windows Software	157
Printer Driver	190 201 224
Mac OS Software	275
Printer Driver	294 317
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633

Manuals for this printer

Setup Guide

Quick Guide

Basic Guide Electronic manual

User's Guide | Electronic manual

Paper Reference Guide Electronic manual

Basic Printing Workflow 15	5
Printing procedure  Printing Options Using Rolls and Sheets  Turning the Printer On and Off  Loading and Printing on Rolls  Loading and Printing on Sheets  Printing in Windows  Printing from Mac OS	6 7 9 1 3
Canceling print jobs       25         Canceling Print Jobs from the Control Panel       25         Canceling Print Jobs from Windows       26         Canceling Print Jobs from Mac OS       26         Pausing Printing       25         Pausing Printing       25	5 6 6
Enhanced Printing Options 31  Choosing Paper for Printing 32  Choosing a Paper for Printing 33  Specifying Paper in the Printer Driver 33	2
Printing Photos and Office Documents       33         Printing Photos and Images       33         Printing Photos and Images (Windows)       33         Printing Photos and Images (Mac OS)       35         Printing Office Documents       37         Printing Office Documents (Windows)       37         Printing Office Documents (Mac OS)       36         Using PosterArtist to Compose Originals       47	3 3 5 7 7
Printing CAD Drawings Printing CAD Drawings	3 3 4 5 7 8
Adjusting Images  Adjusting the Color in the Printer Driver	1 3 5 8
Printing enlargements or reductions  Resizing Originals to Match the Paper Size	5 5 5

	Resizing Originals to Fit the Roll Width (Windows)  Resizing Originals to Fit the Roll Width (Mac OS)  Resizing Originals by Entering a Scaling Value	. 69 71 72
F	Printing at full size	76
	Printing on Oversize Paper Printing at Full Size (Windows) Printing at Full Size (Mac OS) Borderless Printing at Actual Size Borderless Printing at Actual Size (Windows) Borderless Printing at Actual Size (Mac OS)	77 78 80 81
E	Borderless Printing	87
	Borderless Printing on Paper of Equivalent Size  Borderless Printing by Resizing Originals to Match the Paper Size (Windows)  Borderless Printing by Resizing Originals to Fit the Roll Width  Borderless Printing by Resizing Originals to Fit the Roll Width (Windows)  Borderless Printing by Resizing Originals to Fit the Roll Width (Mac OS)	88 . 90 91
F	Printing banners or at other non-standard sizes	97
	Printing Vertical or Horizontal Banners (Large-Format Printing)  Printing Vertical or Horizontal Banners (Large-Format Printing; Windows)  Printing Vertical or Horizontal Banners (Large-Format Printing; Mac OS)  Printing on Non-Standard Paper Sizes  Printing on Non-Standard Paper Sizes (Windows)  Printing on Non-Standard Paper Sizes (Mac OS)	. 98 101 104 104
T	Tiling and multiple pages per sheet	110
	Printing Multiple Originals Next to Each Other Printing Multiple Originals Next to Each Other (Windows) Printing Multiple Originals Next to Each Other (Mac OS)  Printing Multiple Pages Continuously Printing Multiple Pages Continuously (Windows) Printing Multiple Pages Continuously (Mac OS)  Printing Multiple Pages Per Sheet Printing Multiple Pages Per Sheet (Windows) Printing Multiple Pages Per Sheet (Mac OS)  Printing Posters in Sections Printing Large Posters (Windows)	111 113 114 114 116 118 118 120 123
	Centering originals	126
	Printing Originals Centered on Rolls Printing Originals Centered on Rolls (Windows) Printing Originals Centered on Rolls (Mac OS)  Printing Originals Centered on Sheets Printing Originals Centered on Sheets (Windows) Printing Originals Centered on Sheets (Mac OS)	126 128 130 130
	Conserving roll paper	135
	Conserving Roll Paper by Rotating Originals 90 Degrees  Conserving Roll Paper by Rotating Originals 90 Degrees (Windows)  Conserving Roll Paper by Rotating Originals 90 Degrees (Mac OS)  Conserving Roll Paper by Printing Originals Without Top and Bottom Margins  Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Windows)  Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Mac OS)	135 136 139 139
	Checking Images Before Printing	144
	Checking the Layout in a Preview Before Printing	144

Other useful settings	145
Printing With Watermarks	. 145
Printing with Watermarks—COPY, FILE COPY, and so on (Windows)	146
Making the Original Orientation Match the Paper Orientation	
Making the Original Orientation Match the Paper Orientation (Windows)	
Making the Original Orientation Match the Paper Orientation (Mac OS)	
Using Favorites	
Cutting Roll Paper After Printing	
Cutting Roll Paper After Printing (Windows)	
Cutting Roll Paper After Printing (Mac OS)	153
Windows Software	157
Drinter Driver	150
Printer Driver	158
Printer Driver Settings	
Specifying Paper in the Printer Driver	
Confirming Print Settings	
Checking the Layout in a Preview Before Printing	. 162
Using Favorites	163
Accessing the Printer Driver Dialog Box from Applications	. 164
Accessing the Printer Driver Dialog Box from the Operating System Menu	165
Main Sheet	. 167
Paper Information on Printer Dialog Box	170
Paper Detailed Settings Dialog Box	
View Settings Dialog Box for the Printing Application	
Color Adjustment Sheet: Color	
Object Adjustment Dialog box: Color	
Matching Sheet	
Color Adjustment Sheet: Monochrome	
Object Adjustment Dialog box: Monochrome	
Page Setup Sheet	
Paper Size Options Dialog Box	
Layout Sheet	
Page Options Dialog Box	
Special Settings Dialog Box	
Favorites Sheet	185
Utility Sheet	. 186
Support Sheet	. 187
Settings Summaries Dialog Box	. 188
Device Settings Sheet	188
Preview	190
The Features of Preview	190
Starting Preview	
Preview Main Window	
Dialog Area	
Enlarge/Reduce the screen display	
Moving a Page	
Using the ruler	
Priority setting for rotating 90 degrees	
Printing with Selecting the Layout	
Print on the Center	. 199
Not Print Spaces at the Top/Bottom	. 200
Free Layout	201
The Features of Free Layout	
Starting Free Layout	
July 100 Edjour minimum minimu	0_

Detailed Settings         204           Preferences Dialog Box         205           Page Options Dialog Box         206           Zoom Dialog Box         207           Format Dialog Box         207           Laying out a Multiple-File Document on One Page         209           Laying out a Document Created with Multiple Application Programs on One Page         211           Selecting an Object         214           Changing the Object Size         214           Moving an Object         215           Rotating an Object         215           Laying out Objects Automatically         216           Aligning Objects         216           Changing the Object Overlapping Order         218           Pasting a Copied or Cut Object         219           Folded Duplex Window         220           Finished Size Settings Dialog Box         221           Prints using Folded Duplex         222           Prints using Folded Duplex         223           Color imageRUNNER Enlargement Copy         224           Starting Color imageRUNNER Enlargement Copy         224           Color imageRUNNER Enlargement Copy Dialog Box         225           Hot Folder         226           Creating a New Hot Folder
Page Options Dialog Box         206           Zoom Dialog Box         207           Format Dialog Box         207           Laying out a Multiple-File Document on One Page         209           Laying out a Document Created with Multiple Application Programs on One Page         211           Selecting an Object         214           Changing the Object Size         214           Moving an Object         215           Rotating an Object         215           Laying out Objects Automatically         216           Aligning Objects         216           Changing the Object Overlapping Order         218           Pasting a Copied or Cut Object         219           Folded Duplex Window         220           Finished Size Settings Dialog Box         221           Binding Settings Dialog Box         221           Binding Settings Dialog Box         222           Prints using Folded Duplex         223           Color imageRUNNER Enlargement Copy         224           Starting Color imageRUNNER Enlargement Copy         224           Color imageRUNNER Enlargement Copy Dialog Box         225           Hot Folder         226           Creating a New Hot Folder         227           Specifying an Existing Shared
Zoom Dialog Box         207           Format Dialog Box         207           Laying out a Multiple-File Document on One Page         209           Laying out a Document Created with Multiple Application Programs on One Page         211           Selecting an Object         214           Changing the Object Size         214           Moving an Object         215           Rotating an Object Solect         215           Laying out Objects Automatically         216           Aligning Objects         216           Changing the Object Overlapping Order         218           Pasting a Copied or Cut Object         219           Folded Duplex Window         220           Finished Size Settings Dialog Box         221           Binding Settings Dialog Box         222           Prints using Folded Duplex         223           Color imageRUNNER Enlargement Copy         224           Starting Color imageRUNNER Enlargement Copy         224           Color imageRUNNER Enlargement Copy Dialog Box         225           Flot Folder         226           Creating a New Hot Folder         226           Creating an New Hot Folder as a Hot Folder         226           Setting the Print Parameters         233           S
Format Dialog Box
Laying out a Multiple-File Document on One Page 209 Laying out a Document Created with Multiple Application Programs on One Page 211 Selecting an Object 214 Changing the Object Size 214 Moving an Object 215 Rotating an Object 215 Laying out Objects Automatically 215 Laying out Objects Automatically 216 Aligning Objects 216 Changing the Object Overlapping Order 218 Pasting a Copied or Cut Object 219 Folded Duplex Window 220 Finished Size Settings Dialog Box 221 Binding Settings Dialog Box 222 Prints using Folded Duplex 223  Color imageRUNNER Enlargement Copy 224 Starting Color imageRUNNER Enlargement Copy 224 Starting Color imageRUNNER Enlargement Copy 224 Color imageRUNNER Enlargement Copy 225 Hot Folder 226 Creating a New Hot Folder 327 Specifying an Existing Shared Folder as a Hot Folder 230 Setting Enlargements of Scanned Originals from a Color imageRUNNER 233 Printing Enlargements of Scanned Originals from a Color imageRUNNER 233
Laying out a Document Created with Multiple Application Programs on One Page 211 Selecting an Object 214 Changing the Object Size 214 Moving an Object 215 Rotating an Object 215 Rotating an Object 216 Aligning out Objects Automatically 216 Aligning Objects 216 Changing the Object Overlapping Order 218 Pasting a Copied or Cut Object 219 Folded Duplex Window 220 Finished Size Settings Dialog Box 221 Binding Settings Dialog Box 222 Prints using Folded Duplex 223  Color imageRUNNER Enlargement Copy 224 Starting Color imageRUNNER Enlargement Copy 224 Starting Color imageRUNNER Enlargement Copy 225 Hot Folder 226 Creating a New Hot Folder 227 Specifying an Existing Shared Folder as a Hot Folder 230 Setting Enlargements of Scanned Originals from a Color imageRUNNER 233 Printing Enlargements of Scanned Originals from a Color imageRUNNER 233
Selecting an Object       214         Changing the Object Size       214         Moving an Object       215         Rotating an Object       215         Laying out Objects Automatically       216         Aligning Objects       216         Changing the Object Overlapping Order       218         Pasting a Copied or Cut Object       219         Folded Duplex Window       220         Finished Size Settings Dialog Box       221         Binding Settings Dialog Box       222         Prints using Folded Duplex       223         Color imageRUNNER Enlargement Copy       224         Starting Color imageRUNNER Enlargement Copy       224         Color imageRUNNER Enlargement Copy       224         Color imageRUNNER Enlargement Copy Dialog Box       225         Hot Folder       226         Creating a New Hot Folder       226         Creating a New Hot Folder as a Hot Folder       230         Setting the Print Parameters       233         Printing Enlargements of Scanned Originals from a Color imageRUNNER       233
Selecting an Object       214         Changing the Object Size       214         Moving an Object       215         Rotating an Object       215         Laying out Objects Automatically       216         Aligning Objects       216         Changing the Object Overlapping Order       218         Pasting a Copied or Cut Object       219         Folded Duplex Window       220         Finished Size Settings Dialog Box       221         Binding Settings Dialog Box       222         Prints using Folded Duplex       223         Color imageRUNNER Enlargement Copy       224         Starting Color imageRUNNER Enlargement Copy       224         Color imageRUNNER Enlargement Copy       224         Color imageRUNNER Enlargement Copy Dialog Box       225         Hot Folder       226         Creating a New Hot Folder       226         Creating a New Hot Folder as a Hot Folder       230         Setting the Print Parameters       233         Printing Enlargements of Scanned Originals from a Color imageRUNNER       233
Moving an Object215Rotating an Object215Laying out Objects Automatically216Aligning Objects216Changing the Object Overlapping Order218Pasting a Copied or Cut Object219Folded Duplex Window220Finished Size Settings Dialog Box221Binding Settings Dialog Box222Prints using Folded Duplex223Color imageRUNNER Enlargement Copy224The Features of Color imageRUNNER Enlargement Copy224Color imageRUNNER Enlargement Copy224Color imageRUNNER Enlargement Copy Dialog Box225Hot Folder226Creating a New Hot Folder226Creating a New Hot Folder as a Hot Folder230Setting the Print Parameters233Printing Enlargements of Scanned Originals from a Color imageRUNNER233
Rotating an Object
Rotating an Object
Laying out Objects Automatically
Aligning Objects
Changing the Object Overlapping Order218Pasting a Copied or Cut Object219Folded Duplex Window220Finished Size Settings Dialog Box221Binding Settings Dialog Box222Prints using Folded Duplex223Color imageRUNNER Enlargement Copy224The Features of Color imageRUNNER Enlargement Copy224Starting Color imageRUNNER Enlargement Copy224Color imageRUNNER Enlargement Copy Dialog Box225Hot Folder226Creating a New Hot Folder227Specifying an Existing Shared Folder as a Hot Folder230Setting the Print Parameters233Printing Enlargements of Scanned Originals from a Color imageRUNNER233
Pasting a Copied or Cut Object
Folded Duplex Window
Finished Size Settings Dialog Box 221 Binding Settings Dialog Box 222 Prints using Folded Duplex 223  Color imageRUNNER Enlargement Copy 224 The Features of Color imageRUNNER Enlargement Copy 224 Starting Color imageRUNNER Enlargement Copy 224 Color imageRUNNER Enlargement Copy 224 Color imageRUNNER Enlargement Copy 225 Hot Folder 226 Creating a New Hot Folder 227 Specifying an Existing Shared Folder as a Hot Folder 230 Setting the Print Parameters 233 Printing Enlargements of Scanned Originals from a Color imageRUNNER 233
Binding Settings Dialog Box
Prints using Folded Duplex 223  Color imageRUNNER Enlargement Copy 224  The Features of Color imageRUNNER Enlargement Copy 224  Starting Color imageRUNNER Enlargement Copy 224  Color imageRUNNER Enlargement Copy 225  Hot Folder 226  Creating a New Hot Folder 227  Specifying an Existing Shared Folder as a Hot Folder 230  Setting the Print Parameters 233  Printing Enlargements of Scanned Originals from a Color imageRUNNER 233
Color imageRUNNER Enlargement Copy224The Features of Color imageRUNNER Enlargement Copy224Starting Color imageRUNNER Enlargement Copy224Color imageRUNNER Enlargement Copy Dialog Box225Hot Folder226Creating a New Hot Folder227Specifying an Existing Shared Folder as a Hot Folder230Setting the Print Parameters233Printing Enlargements of Scanned Originals from a Color imageRUNNER233
The Features of Color imageRUNNER Enlargement Copy 224 Starting Color imageRUNNER Enlargement Copy 224 Color imageRUNNER Enlargement Copy Dialog Box 225 Hot Folder 226 Creating a New Hot Folder 227 Specifying an Existing Shared Folder as a Hot Folder 230 Setting the Print Parameters 233 Printing Enlargements of Scanned Originals from a Color imageRUNNER 233
Starting Color imageRUNNER Enlargement Copy 224 Color imageRUNNER Enlargement Copy Dialog Box 225 Hot Folder 226 Creating a New Hot Folder 227 Specifying an Existing Shared Folder as a Hot Folder 230 Setting the Print Parameters 233 Printing Enlargements of Scanned Originals from a Color imageRUNNER 233
Starting Color imageRUNNER Enlargement Copy 224 Color imageRUNNER Enlargement Copy Dialog Box 225 Hot Folder 226 Creating a New Hot Folder 227 Specifying an Existing Shared Folder as a Hot Folder 230 Setting the Print Parameters 233 Printing Enlargements of Scanned Originals from a Color imageRUNNER 233
Hot Folder
Creating a New Hot Folder227Specifying an Existing Shared Folder as a Hot Folder230Setting the Print Parameters233Printing Enlargements of Scanned Originals from a Color imageRUNNER233
Creating a New Hot Folder227Specifying an Existing Shared Folder as a Hot Folder230Setting the Print Parameters233Printing Enlargements of Scanned Originals from a Color imageRUNNER233
Specifying an Existing Shared Folder as a Hot Folder
Setting the Print Parameters
Printing Enlargements of Scanned Originals from a Color imageRUNNER
Print Pilid-in for Uttice
Print Plug-In for Officefeatures
Steps to install
Steps to uninstall
When Print Plug-In for Office is not displayed
To start from Microsoft Word
Print Matching Roll Width(Word)
Borderless Printing(Word)
Multi-Page Printing(Word)
Register the settings (Word)
Print Using Registered Settings(Word)
Portrait Orientation/Landscape Orientation(Word)
To start from Microsoft PowerPoint
Print Matching Roll Width(PowerPoint)
Borderless Printing(PowerPoint)
Multi-Page Printing(PowerPoint)
Register the settings (PowerPoint)
Print Using Registered Settings(PowerPoint)
Portrait Orientation/Landscape Orientation(PowerPoint)
To start from Microsoft Excel
Print Entire Sheet(Excel)
Print Entire Sheet(Excel)
Print Entire Sheet(Excel)

Mac OS Software	275
Printer Driver	276
Printer Driver Settings	276
Specifying Paper in the Printer Driver	
Confirming Print Settings	
Checking the Layout in a Preview Before Printing	
Using Favorites	
Accessing the Printer Driver Dialog Box from Applications	
Main Pane	
Paper Detailed Settings Dialog Box	
View set. Dialog Box for the Printing Application	
Matching pane	
Color Settings Pane: Color	289
Object Adjustment dialog box: Color	290
Color Settings Pane: Monochrome	
Object Adjustment dialog box: Monochrome	
Page Setup Pane	
· ·	
Preview	294
The Features of Preview	
Starting Preview	
Preview Main Window	
Paper Settings Panel	
Easy Settings	
Advanced Settings	
Output Settings Panel	
Color Settings Panel	
Color Adjustment	
Matching	
Driver Matching Mode	
ICC Matching Mode	
ColorSync	
Preferences Dialog Box	
Zoom Dialog Box	
Go to Page Dialog Box	
Print with No Borders	
Print on the Center	
Not Print Spaces at the Top/Bottom	
Print Page Rotated 90 Degrees	
Display with Fitting to the Width of the Paper	
Display with All	
Display with Actual Size	
Moving a Page	316
Free Layout	317
The Features of Free Layout	317
Starting Free Layout	
Free Layout Main Window	
Paper Settings Panel	
Easy Settings	
Advanced Settings	
Color Settings Panel	
Color Adjustment	
Matching	
Driver Matching Mode	
ICC Matching Mode	
100 Matering Mode	551

Format Dialog Box Laying out a Multiple-File Document on One Page Laying out a Document Created with Multiple Application Programs on One Page Selecting an Object Changing the Object Size Moving an Object Rotating an Object Laying out Objects Automatically Aligning Objects	335 336 337 337 338
Changing the Object Overlapping Order Pasting a Copied or Cut Object	
Color imageRUNNER Enlargement Copy	342
The Features of Color imageRUNNER Enlargement Copy Starting Color imageRUNNER Enlargement Copy Color imageRUNNER Enlargement Copy Dialog Box Hot Folder Creating a New Hot Folder Editing a Hot Folder (Setting Print Conditions) Deleting a Hot Folder Setting the Print Parameters Paper Settings Panel Easy Settings Advanced Settings Output Settings Panel Color Settings Panel Driver Matching Mode	342 343 344 345 347 348 350 351 352
ICC Matching Mode	356
ICC Matching Mode	356
ICC Matching Mode Printing Enlargements of Scanned Originals from a Color imageRUNNER	356 356
ICC Matching Mode	356 359 360 360 360 360 362 362 363
ICC Matching Mode Printing Enlargements of Scanned Originals from a Color imageRUNNER  Handling and Use of Paper  Paper  Types of Paper  Types of Paper  Paper Sizes  Using Paper Other Than Genuine Paper and feed confirmed Paper  Printing on Paper Other Than Genuine Paper and feed confirmed Paper Using Existing Settings  Displaying the Paper Reference Guide	356 359 360 360 360 360 362 362 363

Handling sheets	392
Loading Sheets in the Printer	392
Printing From a Desired Starting Point	394
Removing Sheets	397
Output Stacker	399
Using the Output Stacker	399
Media Configuration Tool (Windows)	404
The Features of Media Configuration Tool	
Installation Procedures	
Starting Method	
Media Configuration Tool Main Window	407
Editing Media Type Information for Genuine Paper and Feed Confirmed Paper	407
Adding Media Types	
Changing Media Names	
Deleting Media Types You Have Added	
Changing the Display Order of Media Types	
Checking the update	
Media Configuration Tool (Mac OS)	418
The Features of Media Configuration Tool	
Procedures for Installing	
Starting Method	
Media Configuration Tool Main Window	
Editing Media Type Information for Genuine Paper and Feed Confirmed Paper	
Adding Media Types	
Changing Media Types You Hove Added	
Deleting Media Types You Have Added	
Changing the Display Order of Media Types	
Checking the update	
Control Panel 4	135
Operations and Display Screen	436
Control Panel	
How to View Instructions with Navigate	
Checking Instructions During Printer Operations	
Printer Menu	446
Printer Menu Operations	446
Menu Operations	
Menu Structure	450
Menu Settings	
Status Print	
Printing Interface Setting Reports	469
Printer Parts 4	173
	13
Printer parts	474
Front	
Side	
Top Cover (Inside)	
	+/0

	Carriage	
	Optional accessories	480
	Roll Holder Set	
	Network Setting	483
	Network Environment	484
	Network Environment	. 484
	Using RemoteUI	486
	Using RemoteUI	. 486
	Initial Settings	488
	Configuring the IP Address on the Printer  Configuring the IP Address Using the Printer Control Panel  Configuring the IP Address Using ARP and PING Commands  Configuring TCP/IPv6 Network Settings  Configuring the Printer Driver Destination (Windows)  Configuring the Printer Driver Destination (Mac OS)  Configuring the Printer's TCP/IP Network Settings With RemoteUI	. 488 . 489 . 491 . 491 . 492
	Mac OS Settings	496
	Configuring the Destination in TCP/IP Networks  Configuring the Destination for Bonjour Network	
	Other Settings	497
	Specifying Printer-Related Information  Configuring the Communication Mode Manually  Email Notification When Printing is Finished or Errors Occur  Initializing the Network Settings	498 . 499
	Device Setup Utility (Windows)	500
	imagePROGRAF Device Setup Utility	. 500
	Print Job Management	503
	Status Monitor (Windows)	504
•	The Features of imagePROGRAF Status Monitor  Job Management Using imagePROGRAF Status Monitor	
	Printmonitor (Mac OS)	506
	The Features of imagePROGRAF Printmonitor  Job Management Using imagePROGRAF Printmonitor	
	Accounting (Windows)	508
	Accounting Manager  Launching the Accounting Manager  Accounting Manager Main Window  Job List Area	. 508 . 509 . 511
	Accounting Manager Basic Procedures	
	Setting the Unit Cost for Ink	. 514

P	Setting the Unit Cost for Items Other Than Ink and Paper	
Print Job Management	Configuring Units and Display Settings in Accounting Manager	
Joh Joh	Automatically Acquiring Print Job Logs at Regular Intervals	
Ž	Canceling Regular Print Job Log Acquisition	
ana	Switching Between Displaying Jobs on Printer and Regularly Acquired Jobs	
gen	Exporting Print Job Data as a CSV File	
<u>a</u>	Showing, Saving and Loading Selected Unit Cost Data	
	Showing the Total Amount of Ink and Paper Consumed	
	<b>9</b>	
Adjustments for Better Print Quality	Adjustments for Better Print Quality	523
stme	Adjusting the Printhead	524
nts	Adjusting the Printhead	524
<u> </u>	Automatic Adjustment to Straighten Lines and Colors	524
Bet	Manual Adjustment to Straighten Lines and Colors	
er F	Adjusting Line Misalignment	
mit .	Troubleshooting Paper Abrasion and Blurry Images	529
Q Q	Adjusting the feed amount	531
₹	Adjusting the Feed Amount	531
	Selecting a Feed Amount Adjustment Method	
	Automatic Banding Adjustment	
	Manual Banding Adjustment	
	Fine-Tuning the Paper Feed Amount	
	Adjusting Line Length	
	Adjusting the Vacuum Strength	557
Main	Maintenance and Consumables	539
Maintena	Maintenance and Consumables  Ink Tanks	539 540
Maintenance		540
Maintenance an	Ink Tanks	540 540
Maintenance and C	Ink Tanks Ink Tanks	540 540 540
Maintenance and Cons	Ink Tanks Ink Tanks	540 540 540 546
Maintenance and Consum	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels	540 540 540 546
ನ	Ink Tanks Ink Tanks	540 540 540 546
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer	540 540 546 546 546 547
Maintenance and Consumables	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads	540 540 546 546 547 549
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads Printhead	540 540 546 546 547 549 549
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads Printhead Checking for Nozzle Clogging	540 540 546 546 547 549 549 549
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads Printhead Checking for Nozzle Clogging Cleaning the Printhead	540 540 546 546 547 549 549 549
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads Printhead Checking for Nozzle Clogging Cleaning the Printhead Replacing the Printhead	540 540 546 546 547 549 549 550 551
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads Printhead Checking for Nozzle Clogging Cleaning the Printhead Replacing the Printhead  Maintenance Cartridge	540 540 546 546 547 549 549 550 551
ನ	Ink Tanks  Ink Tanks  Replacing Ink Tanks  Checking Ink Tank Levels  When to Replace Ink Tanks  Attach the Ink Tank Cover to the printer  Printheads  Printhead  Checking for Nozzle Clogging  Cleaning the Printhead  Replacing the Printhead  Maintenance Cartridge  Maintenance Cartridge  Replacing the Maintenance Cartridge  Checking the Remaining Maintenance Cartridge Capacity	540 540 546 546 547 549 549 550 551 558 558 558
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads Printhead Checking for Nozzle Clogging Cleaning the Printhead Replacing the Printhead Maintenance Cartridge Maintenance Cartridge Replacing the Maintenance Cartridge	540 540 546 546 547 549 549 550 551 558 558 558
ನ	Ink Tanks  Ink Tanks  Replacing Ink Tanks  Checking Ink Tank Levels  When to Replace Ink Tanks  Attach the Ink Tank Cover to the printer  Printheads  Printhead  Checking for Nozzle Clogging  Cleaning the Printhead  Replacing the Printhead  Maintenance Cartridge  Maintenance Cartridge  Replacing the Maintenance Cartridge  Checking the Remaining Maintenance Cartridge Capacity	540 540 546 546 547 549 549 550 551 558 558 558
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads Printhead Checking for Nozzle Clogging Cleaning the Printhead Replacing the Printhead Replacing the Printhead Maintenance Cartridge Maintenance Cartridge Replacing the Maintenance Cartridge Checking the Remaining Maintenance Cartridge When to Replace the Maintenance Cartridge	540 540 546 546 547 549 549 550 551 558 558 562 563
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads Printhead Checking for Nozzle Clogging Cleaning the Printhead Replacing the Printhead Replacing the Printhead Maintenance Cartridge Maintenance Cartridge Replacing the Maintenance Cartridge Checking the Remaining Maintenance Cartridge Capacity When to Replace the Maintenance Cartridge Cleaning the Printer	540 540 546 546 547 549 549 550 551 558 558 562 563
ನ	Ink Tanks Ink Tanks	540 540 546 546 547 549 549 550 551 558 558 562 563
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads Printhead Checking for Nozzle Clogging Cleaning the Printhead Replacing the Printhead Maintenance Cartridge Maintenance Cartridge Replacing the Maintenance Cartridge Checking the Remaining Maintenance Cartridge Checking the Remaining Maintenance Cartridge Checking the Remaining Maintenance Cartridge Checking the Printer Cleaning the Printer Cleaning the Printer Exterior Cleaning Inside the Top Cover  Other Maintenance Preparing to Transfer the Printer	540 540 546 546 547 549 549 551 558 551 558 562 564 564
ನ	Ink Tanks Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels When to Replace Ink Tanks Attach the Ink Tank Cover to the printer  Printheads Printhead Checking for Nozzle Clogging Cleaning the Printhead Replacing the Printhead Maintenance Cartridge Maintenance Cartridge Replacing the Maintenance Cartridge Checking the Maintenance Cartridge Checking the Maintenance Cartridge Replacing the Maintenance Cartridge Checking the Remaining Maintenance Cartridge Capacity When to Replace the Maintenance Cartridge Cleaning the Printer Cleaning the Printer Cleaning Inside the Top Cover  Other Maintenance	540 540 546 546 547 549 549 550 551 558 558 562 563 564 564 564

Troubleshooting	577
Frequently Asked Questions	578
Frequently Asked Questions	. 578
Problems Regarding Paper	579
Clearing Jammed Roll Paper	
Clearing a Jammed Sheet	
Roll paper cannot be inserted into the Paper Feed Slot	
Cannot load sheets	
Paper is not cut neatly	
Paper is not cut	
The size of clear film cannot be detected	588
Roll Paper is Continuously Ejected	. 588
Printing does not start	589
The Data lamp on the Control Panel does not light up	
The printer does not respond even if print jobs are sent	
The display screen indicates Agitating	
The printer stops during a print job	590
An error message is shown on the Display Screen	590
The printer ejects blank, unprinted paper	590
Problems with the printing quality	591
Printing is faint	
Paper rubs against the Printhead	
The surface of the paper is dirty	
The back side of the paper is dirty	
Printed colors are inaccurate	
Colors in printed images are uneven	
Image edges are blurred or white banding occurs	
The contrast becomes uneven during printing	
Images are printed crooked	
Documents are printed in monochrome	
Lines are misaligned	
Cannot print over a network	598
Cannot connect the printer to the network	. 598
Cannot print over a TCP/IP network	
Cannot print over a Bonjour network	. 598
Installation problems	599
The computer does not recognize the printer	
HP-GL/2 problems	601
With HP-GL/2, printing is misaligned	
Lines or images are missing in printed HP-GL/2 jobs.	601
Lines are printed too thick or thin in HP-GL/2 print jobs	
HP-GL/2 jobs are printed in monochrome (or color)	

Troubleshooting	HP-GL/2 jobs are printed 6 mm larger than specified  HP-GL/2 jobs are printed at maximum size, even if a standard size is specified  HP-GL/2 printing takes a long time  Replotting with HP-GL/2 jobs is not possible.  The printer stops when printing a HP-GL/2 job (the carriage stops moving)	602 602 602
ing	Other problems	603
	The Ink Tank Cover has become detached from the printer	
	The printer does not go on	
	If the Printer Makes a Strange Sound	
	Messages advising to check the maintenance cartridge are not cleared	
	The printer consumes a lot of ink	
	Ink Level Detection	
Erro	Error Message 6	<b>507</b>
Error Message	Error Messages	608
sage	Messages regarding paper	610
O	Paper mismatch	
	MediaType Mismatch	
	The paper is too small.	
	The paper is too small	611
	PaprWidth Mismatch	
	Paper size not detected.	
	Insufficient paper for job	
	This paper cannot be used.	
	Roll printing is selectedRoll printing is selected, but sheets are loaded	
	The roll is empty.	
	Sheet printing is selected.	
	Regular printing is selected, but a roll is loaded.	
	Paper jam	615
	Paper is crooked.	
	Paper not aligned with right guide.	
	Cannot detect papr	
	Leading edge detection error.  Paper cutting failed.	
	End of paper feed.	
	Rel lever is in wrong position.	
	Borderless printng not possible.	
	Paper position not suitable for borderless printing.	
	Roll paper is not securely in contact with roll holder.	618
	Messages regarding ink	619
	Ink insufficient.	619
	No ink left.	
	Remaining level of the ink cannot be correctly detected. Check ink tank.	
	Cannot detect ink level correctly. Close tank cover.	
	Close Ink Tank Cover	
	Not much ink is left.	
	Check if ink tank is set, and its color and direction.	
	The following ink tanks cannot be recognized.	
	Wrong ink tank.	
	Do not pull out ink tank.	620
	Messages regarding printing or adjustment	621
	Cannot adjust paper feed.	621

rror Message	Messages regarding printheads	622
Meg.	Cannot adjust printhead.	
Sac	Wrong printhead.	
Ð	Printhead error	622
	Cannot recognize print head.	
	Execute printhead cleaning.	623
	Messages regarding the maintenance cartridge	624
	Insert the maintenance cartridge.	
	Wrong maintenance cartridge.	
	Maint. cart. The level is low	
	No Maintenance Cartridge capacity.  Maintenance cartridge full.	
	Maintenance cartridge problem.	
	Messages regarding HP-GL/2	625
	This type of paper is not compatible with HP-GL/2	
	GL2: W0502 The parameter is out of range.	
	GL2: W0504 This command is not supported.	
	Other Messages	626
	GARO Wxxxx (x represents a number)	626
	ERROR Exxx-xxxx (x represents a letter or number)	
	Hardware error. xxxxxxxx-xxxx (x represents a letter or number)	626
	Top cover is open.	
	Prepare for parts replacement.	
	Parts replacement time has passed.  Unknown file.	
	Multi-sensor error	
	Error in cutter position.	
Spe	Specifications	529
Specifications	Printer Specifications	630
atior	Specifications	
യ	Print Area	631
Appendix	Appendix	533
mdix	Safety Precautions	634
	Safety Precautions	634
	Legal Notices	636
	Manuals for this printer	638
	Manuals for this printer	638
	About This User Manual	638
	Disposal of the product	640
	WEEE Directive	
		5.0

## Memo

User's Guide

# **Basic Printing Workflow**

Printing procedure	16
Canceling print jobs	25
Pausing Printing	29

Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633

## Printing procedure

Printing Options Using Rolls and Sheets	16
Turning the Printer On and Off	17
Loading and Printing on Rolls  Loading and Printing on Sheets  → Specifying Paper in the Printer Driver (Windows)  → Specifying Paper in the Printer Driver (Mac OS)	21
Printing in Windows	

#### **Printing Options Using Rolls and Sheets**

The printer supports both rolls and sheets.

This section introduces the main features of each, as well as the main printing methods available. Select rolls or sheets to suit your particular printing application.



- For information on the types of paper the printer supports, see "Types of Paper." →P.360
- A variety of other ways to print are available besides those introduced here. For details, see "Enhanced Printing Options."

#### Roll printing

Media in spooled rolls is generally called Roll Media. Rolls are loaded on the Roll Holder, which are in turn loaded in the printer.

Rolls can be used to print large photos or create posters or banners that cannot be printed on regular sheets.

Large-format printing

Easily print vertical or horizontal banners from familiar applications such as Microsoft Office applications. (See "Printing Vertical or Horizontal Banners (Large-Format Printing).") →P.97

Borderless printing

Print without a margin (border) around posters or photos.

(See "Borderless Printing on Paper of Equivalent Size.") →P.87

(See "Borderless Printing by Resizing Originals to Fit the Roll Width.") →P.90

(See "Borderless Printing at Actual Size.") →P.80

Banner printing

You can print multiple pages as a single continuous image, without margins between pages. (See "Printing Multiple Pages Continuously.") →P.114

90-degree rotation before printing

Originals in portrait orientation are rotated 90 degrees when possible to use paper more efficiently. (See "Conserving Roll Paper by Rotating Originals 90 Degrees.") →P.135

Enlarged/reduced printing

You can freely adjust the size of originals by enlarging or reducing originals before printing.

(See "Resizing Originals to Match the Paper Size.") →P.65

(See "Resizing Originals to Fit the Roll Width.") →P.67

(See "Resizing Originals by Entering a Scaling Value.") →P.71

• Free Layout (Windows) and imagePROGRAF Free Layout (Mac OS)

Print multiple documents from multiple applications (such as word-processing programs, spreadsheet programs, and so on) next to each other.

(See "Printing Multiple Originals Next to Each Other.") →P.110

#### Sheet printing

Sheets refer to individual sheets of paper.

Insert the sheet between the Platen and the Paper Retainer.

Enlarged/reduced printing

You can freely adjust the size of originals by enlarging or reducing originals before printing.

(See "Resizing Originals to Match the Paper Size.") → P.65

(See "Resizing Originals by Entering a Scaling Value.") →P.71

Free Layout (Windows) and imagePROGRAF Free Layout (Mac OS)
 Print multiple documents from multiple applications (such as word-processing programs, spreadsheet programs, and so on) next to each other.

(See "Printing Multiple Originals Next to Each Other.") →P.110

### **Turning the Printer On and Off**

#### Turning the printer on

Press the **Power** button to turn on the printer.
The printer will now start up.
After the Display Screen shows the Canon logo, "**Starting up... Please wait.**" is displayed.



The **Power Lamp** is lit when the printer finishes starting up, and the printer is now in **Standby**.

The printer will not go into **Standby** in the following situations. Take the appropriate action.





- The Top Cover is open Close the Top Cover.
- The Ink Tank Cover is open Close the Ink Tank Cover.
- The Printhead is not installed see "Replacing the Printhead." →P.551

- An Ink Tank is not installed see "Replacing Ink Tanks." →P.540
- If "ERROR" is shown on the Display Screen see "Error Messages." →P.608
- The **Power Lamp** and **Message Lamp** are not lit (even once), and nothing appears on the Display Screen

Make sure the printer is plugged in correctly. Check the connection at the plug and electrical outlet.

No paper is loaded
 Load paper. (See "Loading and Printing on Rolls.") →P.19 (See "Loading and Printing on Sheets.") →P.21

#### Turning the printer off



Never disconnect the printer's power supply or unplug it during a print job. This may damage the printer.

Make sure no print jobs are in progress.

If the **Message Lamp** is flashing, check the message on the Display Screen and take action as necessary. (See "Error Messages.") →P.608



If the **Data Lamp** is flashing, the printer is receiving a print job. Turn off the printer only after printing is finished.



Hold down the **Power** button for more than a second.

After "**Shut Down.**. **Please Wait.**." is shown on the Display Screen, the printer shuts off.



### **Loading and Printing on Rolls**


These are the basic steps for loading and printing on rolls. Follow these steps to load and print on rolls.




- For details on supported sizes and types of rolls, see Paper Sizes or the Paper Reference Guide. (See "Paper Sizes.") →P.360 (See "Types of Paper.") →P.360
- If you prefer to wait for the ink to dry after printing and simply eject the document, you can deactivate automatic cutting and cut the paper manually. (See "Specifying the Cutting Method for Rolls.") →P.386
- Turn the printer on. (See "Turning the Printer On and Off.") →P.17



Load the roll on the Roll Holder. (See "Attaching the Roll Holder to Rolls.") →P.370

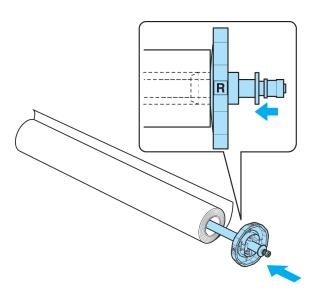

Load the roll in the printer. (See "Loading Rolls in the Printer.") >P373

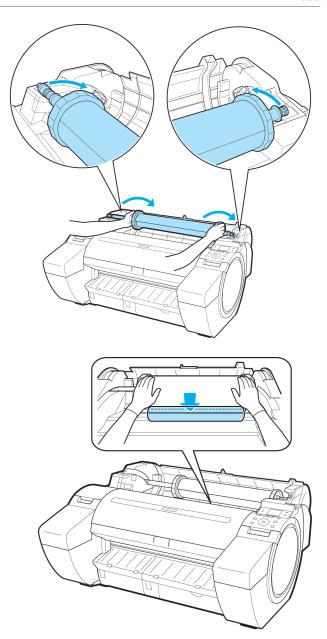


4 Select the type of paper. (See "Changing the Type of Paper.") →P.376





- If no barcode has been printed on the roll and you have set **ManageRemainRoll** to **On**, specify the roll length after the type of paper. (See "Specifying the Paper Length.") 
   P.378
- 5 Complete settings in the printer driver for the type of paper and other details.
  - Specifying Paper in the Printer Driver (Windows) →P.160
  - Specifying Paper in the Printer Driver (Mac OS) →P.277

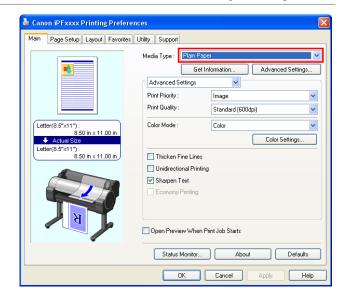

- 6 Send the print job.
  - Printing in Windows → P.23
  - Printing from Mac OS →P.23

The printer now starts printing the print job.

#### **Loading and Printing on Sheets**


These are the basic steps for loading sheets and then printing. Follow the steps below to load and print on sheets.



- For details on supported types and sizes of paper, see Paper Sizes or the Paper Reference Guide. (See "Paper Sizes.") →P.360 (See "Types of Paper.") →P.360
- Turn the printer on. (See "Turning the Printer On and Off.") →P.17




- 2 Complete settings in the printer driver for the type of paper and other details.
  - Specifying Paper in the Printer Driver (Windows) →P.160
  - Specifying Paper in the Printer Driver (Mac OS) →P.277

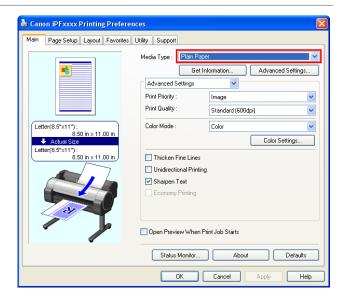

3 Send the print job.

- Printing in Windows →P.23
- Printing from Mac OS →P.23
- Load the sheet. (See "Loading Sheets in the Printer.") → P.392

The printer now starts printing the print job.

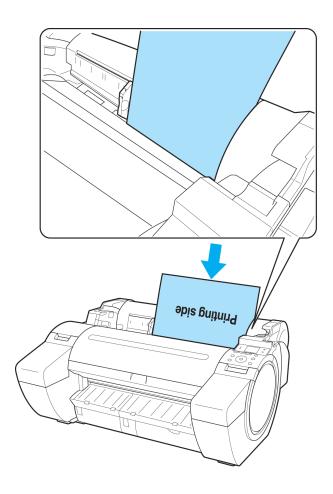

#### **Printing in Windows**

Print from the application menu.



 We recommend exiting unnecessary applications before printing. Running several applications while printing may interrupt the transfer of print data and affect printing quality.






After confirming that the printer is selected in the dialog box, click Print or OK to start printing.



 The appearance of the dialog box varies depending on the software application. In most cases, the dialog box includes basic printing options and enables you to choose the printer, specify the range of pages, number of copies, and so on.

Example: Print dialog box displayed by the application

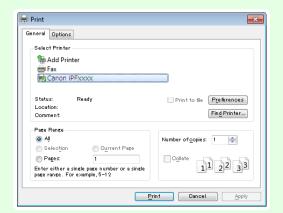

 If another printer is selected, select the printer you want to use under Select Printer or in the dialog box displayed after clicking Printer.

Settings for many printing methods (including enlarged or reduced printing, borderless printing, and so on) are displayed in the printer driver dialog box. There are two ways to access the printer driver dialog box, as follows.

- From the application (See "Accessing the Printer Driver Dialog Box from Applications.") >P.164
- From the operating system menu (See "Accessing the Printer Driver Dialog Box from the Operating System Menu .") →P.165

### **Printing from Mac OS**

Print from the application menu after registering the printer.



 We recommend exiting unnecessary applications before printing. Running several applications while printing may interrupt the transfer of print data and affect printing quality.

#### Registering the printer

The printer needs to be registered in Print & Scan (identified as Printers & Scanners or Print & Fax in other versions of Mac OS X) in **System Preferences** before printing.

For instructions on registering the printer, see "Configuring the Printer Driver Destination." (>P.492)



During this setup process, the printer will not be listed among available printers if it is off or disconnected.

Printing from Mac OS iPF680

#### Printing from the application software


1

In the application software, select **Print** from the **File** menu to display the dialog box for printing conditions.




• This dialog box includes basic printing options and enables you to choose the printer, specify the range of pages, number of copies, and so on.

2 Select the printer in the **Printer** list.

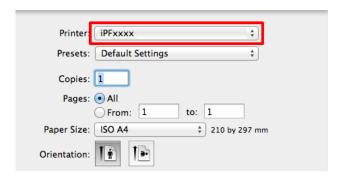

Click **Print** to start printing.

As shown in the following illustration, you can switch to other panes in this dialog box to complete settings for various methods of printing, including enlarged and reduced printing, borderless printing, and so on.

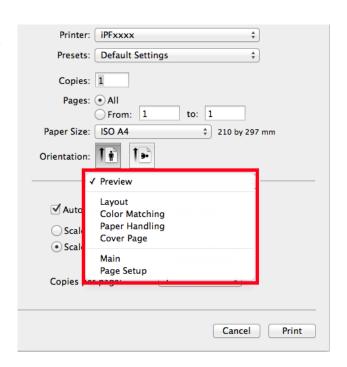

## Canceling print jobs

Canceling Print Jobs from the Control Panel	25
Canceling Print Jobs from Windows	26
Canceling Print Jobs from Mac OS	26


### **Canceling Print Jobs from the Control Panel**

To cancel printing or reception of print jobs, press the **Stop** button on the Control Panel.




When you press the **Stop** button during printing, printer operation varies depending on the current status.

If you press the **Stop** button before printing starts
 Pressing the **Stop** button before printing starts will display a confirmation message. To cancel the print job, select **Yes**.

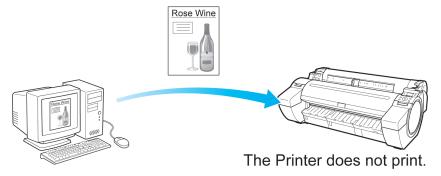

#### • If you press the **Stop** button during printing

Pressing the **Stop** button during printing will display a confirmation message. To cancel the print job immediately, select **Yes**.

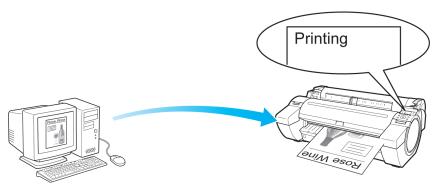


The printer stops immediately.

#### **Canceling Print Jobs from Windows**


In the printer window, you can cancel jobs that are being sent to the printer.

Using **imagePROGRAF Status Monitor**, you can cancel print jobs that have already been received by the printer or that are currently being printed.

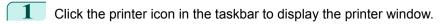




- You can proceed from the folder for configuring the printer settings in the OS you are using.
   For example, in Windows 7, open the **Devices and Printers** window from the **start** menu and double-click the printer icon.
- Right-click the job to cancel and select Cancel.

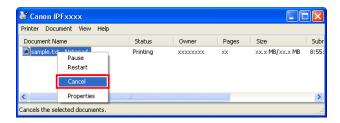

- If the job to cancel is not shown in the printer window (that is, if the print data has already been received by the printer), double-click the taskbar icon to display **imagePROGRAF Status Monitor**.
- 4 On the **Printer Status** sheet, click **Cancel Job**.

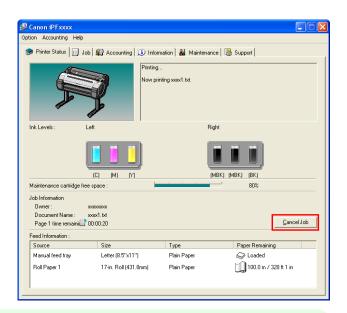



The screen may differ slightly depending on the model you are using.


### **Canceling Print Jobs from Mac OS**

In the printer window, you can cancel jobs that are being sent to the printer.

Otherwise, you can cancel jobs from imagePROGRAF Printmonitor if they have been received by the printer or are currently being printed.




- Print jobs are shown in the printer window while they are being sent from the computer. After transmission, jobs are not displayed even during printing.
- Print jobs are displayed in the imagePROGRAF Printmonitor window from the moment the printer starts receiving the
  print data until the moment printing is finished. They are not displayed before print data is sent to the printer, even if the
  computer has started preparing the print data.
- Click the printer icon in the **Dock** to display the printer window.
- Either click × for the job to cancel printing or select the job to cancel printing and then click **Delete** to delete the job.

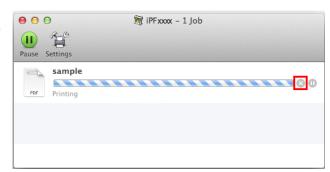

If there are no jobs to stop in the printer window (if sending the print data to the printer has finished), either click **Settings**, **Utility**, and then **Open Printer Utility**, or click **Utility** to open the imagePROGRAF Printmonitor.



Select the print job to cancel and click to delete the print job.

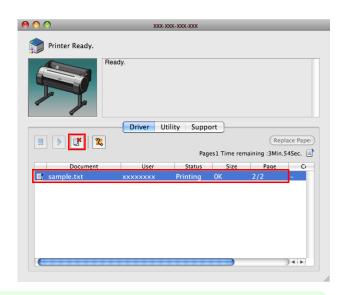



The screen may differ slightly depending on the model you are using.

The job sent to the printer is canceled.



Exit imagePROGRAF Printmonitor. In the printer window, click **Resume** or **Resume Printer**.



• Always follow these steps if you cancel print jobs from imagePROGRAF Printmonitor. If you do not restart job processing, the next job cannot be printed.

Pausing Printing

# **Pausing Printing**

#### **Pausing Printing**

During printing, if you set **Pause Print** in the Control Panel menu to **On**, printing is stopped at that point and the printer enters a state in which printing is paused. (See "Control Panel Display.") →P.438

Printing from the job queue is not possible in this state.

To restore normal operation after this state, set Pause Print to Off.



- In the following cases, the status is cleared even if you do not set Pause Print to Off, and printing from the job queue resumes.
  - When paper is advanced
  - When you execute Chg. Paper Type in the Paper Menu
- During printing, on the **Tab Selection screen** of the Control Panel, press 

  ✓ or ▶ to select the Job tab (::::).





- If the Tab Selection screen is not displayed, press the Menu button.
- Press the **OK** button.
  The **Job Menu** is displayed.
- Press ▲ or ▼ to select Pause Print, and then press the OK button.
- Press ▲ or ▼ to select **On** or **Off**, and then press the **OK** button.

# Memo

## iPF680

User's Guide

Basic Printing Workflow

15

# **Enhanced Printing Options**

Choosing Paper for Printing	32
Printing Photos and Office Documents	33
Printing CAD Drawings	43
Adjusting Images	51
Printing enlargements or reductions	65
Printing at full size	76
Borderless Printing	87
Printing banners or at other non-standard sizes	97
Tiling and multiple pages per sheet	110
Centering originals	126
Conserving roll paper	135
Checking Images Before Printing	144
Other useful settings	145

Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633

301119 5,138

Choosing	Paper	for	<b>Printing</b>

Choosing a Paper for Printing	
Specifying Paper in the Printer Driver	
→ Specifying Paper in the Printer Driver (Windows)	
→ Specifying Paper in the Printer Driver (Mac OS)	277

#### **Choosing a Paper for Printing**

Select the appropriate media type from the printer control panel or printer driver to match the paper loaded in the printer. The appropriate media type differs between the case of genuine Canon paper or Canon feed confirmed paper and the case of paper other than Canon feed confirmed paper. Select the media type by following the description below. For information on how to select the media type in the printer control panel, see Changing the Type of Paper Paper and for information on how to select the media type in the printer driver, see Specifying Paper in the Printer Driver (Windows) Paper or Specifying Paper in the Printer Driver (Mac OS) Paper (Mac OS)



• If you use paper other than Canon feed confirmed paper, Canon provides absolutely no guarantees regarding print quality or paper feed properties.



- Genuine Canon paper and Canon feed confirmed paper are detailed in Paper Reference Guide.
- An error message is displayed on the printer Control Panel if the media type specified in the printer driver does not match the media type specified in the printer. Although you can print under these conditions, the printing results may not be suitable.
- Genuine Canon paper or Canon feed confirmed paper
   For genuine Canon paper or Canon feed confirmed paper, select the settings that are optimized for that type of paper. For more information on the settings for genuine Canon paper or Canon feed confirmed paper, see "Displaying the Paper Reference Guide." >P.363

### **Specifying Paper in the Printer Driver**

If you replace the paper, complete the printer driver settings for the paper type and size.

For instructions on configuring paper settings in the printer driver, refer to the following topics, as appropriate for your computer and operating system.

- Specifying Paper in the Printer Driver (Windows) →P.160
- Specifying Paper in the Printer Driver (Mac OS) →P.277

Printing Photos and Images

## **Printing Photos and Office Documents**

Printing Photos and Images	33	
Printing Photos and Images (Windows)		
Printing Photos and Images (Mac OS)		
Printing Office Documents	37	
Printing Office Documents (Windows)	37	
Printing Office Documents (Mac OS)		
Jsing PosterArtist to Compose Originals4		

#### **Printing Photos and Images**

By selecting the following **Print Target** from **Easy Settings** of the printer driver, you can easily configure the printing of illustrations and photos.

	Print Target	Description
SRGB	Photo (Color)	Print photographic images from digital cameras with an optimal setting.
PBCDS	Poster	An optimal setting for posters. Print in vivid colors with impact and high saturation.
	Faithful Color Reproduction	Print with minimum color difference. Suitable for printing scanner images and when print results are too vivid.



Depending on the Media Type setting, some Print Target options may not be available.



You can check the settings values for each print target by clicking View Settings.



• You can also fine-tune these values as needed. (Advanced Settings)
For details on Advanced Settings, see "Giving Priority to Particular Graphic Elements and Colors for Printing." >P.58

For instructions on printing photos and images, refer to the following topics, as appropriate for your computer and operating system.

- Printing Photos and Images (Windows) →P.33
- Printing Photos and Images (Mac OS) →P.35

### **Printing Photos and Images (Windows)**

This topic describes how to print photos based on the following example.


- · Document: Photo image from a digital camera
- Page size: 10×12 inches (254.0×304.8 mm)
- · Paper: Roll
- Paper type: Canon Premium Glossy Paper 2 280
- Roll paper width: 10 inches (254.0 mm)



Choose **Print** in the application menu.

34

- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

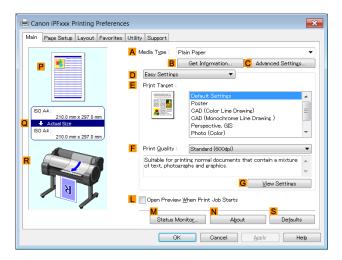


In the A Media Type list, select the type of paper that is loaded. In this case, click Canon Premium Glossy Paper 2 280.

In the A Media Type, choose the type of paper used for printing, such as Glossy Paper, Canon Coated Paper, and so on. Make sure the paper you select is loaded in the printer.




- The paper type setting in the printer driver and related software (as well as on the Control Panel) is updated
  when you install the Media Configuration Tool from the User Software CD-ROM or if you change paper information by using the Media Configuration Tool. For details, see "Media Configuration Tool (Windows)." 

  >P.404
- 5 After confirming that DEasy Settings is selected, click Photo (Color) in the EPrint Target list.

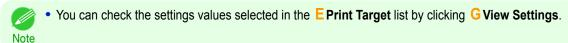

Click the **Page Setup** tab to display the **Page Setup** sheet.

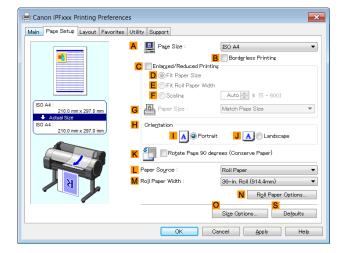

- 10 In the A Page Size list, click the size of the original as specified in the application. In this case, click 10"x12".
- Select and click a roll paper in the LPaper Source list.
- Select the width of the loaded roll in the MRoll Paper Width list—in this case, 10-in. Roll (254.0mm).

- Specify additional printing conditions.

  For details on available printing conditions, see "Printer Driver Settings ." >P.158
- Confirm the print settings and print as desired.



• For instructions on confirming print settings, see "Confirming Print Settings ." →P.161


### **Printing Photos and Images (Mac OS)**

This topic describes how to print photos based on the following example.

- Document: Photo image from a digital camera
- Page size: 10×12 inches (254.0×304.8 mm)
- Paper: Roll paper
- Paper type: Canon Premium Glossy Paper 2 280
- Roll paper width: 10 inches (254.0 mm)
- 1 Choose Page Setup from the application menu to display the Page Attributes dialog box.



 The configuration method varies depending on the OS and application software you are using.
 If Page Setup is displayed in the application menu, the settings are configured by opening the Page Attributes dialog box from Page Setup.

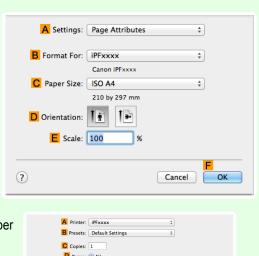

to: 1

‡ 210 by 297 mm


Paper Size: ISO A4

entation:

If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

- 2 Select the printer in the BFormat for list.
- In the C Paper Size list, click the size of the original. In this case, click 10"x12".
- 4 Click **FOK** to close the dialog box.
- **5** Choose **Print** in the application menu.

6 Access the Main pane.

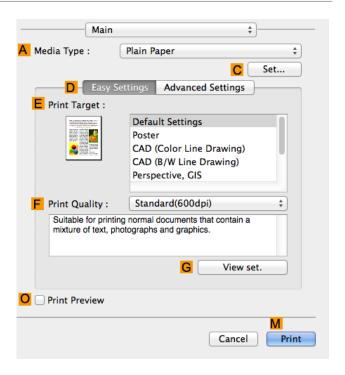

In the A Media Type list, select the type of paper that is loaded. In this case, click Canon Premium Glossy Paper 2 280.

Make sure the paper you select is loaded in the printer.




- The types of paper indicated in the printer driver and related software (as well as on the Control Panel) are
  updated when you install the Media Configuration Tool from the User Software CD-ROM or if you change paper information by using the Media Configuration Tool. For details, see "Media Configuration Tool
  (Mac OS)." >P.418
- 8 After confirming that DEasy Settings is selected, click Photo (Color) in the EPrint Target list.



- For information on settings optimized for printing photos and images, see "Printing Photos and Images." 

  P.33
- You can check the settings values selected in the **EPrint Target** list by clicking **GView set.**.
- Make your selection in the F Print Quality list.

10 Access the Page Setup pane.

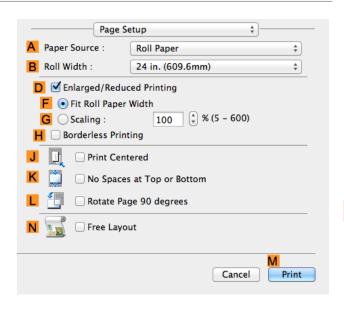

- 11 Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, 10 in. (254.0mm) is selected.
- Specify additional printing conditions.

  For details on available printing conditions, see "Printer Driver Settings ." →P.276
- Confirm the print settings, and then click MPrint to start printing.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.279

# **Printing Office Documents**

By selecting **Office Document** from **Easy Settings** of the printer driver, you can easily configure settings for printing office documents.

Print Target	Description
Office Document	Setting optimized for printing general office documents such as materials for distribution so that they can be viewed easily.



- You can check the settings values for each print target by clicking View Settings.
- You can also fine-tune these values as needed. (Advanced Settings)
  For details on Advanced Settings, see "Giving Priority to Particular Graphic Elements and Colors for Printing." >P.58


# **Printing Office Documents (Windows)**

This topic describes how to print office documents based on the following example.

- Document: Office document created using word-processing or spreadsheet programs
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- · Paper: Sheets
- · Paper type: Plain Paper


38

- Paper size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

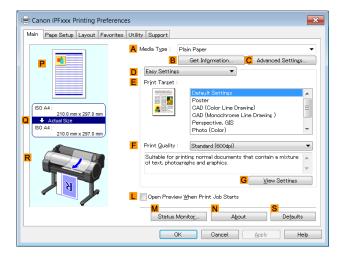

- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 5 After confirming that DEasy Settings is selected, click Office Document in the EPrint Target list.
  - You can check the settings values selected in the **EPrint Target** list by clicking **GView Settings**.

    Note
- 6 Click the **Page Setup** tab to display the **Page Setup** sheet.

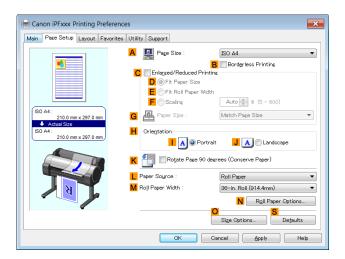

- 1 In the A Page Size list, click the size of the original as specified in the application. In this case, click ISO A4.
- 8 Click Manual in the L Paper Source list.
- 9 Specify additional printing conditions.
  For details on available printing conditions, see "Printer Driver Settings." →P.158

10 Confirm the print settings and print as desired.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# **Printing Office Documents (Mac OS)**

This topic describes how to print office documents based on the following example.


- Document: Office document created using word-processing or spreadsheet programs
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- · Paper: Sheets
- Paper type: Plain Paper
- Paper size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- 1 Choose Page Setup from the application menu to display the Page Attributes dialog box.



- 2 Select the printer in the B Format for list.
- In the C Paper Size list, click the size of the original. In this case, click ISO A4 for Paper Tray (Large Margins).
- Click **FOK** to close the dialog box.
- 5 Choose **Print** in the application menu.

40


6 Access the Main pane.

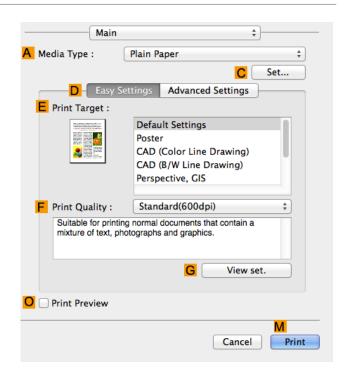

- 7 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 8 After confirming that DEasy Settings is selected, click Office Document in the EPrint Target list.



- Make your selection in the F Print Quality list.
- 10 Access the Page Setup pane.

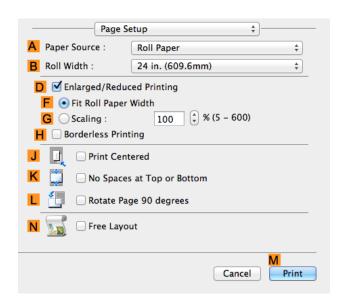

- 11 Click Manual in the A Paper Source list.
- Specify additional printing conditions.

  For details on available printing conditions, see "Printer Driver Settings ." →P.276

13 Confirm the print settings, and then click M Print to start printing.




• For tips on confirming print settings, see "Confirming Print Settings ." →P.279

## **Using PosterArtist to Compose Originals**


You can print a variety of source documents from word-processing or spreadsheet programs or screen shots from web browsers after composing an original with them using PosterArtist.

This topic describes how to use PosterArtist to compose originals from multiple applications, creating a poster layout for printing.

- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then open the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows).") →P.164
- 3 Make sure the Main sheet is displayed.

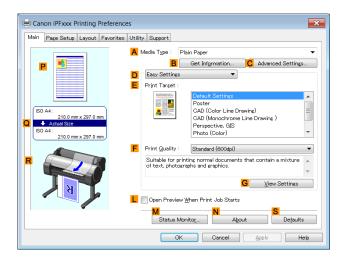

4 Click the **Layout** tab to display the **Layout** sheet.

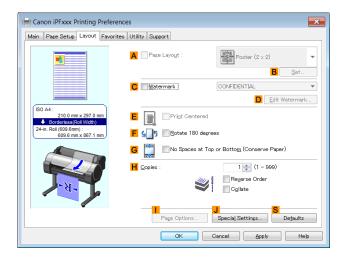


5 Select the A Page Layout check box.

6 Click in the Edit Using PosterArtist in the A Page Layout list.



- This function cannot be used with a 64-bit version OS.
- When you attempt to print, PosterArtist starts up and the PageCapture window is displayed. (At this point, the document will not be printed yet.)

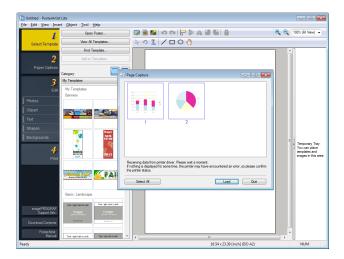

- 8 Choose the page to load in PosterArtist.
- 9 Edit and rearrange the image in the PosterArtist window as desired.
  Without closing the PosterArtist window, repeat steps 1-8 to arrange originals from multiple applications on the same page.



- For details on how to edit and sort images, refer to the PosterArtist Manual.
- 10 Print from the PosterArtist menu.

iPF680 Printing CAD Drawings

# **Printing CAD Drawings**

Printing CAD Drawings	43
Printing Line Drawings and Text	43
Printing Line Drawings and Text (Windows)	
Printing Line Drawings and Text (Mac OS)	45
Printing from AutoCAD	47
Specifying Colors and Printing CAD Drawings	
HP-GL/2 Printing	50

### **Printing CAD Drawings**

Using this printer, you can print fine lines and text clearly and sharply. It's easy to produce highly precise drawings from CAD applications.

For instructions on CAD printing, refer to the following topics, as appropriate for your computer and operating system.

- Printing Line Drawings and Text (Windows) →P.44
- Printing Line Drawings and Text (Mac OS) →P.45

### **Printing Line Drawings and Text**

Printing is easy when you simply choose the type of original to print.

Easy Settings

Simply choose the printing application in the list for optimal printing results.

Print Target

Choose presets that match the type of document to be printed.

#### Print targets for line drawings and text

	Print Target	Description
	CAD (Color Line Drawing)	Settings optimized to print intricate lines in CAD drawings clearly.
	CAD (Monochrome Line Drawing )	Settings optimized to print black lines in CAD drawings clearly.
8	Perspective, GIS	Settings optimized for printing 3D CAD drawings, perspective drawings, and maps, including GIS maps.



You can check the settings values for each print target by clicking View Settings.

• You can also fine-tune these values as needed. ( Advanced Settings )
For details on Advanced Settings, see "Giving Priority to Particular Graphic Elements and Colors for Printing." →P.58

Print Quality

Choose the print quality.

The printing mode is determined by a combination of the print quality and resolution.

Print Quality	Description
Highest	A setting for printing at the highest resolution when quality is most important. Printing takes longer and consumes more ink than in other modes, but this mode offers superior printing quality.
High	Choose this setting to print at high resolution when quality is most important.  Printing takes longer and consumes more ink than in <b>Standard</b> or <b>Fast</b> modes, but this mode offers exceptional printing quality.
Standard	Choose this setting to print at standard resolution when quality and speed are both important. Printing takes less time than in <b>Highest</b> or <b>High</b> mode.
Fast	Choose this setting to print faster.  Printing in draft mode can help you work more efficiently when checking layouts.


For instructions on printing line drawings and text, refer to the following topics, as appropriate for your computer and operating system.

- Printing Line Drawings and Text (Windows) →P.44
- Printing Line Drawings and Text (Mac OS) →P.45

### **Printing Line Drawings and Text (Windows)**

This topic describes how to print line drawings based on the following example.

- Document: CAD drawing
- Page size: A3 (297.0 × 420.0 mm [11.7 × 16.5 in])
- Paper: Roll paperPaper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])
- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

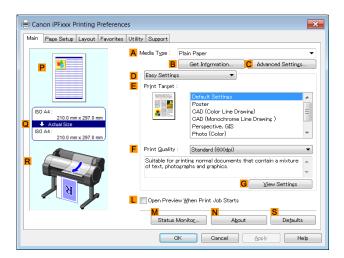


4 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.

After confirming that DEasy Settings is selected, click CAD (Color Line Drawing) or CAD (Monochrome Line Drawing) in the EPrint Target list.



- You can check the settings values selected in the **EPrint Target** list by clicking **GView Settings**.
- Click the Page Setup tab to display the Page Setup sheet.

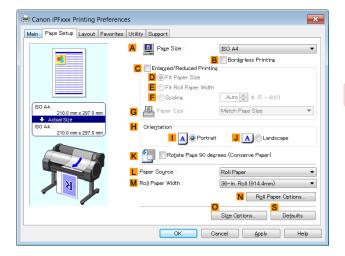

- 7 In A Page Size, click the size of the original as specified in the application. In this case, click ISO A3.
- Select and click a roll paper in the **L** Paper Source list.
- 9 Select the width of the loaded roll in the MRoll Paper Width list—in this case, ISO A2/A3 Roll (420.0mm).
- Specify additional printing conditions.

  For details on available printing conditions, see "Printer Driver Settings ." →P.158
- 11 Confirm the print settings and print as desired.




• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# **Printing Line Drawings and Text (Mac OS)**


This topic describes how to print line drawings based on the following example.

- Document: CAD drawing
- Page size: A3 (297.0 × 420.0 mm [11.7 × 16.5 in])
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

Choose Page Setup from the application menu to display the Page Attributes dialog box.

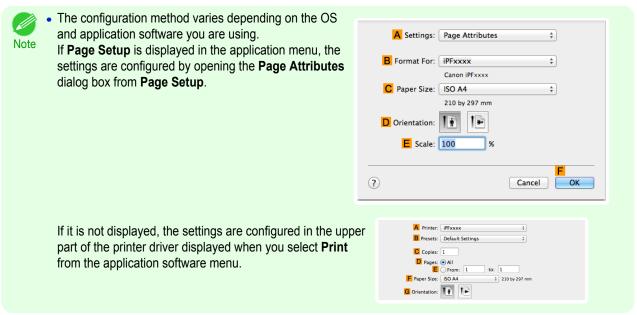

- 2 Select the printer in the B Format for list.
- In the C Paper Size list, click the size of the original. In this case, click ISO A3.
- 4 Click **FOK** to close the dialog box.
- 5 Choose **Print** in the application menu.
- 6 Access the Main pane.

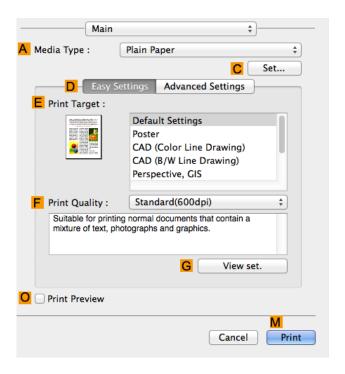


46

7 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.

After confirming that DEasy Settings is selected, click CAD (Color Line Drawing) or CAD (Monochrome Line Drawing) in the EPrint Target list.



- You can check the settings values selected in the EPrint Target list by clicking GView set.
- Make your selection in the F Print Quality list.
- 10 Access the Page Setup pane.

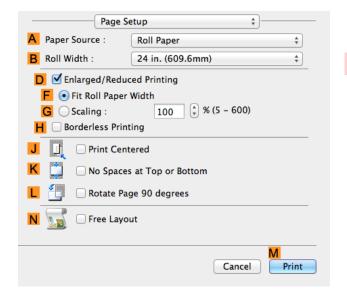

- 11 Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, ISO A2/A3 (420.0mm) is selected.
- Specify additional printing conditions.

  For details on available printing conditions, see "Printer Driver Settings ." →P.276
- 14 Confirm the print settings, and then click M Print to start printing.



- For tips on confirming print settings, see "Confirming Print Settings." →P.279
- You can conserve roll paper by configuring settings suitable for the document.
   For details on how to conserve paper and print, see "Conserving Roll Paper by Rotating Originals 90 Degrees." → P.136

# **Printing from AutoCAD**

Printer Driver Optimization Module for AutoCAD is software for printing optimally from AutoCAD with the printer driver. By optimally controlling the processing resolution of raster data and the memory to be used in image processing of AutoCAD, printing superior in reliability and productivity is realized.

If you install Printer Driver Optimization Module for AutoCAD on a computer on which supported AutoCAD is installed, it will be installed automatically.




- Printer Driver Optimization Module for AutoCAD is applied automatically when you print from AutoCAD, and optimal
  printing is performed.
- Printer Driver Optimization Module for AutoCAD can be used on Windows.

### Confirming the Installation of Printer Driver Optimization Module for AutoCAD

You can confirm whether Printer Driver Optimization Module for AutoCAD is installed by the following method.

- 1 From the **File** menu of AutoCAD, select **Print**.
  - The **Printing** dialog box is displayed.

    Printer Driver Optimization Module for AutoCAD is installed if in **Plotter** of **Printer/plotter** this is displayed: **iPFxxxx Optimized driver by Canon Inc.**.

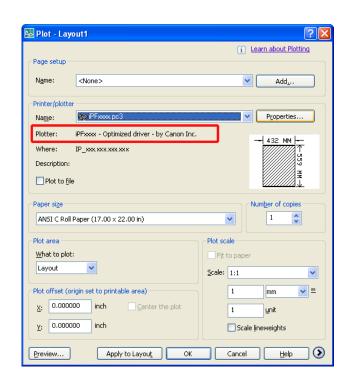

### Installation of Printer Driver Optimization Module for AutoCAD

If Printer Driver Optimization Module for AutoCAD is not installed, install it by the following method.

- Insert User Software CD-ROM in the CD-ROM drive and start the installer.
- 2 In the Setup Menu window, click Install Individual Software.
- Click Install of Printer Driver Optimization Module for AutoCAD.
- Follow the instructions on the screen.

# **Specifying Colors and Printing CAD Drawings**

You can complete color settings when **Color (CAD)** is selected in **Color Mode**. Colors can be adjusted before printing as follows when **Color Compatibility** is selected.



Color (CAD) is displayed when you select Advanced Settings on the Main sheet and set Print Priority to Line Drawing/Text.

#### **Color Compatibility**

Color Setting Item

Color Setting	Description	
Color (CAD) 1	Print in standard colors.	
Color (CAD) 2	Print with approximate colors emulating Canon iPF750, iPF755, iPF650, iPF655, iPF760, iPF765.	

Color Setting	Description
Color (CAD) 3	Print with approximate colors emulating Canon iPF500, iPF600, iPF700, iPF510, iPF610, iPF710, iPF605, iPF720, iPF810, iPF820, iPF815, iPF825.
Color (CAD) 4	Print emulating the HP Designjet 500/800, in colors resembling colors produced by these printers.
Color (CAD) 5	Print emulating the HP Designjet T1100, in colors resembling colors produced by this printer.



• If you have selected Color (CAD) 2, Color (CAD) 3, Color (CAD) 4, or Color (CAD) 5, it is not possible to match the colors and image quality produced by the specified printer exactly.

For instructions on configuring Color Compatibility, refer to the following topics.


Specifying Colors and Printing CAD Drawings (Windows) →P.49

### **Specifying Colors and Printing CAD Drawings (Windows)**


You can complete color settings when Color (CAD) is selected in Color Mode.




- Color (CAD) is displayed when you select Advanced Settings on the Main sheet and set Print Priority to Line Drawing/Text.
- 1 Click start > Printers and Faxes (or Printers ).
- Select the printer, and then display the printer properties dialog box.

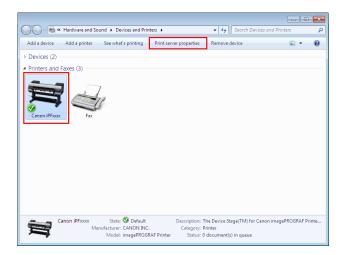

Click the **Device Settings** tab to display the **Device Settings** sheet.

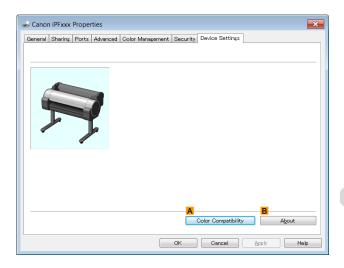

Click A Color Compatibility to display the Color Compatibility dialog box.

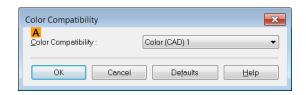



Select the desired color settings in the A Color Compatibility list.



For details on color settings, see "Specifying Colors and Printing CAD Drawings." >P.48

For printing instructions, refer to the following topic.

Choosing the Document Type and Printing Conditions →P.60

### **HP-GL/2 Printing**

This printer supports printing using the original Canon GARO printer control language and printing using HP-GL/2 and HP RTL emulation to print in colors resembling the colors produced by printers from other companies.

The printer automatically switches to the corresponding processing depending on whether a GARO or HP-GL/2 and HP RTL emulation job is received.



GARO is an abbreviation of Graphic Arts Language with Raster Operations.

- Note HP-GL/2 is an abbreviation of Hewlett-Packard Graphics Language/2, and HP RTL is an abbreviation of Hewlett-Packard Graphics Language/2. ard Raster Transfer Language.
  - Emulation is good for obtaining results similar to printing on other printers.

When printing from applications that support HP-GL/2 output, specify HP-GL/2 in the application's plotter output settings.

HP-GL/2 and HP RTL emulation related settings such as the printer to emulate are configured from the printer Control Panel. (Refer to "Menu Structure →P.450" and "Menu Settings →P.456")



- For instructions on configuring these settings, refer to the software documentation. It may not be possible to print jobs with excessively large amounts of data correctly.
- For information on CAD colors other than HP-GL/2 and HP RTL emulation, see "Menu Settings." →P.456

# **Adjusting Images**

Adjusting the Color in the Printer Driver	51
Fine-Tuning Colors of Photos and Images (Windows)	. 53
Fine-Tuning Colors of Photos and Images (Mac OS)	. 55
Giving Priority to Particular Graphic Elements and Colors for Printing	58
Choosing the Document Type and Printing Conditions (Windows)	. 60
Choosing the Document Type and Printing Conditions (Mac OS)	

# **Adjusting the Color in the Printer Driver**

Color settings specified in the application for your documents are essentially given priority over other settings for each print job, but further color adjustment is possible in the printer driver.

#### Color Mode

Choose how the printer driver processes color, as desired.

The available options vary depending on the color mode.

Color Mode	Description	Color Adjustment
Color	Print in color.	You can select the color balance and color matching functions.
Monochrome	Print in grayscale.	You can adjust the color balance.
Color (CAD)	A color mode optimized for line drawings (2D-CAD). Lines in red, yellow, and other colors are printed especially clearly.	You can adjust the color balance.
Monochrome (BK ink)	A color mode for printing line drawings. Only Black ink is used.	You can adjust the color balance.
Monochrome Bitmap	Print in a color mode for CAD, using Color Ink, with all non-white portions printed in black.	No color adjustment is supported.
No color correction (*1)	Prints without performing color-matching in the printer driver.	You can adjust the color balance.

<sup>\*1:</sup> If No color correction is selected, the Matching sheet / Matching pane is not displayed.

#### Color Adjustment

You can adjust colors separately for images, graphics, and text documents.

Adjustment Item	Description	
Cyan	Fine-tune color tones by adjusting the levels of <b>Cyan</b> , <b>Magenta</b> , and <b>Yellow</b> .	
Magenta		
Yellow		
Gray Tone	Adjust the grayscale, in a range from cool, blue tones to warm, red tones.	
Brightness	Adjust the brightness of printed images while keeping the darkest and lightest portions intact.	
Contrast	Adjust the contrast of the darkest and lightest portions relative to each other. For soft gradation, decrease the contrast. For hard gradation, increase the contrast.	
Saturation	Adjust the level of color saturation, in a range from subdued to vivid.	



Click **Object Adjustment** to open the **Object Adjustment** dialog box, which allows you to select the color adjustment target from **Image**, **Graphics**, and **Text**.

#### Matching

You can choose the color-matching mode and method.

By adjusting the color-matching mode and method, you can make printed colors match the colors of on-screen images more closely.



• If No color correction is selected under Color Mode, the Matching cannot be changed.

Matching Mode	Description	Remarks
Driver Matching Mode	Enables printing of optimal color tones using a driver specific color profile.	You should normally select this mode.
ICC Matching Mode	Enables color matching using ICC profiles. Select this if you want to print by specifying the input profile, printer profile, and matching method in detail.	This allows you to use ICC profiles for digital cameras and scanners, ICC profiles created using the profile creation tool, etc.
Host ICM Mode	Enables color matching by the host computer using the ICM function of Windows. Select this if you want to print from an application that supports the ICM function.	Available when using Windows.
ColorSync	Enables color matching by using the ColorSync function of Mac OS. Select this if you want to perform soft proofing using ColorSync before printing.	Available when using Mac OS. To select <b>ColorSync</b> , choose <b>ColorSync</b> on the <b>Color Matching</b> panel.

Matching Method	Description	Remarks
Auto	Color-matching optimized for images, graphics, or text.	The available options and their display order vary depending on your selected color-matching mode, as well as the operating system.
Perceptual	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.	
Colorimetric	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.	
Colorimetric (No Wht-pnt Corr)	The processing method of color-matching is identical to Colorimetric. Use this when you want to further reproduce the target paper material color of the image data. Generally, this also is called absolute colorimetric	
Saturation	Color-matching optimized for printing posters, etc., vividly.	


For instructions on color adjustment, refer to the following topics, as appropriate for your computer and operating system.

- Fine-Tuning Colors of Photos and Images (Windows) →P.53
- Fine-Tuning Colors of Photos and Images (Mac OS) →P.55


### Fine-Tuning Colors of Photos and Images (Windows)

You can specify your own print settings instead of using the **Print Target** presets. This topic describes how to fine-tune the color tone of photos before printing.

- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

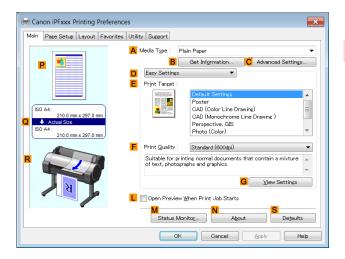


- In the A Media Type list, select the type of paper that is loaded.
- Click DAdvanced Settings to switch the print mode.

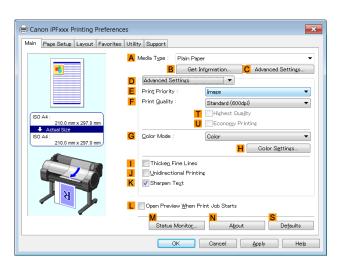

6 Click Color in the G Color Mode list.

7 Click H Color Settings to display the Color Settings dialog box.

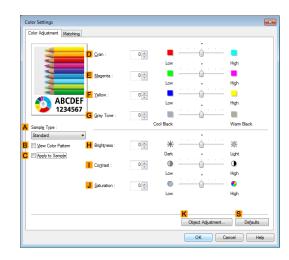


8 On the Color Adjustment sheet, adjust the color tones, brightness, and so on as desired.

Adjustment Item	Description	
D Cyan	Fine-tune color tones by adjusting the levels of Cyan, Magenta, and Yellow.	
E Magenta		
F Yellow		
G Gray Tone	Adjust the gray tone. Choose cool black (tinged with blue), pure black (neutral), warm black (tinged with red), and so on.	
H Brightness	Adjust the brightness of printed images while keeping the darkest and lightest portions intact.	
Contrast	Adjust the contrast of the darkest and lightest portions relative to each other. For soft gradation, decrease the contrast. For hard gradation, increase the contrast.	
<b>J</b> Saturation	Adjust the level of color saturation, in a range from subdued to vivid.	



- Click Object Adjustment to open the Object Adjustment dialog box, which allows you to select the color adjustment target from Image, Graphics, and Text.
- 9 Close the Color Settings dialog box.
- Click the Page Setup tab to display the Page Setup sheet.

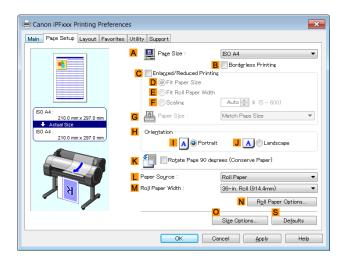

Confirm the settings of A Page Size, L Paper Source, and so on.

12 Confirm the print settings and print as desired.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.161


# Fine-Tuning Colors of Photos and Images (Mac OS)

You can specify your own print settings instead of using the **Print Target** presets. This topic describes how to fine-tune the color tone of photos before printing.

1 Choose Page Setup from the application menu to display the Page Attributes dialog box.



 The configuration method varies depending on the OS and application software you are using.
 If Page Setup is displayed in the application menu, the settings are configured by opening the Page Attributes dialog box from Page Setup.

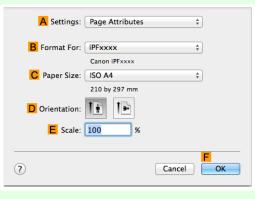


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.




- 2 Select the printer in the BFormat for list.
- Choose the original size in the C Paper Size list.
- Click **FOK** to close the dialog box.
- 5 Choose **Print** in the application menu.

6 Access the Main pane.

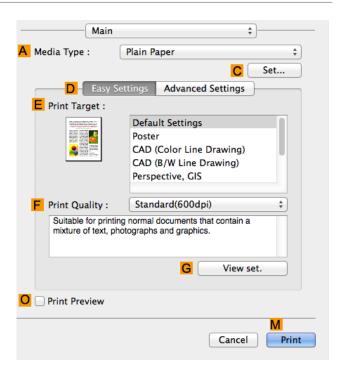


- 7 In the A Media Type list, select the type of paper that is loaded.
- 8 Click DAdvanced Settings to switch the print mode.

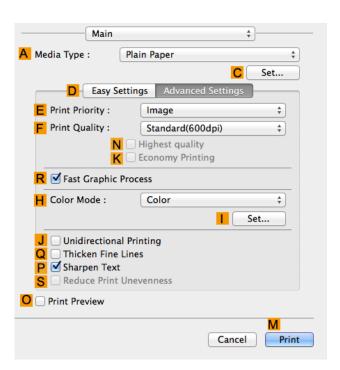

9 Click Color in the H Color Mode list.

Click | Set to display the Color Settings dialog box.

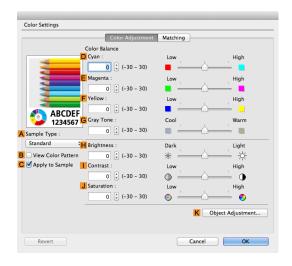


On the Color Adjustment pane, adjust the color tones, brightness, and so on as desired.

Adjustment Item	Description
D Cyan	Fine-tune color tones by adjusting the levels of Cyan, Magenta, and Yellow.
E Magenta	
F Yellow	
G Gray Tone	Adjust the gray tone. Choose cool black (tinged with blue), pure black (neutral), warm black (tinged with red), and so on.
H Brightness	Adjust the brightness of printed images while keeping the darkest and lightest portions intact.
Contrast	Adjust the contrast of the darkest and lightest portions relative to each other. For soft gradation, decrease the contrast. For hard gradation, increase the contrast.
<b>J</b> Saturation	Adjust the level of color saturation, in a range from subdued to vivid.



- Click Object Adjustment to open the Object Adjustment dialog box, which allows you to select the color adjustment target from Images, Graphics, and Text.
- 12 Click **OK** to close the **Color Settings** dialog box.

13 Access the Page Setup pane.

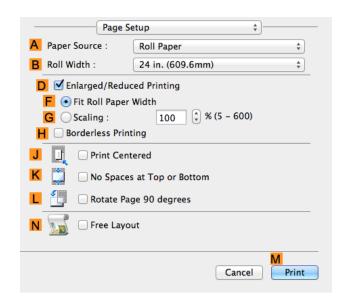

Confirm the print settings, and then click M Print to start printing.



For tips on confirming print settings, see "Confirming Print Settings." →P.279

### Giving Priority to Particular Graphic Elements and Colors for Printing

You can specify detailed print settings as desired for the quality level, colors, and other criteria.

#### Advanced Settings

For printing results that appear just as expected for your original, you can specify which graphic elements and colors to prioritize for printing.



Easy Settings are also available, providing convenient presets. To use the presets, simply choose the printing
application.

For details on **Easy Settings**, refer to the following topics.

- Printing Photos and Images →P.33
- Printing Line Drawings and Text →P.43
- Printing Office Documents →P.37

#### Print Priority

Choose the graphic elements that you want to emphasize for printing.

Print Priority (*1)	Description
Image	A setting for posters or other documents made up mainly of photos or images, or for emphasizing photos or images in printed documents.
Line Drawing/Text	Choose this setting for CAD drawings made up mainly of intricate lines, or wall newspapers and other notices with a large amount of text. Suitable for emphasizing detailed text in printed documents.  However, the quality may not be sufficient when printing photos or images that require a lot of color coverage. In this case, choose <b>Image</b> instead.
Office Document	Choose this setting for better legibility of documents combining text and graphics, such as documents and presentation material created with typical office applications.

<sup>\*1:</sup> Options suitable for the selected type of paper are listed under Print Priority.

### Print Quality

Choose the print quality.

The printing mode is determined by a combination of the print quality and resolution.

Print Quality (*1)	Description	Print Priority
Highest	A setting for printing at the highest resolution when quality is most important. Printing takes longer and consumes more ink than in other modes, but this mode offers superior printing quality.	Image
High	Choose this setting to print at high resolution when quality is most important.  Printing takes longer and consumes more ink than in <b>Standard</b> or <b>Fast</b> modes, but this mode offers exceptional printing quality.	Image Line Drawing/Text
Standard	Choose this setting to print at standard resolution when quality and speed are both important. Printing takes less time than in <b>Highest</b> or <b>High</b> mode.	Image Line Drawing/Text Office Document
Fast	Choose this setting to print faster.  Printing in draft mode can help you work more efficiently when checking layouts.	Image Line Drawing/Text

<sup>\*1:</sup> Options suitable for the selected Print Priority are listed under Print Quality.

#### Color Settings

Setting Item	Options	Description
Color Mode (*1)	Color Monochrome Color (CAD) Monochrome (BK ink) Monochrome Bitmap No color correction	Choose whether to print in color or monochrome. (See "Adjusting the Color in the Printer Driver.") →P.51
Color Adjustment	Cyan Magenta Yellow Gray Tone Brightness Contrast Saturation	You can adjust the levels of cyan, magenta, and yellow as well as the brightness, contrast, saturation, and gray tones.  If you choose Monochrome or Monochrome (BK ink) in Color Mode only Brightness and Contrast can be adjusted.  Image, Graphics, and Text are available as Object Adjustment options.
Color-Matching Modes	Driver Matching Mode ICC Matching Mode Host ICM Mode (Windows) ColorSync (Mac OS)	Choose the color-matching mode.
Color-Matching Method (*2)	Auto Perceptual Colorimetric Saturation	Choose the color-matching method. The available options vary depending on your selection in <b>Color-Matching Mode</b> .
Gamma	2.2 1.8	You can adjust the gradation of intermediate tones in an image. You can select only after <b>Driver Matching Mode</b> has been selected in <b>Matching Mode</b> .

<sup>\*1:</sup> Options suitable for the selected Print Priority are listed under Color Mode.

<sup>\*2:</sup> The order of options displayed varies depending on the operating system.

#### · Enhancing printing quality

Setting Item	Description
Highest quality	This prints at the highest resolution. Printing takes longer and consumes more ink than in other modes, but this mode offers superior printing quality.
Thicken Fine Lines	Prints making fine lines appear thicker.
Sharpen Text	Choose this option to print intricate text more distinctly.
Reduce Print Unevenness (*1)	Choose this option to counteract uneven printing.
Unidirectional Printing	Prints by suppressing color variations and misaligned ruled lines. However, this takes more time than regular printing.
Economy Printing	When this mode is selected, less ink is consumed than in regular printing, but the quality is diminished.  Select this mode if you want to conserve ink when checking drawings, for example. Depending on the <b>Media Type</b> and <b>Print Quality</b> settings, this mode may not be available.

<sup>\*1:</sup>Displayed in Mac OS.



 To print at a higher level of quality, in the printer driver, choose High or Highest in Print Quality, and select the Unidirectional Printing check box.


For instructions on specifying the print quality and color settings before printing, refer to the following topics, as appropriate for your computer and operating system.

- Choosing the Document Type and Printing Conditions (Windows) → P.60
- Choosing the Document Type and Printing Conditions (Mac OS) → P.62

### **Choosing the Document Type and Printing Conditions (Windows)**

You can specify your own print settings instead of using the **Print Target** presets. As an example, this topic describes how to print CAD drawings as clearly as possible, with sharp lines and text.

- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

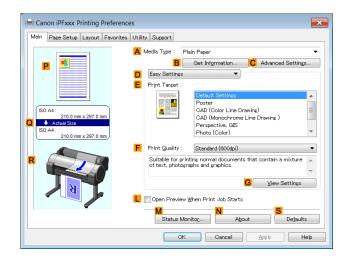


60

4 In the A Media Type list, select the type of paper that is loaded.

61

Click DAdvanced Settings to switch the print mode.

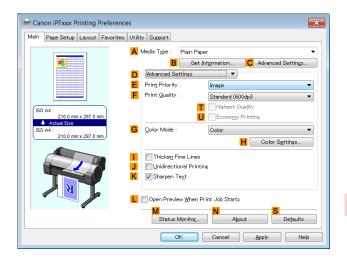


- 6 Click Line Drawing/Text in the E Print Priority list.
- 7 Click High (1200dpi) in the F Print Quality list.




8 Click Color (CAD) in the G Color Mode list.

Note

To adjust the color, click H Color Settings.

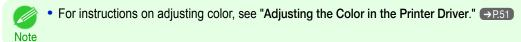

- 10 Select the KSharpen Text check box.
- Click the Page Setup tab to display the Page Setup sheet.

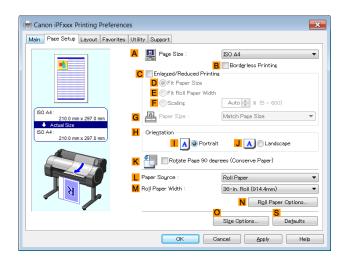

- 12 Confirm the settings of A Page Size, L Paper Source, and so on.
- 13 Confirm the print settings and print as desired.



For tips on confirming print settings, see "Confirming Print Settings ." →P.161


# **Choosing the Document Type and Printing Conditions (Mac OS)**

You can specify your own print settings instead of using the **Print Target** presets. This topic describes how print photographic images in monochrome.

1 Choose Page Setup from the application menu to display the Page Attributes dialog box.




 The configuration method varies depending on the OS and application software you are using.
 If Page Setup is displayed in the application menu, the settings are configured by opening the Page Attributes dialog box from Page Setup.

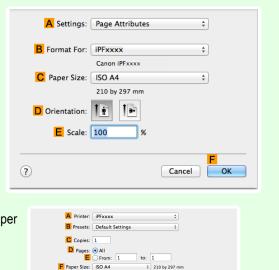


G Orientation:

If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

- 2 Select the printer in the B Format for list.
- Choose the original size in the C Paper Size list.
- 4 Click **FOK** to close the dialog box.
- 5 In the application menu, choose **Print**.
- 6 Access the Main pane.

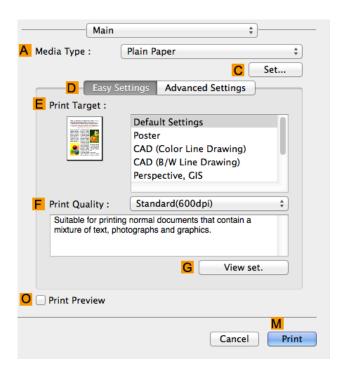

- In the A Media Type list, select the type of paper that is loaded.
- 8 Click DAdvanced Settings to switch the print mode.

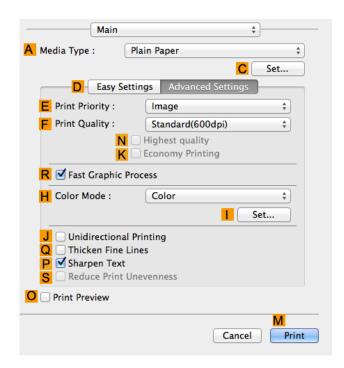


- 9 Click Image in the EPrint Priority list.
- 10 Click High (600dpi) in the F Print Quality list.



- 11 Click Monochrome in the H Color Mode list.
- 12 To adjust the brightness and contrast, click | Set.



13 Access the Page Setup pane.

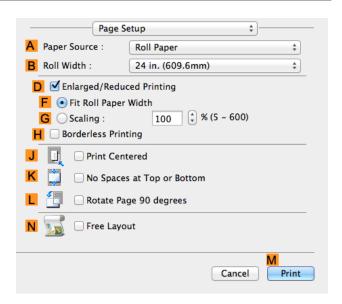

Confirm the print settings, and then click M Print to start printing.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.279


# Printing enlargements or reductions

Resizing Originals to Match the Paper Size	65
Resizing Originals to Match the Paper Size (Windows)	
Resizing Originals to Fit the Roll Width	67
Resizing Originals to Fit the Roll Width (Windows)	
Resizing Originals to Fit the Roll Width (Mac OS)	
Resizing Originals by Entering a Scaling Value	71
Resizing Originals by Entering a Scaling Value (Windows)	
Resizing Originals by Entering a Scaling Value (Mac OS)	

### **Resizing Originals to Match the Paper Size**

You can freely adjust the size of originals by enlarging or reducing them as desired.

- Enlarged/Reduced Printing
   Enlarge or reduce the original in the printer driver, as desired.
- Fit Paper Size
   Enlarge or reduce the original to match the size of the paper you are using.

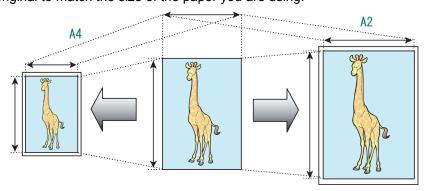


For instructions on printing with resizing to fit the paper size, refer to the following topics.

Resizing Originals to Match the Paper Size (Windows) →P.65



 To print with resizing to fit the paper size on Mac OS, use Scale to fit paper size in the Paper Handling panel provided by the OS.

For more information, see the Mac OS User Manual.

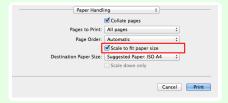

 For better printing results when enlarging photos from a digital camera in TIFF or JPEG format, use an imageediting application software such as Adobe Photoshop to specify an image resolution of 150 dpi or more at actual size.


# **Resizing Originals to Match the Paper Size (Windows)**

This topic describes how to enlarge originals before printing to match the paper size, based on the following example.


Document: Any Type

66

- Page size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])
- 1 Choose **Print** in the application menu.
- 2 Select the printer in the dialog box, and then open the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") →P.164
- 3 Make sure the **Main** sheet is displayed.

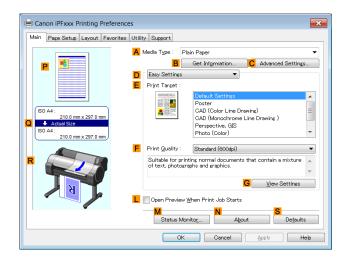

- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 5 Select the printing application in the **EPrint Target** list.
- 6 Click the Page Setup tab to display the Page Setup sheet.

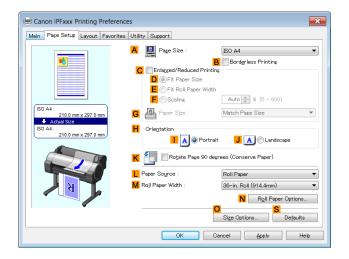

- Select and click a roll paper in the LPaper Source list.
- 8 Select the width of the loaded roll in the MRoll Paper Width list—in this case, ISO A2/A3 Roll (420.0mm).
- In the A Page Size list, click the size of the original as specified in the application. In this case, click ISO A4.
- 10 Select the CEnlarged/Reduced Printing check box.
- 11 Select the DFit Paper Size check box.

- 12 Click ISO A3 in the GPaper Size list.
- 13 Confirm the print settings and print as desired.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# **Resizing Originals to Fit the Roll Width**


You can freely adjust the size of originals by enlarging or reducing them as desired.

### Enlarged/Reduced Printing

Enlarge or reduce the original in the printer driver, as desired.

### • Fit Roll Paper Width

Enlarge or reduce the original as a whole to match the roll paper width, as desired.

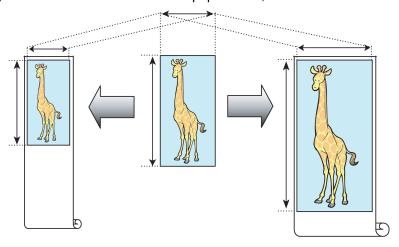


# **Resizing Originals to Fit the Roll Width (Windows)**


This topic describes how to enlarge originals before printing to match the roll width, based on the following example.

- Document: Any type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)
- · Paper: Roll
- Paper type: Plain Paper
- Roll paper width: 16 inches (406.4 mm)
- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications.") >P.164

3 Make sure the **Main** sheet is displayed.

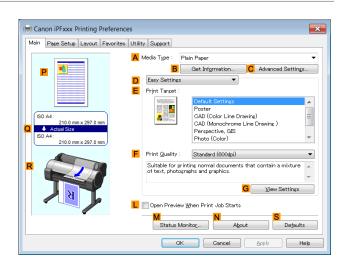

- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 5 Select the printing application in the EPrint Target list.
- 6 Click the **Page Setup** tab to display the **Page Setup** sheet.

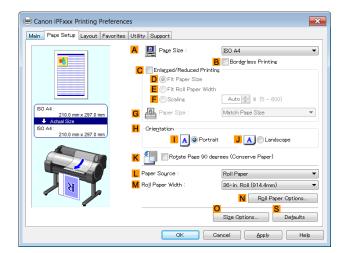


- Select and click a roll paper in the LPaper Source list.
- In the A Page Size list, click the size of the original as specified in the application. In this case, click ISO A4 or Letter (8.5"x11").

9 Select the CEnlarged/Reduced Printing check box.



 If the C Enlarged/Reduced Printing check box is not displayed on the Page Setup sheet, clear the B Borderless Printing check box.

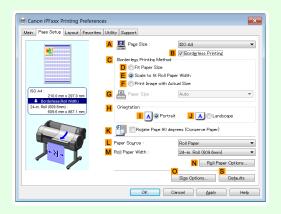

10 Click E Fit Roll Paper Width.



- After you click **E** Fit Roll Paper Width, the Information dialog box is displayed. Select the width of the loaded roll in the Roll Paper Width list and click **OK**.
- Make sure the roll paper width you specify matches the width of the loaded roll.
- 11 Confirm the print settings and print as desired.




• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# Resizing Originals to Fit the Roll Width (Mac OS)


This topic describes how to enlarge originals before printing to match the roll width, based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- · Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: 16 inches (406.4 mm)

1 Choose Page Setup from the application menu to display the Page Attributes dialog box.

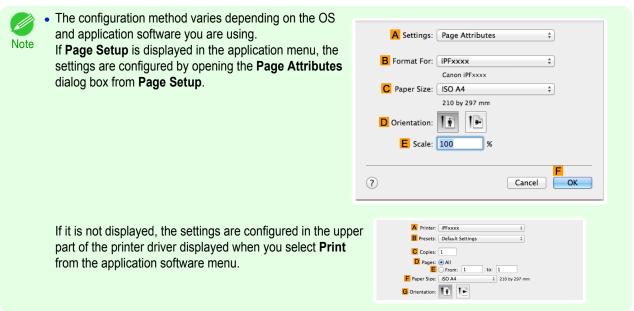


- 2 Select the printer in the **B** Format for list.
- In C Paper Size, click the size of the original. In this case, click ISO A4.
- 4 Click **FOK** to close the dialog box.
- 5 Choose **Print** in the application menu.
- 6 Access the Main pane.

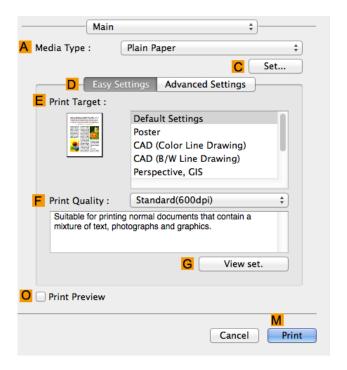

- 1 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 8 Make your selection in the EPrint Target list.

- Make your selection in the F Print Quality list.
- 10 Access the Page Setup pane.

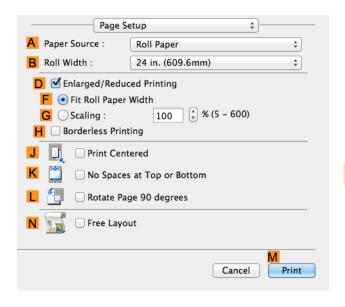

- Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, 16 in. (406.4mm) is selected.
- 13 Select the DEnlarged/Reduced Printing check box.
- 14 Click F Fit Roll Paper Width.
- Confirm the print settings, and then click M Print to start printing.



For tips on confirming print settings, see "Confirming Print Settings ." →P.279

# Resizing Originals by Entering a Scaling Value


You can freely adjust the size of originals by enlarging or reducing them as desired.

#### Enlarged/Reduced Printing

Enlarge or reduce the original in the printer driver, as desired.

#### Scaling

Enlarge or reduce originals by a particular amount, as desired.

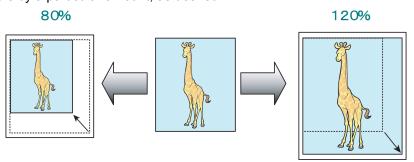

For instructions on entering a scaling value to resize originals, refer to the following topics, as appropriate for your computer and operating system.

- Resizing Originals by Entering a Scaling Value (Windows) →P.72
- Resizing Originals by Entering a Scaling Value (Mac OS) →P.73



 For better printing results when enlarging photos from a digital camera in TIFF or JPEG format, use an imageediting application software such as Adobe Photoshop to specify an image resolution of 150 dpi or more at actual size.


### **Resizing Originals by Entering a Scaling Value (Windows)**

This topic describes how to enlarge originals before printing by entering a scaling value, based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- · Paper: Roll paper
- · Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])




- In borderless printing, you cannot resize originals by entering a scaling value.
- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

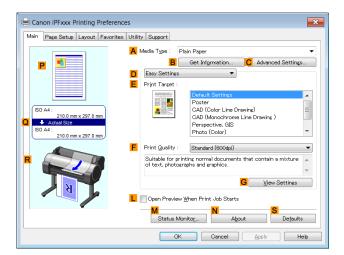

- 4 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- Select the printing application in the **EPrint Target** list.

6 Click the Page Setup tab to display the Page Setup sheet.

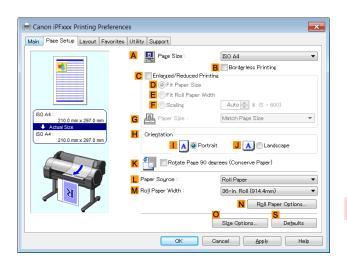

- 7 Select and click a roll paper in the LPaper Source list.
- 8 Select the width of the loaded roll in the MRoll Paper Width list—in this case, ISO A2/A3 Roll (420.0mm).
- In the A Page Size list, click the size of the original as specified in the application. In this case, click ISO A4.
- 10 Select the CEnlarged/Reduced Printing check box.
- 11 Click ISO A4 in the G Paper Size list.
- 12 Click F Scaling and enter 120.



- You can specify enlargement that exceeds the paper size, but in this case, the portions off the bottom and right edges of the paper will not be printed.
- If the original size after enlargement or reduction is smaller than the paper size, the original is printed in the upper-left corner. In this case, you can center originals by selecting E Print Centered on the Layout sheet.



13 Confirm the print settings and print as desired.




For tips on confirming print settings, see "Confirming Print Settings ." →P.161


# Resizing Originals by Entering a Scaling Value (Mac OS)

This topic describes how to enlarge originals before printing by entering a scaling value, based on the following example.

Document: Any Type

- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])
- 1 Choose Page Setup from the application menu to display the Page Attributes dialog box.

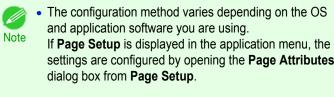

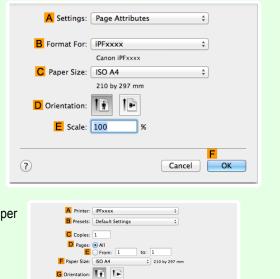


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

- 2 Select the printer in the B Format for list.
- 3 In C Paper Size, click the size of the original. In this case, click ISO A4.
- 4 Click **FOK** to close the dialog box.
- 5 Choose **Print** in the application menu.
- 6 Access the Main pane.



- 7 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 8 Make your selection in the EPrint Target list.
- Make your selection in the F Print Quality list.
- 10 Access the Page Setup pane.

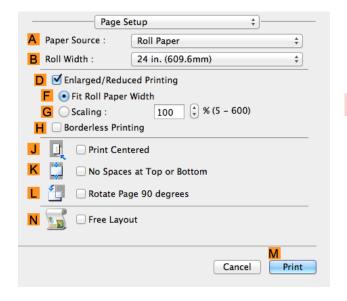

- Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, ISO A2/A3 (420.0mm) is selected.
- Select the DEnlarged/Reduced Printing check box.
- 14 Click G Scaling and enter 120.



- You can specify enlargement that exceeds the paper size, but in this case, the portion off the edge of the paper will not be printed.
- If the original size after enlargement or reduction is smaller than the paper size, the original is printed in the upper-left corner. In this case, you can center originals by selecting the J Print Centered check box.
- 15 Confirm the print settings, and then click M Print to start printing.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.279

Printing on Oversize Paper iPF680

# Printing at full size

Printing on Oversize Paper	
Printing at Full Size (Windows)	
Borderless Printing at Actual Size	
Borderless Printing at Actual Size (Windows)	
Borderless Printing at Actual Size (Mac OS)	83

## **Printing on Oversize Paper**

You can print all areas of the original at full scale by selecting the paper size from **Oversize** (sizes where the margins needed for printer operation have been added to the page size). We recommend when printing with a focus on image.




If you prepare an original for printing without a margin and print it on paper of regular size, the image near the edge will
not be printed.

#### Oversize

When printing on standard paper sizes, printing is performed by taking the margins necessary for printer operations inside the region of the original. (See "Print Area.") >P.631 For example, printing the A4 size (210 x 297 mm) original shown in Figure (b) gives the result as shown in Figure (a).

However, if **Oversize** paper is selected, printing is performed by taking the margins necessary for printer operations outside of the region of the original to give the result as shown in Figure (c).

The A4 size print as shown in Figure (b) can then be obtained by trimming the margins from the periphery after printing.

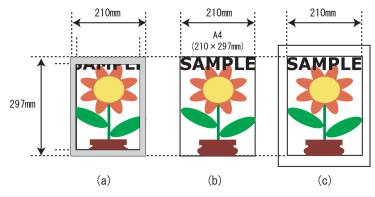



- When printing on Oversize paper, load paper larger than the page size—a size that includes the margin required by the printer.
  - Sheets: Load paper that is at least 10 mm (0.39 in) wider and 28 mm (1.10 in) higher than the page size
  - Rolls:Load paper that is at least 10 mm (0.39 in) wider and 10 mm (0.39 in) higher than the page size



- Paper larger than the maximum size supported by the printer cannot be used as paper for oversized printing.
   (See "Paper Sizes.") →P.360
- Oversized printing (selecting Oversize in Page Size) is only available in Windows.
- If you are performing oversized printing in Mac OS, you need to configure printing on non-standard paper sizes.
- To specify a non-standard paper size in oversized printing, register the paper size as a Custom Paper Size. Oversized printing is not available with **Custom Size**. (See "Printing on Non-Standard Paper Sizes.") >P.104

iPF680 Printing at Full Size (Windows)


For instructions on oversized printing, refer to the following topics, as appropriate for your computer and operating system.

- Printing at Full Size (Windows) →P.77
- Printing at Full Size (Mac OS) →P.78


### **Printing at Full Size (Windows)**

This topic describes how to print at full size based on the following example. (Oversized Printing)

- Document: Any Type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])
- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

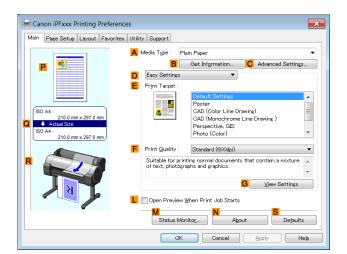

- 4 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- Click the **Page Setup** tab to display the **Page Setup** sheet.

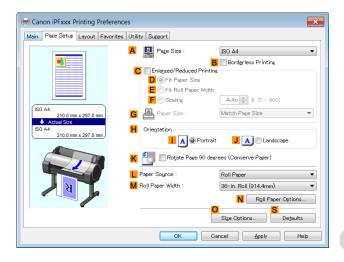

**6** Click **○ Size Options** to display the **Paper Size Options** dialog box.

77

Printing at Full Size (Mac OS) iPF680

- In the Paper Size Options dialog box, select the Oversize check box in Display Series.
- 8 Click **OK** to close the **Paper Size Options** dialog box.
- Olick Oversize ISO A4 in the A Page Size list.
- 10 Select and click a roll paper in the LPaper Source list.
- 11 Select the width of the loaded roll in the MRoll Paper Width list—in this case, ISO A2/A3 Roll (420.0mm).
- 12 Confirm the print settings and print as desired.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

## **Printing at Full Size (Mac OS)**


This topic describes how to print at full size based on the following example. (Oversized Printing)

- · Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- · Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])
- 1 Choose Page Setup from the application menu to display the Page Attributes dialog box.



 The configuration method varies depending on the OS and application software you are using.

If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

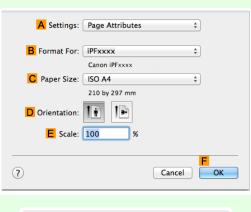


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.




- 2 Select the printer in the BFormat for list.
- In C Paper Size, click the size of the original. In this case, click ISO A4 Oversize.
- 4 Click **FOK** to close the dialog box.
- 78 Choose **Print** in the application menu.

6 Access the Main pane.

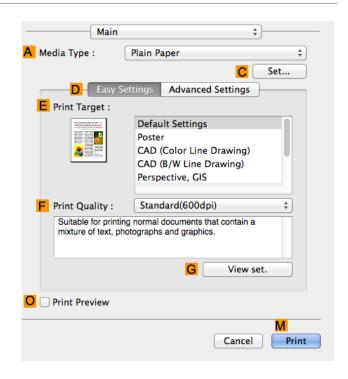

- 7 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 8 Make your selection in the EPrint Target list.
- Make your selection in the F Print Quality list.
- 10 Access the Page Setup pane.

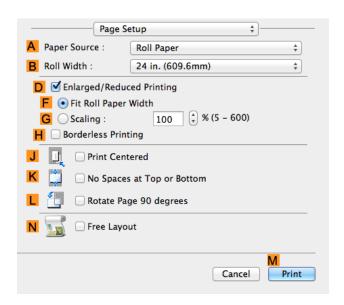

- 11 Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, ISO A2/A3 (420.0mm) is selected.

iPF680

13 Confirm the print settings, and then click M Print to start printing.



For tips on confirming print settings, see "Confirming Print Settings." →P.279

## **Borderless Printing at Actual Size**

Take advantage of borderless printing to print documents such as posters (made up mainly of photos or images) without a surrounding margin, or border.

In regular printing, a margin required by the printer is added around the original. With borderless printing, you can print documents without the margin, so that the printed image covers the entire surface of the paper.

- Borderless printing is only available with rolls.
- Paper you can use for borderless printing is restricted to particular types of paper and rolls of particular widths. (See "Displaying the Paper Reference Guide.") →P.363
- Although it normally prints borderless on the top, bottom, left, and right (4-edge borderless), in the following cases, it becomes borderless only on the left and right (2-edge borderless) because the top and bottom of the printed image are not automatically cut.
  - When paper where the borderless printing is described as two edges only in the Paper Reference Guide (paper where printed image areas cannot be cut cleanly) is selected
  - When the following settings are made in the printer control panel
    - Cutting Mode is Manual
    - CutDustReduct. is On
  - When auto cut is configured as not performed in the printer driver




- Borderless printing is not possible if details such as crop marks and margins are included as data on the periphery of the original.
- If the length of the image to print is short, then since the roll paper is fed out to a prescribed length before cutting in order to prevent cutting problems and ejection problems, the trailing edge of the roll paper might not be printed borderless.
- These features cannot be used in combination with borderless printing; special page layouts, centering originals, and printing cut lines on rolls.
- If Fit Paper Size or Print Image with Actual Size (Windows only) is selected while performing borderless printing, Rotate Page 90 degrees (Conserve Paper) cannot be selected. Note that if borderless printing is possible, then even if the original is rotated 90 degrees, it will be printed by automatically rotating the page by 90 degrees.

Choose the method of borderless printing that suits the original, as desired.

#### Print Image with Actual Size

Prints originals at actual size, without enlarging or reducing them. We recommend when focusing on image quality. You should create the original at a size larger by 3 mm on each side than the paper size.

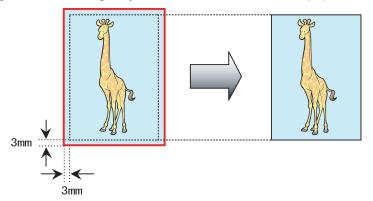



- Not all page sizes are available.
- When performing borderless printing without using Print Image with Actual Size, the image deteriorates slightly because the image is automatically enlarged.

For instructions on borderless printing of photos and images at actual size, refer to the following topics, as appropriate for your computer and operating system.

- Borderless Printing at Actual Size (Windows) →P.81
- Borderless Printing at Actual Size (Mac OS) →P.83

## **Borderless Printing at Actual Size (Windows)**

This topic describes how to print borderlessly at actual size based on the following example.




- When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be uneven at the
  edges. If you require higher image quality, select No from the Automatic Cutting list in the Roll Paper Options
  dialog box. In this case, the paper can be printed without borders on the left and right sides only. Once printed and
  cut, please cut the upper and lower bands with scissors.
- Document: Any type
- Page size: 10×12 inches (254.0×304.8 mm)
- Paper: Roll
- Paper type: Canon Heavyweight Coated Paper
- Roll paper width: 10 inches (254.0 mm)
- Create the original in the source application 3 mm (0.12 in) larger on each side than 254.0×304.8 mm (10 × 12 in) —that is, 260.0×310.8 mm (10.2 × 12.2 in)



- If you can specify the margin, as in Microsoft Word, set the margin at 0 mm. For instructions on specifying the margin, refer to the software documentation.
- The extra 3 mm (0.12 in) on each side will not be printed. Create the original so that it fits inside the paper area to be printed on.
- 2 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164


4 Make sure the **Main** sheet is displayed.

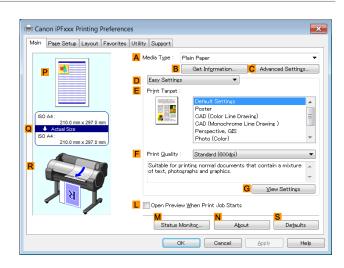

- In the A Media Type list, select the type of paper that is loaded. In this case, click Canon Heavyweight Coated Paper.
- 6 Select the print target in the E Print Target list.




- When you are using paper that takes longer for ink to adhere for borderless printing and the Cutter Unit
  touches printing surfaces that are not dry yet, it may damage the paper or the edge of the document that is
  cut, depending on frequency of use. In this kind of situation, change the ink drying time using the following
  procedure.
  - Click Advanced Settings in Media Type.
  - Select an ink drying time in the list for the Between Pages setting of Drying Time.
- Click the **Page Setup** tab to display the **Page Setup** sheet.

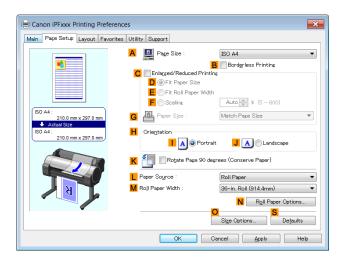

- In the A Page Size list, click the size of the original as specified in the source application. In this case, click 10"x12".
- Select and click a roll paper in the LPaper Source list.

Select the **BBorderless Printing** check box to display the **Information** dialog box.

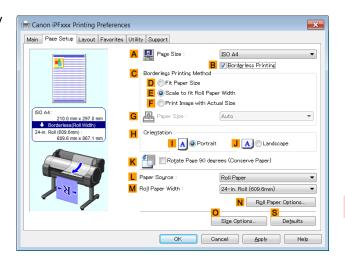

- Select the width of the loaded roll in the Roll Paper Width list—in this case, click 10-in. Roll (254.0mm).
- 12 Click **OK** to close the **Information** dialog box.
- 13 In C Borderless Printing Method, click F Print Image with Actual Size.
- 14 Confirm the print settings and print as desired.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# **Borderless Printing at Actual Size (Mac OS)**

This topic describes how to print borderlessly at actual size based on the following example.



- When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be uneven at the
  edges. If you require higher image quality, select No from the Automatic Cutting list in the Paper Detailed Settings
  dialog box. In this case, the paper can be printed without borders on the left and right sides only. Once printed and
  cut, please cut the upper and lower bands with scissors.
- Document: Any type
- Page size: 10 × 12 inches (254.0×304.8 mm)–Borderless
- Paper: Roll
- Paper type: Canon Heavyweight Coated Paper
- Roll paper width: 10 inches (254.0 mm)

1 Choose Page Setup from the application menu to display the Page Attributes dialog box.




The configuration method varies depending on the OS and application software you are using.

If Page Setup is displayed in the application many the configuration method varies depending on the OS and application software production.

The configuration method varies depending on the OS and application software you are using the configuration method varies depending on the OS and application software you are using the configuration method varies depending on the OS and application software you are using the configuration of the OS and application software you are using the configuration of the OS and application software you are using the configuration of the OS and application method with the configuration of the OS and application method with the configuration of the OS and the O

If Page Setup is displayed in the application menu, the settings are configured by opening the Page Attributes dialog box from Page Setup.

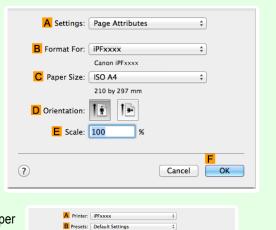

If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.




- 2 Select the printer in the BFormat for list.
- In the C Paper Size list, choose a paper size supported for borderless printing. Here, click 10"x12" Border-less.



- Paper sizes supported for borderless printing are indicated by -Borderless.
- 4 Click **FOK** to close the dialog box.
- 5 In the application, create an original that takes up the entire space of the paper size.
- 6 Choose **Print** in the application menu.


7 Access the Main pane.

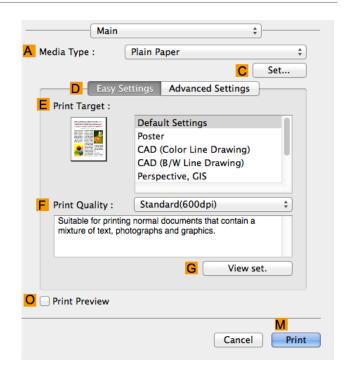

- In the A Media Type list, select the type of paper that is loaded. In this case, click Canon Heavyweight Coated Paper.
- Select the print target in the EPrint Target list.



- When you are using paper that takes longer for ink to adhere for borderless printing and the Cutter Unit
  touches printing surfaces that are not dry yet, it may damage the paper or the edge of the document that is
  cut, depending on frequency of use. In this kind of situation, change the ink drying time in Between Pages in
  the Paper Detailed Settings dialog box.
- 10 Access the Page Setup pane.

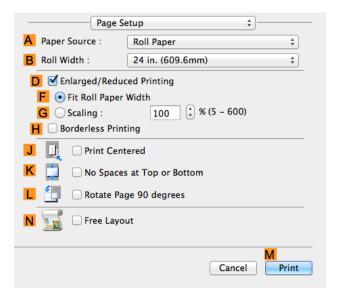

Select and click a roll paper in the A Paper Source list.

Select the paper width of the roll loaded in the printer for B Roll Width. In this case, 10 in. (254.0mm) is selected.

12 Confirm the print settings, and then click M Print to start printing.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.279

# **Borderless Printing**

Borderless Printing on Paper of Equivalent Size	87
Borderless Printing by Resizing Originals to Match the Paper Size (Windows)	
Borderless Printing by Resizing Originals to Fit the Roll Width	90
Borderless Printing by Resizing Originals to Fit the Roll Width (Windows)	
Borderless Printing by Resizing Originals to Fit the Roll Width (Mac OS)	
Borderless Printing at Actual Size	80
Borderless Printing at Actual Size (Windows)	
Borderless Printing at Actual Size (Mac OS)	83

## **Borderless Printing on Paper of Equivalent Size**

Take advantage of borderless printing to print documents such as posters (made up mainly of photos or images) without a surrounding margin, or border.

In regular printing, a margin required by the printer is added around the original. With borderless printing, you can print documents without the margin, so that the printed image covers the entire surface of the paper.

- Borderless printing is only available with rolls.
- Paper you can use for borderless printing is restricted to particular types of paper and rolls of particular widths. (See "Displaying the Paper Reference Guide.") →P.363
- Although it normally prints borderless on the top, bottom, left, and right (4-edge borderless), in the following cases, it becomes borderless only on the left and right (2-edge borderless) because the top and bottom of the printed image are not automatically cut.
  - When paper where the borderless printing is described as two edges only in the **Paper Reference Guide** (paper where printed image areas cannot be cut cleanly) is selected
  - When the following settings are made in the printer control panel
    - Cutting Mode is Manual
    - CutDustReduct. is On
  - When auto cut is configured as not performed in the printer driver




- Borderless printing is not possible if details such as crop marks and margins are included as data on the periphery of the original.
- If the length of the image to print is short, then since the roll paper is fed out to a prescribed length before cutting in order to prevent cutting problems and ejection problems, the trailing edge of the roll paper might not be printed borderless.
- These features cannot be used in combination with borderless printing: special page layouts, centering originals, and printing cut lines on rolls.
- If Fit Paper Size or Print Image with Actual Size (Windows only) is selected while performing borderless printing, Rotate Page 90 degrees (Conserve Paper) cannot be selected. Note that if borderless printing is possible, then even if the original is rotated 90 degrees, it will be printed by automatically rotating the page by 90 degrees.

Choose the method of borderless printing that suits the original, as desired.

#### Fit Paper Size

Enlarge or reduce the original to match the size of the paper you are using.

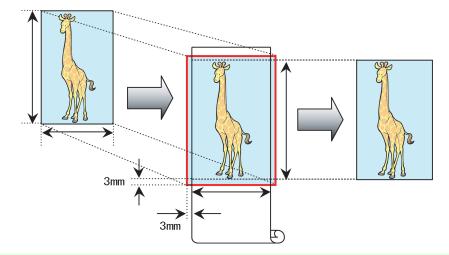




• The printer driver automatically enlarges originals 3 mm (0.12 in) past the dimensions of the paper on each side. The 3 mm portion beyond the edge on each side is not printed.

For instructions on borderless printing of photos, images, and other documents to match the paper size, refer to the following topics, as appropriate for your computer and operating system.

Borderless Printing by Resizing Originals to Match the Paper Size (Windows) →P.88



To perform borderless printing with resizing to fit the paper size on Mac OS, select borderless in Paper Size
and use Scale to fit paper size in the Paper Handling panel provided by the OS.
 For more information, see the Mac OS User Manual.

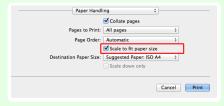

## **Borderless Printing by Resizing Originals to Match the Paper Size (Windows)**

This topic describes how to enlarge originals before borderless printing to match the paper size, based on the following example.




- When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be uneven at the
  edges. If you require higher image quality, select No from the Automatic Cutting list in the Roll Paper Options
  dialog box. In this case, the paper can be printed without borders on the left and right sides only. Once printed and
  cut, please cut the upper and lower bands with scissors.
- Document: Any type
- Page size: 10×12 inches (254.0×304.8 mm)
- Paper: Roll
- Paper type: Canon Heavyweight Coated Paper
- Roll paper width: 10 inches (254.0 mm)

 $oxedsymbol{1}$  In the application, create an original that takes up the entire space of the paper size.




- If you can specify the margin, as in Microsoft Word, set the margin at 0 mm. For instructions on specifying the margin, refer to the software documentation.
- 2 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 4 Make sure the **Main** sheet is displayed.

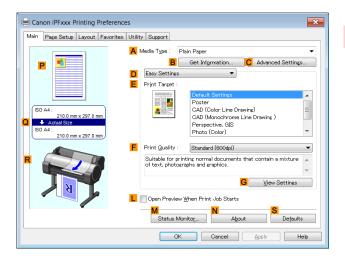


- In the A Media Type list, select the type of paper that is loaded. In this case, click Canon Heavyweight Coated Paper.
- 6 Select the print target in the E Print Target list.



- When you are using paper that takes longer for ink to adhere for borderless printing and the Cutter Unit
  touches printing surfaces that are not dry yet, it may damage the paper or the edge of the document that is
  cut, depending on frequency of use. In this kind of situation, change the ink drying time using the following
  procedure.
  - Click Advanced Settings in Media Type.
  - Select an ink drying time in the list for the Between Pages setting of Drying Time.
- Click the Page Setup tab to display the Page Setup sheet.

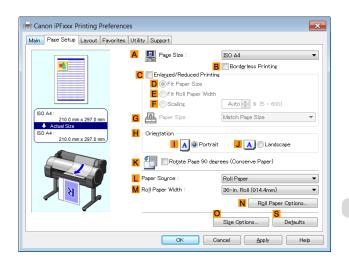

- In the APage Size list, click the size of the original as specified in the application. In this case, click 10"x12".
- Select and click a roll paper in the LPaper Source list.
- Select the **B Borderless Printing** check box to display the **Information** dialog box.

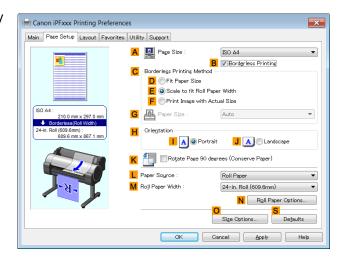

- 11 Select the width of the loaded roll in the Roll Paper Width list—in this case, click 10-in. Roll (254.0mm).
- 12 Click **OK** to close the **Information** dialog box.
- 13 In C Borderless Printing Method, click D Fit Paper Size.
- 14 Click Match Page Size in the GPaper Size list.
- 15 Confirm the print settings and print as desired.



For tips on confirming print settings, see "Confirming Print Settings ." →P.161

## **Borderless Printing by Resizing Originals to Fit the Roll Width**

Take advantage of borderless printing to print documents such as posters (made up mainly of photos or images) without a surrounding margin, or border.

In regular printing, a margin required by the printer is added around the original. With borderless printing, you can print documents without the margin, so that the printed image covers the entire surface of the paper.

- · Borderless printing is only available with rolls.
- Paper you can use for borderless printing is restricted to particular types of paper and rolls of particular widths. (See "Displaying the Paper Reference Guide.") >P.363
- Although it normally prints borderless on the top, bottom, left, and right (4-edge borderless), in the following cases, it becomes borderless only on the left and right (2-edge borderless) because the top and bottom of the printed image are not automatically cut.
  - When paper where the borderless printing is described as two edges only in the Paper Reference Guide (paper where printed image areas cannot be cut cleanly) is selected
  - When the following settings are made in the printer control panel
    - Cutting Mode is Manual
    - CutDustReduct. is On
  - When auto cut is configured as not performed in the printer driver




- Borderless printing is not possible if details such as crop marks and margins are included as data on the periphery of the original.
- If the length of the image to print is short, then since the roll paper is fed out to a prescribed length before cutting in
  order to prevent cutting problems and ejection problems, the trailing edge of the roll paper might not be printed borderless.
- These features cannot be used in combination with borderless printing: special page layouts, centering originals, and printing cut lines on rolls.
- If Fit Paper Size or Print Image with Actual Size (Windows only) is selected while performing borderless printing, Rotate Page 90 degrees (Conserve Paper) cannot be selected. Note that if borderless printing is possible, then even if the original is rotated 90 degrees, it will be printed by automatically rotating the page by 90 degrees.

Choose the method of borderless printing that suits the original, as desired.

### Scale to fit Roll Paper Width

Enlarge or reduce the original as a whole to match the roll paper width.

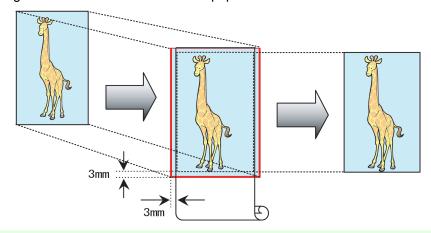



• You can combine this function with rotating pages 90 degrees before printing so that the original width (relative to portrait orientation) matches the roll paper width in borderless printing.

For instructions on borderless printing of photos, images, and other documents to match the roll paper width, refer to the following topics, as appropriate for your computer and operating system.

- Borderless Printing by Resizing Originals to Fit the Roll Width (Windows) →P91
- Borderless Printing by Resizing Originals to Fit the Roll Width (Mac OS) →P.93

## **Borderless Printing by Resizing Originals to Fit the Roll Width (Windows)**

This topic describes how to enlarge originals before borderless printing to match the roll width, based on the following example.




- When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be uneven at the
  edges. If you require higher image quality, select No from the Automatic Cutting list in the Roll Paper Options
  dialog box. In this case, the paper can be printed without borders on the left and right sides only. Once printed and
  cut, please cut the upper and lower bands with scissors.
- Document: Any type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Canon Heavyweight Coated Paper
- Roll paper width: 10 inches (254.0 mm)

In the application, create an original that takes up the entire space of the paper size.




- If you can specify the margin, as in Microsoft Word, set the margin at 0 mm. For instructions on specifying the margin, refer to the software documentation.
- 2 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 4 Make sure the **Main** sheet is displayed.

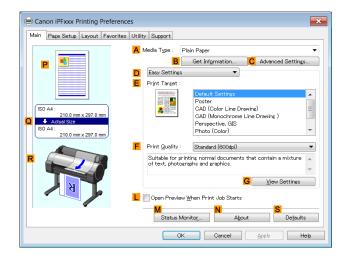


- In the A Media Type list, select the type of paper that is loaded. In this case, click Canon Heavyweight Coated Paper.
- 6 Select the print target in the E Print Target list.



- When you are using paper that takes longer for ink to adhere for borderless printing and the Cutter Unit
  touches printing surfaces that are not dry yet, it may damage the paper or the edge of the document that is
  cut, depending on frequency of use. In this kind of situation, change the ink drying time using the following
  procedure.
  - Click Advanced Settings in Media Type.
  - Select an ink drying time in the list for the Between Pages setting of Drying Time.
- Click the Page Setup tab to display the Page Setup sheet.

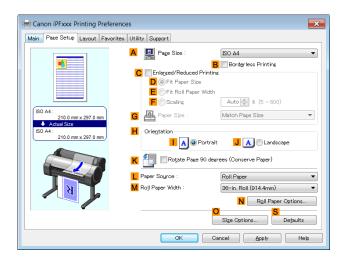

- 8 In the APage Size list, click the size of the original as specified in the application. In this case, click ISO A4.
- Select and click a roll paper in the LPaper Source list.
- Select the **BBorderless Printing** check box to display the **Information** dialog box.

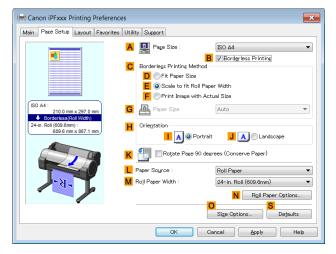

- Select the width of the loaded roll in the Roll Paper Width list—in this case, click 10-in. Roll (254.0mm).
- 12 Click **OK** to close the **Information** dialog box.
- 13 In C Borderless Printing Method, make sure E Scale to fit Roll Paper Width is selected.
- 14 Confirm the print settings and print as desired.




For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# **Borderless Printing by Resizing Originals to Fit the Roll Width (Mac OS)**

This topic describes how to enlarge originals before borderless printing to match the roll width, based on the following example.




- When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be uneven at the edges. If you require higher image quality, select **No** from the **Automatic Cutting** list in the **Paper Detailed Settings** dialog box. In this case, the paper can be printed without borders on the left and right sides only. Once printed and cut, please cut the upper and lower bands with scissors.
- Document: Any type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Canon Heavyweight Coated Paper
- Roll paper width: 10 inches (254.0 mm)

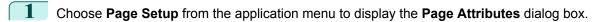



 The configuration method varies depending on the OS and application software you are using.

If Page Setup is displayed in the application menu, the settings are configured by opening the Page Attributes dialog box from Page Setup.

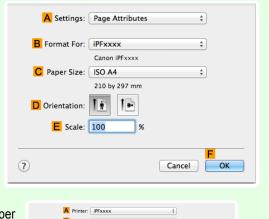

If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.




- 2 Select the printer in the BFormat for list.
- In C Paper Size, click the size of the original. In this case, click ISO A4.



- All sizes are available in borderless printing if you resize originals to fit the roll width.
- 4 Click **FOK** to close the dialog box.
- 5 In the application, create an original that takes up the entire space of the paper size.
- 6 Choose **Print** in the application menu.

95


7 Access the Main pane.

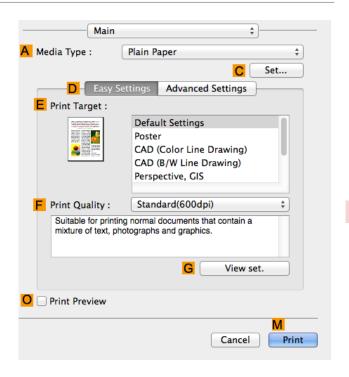

- In the A Media Type list, select the type of paper that is loaded. In this case, click Canon Heavyweight Coated Paper.
- Select the print target in the EPrint Target list.



- When you are using paper that takes longer for ink to adhere for borderless printing and the Cutter Unit
  touches printing surfaces that are not dry yet, it may damage the paper or the edge of the document that is
  cut, depending on frequency of use. In this kind of situation, change the ink drying time in Between Pages in
  the Paper Detailed Settings dialog box.
- 10 Access the Page Setup pane.

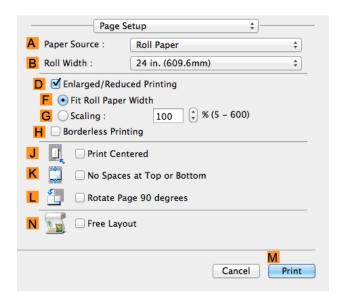

- 11 Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, 10 in. (254.0mm) is selected.

- 13 Select the DEnlarged/Reduced Printing check box.
- Select the H Borderless Printing check box.

  This ensures that F Fit Roll Paper Width is automatically selected in D Enlarged/Reduced Printing.
- 15 Confirm the print settings, and then click M Print to start printing. □



• For tips on confirming print settings, see "Confirming Print Settings ." →P.279

# Printing banners or at other non-standard sizes

Printing Vertical or Horizontal Banners (Large-Format Printing)	97
Printing Vertical or Horizontal Banners (Large-Format Printing; Windows)	
Printing Vertical or Horizontal Banners (Large-Format Printing; Mac OS)	101
Printing on Non-Standard Paper Sizes	104
Printing on Non-Standard Paper Sizes (Windows)	104
Printing on Non-Standard Paper Sizes (Mac OS)	

## **Printing Vertical or Horizontal Banners (Large-Format Printing)**


On this printer, large-format printing of up to 18.0 m is available using rolls.

If you use Print Plug-In for Office or PosterArtist, you can easily print maximum 18.0 m vertical or horizontal banners. (Refer to "Print Plug-In for Officefeatures (Windows)" >P.235 and "Using PosterArtist to Compose Originals" >P.41 .) However, you may not be able to print 18.0 m due to restrictions in the settable document size according to the application software.

### Fit Roll Paper Width

To match the width of vertical and horizontal banners with the width of rolls, use the printer driver function for automatically enlarging/reducing and printing.

For example, if you automatically enlarge a document created with application software such as Microsoft Word, you can print the full width of the roll easily.

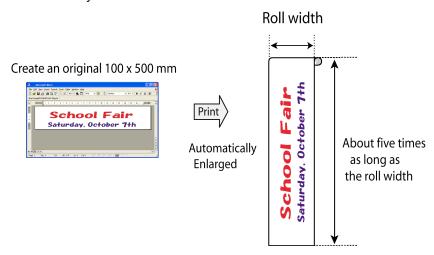

For instructions on printing vertical or horizontal banners, refer to the following topics, as appropriate for your computer and operating system.

- Printing Vertical or Horizontal Banners (Large-Format Printing; Windows) → P.98
- Printing Vertical or Horizontal Banners (Large-Format Printing; Mac OS) →P.101



- Before printing, check how much of the roll paper is left. If you have activated automatic detection of the remaining roll paper, a warning message is displayed when there is not enough roll paper left.
- If not much ink is left, prepare replacement ink tanks.
- To print at a higher level of quality, in the printer driver, choose High or Highest in Print Quality, and choose Unidirectional Printing as the direction of printing.

## **Printing Vertical or Horizontal Banners (Large-Format Printing; Windows)**

By automatic enlargement of a document created with an application software by the printer driver, you can print maximum 18.0 m vertical or horizontal banners.

However, you may not be able to print 18.0 m due to restrictions in the settable document size according to the application software.

This topic describes how to print a banner about five times as long as the roll width based on the following example.

- · Document: A horizontal banner created in Microsoft Word
- Page size: Non-standard (100×500 mm [3.9×19.7 in])
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: 16 in (406.4 mm)


The print procedure is as follows.

- Register a Custom Paper Size in the printer driver.
   Call a non-standard paper size registered in the printer driver with Custom Paper Size.
   Once you register Custom Paper Size, you then can select it repeatedly from the paper size list.
   Custom Paper Size can be set up to 18.0 m.
- 2. In the application, create an original in the size you registered.
- 3. Print the banner, using the settings that correspond to banners.

### Registering a Custom Paper Size

This example describes how to register a paper size that is horizontally elongated and suitable for banners in either horizontal or vertical format.

- Display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from the Operating System Menu .") →P.165
- Click the Page Setup tab to display the Page Setup sheet.

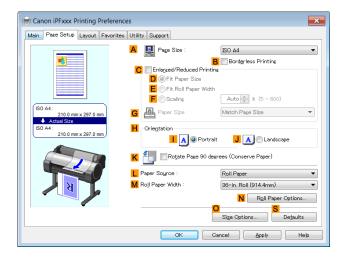

- 3 Select and click a roll paper in the LPaper Source list.
- 4 Click OSize Options to display the Paper Size Options dialog box.
- 5 Enter a desired paper name in Custom Paper Size Name. My Horizontal Banner is used in this example.
- 6 In Units, click mm.
- Under Paper Size, enter 100 in Width and 500 in Height.

- 8 Click Add to add the paper size of My Horizontal Banner.
- Click **OK** to close the **Paper Size Options** dialog box.
- 10 Close the printer driver dialog box.



Although you can even set Custom Size for the paper size, the maximum settable size is 3.2 m. The setting of Custom Size is disabled when you exit the application software.

For more information, see "Printing on Non-Standard Paper Sizes ." →P.104

### Creating the banner in the application

Follow the steps below to create the banner in Microsoft Word using the Custom Paper Size you registered.

- Start Microsoft Word.
- 2 Choose Page Setup from the File menu to display the Page Setup dialog box.
- Under Paper Size, click the Custom Paper Size you registered—My Horizontal Banner in this example.




- If My Horizontal Banner is not listed, make sure this printer is selected as the printer to use.
- In applications such as Microsoft PowerPoint that do not enable you to choose registered paper sizes, use the custom paper size setting in **Custom** and specify 100×500 mm (3.9×19.7 in)
- 4 Set the printing orientation to horizontal.
- 5 Create the banner.

### Printing the banner


Follow these steps to print the banner using the corresponding banner settings.

- 1 Choose **Print** in the Microsoft Word menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

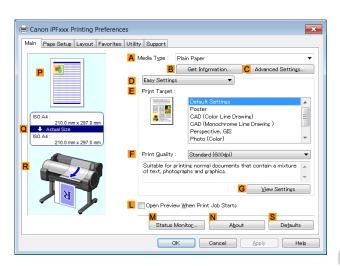

In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.


- After confirming that DEasy Settings is selected, click Poster in the EPrint Target list.
- Click the Page Setup tab to display the Page Setup sheet.

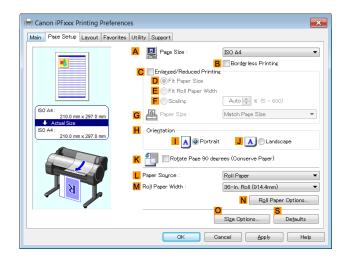

- 7 In the A Page Size list, click the size you registered, My Horizontal Banner.
- 8 Select the CEnlarged/Reduced Printing check box.



 If the C Enlarged/Reduced Printing check box is not displayed on the Page Setup sheet, clear the B Borderless Printing check box.

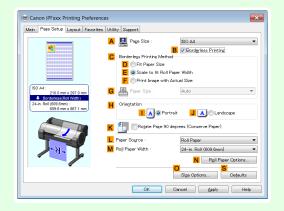


- 9 Select and click a roll paper in the LPaper Source list.
- 10 After you click **E** Fit Roll Paper Width, the Information dialog box is displayed.
- Select the width of the loaded roll in the Roll Paper Width list. In this case, click 16-in. Roll (406.4mm), and then click OK.
- 12 Confirm the print settings and print as desired.




For tips on confirming print settings, see "Confirming Print Settings ." →P.161

If printing is unsuccessful, you may be able to print after completing the following setting.

On the **Layout** sheet, click **J Special Settings** to display the **Special Settings** dialog box.

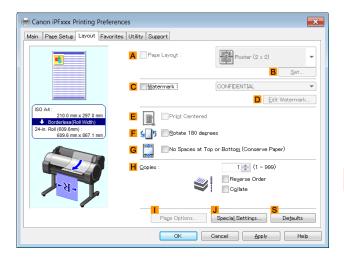

2 In the FineZoom Settings list, click Yes.

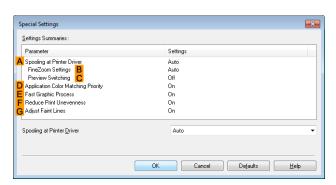

## Printing Vertical or Horizontal Banners (Large-Format Printing; Mac OS)

By automatic enlargement of a document created with an application software by the printer driver, you can print maximum 18.0 m vertical or horizontal banners.

This topic describes how to print a banner about five times as long as the roll width based on the following example.

- Document: An original designed for a horizontal banner
- Page Size: Non-standard (100×500 mm [3.9×19.7 in])
- · Paper: Roll
- Paper type: Plain Paper
- Roll paper width: 16 inches (406.4 mm)

The print procedure is as follows.

- 1. In the application, create an original in the format of a horizontal or vertical banner.
- In Page Setup, register Custom Paper Sizes.
   Once you register Custom Paper Sizes, you then can select it repeatedly from the paper size list.
   Custom Paper Sizes can be set up to 18.0 m.
- Print the banner, using the settings that correspond to banners.



• The following instructions are for OS X v10.7. The method of setting up non-standard paper sizes varies depending on the version and settings of Mac OS X.


### Register a Custom Paper Sizes

This example describes how to register and print using a page size that is horizontally elongated and suitable for banners in either horizontal or vertical format.

- 1 Create the document in the application.
- 2 Choose **Print** in the application menu.



- 3 Select the printer in the A Printer list.
- Click Manage Custom Sizes in the F Paper Size list to display the Custom Paper Sizes dialog box.

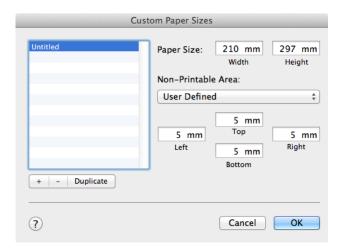


- Double-click **Untitled** in the list at left, and then enter a name for the page size you want to register. Here, enter **100\*500**.
  - If the **Untitled** size is not listed at left, click + below the list.
- 6 Under Paper Size, enter 100 in Width and 500 in Height. Here, measurements are entered in millimeters.
- 7 Specify the margins by entering 3 in Non-Printable Area. Here, too, measurements are entered in millimeters.
- 8 Click **OK** to close the **Custom Paper Sizes** dialog box.
- In the **F Paper Size** list, click the size of the original. In this case, click **100\*500**, the size you registered.
- 10 In GOrientation, click the icon of the document in landscape orientation.
- 11 If you configured the settings using the Page Attributes dialog box, click OK to close the dialog box.

### Print the banner


Follow the steps below to print the banner using the corresponding banner settings.

102 Choose **Print** in the application menu.

Access the Main pane.

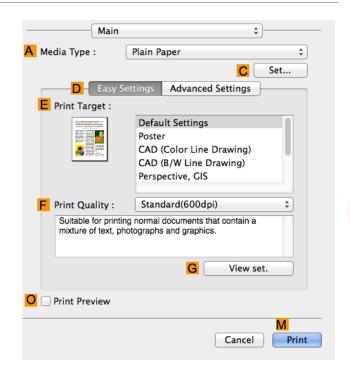

- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 4 Make your selection in the EPrint Target list.
- Make your selection in the F Print Quality list.
- 6 Access the Page Setup pane.

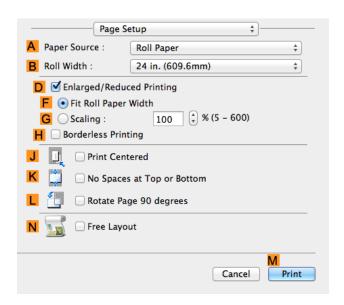

- 7 Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, 16 in. (406.4mm) is selected.
- 9 Select the DEnlarged/Reduced Printing check box.
- 10 Click F Fit Roll Paper Width.

11 Confirm the print settings, and click M Print to start printing.



For tips on confirming print settings, see "Confirming Print Settings." →P279

## **Printing on Non-Standard Paper Sizes**

For printing on non-standard size paper, first register the paper size in the printer driver.

Once you register a paper size, you then can select it repeatedly from the paper size list. The paper size can be set up to 18.0 m.



 In Windows, although you can even set Custom Size for the paper size, the maximum settable size is 3.2 m. The setting of Custom Size is disabled when you exit the application software.

For instructions on specifying non-standard paper sizes for printing, refer to the following topics, as appropriate for your computer and operating system.

- Printing on Non-Standard Paper Sizes (Windows) →P.104
- Printing on Non-Standard Paper Sizes (Mac OS) →P.107

## **Printing on Non-Standard Paper Sizes (Windows)**

For printing on non-standard size paper, first register the paper size in the printer driver.

Call a non-standard paper size registered in the printer driver with Custom Paper Size.

Once you register Custom Paper Size, you then can select it repeatedly from the paper size list. Custom Paper Size can be set up to 18.0 m.




Although you also can set **Custom Size** for the paper size temporarily, the maximum settable size is 3.2 m. Also, the setting of **Custom Size** is disabled when you exit the application software.

#### Registering and Printing With a Custom Paper Size


This topic describes how to register a non-standard paper size by the name of 430 mm Square and print based on the following example.

- Document: Any Type
- Page Size: A square sheet (430 × 430 mm [16.9 × 16.9 in])
- · Paper: Sheets
- Media Type: Any type
- Paper Size: A square sheet (430 × 430 mm [16.9 × 16.9 in])
- Load the square paper (430 × 430 mm [16.9 × 16.9 in]) in the printer.
- Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") →P.164

4 Make sure the **Main** sheet is displayed.

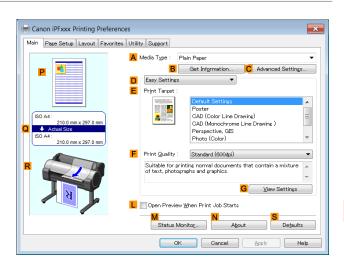

- 5 In the A Media Type list, select the type of paper that is loaded.
- 6 After confirming that DEasy Settings is selected, select from the EPrint Target list.
- 7 Click the Page Setup tab to display the Page Setup sheet.

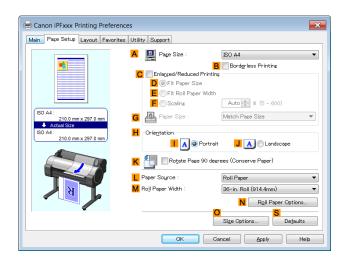

- 8 Click Osize Options to display the Paper Size Options dialog box.
- Enter a desired paper name in Custom Paper Size Name. 430 mm Square is used in this example.
- 10 Select mm in Units.
- Enter **430** (16.9 in) in both **Width** and **Height**.



- If you select the Fix the Ratio of the Width to Height check box, after you enter a value in either Width or Height, the other value will be automatically applied based on the original aspect ratio.
- 12 Click Add to register 430 mm Square.
- 13 Click **OK** to close the **Paper Size Options** dialog box.
- 14 Click Manual in the L Paper Source list.
- 15 In the A Page Size list, click the size you added,430 mm Square.

16 Confirm the print settings and print as desired.




For tips on confirming print settings, see "Confirming Print Settings." →P.161

### Printing by using Custom Size


This section describes how to print using Custom Size based on the following example.

- Document: Any Type
- Page size: Square of non-standard dimensions (430×430 mm [16.9×16.9 in])
- · Paper: Sheets
- · Paper type: Any type
- Paper Size: A square sheet (430 × 430 mm [16.9 × 16.9 in])
- 1 Load the square paper (430 × 430 mm [16.9 × 16.9 in]) in the printer.
- 2 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 4 Make sure the **Main** sheet is displayed.

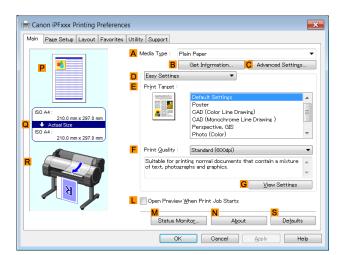

- 5 In the A Media Type list, select the type of paper that is loaded.
- 6 After confirming that DEasy Settings is selected, select from the EPrint Target list.

7 Click the Page Setup tab to display the Page Setup sheet.

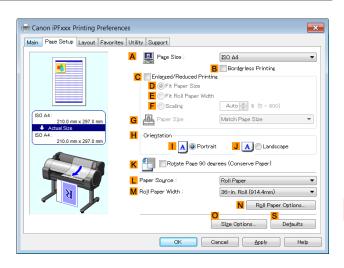

- 8 Click Manual in the L Paper Source list.
- Olick Custom Size in the A Page Size list to display the Custom Size Settings dialog box.
- 10 Confirm that mm is selected in Units.
- 11 Enter 430 (16.9 in) in both Width and Height.
- 12 Click **OK** to close the **Custom Size Settings** dialog box.
- 13 Confirm the print settings and print as desired.



For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# **Printing on Non-Standard Paper Sizes (Mac OS)**

For printing on non-standard size paper, first register the paper size in the printer driver.

Call a non-standard paper size registered in the printer driver with Custom Paper Sizes.

Once you register Custom Paper Sizes, you then can select it repeatedly from the paper size list.

Custom Paper Sizes can be set up to 18.0 m.

This topic describes how to register a non-standard paper size by the name of **430\*430** and print based on the following example.

- Document: Any Type
- Page Size: A square sheet (430 × 430 mm [16.9 × 16.9 in])
- Paper: Sheets
- · Media Type: Any type
- Paper Size: A square sheet (430 × 430 mm [16.9 × 16.9 in])




- The following instructions are for OS X v10.7. The method of setting up non-standard paper sizes varies depending on the version and settings of Mac OS X.
- 1 Create the document in the application.
- 2 Load the square paper (430 × 430 mm [16.9 × 16.9 in]) in the printer.

Choose **Print** in the application menu.




- 4 Select the printer in the A Printer list.
- Click Manage Custom Sizes in the F Paper Size list to display the Custom Paper Sizes dialog box.

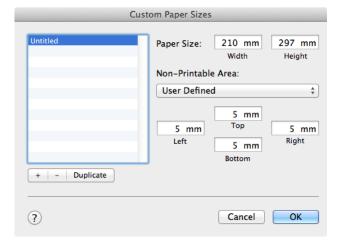


- 6 In Paper Size, enter the height and width of the original. Here, enter 430 mm in Height and Width.
- 7 In **Non-Printable Area**, enter **5** for the top and side margins and **23** for the bottom margin. Here, measurements are entered in millimeters.
- 8 Double-click **Untitled** in the list at left in the **Custom Paper Sizes** dialog box and enter the paper name—in this case, **430\*430**.
- 9 Click **OK** to close the **Custom Paper Sizes** dialog box.
- 10 In the F Paper Size list, click the size of the original. In this case, click 430\*430, the size you registered.
- If you configured the settings using the **Page Attributes** dialog box, click **OK** to close the dialog box, and then select **Print** from the application software menu.


12 Access the Main pane.

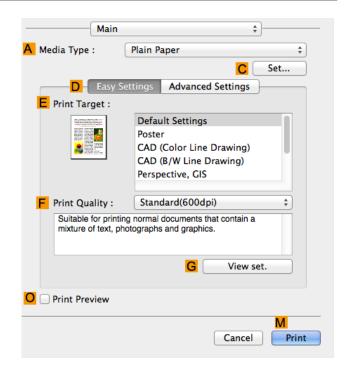

- 13 In the A Media Type list, select the type of paper that is loaded.
- After confirming that DEasy Settings is selected, select from the EPrint Target list.
- 15 Make your selection in the F Print Quality list.
- 16 Access the Page Setup pane.

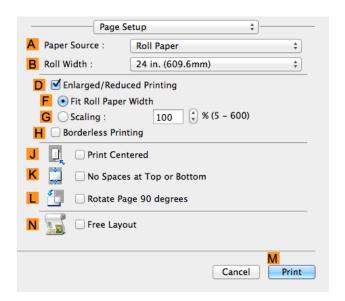

- 17 Click Manual in the A Paper Source list.
- 18 Confirm the print settings, and then click M Print to start printing.

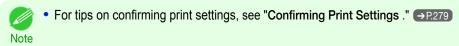

# Tiling and multiple pages per sheet

Printing Multiple Originals Next to Each Other	111
Printing Multiple Pages Continuously	114
Printing Multiple Pages Per Sheet	118
Printing Posters in Sections	

### **Printing Multiple Originals Next to Each Other**

By arranging originals from word-processing or spreadsheet programs or web browser screen shots next to each other on single sheets, you can create highly expressive presentation materials, easy-to-understand meeting materials, and a variety of other printed documents.


#### • Free Layout (Windows)

Besides combining multiple pages in a single-page layout, you can combine originals from multiple files—even multiple source applications—in a single-page layout.



#### Free Layout (Mac OS)

Besides combining multiple pages in a single-page layout, you can combine originals from multiple files—even multiple source applications—in a single-page layout.

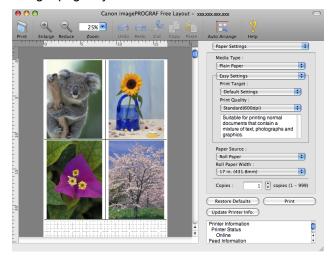


For instructions on arranging originals from multiple applications, refer to the following topics.

- Printing Multiple Originals Next to Each Other (Windows) →P.111
- Printing Multiple Originals Next to Each Other (Mac OS) →P.113


### **Printing Multiple Originals Next to Each Other (Windows)**

This topic describes how to arrange multiple originals using the **Free Layout** function.

- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- Make sure the Main sheet is displayed.

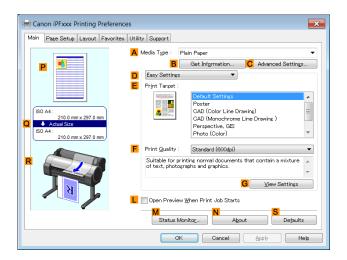

4 Click the **Layout** tab to display the **Layout** sheet.

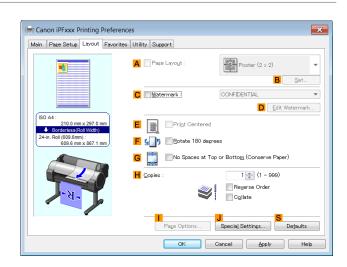

- 5 Select the A Page Layout check box.
  - 6 Click Free Layout in the A Page Layout list.
- When you attempt to print, the **imagePROGRAF Free Layout** window is displayed. (At this point, the document will not be printed yet.)



8 Edit and rearrange the image in the imagePROGRAF Free Layout window as desired.




- Without closing the **imagePROGRAF Free Layout** window, repeat steps 1–7 to arrange originals from multiple applications on the same page.
- For instructions on editing and rearranging images, refer to the imagePROGRAF Free Layout help topic.
- Print from the **imagePROGRAF Free Layout** menu.
- 112 Note
- For details on imagePROGRAF Free Layout functions, see "Free Layout." →P201


### **Printing Multiple Originals Next to Each Other (Mac OS)**

This topic describes how to use the **Free Layout** function to arrange multiple originals next to each other before printing.

- 1 Choose **Print** in the application menu.
- 2 Access the Page Setup pane.

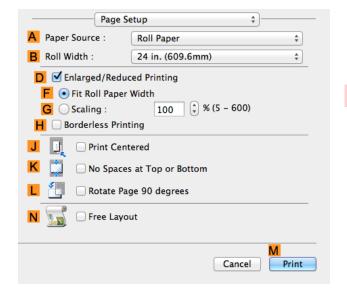

- 3 Select the N Free Layout check box.
- 4 Click M Print.
- The Canon imagePROGRAF Free Layout window is displayed.

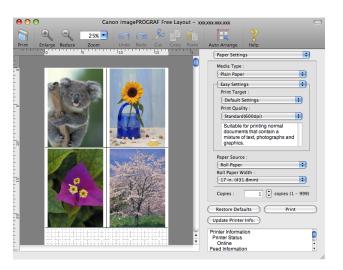

6 Edit and rearrange the image in the Canon imagePROGRAF Free Layout window as desired.



- Without closing the **Canon imagePROGRAF Free Layout** window, repeat steps 1 to 4 to arrange originals from multiple applications on the same page.
- For instructions on editing and rearranging images, refer to the **Canon imagePROGRAF Free Layout** help topic.



Print from the Canon imagePROGRAF Free Layout menu.




For details on Canon imagePROGRAF Free Layout functions, see "Free Layout." →P317

# **Printing Multiple Pages Continuously**

You can print multiple pages as a single continuous image, without margins between pages.

Banner Printing

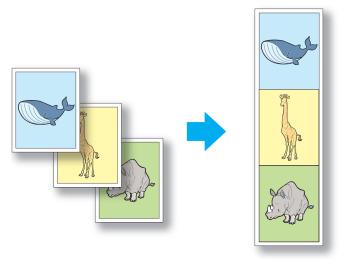



- This feature is only available with rolls. It cannot be used when printing on sheets.
- When using Banner Printing, some of the settings are disabled, including Borderless Printing, Enlarge/Reduce Printing, and Layout.

For instructions on printing multiple pages continuously, refer to the following topics, as appropriate for your operating system.

- Printing Multiple Pages Continuously (Windows) →P.114
- Printing Multiple Pages Continuously (Mac OS) →P.116


# **Printing Multiple Pages Continuously (Windows)**

This topic describes how to print multiple pages as a single continuous image, without margins between pages.




- This feature is only available with rolls. It cannot be used when printing on sheets.
- When using Banner Printing, some of the settings are disabled, including Borderless Printing, Enlarge/Reduce Printing, and Layout.
- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") →P.164


3 Make sure the **Main** sheet is displayed.

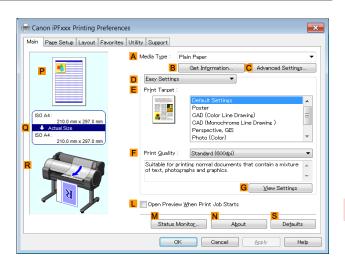

- In the A Media Type list, click the type of paper that is loaded.
- 5 Click the Page Setup tab to display the Page Setup sheet.

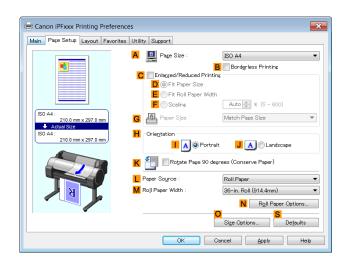

- 6 Select and click a roll paper in the LPaper Source list.
- Click N Roll Paper Options to display the Roll Paper Options dialog box.

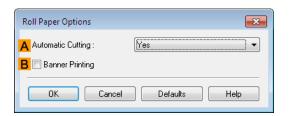

- 8 Select the Banner Printing check box.
- 9 Click OK.
- 10 Confirm the print settings and print as desired.



For tips on confirming print settings, see "Confirming Print Settings ." →P.161

### **Printing Multiple Pages Continuously (Mac OS)**

This topic describes how to print multiple pages as a single continuous image, without margins between pages.




- This feature is only available with rolls. It cannot be used when printing on sheets.
- Important When using Banner Printing, some of the settings are disabled, including Borderless Printing, Enlarge/Reduce Printing, and Layout.
- Choose Page Setup from the application menu to display the Page Attributes dialog box.



 The configuration method varies depending on the OS and application software you are using.

If Page Setup is displayed in the application menu, the settings are configured by opening the Page Attributes dialog box from Page Setup.

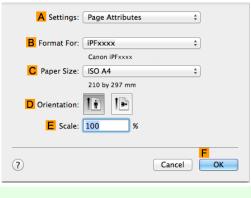


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select Print from the application software menu.




- Select the printer in the **B** Format for list.
- Choose the original size in the **C Paper Size** list.
- Click **FOK** to close the dialog box.
- Choose **Print** in the application menu.


6 Access the Main pane.

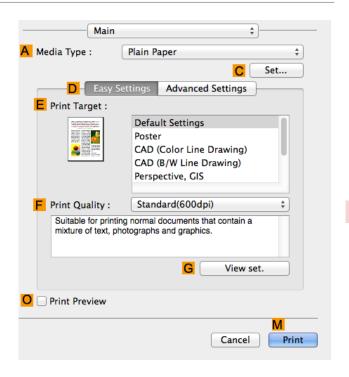

- 7 In the A Media Type list, click the type of paper that is loaded.
- 8 Make your selection in the EPrint Target list.
- Make your selection in the F Print Quality list.
- 10 Access the Page Setup pane.

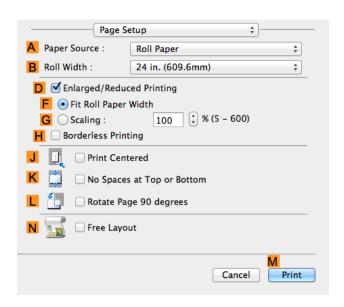


- Click Roll Paper (Banner) in the A Paper Source list.
- 12 Confirm the print settings, and then click M Print to start printing.

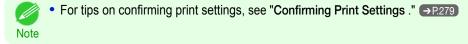

### **Printing Multiple Pages Per Sheet**

To conserve paper, you can print several pages of the original on a single sheet by reducing the original and dividing the sheet into areas for each page.

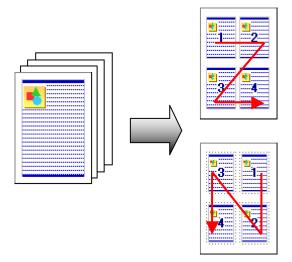

#### Page Layout

Specify a number of pages of the original to print on a single sheet, in a layout of multiple pages per sheet.



This function cannot be combined with the following options.

Important

- Borderless Printing
- Scaling Originals (Windows)
- Banner Printing (Windows)
- When printing using this function, the **Print Centered** setting is disabled.



- You can print up to 16 pages of the original on a single sheet.
- Note
- You can also change the page layout order and print page boundary lines, as desired.

For instructions on printing multiple pages per sheet, refer to the following topics, as appropriate for your computer and operating system.


- Printing Multiple Pages Per Sheet (Windows) →P.118
- Printing Multiple Pages Per Sheet (Mac OS) →P.120

# **Printing Multiple Pages Per Sheet (Windows)**


This topic describes how to print four pages of originals together on a single sheet based on the following example.

- Document: Any Type
- Page size: A3 (297.0×420.0 mm [11.7×16.5 in])
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])
- 1 Choose **Print** in the application menu.
  - Select the printer in the dialog box, and then open the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164

3 Make sure the **Main** sheet is displayed.

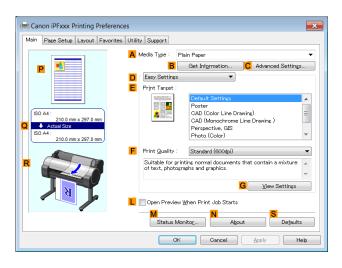


- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- Make your selection in the EPrint Target list.
- Make your selection in the F Print Quality list.
- Click the Page Setup tab to display the Page Setup sheet.

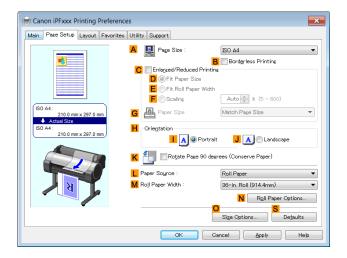

- 8 In A Page Size, click the size of the original as specified in the application software. In this case, click ISO A3.
- Select and click a roll paper in the LPaper Source list.
- Select the width of the loaded roll in the MRoll Paper Width list—in this case, ISO A2/A3 Roll (420.0mm).

11 Click the Layout tab to display the Layout sheet.

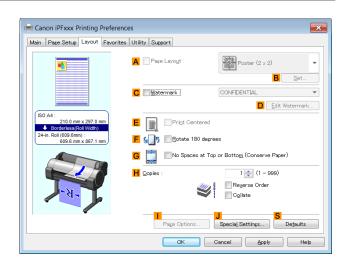

- 12 Select the A Page Layout check box.
- 13 Click 4 Pages/Sheet in the A Page Layout list.



- You can select the layout order for placing four pages on a sheet and a frame border in the Page Layout
   Printing dialog box by clicking B Set. If you select a pattern to print borders, the size of the images are reduced about 5% to create space for the printed border. If None is selected, then the images are not reduced for printing.
- 14 Confirm the print settings and print as desired.




For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# **Printing Multiple Pages Per Sheet (Mac OS)**


This topic describes how to print four pages of an original on a single sheet, based on the following example.

- Document: Any Type
- Page size: A3 (297.0 × 420.0 mm [11.7 × 16.5 in])
- Paper: Roll paper
- · Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1 Choose Page Setup from the application menu to display the Page Attributes dialog box.

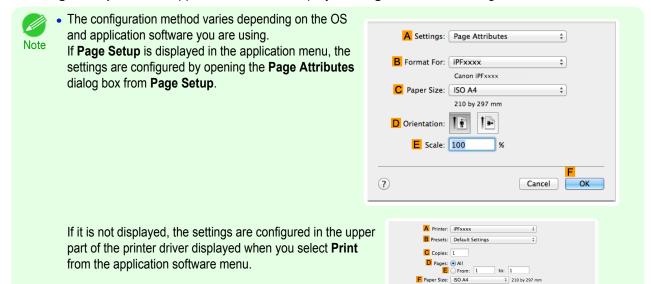

- 2 Select the printer in the B Format for list.
- In the CPaper Size list, click the size of the original. In this case, click ISO A3.
- 4 Click **FOK** to close the dialog box.
- 5 Choose **Print** in the application menu.
- 6 Access the Layout pane.

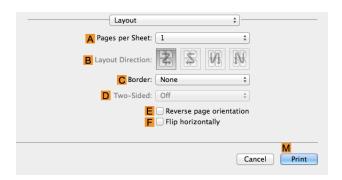


G Orientation:


7 Click 4 in the A Pages per Sheet list.



 You can choose the layout order and specify a boundary line for the four pages in B Layout Direction and C Border. 8 Access the **Main** pane.

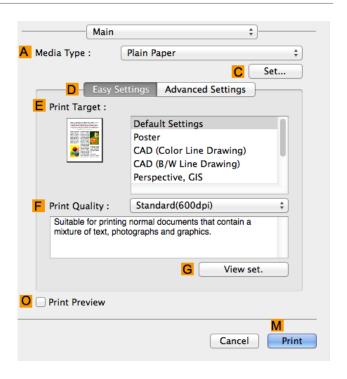

- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 10 Make your selection in the Eprint Target list.
- 11 Make your selection in the F Print Quality list.
- 12 Access the Page Setup pane.

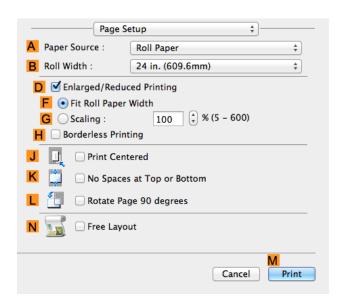

- 13 Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, ISO A2/A3 (420.0mm) is selected.




 $oxed{15}$  Confirm the print settings, and then click  $oxed{\mathsf{M}}$  **Print** to start printing.



For tips on confirming print settings, see "Confirming Print Settings." >P279

### **Printing Posters in Sections**

You can enlarge an original to print it in sections on several sheets. By assembling the printed sheets, you can create a poster larger than the maximum supported paper size of the printer.

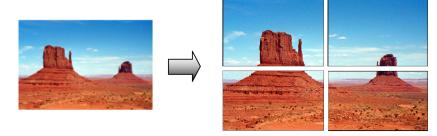

#### Page Layout

Choose poster printing.



 When printing using this function, the Print Centered, Watermark, No Spaces at Top or Bottom (Conserve Paper), and Page Options settings are disabled.

For instructions on printing large posters, refer to the following topics, as appropriate for your computer and operating system.

Printing Large Posters (Windows) →P.123



This method of poster printing is supported in Windows.


#### Note

# **Printing Large Posters (Windows)**


You can enlarge an original to print it in sections on several sheets. By assembling the printed sheets, you can create a poster larger than the maximum supported paper size of the printer. This topic describes how to enlarge an A2 original for printing it in sections on four sheets, based on the following example.

- Document: Poster
- Page size: A2 (420.0×594.0 mm [16.5 × 23.4 in])
- Paper: Sheets
- Paper Size: A2 (420.0 × 594.0 mm [16.5 × 23.4 in])
- Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") →P.164

3 Make sure the **Main** sheet is displayed.

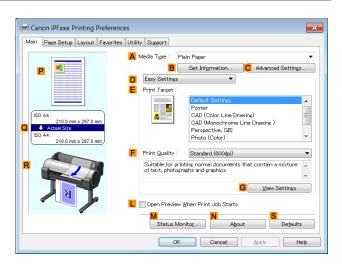


- 4 In the A Media Type list, select the type of paper that is loaded.
- 5 Click Poster in the EPrint Target list.
- Click the Page Setup tab to display the Page Setup sheet.

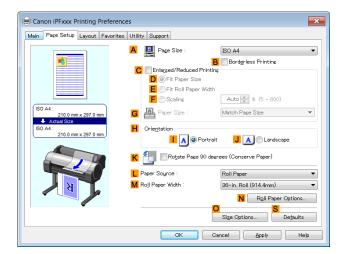

- 7 In A Page Size, click the size of the original as specified in the application. In this case, click ISO A2.
- Click Manual in the LPaper Source list.

9 Click the **Layout** tab to display the **Layout** sheet.

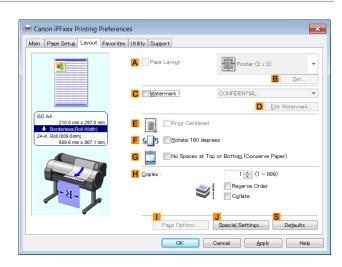

- 10 Select the A Page Layout check box.
- 11 Click Poster (2 x 2) in the A Page Layout list.



- Follow the steps below to print only a portion of the poster as divided for printing.
  - Click B Set under A Page Layout to display the Pages to Print dialog box.
  - On the Pages to Print dialog box, clear the check boxes of the portion you do not want to print.
  - Click **OK** to close the **Pages to Print** dialog box.
- 12 Confirm the print settings and print as desired.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# Centering originals


Printing Originals Centered on Rolls	126
Printing Originals Centered on Rolls (Windows)	126
Printing Originals Centered on Rolls (Mac OS)	
Printing Originals Centered on Sheets	130
Printing Originals Centered on Sheets (Windows)	130
Printing Originals Centered on Sheets (Mac OS)	132

### **Printing Originals Centered on Rolls**

You can print originals centered on a page—for example, if the paper is larger than the original, or if you are reducing the original.

#### Print Centered

If you use originals smaller than the roll paper width, you can center them relative to the width when printing.

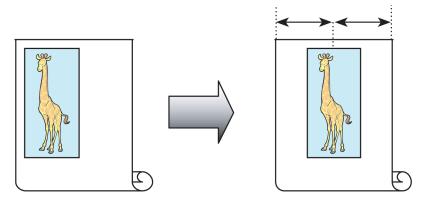

For instructions on centering originals when printing on rolls, refer to the following topics, as appropriate for your computer and operating system.


- Printing Originals Centered on Rolls (Windows) →P.126
- Printing Originals Centered on Rolls (Mac OS) →P.128

# **Printing Originals Centered on Rolls (Windows)**


This topic describes how to center originals before printing on rolls based on the following example.

- Document: Any type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- · Paper type: Plain Paper
- Roll width: A3/A4 roll (297.0 mm [11.7 in])
- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164

3 Make sure the **Main** sheet is displayed.

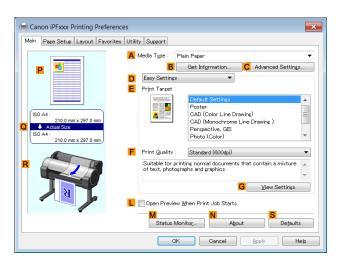


- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 5 Select the print target in the E Print Target list.
- Click the Page Setup tab to display the Page Setup sheet.

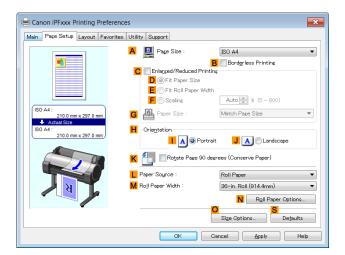

- In the A Page Size list, click the size of the original as specified in the application. In this case, click ISO A4 or Letter (8.5"x11").
- Select and click a roll paper in the LPaper Source list.
- 9 Select the width of the loaded roll in the MRoll Paper Width list—in this case, ISO A3/A4 Roll (297.0mm).

10 Click the Layout tab to display the Layout sheet.

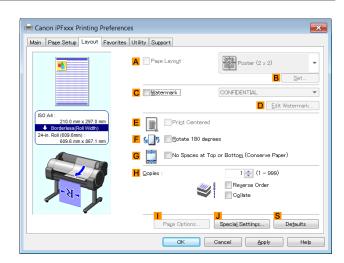

- 11 Select the Eprint Centered check box.
- 12 Confirm the print settings and print as desired.



For tips on confirming print settings, see "Confirming Print Settings." →P.161


# **Printing Originals Centered on Rolls (Mac OS)**

This topic describes how to center originals before printing on rolls based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- · Paper: Roll paper
- · Paper type: Plain Paper
- Roll paper width: A3/A4 roll (297.0 mm [11.7 in])
- Choose Page Setup from the application menu to display the Page Attributes dialog box.



 The configuration method varies depending on the OS and application software you are using. If Page Setup is displayed in the application menu, the settings are configured by opening the Page Attributes dialog box from Page Setup.

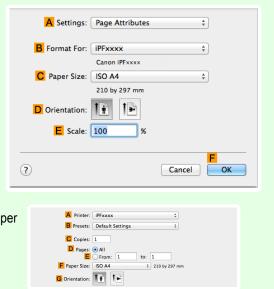


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select Print from the application software menu.




Select the printer in the **B** Format for list.

128

- In C Paper Size, click the size of the original. In this case, click ISO A4.
- Click **FOK** to close the dialog box.
- 5 Choose **Print** in the application menu.
- 6 Access the Main pane.

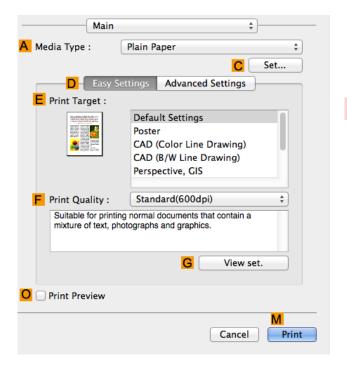

- 7 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 8 Make your selection in the EPrint Target list.
- 9 Make your selection in the F Print Quality list.
- 10 Access the Page Setup pane.

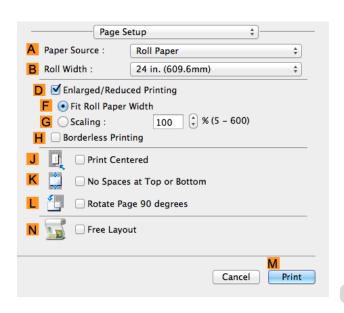

Select and click a roll paper in the A Paper Source list.

- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, ISO A3/A4 (297.0mm) is selected.
- 13 Select the J Print Centered check box.
- 14 Confirm the print settings, and then click MPrint to start printing.




For tips on confirming print settings, see "Confirming Print Settings." →P.279

### **Printing Originals Centered on Sheets**

You can print originals centered on a page—for example, if the paper is larger than the original, or if you are reducing the original.

#### Print Centered

If you use paper larger than the original size or print originals after reduction, the printed images may be aligned in the upper-left corner of the paper. In this case, you can center originals on sheets when printing.

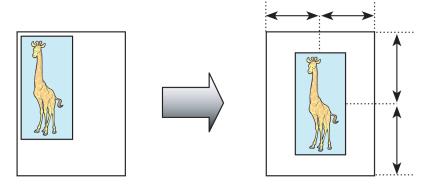

For instructions on centering originals when printing on sheets, refer to the following topics, as appropriate for your computer and operating system.


- Printing Originals Centered on Sheets (Windows) →P.130
- Printing Originals Centered on Sheets (Mac OS) →P.132

# **Printing Originals Centered on Sheets (Windows)**


This topic describes how to reduce an original 50% for printing centered on a sheet.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Sheets
- · Paper type: Plain Paper
- Paper size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164

3 Make sure the **Main** sheet is displayed.

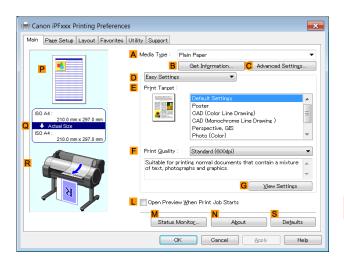


- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 5 Make your selection in the EPrint Target list.
- 6 Click the Page Setup tab to display the Page Setup sheet.

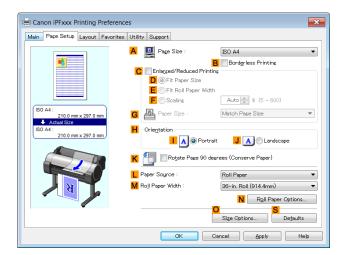

- In the APage Size list, click the size of the original as specified in the application. In this case, click ISO A4.
- Select the CEnlarged/Reduced Printing check box.
- Olick Match Page Size in the GPaper Size list.
- 10 Click F Scaling and enter 50.
- Click Manual in the L Paper Source list.

12 Click the Layout tab to display the Layout sheet.

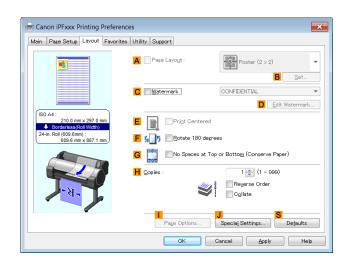

- 13 Select the EPrint Centered check box.
- 14 Confirm the print settings and print as desired.



 If you have selected Manual as the paper source, follow the instructions on the printer control panel to enter the paper size.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

## **Printing Originals Centered on Sheets (Mac OS)**


This topic describes how to center originals for printing on sheets, based on the following example.

Document: Any Type


Page size: A4Paper: Sheets

Paper type: Plain PaperPaper size: Non-standard

1 Choose Page Setup from the application menu to display the Page Attributes dialog box.

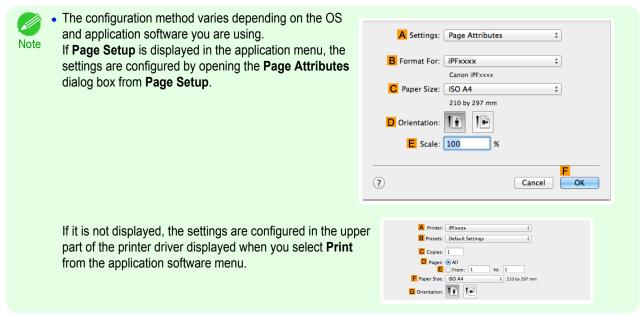


- 2 Select the printer in the **B** Format for list.
- In the C Paper Size list, click the size of the original. In this case, click ISO A4 for Paper Tray (Large Margins).
- 4 Click **FOK** to close the dialog box.
- 5 Choose **Print** in the application menu.
- 6 Access the Main pane.

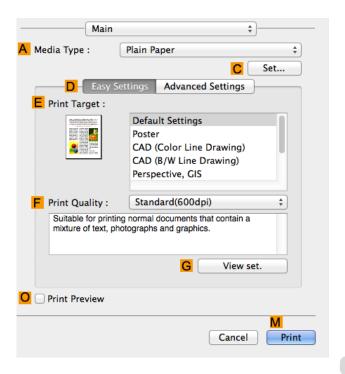


- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 8 Make your selection in the EPrint Target list.

- Make your selection in the F Print Quality list.
- 10 Access the Page Setup pane.

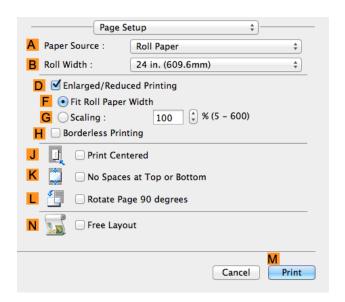

- 11 Click Manual in the A Paper Source list.
- 12 Select the J Print Centered check box.
- 13 Confirm the print settings, and then click M Print to start printing.

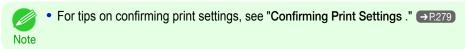



• If you have selected **Manual** as the paper source, follow the instructions on the printer control panel to enter the paper size.

# Conserving roll paper


Conserving Roll Paper by Rotating Originals 90 Degrees	135
Conserving Roll Paper by Rotating Originals 90 Degrees (Windows)	
Conserving Roll Paper by Rotating Originals 90 Degrees (Mac OS)	
Conserving Roll Paper by Printing Originals Without Top and Bottom Margins	139
Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Windows)	139
Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Mac OS)	141

### **Conserving Roll Paper by Rotating Originals 90 Degrees**

You can conserve roll paper by specifying particular settings as suitable for your original.

Rotate Page 90 degrees (Conserve Paper)

When originals are printed in portrait orientation, the original is rotated 90 degrees before printing if it fits within the roll width. This enables you to conserve paper.

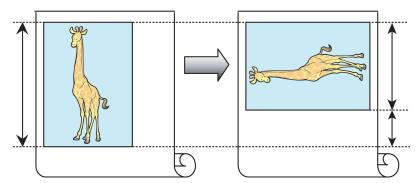



• If the page would exceed the roll paper width after rotation, use this function with Scale to fit Roll Paper Width to print rotated pages.

For tips on conserving roll paper, refer to the following topics, as appropriate for your computer and operating system.

- Conserving Roll Paper by Rotating Originals 90 Degrees (Windows) →P.135
- Conserving Roll Paper by Rotating Originals 90 Degrees (Mac OS) →P.136

# **Conserving Roll Paper by Rotating Originals 90 Degrees (Windows)**

This topic describes how to conserve paper by rotating originals 90 degrees before printing, based on the following example.

- Document: Any type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3×11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A3/A4 roll (297.0 mm [11.7 in])


This example illustrates how to rotate an A4 (210.0×297.0 mm)/Letter (8.3×11.7 in) original in portrait orientation 90 degrees to fit within the width of A3/A4 roll paper (297.0 mm [11.7 in]), which enables you to conserve paper.

1 Choose **Print** in the application menu.


2 Select the printer in the dialog box, and then open the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") →P.164

136


3 Make sure the **Main** sheet is displayed.

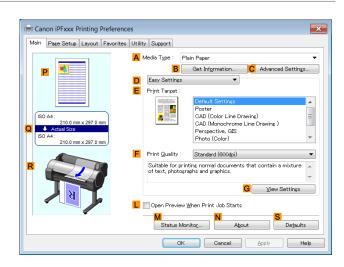

- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- Click the Page Setup tab to display the Page Setup sheet.

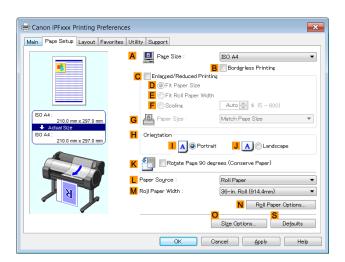

- In the A Page Size list, click the size of the original as specified in the application. In this case, click ISO A4 or Letter (8.5"x11").
- Select and click a roll paper in the LPaper Source list.
- Select the width of the loaded roll in the MRoll Paper Width list—in this case, ISO A3/A4 Roll (297.0mm).
- Select the KRotate Page 90 degrees (Conserve Paper) check box.
- 10 Confirm the print settings and print as desired.

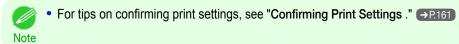

# **Conserving Roll Paper by Rotating Originals 90 Degrees (Mac OS)**


This topic describes how to conserve roll paper by rotating originals 90 degrees before printing, based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])

- Paper: Roll paper
- · Paper type: Plain Paper
- Roll paper width: A3/A4 roll (297.0 mm [11.7 in])


This example illustrates how to rotate an A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in) original in portrait orientation 90 degrees to fit within the width of A3/A4 roll (297.0 mm [11.7 in]), which enables you to conserve paper.

1 Choose Page Setup from the application menu to display the Page Attributes dialog box.

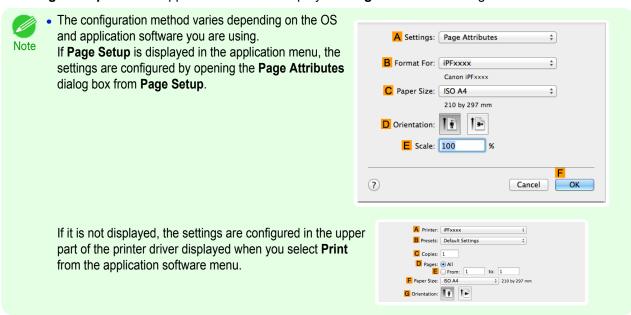


- 2 Select the printer in the B Format for list.
- In C Paper Size, click the size of the original. In this case, click ISO A4.
- Click FOK to close the dialog box.
- 5 Choose **Print** in the application menu.

6 Access the **Main** pane.

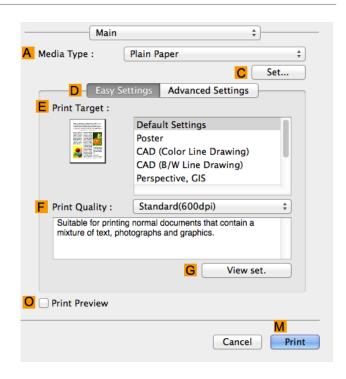

- 7 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 8 Access the Page Setup pane.

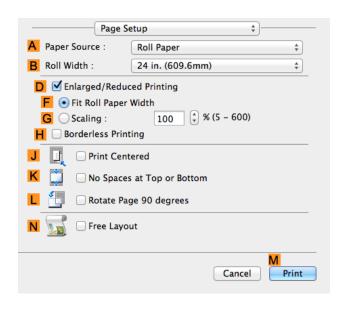

- Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, ISO A3/A4 (297.0mm) is selected.
- 11 Select the LRotate Page 90 degrees check box.
- 12 Confirm the print settings, and then click M Print to start printing.




• For tips on confirming print settings, see "Confirming Print Settings ." →P.279

### Conserving Roll Paper by Printing Originals Without Top and Bottom Margins

You can conserve roll paper by specifying particular settings as suitable for your original.

#### No Spaces at Top or Bottom (Conserve Paper)

You can print without feeding the paper for blank portions of originals if there are top and bottom margins in originals. This enables you to conserve as much paper as the size of the margins.

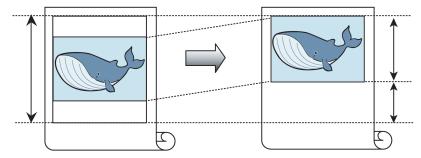



- Printing without the top and bottom margins is not supported in the following cases.
- Important If you have chosen poster as the type of page layout

on the layout of images or text in your originals.



- Even during borderless printing, you can print without the top and bottom margins.
- Printing without the top and bottom margins may cause inconsistency in the size of printed documents, depending

For tips on conserving roll paper, refer to the following topics, as appropriate for your computer and operating system.


- Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Windows) →P.139
- Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Mac OS) →P.141

# Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Windows)


This topic describes how to conserve roll paper when printing originals that have a top and bottom margin, based on the following example.

- · Document: Any type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A3/A4 roll (297.0 mm [11.7 in])
- Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") →P.164

3 Make sure the **Main** sheet is displayed.

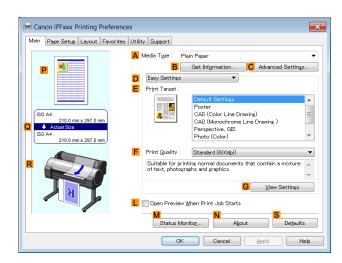


- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 5 Click the Page Setup tab to display the Page Setup sheet.

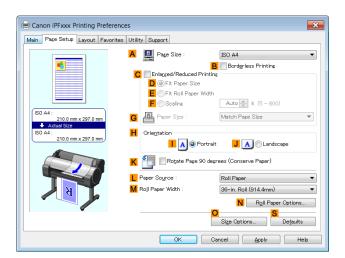

- In the A Page Size list, click the size of the original as specified in the application. In this case, click ISO A4 or Letter (8.5"x11").
- 7 Select and click a roll paper in the **L Paper Source** list.
- Select the width of the loaded roll in the MRoll Paper Width list—in this case, ISO A3/A4 Roll (297.0mm).

141

Click the Layout tab to display the Layout sheet.

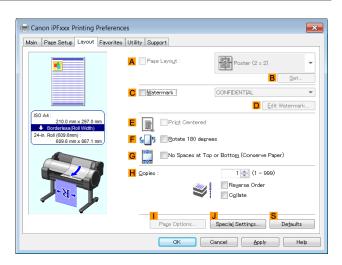

- 10 Select the GNo Spaces at Top or Bottom (Conserve Paper) check box.
- 11 Confirm the print settings and print as desired.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Mac OS)

This topic describes how to conserve roll paper when printing originals that have a top and bottom margin, based on the following example.

· Document: Any Type

Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])

Paper: Roll paper


Paper type: Plain Paper

Roll paper width: A3/A4 roll (297.0 mm [11.7 in])

1 Choose Page Setup from the application menu to display the Page Attributes dialog box.



 The configuration method varies depending on the OS and application software you are using.
 If Page Setup is displayed in the application menu, the settings are configured by opening the Page Attributes dialog box from Page Setup.

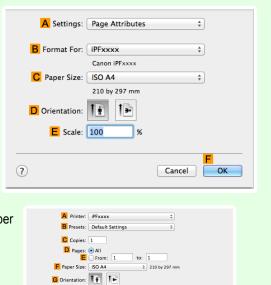

If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.




Select the printer in the **B Format for** list.

- In C Paper Size, click the size of the original. In this case, click ISO A4.
- 4 Click **FOK** to close the dialog box.
- 5 Choose **Print** in the application menu.
- 6 Access the Main pane.



- 7 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- 8 Access the Page Setup pane.

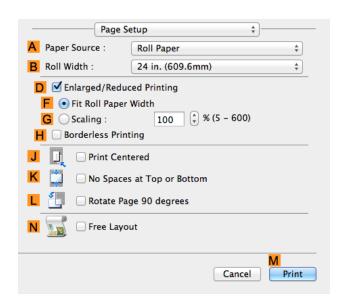

- Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, ISO A3/A4 (297.0mm) is selected.
  - 11 Select the KNo Spaces at Top or Bottom check box.

Confirm the print settings, and then click M Print to start printing.



• For tips on confirming print settings, see "Confirming Print Settings ." →P279


# **Checking Images Before Printing**

# **Checking the Layout in a Preview Before Printing**

You can check the print layout on the preview screen.

• Open Preview When Print Job Starts (Windows)

While viewing the preview screen, you can also adjust orientation or other settings, and your changes will be instantly applied on the preview screen.

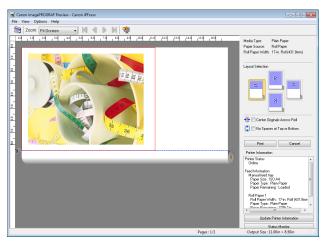




Under some settings and in some environments, PageComposer may be started.

Preview (Mac OS)

While viewing the preview screen, you can also adjust layout or size settings, and your changes will be instantly applied on the preview screen.

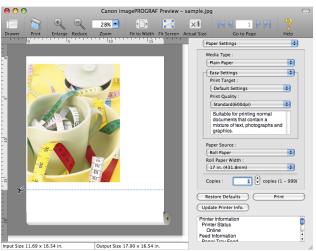

For instructions on how to check the layout before printing, refer to the following topics:

- Checking the Layout in a Preview Before Printing (Windows) →P.162
- Checking the Layout in a Preview Before Printing (Mac OS) →P.279

Printing With Watermarks

# Other useful settings

Printing With Watermarks — COPY, FILE COPY, and so on (Windows)	145 146
Making the Original Orientation Match the Paper Orientation	148
Making the Original Orientation Match the Paper Orientation (Mac OS)  Using Favorites	151
<ul><li>→ Using Favorites (Windows)</li><li>→ Using Favorites (Mac OS)</li></ul>	280
Cutting Roll Paper After Printing  Cutting Roll Paper After Printing (Windows)  Cutting Roll Paper After Printing (Mac OS)	152

# **Printing With Watermarks**

You can add watermarks (background images) to documents that require special handling.





#### Watermark

Watermarks are applied to all pages of your document.



• Watermarks are not printed if you select poster as the type of page layout.

The following watermarks are provided:

- CONFIDENTIAL
- COPY
- DRAFT
- FILE COPY
- FINAL
- PRELIMINARY
- PROOF
- TOP SECRET

You can also create your own watermarks. Specify the following options to customize your watermark.

- Watermark string: Specify the font, size, color, and so on. Surround the watermark with a frame, if desired.
- Watermark position: Specify the position on the page, the angle, and so on.
- Watermark printing method: Specify whether to print the watermark superimposed or under the document image. You can also print the watermark only on the first page, if desired.



- Watermarks are supported in Windows.
- te In addition to the provided watermarks, you can create up to 50 original watermarks.


For detailed instructions on printing with watermarks, refer to the following topics:

Printing with Watermarks—COPY, FILE COPY, and so on (Windows) →P.146

## Printing with Watermarks—COPY, FILE COPY, and so on (Windows)

This topic describes how to print with watermarks, based on the following example of printing with a **FILE COPY** watermark.

- Document: Any type
- Page size: A2 (420.0×594.0 mm [16.5 × 23.4 in])
- · Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in[)
- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- Make sure the **Main** sheet is displayed.

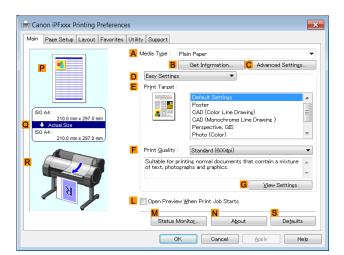


- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- Make your selection in the EPrint Target list.




• You can check the settings values selected in the **EPrint Target** list by clicking **GView Settings**.

6 Click the Page Setup tab to display the Page Setup sheet.

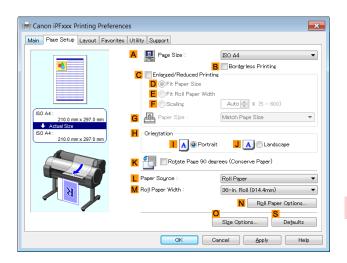

- In A Page Size, click the size of the original as specified in the application software. In this case, click ISO A2.
- Select and click a roll paper in the LPaper Source list.
- 9 Select the width of the loaded roll in the MRoll Paper Width list—in this case, ISO A2/A3 Roll (420.0mm).
- 10 Click the Layout tab to display the Layout sheet.

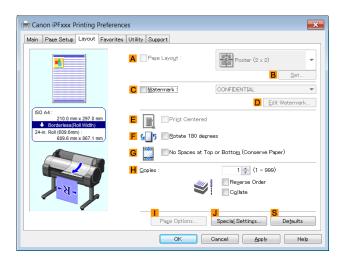

- 11 Select the C Watermark check box.
- 12 Click FILE COPY in the Watermarks list.



- Click D Edit Watermark to open the Edit Watermark dialog box. In the Edit Watermark dialog box, you can
  create custom watermarks and change the position and angle of watermarks.
- 13 Confirm the print settings and print as desired.




• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# **Making the Original Orientation Match the Paper Orientation**

You can specify the original orientation to match the orientation of the paper for printing.

#### Orientation

Paper is usually loaded in the printer in portrait orientation. When you have an original in landscape orientation, you can specify the printing orientation so that the original is printed in landscape orientation.

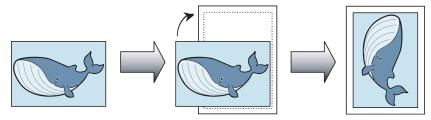

#### Rotate 180 degrees

The original is rotated 180 degrees to print it upside down.

#### Mirror

A mirror image of the original is printed.


For instructions on specifying the original orientation before printing, refer to the following topics, as appropriate for your computer and operating system.

- Making the Original Orientation Match the Paper Orientation (Windows) →P.148
- Making the Original Orientation Match the Paper Orientation (Mac OS) →P.149


# Making the Original Orientation Match the Paper Orientation (Windows)

This topic describes how to print an original in landscape orientation after matching the paper orientation, based on the following example.

- Document: An original in landscape orientation
- Page size: A4 (210.0 × 297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])
- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then open the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

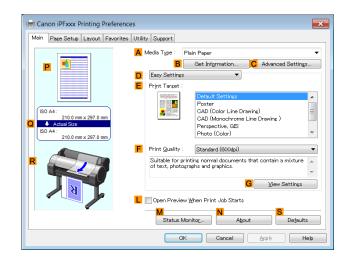

- In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.
- Make your selection in the EPrint Target list.
- Make your selection in the F Print Quality list.
- Click the Page Setup tab to display the Page Setup sheet.

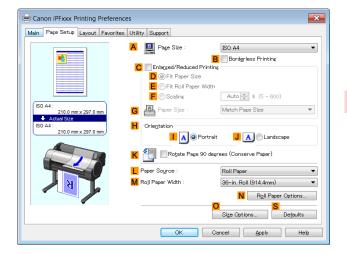

- In the A Page Size list, click the size of the original as specified in the application. In this case, click ISO A4 or Letter (8.5"x11").
- 9 In HOrientation, click J Landscape.
- 10 Select and click a roll paper in the LPaper Source list.
- 11 Select the width of the loaded roll in the MRoll Paper Width list—in this case, ISO A2/A3 Roll (420.0mm).
- 12 Confirm the print settings and print as desired.




For tips on confirming print settings, see "Confirming Print Settings ." →P.161

# Making the Original Orientation Match the Paper Orientation (Mac OS)


This topic describes how to print an original in landscape orientation after matching the paper orientation, based on the following example.

- Document: An original in landscape orientation
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1 Choose Page Setup from the application menu to display the Page Attributes dialog box.

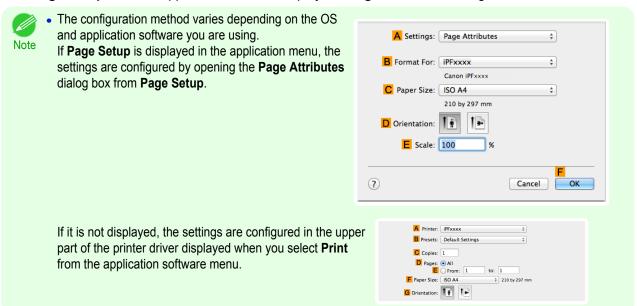


- 2 Select the printer in the B Format for list.
- In C Paper Size, click the size of the original. In this case, click ISO A4.
- In **D** Orientation, click the icon of the document in landscape orientation.
- 5 Click **FOK** to close the dialog box.
- 6 Choose **Print** in the application menu.
- 7 Access the **Main** pane.

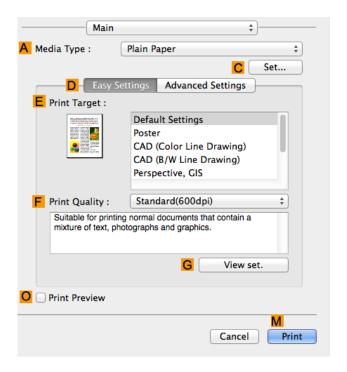

150

8 In the A Media Type list, select the type of paper that is loaded. In this case, click Plain Paper.

- Make your selection in the EPrint Target list.
- $oxed{10}$  Make your selection in the  $oxed{\mathsf{F}}$  **Print Quality** list.
- 11 Access the Page Setup pane.

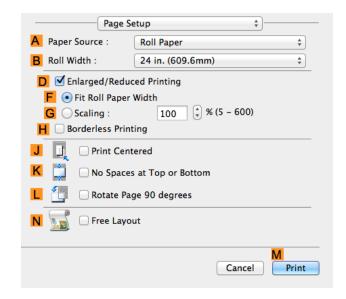

- 12 Select and click a roll paper in the A Paper Source list.
- Select the paper width of the roll loaded in the printer for BRoll Width. In this case, ISO A2/A3 (420.0mm) is selected.
- Confirm the print settings, and then click M Print to start printing.



For tips on confirming print settings, see "Confirming Print Settings ." →P.279

# **Using Favorites**

You can register print settings as **Favorites** to reuse settings from a particular job that met your expectations, or settings for a particular page size that you will use repeatedly.

#### Favorites

Registering a favorite for later use. You can choose the settings you have registered from a list before printing, and you can check the settings details.



 You can also save the favorite settings as files. Using these files is a convenient way to print under the same conditions on another computer. (In Windows.)

For instructions on using favorites to print, refer to the following topics, as appropriate for your computer and operating system.

- Using Favorites (Windows) →P.163
- Using Favorites (Mac OS) →P.280

# **Cutting Roll Paper After Printing**

Roll paper can be automatically cut after printing.



It may not be possible to cut certain types of paper, such as adhesive paper. For details on types of paper that cannot
be used with the auto cut feature, see the Paper Reference Guide. (See "Types of Paper.") →P.360

#### Automatic Cutting

Roll paper is cut automatically after printing. If you prefer, you can print continuously without cutting the roll, or you can print a cut line.

For instructions on cutting roll paper after printing, refer to the following topics, as appropriate for your computer and operating system.


- Cutting Roll Paper After Printing (Windows) →P.152
- Cutting Roll Paper After Printing (Mac OS) →P.153

## Cutting Roll Paper After Printing (Windows)


This topic describes how to cut roll paper automatically after printing (using the auto cut function), as well as how to print a cut line for manual cutting.



- The auto cut function is activated on the printer by default and when the printer driver is installed. Follow the steps below to reactivate the function if it is disabled, or to select the setting for printing a cut line instead.
- 1 Choose **Print** in the application menu.
- 2 Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") →P.164
- Click the Page Setup tab to display the Page Setup sheet.

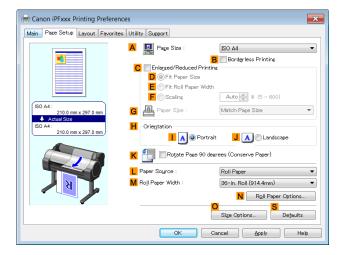

- Select and click a roll paper in the LPaper Source list.
- Click N Roll Paper Options to display the Roll Paper Options dialog box.

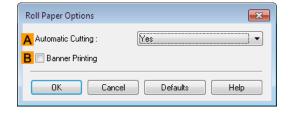

- To enable automatic cutting, click **Yes** in the **A Automatic Cutting** list. If you prefer to cut the paper later yourself, click **Print Cut Guideline**.
- 7 Click **OK** to close the **Roll Paper Options** dialog box.
- 8 Confirm the print settings and print as desired.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.161

Roll paper will be automatically cut after printing.

# **Cutting Roll Paper After Printing (Mac OS)**

This topic describes how to cut roll paper automatically after printing (using the auto cut function), as well as how to print a cut line for manual cutting.



- The auto cut function is activated on the printer by default and when the printer driver is installed. Follow the steps below to reactivate the function if it is disabled, or to select the setting for printing a cut line instead.
- 1 Choose Page Setup from the application menu to display the Page Attributes dialog box.



 The configuration method varies depending on the OS and application software you are using.
 If Page Setup is displayed in the application menu, the settings are configured by opening the Page Attributes dialog box from Page Setup.




If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.




- 2 Select the printer in the BFormat for list.
- Choose the original size in the C Paper Size list.
- Click **FOK** to close the dialog box.
- 5 Choose **Print** in the application menu.

6 Access the Page Setup pane.

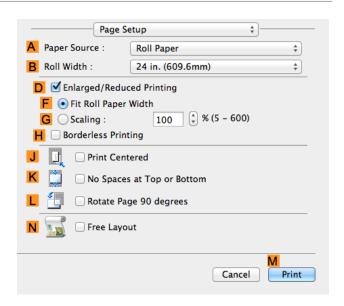


- Select and click a roll paper in the A Paper Source list.
- 8 Access the Main pane.

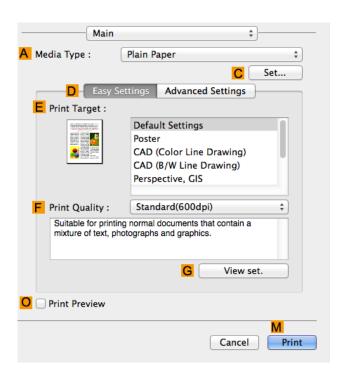

In the A Media Type list, select the type of paper that is loaded.

Click C Set to display the Paper Detailed Settings dialog box.

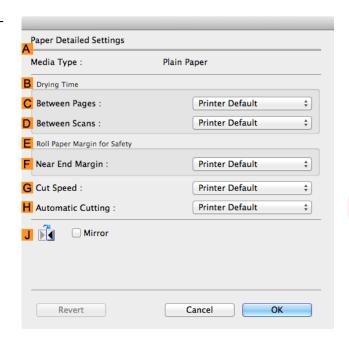

To enable automatic cutting, click **Printer Default** in the **H Automatic Cutting** list. If you prefer to cut the paper later yourself, click **Print Cut Guideline**.



- If the automatic cut function has been deactivated on the printer, change the auto cut setting on the printer Control Panel.
- 12 Click **OK** to close the **Paper Detailed Settings** dialog box.
- 13 Confirm the print settings, and then click M Print to start printing.



• For tips on confirming print settings, see "Confirming Print Settings ." →P.279

# Memo

# iPF680

User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31

# Windows Software

Printer Driver	158
Preview	190
Free Layout	201
Color imageRUNNER Enlargement Copy	224
Print Plug-In for Office	235
→ Status Monitor	504
→ Accounting	508
Device Setup Utility	500
→ Media Configuration Tool	404

Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633

# **Printer Driver**


Printer Driver Settings	158
Specifying Paper in the Printer Driver	160
Confirming Print Settings	
Checking the Layout in a Preview Before Printing	
Using Favorites	
Accessing the Printer Driver Dialog Box from Applications	
Accessing the Printer Driver Dialog Box from the Operating System Menu	165
Main Sheet	
Paper Information on Printer Dialog Box	
Paper Detailed Settings Dialog Box	
View Settings Dialog Box for the Printing Application	172
Color Adjustment Sheet: Color	
Object Adjustment Dialog box: Color	
Matching Sheet	
Color Adjustment Sheet: Monochrome	
Object Adjustment Dialog box: Monochrome	
Page Setup Sheet	
Paper Size Options Dialog Box	
Layout Sheet	
Page Options Dialog Box	
Special Settings Dialog Box	
Favorites Sheet	
Utility Sheet	
Support Sheet	
Settings Summaries Dialog Box	
Device Settings Sheet	188

# **Printer Driver Settings**

For instructions on accessing the Windows printer driver, refer to the following topics.

- Accessing the Printer Driver Dialog Box from Applications →P.164
- Accessing the Printer Driver Dialog Box from the Operating System Menu →P.165

For information on the Windows printer driver settings, refer to the following topics.

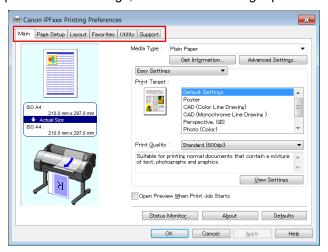

158

Main Sheet →P.167

Printer Driver

iPF680 Printer Driver Settings

You can specify the type of paper, color processing, print quality, print preview, and other settings. Choose Easy Settings to specify basic print settings based on the printing application or Advanced Settings to complete more detailed settings as desired.

- Paper Detailed Settings Dialog Box →P.170
- View Settings Dialog Box for the Printing Application →P.172
- Color Adjustment Sheet: Color →P.173
- Object Adjustment Dialog box: Color →P.174
- Matching Sheet →P.174
- Color Adjustment Sheet: Monochrome →P.176
- Object Adjustment Dialog box: Monochrome →P.177
- Page Setup Sheet →P.178

You can specify the page size of the original, borderless printing, enlargement or reduction, the orientation, the paper size and feed source, and automatic cutting.

- Paper Size Options Dialog Box →P.180
- Layout Sheet →P.181

You can specify the page layout, watermarks, the orientation, the number of copies, and print processing options.

- Page Options Dialog Box →P.183
- Special Settings Dialog Box →P.184
- Favorites Sheet →P.185


Groups of print settings you select on each sheet can be saved as a favorite. Favorites you have added can be edited or used at the time of printing as desired.

Utility Sheet → P.186

You can specify settings related to maintenance for the Printhead and feed amount, as well as settings for Color imageRUNNER Enlargement Copy.

Support Sheet →P.187

You can view support information and the user manual.

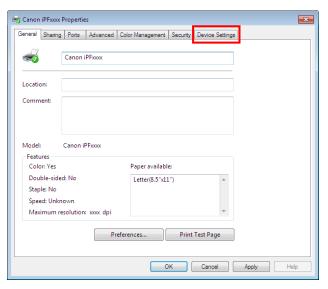

Device Settings Sheet →P.188

You can display settings for optional equipment installed on the printer and see the version information for the printer driver.

imagePROGRAF Free Layout is a feature for freely arranging originals from various source applications on a single page as desired before printing. For details, see "Free Layout." →P.201

Color imageRUNNER Enlargement Copy is a feature for automatic enlargement and printing of scanned originals from a Color imageRUNNER. For details, see "Color imageRUNNER Enlargement Copy." (>P.224)

159



Color imageRUNNER Enlargement Copy is not displayed in 64-bit editions of Windows.


# **Specifying Paper in the Printer Driver**

If you have replaced the paper, you must complete the following settings in the printer driver.



Always specify the same type and size of paper in the printer menu and printer driver.

- 1 Choose Print in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

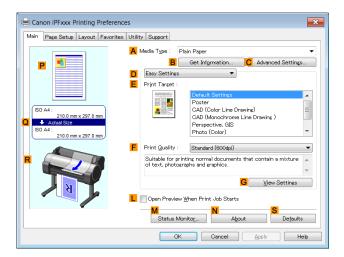


4 In the A Media Type list, select the type of paper that is loaded.



 Click the B Get Information button to display the Paper Information on Printer dialog box. On the Paper Information on Printer dialog box, you can obtain information on the paper in the printer and configure printer driver settings for the feed source and type of paper.

This function requires that the **Status Monitor** be installed.

Click the Page Setup tab to display the Page Setup sheet.

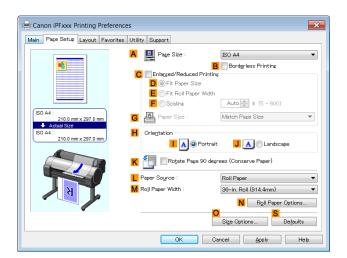

- 6 In the A Page Size list, select the size of the original as specified in the application.
- 7 In the LPaper Source list, select how paper is supplied.
- 8 If you have selected roll paper in **LPaper Source**, select the width of the loaded roll in MRoll Paper Width.




A variety of settings are available in the printer driver to suit different printing applications.
 For details on available printing conditions, see "Printer Driver Settings ." →P.158

# **Confirming Print Settings**

There are two ways to confirm the print settings, as follows.

#### · Checking a preview of the settings

A preview of the settings is displayed on the left side of the **Main**, **Page Setup**, and **Layout** sheets. By checking illustrations and numerical values in the preview, you can confirm current settings for the page size, orientation, paper source, layout, and so on.

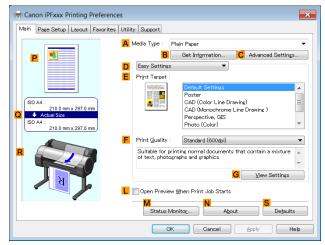

Display Area	Information Displayed
P Top illustrations	Illustrations indicate the orientation, page layout, borderless printing selection, color mode, and other settings information.
Q Middle, bordered area	The page size, paper size, and method and percentage of enlargement or reduction are indicated.
R Bottom illustrations	Illustrations indicate the feed source, orientation, borderless printing selection, and other settings information.



 To confirm the Print Target specified in Easy Settings, click G View Settings on the Main sheet to display the View Settings dialog box.

#### · Checking a print preview

You can check an image of the original just as it will be printed.


When you activate this feature, **imagePROGRAF Preview** or PageComposer is started before printing. Confirming how documents will be printed this way helps prevent printing errors.

For details on print previews, see "Checking the Layout in a Preview Before Printing." →P.144


# **Checking the Layout in a Preview Before Printing**

This topic describes how to preview images of print jobs before actually printing them.

- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- 3 Make sure the **Main** sheet is displayed.

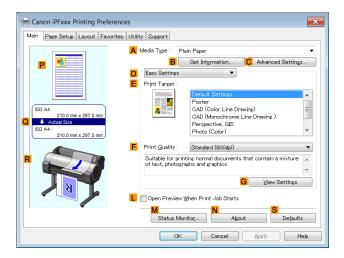

- Select the LOpen Preview When Print Job Starts check box.
- After you click **OK**, when you print a job, the **image-PROGRAF Preview** window will be displayed.

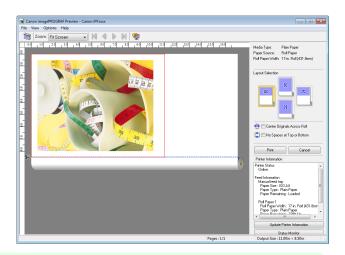



- If PageComposer is running, access the Special Settings dialog box from the Layout sheet and clear Preview Switching.
- 6 On the main window, you can check the layout and change settings as needed.
- 7 To print, click **Print** in the **File** menu.



For details on imagePROGRAF Preview functions, see "Preview." →P.190

162

iPF680 Using Favorites


## **Using Favorites**

This topic describes how to register favorites and print using favorite settings.


#### Registering a favorite

This section describes the procedure for registering printing settings that have been changed in the driver as **Favorites**.

- 1 Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") >P.164
- Perform normal printing settings.
  The favorite is registered from here.
- 4 Click the **Favorites** tab to display the **Favorites** sheet.

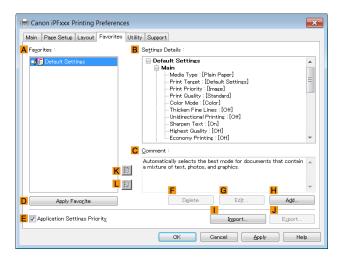

5 Click HAdd to display the Add dialog box.

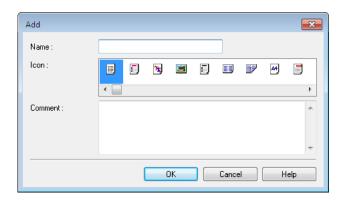

- 6 Enter a desired name in Name, such as Photos for Presentations or Monthly Report.
- 7 Choose a fitting icon for these print settings in the Icon list.
- 8 In **Comment**, enter a description of the favorite to be added, as desired.

Click **OK** to close the **Add** dialog box.

The favorite you have added is now displayed in A Favorites.




To save a favorite as a file, click JExport and specify the file to save.

### Printing using the favorite

Follow the steps below to print using the favorite you have registered.

- Choose **Print** in the application menu.
- Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications .") →P.164
- Click the Favorites tab to display the Favorites sheet.

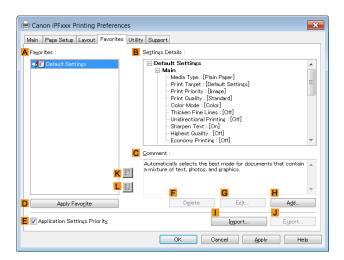

In the A Favorites, choose the favorite you registered.



- To import a favorite, click Import and specify the favorite file.
- Click **D** Apply Favorite to replace the favorite settings with the current print settings.
- Confirm the print settings and print as desired.



For instructions on confirming print settings, see "Confirming Print Settings ." →P.161

# **Accessing the Printer Driver Dialog Box from Applications**


- Choose **Print** from the **File** menu to display the dialog box for printing conditions.
- Select the printer, and then display the printer driver dialog box.

164




The dialog box for specifying printing conditions varies depending on the source application. In some cases, when you select the printer, a sheet for configuring the printer driver is added to the dialog box. In the following case, click Preferences.

• Example: Print dialog box displayed by the application software

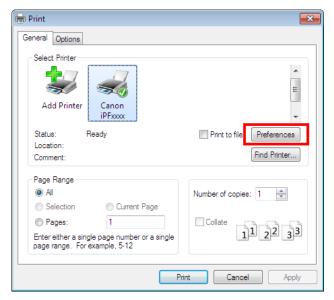

Six sheets of print settings are displayed by the printer driver: **Main**, **Page Setup**, **Layout**, **Favorites**, **Utility**, and **Support**.

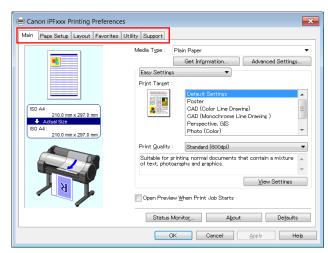



 The titles of dialog boxes may vary depending on the application, and sheets other than these six sheets may be displayed.




- If you access the printer driver dialog box from the source application, changes you make to the settings will only apply temporarily to that application. Because these are sizes you specify temporarily in the printer driver, the sizes will not be available after you exit the application.
- You can also access the printer driver dialog box from the Windows system menu.
   To use the settings continuously in all applications, open the printer driver from the system menu to make the settings.

(See "Accessing the Printer Driver Dialog Box from the Operating System Menu .") →P.165


# Accessing the Printer Driver Dialog Box from the Operating System Menu

1 Click start > Printers and Faxes (or Printers ).

Select the printer, and then display the printer properties dialog box.

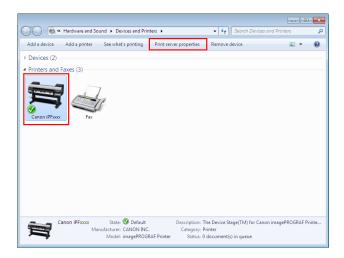


Click **Printing Preferences** to display the **Main**(or **Printing Preferences**) dialog box, titled with the name of this printer.

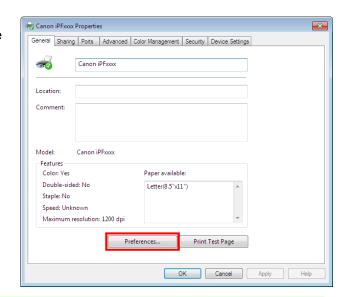



• The **Device Settings** sheet is also an extension of the printer driver. (See "Device Settings Sheet .") →P.188

Six sheets of print settings are displayed by the printer driver: Main, Page Setup, Layout, Favorites, Utility, and Support.

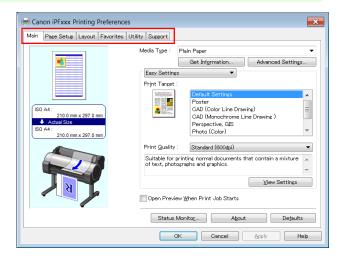

Main Sheet



 If you access the printer driver dialog box from the operating system menu, changes you make to the settings will apply to all applications you use for printing.

You can also access the printer driver dialog box from applications.
 (See "Accessing the Printer Driver Dialog Box from Applications.") →P.164


# **Main Sheet**

The following settings are available on the **Main** sheet. For details on settings items, refer to the printer driver help file.



 On the Main sheet, choose Easy Settings to specify basic print settings based on the particular printing application, or switch to Advanced Settings to complete more detailed settings as desired.

#### Common Items

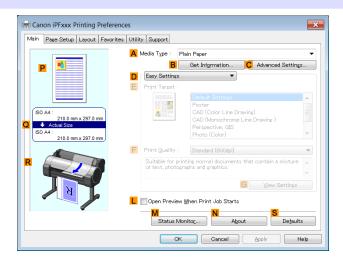

#### A Media Type

Select the type of paper.

For information on the types of paper the printer supports, refer to the **Paper Reference Guide**. (See "**Displaying** the **Paper Reference Guide**.") →P.363

#### • B Get Information

Displays **Paper Information on Printer**. You can update the printer driver settings for the feed source, media type, and roll width by selecting the feed source.

Paper Information on Printer Dialog Box →P.170

#### C Advanced Settings

Displays **Paper Detailed Settings**. You can configure the printing settings to match the type of media, such as the ink drying time.

Paper Detailed Settings Dialog Box →P.170

#### Lopen Preview When Print Job Starts

When the check box is selected, imagePROGRAF Preview is launched before printing.

This allows you to check on-screen previews of documents before printing.

Checking the Layout in a Preview Before Printing →P.144

#### M Status Monitor

Starts imagePROGRAF Status Monitor.

You can check the printer status, job status, and other conditions.

167

You can also set up email notification if printer errors occur by completing the **Email Notice** settings. For details, refer to the **Status Monitor** help file.


• N About

Displays version information for the printer driver.

• S Defaults

Restores all settings on the sheet to the default values.

#### Configuration using Easy Settings

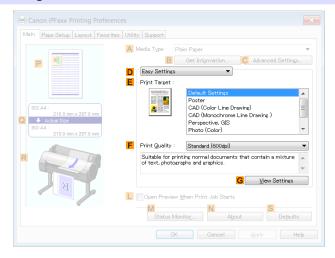

#### • E Print Target

Choose presets that match the type of document to be printed.

- Printing Photos and Images →P.33
- Printing Line Drawings and Text →P.43
- Printing Office Documents →P.37

Depending on the A Media Type setting, some E Print Target options may not be available.

#### • F Print Quality

Choose the level of print quality.

Giving Priority to Particular Graphic Elements and Colors for Printing →P.58

#### G View Settings


Displays the **EPrint Target** setting values.

You can view and change the order of **EPrint Target** setting values.

View Settings Dialog Box for the Printing Application →P.172

Main Sheet

#### Configuration using Advanced Settings

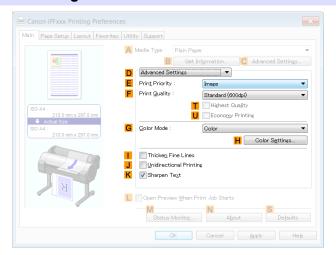

#### • E Print Priority

Choose the graphic elements that you want to emphasize for printing.

Giving Priority to Particular Graphic Elements and Colors for Printing → P.58

#### F Print Quality

Choose the level of print quality.

Giving Priority to Particular Graphic Elements and Colors for Printing →P.58

#### Thighest quality

When the check box is selected, printing is performing focusing on quality. Printing takes longer and consumes more ink than in other modes, but this mode offers superior printing quality.



If you set F Print Quality to High, you can select T Highest quality. However, depending on A Media Type and E Print Priority, you may not be able to select T Highest quality.

#### • U Economy Printing

If you select this option, you can print with less ink consumed. However, print quality is lower than in regular printing.

Select this option to save ink, such as when printing to check drawings. Depending on the settings of A Media Type and F Print Quality, you may not be able to select this option.



• If you set **F** Print Quality to Fast, you can select **U** Economy Printing. However, depending on **A** Media Type and **E** Print Priority, you may not be able to select **U** Economy Printing.

#### G Color Mode

Choose the color mode.

Giving Priority to Particular Graphic Elements and Colors for Printing →P.58



• Depending on the A Media Type setting, some G Color Mode options may not be available.

#### H Color Settings

Click to display the **Color Settings** dialog box for more advanced color settings.

Adjusting the Color in the Printer Driver →P.51

169

#### Thicken Fine Lines

Select this option to print fine lines more distinctly.

#### J Unidirectional Printing


Select this checkbox to prevent problems such as misaligned lines and improve the print quality. However, the printing speed becomes slower.

#### K Sharpen Text

Select this option to print text more sharply.

## **Paper Information on Printer Dialog Box**

On the **Paper Information on Printer** dialog box, you can obtain information on the paper in the printer and configure printer driver settings for the paper source and media type.

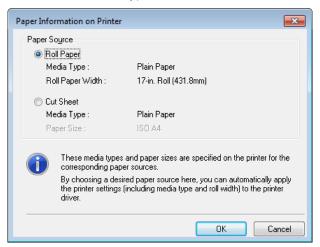



• To display the Paper Information on Printer dialog box, on the Main sheet, click Get Information by Media Type. (See "Main Sheet .") →P.167

#### A Paper Source


Shows the paper source supported by the printer, as well as information about the loaded paper. To update the paper source and media type settings in the printer driver, select the desired **Paper Source** option and click **OK**.

# **Paper Detailed Settings Dialog Box**

In the **Paper Detailed Settings** dialog box, you can set **Drying Time** for the paper selected with **Media Type** of the **Main** sheet, etc.

You can display this dialog box by clicking **Advanced Settings** of **Media Type** on the **Main** sheet. (See "Main Sheet .") >P.167

As for the items for which you can select **Printer Default** in this dialog box, you also can set them from the control panel of the printer. (See "Menu Settings.") >P.456

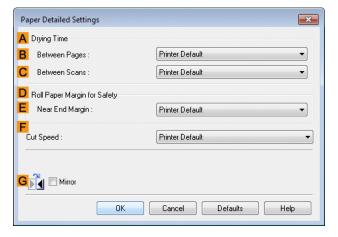

### A Drying Time

Specify the time that the printer waits for ink to dry, as needed. The Between Pages setting is only valid for rolls.

#### Between Pages

You can set the time to wait after printing 1 document page until ejecting the paper. Since waiting time is required for ink to dry before a roll is cut, you can deliver paper in the Output Stacker with the ink dried even if **Cutting**Mode is set to Automatic.

Setting Item	Details
Printer Default	The setting of the control panel of the printer is applied.
Off	Paper is ejected immediately after printing completes.
30 sec. / 1 min. / 3 min. / 5 min. / 10 min. / 30 min. / 60 min.	Paper is ejected when the set time elapses after printing completes.

#### C Between Scans

You can set the time to wait after printing 1 line on a page until printing the next line. Set this to avoid bleeding or color unevenness such as when bleeding occurs on a page or when color unevenness occurs during borderless printing.

. •	
Setting Item	Details
Printer Default	The setting of the control panel of the printer is applied.
Off	The next line is printed immediately after a line is printed.
1 sec. / 3 sec. / 5 sec. / 7 sec. / 9	The next line is printed when the set time elapses after a line is printed.
sec.	* Increase the time according to the occurrence condition of bleeding or unevenness.

## D Roll Paper Margin for Safety

You can specify the length of a margin on the leading edge of paper to ensure that paper susceptible to curling is held firmly against the Platen.

#### • E Near End Margin

Specify the length of the Near End Margin (the leading edge margin) of the roll, as needed.

Setting Item	Details
Printer Default	The setting of the control panel of the printer is applied.
3 mm (0.12 in)	The document is printed in the standard size.
	* Select this when you do not have any problems in printing.

Setting Item	Details
20 mm (0.8 in)	Select this when rubbing against the printhead occurs such as when using paper that tends to curl.

### F Cut Speed

Select the speed of automatic cutting, as needed. You can adjust this setting if paper is not cut well when automatic cutting is used.


Setting Item	Details
Printer Default	The setting of the control panel of the printer is applied.
High Speed	When the <b>Standard</b> setting does not result in cutting the surface cleanly, select this.
Standard	Select this when you do not have any problems in automatic cutting.
Low Speed	This helps prevent adhesive from sticking to the cutter and keeps the cutter sharp if you select it when using adhesive paper.

#### **G** Mirror

Specify whether to print a mirror image, as needed. Select this option to print a version of the document or image with the left and right sides inverted.

# **View Settings Dialog Box for the Printing Application**

In the View Settings dialog box, you can check details of the selected printing application.

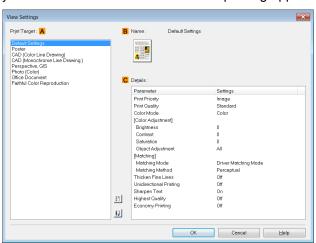



• To display the View Settings dialog box, on the Main sheet, click View Settings by Print Target. (See "Main Sheet .") >P.167

#### A Print Target

Shows all **Print Target** options (settings items for the printing application).

#### B Name


Identifies the item selected in **Print Target** by its name and an icon.

#### C Details

Here, you can confirm detailed settings values for each listed item for the selected **Print Target**.

## **Color Adjustment Sheet: Color**

If the color tone as printed is not as you expected, you can adjust it on the Color Adjustment sheet.

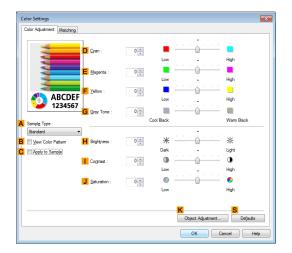



#### A Sample Type

Choose a sample image from **Standard**, **Portrait**, **Landscape**, or **Graphics**.

#### • B View Color Pattern

Select this checkbox to display the color pattern.

#### C Apply to Sample

Select this checkbox to apply the changed settings to the sample image.

#### D Cyan/ E Magenta/ F Yellow

Fine-tune color tones by adjusting the levels of each color.

#### G Gray Tone

Adjust the color tone of grays as desired. Choose Cool Black (tinged with blue) or Warm Black (tinged with red).

#### H Brightness

Adjust the overall image brightness as desired. You can adjust the brightness if the printed document is lighter or darker than the original image (that is, the original photo that was scanned or the original graphic as it appears on the computer screen).

#### Contrast

Adjust the contrast of the darkest and lightest portions relative to each other, as desired. Increasing the **Contrast** makes images sharper, and reducing the **Contrast** softens images.

#### J Saturation

Adjust the color intensity as desired. Increasing the **Saturation** setting makes colors more vivid, and reducing the **Saturation** makes colors more subdued.

#### K Object Adjustment

Select this option to display the **Object Adjustment** dialog box, in which you can specify objects subject to color adjustment.


Object Adjustment Dialog box: Color →P.174

#### S Defaults

Click to restore all settings on the sheet to the default values.




For details on settings items, see "Adjusting the Color in the Printer Driver." >P.51

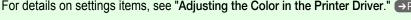

# **Object Adjustment Dialog box: Color**

In the Object Adjustment dialog box, you can specify what type of print jobs to apply color adjustment to. If an original comprises images, graphics, and text, you can specify which portion to apply color adjustment to.

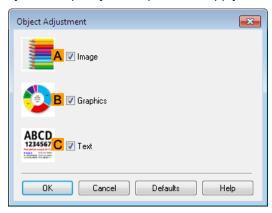



To display the Object Adjustment dialog box, click Object Adjustment on the Color Adjustment sheet.

### • A Image

Select this option to apply color adjustment to image areas, such as photos.

#### • B Graphics

Select this option to apply color adjustment to graphics, such as lines and circles.

C Text

Select this option to apply color adjustment to text.

# **Matching Sheet**

On the Matching sheet, you can specify color matching to compensate for differences in the appearance of colors on various devices.




If No color correction is selected under Color Mode, the Matching sheet is not displayed.



 To display the Matching sheet, on the Main sheet, click Color Settings in Color Mode in Advanced Settings, and then click the **Matching** sheet. (See "Main Sheet .") >P.167

### **Driver Matching Mode**

The following options are available when you select **Driver Matching Mode** in the A Matching Mode list.

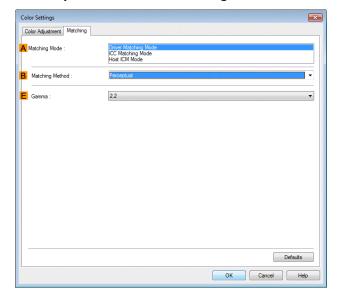

#### A Matching Mode

Select the color matching mode to use, as desired.

Normally, select **Driver Matching Mode**. For color matching based on ICC profiles, select **ICC Matching Mode** or **Host ICM Mode**, depending on your color matching system.

#### • B Matching Method

Select the color matching method that suits the document to be printed. Various **Matching Method** options are available depending on your selection in **Matching Mode**.


#### • E Gamma

You can adjust the gradation of intermediate tones in an image.

2.2 is normally selected. If you want a softer impression than 2.2, select 1.8.

#### ICC Matching Mode and Host ICM Mode

The following options are available when you select **ICC Matching Mode** or **Host ICM Mode** in the **A Matching Mode** list.

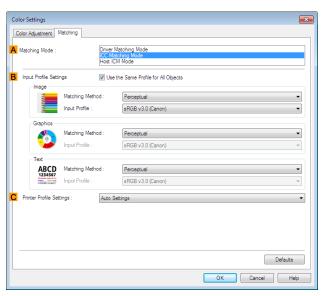

#### A Matching Mode

Select the color matching mode to use, as desired.

#### • BInput Profile Settings

You can select Image, Graphics, or Text. You can choose Matching Method and Input Profile.

Various options are available depending on your selected **Matching Mode**.

To apply the same input profile automatically for **Graphics** and **Text**, select **Use the Same Profile for All Objects**. To apply separate input profiles to **Graphics** and **Text**, clear **Use the Same Profile for All Objects** and specify the individual settings.

#### C Printer Profile Settings

Specify the printer profile as desired. Normally, select Auto Settings.

We recommend that you select an ICC profile created using commercially available profile creation software in order to perform color management accurately on paper other than genuine Canon paper and feed confirmed paper.

The created ICC profile needs to be saved in the following folder on the computer you are using. C:\Windows\system32\spool\drivers\color folder



C: may vary according to the user environment.






• For details on settings items, see "Adjusting the Color in the Printer Driver." >P.51

# **Color Adjustment Sheet: Monochrome**

On the Color Adjustment sheet for monochrome printing, you can adjust the brightness and contrast.

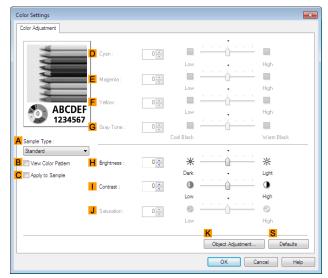



176

To display the Color Adjustment sheet, on the Main sheet, click Color Settings by Color Mode in Advanced Settings. (See "Main Sheet .") →P.167

#### A Sample Type

Choose a sample image from Standard, Portrait, Landscape, or Graphics.

#### • B View Color Pattern

Select this checkbox to display the color pattern.

#### C Apply to Sample

Select this checkbox to apply the changed settings to the sample image.

#### • D Cyan/ E Magenta/ F Yellow

Not available.

### • G Gray Tone

Not available.

#### H Brightness

Adjust the overall image brightness as desired. You can adjust the brightness if the printed document is lighter or darker than the original image (that is, the original photo that was scanned or the original graphic as it appears on the computer screen).

#### Contrast

Adjust the contrast of the darkest and lightest portions relative to each other, as desired. Increasing the **Contrast** makes images sharper, and reducing the **Contrast** softens images.

#### J Saturation

Not available.

#### K Object Adjustment

Select this option to display the **Object Adjustment** dialog box, in which you can specify objects subject to color adjustment.

Object Adjustment Dialog box: Monochrome →P.177

#### S Defaults


Click to restore all settings on the sheet to the default values.



• For details on settings items, see "Adjusting the Color in the Printer Driver." >P.51

# **Object Adjustment Dialog box: Monochrome**

In the **Object Adjustment** dialog box, you can specify what type of print jobs to apply color adjustment to. If an original comprises images, graphics, and text, you can specify which portion to apply color adjustment to.

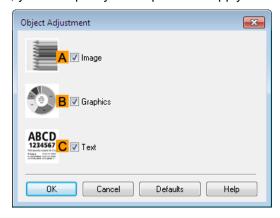



To display the Object Adjustment dialog box, click Object Adjustment on the Color Adjustment sheet.

#### A Image

Select this option to apply color adjustment to image areas, such as photos.

177

• B Graphics


Select this option to apply color adjustment to graphics, such as lines and circles.

C Text

Select this option to apply color adjustment to text.

### **Page Setup Sheet**

The following settings are available on the **Page Setup** sheet. For details on settings items, refer to the printer driver help file.

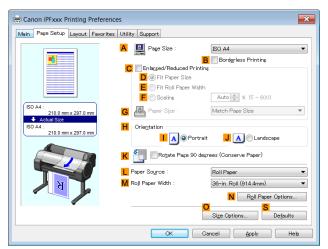


A Page Size

Select the page size as specified in the source application.

For details on available page sizes, see "Paper Sizes." →P.360

B Borderless Printing

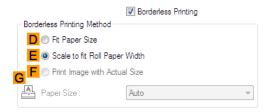

Borderless printing is available if roll paper is selected in the **L Paper Source** list. Choose from the following options when this setting is activated.

- Borderless Printing on Paper of Equivalent Size →P.87
- Borderless Printing by Resizing Originals to Fit the Roll Width →P90
- Borderless Printing at Actual Size →P.80
- D Fit Paper Size

Scales the document image to match the paper size.

• E Scale to fit Roll Paper Width

Scales the document image to match the roll width.

F Print Image with Actual Size

Prints documents at their actual size. This function is available when you have selected the size same as the width of **Roll Paper** for either the length or width of the document from the **A Page Size** list.

Page Setup Sheet

# • G Paper Size

Available when **D** Fit Paper Size is selected.

Choose the size of the paper you will print on.

For details on available paper sizes, see "Paper Sizes." →P.360

Paper sizes compatible with borderless printing are shown in the list.

#### C Enlarged/Reduced Printing



Choose from the following options when this setting is activated.

- Resizing Originals to Match the Paper Size →P.65
- Resizing Originals to Fit the Roll Width →P.67
- Resizing Originals by Entering a Scaling Value →P.71

#### • D Fit Paper Size

Scales the document image to match the paper size.

#### • E Fit Roll Paper Width

Scales the document image to match the roll width.

#### F Scaling

Resizes the document image based on a specified scaling value. Enter a value in a range of **5–600**.

#### G Paper Size

Choose the size of the paper you will print on.

For details on available paper sizes, see "Paper Sizes." →P.360

#### H Orientation

Choose the printing orientation.

Making the Original Orientation Match the Paper Orientation →P.148

### • KRotate Page 90 degrees (Conserve Paper)

Activate this setting to rotate the document image by 90 degrees before printing.

Conserving Roll Paper by Rotating Originals 90 Degrees →P.135

#### L Paper Source

Choose the feed source, as desired.

Options displayed in the list vary depending on the selection in **Media Type** on the **Main** sheet.


#### M Roll Paper Width

Choose the roll width.

For details on available roll widths, see "Paper Sizes." >P.360

Paper Size Options Dialog Box iPF680

Complete optional roll paper settings. Click to display the Roll Paper Options dialog box.

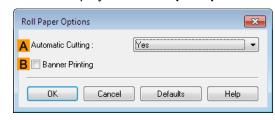

Under A Automatic Cutting, you can specify Yes or No and Print Cut Guideline.

Cutting Roll Paper After Printing →P.152

Select **B** Banner Printing when printing multiple pages continuously.

Printing Multiple Pages Continuously →P.114

#### O Size Options


Click to display the **Paper Size Options** dialog box, which enables you to register additional paper sizes or select the size system for use.

- Paper Size Options Dialog Box →P.180
- S Defaults

Restores all settings on the sheet to the default values.

## **Paper Size Options Dialog Box**

In the **Paper Size Options** dialog box, you can create and register your own Custom Paper Size. The sizes you define are listed with standard paper sizes for selection later as needed.

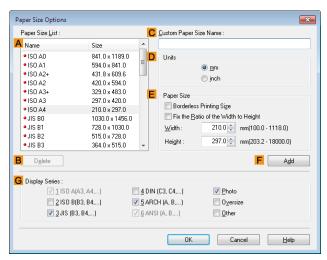



- You cannot create any arbitrary roll paper width as a Custom Paper Size.
- If you select a Paper Size from Paper Size Options, load paper of a size equal to or larger than the Paper Size
   Options into the printer. If the size of the loaded paper is smaller than the Paper Size Options, an incomplete output image may be printed.



• To display the Paper Size Options dialog box, on the Page Setup sheet, click Paper Size Options. (See "Page Setup Sheet .") →P.178

iPF680 Layout Sheet

#### A Paper Size List

Shows the names and sizes of paper that can be used with the printer driver.

#### • B Delete

Custom paper sizes created by users can be deleted from the A Paper Size List, as needed.

However, they cannot be deleted in the following situations.

- If a standard paper size of the printer driver is selected.
- If an oversized paper size is selected.
- If a paper size marked with a red circle is selected.

#### C Custom Paper Size Name

You can name Custom Paper Size as desired.

#### • D Units

Specify the desired unit of measure for the Custom Paper Size height and width.

### • E Paper Size

Specify the desired **Width** and **Height**. You can make your selection from sizes that are compatible with **Border-less Printing** by selecting **Borderless Printing Size**. To maintain the aspect ratio of the **Width** and **Height** as you resize the paper, select **Fix the Ratio of the Width to Height**.

#### • FAdd


Enables you to register the custom paper size you have specified or overwrite an existing custom paper size.

## G Display Series

You can limit the number of options shown in Page Size, Paper Size, and Paper Size List.

## **Layout Sheet**

The following settings are available on the **Layout** sheet. For details on settings items, refer to the printer driver help.

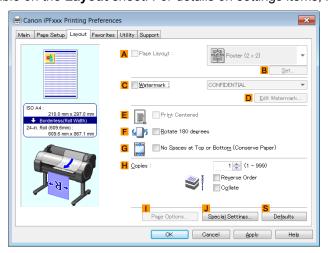

#### A Page Layout

Activate this setting to select a particular page layout.

- Printing Multiple Pages Per Sheet →P.118
- Printing Posters in Sections →P.123
- Printing Multiple Originals Next to Each Other →P.110
- Using PosterArtist to Compose Originals →P.41

#### • B Set

Click to display one of the following dialog boxes depending on the selection in A Page Layout. In these dialog boxes, you can specify layout details and which pages to print, as well as other settings.

- Page Layout Printing
- Pages to Print
- Free Layout Settings

#### • C Watermark

Activating this option makes two settings available, **Watermarks** and **D** Edit Watermark.

- Printing With Watermarks →P.145
- Watermarks

Lists the provided watermarks. Choose the watermark to print.

#### • D Edit Watermark

Click to display the Edit Watermark dialog box for creating your own, original watermark.

#### • E Print Centered

Activate this setting to print document images in the center of the paper.

- Printing Originals Centered on Rolls →P.126
- Printing Originals Centered on Sheets →P.130

#### F Rotate 180 degrees

Activate this option to rotate document images by 180 degrees before printing.

## • G No Spaces at Top or Bottom (Conserve Paper)

Activate this setting to print the next image skipping blank areas above and below printable data in documents, which enables you to conserve the paper.

Conserving Roll Paper by Printing Originals Without Top and Bottom Margins →P.139

## H Copies

Enter the number of copies to print, in a range of 1-999.

#### Reverse Order

Activate this option to print pages in reverse order.

#### Collate

Activate this option to print complete sets in the specified quantity.

## Page Options

Click to display the **Page Options** dialog box, which enables you to complete settings for printing the user name, date, or page number in the header or footer.

Page Options Dialog Box →P.183

#### J Special Settings

If the printing results are not as you expected, click this option to display the **Special Settings** dialog box and change how printing is processed.


Special Settings Dialog Box →P.184

#### S Defaults

Click to restore all settings on the sheet to the default values.

# **Page Options Dialog Box**

The Page Options dialog box offers the following settings.

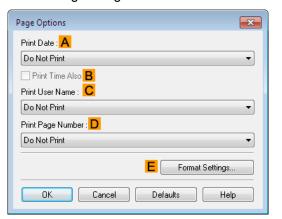



To display the Page Options dialog box, on the Layout sheet, click Page Options. (See "Layout Sheet .") →P.181

A Print Date

Select where the date is printed, as desired. To print the time as well, select **B Print Time Also**.

C Print User Name


Select where the user name is printed, as desired.

• D Print Page Number

Select where the page number is printed, as desired.

E Format Settings

Click to display the Format Settings dialog box, which enables you to complete format-related settings.

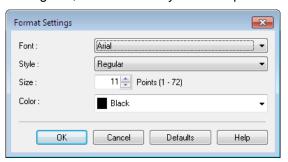




- If you specify the same position for multiple items, the items are printed from left to right in this order: date, user name, and page number.
- When you print multiple pages per sheet using **Page Layout Printing** or similar functions, these items will be printed for each page.

# **Special Settings Dialog Box**

If the printing results are not as you expected, you can change how printing is processed in the **Special Settings** dialog box.

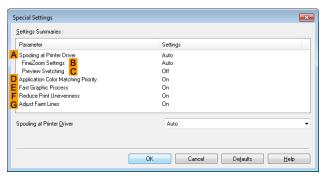



- To display the **Special Settings** dialog box, on the **Layout** sheet, click **Special Settings**. (See "Layout Sheet .") →P.181
- Click the processing method for Parameter within the Settings Summaries frame to display a list of the setting details under the frame.

### A Spooling at Printer Driver

Sets whether or not print jobs are spooled in the printer driver and processed by PageComposer. Printing results may be improved in some cases by setting this to **No** or **No** (**EMF Spooling**).



When set to No or No (EMF Spooling), functions such as Page Layout, Watermark, Reverse Order, Page Options, FineZoom Settings, and Preview Switchingcan no longer be used.

#### B FineZoom Settings

This function is used in large-format printing.

If it is set to Yes, problems in the printing may be improved.

If it is set to **No**, image distortions such as fine lines disappearing may be improved.

#### C Preview Switching

When this setting is turned on, PageComposer starts when printing is performed with the **Open Preview When Print Job Starts** check box selected in the **Main** sheet.

## • D Application Color Matching Priority

When this is on, you can give applications priority in color management.

## • E Fast Graphic Process

Turning this setting on may help produce the expected results if image colors are inconsistent in printed documents or if lines are printed in varying thicknesses.



This function cannot be used on 64-bit version of Windows.

## • F Reduce Print Unevenness

If you want to reduce unevenness of the printed image, turn this on to improve the print result. However, printing may take longer for some images.


#### G Adjust faint lines

Turn this off to obtain expected results when fine lines have been printed in a color different from other diagrams and illustrations. However, lines in some colors may appear broken.

Favorites Sheet

# **Favorites Sheet**

The following settings are available on the **Favorites** sheet. For details on settings items, refer to the printer driver help.

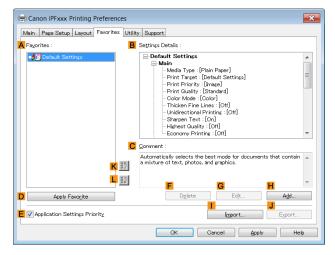

## A Favorites

Printing favorites you have created are listed with **Default Settings** favorites.

Using Favorites →P.151

### B Settings Details

Displays details of the favorite selected in the **A Favorites**.

### • C Comment

Displays notes registered in the favorite.

#### D Apply Favorite

Click to change the current print settings to those of the favorite selected in the A Favorites.

#### E Application Settings Priority

Activate this setting to use settings values specified in the source application in preference to favorite settings selected in the **A Favorites**, when clicking **D Apply Favorite**. For details on the settings items used in preference, refer to the printer driver help.

#### F Delete

Click to delete the selected favorite from the A Favorites list.

#### • G Edit

Click to display the **Edit** dialog box, which enables you to change the name and icon for the favorite selected in the **A Favorites** list.

• HAdd

Click to display the Add dialog box, which enables you to add the current print settings as a favorite.



• Import

Click to display the **Open** dialog box, which enables you to import favorite settings saved as a file.

J Export

Click to display the Save As dialog box, which enables you to save the favorite settings as a file.

• KUp


Click to move the selected favorite up in the A Favorites list.

• L Down

Click to move the selected favorite down in the A Favorites list.

## **Utility Sheet**

The following items can be executed on the **Utility** sheet. For details on the utilities, refer to the relevant utility help.

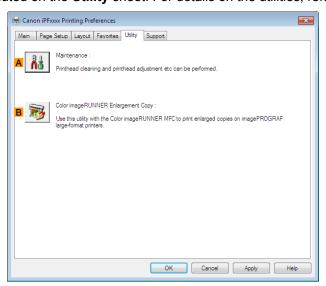

A Maintenance

Click to start the imagePROGRAF Status Monitor, which offers the following maintenance for the printer.

- Nozzle (ink ejecting outlet) check
- · Nozzle (ink ejecting outlet) cleaning
- Head alignment adjustment
- Feed amount adjustment

186

iPF680 Support Sheet

### B Color imageRUNNER Enlargement Copy

Click to launch Color imageRUNNER Enlargement Copy (iR enlargement copy), which enables you to create hot folders used for Color imageRUNNER Enlargement Copy and assign print settings to hot folders.

Printing Enlargements of Scanned Originals from a Color imageRUNNER →P.233


For details, see "Color imageRUNNER Enlargement Copy." →P.224



Color imageRUNNER Enlargement Copy is not displayed in 64-bit editions of Windows.

# **Support Sheet**

On the **Support** sheet, you can view support information and the user's manual.

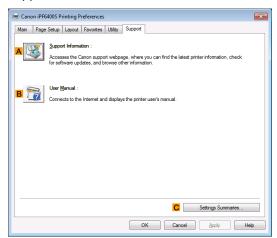

## A Support Information

Click to access the Canon support webpage, where you can find the latest information on the printer and consumables, check for printer driver updates, and browse other information.

#### • B User Manual


Click to connect to the Internet and display the printer user's manual.

#### C Settings Summaries

Click to display the View Settings dialog box, which enables you to confirm the settings for the Main, Page Setup, Layout, and Favorites sheets.

# **Settings Summaries Dialog Box**

The Settings Summaries dialog box enables you to confirm the settings for the Main, Page Setup, Layout, and Favorites sheets.

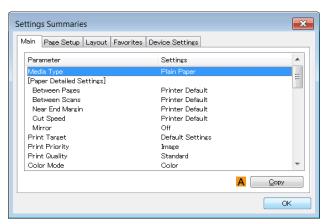


## A Copy

Click to copy the settings information to the clipboard. You can paste the settings information into a file created with a text editor or similar application.

## **Device Settings Sheet**


Many settings items on the printer properties sheets are controlled by Windows applications. However, the **Device Set**tings sheet is for configuring the printer, and it is an extension of the printer driver.

The following settings are available on the **Device Settings** sheet.

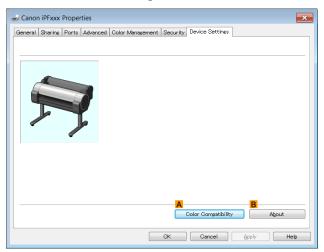

## • A Color Compatibility

Click to display the Color Compatibility dialog box, which enables you to adjust colors if you have selected Color Mode > Color (CAD).

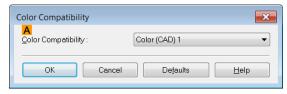

For details on color settings, see "Specifying Colors and Printing CAD Drawings." →P.48

• B About

You can display version information for the printer driver.

# **Preview**

The Features of Preview	
Preview Main Window	192 194
Enlarge/Reduce the screen display  Moving a Page  Using the ruler  Priority setting for rotating 90 degrees  Printing with Selecting the Layout  Print on the Center  Not Print Spaces at the Top/Bottom	

# The Features of Preview

The main features of Preview are as follows.

- While viewing this screen, you can adjust layout settings of a document created with application software.
- You can not only adjust layout settings but also your changes will be instantly applied on the preview screen, and you can print the preview screen as it is seen.



 The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Preview settings.

# **Starting Preview**

Follow the procedure below to start the Preview.


- 1 Start the apllication software which you use.
- From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



Normally, select Print from the File menu.


On the Main sheet, click on the Open Preview When Print Job Starts check box.

Click the **OK** button to save the settings.

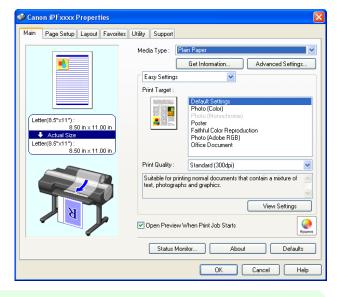




- Your printer is depicted in the lower-left area of this screen.
- On the **Print** dialog box in the apllication software, click the **Print** button.
- **5** Preview main window is displayed.

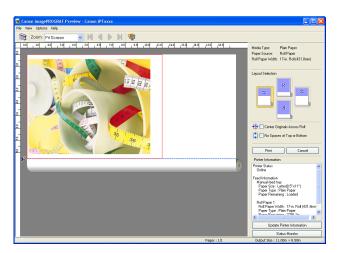

# **Preview Main Window**

The Preview main window consists of the menu and tool bars, preview and dialog area and status bar.

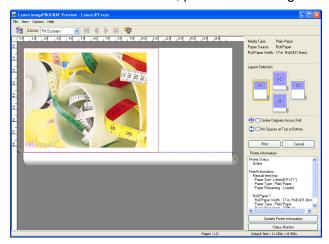



• You can use the **View** menu to show or hide the tool bar.

Menu Bar

This allows you to select menus required for operations.




Tool Bar

This allows you to select tool buttons required for major operations.




Preview Area

You can check the settings you made in this area.

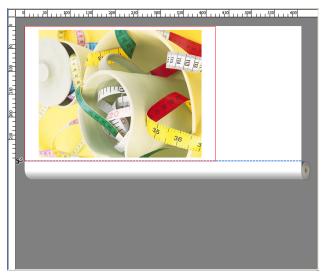

## · Dialog Area

This allows you to set the print conditions and perform a print job. For more information about Dialog Area, see "Dialog Area." →P.194

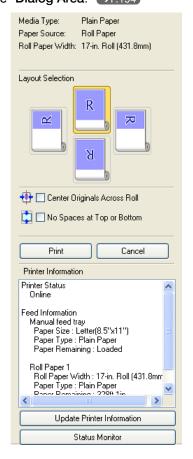


#### Status Bar

This shows the message, Pages and Output Size.

Rotating images 90 degrees can conserve paper. Pages: 1/1 Output Size: 11.7in ×16.5in

# **Dialog Area**

You can select the layout and print on the center.

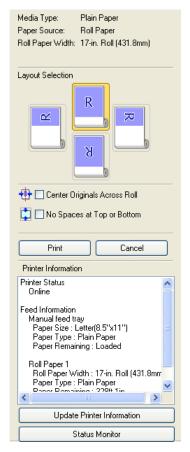

#### Media Type/Paper Source/Paper Size

You can confirm the information that is set.

## Layout Selection

You can print which conserves paper by selecting the layout.

For more information about Layout Selection, see "Printing with Selecting the Layout." >P.197

#### Center Originals Across Roll

You can print on the center of the media loaded in the printer.

For more information about Center Originals Across Roll, see "Print on the Center." (>>P.199)



Available only if rolls are selected in Paper Source.

#### No Spaces at Top or Bottom

You can save paper on not to feed roll paper for the empty spaces when the print data contains spaces at the top or bottom.

For more information about No Spaces at Top or Bottom, see "Not Print Spaces at the Top/Bottom." >P.200



Available only if rolls are selected in Paper Source.

### Print Button

Click the button to start printing.

194

iPF680

#### Cancel Button

Click the button to stop printing.

#### Printer Information

You can confirm the information acquired from the printer.

#### • Update Printer Information Button

Click the button to update the printer information with connecting to the printer.

#### • Status Monitor Button

Click the button to start Status Monitor.

# Enlarge/Reduce the screen display

You can enlarge or reduce the screen display when you select **Zoom** from the **View** menu.

Setting	Details
Fit Screen	Display all.
Fit to Width	Display to the width of the paper.
Reduce	Display at half of the standard size.
Standard	Display at the standard size.
Enlarge	Display with the double of the standard size.
Enlarge More	Display with the triple of the standard size.



This item can be selected even if you have clicked the ▼ button in the toolbar Zoom.


# **Moving a Page**

You can move a page to display when you select Go to Page from the View menu.

Setting	Details
First Page	Go to the first page.
Previous Page	Go to the previous page.
Next Page	Go to the next page.
Last Page	Go to the last page.
Go To Page	Go to the specified page.



You can also move a page by clicking

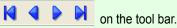

# Using the ruler

You can confirm the layout with using the ruler.

- Switching the ruler Show/Hide In the View menu, select Ruler to switch the ruler Show/Hide.
- · Changing the ruler unit

You can set the ruler unit when you select **Units** from the **View** menu.

Setting	Details
mm	Use mm as the ruler unit.
inch	Use inches as the ruler unit.


# **Priority setting for rotating 90 degrees**

You can select Rotate 90 Degrees If Possible or Use Driver Settings from the Options menu.




Setting	Details
Rotate 90 Degrees If Possible	Rotates pages in portrait orientation 90 degrees before printing. Pages are only rotated if they can fit lengthwise across the roll.
Use Driver Settings	Follows printer driver settings when determining whether to rotate pages.

Selecting Rotate 90 Degrees If Possible or Placing a checkmark for Rotate Page 90 degrees (Conserve Paper) on the printer driver

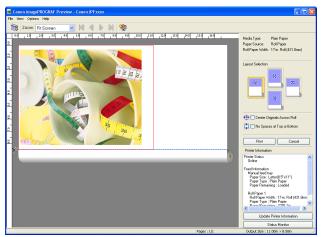

## Selecting Use Driver Settings

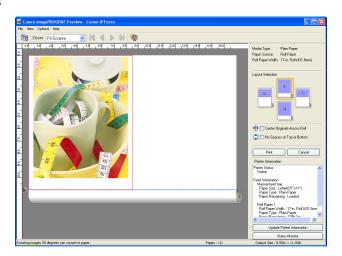

# **Printing with Selecting the Layout**

You can print which conserves paper by selecting the layout.

1

In Layout Selection, click the layout button to use.




Button	Details
Upper Button	Turn at the position of
Right Button	Turn at the position of
Left Button	Turn at the position of
Lower Button	Turn at the position of



• Right Button or Left Button can be selected only when the rotated pages can fit lengthwise across the roll.

Note • By clicking **Right Button** or **Left Button**, you can save paper by printing in landscape orientation on roll paper.

 You can select only Upper Button or Lower Button if Cut Sheet is selected.

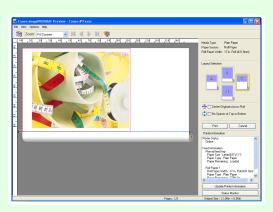

Button	Details
R	The button is selected currently.
R	The button can be selected.
R	The button can not be selected.

2 Click the **Print** button.

Printing on the selected layout begins.

# **Print on the Center**

You can print on the center of the media loaded in the printer.

1 Click the Center Originals Across Roll check box on.



Click the **Print** button.

Printing on the center begins.



• Available only if rolls are selected in **Paper Source**.

# **Not Print Spaces at the Top/Bottom**

You can save paper on not to feed roll paper for the empty spaces when the print data contains spaces at the top or bottom.

1 Click the No Spaces at Top or Bottom check box on.



2 Click the **Print** button.

Printing on the settings with no spaces at top or bottom begins.


# Free Layout

The Features of Free Layout	201
The Features of Free Layout	202
Free Layout Main Window	203
Detailed Settings	
Preferences Dialog Box	
Page Options Dialog Box	
Zoom Dialog Box	
Format Dialog Box	
Laying out a Multiple-File Document on One Page	209
Laying out a Document Created with Multiple Application Programs on One Page	
Selecting an Object	
Changing the Object Size	
Moving an Object	
Rotating an Object	
Laying out Objects Automatically	
Aligning Objects	
Changing the Object Overlapping Order	
Pasting a Copied or Cut Object	
Folded Duplex Window	220
Finished Size Settings Dialog Box	
Binding Settings Dialog Box	
Prints using Folded Duplex	
THING USING TOILED DUPIES	443

# **The Features of Free Layout**

The main features of Free Layout are as follows.

- Allows you to lay out at will and print a document created with application software.
- You can not only lay out multiple pages on one page but also lay out and print a multiple-file document on one page, or lay out and print a document created with multiple application programs on one page.
- Any two pages can be arranged and printed in a layout that becomes duplex on folding. This can be used such as for advertising posters that are suspended from the ceiling.

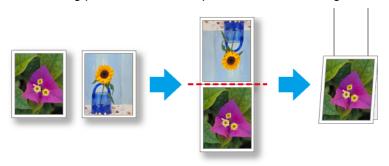



 The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Free Layout settings. iPF680


## **Starting Free Layout**

Follow the procedure below to start the Free Layout.

- Start the apllication software which you use.
- From the application software's File menu, select the printer setup menu to open the Print dialog box.



Normally, select Print from the File menu.

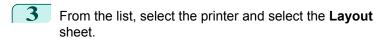





- Your printer is depicted in the lower-left area of this screen.
- In the Layout sheet, click on the Page Layout check box and select Free Layout from the list. Click the **OK** button to save the settings.




When you select Free Layout, all other setting items will be disabled.

IPF08U Free Layout I

5

On the **Print** dialog box in the apllication software, click the **Print** button.

Free Layout main window is displayed.

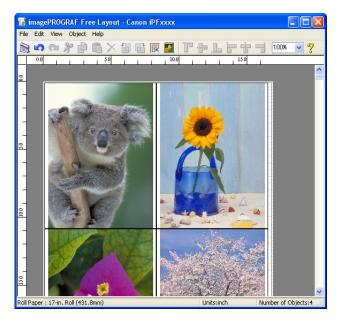

# Free Layout Main Window

The Free Layout main window consists of the menu and tool bars, layout area and status bar.




Note

• You can use the **View** menu to show or hide the tool and status bar.

• Menu Bar

This allows you to select menus required for operations.

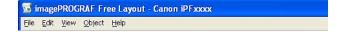

Tool Bar

This allows you to select tool buttons required for major operations.




Layout Area

This allows you to lay out objects and edit the object size and orientation.



Status Bar

This shows the paper size, unit of length, and number of objects.

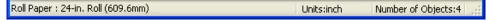

# **Detailed Settings**

The printer driver opens when you select **Detailed Settings** from the **File** menu. The printer driver is used to configure basic settings to match the type of media loaded in the printer.




Refer to "Printer Driver" >P.158) for details on the printer driver.



 When you select the **Detailed Settings**, the only three sheets displayed are the **Main** sheet, the **Page Setup** sheet, and the**Layout** sheet. Some of the printer driver settings may be disabled.

# **Preferences Dialog Box**

This dialog box appears when you select **Preferences** from the **File** menu. This allows you to configure the preferences of Free Layout.

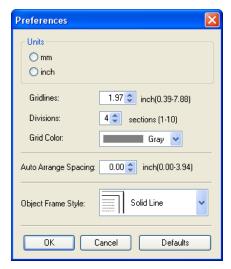

## Units

Set the unit for paper length, margins, and so on.

#### Gridlines

You can input a grid line width value in numerical characters so that they serve as a guide to laying out objects.



- You can input between 10.0 and 200.0(mm) (between 0.39 and 7.88(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

## Divisions

You can change the number of divisions of grid lines so that they serve as a guide to laying out objects.



- You can input between 1 and 10.
- You can change the numbers by clicking either ▲ button or ▼ button.

#### Grid Color

Select the grid line color.

#### Auto Arrange Spacing

Change the object-to-object spacing to be applied in the operation of laying out objects automatically.



- You can input between 0.0 and 100.0(mm) (between 0.00 and 3.94(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

#### Object Frame Style

You can select the object frame style for printing.

The following settings are available for the object frame style.

Setting	Details
None	You can print with no frame style.

Setting	Details
Solid Line	You can print the solid line as the frame style.
Dotted Line	You can print the dotted line as the frame style.
Dashed Line	You can print the dashed line as the frame style.
Crop Marks	You can print with the crop marks.

# **Page Options Dialog Box**

This dialog box appears when you select **Page Options** from the **File** menu. This allows you to configure the roll paper length, object layout order, and margins of Free Layout.



## Roll Paper Length

Set the length of one page to print on roll paper.

The following settings are available for roll paper length.

Setting	Details
Auto Settings	The one-page length to be printed on roll paper is automatically set so that the laid-out objects are printed on one page.
Manual Settings	You can input the length of one page to print on roll paper in numerical characters.



- Available only if rolls are selected in **Paper Source**.
- You can input between 203.2 and 18000.0(mm) (between 8.00 and 708.66(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

## Order

Set the object layout order.

The following settings are available for order.

Setting	Details
Upper Left to Right	The objects are laid out from upper left to right.
Upper Left to Bottom	The objects are laid out from upper left to bottom.
Upper Right to Left	The objects are laid out from upper right to left.
Lower Left to Top	The objects are laid out from lower left to top.

iPF680 Zoom Dialog Box



 When you have selected Roll Paper Length > Auto Settings and Paper Orientation > Vertical, you can choose Upper Left to Right or Upper Right to Left.

 When you have selected Roll Paper Length > Auto Settings and Paper Orientation > Horizontal, you can choose Upper Left to Bottom or Lower Left to Top.

## Margins


You can input the paper margins in numerical characters.



- You can input between 0.0 and 50.0(mm) (between 0.00 and 1.97(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

# **Zoom Dialog Box**

This dialog box appears when you select **Zoom** from the **View** menu. You can enlarge or reduce the screen display.

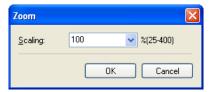

## Scaling

Set the magnification for enlargement or reduction of the screen display.




- You can input between 25 and 400.
- You can change the numbers by clicking ▼ button.

# **Format Dialog Box**

This dialog box appears when you select Format from the Object menu after you select an object.

#### Size Sheet

You can rotate, enlarge, or reduce an object.

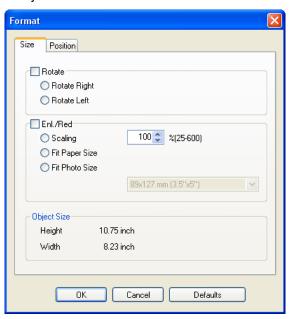



· When the objects are not selected, you can not select Format.

#### Rotate

When you place a checkmark here, you can select Rotate Right or Rotate Left.

Setting	Details
Rotate Right	Rotates the object 90 degrees clockwise.
Rotate Left	Rotates the object 90 degrees counterclockwise.



• When several objects are selected, you cannot select **Rotate**.

## • Enl./Red.

When you place a checkmark here, you can select Scaling, Fit Paper Size, or Fit Photo Size.


Setting	Details
Scaling	Allows you to input the value of the enlargement or reduction ratio of an object.
Fit Paper Size	Prints by enlarging or reducing each object to match the paper size. If you are using roll paper, objects are enlarged or reduced so that the width of each object matches the width of the roll paper.
Fit Photo Size	Prints all of the objects at the specified photo size.



- You can input between 25 and 600.
- You can change the numbers by clicking either ▲ button or ▼ button.

## **Position** Sheet

You can rotate, enlarge, or reduce an object.

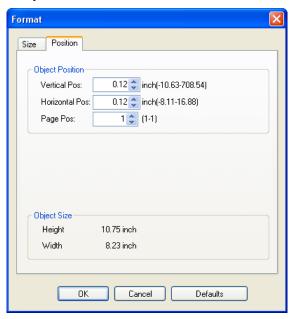

208



• When the objects are not selected, you can not select Format.

## Object Position

You can move the object position by changing the values.

Setting	Details
Vertical Pos	You can input the number of the vertical position in numerical characters.
Horizontal Pos	You can input the number of the horizontal position in numerical characters.
Page Pos	You can input the number of the page position in numerical characters.

## Object Size

You can confirm the object size.



• When several objects are selected, you cannot display **Object Size**.

# Laying out a Multiple-File Document on One Page


You can lay out and print a multiple-file document on one page.

From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



• Normally, select **Print** from the **File** menu.

2 Click **Properties** to open the **Properties** dialog box.

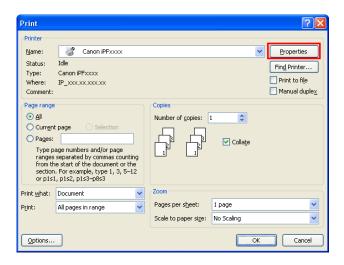


In the Page Setup sheet, select Paper Source.






- Your printer is depicted in the lower-left area of this screen.
- In the Layout sheet, click on the Page Layout check box and select Free Layout from the list.

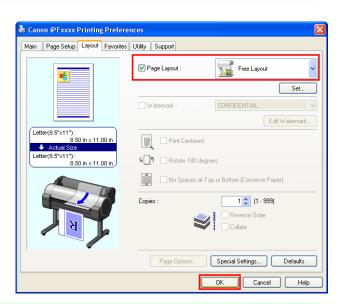



- Your printer is depicted in the lower-left area of this screen.
- When you select Free Layout, all other setting items will be disabled.
- 5 Click the **OK** button to save the settings.

In the **Print** dialog box, select the pages to print and the number of copies, and click the **OK** button.

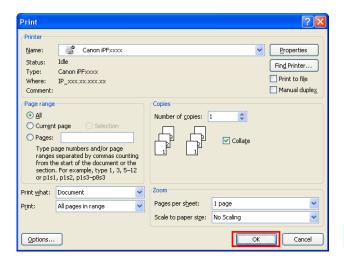

Free Layout starts, laying out the document created with application software in the layout area as an object.



7 Leaving Free Layout running, open other files with the application software and repeat the above steps.

# Laying out a Document Created with Multiple Application Programs on One Page


You can lay out and print a document created with multiple application programs on one page.

From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



• Normally, select **Print** from the **File** menu.

Click Properties to open the Properties dialog box.

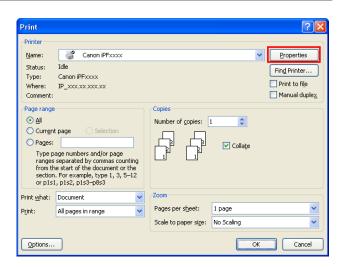


In the Page Setup sheet, select Paper Source.






- Your printer is depicted in the lower-left area of this screen.
- In the Layout sheet, click on the Page Layout check box and select Free Layout from the list.

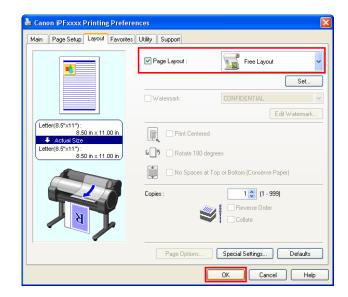




- Your printer is depicted in the lower-left area of this screen.
- When you select Free Layout, all other setting items will be disabled.
- 5 Click the **OK** button to save the settings.
- In the **Print** dialog box, select the pages to print and the number of copies, and click the **OK** button.

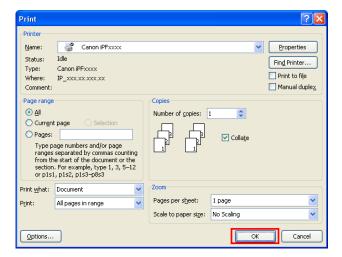

Free Layout starts, laying out the document created with application software in the layout area as an object.

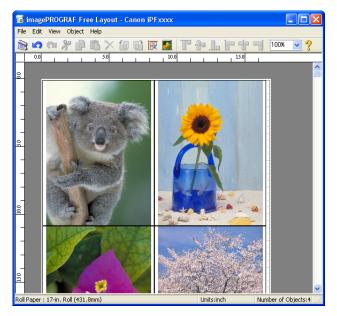

Leaving Free Layout running, open other files with other application software and repeat the above steps.

#### Selecting an Object iPF680


## Selecting an Object

When an object is selected, a select box (blue border) appears around the object.





- To select an object, click that object.
- Note To select multiple successive objects, click them while holding down the Shift key.
  - To select multiple arbitrary objects, click them while holding down the Ctrl key.
  - To select all objects, select **Select All** from the **Edit** menu.
  - When you specify the area with dragging the mouse, the object in the area is selected.

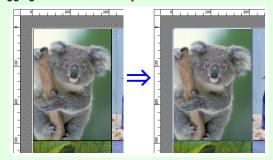

# **Changing the Object Size**

You can change the object size by means of mouse operation or by specifying a scaling value.




• The vertical-to-horizontal ratio remains unchanged when the object is enlarged or reduced.

# Resizing by means of mouse operation



Select an object.

Place the pointer at a corner of the selection box around the object to show the arrow handle, and drag this handle to change the object size.

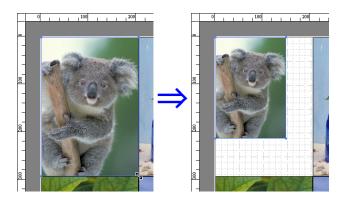

## Resizing by specifying a scaling value

- Select an object.
  Click on the Enl./Red. checkbox in the Format Dialog Box →P.207 and select Scaling.
- You either enter numbers directly.




- You can input between 25 and 600.
- You can change the numbers by clicking either ▲ button or ▼ button.
- 3 Click the **OK** button.

## **Moving an Object**

You can move the object position.

- 1 Select an object.
- Place the pointer inside the selection box of the object to show the crosshair handle, and drag it to move the object.

Alternatively, you can move the **Object Position** by changing the values in **Vertical Pos**, **Horizontal Pos** and **Page Pos** in the Format Dialog Box P207.

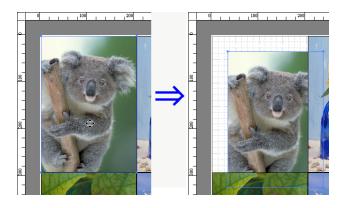


# **Rotating an Object**

You can rotate the object.

1 Select an object.


Select Rotate Left 90 Degrees orRotate Right 90 Degrees from the toolbar.

Alternatively, you may click on the **Rotate** check box in the **Format Dialog Box** → P.207 then select **Rotate Right** or **Rotate Left**, and click the **OK** button.

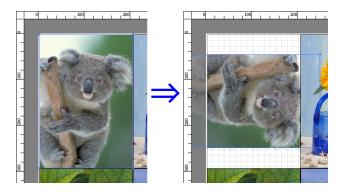

# **Laying out Objects Automatically**

Click **Auto Arrange Object** in the tool bar. This automatically lays out objects. Alternatively, you may select **Auto Arrange Object** from the **Object** menu.

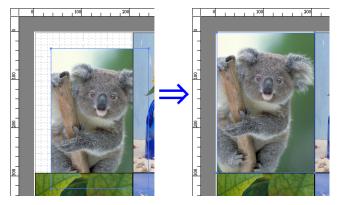




• The object layout order varies depending on the **Order** setting in the **Page Options Dialog Box P.206** dialog box.

# **Aligning Objects**

You can align objects systematically.

- 1 Select multiple objects.
- Click the align button from the toolbar.


  Alternatively, you may select the align menu from the **Object** menu.
  - Align Top
     Lays out the objects, justifying them to the top.

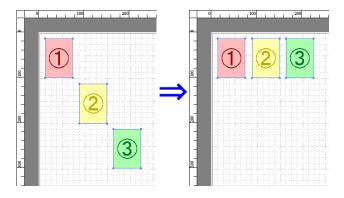

Aligning Objects


#### Center Vertically

Lays out the objects, justifying them to the vertical center.

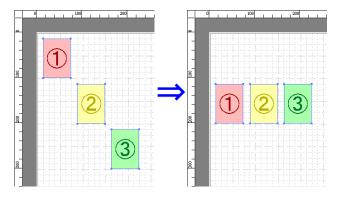


#### Align Bottom

Lays out the objects, justifying them to the bottom.

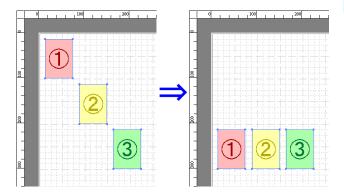


### Align Left

Lays out the objects, justifying them to the left.

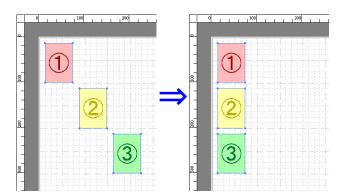


#### Center Horizontally

Lays out the objects, justifying them to the horizontal center.

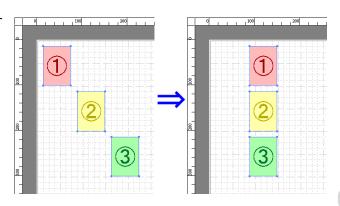

#### Align Right

Lays out the objects, justifying them to the right.

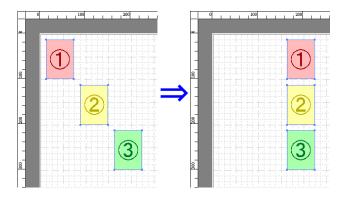

# **Changing the Object Overlapping Order**

You can change the object overlapping order.


- 1 Select an object.
- 2 Select the Overlapping Order menu from the **Object** menu.



- The order of overlapping affects the order of objects automatically laid out.
- You can also select by clicking the right button of the mouse on an object.


### Bring to Front

Moves the object to the frontmost position.

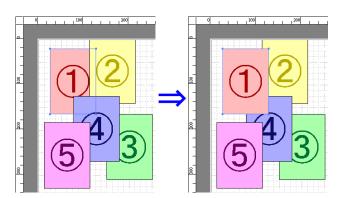


#### Send to Back

Moves the object to the backmost position.

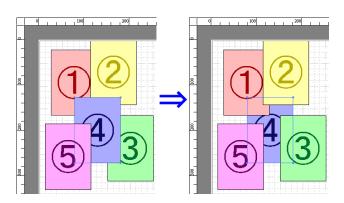


#### Bring Forward

Moves the object one position to the front.

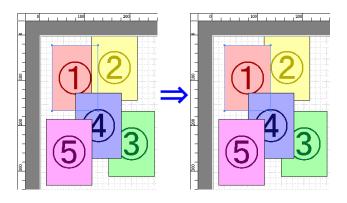

#### Send Backward

Moves the object one position to the back.

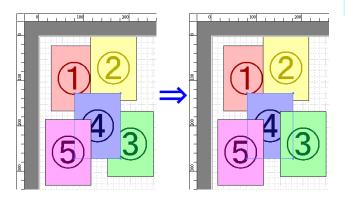

# **Pasting a Copied or Cut Object**

- Click **Copy** or **Cut** from the toolbar.

  Alternatively, you may select **Copy** or **Cut** from the **Edit** menu.
- Click **Paste** from the toolbar.

  Alternatively, you may select **Paste** from the **Edit** menu.



- The copied or cut object is laid out at the end of the page.
- You can also select by clicking the right button of the mouse on an object.
- In order to paste an object on any position that you like, you can paste the object with **Pointed Paste** by clicking the right button of the mouse on any position that you want.

### **Folded Duplex Window**

This window is displayed if you select **Folded Duplex** from the **Edit** menu after selecting an object. Using the **Folded Duplex** function allows you to print with fold lines added.

The Folded Duplex window consists of the menu and tool bars, layout area and status bar.





• The toolbar and status bar can be toggled between hidden and displayed from the View menu.


Menu Bar

This allows you to select menus required for operations.




Tool Bar

This allows you to select tool buttons required for major operations.

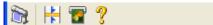


#### Layout Area

This allows you to check the arrangement and orientation of objects.

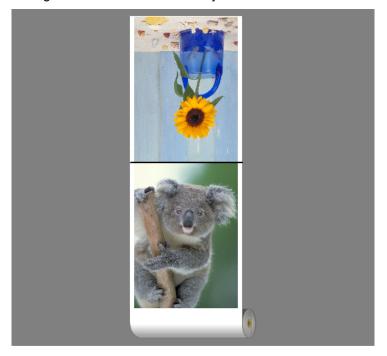


#### Status Bar

This shows the paper source, roll paper width, and output size.

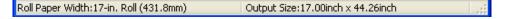

# **Finished Size Settings Dialog Box**

This dialog box is displayed when you select **Finished Size Settings** from the **Edit** menu. This allows you to configure finished size settings.

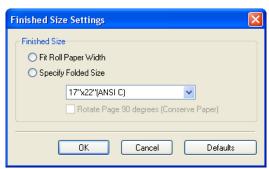

#### Finished Size

Selects the method for setting the finished size.


The following settings are available for the finished size.

Setting	Details
Fit Roll Paper Width	Prints by automatically enlarging or reducing the entire document so that the width of the document matches the roll paper width.
Specify Folded Size	Prints by automatically enlarging or reducing the entire document to match the size of the paper. Select the actual size of the paper you want to print on in <b>Fit Paper Size</b> .

Setting	Details
Rotate Page 90 degrees (Conserve Paper)	Prints by rotating pages by 90 degrees. Pages are automatically rotated if they will fit within the roll paper width when rotated, and are not rotated if they will not fit within the roll paper width.

# **Binding Settings Dialog Box**

This is displayed when you select **Binding Settings** from the **Edit** menu. This allows you to configure the binding edge settings.

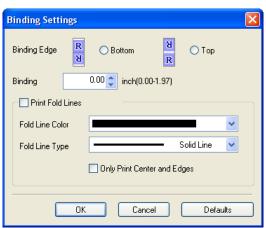

#### Binding Edge

Configures the binding edge when folding paper.

The following settings are available for the binding edge.

Setting	Details
Bottom	Prints by placing the binding margin (gutter) at the bottom of the document.
Тор	Prints by placing the binding margin (gutter) at the top of the document.

#### Binding

Configures the binding margin (gutter).

Prints by creating a binding margin (gutter) of the specified size. Enter the margin size as a number.



The values that can be entered are 0 to 50 (mm).

#### Print Fold Lines

Configures the color and type of fold lines.



To not print fold lines, clear the Print Fold Lines checkbox.

#### Fold Line Color

You can select the fold lines.

#### Fold Line Type

You can select the fold lines.

The following settings are available for the fold line type.

Setting	Details
Solid Line	You can print the solid line as the frame style.
Dotted Line	You can print the dotted line as the frame style.

Setting	Details
Dashed Line	You can print the dashed line as the frame style.

#### Only Print Center and Edges

To print fold lines at the center and both edges, select the **Only Print Center and Edges** checkbox.

### **Prints using Folded Duplex**

This prints 2 pages consecutively. Folding back the paper at the fold lines of the center substitutes for duplex printing.

- Select two objects from the layout area of Free Layout.
- Select Folded Duplex from the Edit menu of Free Layout.

  Open the Folded Duplex window and arrange the selected objects in the layout area.
- Open the Finished Size Settings dialog box from the Edit menu.
- 4 Select Fit Roll Paper Width or Specify Folded Size in Finished Size.



- Rotate Page 90 degrees (Conserve Paper) is also available when Specify Folded Size is selected.
- 5 Click **OK** to save the settings.
- 6 Open the Binding Settings dialog box from the Edit menu.
- 7 Select Bottom or Top in Binding Edge.
- 8 Specify the **Binding** width in **Binding**.
- Oonfigure the Fold Line Color and Fold Line Type from Print Fold Lines.



- When the Only Print Center and Edges checkbox is selected, fold lines are only printed at the three locations of the center and both edges.
- 10 Click **OK** to save the settings.
- 11 Confirm the print setting and begin printing.

The Features of Color imageRUNNER Enlargement Copy	
Color imageRUNNER Enlargement Copy Dialog Box	225
Hot Folder Creating a New Hot Folder Specifying an Existing Shared Folder as a Hot Folder	227
Setting the Print Parameters	

# The Features of Color imageRUNNER Enlargement Copy

The main features of Color imageRUNNER Enlargement Copy are as follows.

- Allows the document scanned with the Color imageRUNNER to be automatically enlarged and printed.
- You can perform basic printer settings such as printer selection, media type and output profile selection, and matching methods, in addition to borderless printing and enlargement/reduction process without growing through the printer driver.



 The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Color imageRUNNER Enlargement Copy settings.


### **Starting Color imageRUNNER Enlargement Copy**

Follow the procedure below to start the Color imageRUNNER Enlargement Copy.


#### To start by selecting Printers and Faxes from the start button

- Open the folder of the OS you are using for configuring printers.

  For example, on Windows XP click the **start** button on the desktop, and then select **Printers and Faxes**.
- Right-click the Printers icon and select Printing Preferences to open the Printing Preferences dialog box. In the Utility sheet, click the Color imageRUNNER Enlargement Copy button.

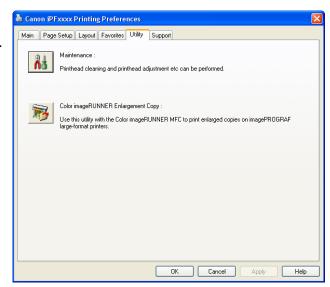

The Color imageRUNNER Enlargement Copy dialog box displays.

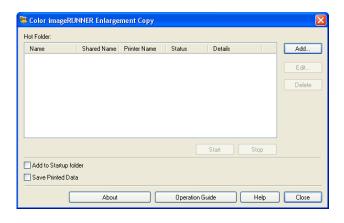




• If you click on the **Add to Startup folder** check box in the **Color imageRUNNER Enlargement Copy** dialog box, the icon of Color imageRUNNER Enlargement Copy utility will appear on the task bar when starting Windows thereafter.

#### To start by selecting Color imageRUNNER Enlargement Copy from the start button

1 From the Windows start button, select Color image-RUNNER Enlargement Copy.






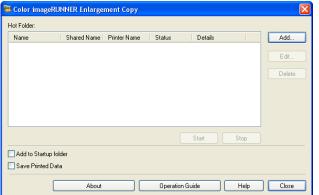

# **Color imageRUNNER Enlargement Copy Dialog Box**

The explanation below is on the Color imageRUNNER Enlargement Copy dialog box.

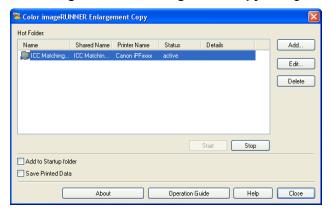



For the step to open the Color imageRUNNER Enlargement Copy dialog box, see "Starting Color imageRUNNER Enlargement Copy." →P.224

#### Hot Folder

The hot folder list appears.

#### Add Button

Click the button to open the Easy Setup Wizard dialog box so that you can add a hot folder.

#### • Edit Button

From the **Hot Folder** list, select a hot folder and click the button to open the **Add/Edit Hot Folder** dialog box that allows you to edit the hot folder.

#### • Delete Button

From the Hot Folder list, select a hot folder and click the button to delete the hot folder.

#### • Start Button

Clicking the button changes the status of the selected **inactive** Hot Folder to **active**.

#### • Stop Button

Clicking the button changes the status of the selected **active** Hot Folder to **inactive**.

#### Add to Startup folder

Register the application in the Windows startup menu.

#### Save Printed Data

Automatically saves printed data.

#### About Button

Click the button to display the name and the version number of the utility.

#### • Operation Guide Button

Click the button to display the Color imageRUNNER Enlargement Copy Setup Manual.

#### **Hot Folder**

Hot folder refers to a folder used for Color imageRUNNER Enlargement Copy.

- When transferred to the PC's hot folder, the document data scanned with the Color imageRUNNER is printed in enlarged size from the printer according to the print conditions set in the hot folder.
- You can create a new hot folder, edit or delete an existing one, and set print conditions at will.



You can create up to 20 hot folders.


Note

iPF680

iPF680 Creating a New Hot Folder

### **Creating a New Hot Folder**

1 Open the Color imageRUNNER Enlargement Copy dialog box, and then click the Add button.

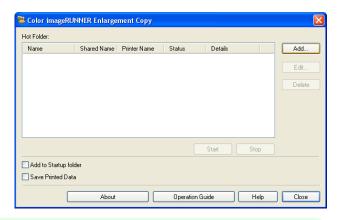



- For the step to open the Color imageRUNNER Enlargement Copy dialog box, see "Starting Color image-RUNNER Enlargement Copy." →P.224
- The Easy Setup Wizard dialog box displays. Click the Next button.



3 Select the type of printer to use. Click the **Next** button.




4 Select the media type to print.




• If the **Borderless Printing** checkbox is checked, only media types that can be used for borderless printing are displayed in the list.


Click the Next button.

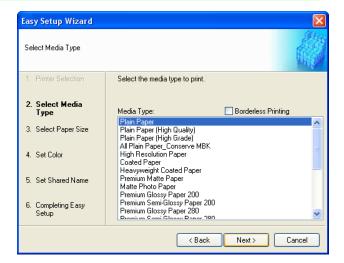

Select roll paper or cut sheet to print. Also, select the media size to print.
Click the **Next** button.

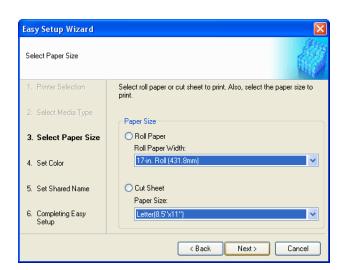

Select the color matching method.
Click the **Next** button.

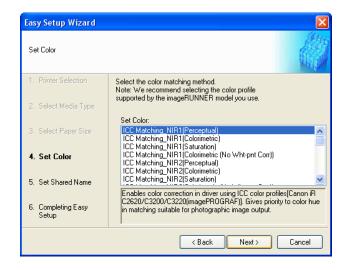


iPF680 Creating a New Hot Folder


To receive a document scanned with the Color imageRUNNER, you need to share a folder. Enter the folder shared name in **Shared Name**. Click the **Next** button.




- This shared name is used as the name of the hot folder.
- You cannot use the **Back** button, after clicking the **Next** button here.

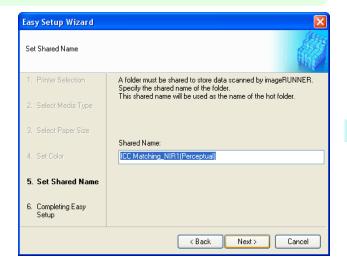

8 Click Finish button to close the Easy Setup Wizard dialog box.

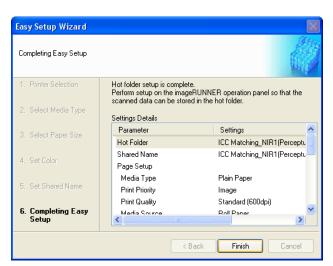


The hot folder you have created appears in the **Hot Folder** list in the **Color imageRUNNER Enlargement Copy** dialog box.

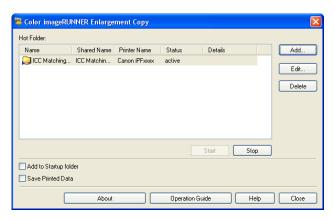

### Specifying an Existing Shared Folder as a Hot Folder

- 1 Share the folder you want to specify as a hot folder.
- Open the Color imageRUNNER Enlargement Copy dialog box, and then click the Add button.

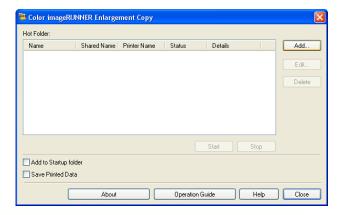




- For the step to open the Color imageRUNNER Enlargement Copy dialog box, see "Starting Color image-RUNNER Enlargement Copy." >P.224
- The Easy Setup Wizard dialog box displays. Click the Manual Settings button.



The Add/Edit Hot Folder dialog box displays.
Enter the hot folder name in Name.
Click the Browse botton, with selecting Specify a folder, to set the existing shared folder.

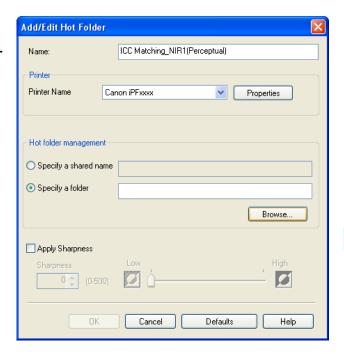


The location of the folders will appear.
Select the folder to specify a hot folder, and click the **OK** button.




6

As necessary, set the print conditions in the hot folder. (See "Setting the Print Parameters.") P.233 Click the **OK** button to close the **Add/Edit Hot Folder** dialog box.

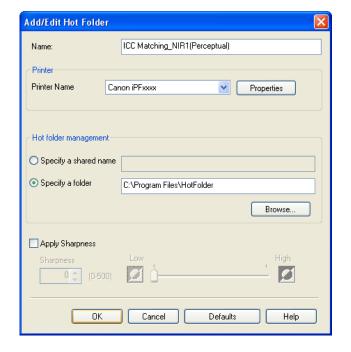


The hot folder you have created appears in the **Hot Folder** list in the **Color imageRUNNER Enlargement Copy** dialog box.

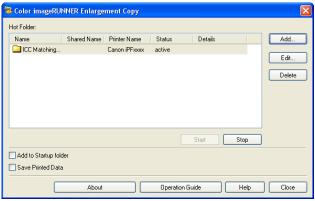

Setting the Print Parameters

# Setting the Print Parameters

The printer driver opens when you click the **Properties** button in the **Add/Edit Hot Folder** dialog box. The printer driver is used to configure basic settings to match the type of media loaded in the printer.

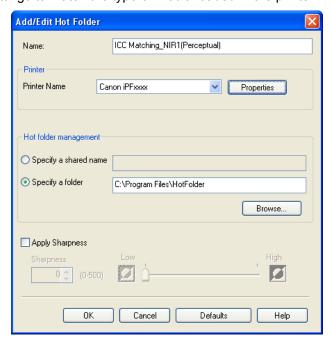

Refer to "Printer Driver" >P.158 for details on the printer driver.



 The only three sheets displayed are the Main sheet, the Page Setup sheet, and the Layout sheet. Some of the printer driver settings may be disabled.

#### Apply Sharpness

Place a checkmark here to set the sharpness.

Drag the slider bar to the left or right to adjust. You can also adjust by directly entering a number in the numeric input field.



- You can input between 0 and 500.
- You can change the numbers by clicking either ▲ button or ▼ button.
- You cannot be applied to PDF files.

# Printing Enlargements of Scanned Originals from a Color imageRUNNER

Scanned originals from a Color imageRUNNER can be enlarged and printed automatically.

Originals you create by scanning with a Color imageRUNNER are transferred to a "hot folder" and printed automatically after enlargement according to printing conditions you specify for that folder.

This processing sequence is called the **Color imageRUNNER Enlargement Copy** function.

To use Color imageRUNNER Enlargement Copy, first complete these settings in the following order.

- 1. Register a hot folder on your computer.

  Register a hot folder on your computer for storing scanned originals from the Color imageRUNNER and complete the settings for enlargement copy. For details, see "Creating a New Hot Folder." >P.227
- Complete the scanning settings on the Color imageRUNNER. Configure the Color imageRUNNER to send scanned originals to the hot folder.

After these settings are complete, you can print enlarged copies of scanned originals from the Color imageRUNNER.

#### Completing the scanning settings on the Color imageRUNNER.

Configure the Color imageRUNNER to send scanned originals to the hot folder. It is easy to send scanned originals to the hot folder if you assign the scanning settings and destination to a **Favorites** button on the Color imageRUNNER. For instructions on assigning scanning settings and destinations to a **Favorites** button, refer to the setting manual, displayed by clicking **Color imageRUNNER Enlargement Copy Setup Manual** button of **Color imageRUNNER Enlargement Copy** utility, or refer to the Color imageRUNNER manual.

#### Scanning the original and print an enlargement

Follow the steps below to scan an original on the Color imageRUNNER for enlarged printing on the printer. For detailed instructions, refer to the Color imageRUNNER manual.

- 1 Load the original on the platen glass or document feeder of the Color imageRUNNER.
- Press **Send** to display the screen for transmission.
- Press Favorites, and then press the Favorites button assigned to the hot folder.
- 4 Press **Start** on the control panel. If you scan originals on the platen glass, after scanning all originals, press **Done** on the touch-panel display.

Scanned originals are sent to the hot folder and automatically enlarged and printed following the conditions you specified for the folder.

# Print Plug-In for Office

Print Plug-In for Officefeatures	235
Steps to install	
Steps to uninstall	238
When Print Plug-In for Office is not displayed	
To short from Microsco (4 VM/s and	242
To start from Microsoft Word	
Print Matching Roll Width(Word)	
Borderless Printing(Word)	
Multi-Page Printing(Word)	
Register the settings (Word)	
Print Using Registered Settings(Word)	
Portrait Orientation/Landscape Orientation(Word)	253
To start from Microsoft PowerPoint	254
Print Matching Roll Width(PowerPoint)	
Borderless Printing(PowerPoint)	
Multi-Page Printing(PowerPoint)	
Register the settings (PowerPoint)	
Print Using Registered Settings(PowerPoint)	
Portrait Orientation/Landscape Orientation(PowerPoint)	
Totale Officialion Landocape Officialion (Fower officialist)	203
To start from Microsoft Excel	266
Print Entire Sheet(Excel)	
Print Selected Area(Excel)	
Configuring Binding (Excel)	
Configuring Special Settings	274

# **Print Plug-In for Officefeatures**

**Print Plug-In for Office** is a Plug-In that enables easy printing from **Microsoft Office**.

- It is displayed on the toolbar/ribbon, so it is easily accessible.
- It can be set by just selecting from the Wizard.
- Large-Format Printing custom size can also be set in the Wizard from Microsoft Word or Microsoft Power-Point
- Custom size can be set automatically from Microsoft Excel.
- The layout can be checked before printing by starting the preview screen.



• 64 bit edition Windows OS operates only on WOW64 (32 bit emulator).



- The Print Plug-In for Office toolbar/ribbon might not be displayed in Microsoft Office after installing imagePROG-RAF Print Plug-In for Office. For details, refer to "When Print Plug-In for Office is not displayed" (>P.239).
- If you opened the Office document from Internet Explorer, the software will not run correctly.
- If you are editing an embedded object or link object, the software will not run correctly.
- If you added the imagePROGRAF Print Plug-In ribbon to the Microsoft Office Quick Access toolbar, the software will not run correctly.

### Steps to install

Below are the steps to install **Print Plug-In for Office**.



• You must log into Windows as an Administrator before the installation.



Insert "User Software CD-ROM" into the CD-ROM drive and start the installer.



 If the installer screen does not appear automatically, open the CD-ROM drive icon of your computer and double-click the iPFInst.exe icon.

2

Click the imagePROGRAF Print Plug-In button.




Click the **Next**button.



Read the License Agreement, and click the Yes but-



5 Click the **Start** button.

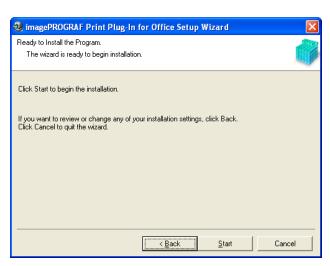


6 Click the **Yes** button.






 The following message may be displayed in Windows 8 or a later OS. If this happens, install the .NET Framework by following the procedure.

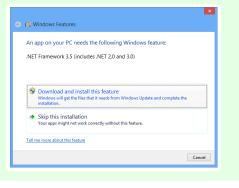

Click the Exit button.

The installation for Print Plug-In for Office is complete.

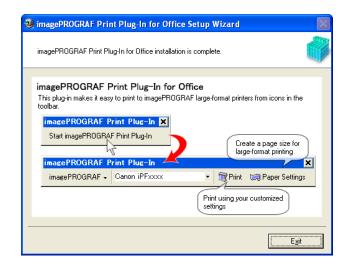




- When you install this software, the virtual printer Canon imagePROGRAF PrintPlugIn may be installed. If you want to use this software, do not uninstall the virtual printer Canon imagePROGRAF PrintPlugIn.
- The Print Plug-In for Office toolbar/ribbon might not be displayed in Microsoft Office after installing imagePROG-RAF Print Plug-In for Office.
  - Refer to the following topic for details on how to display the imagePROGRAF Print Plug-In for Office toolbar/ribbon.
  - When Print Plug-In for Office is not displayed →P.239

# Steps to uninstall

Below are the steps to uninstall **Print Plug-In for Office**.

- If Microsoft Office is open, close it.
- Select Control Panel from the start menu.
- Open Add or Remove Programs.
- Select imagePROGRAF Print Plug-In, and click the Remove button.

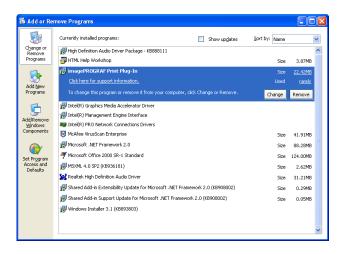



 You cannot uninstall Print Plug-In for Office if an Office application is running. When a message appears, select Can**cel** and close all Office applications that are running.

### When Print Plug-In for Office is not displayed

Buttons such as **Start imagePROGRAF Print Plug-In** sometimes do not appear in the **Word**, **PowerPoint** and **Excel** Office applications, and the **Print Plug-In for Office** functions are not available.

In this event, re-install **Print Plug-In for Office**.

If you are using **Microsoft Office 2003** or later, you can also enable add-ins to display **Print Plug-In for Office**. See below for the procedure for re-installing the plug-in or enabling add-ins.

#### Re-installing Print Plug-In for Office

If a problem occurs, such as the system or an application terminating abnormally, the **Microsoft Office** application disables add-ins as a safety precaution.

In this event, you will need to re-install **Print Plug-In for Office** to display the **imagePROGRAF Print Plug-In** toolbar/ribbon.



• You cannot re-install **Print Plug-In for Office** once an Office application is running. When the message appears, select **Cancel** and close the active Office application.

#### Re-install Print Plug-In for Office as follows:





Install Print Plug-In for Office.

For information about instsalling, see "Steps to install." →P.236

### Enabling Print Plug-In for Office for items disabled in Office applications


If a problem occurs, such as the system or an application terminating abnormally, the **Microsoft Office** application disables add-ins as a safety precaution.

In this event, you will need to restore the disabled add-ins in order to display the **imagePROGRAF Print Plug-In** tool-bar/ribbon.

Use the procedure below to restore the add-ins disabled by Microsoft Office.


For Microsoft Office 2010 or later



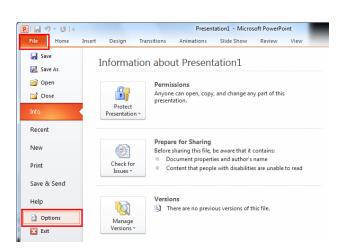


From the list on the left side of the <application name> options dialog box, select Add-ins.

3 Select **Disabled Items** in the **Manage** combo box and click the **Go** button.

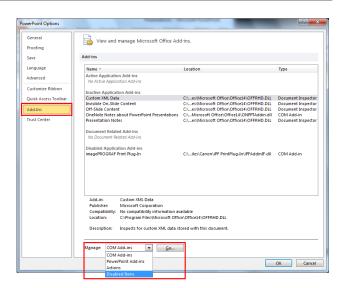

4 If Addin imageprograf print plug-in (ipfaddinif.dll) is displayed in the **Disabled Items** dialog box, select it and click the **Enable** button.

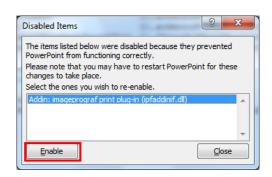


- 5 Close all the dialog boxes and restart the Office application.
  - For Microsoft Office 2007
- Click the **Office** button and then click the **<application** name**> options** button.




From the list on the left side of the <application name> options dialog box, select Add-ins.

3 Select **Disabled Items** in the **Manage** combo box and click the **Go** button.

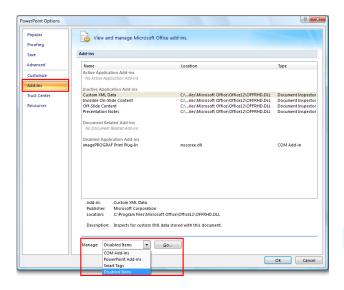


If Addin imageprograf print plug-in (ipfaddinif.dll) is displayed in the **Disabled Items** dialog box, select it and click the **Enable** button.

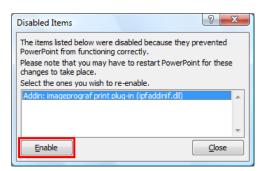


- 5 Close all the dialog boxes and restart the Office application.
  - For Microsoft Office 2003
- 1 Click About <application name> in the Help menu of application.



Click the **Disabled Items** button in the **About <appli-**cation name> dialog box.

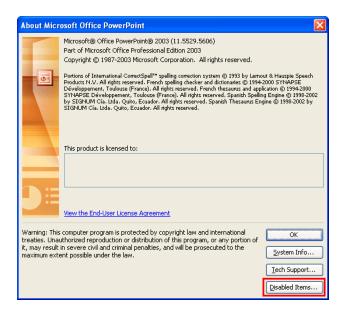

If Addin imageprograf print plug-in (ipfaddinif.dll) is displayed in the Disabled Items dialog box, select it and click the Enable button.

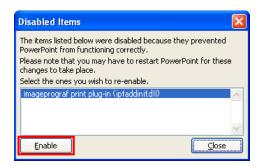

Close all the dialog boxes and restart the Office application.

# To start from Microsoft Word

Below are the steps to start Print Plug-In for Office from Microsoft Word.

- 1 Start Microsoft Word.
- If Start imagePROGRAF Print Plug-In is displayed on the toolbar/ribbon, click it.



- If the imagePROGRAF Print Plug-In toolbar/ribbon is not displayed, refer to the following.

Important • "When Print Plug-In for Office is not displayed" →P.239

3 Check that the imagePROGRAF Print Plug-In toolbar/ribbon is displayed.






Click the buttons on the toolbar/ribbon according to the items you want to set.

Icon	Contents
imagePROGRAF *	Displays the <b>About</b> , <b>Help</b> , and <b>Special Settings</b> dialog boxes. You can change the settings using the <b>Special Settings</b> dialog box.
Meriu	Refer to "Configuring Special Settings" →P.274 for details.
Canon iPFxxxx ▼ Printer list	Select Printer.  If you select <b>Show All Printers</b> , the <b>imagePROGRAF</b> printers will be displayed again. Select this when you want to display all printer drivers or update the display.
Print	The print Wizard is displayed. The settings <b>Print Matching Roll Width</b> , <b>Borderless Printing</b> , <b>Multi-Page Printing</b> , and <b>Print Using Registered Settings</b> can be set.
<b>Print</b> Button	
	Large-Format Wizard is displayed. Settings for Portrait or Landscape Orientation can be set.
Paper Settings	
Paper Settings Button	

#### Printing Wizard dialog box

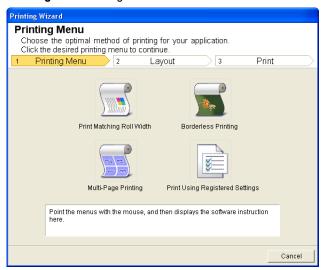




• If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.

Print Matching Roll Width(Word) iPF680

#### Large-Format Printing Wizard dialog box

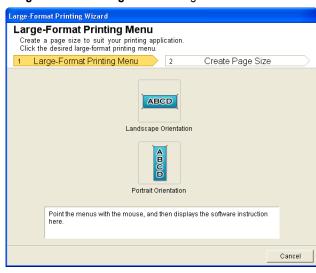



- If you want to change the display to another file or application while the Large-Format Printing Wizard is
  open, close the Large-Format Printing Wizard dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.
- The layout may collapse if you create a form using existing data. If that is the case, modify the data again.

### Print Matching Roll Width(Word)


Prints to the edge of the roll width. You can print large exhibits and posters, and also print Portrait and Landscape orientations made in **Large-Format Printing Wizard**.

- 1 Start Microsoft Word.
- If Start imagePROGRAF Print Plug-In is displayed, click it.



Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.


The **Printing Wizard** dialog box is displayed.

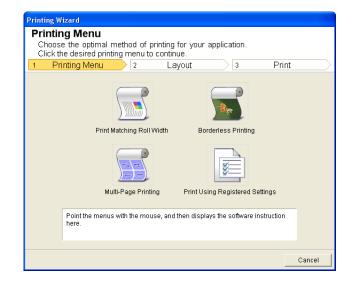




 If you want to change the display to another file or application while the Printing Wizard is open, close the Printing Wizard dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ ribbon.

4 Click Print Matching Roll Width.

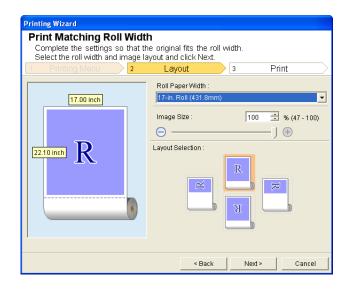

- 5 Select Roll Paper Width that is set in the printer.
- 6 Select image size.
- 7 Select layout.
- 8 Select Next.

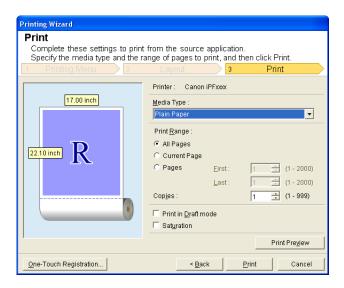

- 9 Select Media Type.
- Select **Print Range** from **All Pages**, **Current Page**, and **Pages**. If **Pages** is selected, enter the number of pages.

# 11 Enter Copies.



- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- Note When **Saturation** is selected, you can print posters, etc., vividly.
  - The settings are registered when the **One-Touch Registration** is pressed. This is convenient if you to need print multiple times using the same setting.
  - Press the Print Preview button to display the preview screen. You can check and make changes to the layout in the preview screen.
  - When you print to the edge of the roll width, the maximum length will be the lesser of 5.587 times the roll paper width, or 18.0m.
- 12 Press **Print** to start printing.

### **Borderless Printing(Word)**


Prints up to the border of the media. Photos and posters can be printed without worrying about margins.

- 1 Start Microsoft Word.
- 2 If Start imagePROGRAF Print Plug-In is displayed, click it.



Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.


The **Printing Wizard** dialog box is displayed.

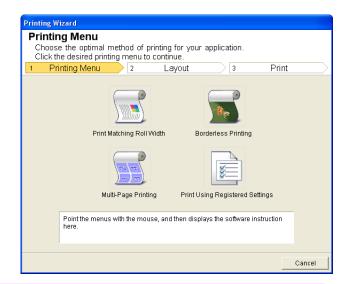



If you want to change the display to another file or application while the **Printing Wizard** is open, close the
 **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.


4 Click Borderless Printing.

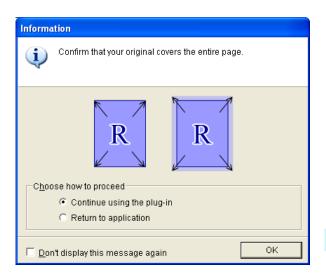

A confirmation dialog box is displayed. If the data fills up the page, confirm that **Continue using the plug-in** is selected in **Choose how to proceed** and press **OK**.




To adjust the data, select Return to application and press OK. Exit Print Plug-In for Office and return to the
application.

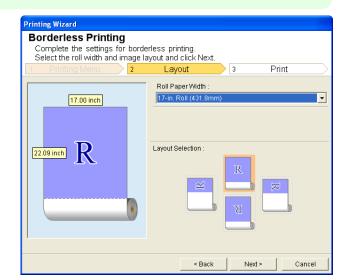

- 6 Select Roll Paper Width that is set in the printer.
- **7** Select layout.

Select Next.

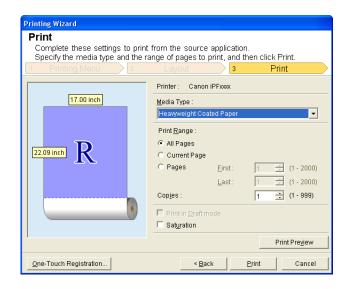

- 9 Select Media Type.
- Select Print Range from All Pages, Current Page, and Pages. If Pages is selected, enter the number of pages.
- 11 Enter Copies.



- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- Note When **Saturation** is selected, you can print posters, etc., vividly.
  - Press the One-Touch Registration button to register the settings. This is useful for multiple printing using the same settings.
  - Press the **Print Preview** button to display the preview screen. You can confirm and make changes to the layout in the preview screen.
  - The maximum length for Borderless Printing is the lesser of 5.587 times the roll paper width, or 18.0m.
- 12 Press Print to start printing.

# **Multi-Page Printing(Word)**


Prints multiple pages as one page. You can print handouts into a single page, or print matter with many pages.

- 1 Start Microsoft Word.
- If Start imagePROGRAF Print Plug-In is displayed, click it.




Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.

The **Printing Wizard** dialog box is displayed.

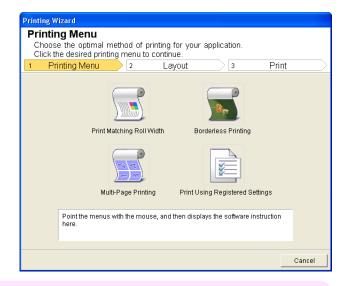




- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.
- 4 Click Multi-Page Printing.

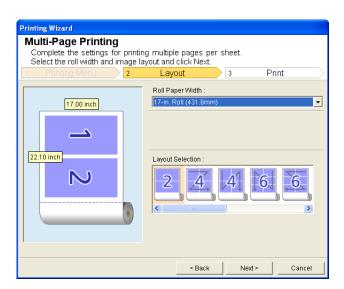

- 5 Select Roll Paper Width that is set in the printer.
- 6 Select layout from Layout Selection.

7 Select Next.

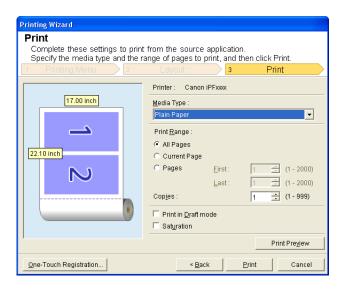

- 8 Select Media Type.
- Select **Print Range** from **All Pages**, **Current Page**, and **Pages**. If **Pages** is selected, enter the number of pages.
- 10 Enter Copies.



- When Print in Draft mode is selected, printing is fast but the print quality is poor.
- Note When Saturation is selected, you can print posters, etc., vividly.
  - The settings are registered when the **One-Touch Registration** is pressed. This is convenient if you to need print multiple times using the same setting.
  - Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
  - The maximum length for Multi-Page Printing is the lesser of 5.587 times the roll paper width, or 18.0m.
- $oxed{11}$  Press **Print** to start printing.

# Register the settings (Word)


If you are going to print multiple times using the same setting, you can select **One-Touch Registration**. Registered settings can be recalled from **Print Using Registered Settings**.

Set up to the **Print** screen from **Print Matching Roll Width,Borderless Printing** or **Multi-Page Printing** of **Printing Menu**.



- Up to 20 items can be registered.
- The available settings are as follows.
  - Print Matching Roll Width(Word) → P.244
  - Borderless Printing(Word) →P.246
  - Multi-Page Printing(Word) →P.248

2 Click the One-Touch Registration button.

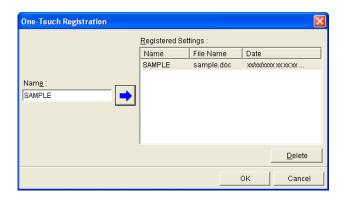

- Enter name in **Name**.

  Up to 31 characters can be entered.
- Click . The name you entered is displayed in Registered Settings.
- 5 Click **OK**, and return to the **Print** screen.
- 6 Click **Print** to print, and click **Cancel** to cancel the print.



Clicking Cancel in the Print screen will not delete the registered settings.

# **Print Using Registered Settings(Word)**


Prints using the registered settings.

- 1 Start Microsoft Word.
- If Start imagePROGRAF Print Plug-In is displayed, click it.



Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.


The Printing Wizard dialog box is displayed.

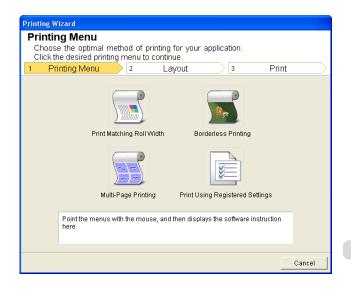




If you want to change the display to another file or application while the **Printing Wizard** is open, close the
 Printing Wizard dialog box. Otherwise, you may not be able to change displays or operate the toolbar/
 ribbon.

4 Click Print Using Registered Settings.

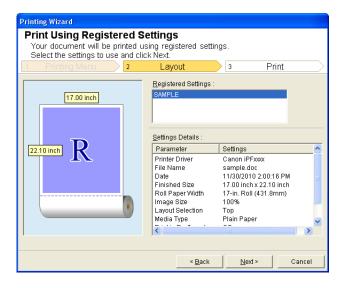

5 Click the **Next**button.

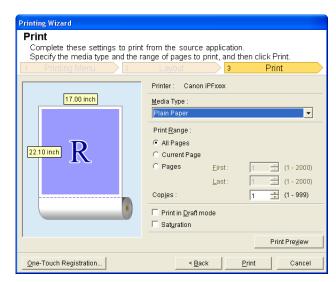

- 6 Select Media Type.
- 7 Select **Print Range** from **All Pages**, **Current Page**, or **Pages**. If **Pages** is selected, enter the number of pages.
- 8 Enter Copies.



- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- When **Saturation** is selected, you can print posters, etc., vividly.
- Press the Print Preview button to display the preview screen. You can check and make changes to the layout in the preview screen.
- The maximum print length when printing with the registered settings is the lesser of 5.587 times the roll paper width, or 18.0m.

Press Print to start printing.

### Portrait Orientation/Landscape Orientation(Word)

Print to the edge of the roll width. You can print large exhibits and posters, or print the Landscape or Portrait Orientation Page Sizes made in the **Large-Format Printing Wizard**.

Create Page Size in Portrait or Landscape Orientation.

Use the **Large-Format Printing Wizard** to create portrait page sizes for Potrait Orientation, and landscape page sizes for Landscape Orientation.


- 1 Start Microsoft Word.
- If Start imagePROGRAF Print Plug-In is displayed, click it.



Click Paper Settings from the imagePROGRAF Print Plug-In toolbar/ribbon. The Large-Format Printing Wizard dialog box is displayed.




If you want to change the display to another file or application while the Large-Format Printing Wizard is
open, close the Large-Format Printing Wizard dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.

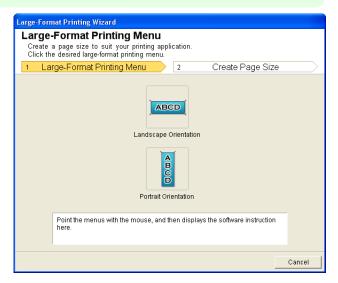


4 Click Portrait Orientation or Landscape Orientation.



• The steps taken to create a Portrait Page Size will be used as an example to explain the procedure.

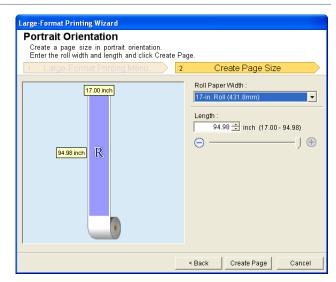

- Adjust **Length** from the list-box or slide-bar.
- 6 Click the Create Page button.
- 7 Click**OK** if the message is displayed.

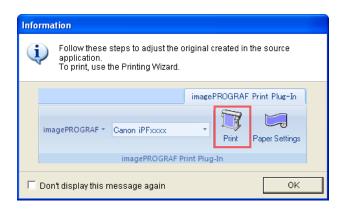

8 Edit and create the document.



Printing is done in **Print Matching Roll Width** of the **Printing Wizard**. For details on **Print Matching Roll Width**, see "Print Matching Roll Width(Word)." P.244



• The layout may collapse if you create a form using existing data. If that is the case, modify the data again.

# To start from Microsoft PowerPoint

Below are the steps to start Print Plug-In for Office from Microsoft PowerPoint.

- 1 Start Microsoft PowerPoint.
- If Start imagePROGRAF Print Plug-In is displayed on the toolbar/ribbon, click it.






- If the imagePROGRAF Print Plug-In toolbar/ribbon is not displayed, refer to the following.
  - When Print Plug-In for Office is not displayed →P.239
- Check that the **imagePROGRAF Print Plug-In** toolbar/ribbon is displayed.



Click the buttons on the toolbar/ribbon according to the items you want to set.

Icon	Contents
imagePROGRAF *	Displays the About, Help, and Special Settings dialog boxes. (See "Configuring Special
Menu	Settings.") →P.274
Canon iPFxxxx ▼ Printer list	Select Printer. If you select <b>Show All Printers</b> , the <b>imagePROGRAF</b> printers will be displayed again. Select this when you want to display all printer drivers or update the display.
Print	The print Wizard is displayed. The settings <b>Print Matching Roll Width</b> , <b>Borderless Printing</b> , <b>Multi-Page Printing</b> , and <b>Print Using Registered Settings</b> can be set.
<b>Print</b> Button	
	Large-Format Wizard is displayed. Settings for Portrait or Landscape Orientation can be set.
Paper Settings	
Paper Settings Button	

#### Printing Wizard dialog box

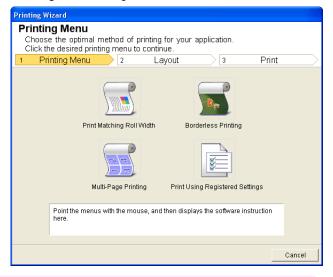




If you want to change the display to another file or application while the **Printing Wizard** is open, close the
 **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/
 ribbon.



If you open a password protected document as read-only, the Printing Wizard cannot be run.

255

#### Large-Format Printing Wizard dialog box

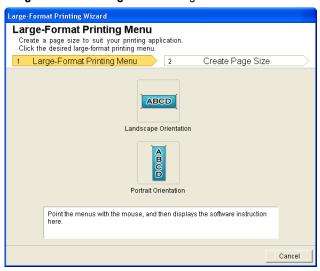



- If you want to change the display to another file or application while the Large-Format Printing Wizard is
  open, close the Large-Format Printing Wizard dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.
- The layout may collapse if you create a form using existing data. If that is the case, modify the data again.



If you open a password protected document as read-only, the Large-Format Printing Wizard cannot be run.
 Remove the password protection.

# Print Matching Roll Width(PowerPoint)


Prints to the edge of the roll width. You can print large exhibits and posters, and also print Portrait and Landscape orientations made in **Large-Format Printing Wizard**.

- 1 Start Microsoft PowerPoint.
- If Start imagePROGRAF Print Plug-In is displayed, click it.




Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.

The **Printing Wizard** dialog box is displayed.

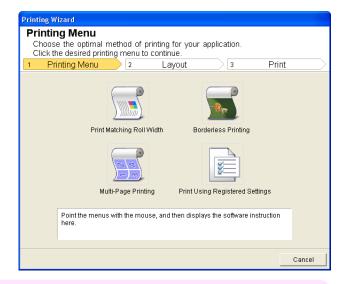




- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.
- 4 Click Print Matching Roll Width.

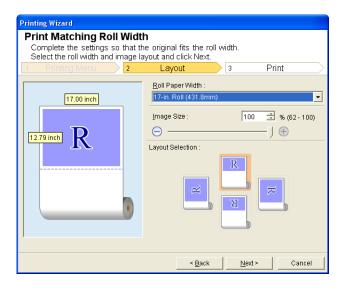

- 5 Select Roll Paper Width that is set in the printer.
- 6 Select image size.
- **7** Select layout.

Select Next.

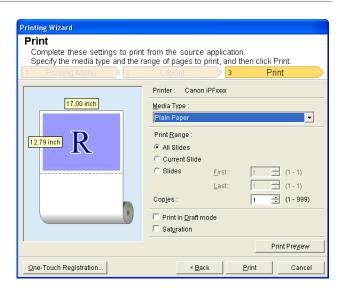

- 9 Select Media Type.
- Select **Print Range** from **All Slides**, **Current Slide**, and **Slides**. If **Slides** is selected, enter the slide number.
- 11 Enter Copies.



- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- Note When **Saturation** is selected, you can print posters, etc., vividly.
  - The settings are registered when the **One-Touch Registration** is pressed. This is convenient if you to need print multiple times using the same setting.
  - Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
  - When you print to the edge of the roll width, the maximum length will be the lesser of 14.22 times the roll paper width, or 18.0m.
- 12 Press **Print** to start printing.

# **Borderless Printing(PowerPoint)**


Prints up to the border of the media. Photos and posters can be printed without worrying about margins.

- 1 Start Microsoft PowerPoint.
- If Start imagePROGRAF Print Plug-In is displayed, click it.




Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.

The **Printing Wizard** dialog box is displayed.

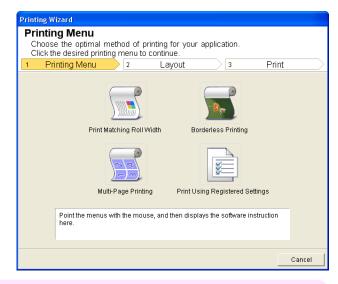



- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.
- 4 Click Borderless Printing.

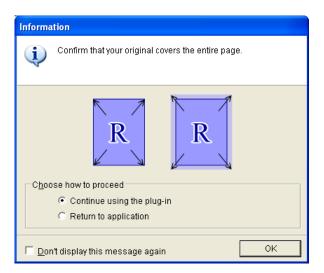


A confirmation dialog box is displayed. If the data fills up the page, confirm that **Continue using the plug-in** is selected in **Choose how to proceed** and press **OK**.




To adjust the data, select Return to application and press OK. Exit Print Plug-In for Office and return to the
application.

Borderless Printing(PowerPoint) iPF680

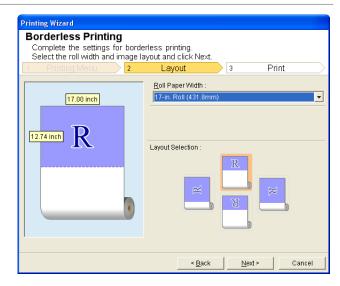

- 6 Select Roll Paper Width that is set in the printer.
- 7 Select layout.
- 8 Select Next.

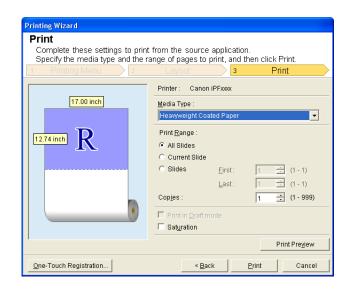

- 9 Select Media Type.
- Select **Print Range** from **All Slides**, **Current Slide**, and **Slides**. If **Slides** is selected, enter the slide number.
- 11 Enter Copies.



- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- When **Saturation** is selected, you can print posters, etc., vividly.
- Press the One-Touch Registration button to register the settings. This is useful for multiple printing using the same settings.
- Press the **Print Preview** button to display the preview screen. You can confirm and make changes to the layout in the preview screen.
- The maximum length for Borderless Printing is the lesser of 14.22 times the roll paper width, or 18.0m.

12 Press Print to start printing.

# **Multi-Page Printing(PowerPoint)**


Prints multiple pages as one page. You can print handouts into a single page, or print matter with many pages.

- 1 Start Microsoft PowerPoint.
- 2 If Start imagePROGRAF Print Plug-In is displayed, click it.



Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.


The Printing Wizard dialog box is displayed.

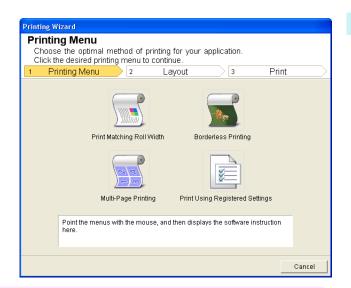




If you want to change the display to another file or application while the **Printing Wizard** is open, close the
 **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/
 ribbon.

4 Click Multi-Page Printing.

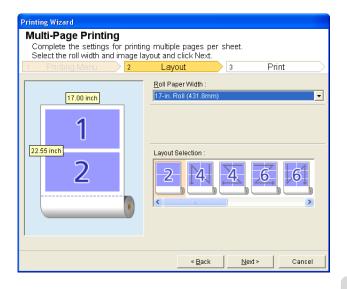

- 5 Select Roll Paper Width that is set in the printer.
- 6 Select layout from Layout Selection.

Select Next.

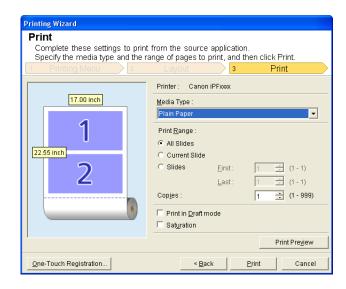

- 8 Select Media Type.
- Select **Print Range** from **All Slides**, **Current Slide**, and **Slides**. If **Slides** is selected, enter the slide number.
- 10 Enter Copies.



- When Print in Draft mode is selected, printing is fast but the print quality is poor.
- Note When Saturation is selected, you can print posters, etc., vividly.
  - The settings are registered when the **One-Touch Registration** is pressed. This is convenient if you to need print multiple times using the same setting.
  - Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
  - The maximum length for Multi-Page Printing is the lesser of 14.22 times the roll paper width, or 18.0m.
- $oxed{11}$  Press **Print** to start printing.

# Register the settings (PowerPoint)


If you are going to print multiple times using the same setting, you can select **One-Touch Registration**. Registered settings can be recalled from **Print Using Registered Settings**.

Set up to the **Print** screen from **Print Matching Roll Width,Borderless Printing** or **Multi-Page Printing** of **Printing Menu**.



- Up to 20 items can be registered.
- The available settings are as follows.
  - Print Matching Roll Width(PowerPoint) →P.256
  - Borderless Printing(PowerPoint) →P.258
  - Multi-Page Printing(PowerPoint) →P.261

2 Click the One-Touch Registration button.

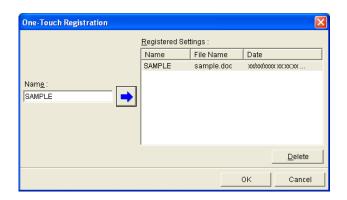

- Enter name in **Name**.
  Up to 31 characters can be entered.
- Click . The name you entered is displayed in Registered Settings.
- 5 Click **OK**, and return to the **Print** screen.
- 6 Click **Print** to print, and click **Cancel** to cancel the print.



Clicking Cancel in the Print screen will not delete the registered settings.

# Print Using Registered Settings(PowerPoint)


Prints using the registered settings.

- 1 Start Microsoft PowerPoint.
- If Start imagePROGRAF Print Plug-In is displayed, click it.



Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.


The Printing Wizard dialog box is displayed.

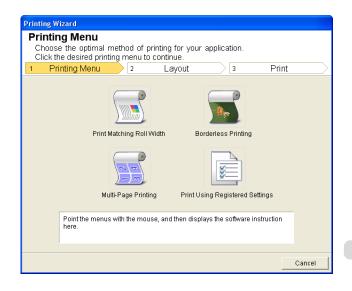




If you want to change the display to another file or application while the **Printing Wizard** is open, close the
 **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/
 ribbon.

4 Click Print Using Registered Settings.

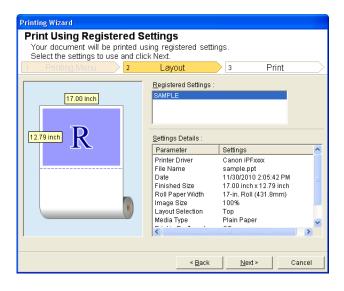

5 Click the **Next**button.

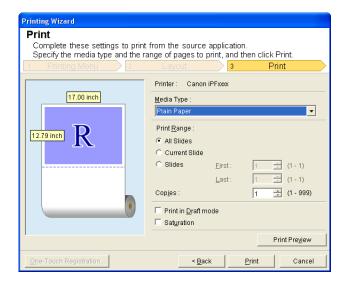

- 6 Select Media Type.
- Select Print Range from All Slides, Current Slide, and Slides. If Slides is selected, enter the slide number.
- 8 Enter Copies.



- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- When Saturation is selected, you can print posters, etc., vividly.
- Press the Print Preview button to display the preview screen. You can check and make changes to the layout in the preview screen.
- The maximum print length when printing with the registered settings is the lesser of 14.22 times the roll paper width, or 18.0m.

264



Press Print to start printing.

# Portrait Orientation/Landscape Orientation(PowerPoint)

Print to the edge of the roll width. You can print large exhibits and posters, or print the Landscape or Portrait Orientation Page Sizes made in the **Large-Format Printing Wizard**.

Create Page Size in Portrait or Landscape Orientation.


Use the **Large-Format Printing Wizard** to create portrait page sizes for Potrait Orientation, and landscape page sizes for Landscape Orientation.

- 1 Start Microsoft PowerPoint.
- If Start imagePROGRAF Print Plug-In is displayed, click it.



Click Paper Settings from the imagePROGRAF Print Plug-In toolbar/ribbon.

The Large-Format Printing Wizard dialog box is displayed.

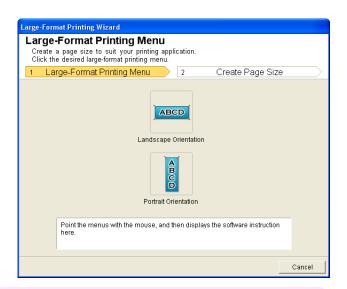




If you want to change the display to another file or application while the Large-Format Printing Wizard is
open, close the Large-Format Printing Wizard dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.

4 Click Portrait Orientation or Landscape Orientation.




The steps taken to create a Portrait Page Size will be used as an example to explain the procedure.

To start from Microsoft Excel iPF680

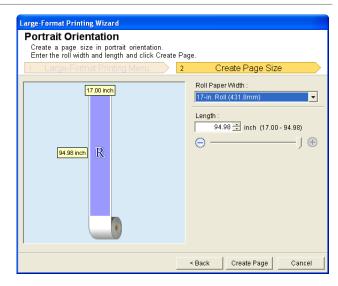

- Adjust **Length** from the list-box or slide-bar.
- 6 Click the Create Page button.
- 7 Click**OK** if the message is displayed.

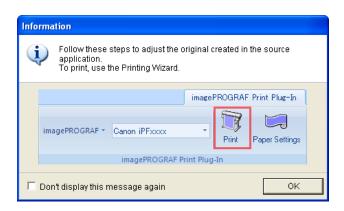

8 Edit and create the document.



The layout may collapse if you create a form using existing data. If that is the case, modify the data again.



• Printing is done in **Print Matching Roll Width** of the **Printing Wizard**. For details on **Print Matching Roll Width**, see "Print Matching Roll Width(PowerPoint)." >P.256

# To start from Microsoft Excel

Below are the steps to start Print Plug-In for Office from Microsoft Excel.

- 1 Start Microsoft Excel.
- If Start imagePROGRAF Print Plug-In is displayed on the toolbar/ribbon, click it.






- If the imagePROGRAF Print Plug-In toolbar/ribbon is not displayed, refer to the following.
  - When Print Plug-In for Office is not displayed →P.239
- Check that the **imagePROGRAF Print Plug-In** toolbar/ribbon is displayed.



4 Click the buttons on the toolbar/ribbon according to the items you want to set.

Icon	Contents
imagePROGRAF *	Displays the <b>About</b> , <b>Help</b> , and <b>Special Settings</b> dialog boxes. (See "Configuring Special Settings.") →P.274
Menu	Settings. ) (4r.274)
Canon iPFxxxx ▼	Select Printer. If you select <b>Show All Printers</b> , the <b>imagePROGRAF</b> printers will be displayed again. Se-
Printer list	lect this when you want to display all printer drivers or update the display.
Print	The print Wizard is displayed.  The settings <b>Print Entire Sheet</b> and <b>Print Selected Area</b> can be set.
<b>Print</b> Button	

#### Printing Wizard dialog box

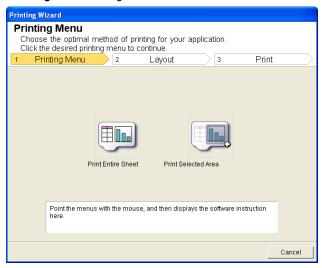



- If you want to change the display to another file or application while the **Printing Wizard** is open, close the
   **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/
   ribbon.
- The Printing Wizard will not start if you click the Print button on the toolbar/ribbon while editing a cell.
- When more than one worksheet is selected, the **Printing Wizard** cannot be run. Select only one worksheet and click **Print** again.
- When an object is selected, the Printing Wizard is not started if you click the Print button on the toolbar/ ribbon.
- If the paper size in Excel is blank, the **Printing Wizard** cannot be run. From the **File** menu in Excel, select **Page Setup** and check **Paper size**.

Print Entire Sheet(Excel) iPF680



• If you click the **Print** button with a graph selected, a message dialog box will appear asking if you want to continue printing. If you click **No**, you will return to the application.

- If you click the **Print** button with a page break set, a message dialog box will appear asking if you want to
  continue printing. If you click **No**, you will return to the application. If you do not use the set page break, check
  the page break preview and change the setting.
- If you click the Print button with a page range set, a message dialog box will appear asking if you want to
  continue printing. If you click No, you will return to the application. If you do not use the set page range, check
  the page break preview and change the setting.
- If you click the Print button with a worksheet or cell protected, a message dialog box will appear asking if you
  want to continue printing. If you click No, you will return to the application. If you want to change the setting,
  remove the protection from the worksheet or cell.

# **Print Entire Sheet(Excel)**

For resizing the entire sheet to fit the roll width. Choose this option to enlarge the currently displayed sheet before printing.

- 1 Start Microsoft Excel.
- If Start imagePROGRAF Print Plug-In is displayed, click it.



Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.




 When more than one worksheet is selected, the Printing Wizard cannot be run. Select only one worksheet and click Print again.

If a print area is set, a confirmation message dialog box will appear.

To print the entire sheet, cancel the setting of the print area.




The **Printing Wizard** dialog box is displayed.

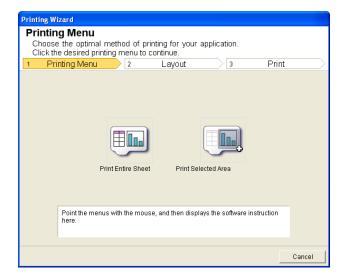


4 Click Print Entire Sheet.

A message will appear informing you that analysis is in progress.

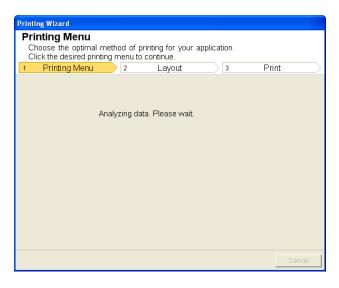

The Layout menu will appear automatically.

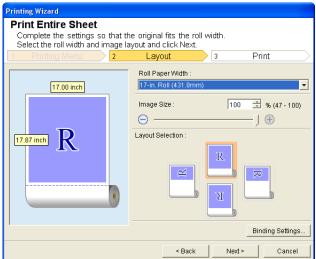




- If data analysis requires time, a message dialog will appear. If you select **No**, you will return to the application.
- 5 Select Roll Paper Width that is set in the printer.
- 6 Select image size.
- **7** Select layout.
- To configure **Binding**, click the **Binding Settings** button.

  Refer to "Configuring Binding (Excel)" →P.273 for details on the procedure for configuring Binding.

Select Next.

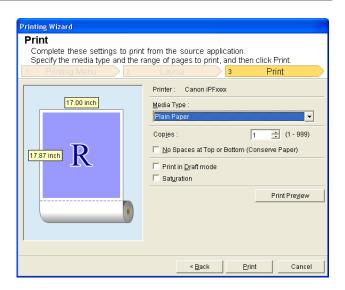

- 10 Select Media Type.
- Enter Copies.
- If the upper and lower margins are too wide, check No Spaces at Top or Bottom (Conserve Paper). The upper and lower margins can be checked in **Print Preview**.



- When Print in Draft mode is selected, printing is fast but the print quality is poor.
- Note When **Saturation** is selected, you can print posters, etc., vividly.
  - Press the Print Preview button to display the preview screen. You can check and make changes to the layout in the preview screen.
  - When you print to the edge of the roll width, the maximum print length is 18.0m.
- 13 Press Print to start printing.



If divided into plural pages, try reducing the data size or the range you select.

Important • You cannot run Print or Print Preview if you select it for a worksheet with no data displayed.

# Print Selected Area(Excel)

For resizing the selected range of cells to fit the roll width. Choose this option to enlarge a particular part of the sheet before printing.

- Start Microsoft Excel.
- If Start imagePROGRAF Print Plug-In is displayed, click it.



Click Print from the imagePROGRAF Print Plug-In toolbar/ribbon.



 When more than one worksheet is selected, the Printing Wizard cannot be run. Select only one worksheet and click Print again.


270

If a print area is set, a confirmation message dialog box will appear.

To print the selected area, cancel the setting of the print area.



The Printing Wizard dialog box is displayed.

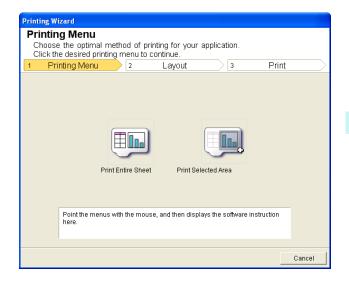


4 Click Print Selected Area.



• If only one cell is selected, Print Selected Area cannot be selected.


Important

A message will appear informing you that analysis is in progress.

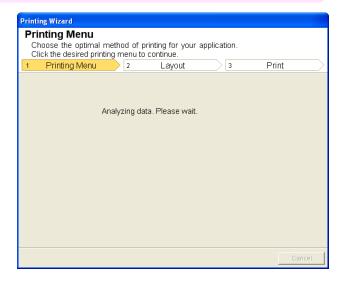

Print Selected Area(Excel) iPF680

The Layout menu will appear automatically.

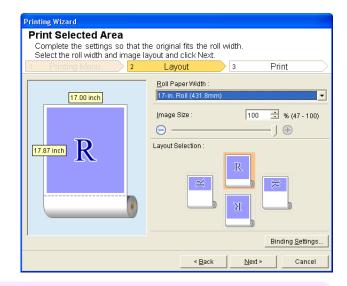




• If the range selected in **Excel 2007 or later** is too large, it will not be possible to analyze the data. Select a smaller range and then run the analysis.



- If data analysis requires time, a message dialog will appear. If you select **No**, you will return to the application.
- 5 Select Roll Paper Width that is set in the printer.
- 6 Select image size.
- 7 Select layout.
- To configure **Binding**, click the **Binding Settings** button.

  Refer to "Configuring Binding (Excel)" P.273 for details on the procedure for configuring **Binding**.
- 9 Select Next.

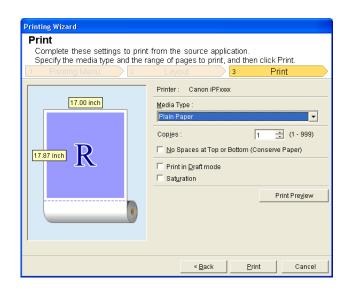

- 72 10 Select Media Type.
  - 11 Enter Copies.

If the upper and lower margins are too wide, check No Spaces at Top or Bottom (Conserve Paper). The upper and lower margins can be checked in **Print Preview**.



- When Print in Draft mode is selected, printing is fast but the print quality is poor.
- When Saturation is selected, you can print posters, etc., vividly.
- Press the Print Preview button to display the preview screen. You can check and make changes to the layout in the preview screen.
- When you print to the edge of the roll width, the maximum print length is 18.0m.
- 13 Press **Print** to start printing.
- If divided into plural pages, try reducing the data size or the range you select.
- Important You cannot run Print or Print Preview if you select it for a worksheet with no data displayed.

# **Configuring Binding (Excel)**

You can configure **Binding** margins for binding printouts.

Configure the settings up to Layout Selection in the Layout screen in Print Entire Sheet or Print Selected

Refer to "Print Entire Sheet(Excel)" →P.268 and "Print Selected Area(Excel)" →P.270 for the configuration methods.

Click the **Binding Settings** button.



You cannot click the Binding Settings button in the following situations.

Important

- When the Image Size is set to a value smaller than 100%
- When a graph is selected
- When page breaks have been set
- When a sheet or cell is protected


Open the **Binding Settings** dialog box.



- If the **Binding** checkbox is not checked, select it to turn binding on.
- Select Binding Edge.
- Select Binding Margin.

6 Click the **OK** button. Return to the **Layout** screen.

Check that the **Binding** settings are applied in the preview screen.

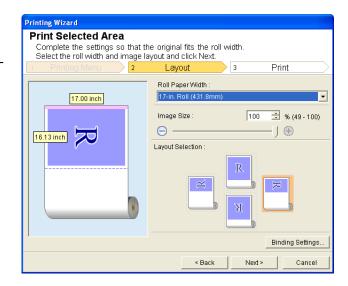


7 Configure the settings in the **Printing Wizard** dialog box.

# **Configuring Special Settings**

You can configure Special Settings from the imagePROGRAF Print Plug-In toolbar.

Click imagePROGRAF in the toolbar, and select Special Settings.

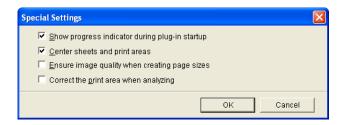

Turn the checkbox for the item you want to change on or off.

Item	Details
Show progress indicator during plug-in startup	When this setting is off, hides the progress indicator that appears while the plug-in is starting up.
Center sheets and print areas	When this setting is off, printing is performed without changing the position. When this setting is on, printing is performed with the top, bottom, left, and right margins layed out equally. When this setting is off, printing is performed without changing the position.  This function is only valid in <b>Microsoft Excel</b> .
Ensure image quality when creating page sizes	When this setting is on, documents are created at the maximum size. This reduces the enlargement ratio during actual printing, which minimizes degradation of the quality of photos, etc.  This function is only valid in <b>Microsoft PowerPoint</b> .
Correct the print area when analyzing	For data that cannot be processed with usual data analysis, the print area is corrected and then the data is processed. When data analysis fails, you may be able to print by turning on this checkbox.  This function is only valid in <b>Microsoft Excel</b> .

3 Click **OK** to close the **Special Settings** dialog box.

# iPF680

User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157

# Mac OS Software

Printer Driver 2	276
Preview2	294
Free Layout 3	317
Color imageRUNNER Enlargement Copy 3	342
→ Printmonitor	506
→ Media Configuration Tool	418


Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633

Printer Driver	
Printer Driver Settings	276
Specifying Paper in the Printer Driver	277
Specifying Paper in the Printer Driver  Confirming Print Settings	279
Checking the Layout in a Preview Before Printing	279
Using Favorites	280
Accessing the Printer Driver Dialog Box from Applications	280
Main Pane	
Paper Detailed Settings Dialog Box	284
View set. Dialog Box for the Printing Application	
Matching pane	286
Color Settings Pane: Color	289
Object Adjustment dialog box: Color	290
Color Settings Pane: Monochrome	290

# **Printer Driver Settings**

For instructions on accessing the Mac OS printer driver, refer to the following topics.

Accessing the Printer Driver Dialog Box from Applications →P.280

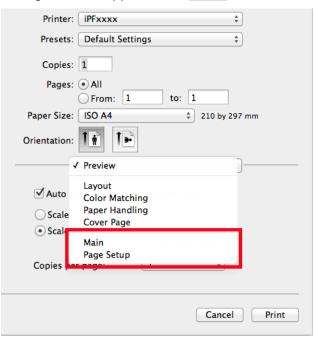

For information on the Mac OS printer driver settings, refer to the following topics.

Main Pane →P.281

You can specify the media type, color processing, print quality, print preview, and other settings. Choose **Easy Settings** to specify basic print settings based on the printing application or **Advanced Settings** to complete more detailed settings as desired.

- Paper Detailed Settings Dialog Box →P.284
- View set. Dialog Box for the Printing Application →P.286
- Color Settings Pane: Color →P.289

- Object Adjustment dialog box: Color →P.290
- Matching pane → P.286
- Color Settings Pane: Monochrome →P.290
- Object Adjustment dialog box: Monochrome →P.291
- Page Setup Pane →P.292

You can specify the page size of the original, borderless printing, enlargement or reduction, the orientation, the paper size and source, and automatic cutting.

With the **imagePROGRAF Free Layout** feature, you can arrange originals from various source applications on a single page before printing. For details, see "Free Layout." >P.317

With the **imagePROGRAF Preview** feature, you can check the layout before printing and adjust layout or size settings while viewing a preview screen. For details, see "Preview." >P.294

With the Color imageRUNNER Enlargement Copy feature, you can automatically enlarge and print scanned originals from a Color imageRUNNER. For details, see "Color imageRUNNER Enlargement Copy." →P.342)

# Specifying Paper in the Printer Driver


If you have replaced the paper, you must complete the following settings in the printer driver.

1 This sets the B Format for and C Paper Size.



 The configuration method varies depending on the OS and application software you are using.
 If Page Setup is displayed in the application menu, the

If Page Setup is displayed in the application menu, the settings are configured by opening the Page Attributes dialog box from Page Setup.

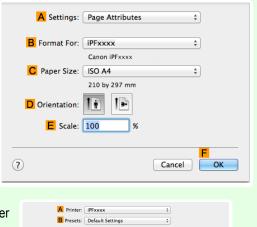


\$ 210 by 297 mm

C Copies: 1

G Orientation:


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

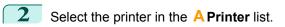


- Choose the original size in the F Paper Size list.
- If you configured the settings using the **Page Attributes** dialog box, click **FOK** to close the dialog box, and then select **Print** from the application software menu.

iPF680

5 Access the Main pane.

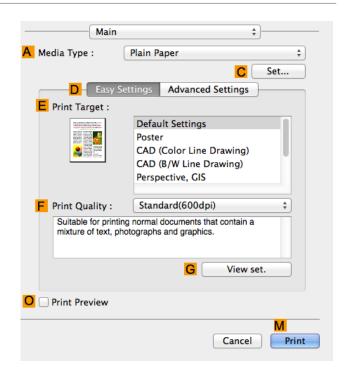

- 6 In the A Media Type list, select the type of paper that is loaded.
- 7 Access the Page Setup pane.

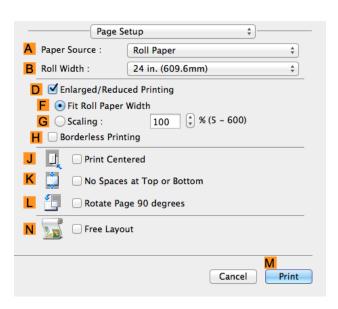

- 8 In the A Paper Source list, select how paper is supplied.
- If Roll Paper is selected in A Paper Source, select the width of the roll paper that is loaded in BRoll Width.



A variety of settings are available in the printer driver to suit different printing applications.
 For details on available printing conditions, see "Printer Driver Settings." >P.276

# **Confirming Print Settings**

The ways to confirm what printing conditions have been specified are as follows.

#### Checking a print preview

You can check an image of the original just as it will be printed.

Confirming the image of print jobs beforehand helps prevent printing errors.

For details on print previews, see "Checking the Layout in a Preview Before Printing." >P.144

# **Checking the Layout in a Preview Before Printing**


This topic describes how to check the layout before printing using the **Canon imagePROGRAF Preview** function.

- 1 Choose **Print** in the application menu.
- 2 Access the Main pane.



- 3 Select the OPrint Preview check box.
- 4 Click M Print.

The **Canon imagePROGRAF Preview** window is displayed.

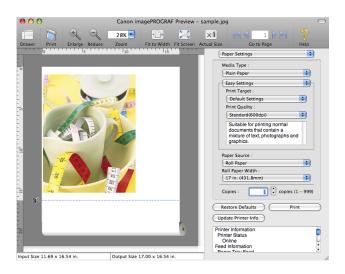

- 6 Check the layout and adjust settings in the Canon imagePROGRAF Preview window as desired.
- 7 Print from the Canon imagePROGRAF Preview menu.



• For details on imagePROGRAF Preview functions, see "Preview." →P.294

# **Using Favorites**

You can use the Presets function in Mac OS for favorite-based printing.




• In the printing dialog box, click **Save As** in the **Presets** list to save the current print settings. This is a standard feature of the operating system. For details, refer to the Mac OS documentation.

# **Accessing the Printer Driver Dialog Box from Applications**

In the application software, select **Print** from the **File** menu to display the dialog box for printing conditions.



- This dialog box includes basic printing options and enables you to choose the printer, specify the range of pages, number of copies, and so on.
- 2 Select the printer in the **Printer** list.

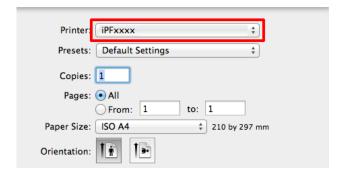




iPF680

### Click Print to start printing.

As shown in the following illustration, you can switch to other panes in this dialog box to complete settings for various methods of printing, including enlarged and reduced printing, borderless printing, and so on.

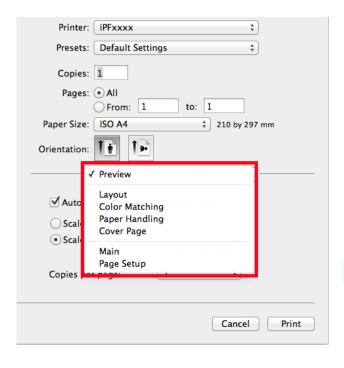


# **Main Pane**

The following settings are available on the **Main** pane. For details on settings items, refer to the printer driver help.



On the Main pane, choose Easy Settings to specify basic print settings based on the print target, or switch to Advanced Settings to complete more detailed settings as desired.

#### Common Items

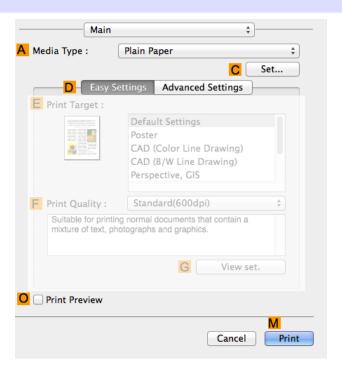

A Media Type

Select the paper type.

Main Pane iPF680

For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Displaying the Paper Reference Guide.") →P.363

C Set

Displays Paper Detailed Settings. You can configure the printing settings to match the type of media, such as the ink drying time.

Paper Detailed Settings Dialog Box →P.284

#### O Print Preview

When the check box is selected, imagePROGRAF Preview is launched before printing.


This allows you to check on-screen previews of documents before printing.



When Free Layout is selected on the Page Setup panel, Free Layout is disabled.

Checking the Layout in a Preview Before Printing →P.144

#### Configuration using Easy Settings

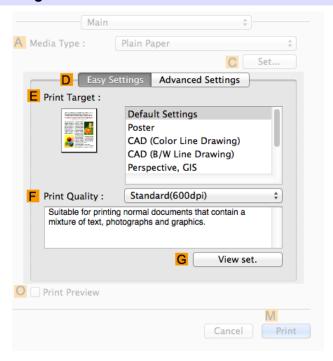

#### • E Print Target

Choose presets that match the type of document to be printed.

- Printing Photos and Images →P.33
- Printing Office Documents →P.37

### • F Print Quality


Choose the level of print quality.

G View set.

Click to display the View set. dialog box, which enables you to confirm the settings for the selected item from the E Print Target list or change the order of items listed in E Print Target.

View set. Dialog Box for the Printing Application →P.286

### Configuration using Advanced Settings

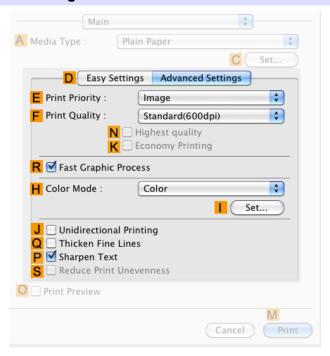

### • E Print Priority

Choose the graphic elements that you want to emphasize for printing.

Giving Priority to Particular Graphic Elements and Colors for Printing →P.58

### • F Print Quality

Choose the level of print quality.

Giving Priority to Particular Graphic Elements and Colors for Printing →P.58

#### N Highest quality

When the check box is selected, printing is performing focusing on quality. Printing takes longer and consumes more ink than in other modes, but this mode offers superior printing quality.



• If you set **F Print Quality** to **High**, you can select **N Highest quality**. However, depending on **A Media Type**, you may not be able to select **N Highest quality**.

#### K Economy Printing

When this mode is selected, you can print with less ink consumed. However, print quality is lower than in regular printing. Select this option to save ink, such as when printing to check drawings. Depending on the A Media Type and F Print Quality settings, this mode may not be available.



If you set F Print Quality to Fast, you can select K Economy Printing. However, depending on A Media Type, you may not be able to select K Economy Printing.

### • R Fast Graphic Process

Select this option to print faster than usual, when possible.

### • H Color Mode

Choose the color mode.

Giving Priority to Particular Graphic Elements and Colors for Printing →P.58

283

#### • Set

Click to display the **Color Settings** dialog box for more advanced color settings.

Adjusting the Color in the Printer Driver → P.51

#### Junidirectional Printing

Select this checkbox to prevent problems such as misaligned lines and improve the print quality. However, the printing speed becomes slower.

#### • QThicken Fine Lines

Select this check box to print fine lines more distinctly.

#### P Sharpen Text

Select this check box to print text more sharply.


#### S Reduce Print Unevenness

Select this checkbox for two-pass printing to reduce color shading.

This option is displayed if you have selected Plain Paper in Media Type and Office Document in Print Priority.

### Paper Detailed Settings Dialog Box

The **Paper Detailed Settings** dialog box offers the following settings. For details on settings items, refer to the printer driver help.

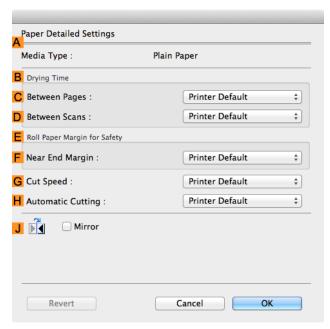



• To display the Paper Detailed Settings dialog box, on the Main pane, click Set by Media Type. (See "Main Pane.") →P.281

### A Media Type

The paper selected with **Media Type** of the **Main** panel is displayed.

For information on the types of paper the printer supports, refer to the **Paper Reference Guide**. (See "**Displaying** the **Paper Reference Guide**.") >P.363

### 284

#### B Drying Time

Specify the time that the printer waits for ink to dry, as needed. The Between Pages setting is only valid for rolls.

### • C Between Pages

You can set the time to wait after printing 1 document page until ejecting the paper. Since waiting time is required for ink to dry before a roll is cut, you can deliver paper in the Output Stacker with the ink dried even if **Cutting Mode** is set to **Automatic**.

Setting Item	Details
Printer Default	The setting of the control panel of the printer is applied.
None	Paper is ejected immediately after printing completes.
30 sec. / 1 min. / 3 min. / 5 min. / 10 min. / 30 min. / 60 min.	Paper is ejected when the set time elapses after printing completes.

#### D Between Scans

You can set the time to wait after printing 1 line on a page until printing the next line. Set this to avoid bleeding or color unevenness such as when bleeding occurs on a page or when color unevenness occurs during borderless printing.

Setting Item	Details
Printer Default	The setting of the control panel of the printer is applied.
None	The next line is printed immediately after a line is printed.
1 sec. / 3 sec. / 5 sec. / 7 sec. / 9	The next line is printed when the set time elapses after a line is printed.
sec.	* Increase the time according to the occurrence condition of bleeding or unevenness.

### E Roll Paper Margin for Safety

You can specify the length of a margin on the leading edge of paper to ensure that paper susceptible to curling is held firmly against the Platen.

### • F Near End Margin

Specify the length of the Near End Margin (the leading edge margin) of the roll, as needed.

Setting Item	Details
Printer Default	The setting of the control panel of the printer is applied.
3 mm (0.12 in)	The document is printed in the standard size.
	* Select this when you do not have any problems in printing.
20 mm (0.8 in)	Select this when rubbing against the printhead occurs such as when using paper that tends to curl.

# **G** Cut Speed

Select the speed of automatic cutting, as needed. You can adjust this setting if paper is not cut well when automatic cutting is used.

Setting Item	Details
Printer Default	The setting of the control panel of the printer is applied.
High Speed	When the <b>Standard</b> setting does not result in a clean cut surface, select this.
Standard	Select this when you do not have any problems in automatic cutting.
Low Speed	This helps prevent adhesive from sticking to the cutter and keeps the cutter sharp if you select it when using adhesive paper.

### **H** Automatic Cutting

Set whether to perform roll cutting automatically or print a cut line.

The following settings are available for automatic cutting.


Setting Item	Details
Printer Default	The setting of the control panel of the printer is applied.
None	After printing completes, the roll is not cut per page, and the next page of data is printed successively.
Print Cut Guideline	After printing completes, a line is printed per page, and the next page of data is printed successively.

### **J** Mirror

Specify whether to print a mirror image, as needed. Select this option to print a version of the document or image with the left and right sides inverted.

# View set. Dialog Box for the Printing Application

In the View set. dialog box, you can check details of the selected printing application.

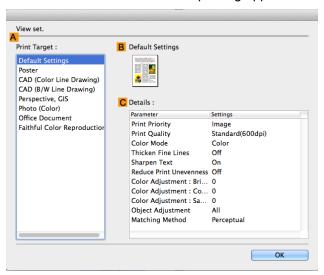



• To display the View set. dialog box, on the Main pane, click View set. by Print Target. (See "Main Pane .") →P.281

### A Print Target

Shows all **Print Target** options (settings items for the printing application).

• B Name

Identifies the item selected in **Print Target** by its name and an icon.

C Details

Here, you can confirm detailed settings values for each item selected in the **Print Target** list.

# **Matching pane**

On the **Matching** pane, you can specify color matching to compensate for differences in the appearance of colors on various devices.

286



The Matching pane is not displayed when No color correction or Monochrome is selected in Color Mode.


Matching pane



• To display the Matching pane, on the Main pane click Color Settings by Color Mode in Advanced Settings, and then click the Matching tab. (See "Main Pane .") >P.281

#### **Driver Matching Mode**

The following options are available when you select **Driver Matching Mode** in the A Matching Mode list.

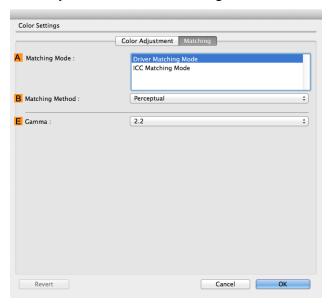

### A Matching Mode

Select the color matching mode to use, as desired.

Normally, select **Driver Matching Mode**. For color matching based on ICC profiles, select **ICC Matching Mode** depending on your color matching system.

#### • B Matching Method

Select the color matching method that suits the document to be printed. Various **B Matching Method** options are available depending on your selection in **A Matching Mode**.


#### • E Gamma

You can adjust the gradation of intermediate tones in an image.

2.2 is normally selected. If you want a softer impression than 2.2, select 1.8.

### **ICC Matching Mode**

The following options are available when you select ICC Matching Mode, in the A Matching Mode list.

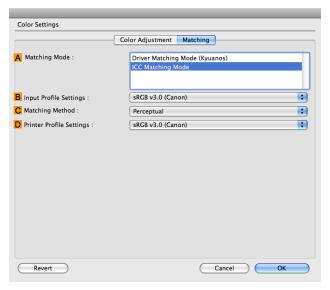



• To display the Matching pane, on the Main pane, click Color Settings by Color Mode in Advanced Settings, and then click the Matching tab. (See "Main Pane.") →P.281

#### A Matching Mode

Select the color matching mode to use, as desired.

### • BInput Profile Settings

You can choose Input Profile.

Various options are available depending on your selected **A Matching Mode**.

#### C Matching Method

You can choose C Matching Method.

Various options are available depending on your selected A Matching Mode.

### • D Printer Profile Settings

Specify the printer profile as desired.

We recommend that you select an ICC profile created using commercially available profile creation software in order to perform color management accurately on paper other than genuine Canon paper and feed confirmed paper.

The created ICC profile needs to be saved in the following folder on the computer you are using. /user/(user name)/library/ColorSync/Profiles folder



For details on settings items, see "Adjusting the Color in the Printer Driver." 


P.51

Color Settings Pane: Color

# **Color Settings Pane: Color**

In general, make any needed adjustments to the color of documents in the application used to create them. However, if the color tone as printed is not as you expected, you can also adjust the color in the printer driver.

If the color tone as printed is not as you expected, you can adjust it on the **Color Adjustment** pane.

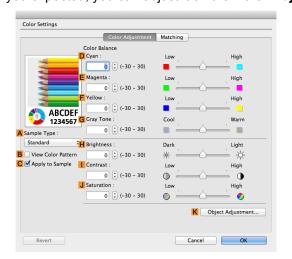



- To display the Color Adjustment pane, on the Main pane click Color Settings by Color Mode in Advanced Settings.
   (See "Main Pane .") →P.281
- For details on settings items, see "Adjusting the Color in the Printer Driver." >P.51

## A Sample Type

Choose a sample image from **Standard**, **Portrait**, **Landscape**, or **Graphics**.

#### • B View Color Pattern

Select this checkbox to display the color pattern.

### C Apply to Sample

Select this checkbox to apply the changed settings to the sample image.

### • D Cyan/ E Magenta/ F Yellow

Correct color tones by adjusting the levels of each color.

## G Gray Tone

Adjust the color tone of grays as desired. Choose **Cool** (tinged with blue) or **Warm** (tinged with red).

## H Brightness

Adjust the overall image brightness as desired. You can adjust the brightness if the printed document is lighter or darker than the original image (that is, the original photo that was scanned or the original graphic as it appears on the computer screen).

#### Contrast

Adjust the contrast of the darkest and lightest portions relative to each other, as desired. Increasing the **Contrast** makes images sharper, and reducing the **Contrast** softens images.

#### J Saturation

Adjust the color intensity as desired. Increasing the **Saturation** setting makes colors more vivid, and reducing the **Saturation** makes colors more subdued.

### K Object Adjustment

Select this option to display the **Object Adjustment** dialog box, in which you can specify objects subject to color adjustment.

289

Object Adjustment dialog box: Color →P.290

## Object Adjustment dialog box: Color

In the **Object Adjustment** dialog box, you can specify what type of print jobs to apply color adjustment to. If an original comprises images, graphics, and text, you can specify which portion to apply color adjustment to.





• To display the Object Adjustment dialog box, click Object Adjustment on the Color Adjustment panel.

## • A Images

Select this option to apply color adjustment to image areas, such as photos.

## • B Graphics


Select this option to apply color adjustment to graphics, such as lines and circles.

C Text

Select this option to apply color adjustment to text.

# **Color Settings Pane: Monochrome**

On the Color Adjustment pane for monochrome printing, you can adjust the brightness and contrast.

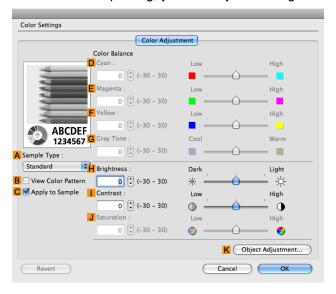



- To display the Color Adjustment pane, on the Main pane, click Color Settings in Advanced Settings. (See "Main Pane.") >P.281
- For details on settings items, see "Adjusting the Color in the Printer Driver." >P.51

#### A Sample Type

Choose a sample image from Standard, Portrait, Landscape, or Graphics.

#### B View Color Pattern

Select this checkbox to display the color pattern.

## C Apply to Sample

Select this checkbox to apply the changed settings to the sample image.

## • D Cyan/ E Magenta/ F Yellow

Not available.

## G Gray Tone

Not available.

### H Brightness

Adjust the overall image brightness as desired. You can adjust the brightness if the printed document is lighter or darker than the original image (that is, the original photo that was scanned or the original graphic as it appears on the computer screen).

#### • | Contrast

Adjust the contrast of the darkest and lightest portions relative to each other, as desired. Increasing the **Contrast** makes images sharper, and reducing the **Contrast** softens images.

## • J Saturation

Not available.


## K Object Adjustment

Select this option to display the **Object Adjustment** dialog box, in which you can specify objects subject to color adjustment.

Object Adjustment dialog box: Monochrome →P.291

# **Object Adjustment dialog box: Monochrome**

In the **Object Adjustment** dialog box, you can specify what type of print jobs to apply color adjustment to. If an original comprises images, graphics, and text, you can specify which portion to apply color adjustment to.

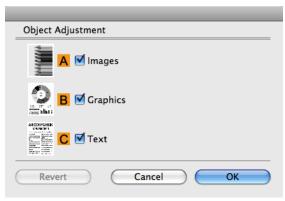





To display the Object Adjustment dialog box, click Object Adjustment on the Color Adjustment panel.

## A Images

Note

Select this option to apply color adjustment to image areas, such as photos.

## • B Graphics


Select this option to apply color adjustment to graphics, such as lines and circles.

#### C Text

Select this option to apply color adjustment to text.

## **Page Setup Pane**

The following settings are available on the **Page Setup** pane. For details on settings items, refer to the printer driver help.

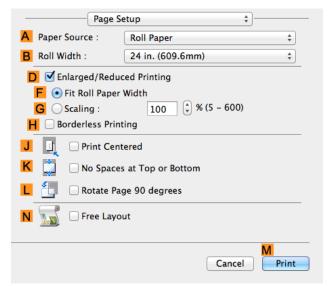

#### A Paper Source

Choose how paper is supplied.

Options displayed in the list vary depending on the selection in A Media Type in the Main pane.

#### • B Roll Width

Select the paper width of the roll loaded in the printer.

### D Enlarged/Reduced Printing

Select this checkbox to choose the following options.

- Resizing Originals to Fit the Roll Width →P.67
- Resizing Originals by Entering a Scaling Value →P.71

#### • F Fit Roll Paper Width

Resizes the document image to match the roll width.

#### G Scaling

Resizes the document image based on a specified scaling value. Enter a value in a range of 5-600.

### H Borderless Printing

Borderless printing is available if roll paper is selected in the A Paper Source list.

292

Page Setup Pane

Activate this setting for borderless printing to match the size and width of the paper.

- Borderless Printing by Resizing Originals to Fit the Roll Width →P.90
- Borderless Printing at Actual Size →P.80

#### J Print Centered

Select this checkbox to print document images in the center of the paper.

- Printing Originals Centered on Rolls →P.126
- Printing Originals Centered on Sheets →P.130

#### K No Spaces at Top or Bottom

Select this checkbox to print the next image skipping blank areas above and below printable data in documents, which enables you to conserve the paper.

Conserving Roll Paper by Printing Originals Without Top and Bottom Margins →P.139

### • LRotate Page 90 degrees

Select this checkbox to rotate the document image by 90 degrees before printing.

Conserving Roll Paper by Rotating Originals 90 Degrees →P.135

### N Free Layout

Select this checkbox to start imagePROGRAF Free Layout before printing.

This allows you to print multiple documents next to each other.



When Print Preview is selected on the Main panel, Print Preview is disabled.

Printing Multiple Originals Next to Each Other →P.110

The Features of Preview iPF680

# **Preview**

The Features of Preview	294
Starting Preview	294
Preview Main Window	
Paper Settings Panel	
Easy Settings	
Advanced Settings	
Output Settings Panel	
Color Settings Panel	
Color Adjustment	
Matching	
Driver Matching Mode	
ICC Matching Mode	
ColorSync	311
Drafaranaga Dialog Day	211
Preferences Dialog Box	
Zoom Dialog Box	
Go to Page Dialog Box	312
Print with No Borders	312
Print on the Center	
Not Print Spaces at the Top/Bottom	
Print Page Rotated 90 Degrees	
Display with Fitting to the Width of the Paper	
Display with All	
Display with Actual Size	
Moving a Page	

## The Features of Preview

The main features of Preview are as follows.

- · While viewing this screen, you can adjust layout settings of a document created with application software.
- · You can not only adjust layout settings but also your changes will be instantly applied on the preview screen, and you can print the preview screen as it is seen.



The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Preview settings.

# **Starting Preview**

Follow the procedure below to start the Preview.

- Start the apllication software which you use.
- From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



Normally, select Print from the File menu.

3 Click **Print Preview** in the **Main** panel to attach a checkmark.


Click the **Print** button in the **Print** dialog box.



Note


• Your printer is depicted in the lower-left area of this screen.

5 Preview main window is displayed.

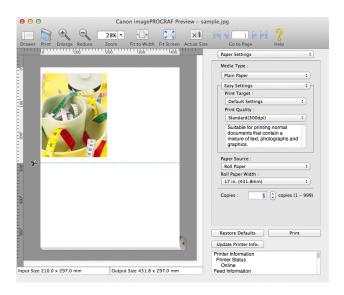

## **Preview Main Window**

The Preview main window consists of the menu and tool bars, and preview, dialog, drawer and status area.

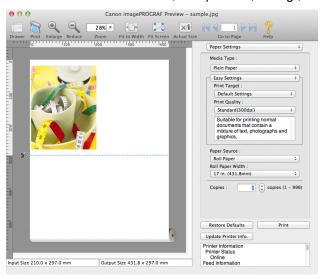




You can use the View menu to show or hide the tool bar.

Menu Bar

This allows you to select menus required for operations.

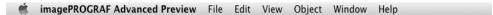

Tool Bar

This allows you to select tool buttons required for major operations.



Preview Main Window

297


## Preview Area

You can check the settings you made in this area.



## Dialog Area

This allows you to set the print conditions and perform a print job.

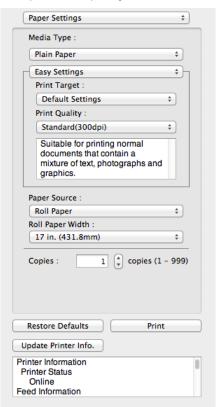


## • Drawer Area

This allows you to display the thumbnails of a document.

Paper Settings Panel iPF680

This area appears when you click **Drawer** from the tool bar.

Alternatively, you may select **Drawer** from the **View** menu.

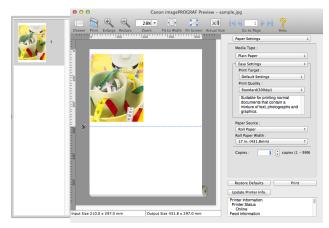

Status Area


This shows Input Size and Output Size.

Input Size 16.54 x 23.39 in.

Output Size 24.00 x 23.39 in.

# **Paper Settings Panel**

This panel appears when you select **Paper Settings** in the dialog area.

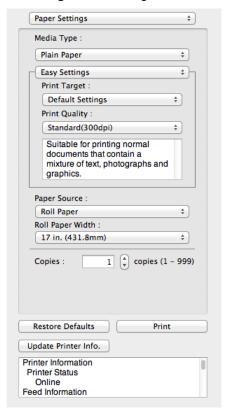

Media Type

This allows you to select the media type.

Paper Settings Panel



 Always select media type that is actually set in the printer. When the media you chose is different from the media set in the printer, you may not receive the desired print results.

## Easy Settings / Advanced Settings

Two modes are available to provide the optimum print settings for jobs.

The settings available on each mode are as follows.

- Easy Settings → P.300
- Advanced Settings →P.301

### Paper Source

You can select the paper source.

The following settings are available for paper source.

Setting	Details
Manual	Select for manual paper feed printing.
Roll Paper	Select to print on roll paper.

## Roll Paper Width

This selects the width of the roll media set to the printer.



Available only if rolls are selected in Paper Source.

### Copies

You can input the number of print copies in numerical characters.



- The maximum value is 999.
- You can change the numbers by clicking either ▲ button or ▼ button.

### • Restore Defaults Button

Click the button to reset to the setting when starting Preview.

#### Print Button

Click the button to begin printing.


#### Update Printer Info. Button

Click the button to acquire printer information.

Easy Settings iPF680

## **Easy Settings**

You can easily select the best settings for the print job by just selecting an item from the print target list that matches the content of the document.

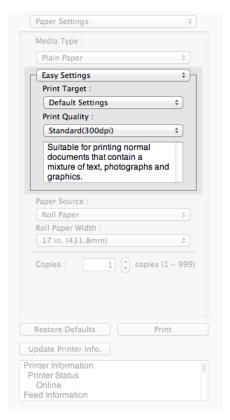

## Print Target

You can easily select the best settings for the print job simply.

If you select each **Print Target** item the corresponding comment for that item is displayed below the list.

Setting	Details
Default Settings	Suitable for printing normal documents that contain a mixture of text, photographs, and graphics.
Poster	The best setting for posters.Prints using vivid and high impact colors.
CAD (Color Line Drawing)	Prints the fine lines of CAD drawings and other such documents sharp and clear.
CAD (B/W Line Drawing)	Suitable for printing CAD drawings with sharp, dark lines.
Perspective, GIS	Suitable for attractive printing of 3D-CAD drawings, perspective drawings, and GIS drawings including maps.
Photo (Color)	Suitable for printing photographic images captured with a digital camera.
Office Document	Suitable for printing handouts as well as general office documents for which print clarity is key.
Faithful Color Reproduction	Prints by faithfully reproducing the colors of the original image.
Custom Settings	Suitable for printing documents for which Advanced Settings have been specified.



The number of settings available for selection depends on the media type.

### Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

iPF680 Advanced Settings

The level of the print quality and resolution settings are displayed in the following combinations.


Setting	Details
Print Quality	Highest quality / Highest / High / Standard / Fast
Resolution	1200dpi / 600dpi / 300dpi



- The availability of settings is determined by the media type and print priority selections.
- Printing time is longer and more ink is consumed with **High** than with **Fast**, however, print quality is higher.
- Printing time is shorter and less ink is consumed with **Fast** than with **High**, however, print quality is lower.
- For **Highest quality**, the resolution is not displayed.

# **Advanced Settings**

Presents detailed settings for the print quality, the color mode, and other items so you can select the values for these settings yourself.

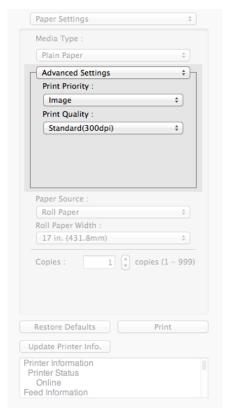

### Print Priority

Select a print quality mode that is appropriate for the print job.

' '	•••
Setting	Details
Image	This mode achieves the best results for printing photographic images and illustrations.
Line Drawing	This mode is best for printing CAD drawings with fine lines or wall newssheet or other documents that contain large amounts of text. However, you may not achieve the quality you expect with printing photographs or other images with many filled areas. For these types of jobs, select <b>Image</b> .
Office Document	Prints common office documents, such as proposals, memos for distribution, etc., so they are easy to read.

301



The number of settings available for selection depends on the media type.

#### Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.


Setting	Details
Print Quality	Highest quality / Highest / High / Standard / Fast
Resolution	1200dpi / 600dpi / 300dpi



- The availability of settings is determined by the media type and print priority selections.
- Note Printing time is longer and more ink is consumed with **High** than with **Fast**, however, print quality is higher.
  - Printing time is shorter and less ink is consumed with Fast than with High, however, print quality is lower.
  - For Highest quality, the resolution is not displayed.

## **Output Settings Panel**

This panel appears when you select **Output Settings** in the dialog area.

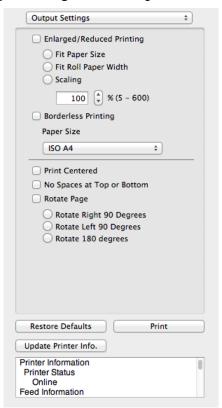

## Enlarged/Reduced Printing

Select the method for enlarged/reduced printing.

The following settings are available for enlarged/reduced printing.

0 0	
Setting	Details
Fit Paper Size	Enlarges/reduces the whole page automatically to fit the media size selected for output. Select the media size to print from <b>Paper Size</b> .

Output Settings Panel

Setting	Details
Fit Roll Paper Width	Enlarges/reduces the whole page automatically to fit the width of the roll paper with the page width.
	*Make sure that the width of the roll paper in the printer is set correctly for <b>Roll Paper Width</b> in the <b>Paper Settings</b> panel.  *Displayed only if rolls are selected in <b>Paper Source</b> .
Scaling	Enlarges/reduces the whole page by the scaling rate as specified. Input the scaling value in numerical characters. You can specify a range between 5 and 600%.
	*You can change the numbers by clicking either ▲ button or ▼ button.  *Although Scaling can be set to make the image larger than the media size, the part that does not fit in the media cannot be printed.  *This is not displayed when a checkmark is placed in <b>Borderless Printing</b> .

### Borderless Printing

You can print the media without margins on all sides when the roll paper with the specific width and the specific media type is used.

For more information about **Borderless Printing**, see "Print with No Borders." →P.312



- Available only if rolls are selected in Paper Source.
- This is not displayed when a checkmark is placed in **Print Centered**.

#### Paper Size

You can select the size of the print media.



• This is not displayed when Fit Roll Paper Width is set in Enlarged/Reduced Printing.

#### Print Centered

You can print on the center of the media loaded in the printer.

For more information about **Print Centered**, see "Print on the Center." >P.313



• This is not displayed when a checkmark is placed in **Borderless Printing**.

#### Note

### No Spaces at Top or Bottom

You can save paper on not to feed roll paper for the empty spaces when the print data contains spaces at the top or bottom.

For more information about No Spaces at Top or Bottom, see "Not Print Spaces at the Top/Bottom." (>P.313)



Available only if rolls are selected in Paper Source.

#### Rotate Page

Select the method for rotating page.

The following settings are available for rotating page.

0 0	31 3
Setting	Details
Rotate Right 90 Degrees	Rotates the portrait page right 90 degrees and print in landscape orientation. When the rotated page can fit in the width of roll paper, the page is rotated automatically, and when it can not fit in the width of roll paper, the page is not rotated.
Rotate Left 90 Degrees	Rotates the portrait page left 90 degrees and print in landscape orientation. When the rotated page can fit in the width of roll paper, the page is rotated automatically, and when it can not fit in the width of roll paper, the page is not rotated.
Rotate 180 degrees	Allows you to rotate the image 180 degrees from the vertical to the right.

303

## • Restore Defaults Button

Click the button to reset to the setting when starting Preview.

• Print Button


Click the button to begin printing.

• Update Printer Info. Button

Click the button to acquire printer information.

# **Color Settings Panel**

This panel appears when you select Color Settings in the dialog area.

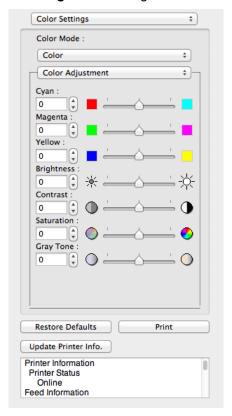

### Color Mode

You can select a color mode to suit the print job.

Setting	Details
Color	Enables color printing.
Monochrome	Disables color printing and converts image from continuous color to grayscaled mono- chrome.
Color (CAD)	Prints lines in the best color possible so they are easy to see.
Monochrome Bitmap	Prints all colors other than white in black.
Monochrome (BK ink)	Select to print all lines with black ink.
No color correction	Prints without performing color matching in the printer driver. Select this when color matching is performed by the application such as Adobe Photoshop or when you want to print color charts using the profile creation tool.

Note

• The availability of settings depends on the print priority and media type selections.

## • Color Adjustment / Gray Adjustment / Matching

You can set the color adjustment and matching.

- Color Adjustment →P.305
- Matching → P.307



Matching is not displayed if No color correction has been selected in Color Mode.

#### • Restore Defaults Button

Click the button to reset to the setting when starting Preview.

#### • Print Button

Click the button to begin printing.

## • Update Printer Info. Button

Click the button to acquire printer information.


## **Color Adjustment**

You can set the color adjustment.

## Adjusting Color

Normally colors should be adjusted in the software application, but if you see colors in the printout that do not match colors on the screen, you can perform color adjustments.

- Select Color on Color Mode in the Color Settings panel.
- 2 Select Color Adjustment.

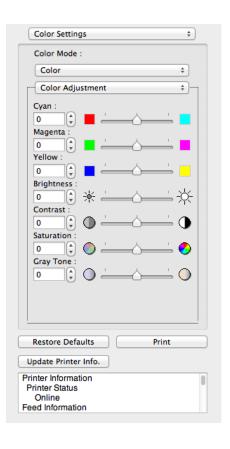



## Drag each slider to the left or right to adjust.

Setting	Details
Cyan	Adjusts the strength of colors to compensate the hues.
Magenta	Adjusts the strength of colors to compensate the hues.
Yellow	Adjusts the strength of colors to compensate the hues.
Brightness	Adjusts the brightness of the entire image. When the results of the printout are brighter than the original images such as the original photo before scanning and graphics created on the display, or when you want to print in different degrees of brightness, use this feature.
Contrast	Adjusts the relative brightness between the brightest and darkest portions of the image.  *For soft gradation, decrease the contrast. For hard gradation, increase the contrast.
Saturation	Adjusts the hues for vivid color or dark color.
Gray Tone	Adjusts gray from cool black (bluish tones) to warm black (reddish tones).




• You can also click the up or down arrow, or enter the number directly to increase or decrease the value.

## Adjusting Monochrome

Use the monochrome setting to print monochrome images of color photographs captured with a scanner or digital camera or other color images.

- Select Monochrome on Color Mode in the Color Settings panel.
- 2 Select Color Adjustment.

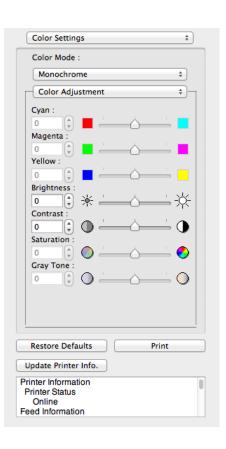

Matching



Drag each slider to the left or right to adjust.

Setting	Details
Brightness	Adjusts the brightness of the entire image. When the results of the printout are brighter than the original images such as the original photo before scanning and graphics created on the display, or when you want to print in different degrees of brightness, use this feature.
Contrast	Adjusts the relative brightness between the brightest and darkest portions of the image.  *For soft gradation, decrease the contrast. For hard gradation, increase the contrast.




• You can also click the up or down arrow, or enter the number directly to increase or decrease the value.

# **Matching**

You can set the matching.



• If **No color correction** is selected under **Color Mode**, the **Matching** is not displayed.

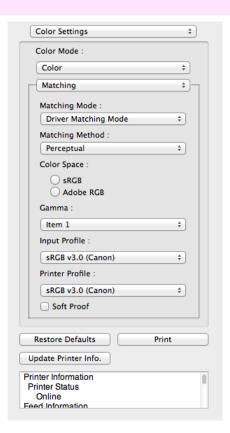

## Matching Mode

You can select a matching mode to suit the print job.

•	• •
Setting	Details
Driver Matching Mode →P.309	Enables printing of optimal color tones using a driver specific color profile. You should normally select this mode.
ICC Matching Mode →P.310	Enables color matching using ICC profiles. Select this if you want to print by specifying the input profile, printer profile, and matching method in detail. This allows you to use ICC profiles for digital cameras and scanners, ICC profiles created using the profile creation tool, etc.

307

Setting	Details
ColorSync →P311	Enables color matching by using the ColorSync function of OS X. Select this if you want to perform soft proofing using ColorSync before printing.



- You need to set each correction on the printer driver.
- Note ColorSync needs to be selected in the Color Matching panel of the driver in order to select ColorSync.

## Matching Method

You can select a matching method to suit the print job.

#### Gamma

You can adjust the gradation of intermediate tones in an image. **2.2** is normally selected. If you want a softer impression than **2.2**, select **1.8**.



• You can select only after **Driver Matching Mode** has been selected in **Matching Mode**.

#### Input Profile

Select the input profile.



You can select only after ICC Matching Mode has been selected in Matching Mode.

#### Printer Profile

Select the printer profile.



You can select only after ICC Matching Mode has been selected in Matching Mode.

#### Soft Proof


When you place a checkmark here, **ColorSync** applies to the preview area.



• You can select only after ColorSync has been selected in Matching Mode.

# **Driver Matching Mode**

Under Matching Mode, select Driver Matching Mode.

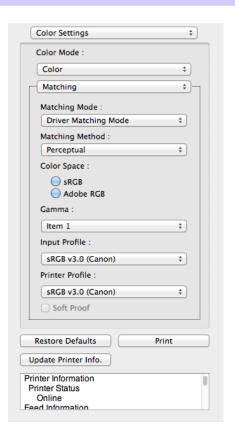


2 Click the **Matching Method** list, and then select a setting.

Setting	Details
Auto	Automatically selects the best color matching method for each Image, Graphics, Text.
Perceptual	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
Saturation	Color-matching optimized for printing posters, etc., vividly.
Colorimetric	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.

# ICC Matching Mode

1 Under Matching Mode, select ICC Matching Mode.

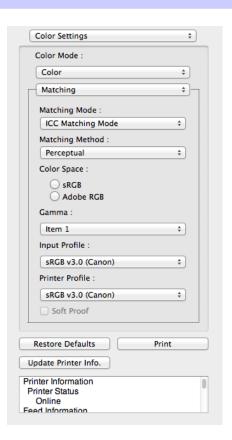

Click the Matching Method list, and then select a setting.


Setting	Details
Perceptual	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
Saturation	Color-matching optimized for printing posters, etc., vividly.
Colorimetric	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.
Colorimetric (No White-Point Correction)	The processing method of color-matching is identical to <b>Colorimetric</b> . Use this when you want to further reproduce the target paper material color of the image data. Generally, this also is called absolute colorimetric.

- Click the **Input Profile** list and select an input profile.
- Click the **Printer Profile** list and select a printer profile.

iPF680 ColorSync

## ColorSync


Check that ColorSync is selected in Matching Mode.

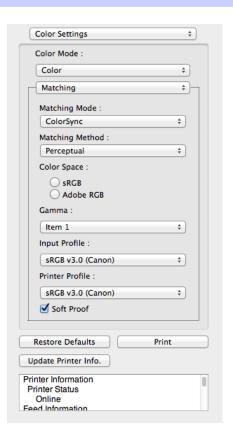

To apply ColorSync to previews, check the Soft Proof check box.

# **Preferences Dialog Box**

This dialog box appears when you select Preferences from the imagePROGRAF Advanced Preview menu. You can set the preferences for Preview.

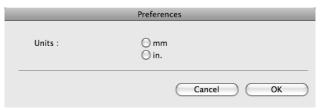

Units

Set the unit for paper length, margins, and so on.

# **Zoom Dialog Box**

This dialog box appears when you select **Zoom** from the **View** menu. You can enlarge or reduce the screen display.



Go to Page Dialog Box iPF680

#### Scaling


Set the magnification for enlargement or reduction of the screen display.



- You can input between 10 and 400.
- You can change the numbers by clicking ▼ button.

# Go to Page Dialog Box

This dialog box appears when you select **Go to Page** from the **View** menu.

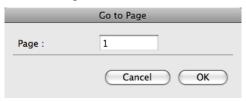



You can not select Go to Page if the document is only one page.

#### Page

Input the page number in numerical characters to display in the preview area.




You can change the numbers in the range of the page of the documents.

## **Print with No Borders**

You can use the borderless printing function to print without margins surrounding the image.



- With some media borderless printing can be performed only between two edges.
- Note To use the borderless printing function, the specified media must be set to the printer.
- On the Paper Settings Panel >P.298), select Roll Paper in Paper Source.
- On the Output Settings Panel >P.302, click the Enlarged/Reduced Printing check box on.
- Select Fit Roll Paper Width.
- Click the Borderless Printing check box on.

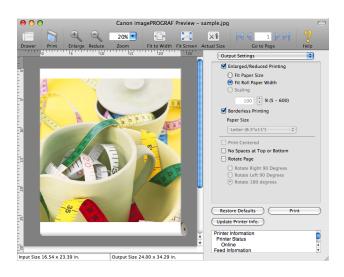

iPF680 Print on the Center



Click the **Print** button.

Borderless printing begins.

## **Print on the Center**


You can print on the center of the media loaded in the printer.



This is not displayed when a checkmark is placed in Borderless Printing.



On the Output Settings Panel →P.302), click the Print Centered check box on.

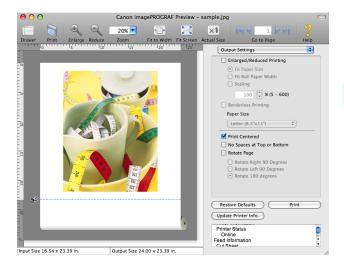

Click the **Print** button.

Printing on the center begins.

# **Not Print Spaces at the Top/Bottom**

You can save paper on not to feed roll paper for the empty spaces when the print data contains spaces at the top or bottom.




• This is not displayed when a checkmark is placed in Borderless Printing.



On the Paper Settings Panel Paper in Paper Source.

On the Output Settings Panel >P.302 , click the No Spaces at Top or Bottom check box on.

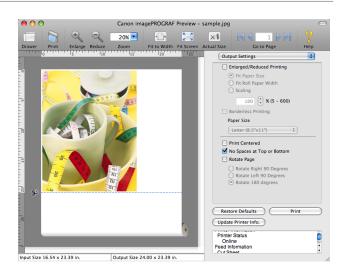


Click the **Print** button.

Printing on the settings with no spaces at top or bottom begins.

## **Print Page Rotated 90 Degrees**

You can save paper by printing in landscape orientation on roll paper.

- On the Paper Settings Panel Paper in Paper Source.
- On the Output Settings Panel P.302, click the Rotate Page check box on.
- Select Rotate Right 90 Degrees or Rotate Left 90 Degrees.

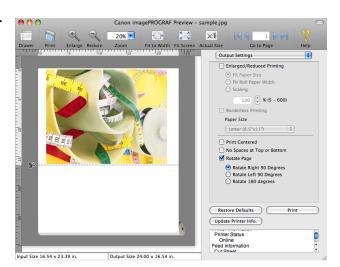

Click the **Print** button.

Printing on rotating 90 degrees begins.


# Display with Fitting to the Width of the Paper

In the preview area, you can display to the width of the paper.

314

Select Fit to Width from the tool bar.


**2** Fitting to the width of the paper, it is displayed.

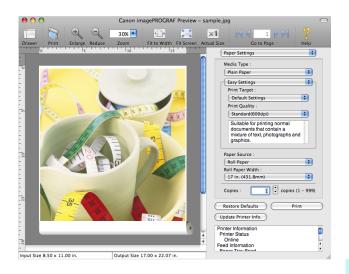

# **Display with All**

In the preview area, you can display all.

- Select Fit Screen from the tool bar.
- All is displayed.

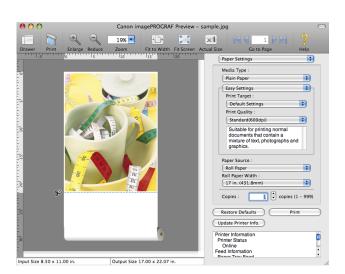


# **Display with Actual Size**

In the preview area, you can display the actual size.

Select Actual Size from the tool bar.

2 Actual size is displayed.

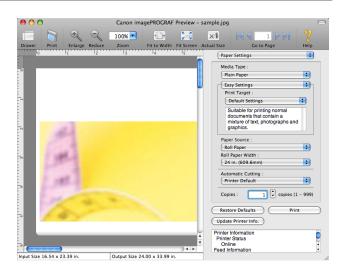


# Moving a Page

You can move a page to display in the preview area.

Select each button in **Go to Page** on the tool bar.

Setting	Details
	Go to the first page.
4	Go to the previous page.
<b>&gt;</b>	Go to the next page.
	Go to the last page.

2 The target page appears.

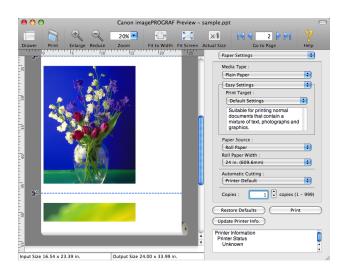



You can also move a page by clicking the page on the thumbnails.

317

# Free Layout

The Features of Free Layout	7
Starting Free Layout	7
Free Layout Main Window	9
Paper Settings Panel	
Easy Settings	
Advanced Settings	
Color Settings Panel	
Color Adjustment	
Matching	
Driver Matching Mode	
ICC Matching Mode	
ColorSync	
Preferences Dialog Box	
Page Setup Dialog Box	
Zoom Dialog Box33	4
Format Dialog Box	5
_aying out a Multiple-File Document on One Page33	5
_aying out a Document Created with Multiple Application Programs on One Page	
Selecting an Object	
Changing the Object Size	
Moving an Object	
Rotating an Object	
_aying out Objects Automatically	
Aligning Objects	
Changing the Object Overlapping Order	
Pasting a Copied or Cut Object	

# The Features of Free Layout

The main features of Free Layout are as follows.

- Allows you to lay out at will and print a document created with application software.
- You can not only lay out multiple pages on one page but also lay out and print a multiple-file document on one page, or lay out and print a document created with multiple application programs on one page.



 The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Free Layout settings.

# **Starting Free Layout**


Follow the procedure below to start the Free Layout.

- 1 Start the apllication software which you use.
- From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



- Normally, select **Print** from the **File** menu.
- Click on Free Layout in the Page Setup panel to attach a checkmark.


4 Click the **Print** button in the **Print** dialog box.

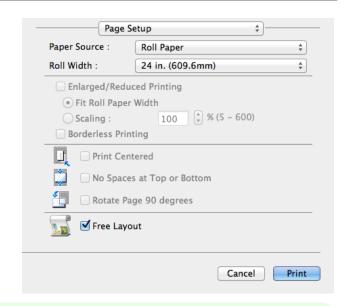




Your printer is depicted in the lower-left area of this screen.

5 Free Layout main window is displayed.

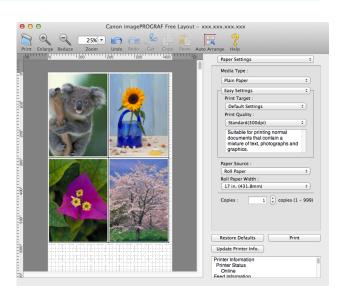

## **Free Layout Main Window**

The Free Layout main window consists of the menu and tool bars, layout area and dialog areas.

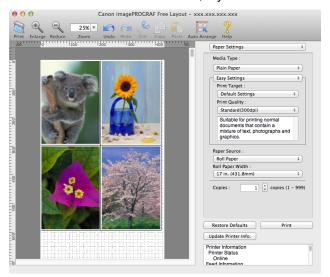



• You can use the **View** menu to show or hide the tool.

Note

Menu Bar

This allows you to select menus required for operations.

imagePROGRAF Advanced Preview File Edit View Object Window Help

• Tool Bar

This allows you to select tool buttons required for major operations.




## · Layout Area

This allows you to lay out objects and edit the object size and orientation.



## Dialog Area


This allows you to set the print conditions and perform a print job.

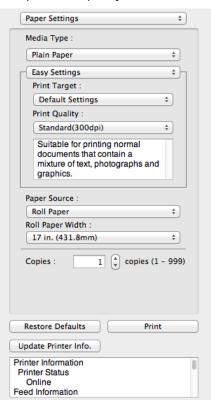

#### iPF680 Paper Settings Panel

## **Paper Settings Panel**

This panel appears when you select Paper Settings in the dialog area.

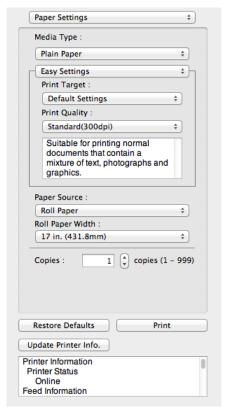

## Media Type

This allows you to select the media type.



 Always select media type that is actually set in the printer. When the media you chose is different from the media set in the printer, you may not receive the desired print results.

## Easy Settings / Advanced Settings

Two modes are available to provide the optimum print settings for jobs.

The settings available on each mode are as follows.

- Easy Settings → P.322
- Advanced Settings →P.324

#### Paper Source

You can select the paper source.

The following settings are available for paper source.

Setting	Details
Manual	Select for manual paper feed printing.
Roll Paper	Select to print on roll paper.

## Roll Paper Width

This selects the width of the roll media set to the printer.



Available only if rolls are selected in Paper Source.

321

#### Copies

You can input the number of print copies in numerical characters.



- The maximum value is 999.
- You can change the numbers by clicking either ▲ button or ▼ button.

#### • Restore Defaults Button

Click the button to reset to the setting when starting Free Layout.

#### Print Button


Click the button to begin printing.

## • Update Printer Info. Button

Click the button to acquire printer information.

## **Easy Settings**

You can easily select the best settings for the print job by just selecting an item from the print target list that matches the content of the document.

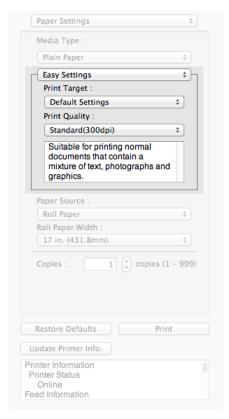

### Print Target

You can easily select the best settings for the print job simply.

If you select each Print Target item the corresponding comment for that item is displayed below the list.

in you select each i that religion the corresponding comment for that term is displayed below the list.	
Setting	Details
Default Settings	Suitable for printing normal documents that contain a mixture of text, photographs, and graphics.
Poster	The best setting for posters.Prints using vivid and high impact colors.
CAD (Color Line Drawing)	Suitable for printing fine lines such as drawings clearly.
CAD (B/W Line Drawing)	Suitable for printing CAD drawings with sharp, dark lines.

Setting	Details
Perspective, GIS	Suitable for attractive printing of 3D-CAD drawings, perspective drawings, and GIS drawings including maps.
Photo (Color)	Suitable for printing photographic images captured with a digital camera.
Office Document	Suitable for printing handouts as well as general office documents for which print clarity is key.
Faithful Color Reproduction	Prints by minimizing color differences. Suitable for when the printing results are too vivid or when printing scanned images.
Custom Settings	Suitable for printing documents for which Advanced Settings have been specified.



• The number of settings available for selection depends on the media type.

## Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.

Setting	Details
Print Quality	Highest quality / Highest / High / Standard / Fast
Resolution	1200dpi / 600dpi / 300dpi




- The availability of settings is determined by the media type and print priority selections.
- Note Printing time is longer and more ink is consumed with **High** than with **Fast**, however, print quality is higher.
  - Printing time is shorter and less ink is consumed with **Fast** than with **High**, however, print quality is lower.
  - For **Highest quality**, the resolution is not displayed.

Advanced Settings iPF680

## **Advanced Settings**

Presents detailed settings for the print priority, the print quality, and other items so you can select the values for these settings yourself.

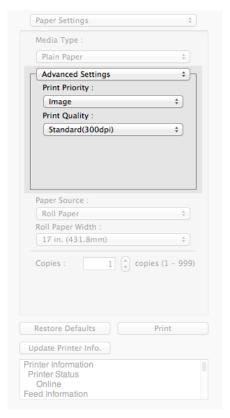

## Print Priority

Select a print quality mode that is appropriate for the print job.

Setting	Details
Image	This mode achieves the best results for printing photographic images and illustrations.
Line Drawing	This mode is best for printing CAD drawings with fine lines or wall newssheet or other documents that contain large amounts of text. However, you may not achieve the quality you expect with printing photographs or other images with many filled areas. For these types of jobs, select <b>Image</b> .
Office Document	Prints common office documents, such as proposals, memos for distribution, etc., so they are easy to read.



The number of settings available for selection depends on the media type.

## Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.

Setting	Details
Print Quality	Highest quality / Highest / High / Standard / Fast
Resolution	1200dpi / 600dpi / 300dpi

324


iPF680 Color Settings Panel



- The availability of settings is determined by the media type and print priority selections.
- Note Printing time is longer and more ink is consumed with **High** than with **Fast**, however, print quality is higher.
  - Printing time is shorter and less ink is consumed with **Fast** than with **High**, however, print quality is lower.
  - For **Highest quality**, the resolution is not displayed.

# **Color Settings Panel**

This panel appears when you select Color Settings in the dialog area.

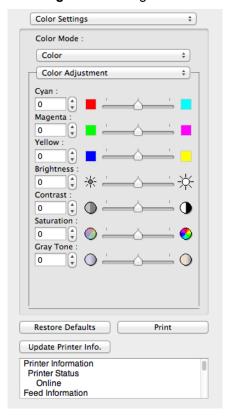

# Color Mode

You can select a color mode to suit the print job.

Setting	Details
Color	Enables color printing.
Monochrome	Disables color printing and converts image from continuous color to grayscaled mono- chrome.
Color (CAD)	Prints lines in the best color possible so they are easy to see.
Monochrome Bitmap	Prints all colors other than white in black.
Monochrome (BK ink)	Select to print all lines with black ink.
No color correction	Prints without performing color matching in the printer driver. Select this when color matching is performed by the application such as Adobe Photoshop or when you want to print color charts using the profile creation tool.



The availability of settings depends on the print priority and media type selections.

# Color Adjustment / Matching

You can set the color adjustment and matching.

- Color Adjustment →P.326
- Matching →P.328



• Matching is not displayed if No color correction has been selected in Color Mode.

#### • Restore Defaults Button

Click the button to reset to the setting when starting Free Layout.

#### • Print Button

Click the button to begin printing.

# • Update Printer Info. Button

Click the button to acquire printer information.


# **Color Adjustment**

You can set the color adjustment.

# Adjusting Color

Normally colors should be adjusted in the software application, but if you see colors in the printout that do not match colors on the screen, you can perform color adjustments.

- Select Color on Color Mode in the Color Settings panel.
- 2 Select Color Adjustment.

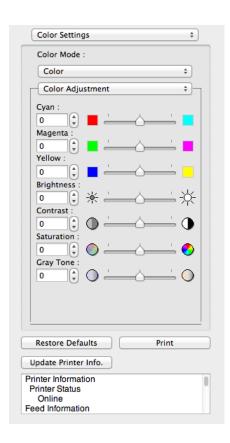

Color Adjustment



# Drag each slider to the left or right to adjust.

Setting	Details
Cyan	Adjusts the strength of colors to compensate the hues.
Magenta	Adjusts the strength of colors to compensate the hues.
Yellow	Adjusts the strength of colors to compensate the hues.
Brightness	Adjusts the brightness of the entire image. When the results of the printout are brighter than the original images such as the original photo before scanning and graphics created on the display, or when you want to print in different degrees of brightness, use this feature.
Contrast	Adjusts the relative brightness between the brightest and darkest portions of the image.  *For soft gradation, decrease the contrast. For hard gradation, increase the contrast.
Saturation	Adjusts the hues for vivid color or dark color.
Gray Tone	Adjusts gray from cool black (bluish tones) to warm black (reddish tones).




• You can also click the up or down arrow, or enter the number directly to increase or decrease the value.

# Adjusting Monochrome

Use the monochrome setting to print monochrome images of color photographs captured with a scanner or digital camera or other color images.

- Select Monochrome on Color Mode in the Color Settings panel.
- 2 Select Color Adjustment.

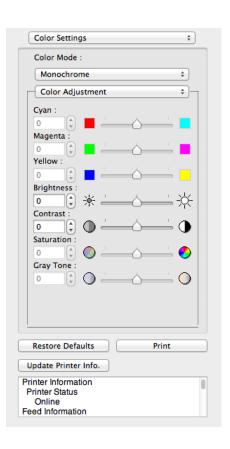



Drag each slider to the left or right to adjust.

Setting	Details
Brightness	Adjusts the brightness of the entire image. When the results of the printout are brighter than the original images such as the original photo before scanning and graphics created on the display, or when you want to print in different degrees of brightness, use this feature.
Contrast	Adjusts the relative brightness between the brightest and darkest portions of the image.  *For soft gradation, decrease the contrast. For hard gradation, increase the contrast.




• You can also click the up or down arrow, or enter the number directly to increase or decrease the value.

# **Matching**

You can set the matching.



• If No color correction is selected under Color Mode, the Matching is not displayed.

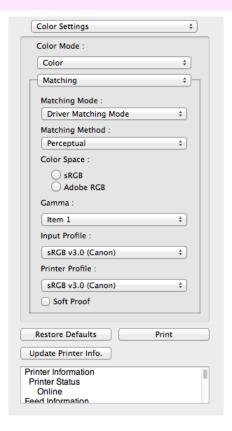

# Matching Mode

You can select a matching mode to suit the print job.

	• •
Setting	Details
Driver Matching Mode →P.330	Enables printing of optimal color tones using a driver specific color profile. You should normally select this mode.
ICC Matching Mode →P.331	Enables color matching using ICC profiles. Select this if you want to print by specifying the input profile, printer profile, and matching method in detail. This allows you to use ICC profiles for digital cameras and scanners, ICC profiles created using the profile creation tool, etc.

Matching

Setting	Details
ColorSync →P.332	Enables color matching by using the ColorSync function of OS X. Select this if you want to perform soft proofing using ColorSync before printing.



You need to set each correction on the printer driver.

Note • ColorSync needs to be selected in the Color Matching panel of the driver in order to select ColorSync.

# Matching Method

You can select a matching method to suit the print job.

# Gamma

You can adjust the gradation of intermediate tones in an image. 2.2 is normally selected. If you want a softer impression than 2.2, select 1.8.



You can select only after Driver Matching Mode has been selected in Matching Mode.

#### Note

# Input Profile

Select the input profile.



You can select only after ICC Matching Mode has been selected in Matching Mode.

# Printer Profile

Select the printer profile.



You can select only after ICC Matching Mode has been selected in Matching Mode.

#### Soft Proof

When you place a checkmark here, **ColorSync** applies to the layout area.




You can select only after ColorSync has been selected in Matching Mode.

Note

# **Driver Matching Mode**

1 Under Matching Mode, select Driver Matching Mode.

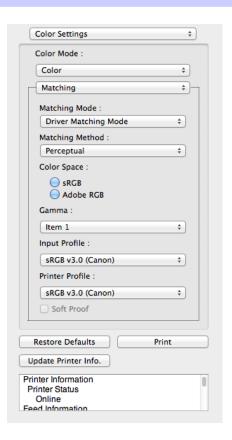


2 Click the **Matching Method** list, and then select a setting.

Setting	Details
Auto	Automatically selects the best color matching method for each Image, Graphics, Text.
Perceptual	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
Saturation	Color-matching optimized for printing posters, etc., vividly.
Colorimetric	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.

# ICC Matching Mode

1 Under Matching Mode, select ICC Matching Mode.

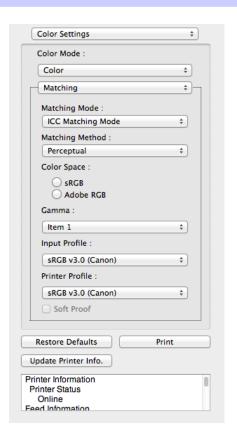

2 Click the **Matching Method** list, and then select a setting.


Setting	Details
Perceptual	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
Saturation	Color-matching optimized for printing posters, etc., vividly.
Colorimetric	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.
Colorimetric (No White-Point Correction)	The processing method of color-matching is identical to <b>Colorimetric</b> . Use this when you want to further reproduce the target paper material color of the image data. Generally, this also is called absolute colorimetric.

- 3 Click the **Input Profile** list and select an input profile.
- Click the **Printer Profile** list and select a printer profile.

ColorSync iPF680

# ColorSync


1 Check that ColorSync is selected in Matching Mode.

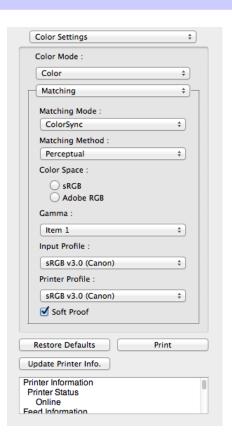

Place a checkmark on **Soft Proof** to simulate the output product in Layout Area.

# **Preferences Dialog Box**

This dialog box appears when you select **Preferences** from the imagePROGRAF Advanced Preview menu. You can set the preferences for Free Layout.

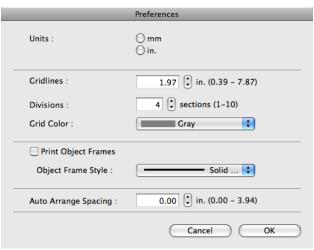

Units

332

Set the unit for paper length, margins, and so on.

Gridlines

You can input a grid line width value in numerical characters so that they serve as a guide to laying out objects.



- You can input between 10.0 and 200.0(mm) (between 0.39 and 7.87(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

#### Divisions

You can change the number of divisions of grid lines so that they serve as a guide to laying out objects.



- You can input between 1 and 10.
- You can change the numbers by clicking either ▲ button or ▼ button.

#### Grid Color

Select the grid line color.

# Print Object Frames

You can print the object border.



• If you do not want to print the object border, deselect the Print Object Frames check box.

# Object Frame Style

You can select the object frame style for printing.

The following settings are available for the object frame style.

Setting	Details
Solid Line	You can print the solid line as the frame style.
Dotted Line	You can print the dotted line as the frame style.
Dashed Line	You can print the dashed line as the frame style.

# Auto Arrange Spacing


Change the object-to-object spacing to be applied in the operation of laying out objects automatically.



- You can input between 0.0 and 100.0(mm) (between 0.00 and 3.94(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

# **Page Setup Dialog Box**

This dialog box appears when you select **Page Setup** from the **File** menu. This dialog box provides selections for setting the media size, orientation and other important features.

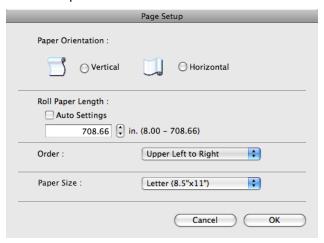

# Paper Orientation

This selects the paper orientation.

The following settings are available for orientation.

Setting	Details
Vertical	Prints the image and text created with the application software in the orientation as it is.
Horizontal	Prints the image and text by rotating sideways 90 degrees from the orientation as specified in the application.

# Roll Paper Length

Set the length of one page to print on roll paper.

When you place a checkmark on **Auto Settings**, the one-page length to be printed on roll paper is automatically set so that the laid-out objects are printed on one page.



- Available only if rolls are selected in **Paper Source**.
- You can input between 203.2 and 18000.0(mm) (between 8.00 and 708.66(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

#### Order

Set the object layout order.

The following settings are available for order.

Setting	Details
Upper Left to Right	The objects are laid out from upper left to right.
Upper Left to Bottom	The objects are laid out from upper left to bottom.



- When you have selected Roll Paper Length > Auto Settings and Paper Orientation > Vertical, you can choose only Upper Left to Right.
- When you have selected Roll Paper Length > Auto Settings and Paper Orientation > Horizontal, you can choose only Upper Left to Bottom.

# Paper Size

You can select the size of the print media.



You cannot display this if Roll Paper is selected in Paper Source.

# **Zoom Dialog Box**

This dialog box appears when you select **Zoom** from the **View** menu. You can enlarge or reduce the screen display.



#### Scaling

Set the magnification for enlargement or reduction of the screen display.




- You can input between 10 and 400.
- You can change the numbers by clicking ▼ button.

iPF680 Format Dialog Box

# **Format Dialog Box**

This dialog box appears when you select Format from the Object menu after you select an object. You can rotate, enlarge, or reduce an object.

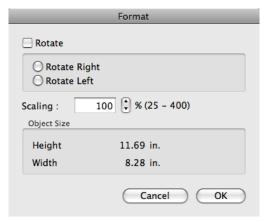



When the objects are not selected, you can not select Format.

# Rotate

When you place a checkmark here, you can select Rotate Right or Rotate Left.

Setting	Details
Rotate Right	Rotates the object 90 degrees clockwise.
Rotate Left	Rotates the object 90 degrees counterclockwise.



When several objects are selected, you cannot select Rotate.

# Scaling

You can input the value for enlargement or reduction of the obeject in numerical characters.



- You can input between 25 and 400.
- You can change the numbers by clicking either ▲ button or ▼ button.

# Object Size

You can confirm the object size.



When several objects are selected, you cannot display Object Size.

# Laying out a Multiple-File Document on One Page

You can lay out and print a multiple-file document on one page.

From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



Normally, select **Print** from the **File** menu.

Click on Free Layout in the Page Setup panel to attach a checkmark.

- In the **Print** dialog box, select the pages to print and the number of copies, and click the **Print** button. Free Layout starts, laying out the document created with application software in the layout area as an object.
- 4 Leaving Free Layout running, open other files with the application software and repeat the above steps.

# Laying out a Document Created with Multiple Application Programs on One Page

You can lay out and print a document created with multiple application programs on one page.





- Normally, select Print from the File menu.
- Click on Free Layout in the Page Setup panel to attach a checkmark.
- In the **Print** dialog box, select the pages to print and the number of copies, and click the **Print** button. Free Layout starts, laying out the document created with application software in the layout area as an object.
- 4 Leaving Free Layout running, open the files with other application software and repeat the above steps.

# Selecting an Object

When an object is selected, a select box (blue border) appears around the object.





- To select an object, click that object.
- To select multiple successive objects, click them while holding down the shift key.
- To select multiple arbitrary objects, click them while holding down the command key.
- To select all objects, select Select All from the Edit menu.

iPF680 Changing the Object Size

# **Changing the Object Size**


You can change the object size by means of mouse operation or by specifying a scaling value.



• The vertical-to-horizontal ratio remains unchanged when the object is enlarged or reduced.

# Resizing by means of mouse operation

- Select an object.
- Place the pointer at a corner of the selection box around the object to show the arrow handle, and drag this handle to change the object size.

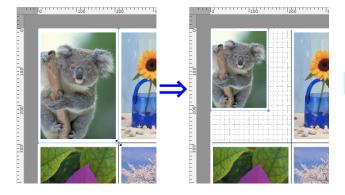

# Resizing by specifying a scaling value

- Select an object.
- Open the Format Dialog Box →P.335 .
- Use **Scaling** to set the magnification for enlargement or reduction. You either enter numbers directly.




- You can input between 25 and 400.
- You can change the numbers by clicking either ▲ button or ▼ button.
- Click the **OK** button.

# **Moving an Object**

You can move the object position.

- Select an object.
- Place the pointer inside the selection box of the object to show the crosshair handle, and drag it to move the object.

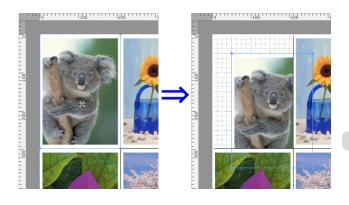

337

Rotating an Object iPF680

# **Rotating an Object**


You can rotate the object.



Select an object.



Select Rotate Left or Rotate Right from the toolbar. Alternatively, you may click on the Rotate check box in the Format Dialog Box >P.335 then select Rotate Right or Rotate Left, and click the OK button.

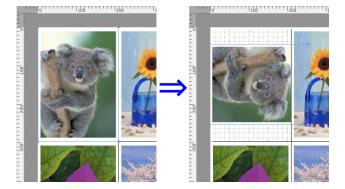




When several objects are selected, you cannot select Rotate.

# **Laying out Objects Automatically**

Click **Auto Arrange** in the tool bar. This automatically lays out objects. Alternatively, you may select **Auto Arrange Object** from the **Object** menu.

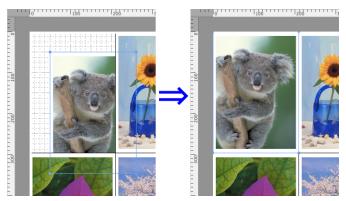



The object layout order varies depending on the Order setting on the Page Setup Dialog Box →P.3333

# **Aligning Objects**

You can align objects systematically.




Select multiple objects.

# Align Top


Lays out the objects, justifying them to the top.

Select the align menu from the **Object** menu.

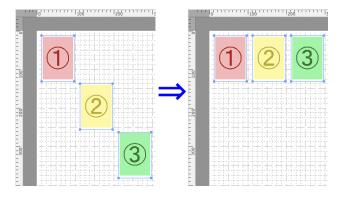


# Center Vertically

Lays out the objects, justifying them to the vertical center.

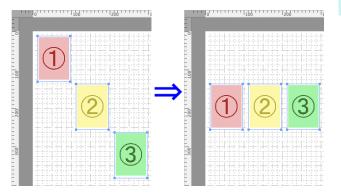


# Align Bottom

Lays out the objects, justifying them to the bottom.

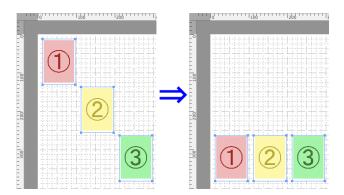


# Align Left

Lays out the objects, justifying them to the left.

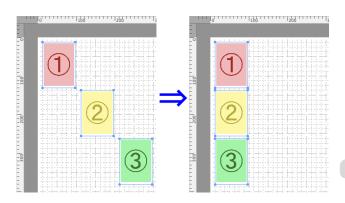


# Center Horizontally

Lays out the objects, justifying them to the horizontal center.

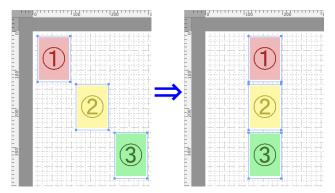

# Align Right

Lays out the objects, justifying them to the right.

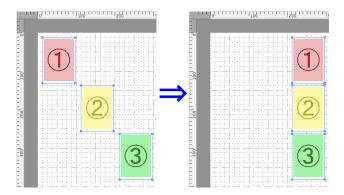


# **Changing the Object Overlapping Order**

You can change the object overlapping order.


- 1 Select an object.
- Select the overlapping order menu from the **Object** menu.
  - Bring to Front

Moves the object to the frontmost position.

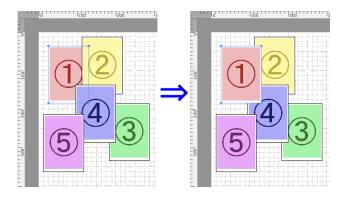


# Send to Back

Moves the object to the backmost position.

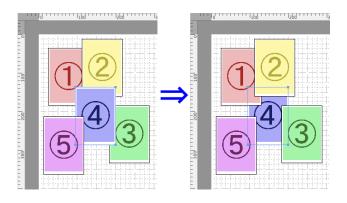


# Bring Forward

Moves the object one position to the front.

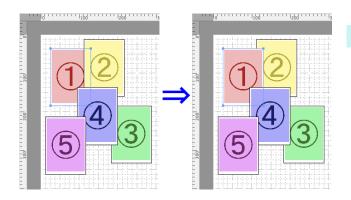

# Send Backward

Moves the object one position to the back.

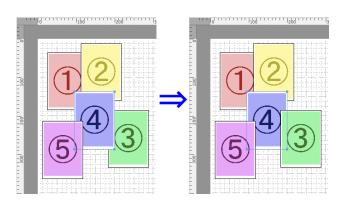

# **Pasting a Copied or Cut Object**

- Click **Copy** or **Cut** from the toolbar.

  Alternatively, you may select **Copy** or **Cut** from the **Edit** menu.
- Click **Paste** from the toolbar.

  Alternatively, you may select **Paste** from the **Edit** menu.



• The copied or cut object is laid out at the end of the page.

# Color imageRUNNER Enlargement Copy

The Features of Color imageRUNNER Enlargement Copy	
Color imageRUNNER Enlargement Copy Dialog Box	. 343
Hot Folder	. 343
Creating a New Hot Folder	. 344
Editing a Hot Folder (Setting Print Conditions)	
Deleting a Hot Folder	. 347
Setting the Print Parameters	. 348
Paper Settings Panel	. 348
Easy Settings	. 350
Advanced Settings	. 351
Output Settings Panel	352
Color Settings Panel	. 354
Driver Matching Mode	. 355
ICC Matching Mode	. 356
Printing Enlargements of Scanned Originals from a Color imageRUNNER	356

# The Features of Color imageRUNNER Enlargement Copy

The main features of Color imageRUNNER Enlargement Copy are as follows.

- Allows the document scanned with the Color imageRUNNER to be automatically enlarged and printed.
- You can perform basic printer settings such as printer selection, media type and output profile selection, and
  matching methods, in addition to borderless printing and enlargement/reduction process without growing through
  the printer driver.



 The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Color imageRUNNER Enlargement Copy settings.

# **Starting Color imageRUNNER Enlargement Copy**

You can start the utility by clicking on the Color imageRUNNER Enlargement Copy.app icon in Applications > Canon Utilities > iR Enlargement Copy.



• If you are using OS X v10.7 and later, start it from Launchpad.

# **Color imageRUNNER Enlargement Copy Dialog Box**

The explanation below is on the Color imageRUNNER Enlargement Copy dialog box.





• For the step to open the Color imageRUNNER Enlargement Copy dialog box, see "Starting Color imageRUNNER Enlargement Copy." →P.342

# Delete files in the folder

From the Hot Folder list, select a hot folder and click the **Delete** button to delete only files in the hot folder.

· Delete the entire folder, as well as items in the list above

From the Hot Folder list, select a hot folder and click the **Delete** button to delete the hot folder.

Delete Button

Select **Delete files in the folder** or **Delete the entire folder**, **as well as items in the list above** and click this button to delete the hot folder or only files in the hot folder.

Add Button

Click the button to open the **Destination Selection** dialog box so that you can add a hot folder.

• Edit Button

From the Hot Folder list, select a hot folder and click this button to open the **Add/Edit Hot Folder** dialog box that allows you to edit the hot folder.

Monitor Hot Folder Constantly

If the check box is selected, the Hot Folder is monitored from after the next login.

# **Hot Folder**

Hot folder refers to a folder used for Color imageRUNNER Enlargement Copy.

- When transferred to the PC's hot folder, the document data scanned with the Color imageRUNNER is printed in enlarged size from the printer according to the print conditions set in the hot folder.
- You can create a new hot folder, edit or delete an existing one, and set print conditions at will.




You can create up to 10 hot folders.

Creating a New Hot Folder iPF680


# **Creating a New Hot Folder**

Open the Color imageRUNNER Enlargement Copy dialog box.

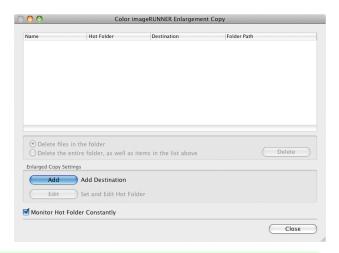



- For the step to open the Color imageRUNNER Enlargement Copy dialog box, see "Starting Color image-RUNNER Enlargement Copy." >P.342
- Click the Add button in Enlarged Copy Settings to open the Destination Selection dialog box.

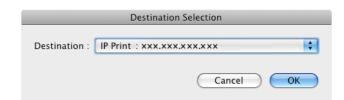


- From the printer list in **Destination**, select the printer of destination.
- Click the OK button to open the Add/Edit Hot Folder dialog box.



- 2//
- 5 In Name, enter the name to display in the Hot Folder list.
- 6 In Hot Folder, enter the Hot Folder name.

Click the **OK** button. The created Hot Folder is listed in the **Color imageRUNNER Enlargement Copy** dialog

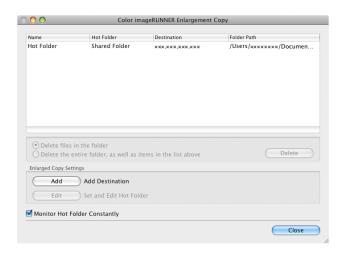

- 8 Click the Close button to close the Color imageRUNNER Enlargement Copy dialog box.
- 9 From the Apple Menu, open the Sharing dialog box for System Preferences.
- **10** For OS X v10.6:

Check the **File Sharing** checkbox and click the **Options** button.

Check the **Share files and folders using FTP** and **Share files and folders using SMB** checkboxes to configure the sharing.

For OS X v10.7 and later:

Check the File Sharing checkbox and click the Options button.


Check the **Share files and folders using SMB** checkbox to configure the sharing.



You can create up to 10 hot folders.


# **Editing a Hot Folder (Setting Print Conditions)**

Open the Color imageRUNNER Enlargement Copy dialog box.

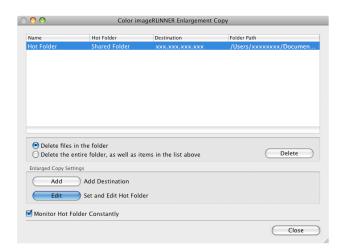


- 2 Select the Hot Folder from the Hot Folder list.
- From Enlarged Copy Settings, click Edit button to open the Add/Edit Hot Folder dialog box.

Make the necessary settings in the Paper Settings Panel →P.348.

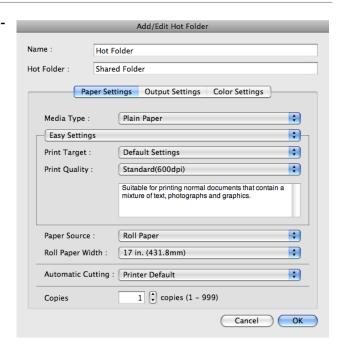

Make the necessary settings in the Output Settings Panel →P.352 .

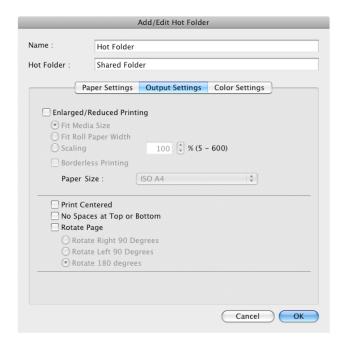

Make the necessary settings in the Color Settings Panel →P.354 .



- 7 Click the **OK** button to close the **Add/Edit Hot Folder** dialog box.
- From the Apple Menu, open the Sharing dialog box for System Preferences.
- 9 For OS X v10.6:

Check the **File Sharing** checkbox and click the **Options** button.

Check the **Share files and folders using FTP** and **Share files and folders using SMB** checkboxes to configure the sharing.

For OS X v10.7 and later:

Check the File Sharing checkbox and click the Options button.


Check the **Share files and folders using SMB** checkbox to configure the sharing.



• If you've made shared settings when you created a new Hot Folder, you do not need to execute steps 8 to 9.

# **Deleting a Hot Folder**

Open the Color imageRUNNER Enlargement Copy dialog box.

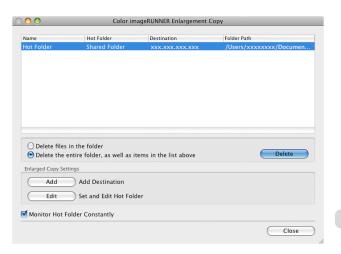

2 Select the Hot Folder you want to delete from the Hot Folder list.

Setting the Print Parameters iPF680

Select **Delete the entire folder, as well as items in the list above**, and then click the **Delete** button.



Read the messag,e and then click the **OK** button.




Select Delete files in the folder to delete only files in the hot folder.

# **Setting the Print Parameters**

You can set the print conditions in the setting panels within the **Add/Edit Hot Folder** dialog box. The settings available on each panel are as follows.

- Paper Settings Panel →P.348
- Output Settings Panel →P.352
- Color Settings Panel → P.354

# **Paper Settings Panel**

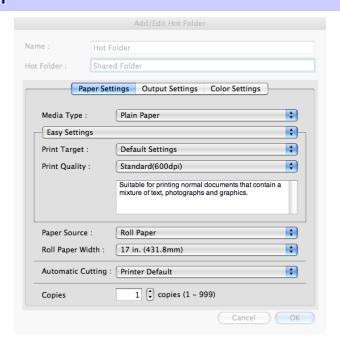

# Easy Settings / Advanced Settings

Two modes are available to provide the optimum print settings for jobs.

The settings available on each mode are as follows.

- Easy Settings → P.350
- Advanced Settings →P.351

# • Media Type

This allows you to select the media type.

Paper Settings Panel



 Always select media type that is actually set in the printer. When the media you chose is different from the media set in the printer, you may not receive the desired print results.

# Paper Source

You can select the paper source.

The following settings are available for paper source.

Setting	Details
Manual	Select for manual paper feed printing.
Roll Paper	Select to print on roll paper.

# Roll Paper Width

This selects the width of the roll media set to the printer.



Available only if rolls are selected in Paper Source.

# Note

# Automatic Cutting

You can set the printer to cut roll paper automatically or print a guideline for cutting.

The following settings are available for automatic cutting.

Setting	Details
Printer Default	The value set on the printer operation panel takes priority.
None	Each page is not cut after it is printed and printing continues without interruption.
Print Cut Guideline	A print cut guideline is printed after each page and printing continues without interruption.



Available only if rolls are selected in Paper Source.

# Copies

You can input the number of print copies in numerical characters.




- The maximum value is 999.
- You can change the numbers by clicking either ▲ button or ▼ button.

Easy Settings iPF680

# **Easy Settings**

You can easily select the best settings for the print job by just selecting an item from the print target list that matches the content of the document.

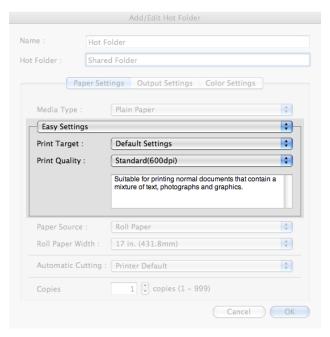

# Print Target

You can easily select the best settings for the print job simply.

If you select each **Print Target** item the corresponding comment for that item is displayed below the list.

Setting	Details
Default Settings	Suitable for printing normal documents that contain a mixture of text, photographs, and graphics.
Office Document	Suitable for printing handouts as well as general office documents for which print clarity is key.
Poster	The best setting for posters.Prints using vivid and high impact colors.
CAD (Color Line Drawing)	Prints the fine lines of CAD drawings and other such documents sharp and clear.
CAD (B/W Line Drawing)	Suitable for printing CAD drawings with sharp, dark lines.
Perspective, GIS	Suitable for attractive printing of 3D-CAD drawings, perspective drawings, and GIS drawings including maps.
Photo (Color)	Suitable for printing photographic images captured with a digital camera.
Faithful Color Reproduction	Prints by faithfully reproducing the colors of the original image.
Custom Settings	Suitable for printing documents for which Advanced Settings have been specified.



The number of settings available for selection depends on the media type.

# Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.

Setting	Details
Print Quality	Highest / High / Standard / Fast
Resolution	1200dpi / 600dpi / 300dpi




• The availability of settings is determined by the media type and print priority selections.

lote • Printing time is longer and more ink is consumed with **High** than with **Fast**, however, print quality is higher.

Printing time is shorter and less ink is consumed with Fast than with High, however, print quality is lower.

# **Advanced Settings**

Presents detailed settings for the print priority, the print quality, and other items so you can select the values for these settings yourself.

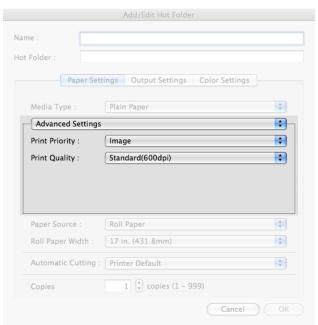

# Print Priority

Select a print quality mode that is appropriate for the print job.

Setting	Details
Image	This mode achieves the best results for printing photographic images and illustrations.
Line Drawing	This mode is best for printing CAD drawings with fine lines or wall newssheet or other documents that contain large amounts of text. However, you may not achieve the quality you expect with printing photographs or other images with many filled areas. For these types of jobs, select <b>Image</b> .
Office Document	Prints common office documents, such as proposals, memos for distribution, etc., so they are easy to read.



• The number of settings available for selection depends on the media type.

# Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.

Setting	Details
Print Quality	Highest / High / Standard / Fast
Resolution	1200dpi / 600dpi / 300dpi




The availability of settings is determined by the media type and print priority selections.

• Printing time is longer and more ink is consumed with **High** than with **Fast**, however, print quality is higher.

Printing time is shorter and less ink is consumed with Fast than with High, however, print quality is lower.

# **Output Settings Panel**

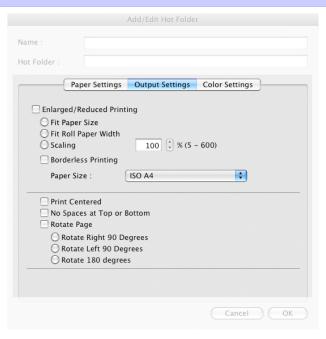

# • Enlarged/Reduced Printing

Select the method for enlarged/reduced printing.

The following settings are available for enlarged/reduced printing.

Setting	Details
Fit Paper Size	Enlarges/reduces the whole page automatically to fit the media size selected for output. Select the media size to print from <b>Paper Size</b> .
Fit Roll Paper Width	Enlarges/reduces the whole page automatically to fit the width of the roll paper with the page width.  *Make sure that the width of the roll paper in the printer is set correctly for <b>Roll Paper Width</b> in the <b>Paper Settings</b> panel.  *Displayed only if rolls are selected in <b>Paper Source</b> .
Scaling	Enlarges/reduces the whole page by the scaling rate as specified. Input the scaling value in numerical characters. You can specify a range between 5 and 600%.  *You can change the numbers by clicking either ▲ button or ▼ button.  *Although Scaling can be set to make the image larger than the media size, the part that does not fit in the media cannot be printed.  *This is not displayed when a checkmark is placed in <b>Borderless Printing</b> .

# Borderless Printing

You can print the media without margins on all sides when the roll paper with the specific width and the specific media type is used.



Available only if rolls are selected in Paper Source.

352

# Paper Size

You can select the size of the print media.



This is not displayed when Fit Roll Paper Width is set in Enlarged/Reduced Printing.

#### Print Centered

Select this feature to print the image in the center of a cut sheet or to print left and right margins evenly from the edges of roll paper.



• This feature is useful when you print the document enlarged or reduced with **Scaling** as well. When an image is scaled, it is always enlarged or reduced in reference to a starting point in the upper left corner of the page. If the image is reduced, the bottom and right margins are enlarged and the top and left margins remain unchanged. At that point, you can set all margins evenly with this feature.

# No Spaces at Top or Bottom

You can set the printer to print without any empty area when the print data contains empty area at the top or bottom. Since the printer does not feed paper over the empty area, you can save paper.



Available only if rolls are selected in Paper Source.

# Rotate Page

Select the method for rotating page.

The following settings are available for rotating page.

Setting	Details
Rotate Right 90 Degrees	Rotates the portrait page right 90 degrees and print in landscape orientation. When the rotated page can fit in the width of roll paper, the page is rotated automatically, and when it can not fit in the width of roll paper, the page is not rotated.
	*When <b>Fit Roll Paper Width</b> is selected under <b>Enlarged/Reduced Printing</b> , then the image is enlarged or reduced after rotating to fit the width of the roll paper.
Rotate Left 90 Degrees	Rotates the portrait page left 90 degrees and print in landscape orientation. When the rotated page can fit in the width of roll paper, the page is rotated automatically, and when it can not fit in the width of roll paper, the page is not rotated.
	*When <b>Fit Roll Paper Width</b> is selected under <b>Enlarged/Reduced Printing</b> , then the image is enlarged or reduced after rotating to fit the width of the roll paper.
Rotate 180 degrees	Allows you to rotate the image 180 degrees from the vertical to the right.



Available only if rolls are selected in Paper Source.

# Color imageRUNNER Enlargement Copy

# **Color Settings Panel**



# Color Mode

You can select a color mode to suit the print job.

Setting	Details
Color	Enables color printing.
Monochrome	Disables color printing and converts image from continuous color to grayscaled mono- chrome.
Color (CAD)	Prints lines in the best color possible so they are easy to see.
Monochrome Bitmap	Prints all colors other than white in black.
Monochrome (BK ink)	Select to print all lines with black ink.



The availability of settings depends on the print priority and media type selections.

# Matching Mode

Under Matching Mode, select the matching mode.

Setting	Details
Driver Matching Mode →P.355	Enables printing of optimal color tones using a driver specific color profile. You should normally select this mode.
ICC Matching Mode →P.356	Enables color matching using ICC profiles. Select this if you want to print by specifying the input profile, printer profile, and matching method in detail. This allows you to use ICC profiles for digital cameras and scanners, ICC profiles created using the profile creation tool, etc.
No Correction	No color matching is performed. Select this option when you want to perform color matching in the software application.

# **Driver Matching Mode**

Under Matching Mode, select Driver Matching Mode.




2 Click Matching Method list, and then select a setting.

Setting	Details
Auto	Automatically selects the best color matching method for each Image, Graphics, Text.
Perceptual	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
Saturation	Color-matching optimized for printing posters, etc., vividly.
Colorimetric	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.

ICC Matching Mode iPF680

# **ICC Matching Mode**

1 Under Matching Mode, select ICC Matching Mode.

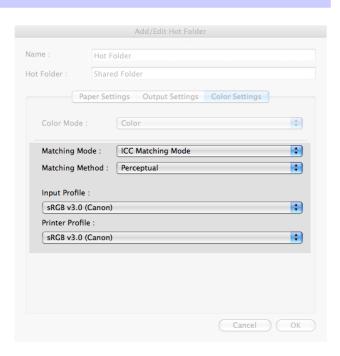

2 Click Matching Method list, and then select a setting.

,	ŭ
Setting	Details
Perceptual	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
Saturation	Color-matching optimized for printing posters, etc., vividly.
Colorimetric	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.
Colorimetric (No White-Point Correction)	The processing method of color-matching is identical to <b>Colorimetric</b> . Use this when you want to further reproduce the target paper material color of the image data. Generally, this also is called absolute colorimetric.

3 Click the **Input Profile** list, and then select an input profile.



- To match the color on the printing, select the input profile for Color imageRUNNER Enlargement Copy of the Color imageRUNNER type in use.
- 4 Click the **Printer Profile** list, and then select a printer profile.

# Printing Enlargements of Scanned Originals from a Color imageRUNNER

Scanned originals from a Color imageRUNNER can be enlarged and printed automatically.

Originals you create by scanning with a Color imageRUNNER are transferred to a "hot folder" and printed automatically after enlargement according to printing conditions you specify for that folder.

This processing sequence is called the **Color imageRUNNER Enlargement Copy** function.

To use Color imageRUNNER Enlargement Copy, first complete these settings in the following order.

Register a hot folder on your computer.

356

Register a hot folder on your computer for storing scanned originals from the Color imageRUNNER and complete the settings for enlargement copy. For details, see "Creating a New Hot Folder." >P.344

Complete the scanning settings on the Color imageRUNNER. Configure the Color imageRUNNER to send scanned originals to the hot folder.

After these settings are complete, you can print enlarged copies of scanned originals from the Color imageRUNNER.

# Completing the scanning settings on the Color imageRUNNER.

Configure the Color imageRUNNER to send scanned originals to the hot folder. It is easy to send scanned originals to the hot folder if you assign the scanning settings and destination to a **Favorites** button on the Color imageRUNNER. For instructions on assigning scanning and sending settings to the **Favorites** button, refer to the Color imageRUNNER manual.

# Scanning the original and print an enlargement

Follow the steps below to scan an original on the Color imageRUNNER for enlarged printing on the printer. For detailed instructions, refer to the Color imageRUNNER manual.

- 1 Load the original on the platen glass or document feeder of the Color imageRUNNER.
- Press **Send** to display the screen for transmission.
- Press Favorites, and then press the Favorites button assigned to the hot folder.
- Press **Start** on the control panel. If you scan originals on the platen glass, after scanning all originals, press **Done** on the touch-panel display.

Scanned originals are sent to the hot folder and automatically enlarged and printed following the conditions you specified for the folder.

# Memo

# Sels Eulde

# iPF680

User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275

# Handling and Use of Paper

Paper	360
Handling rolls	370
Handling sheets	392
Output Stacker	399
Media Configuration Tool (Windows)	404
Media Configuration Tool (Mac OS)	418

Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633

Types of Paper iPF680

# **Paper**

Types of Paper	
Using Paper Other Than Genuine Paper and feed confirmed Paper	
Displaying the Paper Reference Guide	

# **Types of Paper**

The following types of paper are supported by the printer. For details on the paper supported by the printer, refer to the **Paper Reference Guide**. (See "**Displaying the Paper Reference Guide**.") >P.363

- Plain Paper
- Coated Paper
- Photo Paper
- · Glossy Paper
- Proofing Paper
- CAD-dedicated Paper Etc.

The following content is described in the Paper Reference Guide.

- · Types of paper
- Paper handling
- · Paper product specifications
- Use precautions
- Setting of printer driver, control panel etc.

# • Paper Reference Guide display method

You can display the **Paper Reference Guide** from [imagePROGRAF Support Information]. (See "**Displaying** the **Paper Reference Guide**.") >P.363

# 1. Method of Updating Supported Paper

Photo Paper

To use newly released paper, register the latest paper information on the printer with the Media Configuration Tool. (See "Updating paper information.") > P.366



 To install the Paper Reference Guide and register paper types applicable to your region on your printer even when not using the printer driver, install the Media Configuration Tool.

(See "Media Configuration Tool (Windows).") →P.404

(See "Media Configuration Tool (Mac OS).") →P.418

# **Paper Sizes**

#### Rolls

Rolls that meet the following conditions are supported.

- Outer diameter: Up to 150 mm (6 in)
- · Inner diameter of paper core: 2 or 3 inches
- · Printing side out

360

Roll Width	Roll Paper Width Setting in Printer Driver (*1)	Borderless Printing (*1)
609.6 mm (24.00 in)	24-in. Roll (609.6mm)	Yes
594.0 mm (23.39 in)	ISO A1/A2 Roll (594.0mm)	Yes
515.0 mm (20.28 in)	JIS B2/B3 Roll (515.0mm)	Yes
431.8 mm (17.00 in)	17-in. Roll (431.8mm)	Yes
420.0 mm (16.54 in)	ISO A2/A3 Roll (420.0mm)	Yes
406.4 mm (16.00 in)	16-in. Roll (406.4mm)	No
355.6 mm (14.00 in)	14-in. Roll (355.6mm)	Yes
300.0 mm (11.81 in)	300mm Roll (300.0mm)	Yes
297.0 mm (11.69 in)	ISO A3/A4 Roll (297.0mm)	Yes
257.0 mm (10.12 in)	JIS B4 Roll (257.0mm)	Yes
254.0 mm (10.00 in)	10-in. Roll (254.0mm)	Yes

<sup>\*1:</sup> For information on types of paper compatible with borderless printing, refer to the **Paper Reference Guide**. (See "Types of Paper.") >P.360

#### **Sheets**

Sheets of the following sizes are supported.

Paper Sizes	Dimensions
ISO A1	594.0 × 841.0 mm (23.39 × 33.11 in)
ISO A2+	431.8 × 609.6 mm (17.00 × 24.00 in)
ISO A2	420.0 × 594.0 mm (16.54 × 23.39 in)
ISO A3+	329.0 × 483.0 mm (12.95 × 19.02 in)
ISO A3	297.0 × 420.0 mm (11.69 × 16.54 in)
ISO A4	210.0 × 297.0 mm (8.27 × 11.69 in)
ISO B2	500.0 × 707.0 mm (19.69 × 27.83 in)
ISO B3	353.0 × 500.0 mm (13.90 × 19.69 in)
ISO B4	250.0 × 353.0 mm (9.84 × 13.90 in)
JIS B2	515.0 × 728.0 mm (20.28 × 28.66 in)
JIS B3	364.0 × 515.0 mm (14.33 × 20.28 in)
JIS B4	257.0 × 364.0 mm (10.12 × 14.33 in)
22"x34"(ANSI D)	558.8 × 863.6 mm (22.00 × 34.00 in)
17"x22"(ANSI C)	431.8 × 558.8 mm (17.00 × 22.00 in)
11"x17"(Ledger)	279.4 × 431.8 mm (11.00 × 17.00 in)
13"x19"(Super B)	330.2 × 482.6 mm (13.00 × 19.00 in)
Letter(8.5"x11")	215.9 × 279.4 mm (8.50 × 11.00 in)
Legal(8.5"x14")	215.9 × 355.6 mm (8.50 × 14.00 in)
24"x36"(ARCH D)	609.6 × 914.4 mm (24.00 × 36.00 in)
18"x24"(ARCH C)	457.2 × 609.6 mm (18.00 × 24.00 in)
12"x18"(ARCH B)	304.8 × 457.2 mm (12.00 × 18.00 in)
9"x12"(ARCH A)	228.6 × 304.8 mm (9.00 × 12.00 in)
DIN C2	458.0 × 648.0 mm (18.03 × 25.51 in)
DIN C3	324.0 × 458.0 mm (12.76 × 18.03 in)
DIN C4	229.0 × 324.0 mm (9.02 × 12.76 in)

Paper Sizes	Dimensions
20"x24"	508.0 × 609.6 mm (20.00 × 24.00 in)
18"x22"	457.2 × 558.8 mm (18.00 × 22.00 in)
14"x17"	355.6 × 431.8 mm (14.00 × 17.00 in)
12"x16"	304.8 × 406.4 mm (12.00 × 16.00 in)
10"x12"	254.0 × 304.8 mm (10.00 × 12.00 in)
10"x15"	254.0 × 381.0 mm (10.00 × 15.00 in)
US Photo 16"x20"	406.4 × 508.0 mm (16.00 × 20.00 in)
Poster 20"x30"	508.0 × 762.0 mm (20.00 × 30.00 in)
13"x22"	329.0 × 558.0 mm (12.95 × 21.97 in)
Poster 300x900mm	300.0 × 900.0 mm (11.81 × 35.43 in)
Custom Paper Size	203.2 x 279.0 mm (8.00 x 10.98 in) to 610.0 x 1600.0 mm (24.02 x 62.99 in)



- For details on non-standard Custom Paper Size, see "Printing on Non-Standard Paper Sizes." →P.104
- Borderless printing is not supported on sheets.

### **Using Paper Other Than Genuine Paper and feed confirmed Paper**

When using this printer to print on paper other than genuine Canon paper and feed confirmed paper, use paper that meets the following conditions.



- Refer to Paper Reference Guide for details on genuine Canon paper and feed confirmed paper. (See "Displaying the Paper Reference Guide.") → P.363
- Paper where the size is described in "Paper Sizes" (See "Paper Sizes.") >P.360
- Paper where the thickness is described in "Paper Thickness" in "Specifications" (See "Specifications.") → P.630
- Paper where bleeding and ink overflow does not occur when printing
- Paper that does not warp severely when loading the paper or printing



If you use paper other than genuine Canon paper and feed confirmed paper, Canon provides absolutely no guarantees regarding print quality or paper feed properties. Refer to Paper Reference Guide for details on genuine Canon paper and feed confirmed paper. (See "Displaying the Paper Reference Guide.") P.363

Load paper in the printer and then select the paper type in the control panel and printer driver and print.

You can print easily by selecting from existing settings provided in the printer control panel and printer driver. (See "Printing on Paper Other Than Genuine Paper and feed confirmed Paper Using Existing Settings.") 
PR362

# Printing on Paper Other Than Genuine Paper and feed confirmed Paper Using Existing Settings

You can easily print on paper other than genuine Canon paper and feed confirmed paper without making complicated settings by selecting existing settings provided in the printer control panel and printer driver depending on the media type you are using. The existing settings consist of general-purpose paper settings provided for each media type and special settings that allow you to select the amount of ink to use.



The genuine Canon paper settings provided in the printer control panel and printer driver are optimized for genuine
Canon paper. If these settings are selected for printing on paper other than genuine Canon paper, the ink may bleed
or the printhead may rub against the paper. In order to easily print on paper other than genuine Canon paper and
feed confirmed paper, we recommend that you select one of the following general-purpose paper settings or special
settings.



For an overview of the media types, see "Types of Paper." →P.360

• For details on how to select the media type in the control panel and printer driver, see "Types of Paper." >P.360)

#### **Choosing General-Purpose Paper Settings**

Since these settings anticipate a wide variety of paper other than genuine Canon paper and feed confirmed paper, these settings will make it difficult for bleeding ink and the printhead rubbing to occur. Refer to the following table for the relationships between the conditions of the paper other than genuine Canon paper and feed confirmed paper and the media type to select.

Type	Approximate weight	Approximate thickness	Printer control panel	Printer driver	
Plain Paper	70 g/m²	0.09 mm (0.0035 in.)	Plain Paper	Plain Paper	
Coated Paper	90 g/m²	0.13 mm (0.0051 in.)	LW. Coated Paper	Lightweight Coated Paper	
	170 g/m²	0.22 mm (0.0087 in.)	HW. Coated Paper	Heavyweight Coated Paper	
Photo Paper	180 g/m²	0.18 mm (0.0071 in.)	LW. Photo Paper	Lightweight Photo Paper	
			LWPhotoPaper(LI)(*1)	Lightweight Photo Paper (LowInk)(*1)	
	260 g/m²	0.26 mm (0.010 in.)	HW. Photo Paper	Heavyweight Photo Paper	
			HWPhotoPaper(LI)(*1)	Heavyweight Photo Paper (LowInk)(*1)	
Proof	80 g/m²	0.10 mm (0.0039 in.)	News Proof	(*2)	
Sign/CAD Paper	150 g/m²	0.11 mm (0.0043 in.)	CAD Clear Film	CAD Clear Film	
	90 g/m²	0.08mm (0.0031 in.)	CAD Trce(Lowink)	CAD Tracing Paper (Low Ink)	
	100 g/m²	0.13 mm (0.0051 in.)	Syn.Papr(LowInk)	Synthetic Paper (LowInk)	

<sup>\*1:</sup> Print using slightly less ink. Try this if you are concerned about rubbing of ink after printing.

### Selecting Special Settings

Special settings are provided that allow you to select the amount of ink used in steps. You can fix lackluster colors or bleeding ink by selecting special settings where the amount of ink used is suitable for the paper you are using. "Special 1" uses the least amount of ink, with the amount of ink used increasing through 5 steps as the number increases up to "Special 5" which uses the greatest amount of ink. Although colors become more vivid as the amount of ink used increases, bleeding also occurs more easily. We recommend that you try in order starting from "Special 1" while checking the state of the printing.

# **Displaying the Paper Reference Guide**

The **Paper Reference Guide** are not included. To view, display the **Paper Reference Guide** on the website from the links in the installed software. An Internet connection is required in order to view them.

#### Windows


The basic instructions for displaying the Paper Reference Guide from the printer driver are as follows.

1. Open the printer driver.


(See "Accessing the Printer Driver Dialog Box from Applications (Windows).") →P.164 (See "Accessing the Printer Driver Dialog Box from the Operating System Menu (Windows).") →P.165

<sup>\*2:</sup> Software RIP is required separately.

Select the Support sheet and click the User Manual button.

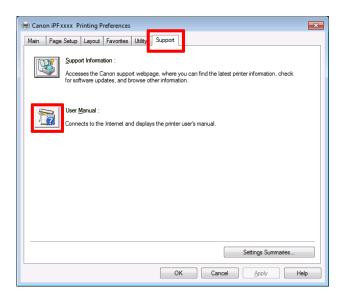

3. Click Paper Reference Guide.

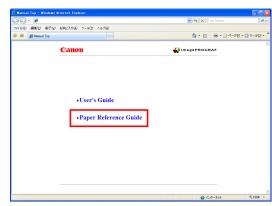

Mac OS

The basic instructions for displaying the **Paper Reference Guide** from the imagePROGRAF Printmonitor are as follows.


1. Click the System Preferences icon in the Dock.




Click Print & Scan. (This is identified as Printers & Scanners or Print & Fax in other versions of Mac OS X.)




 Select the printer from the list of printers and click Options & Supplies.

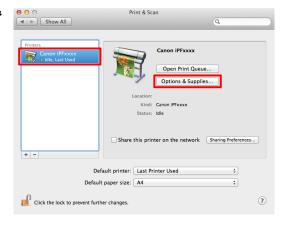

4. Click Utility.

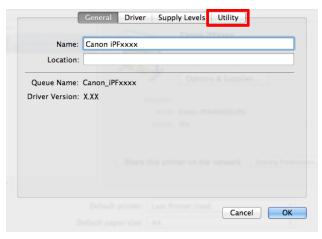


5. Click Open Printer Utility.

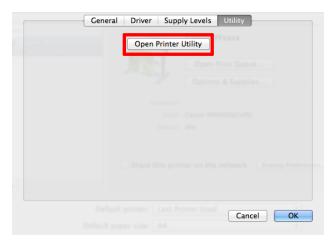

6. Click Support.

7. Click the User Manual button.



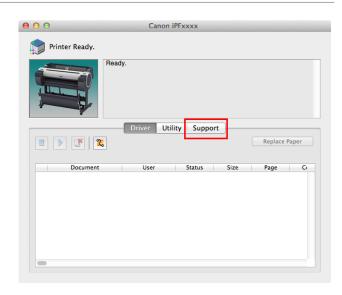





# **Updating paper information**

As for paper information of the printer Control Panel and printer driver, you can update it to the latest information by downloading and installing the latest version of **Media Information File** from the imagePROGRAF website. The latest **Media Information File** can be downloaded by accessing the imagePROGRAF website from the links in the software installed on your computer. Contact your Canon dealer if you are unable to download it. For details on **Media Information File** (Media Information File), refer as follows.

- Media Configuration Tool (Windows) → P.404
- Media Configuration Tool (Mac OS) →P.418

366




 When your version of Media Configuration Tool is older than the version released on the imagePROGRAF website, download and install the latest version of Media Configuration Tool before installing Media Information File. If you do not install the latest version of Media Configuration Tool before installing Media Information File, the latest paper information cannot be updated.

#### Windows

The basic instructions for accessing the dedicated website from the printer driver are as follows.

- 1. Open the printer driver. (See "Accessing the Printer Driver Dialog Box from Applications (Windows).") →P.164 (See "Accessing the Printer Driver Dialog Box from the Operating System Menu (Windows).") →P.165
- Select the Support sheet and click the Support Information button.

The default browser on your computer is started and the imagePROGRAF webpage is displayed.

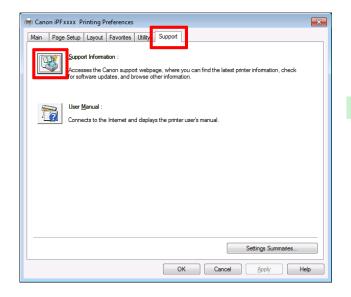

#### Mac OS

The basic instructions for accessing the dedicated website from the imagePROGRAF Printmonitor are as follows.


1. Click the System Preferences icon in the Dock.



2. Click Print & Scan. (This is identified as Printers & Scanners or Print & Fax in other versions of Mac OS X.)




Select the printer from the list of printers and click Options & Supplies.

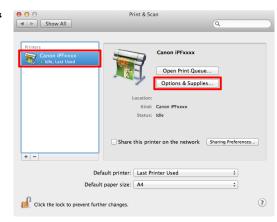


4. Click Utility.



5. Click Open Printer Utility.

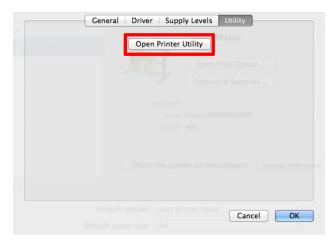

# 6. Click Support.

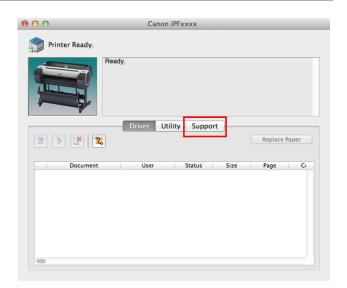

# 7. Click the **Support Information** button.

The default browser on your computer is started and the imagePROGRAF webpage is displayed.




# Handling rolls

Attaching the Roll Holder to Rolls	
Changing the Type of Paper	376 378
Removing the Roll from the Printer	378 381
<ul> <li>→ Clearing Jammed Roll Paper</li> <li>→ Clearing Jammed Paper (Paper Feed Slot)</li> </ul>	579 585
Feeding Roll Paper Manually	383
Specifying the Cutting Method for Rolls  Cutting the Leading Edge of Roll Paper Automatically  Reducing Dust from Cutting Rolls	389
Roll Holder Set	480

# **Attaching the Roll Holder to Rolls**

When printing on rolls, attach the Roll Holder to the roll.

Rolls have a two- or three-inch paper core. Use the correct attachment for the paper core. The printer comes equipped with the 2-Inch Paper Core Attachment installed.

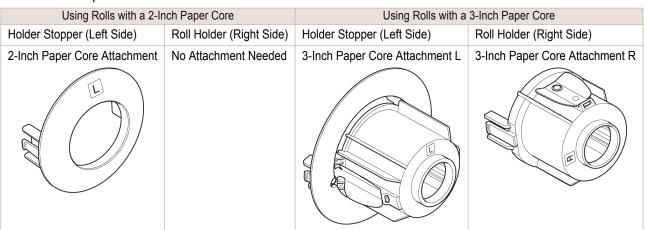



 Set the roll on a table or other flat surface so that it does not roll or fall. Rolls are heavy, and dropping a roll may cause injury.




- When handling the roll, be careful not to soil the printing surface. This may affect the printing quality. We recommend wearing clean cloth gloves when handling rolls to protect the printing surface.
- Use scissors or a cutting tool to cut the edge of the roll paper if it is uneven, dirty, or has tape residue. Otherwise, it
  may cause feeding problems and affect the printing quality. Be careful not to cut through any barcodes printed on the
  roll.
- Align the edges of the paper on both ends of the roll. Misalignment may cause feeding problems.





- For details on supported sizes and types of rolls, see Paper Sizes or the Paper Reference Guide. (See "Paper Sizes.") →P.360 (See "Displaying the Paper Reference Guide.") →P.363
- To view instructions as you attach the Roll Holder, press the Navigate button. (See "How to View Instructions with Navigate.") >P.443
- Lift the Holder Stopper lever (a) from the shaft side to unlock it. Holding the Holder Stopper at the position indicated (b), remove it from the Roll Holder.

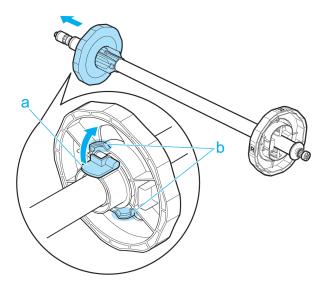


2

Insert the respective attachments for the roll paper core on the Roll Holder and Holder Stopper.


• Using rolls with a 2-inch paper core

Holder Stopper (Left Side)	Roll Holder (Right Side)
Align the tips (a) of the 2-Inch Paper Core Attachment with the holes (b) of the Holder Stopper and insert it firmly.	No attachment is needed.


· Using rolls with a 3-inch paper core

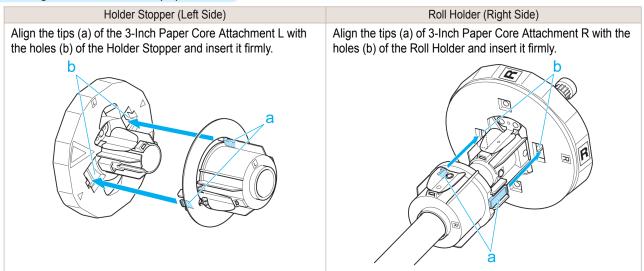

With the edge of the roll paper facing forward as shown, insert the Roll Holder from the right of the roll. Insert it firmly until the roll touches the flange (a) of the Roll Holder, leaving no gap.

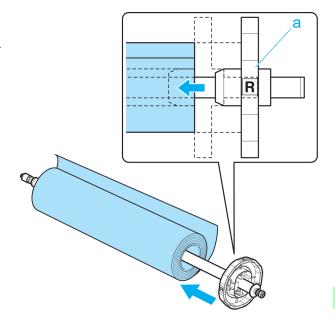

Insert the Holder Stopper from the left in the Roll Holder as shown. Holding it at the position shown (b), push it firmly in until the flange (a) of the Holder Stopper touches the roll. Lock the Holder Stopper lever (c) by pushing it down toward the shaft side.

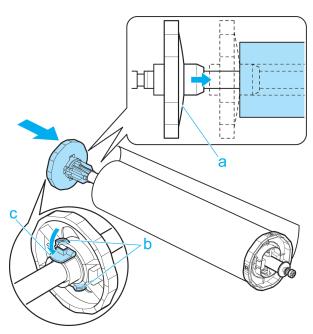


# Loading Rolls in the Printer

Follow these steps to load rolls in the printer.



• Before loading rolls, make sure the printer is clean inside the Top Cover and around the Ejection Guide. If these areas are dirty, we recommend cleaning them in advance. (See "Cleaning Inside the Top Cover.") >P.564

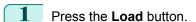





Press ▲ or ▼ to select "Load Roll Paper", and then press the OK button.



- If any paper has been advanced that will not be used, a message is shown requesting you to remove it. Press ▲ or ▼ to select **Yes**, and then press the **OK** button. Remove the paper and go to the next step.
- 3 Positioning your hands as shown, open the Roll Cover.

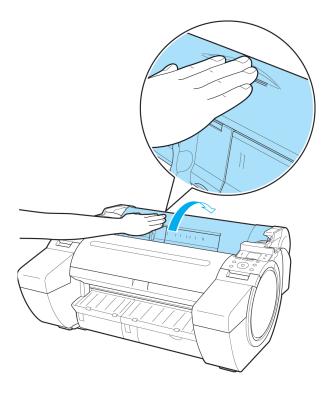


Holding the Roll Holder flange (a), rest the Roll Holder shaft on the Roll Ledge (b).
At this time, position the holder so that the **R** label (c) on the [W label (c) on the Roll Holder flange is aligned with the **R** label (d) on the printer.

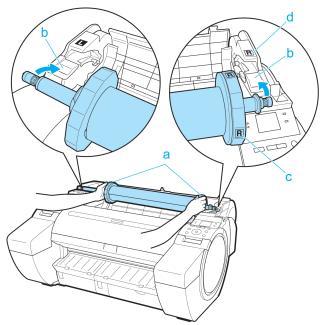




Holding the Roll Holder flange (a), guide the holder along the Roll Loading Slots (b) on both ends, keeping the holder level as you load it in the Roll Holder Slot.

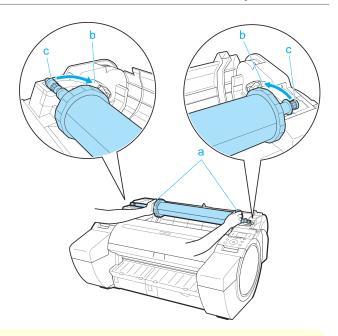




- Do not force the Roll Holder into the printer with the right and left ends reversed. This may damage the printer and Roll Holder.
- Do not release the flanges until the holder is loaded in the Roll Holder Slot.
- Be careful not to pinch your fingers between the Roll Loading Slots (b) and the Roll Holder shaft (c) when loading rolls.
- Insert the edge of the roll in the Paper Feed Slot (a) and advance the roll until you hear the feed tone.

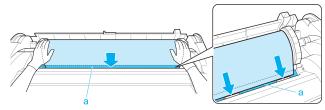



- Be careful not to soil the printing surface of roll paper as you insert it in the slot. This may affect the printing quality. We recommend wearing clean cloth gloves when handling rolls to protect the printing surface.
- If the paper is wrinkled or warped, straighten it out before loading it.
- Load paper straight so it is not fed askew.

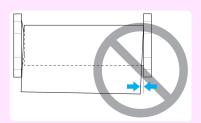

Once paper feeding starts, you will need to do the following, based on the ManageRemainRoll setting and the barcode printed on rolls. (See "Keeping Track of the Amount of Roll Paper Left.") >P.383

ManageRe- mainRoll	Barcodes	Printer Operation After the Paper is Fed
Off	Printed	A menu for selection of the type of paper is automatically shown on the Display Screen.
	Not printed	Press ▲ or ▼ to select the type of paper, and then press the <b>OK</b> button.
On	Printed	The type and amount of paper left is automatically detected based on the barcode printed on the roll. There is no need to specify the type and length of the paper.


375

ManageRe- mainRoll	Barcodes	Printer Operation After the Paper is Fed
On	Not printed	A menu for selection of the paper type and length is automatically shown on the Display Screen.  Press ▲ or ▼ to select the type and length of paper loaded, and then press the <b>OK</b> button.



• For details on types of paper to select, see the **Paper Reference Guide**. (See "Displaying the Paper Reference Guide.") • P.363



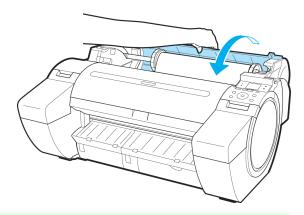



Cut the edge of the roll after the paper is advanced if it is soiled or if there are cuts from scissors or the blade
after removing creased edges. (See "Specifying the Cutting Method for Rolls.") >P.386

### **Changing the Type of Paper**

Follow these steps to change the type of paper specified on the printer after you have loaded paper. If you will continue using this type of paper later, selecting **Keep Paper Type > On** will save the time and effort of configuring the media type setting when you load the paper again. The current media type settings before you select **On** will be automatically selected at that time. (See "Using the Same Type of Paper Regularly.") >P.377



- For best printing results, the printer fine-tunes the print head height and the feed amount for each type of paper. Be sure to select the type of paper to use correctly before printing.
- Because the printer fine-tunes the feed amount for each type of paper, the margins and the size of printed images
  may vary depending on the type of paper used. If margins and the size of images are not as you expected, adjust the
  paper feed amount.

(See "Adjusting the Feed Amount.") → P.531


Rolls and sheets have different printing areas, and sheets having a larger bottom margin than rolls.
 (See "Print Area.") → P.631

#### Changing the Type of Paper



- When you load a roll, a menu for selection of the type of paper is shown on the Display Screen. Select the type of paper, and then press the **OK** button.
- If no barcode has been printed on the roll and you have set **ManageRemainRoll** to **On**, specify the roll length after the type of paper. (See "Specifying the Paper Length.") >P.378

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Paper tab (□).

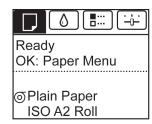



- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Paper Menu** is displayed.
- Press ▲ or ▼ to select **Chg. Paper Type**, and then press the **OK** button.
- 4 Press ▲ or ▼ to select the type of paper loaded ( Roll Paper or Cut Sheet ), and then press the OK button.
- Press ▲ or ▼ to select the type of paper loaded in the printer, and then press the **OK** button.



• Be sure to select the correct paper type. If this setting does not match the loaded paper, it may cause feed errors and affect printing quality.




- For details on types of paper, see the **Paper Reference Guide**. (See "Types of Paper.") →P.360 By default, Plain Paper is selected.
- If you move the Release Lever, the setting automatically reverts to the previously selected paper.

### Using the Same Type of Paper Regularly

Configure this setting so that current media type settings will be automatically selected when you load the same type of paper later.

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Paper tab (□).

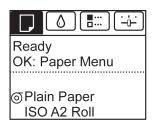



- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Paper Menu** is displayed.
- Press ▲ or ▼ to select **Keep Paper Type**, and then press the **OK** button.
- Press ▲ or ▼ to select **On**, and then press the **OK** button.



The specified media type setting is updated in the following situations.

- When using sheets, if you send a print job before loading a sheet, the media type setting is updated to match the type of paper specified by the print job.
- When you have selected **ManageRemainRoll** > **On** on the Control Panel and a barcode is printed on the roll, the media type setting is updated to match the type of paper specified by the barcode.
- To change the media type setting, see "Changing the Type of Paper." →P.376

### **Specifying the Paper Length**

When changing the length of paper after the paper has been advanced, specify the length as follows.



- Specify the paper length when you have set ManageRemainRoll to On. (See "Keeping Track of the Amount of Roll Paper Left.") →P.383
- On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Paper tab (□).





- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Paper Menu** is displayed.
- Press ▲ or ▼ to select Chg. Paper Size, and then press the OK button.
- Press ▲ or ▼ to select **Roll Length**, and then press the **OK** button.
- Press ▲ or ▼ to select the length of paper loaded in the printer, and then press the **OK** button. Specify the roll length as follows.
  - Press the ◀ or ▶ button to move to the next field for input.
  - 2. Press the ▲ or ▼ button to enter the value.
  - Repeat steps 1 and 2 to finish entering the value, and then press the OK button.


# **Removing the Roll from the Printer**

Remove rolls from the printer as follows.



• If you need to cut the roll, see "Specifying the Cutting Method for Rolls." →P.386

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Paper tab (□).

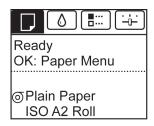




- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Paper Menu** is displayed.
- Press ▲ or ▼ to select **Eject Paper**, and then press the **OK** button.
- Press ▲ or ▼ to select **Yes**, and then press the **OK** button. The roll is now rewound and ejected.




• If you have selected **ManageRemainRoll** > **On** in the Control Panel menu, a barcode is printed on the leading edge of the roll.


You will be unable to keep track of the amount of roll paper left. (See "Keeping Track of the Amount of Roll Paper Left.") >P.383

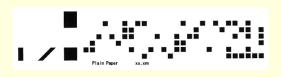


5 Positioning your hands as shown, open the Roll Cover.

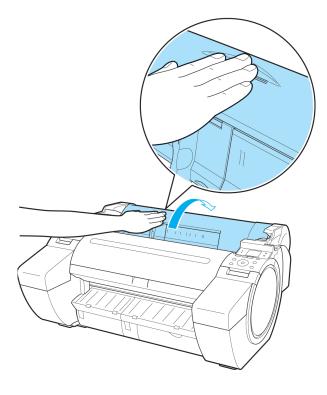

Using both hands, rotate the Roll Holder toward the back to rewind the roll.

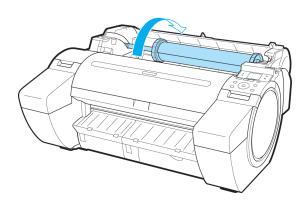

Holding the Roll Holder flange (a), remove the holder from the Roll Holder Slot.

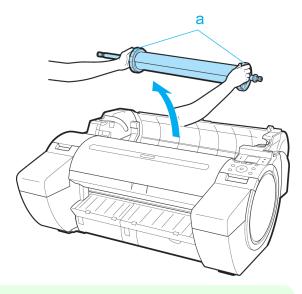




For instructions on removing the Roll Holder from rolls, see "Removing the Roll Holder from Rolls." >P.381



8 Holding it at the positions indicated, close the Roll Cover.

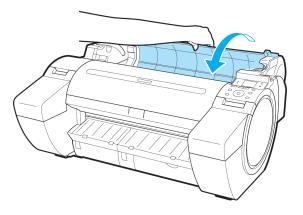





• To load new roll paper in the printer at this point, see "Loading Rolls in the Printer." →P.373

# Removing the Roll Holder from Rolls


Lift the Holder Stopper lever (a) from the shaft side to unlock it. Holding the Holder Stopper at the position indicated (b), remove it from the Roll Holder.

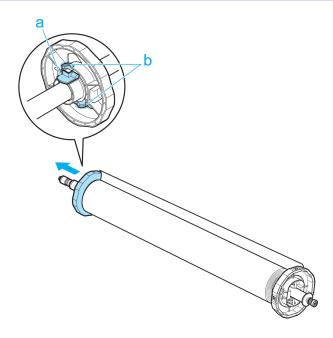


Remove the Roll Holder from the roll.

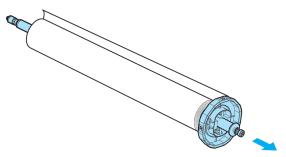


- 3 When removing attachments, push the tips (a) in as you remove the attachment.
  - 3-Inch Paper Core Attachment R (Roll Holder side)

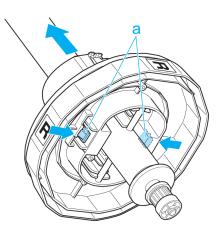

• 3-Inch Paper Core Attachment L (Holder Stopper side)

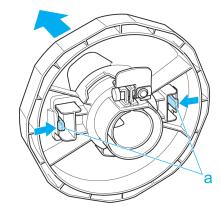

· 2-Inch Paper Core Attachment

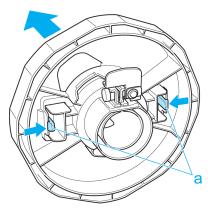



 Store the roll in the original bag or box, away from high temperature, humidity, and direct sunlight. If paper is not stored properly, the printing surface may become scratched, which may affect the printing quality when you use it again.

# **Feeding Roll Paper Manually**

After a roll has been advanced, you can press the **Feed** button to feed or retract the roll with the ▲ and ▼ buttons.



- Press the **Feed** button.
- Press the ▲ or ▼ button to advance or retract the roll.

  Press ▲ to retract the roll manually.


  Press ▼ to advance the roll manually.



If you hold down ▲ or ▼ for less than a second, the roll will move about 1 mm (0.04 in).
 If you hold down ▲ or ▼ for more than a second, the roll will move until you release the button. Release the button when the Display Screen indicates "End of paper feed. Cannot feed paper more."

### **Keeping Track of the Amount of Roll Paper Left**

Setting ManageRemainRoll to On in the Paper Menu of the Control Panel will print a barcode with text on the roll when the roll is removed that identifies the type of paper and amount left. When ManageRemainRoll is On and you load rolls with printed barcodes, the type of paper and amount left are automatically detected after rolls are loaded. The barcode will be cut off after it has been read.

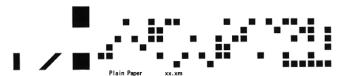



If the barcode on the roll is not detected, enter the type and length of paper on the Control Panel.

Follow these steps to set ManageRemainRoll to On as follows.

On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Paper tab ( ).





- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button. The Paper Menu is displayed.
- Press ▲ or ▼ to select ManageRemainRoll, and then press the OK button.
- Press ▲ or ▼ to select **On**, and then press the **OK** button.

# Specifying the Ink Drying Time for Rolls

When you are using paper that takes longer for ink to adhere, ink may be transferred onto the paper surface during ejection, soiling it. In that case, you may be able to improve the condition by setting the time to wait for the ink to dry after printing.




- If the Cutter touches the print surface on which the ink is not dry, the paper surface may become scratched or soiled, or the paper surface may rub when the paper falls and the surface may become soiled. To wait for the ink to dry without allowing printed documents to fall after printing, set Cutting Mode on the menu of the printer to **Eject**. (See "Specifying the Cutting Method for Rolls.") >P.386
- The settings can also be made from the Control Panel on the printer. Select the type of paper from Paper Details in Paper Menu. (See "Menu Settings.") →P.456

#### Windows

Display the printer driver dialog box.


(See "Accessing the Printer Driver Dialog Box from the Operating System Menu (Windows).") →P.165

Select the Main sheet and click C Advanced Settings in A Media Type.

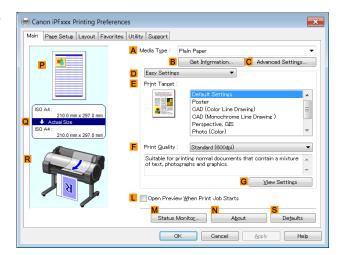

In the Paper Detailed Settings dialog box displayed next, select the desired settings values in Between Pages and C Between Scans in A Drying Time, and then click OK.


(See "Paper Detailed Settings Dialog Box (Windows).") →P.170

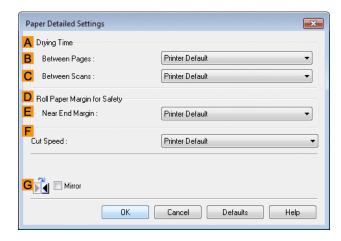

#### Mac OS


Choose **Print** in the application menu.

2 Select the Main pane and click C Settings in A Media Type.

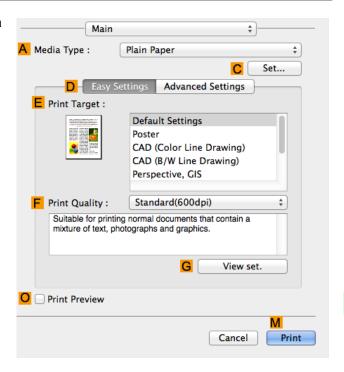

In the Paper Detailed Settings dialog box displayed next, select the desired settings values in C Between Pages and D Between Scans in B Drying Time, and then click OK.

(See "Paper Detailed Settings Dialog Box (Mac OS).") →P.284

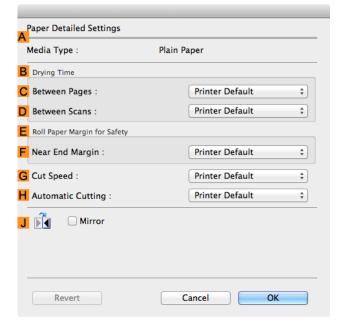

### **Specifying the Cutting Method for Rolls**

How rolls are cut after ejection varies depending on printer settings.


	Cutting Method		Printer Setting		Driver Setting	
Automatic	The roll is automatically cut by the Cutter Unit following printer driver settings.	Media Menu > Pa-	Automatic	Automatic Cutting	Yes	
Eject (wait- ing for ink to dry after printing)	Choose this setting if you prefer not to have documents dropped immediately after printing, as when waiting for ink to dry.  To cut the roll with the Cutter Unit, press the <b>Cut</b> button.	per Details > (Various Types of Paper) > Cutting Mode	Eject		Yes	
Manual (when using media that cannot be cut with the Cutter Unit)	Choose this setting when using media that cannot be cut using the Cutter Unit. Cut each page from the roll using scissors. For continuous printing (if you will cut each page later), select Automatic Cutting > Yes or select Print Cut Guideline. (See "Cutting Roll Paper After Printing.") →P.152	Moue	Manual		No, Yes, Print Cut Guideline	
Paper cut- ting (to have the roll cut at your specified position)	Choose this option if you want to cut pages by pressing Cutter Unit buttons for manual cutting after printing when <b>Automatic Cutting &gt; No</b> is selected or <b>Print Cut Guideline</b> is selected in the printer driver. Otherwise choose this option if you want to cut the roll edge after loading a roll.	Cut button pressed	Yes		No, Print Cut Guideline	



- Automatic and Eject are valid only when you have selected **Automatic Cutting > Yes** in the printer driver.
- Note With Eject, printing does not resume after a series of jobs have been printed continuously until the roll is cut.
  - **Eject** is the preset selection in **Cutting Mode** for some types of paper. For this paper, we recommend keeping the preset cutting mode.

Cut rolls manually in the following cases:


### Eject (waiting for ink to dry after printing)

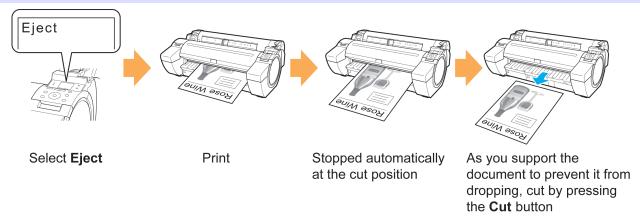



- When cutting wide printed documents after ejection, have two people support the documents. If the paper drops, printed documents may be damaged.
- Do not lift the paper when holding printed documents before cutting. If the paper rises, it may affect the printing quality or cause rough cut edges.

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Paper tab (□).

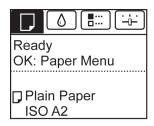





- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button. The **Paper Menu** is displayed.
- Press ▲ or ▼ to select Paper Details, and then press the OK button.
- 4 Press ▲ or ▼ to select the type of paper, and then press the **OK** button.
- 5 Press ▲ or ▼ to select Cutting Mode, and then press the OK button.
- 6 Press ▲ or ▼ to select **Eject**, and then press the **OK** button.
- Starts printing.
  When printing is finished, the printer will stop without cutting.
- 8 Holding the printed document to prevent it from dropping, press the **Cut** button to cut the roll.



### Manual (when using media that cannot be cut with the Cutter Unit )

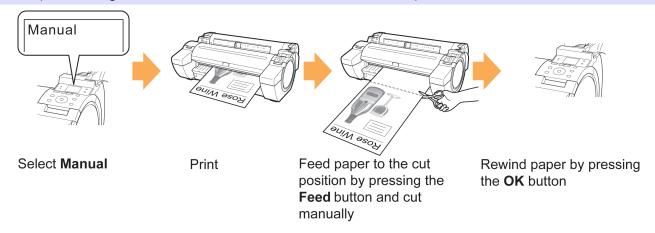

On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Paper tab (□).

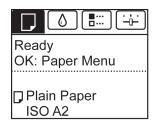




- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button. The **Paper Menu** is displayed.
- Press ▲ or ▼ to select Paper Details, and then press the OK button.
- Press ▲ or ▼ to select the type of paper, and then press the **OK** button.
- 5 Press ▲ or ▼ to select Cutting Mode, and then press the OK button.
- 6 Press ▲ or ▼ to select Manual, and then press the OK button.
- Starts printing.The printer stops advancing the paper after printing.
- Press the **Feed** button.

Roll paper is fed to the specified cut position and then automatically stopped.



9 Cut the roll paper manually with scissors or the like.

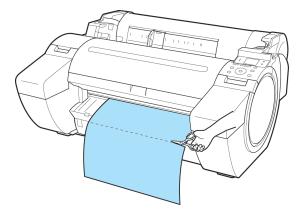


10 Press the **OK** button.

After the roll is rewound, it stops automatically.



### Paper cutting (to have the roll cut at your specified position)

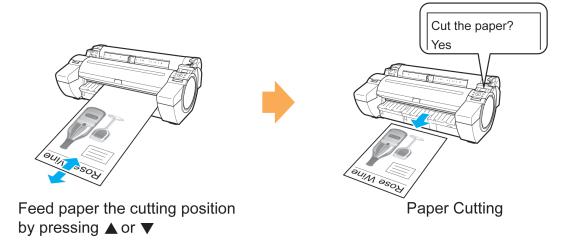

- Press the **Feed** button.
- Press the ▼ button to advance the roll to the position for cutting.



3 Press the **Cut** button.



Press ▲ or ▼ to select **Yes**, and then press the **OK** button. After the roll paper is cut, it is rewound automatically.



If paper would be short when cut at a particular position, the roll may automatically be advanced in some
cases before cutting.


# **Cutting the Leading Edge of Roll Paper Automatically**

If the leading edge of the paper is cut crooked or is not cut straight when roll paper is loaded, it will not print correctly. If this happens, you can cut the leading edge of the paper straight when loading a paper roll by using **Trim Edge First** in the Control Panel menu.

**Trim Edge First** offers the following options.

#### Automatic

If the leading edge of the paper is cut crooked and is not cut straight when loading roll paper, cut the leading edge straight and eject the fragment of paper to prevent printing on the platen and soiling the printer.

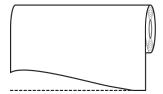

#### • On (Preset Len)

The amount to cut from the leading edge of the paper varies depending on the media type, and is cut to a prescribed length. For more information on the prescribed length, see the leading edge precut length in the **Paper Reference Guide**. (See "**Displaying the Paper Reference Guide**.") >P.363

#### On(Input Length)

The amount to cut from the leading edge of paper is specified in the control panel. The amount to cut from the leading edge can be specified in the range of lengths displayed in the control panel. The range of lengths differs between each media type.



• The amount to cut from the leading edge of paper cannot be set shorter than the length displayed in the control panel.

#### Manual

The amount to cut from the leading edge of the paper can be adjusted by pressing the ▲ and ▼ buttons. After making the adjustment, you can cut the paper by pressing the Paper Cutting button and selecting "Cut paper".

After the paper has been cut, press "Finish paper set".




• If you do not press "Finish paper set" after cutting the paper, you will not be able to print again.

#### Off

The edge is not cut and scraps are not removed.

Follow these steps to change the **Trim Edge First** setting.

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Paper tab (□).

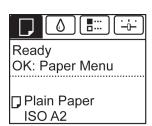



• If the **Tab Selection screen** is not displayed, press the **Menu** button.

- Press the **OK** button.
  The **Paper Menu** is displayed.
- Press ▲ or ▼ to select Paper Details, and then press the OK button.
- Press ▲ or ▼ to select the type of paper, and then press the **OK** button.
- Press ▲ or ▼ to select **Trim Edge First**, and then press the **OK** button.


390

6

Press  $\blacktriangle$  or  $\blacktriangledown$  to select the desired setting option, and then press the **OK** button. This setting takes effect the next time you load a roll.

### **Reducing Dust from Cutting Rolls**

For media such as Backlit Film that are more likely to generate debris when cut, select **CutDustReduct.** > **On** in the **Paper Menu** of the Control Panel. This option reduces debris from cutting by printing black lines at the leading and trailing edges of documents. It may help prevent Printhead damage. You can specify for **CutDustReduct.** to be activated for particular types of paper.

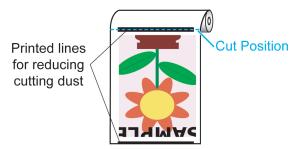




- Do not set CutDustReduct. to On for paper that wrinkles easily, such as Plain Paper or lightweight paper. This may
  impair cutting and cause paper jams.
- Borderless printing is not available when CutDustReduct. is set to On. To use borderless printing, select CutDustReduct. > Off.

#### Set CutDustReduct. to On as follows.

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Paper tab (□).

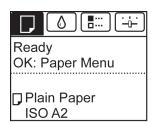



- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Paper Menu** is displayed.
- Press ▲ or ▼ to select Paper Details, and then press the OK button.
- Press ▲ or ▼ to select the type of paper loaded in the printer, and then press the **OK** button.
- Press ▲ or ▼ to select CutDustReduct., and then press the OK button.
- 6 Press ▲ or ▼ to select On, and then press the OK button.

Handling and Use of Paper

Loading Sheets in the Printer iPF680

# Handling sheets

Loading Sheets in the Printer	392
Changing the Type of Paper  Printing From a Desired Starting Point	
Removing Sheets	. 397
<ul><li>→ Clearing a Jammed Sheet</li><li>→ Clearing Jammed Paper (Paper Feed Slot)</li></ul>	

### **Loading Sheets in the Printer**

Follow these steps to load sheets in the printer.



- One sheet of paper can be loaded in the Paper Feed Slot at a time. Do not load more than one sheet at a time. This may cause paper jams.
- Before feeding paper or printing, make sure the sheet is flat against the Roll Cover. The sheet may jam if it curls before feeding or printing and the trailing edge drops toward the front.
- Paper that is wrinkled or warped may jam. If necessary, straighten the paper and reload it.
- Load the paper straight. Loading paper askew will cause an error. (See "Paper is crooked..") →P.615



Store unused paper in the original package, away from high temperature, humidity, and direct sunlight.

- 1 Select sheets as the paper source.
  - If a print job was received
     Sheets are automatically selected, and the media type and size specified by the print job are shown on the Display Screen. Go to the next step.
  - If no print job was received
    - 1. Press the **Load** button.




2. Press ▲ or ▼ to select "Load Cut Sheet", and then press the OK button.




If any paper has been advanced that will not be used, a message is shown requesting you to remove it.
 Press ▲ or ▼ to select Yes, and then press the OK button. Remove the paper and go to the next step.

Slide the Width Guide (a) to align it with the mark for the size of paper you will load.

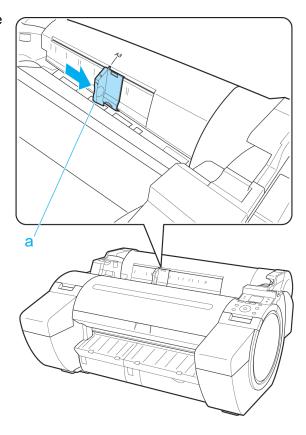


Load a single sheet printing-side up in the Paper Feed Slot, with the right edge aligned with the Paper Alignment Guide (a) to the right of the Roll Cover. Insert the paper until the leading edge makes contact and you hear a tone.

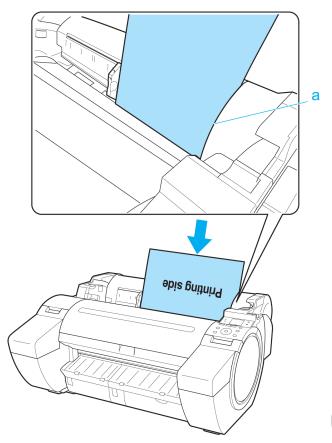

Move the Width Guide (a) carefully to match the size of paper loaded.

Set the Width Guide against the edge of the paper to prevent the paper from becoming crooked or wrinkled.

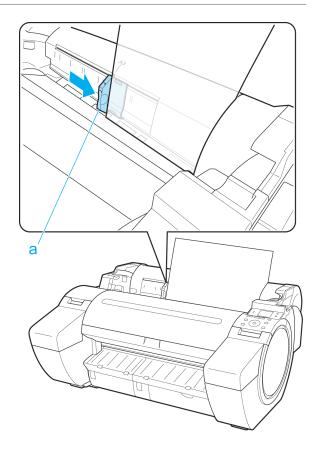

- 5 Press the **OK** button.
  - If a print job was received
     The printer now starts printing the print job.
  - If no print job was received

A menu for selection of the type of paper is automatically shown on the Display Screen.

Press ▲ or ▼ to select the type of paper, and then press the **OK** button.

The printer now starts feeding the paper.



• Refer to Paper Reference Guide for details on type of paper to select. (See "Displaying the Paper Reference Guide.") →P.363

### **Printing From a Desired Starting Point**

When printing inside boundaries or in other situations when you want to specify a particular position to start printing from, set **Width Detection** to **Off** in the printer menu for the type of paper used.

#### Set Width Detection to Off

On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Paper tab (□).





- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Paper Menu** is displayed.
- Press ▲ or ▼ to select Paper Details, and then press the OK button.
- Press ▲ or ▼ to select the type of paper, and then press the **OK** button.
- **5** Press ▲ or ▼ to select **Width Detection**, and then press the **OK** button.
- 6 Press ▲ or ▼ to select Off, and then press the OK button.

### Load paper in the desired position to start printing from

Follow these instructions to load paper at the desired starting position for printing when Width Detection is Off.


If you did not send a print job in advance, a menu for selection of the type of paper is displayed. Press ▲ or ▼ to select the type of paper, and then press the **OK** button.



 If a print job was received before paper was advanced, the media type and size specified by the job are shown on the Display Screen.


Thus, this screen is not displayed. Go to step 2.

- "Width Detection OFF. OK to continue?" is now shown on the Display Screen. Press ▲ or ▼ to select "Leave OFF", and then press the OK button.
- After a menu for selection of the paper size is displayed, press ▲ or ▼ to select the paper size, and then press the **OK** button.
- 4 Open the Top Cover and check the position where paper is loaded.

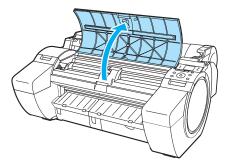


To start printing from the current position, close the Top Cover.


To reposition the paper, push the Release Lever back.

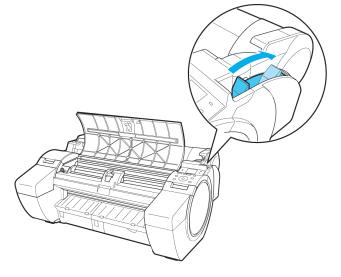

Keeping the right edge of the paper aligned with the extended line of the Paper Alignment Line (a) to the right of the ejection guide and the leading edge aligned with the groove (b) at the far end of the Platen, load the paper at the position from which to start printing.

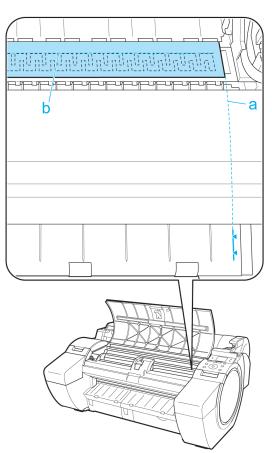


6 Pull the Release Lever forward and close the Top Cover

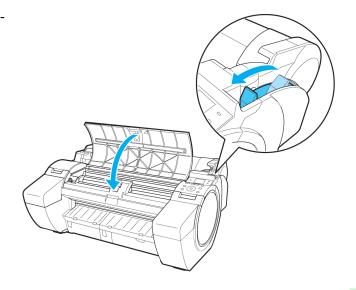

## **Removing Sheets**

Remove sheets from the printer as follows.

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Paper tab (□).

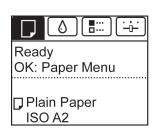





- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Paper Menu** is displayed.
- Press ▲ or ▼ to select **Eject Paper**, and then press the **OK** button.
- Press ▲ or ▼ to select **Yes**, and then press the **OK** button. The paper is ejected from the front of the printer.



Holding the paper, push the Release Lever back and remove the sheet.

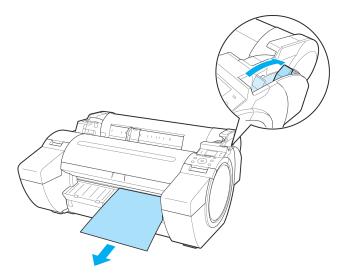



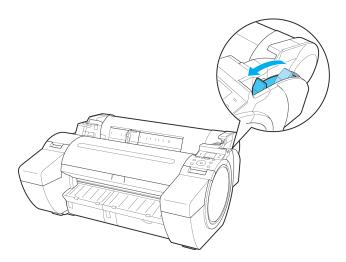

Using the Output Stacker

# Output Stacker

## **Using the Output Stacker**

This section describes how to use the Output Stacker.




- The Stand that can be used with this printer is Printer Stand ST-27 and Printer Stand ST-26.
- Note
- The Stand is described in the illustration of Printer Stand ST-27. Note that the illustrations may look different from the appearance of your printer in some cases.
- · When storing printed documents on the Output Stacker

Use position (1). For details on how to use the Extended position which is a useful function for retrieving printed matter, refer to the note regarding the Extended position. (See "Note regarding the Extended position.") >P.399

• When the Output Stacker is not used, when loading paper, or when moving the printer Use position (2).

When moving the printer, always lift the Support Rod to Extended position A before putting it in position (2), otherwise the Basket Cloth may touch the floor and be soiled or damaged. (See "Switching to Extended position A.") >P.400

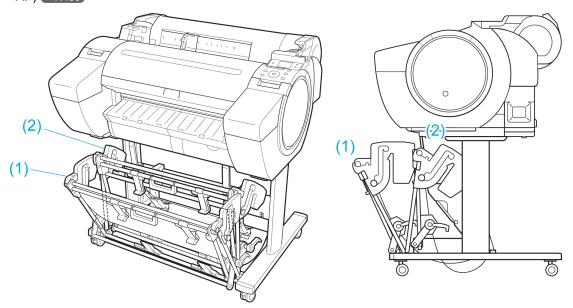



- When storing printed documents on the Output Stacker, always use it in position (1). If you do not, printed documents
  may not be dropped into the Output Stacker, and the printed surface may become soiled.
- The Output Stacker can hold one sheet. When printing multiple pages, remove each sheet after it is printed.
- The Output Stacker can hold printed documents from paper up to 36 inches (915 mm) long.

### Note regarding the Extended position


The Output Stacker has a regular position and a position for easy removal of printed documents. Use the best position for the paper size and orientation that you are using.

For information on the types and sizes of paper that the Extended position supports, refer to the following.

- Printer Stand ST-27: Output stacker operation guide (Included with the Printer Stand ST-27)
- Printer Stand ST-26: Paper Reference Guide (See "Types of Paper.") →P.360
   Regular position


399

Using the Output Stacker iPF680

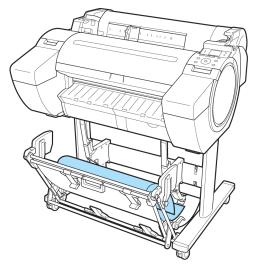

Extended position A


Extended position B (ST-27 only)

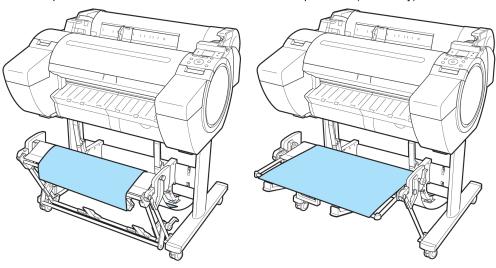

Switching to Extended position A


Switch the stacker to Extended position A as follows.

Lift the Support Rod to the position shown (a) and switch the stacker to Extended position A.

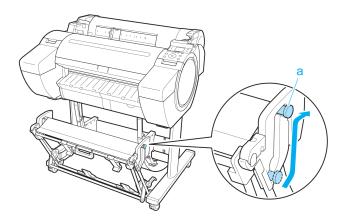



2

When using 24-inch or A1 (portrait) rolls, pull out the Adjustable Stopper (a). This completes the procedure for switching to Extended position A.

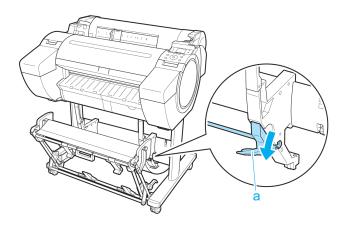


Once the printing has finished, use the following procedure to return to the regular position.

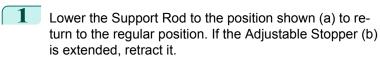

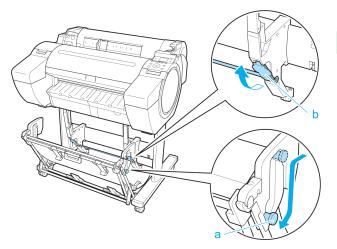


Return to the regular position.

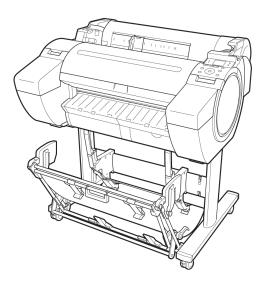


Switching to Extended position B (ST-27 only)
 Switch the stacker to Extended position B as follows.

Using the Output Stacker iPF680

Grasp the Output stacker handle (a) and pull out the Output Stacker so that it tilts towards you.

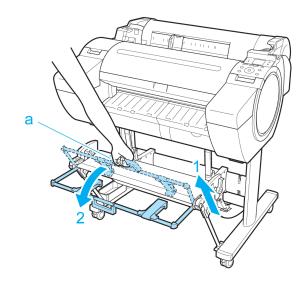


Open the Output Stacker Ejection Guides (a). This completes the procedure of switching to Extended position B.

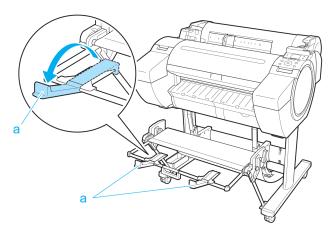


Once the printing has finished, use the following procedure to return to the regular position.


Push the Output Stacker Ejection Guides (a) closed until it clicks into place.

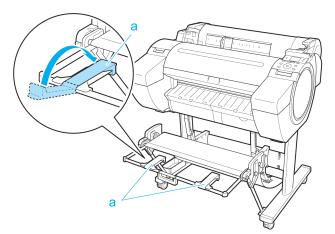


Hold onto the Output stacker handle (a) and pull the Output stacker release lever (b) towards you.

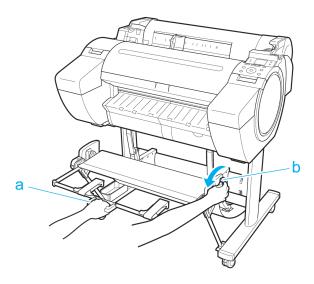

While continuing to hold the Output stacker handle (a), slowly lower the Output Stacker.

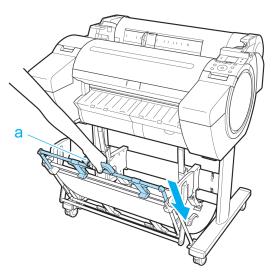

4 Return to the regular position.

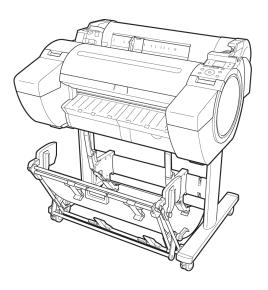

## Media Configuration Tool (Windows)

The Features of Media Configuration Tool	404
Starting Method	406
Media Configuration Tool Main Window	407
Editing Media Type Information for Genuine Paper and Feed Confirmed Paper	
Adding Media Types	409
Changing Media Names	411
Deleting Media Types You Have Added	. 413
Switching Media Types Display Show/Hide	414
Changing the Display Order of Media Types	. 416
Checking the update	417

### The Features of Media Configuration Tool

In imagePROGRAF, the best printer settings for each paper are collected together in media information files in order to give the highest quality printing results. Settings for Canon genuine paper and Canon feed confirmed paper are provided by Canon in these media information files.



• Canon genuine paper and Canon feed confirmed paper are detailed in the Paper Reference Guide.

The Media Configuration Tool allows you to perform the following tasks.

- When supported paper has been newly added to the printer, you can add that media type to the printer control panel and printer driver by using the media information file provided by Canon.
- You can rearrange lists of the types of paper on the printer control panel and in printer driver dialog boxes and rename them, in addition to other functions.



- Normally, the Media Configuration Tool is installed and the media information is configured when you install the printer driver from the User Software CD-ROM. Use this software if you want to add new media information or edit existing media information.
- Administration of paper information using the Media Configuration Tool should be performed by the printer administrator.

### Drivers Applicable with Media Configuration Tool

imagePROGRAF Printer Driver

## **Installation Procedures**


The Media Configuration Tool installation screen appears when you start the installation of a new version of the Media Configuration Tool. The installation procedure started from this screen is described below.



- When you install the printer driver from the User Software CD-ROM, the Media Configuration Tool is also installed and the media information is also configured. The following procedure is therefore not normally needed. Perform the following procedure if you are installing the Media Configuration Tool without using the User Software CD-ROM, such as by downloading the latest version of the Media Configuration Tool from the Canon website.
- You must be logged in as Administrator when installing software in Windows.


Installation Procedures

Start the Media Configuration Tool installer.
Click the **Next** button.

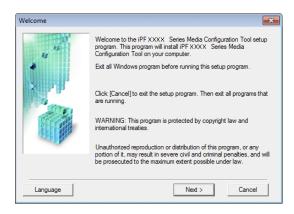

The next screen presents selections for the country or area where the printer is used.


Select a country or territory then click the **Next** button.

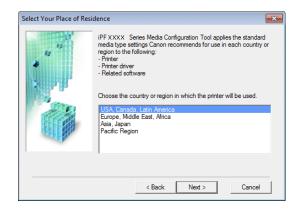

The **License Agreement** is displayed. If you accept the agreement, click **Yes**.




The **Change Installation Location** screen appears. Select the destination folder then click the **Next** button.

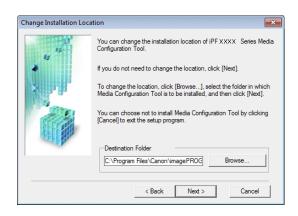



The **Installation Complete** screen appears. Click the **Finish** button.

This completes the installation of Media Configuration Tool.

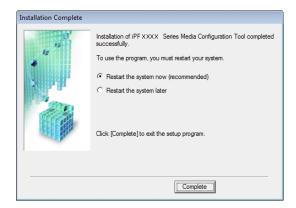


## **Starting Method**

Follow the procedure below to start Media Configuration Tool.

From the start menu go to All Programs > iPFxxxx Media Configuration Tool > iPFxxxx Media Configuration Tool.

Media Configuration Tool main window is displayed.

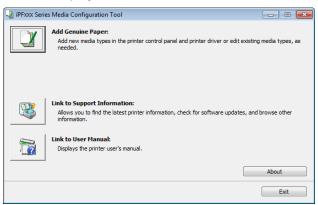




• If you only start the Media Configuration Tool, the media information on the printer control panel and in the printer driver is not updated. If this screen is displayed, select **Add Genuine Paper** in the main window, and click the **Update** button in the **Edit Media Types** screen to update the media information.



### **Media Configuration Tool Main Window**

The explanation below is on the Media Configuration Tool main window.

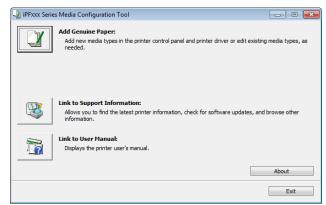



For the step to open the Media Configuration Tool main window, see "Starting Method." →P.406

### Add Genuine Paper button

When this button is clicked, the **Edit Media Types** dialog box is displayed, which allows you to add media information files released by Canon to the printer control panel and printer driver. You can also change names, toggle between displaying and hiding, and delete added media types.

You can also change the display order of the paper types.

Refer to "Editing Media Type Information for Genuine Paper and Feed Confirmed Paper" >P.407 for details on Add Genuine Paper.

### • Link to Support Information button


You can check information such as the latest information for the product and software version upgrade information.

#### Link to User Manual Button

Displays the printer user's manual

## **Editing Media Type Information for Genuine Paper and Feed Confirmed Paper**

To add genuine paper and feed confirmed paper to the printer control panel and printer driver and edit the media type information, click the **Add Genuine Paper** button in the Media Configuration Tool main window. Confirm the printer, where media type information is to be updated, to be displayed in **Printer** in the **Select Printer** dialog box, and then click the **Next** button.

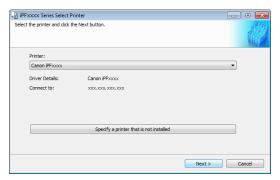

Communication with the printer begins.




Do not attempt to print or turn the printer off while the program is communicating with the printer.

The Edit Media Types dialog box is displayed.



In the following screens, you cannot change the printer where media type information is to be updated.

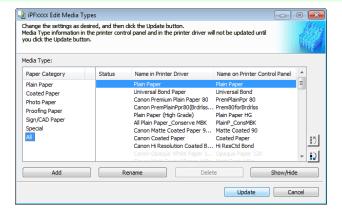



Paper that is displayed grayed out does not appear in the printer driver or printer panel.

### Add Button

To add genuine paper or feed confirmed paper to the printer control panel and printer driver, click this button. For details on the procedure for adding media types, see "Adding Media Types." >P.409



To add media types, download the media information file (.amf file) in advance from the Canon website.

### • Rename Button

To change the name on the printer control panel and the name in the printer driver for genuine paper and feed confirmed paper, select the paper to change and click this button.

For details on the procedure for changing paper display names, see "Changing Media Names." (>P.411)

### • Delete Button

To delete added genuine paper and feed confirmed paper from the printer control panel and printer driver, select the paper to delete and click this button.

For details on the procedure for deleting added media types, see "Deleting Media Types You Have Added." >P.413

#### · Show/Hide Button

To change whether or not genuine paper or feed confirmed paper is displayed in the printer control panel and printer driver, select the paper to change and click this button.

For details on the procedure for changing whether or not to display media types, see "Switching Media Types Display Show/Hide." →P.414

Change Display Order button ( ) or )

To change the display order of a media type in the printer control panel and printer driver, select the paper to change and click this button.

For details on the procedure for changing the display order of media types, see "Changing the Display Order of Media Types." →P.416

iPF680 Adding Media Types



• When you update the media type information, perform the same update on all of the PCs that are using that printer.



It may not be possible to deleting, showing/hiding, and changing the display order under some conditions.

### **Adding Media Types**


Media information files (.amf files) released by Canon are registered in the printer control panel and printer driver.



Do not perform printing on the target printer while adding the media types.


Important •

- Reinstalling Media Configuration Tool after registering a media information file may delete the registered media information file. In this case, first download and install latest Media Configuration Tool, then download and register the required media information file.
- Open the **Edit Media Types** dialog box, and then click the **Add** button.

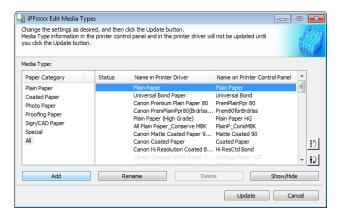




- For details on the procedure for opening the Edit Media Types dialog box, see "Editing Media Type Information for Genuine Paper and Feed Confirmed Paper." >P.407
- The Add Media Type dialog box displays.
  Click the Browse button.

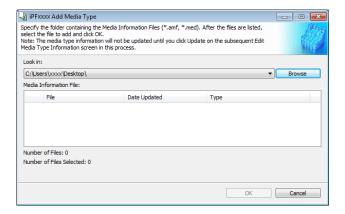


Adding Media Types iPF680

Open the folder that contains the media information files (.amf files).

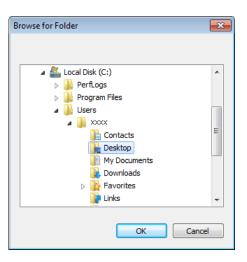


The names of the media information files contained in the selected folder are displayed in **Media Information**File in the **Add Media Type** dialog box. Select the check box for the paper you want to add and click the **OK** button.

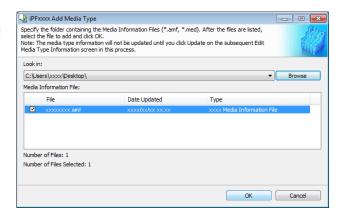




- If **Master Media Information File** is displayed as the **Type** of the **Media Information File**, the media type display order and media type display/non-display settings are initialized. Reconfigure these after added the master media information file.
- 5 Click **OK** when the confirmation message is displayed.
- 6 In the Edit Media Types dialog box, click the Update button.

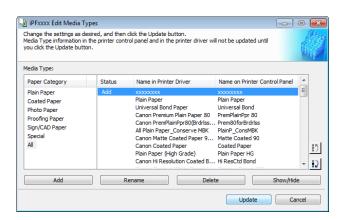

The **Confirm Update** dialog box is displayed.
Configure Update Target and click the **Execute** button.
Communication with the printer begins.

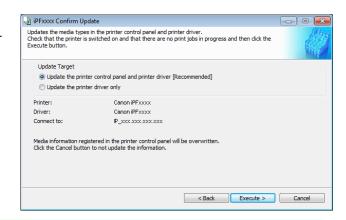




You should normally select Update the printer control panel and printer driver.




- When setting a data to the printer that differs from the data to be updated, the selected media information file
  is updated. When you would like to remain the data that is set to the printer, click the Cancel button.
- Do not attempt to print or turn the printer off while the program is communicating with the printer.
- 8 Click the **OK** button.

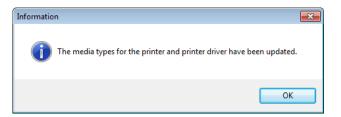

## **Changing Media Names**

1 Open the Edit Media Types dialog box.

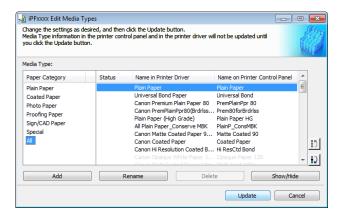





• For details on the procedure for opening the **Edit Media Types** dialog box, see "**Editing Media Type Information for Genuine Paper and Feed Confirmed Paper**." >P.407

Changing Media Names iPF680

In the **Media Type** list, select the name to change. Click the **Rename** button.

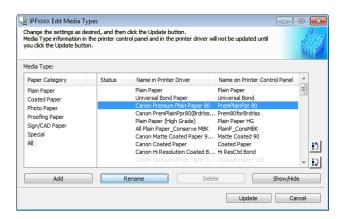

The Rename Media dialog box is displayed.
Edit the names in Name in Printer Driver and Name on Control Panel and click the OK button.

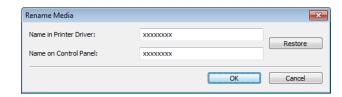




To restore the original names, click the **Restore** button.


• The characters that can be entered for **Name in Printer Driver** and **Name on Control Panel** are stated below.

alphanumeric, space, "-", ".", "\_", "(", ")", "+", "%", ",", "/"

- For Name in Printer Driver up to 32 one Byte characters can be entered, and for Name on Control Panel up to 16 one Byte characters can be entered.
- 4 In the Edit Media Types dialog box, click the Update button.

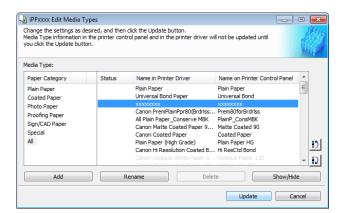

The **Confirm Update** dialog box is displayed.
Configure Update Target and click the **Execute** button.
Communication with the printer begins.

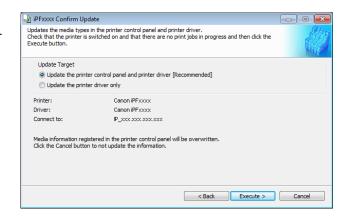




• You should normally select **Update the printer control panel and printer driver**.




- When setting a data to the printer that differs from the data to be updated, the selected media information file
  is updated. When you would like to remain the data that is set to the printer, click the Cancel button.
- Do not attempt to print or turn the printer off while the program is communicating with the printer.
- 6 Click the **OK** button.

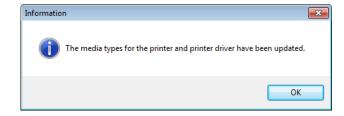


### **Deleting Media Types You Have Added**

1 Open the **Edit Media Types** dialog box.

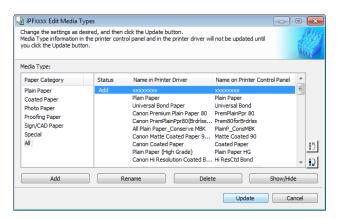




- For details on the procedure for opening the Edit Media Types dialog box, see "Editing Media Type Information for Genuine Paper and Feed Confirmed Paper." >P.407
- In the **Media Type** list, select the name of the media to delete.
  Click the **Delete** button.

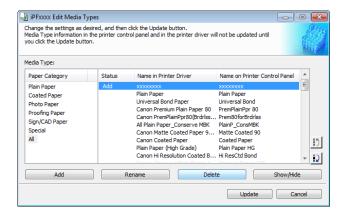




Only paper for which Status in the Media Type is Add can be deleted.

In the Edit Media Types dialog box, click the Update button

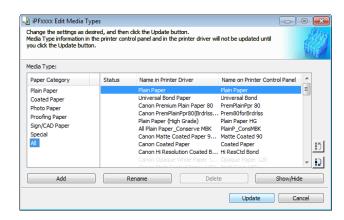


The **Confirm Update** dialog box is displayed. Click the **Execute** button. Communication with the printer begins.

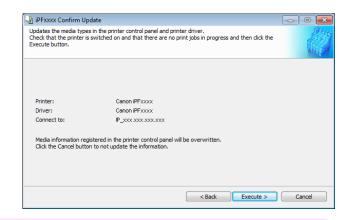




- When setting a data to the printer that differs from the data to be updated, the selected media information file
  is updated. When you would like to remain the data that is set to the printer, click the Cancel button.
- Do not attempt to print or turn the printer off while the program is communicating with the printer.
- 5 Click the **OK** button.

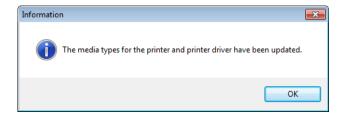

## **Switching Media Types Display Show/Hide**

1 Open the **Edit Media Types** dialog box.

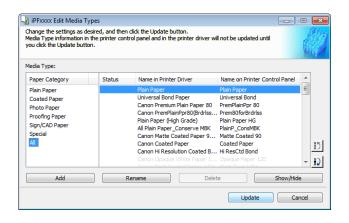




For details on the procedure for opening the Edit Media Types dialog box, see "Editing Media Type Information for Genuine Paper and Feed Confirmed Paper." →P.407

In the Media Type list, select the name of the media to switch off or on for display.

Click the Show/Hide button.

The selected paper is alternately shown or hidden.

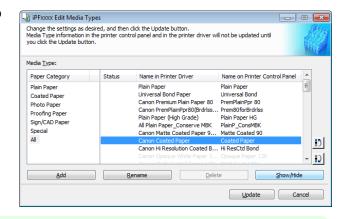





You can select multiple paper.

Note

- The names of media switched for non-display appear grayed out in the **Media Type** list.
  - Each time you click the **Show/Hide** button, the display mode cycles from showing both the printer driver and printer panel, to hiding both the printer driver and printer panel, and then to showing only the printer panel.
- In the Edit Media Types dialog box, click the Update button.

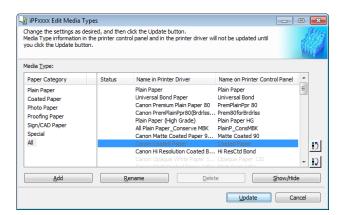

The Confirm Update dialog box is displayed. Configure Update Target and click the **Execute** button. Communication with the printer begins.

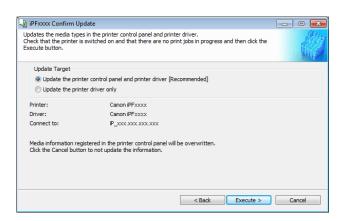




You should normally select Update the printer control panel and printer driver.

415




- When setting a data to the printer that differs from the data to be updated, the selected media information file is updated. When you would like to remain the data that is set to the printer, click the Cancel button.
- Do not attempt to print or turn the printer off while the program is communicating with the printer.
- Click the **OK** button.

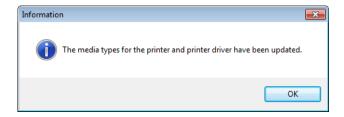

### **Changing the Display Order of Media Types**


Open the Edit Media Types dialog box.

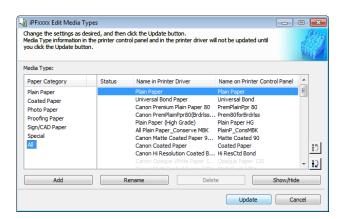





- For details on the procedure for opening the Edit Media Types dialog box, see "Editing Media Type Information for Genuine Paper and Feed Confirmed Paper." →P.407
- Select the paper in the **Media Type** list for which to change the display order, and then click the buttons to move the item ( The selected item moves one line up or down for every


button click.

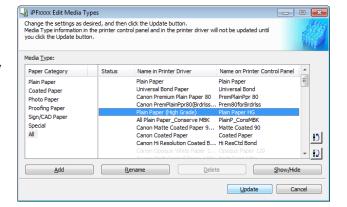

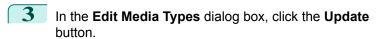

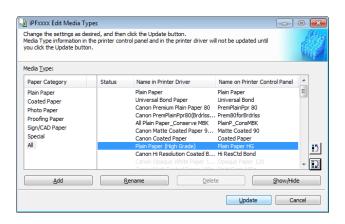

The **Confirm Update** dialog box is displayed.
Configure Update Target and click the **Execute** button.
Communication with the printer begins.

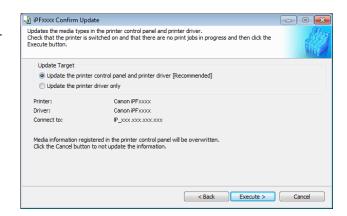




You should normally select Update the printer control panel and printer driver.



- When setting a data to the printer that differs from the data to be updated, the selected media information file is updated. When you would like to remain the data that is set to the printer, click the **Cancel** button.
- Do not attempt to print or turn the printer off while the program is communicating with the printer.
- 5 Click the **OK** button.

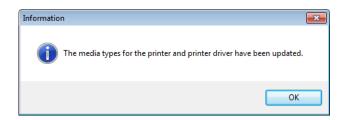

## **Checking the update**

After updating the media information using the Media Configuration Tool, you can check whether the update has been applied to the printer in the control panel of the printer.

- Click the **About** button in the Media Configuration Tool main window to open the **About** dialog box.
- 2 Check the value xx.xx (xxxx) of MIT DB Version.
- Check the value xx.xx (xxxx) of MIT in Set./Adj. Menu > Printer Info > System Info in the printer control panel.

If the values in Steps 2 and 3 are the same, the update has been applied to the printer.

417

## Media Configuration Tool (Mac OS)

The Features of Media Configuration Tool4	110
Procedures for Installing 4	118
Starting Method4	120
Media Configuration Tool Main Window4	121
Editing Media Type Information for Genuine Paper and Feed Confirmed Paper	122
Adding Media Types4	
Changing Media Names	126
Deleting Media Types You Have Added	
Switching Media Types Display Show/Hide4	
Changing the Display Order of Media Types4	131
Checking the update	132

### **The Features of Media Configuration Tool**

In imagePROGRAF, the best printer settings for each paper are collected together in media information files in order to give the highest quality printing results. Settings for Canon genuine paper and Canon feed confirmed paper are provided by Canon in these media information files.



• Canon genuine paper and Canon feed confirmed paper are detailed in the Paper Reference Guide.

The Media Configuration Tool allows you to perform the following tasks.

- When supported paper has been newly added to the printer, you can add that media type to the printer control panel and printer driver by using the media information file provided by Canon.
- You can rearrange lists of the types of paper on the printer control panel and in printer driver dialog boxes and rename them, in addition to other functions.



- Normally, the Media Configuration Tool is installed and the media information is configured when you install the printer driver from the User Software CD-ROM. Use this software if you want to add new media information or edit existing media information.
- Administration of paper information using the Media Configuration Tool should be performed by the printer administrator.

### **Drivers Applicable with Media Configuration Tool**

imagePROGRAF Printer Driver


## **Procedures for Installing**

Start the installer in the new version of Media Configuration Tool, and follow procedures below to install the Media Configuration Tool.



When you install the printer driver from the User Software CD-ROM, the Media Configuration Tool is also installed and the media information is also configured. The following procedure is therefore not normally needed. Perform the following procedure if you are installing the Media Configuration Tool without using the User Software CD-ROM, such as by downloading the latest version of the Media Configuration Tool from the Canon website.

Double-click Canon iPFxxxx Series Media Configuration Tool.pkg to start the Media Configuration Tool installer.

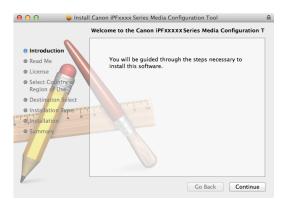

The Software License Agreement is displayed.

After you have read Canon Software License Agreement, click the Continue button.



The next screen presents selections for the country or area where the printer is used.

Select a country or territory then click the **Continue** button.



4 Click the **Install** button.





Enter an administrator name/password and click the **Install Software** button.



6

Click the Close button.

The installation of Media Configuration Tool is complete.





When the installation is completed properly, the Media Configuration Tool folder is saved in the following folder.

Applications > Canon Utilities > iPFxxxx Media Configuration Tool

The iPFxxxx in the folder above will be the printer name in use.

## **Starting Method**

Follow the procedure below to start the Media Configuration Tool.

From the **Applications** menu > **Canon Utilities** >**iPFxxxx Media Configuration Tool** > **MCTxxxx.app**. Media Configuration Tool main window is displayed.





 If a compatible printer driver is not installed, the Media Configuration Tool will not start. If you attempt to start the Media Configuration Tool when a printer driver is not installed, the warning message below is displayed.




If you only start the Media Configuration Tool, the media information on the printer control panel and in the printer driver
is not updated. If this screen is displayed, select Add Genuine Paper in the main window, and click the Update button
in the Edit Media Types screen to update the media information.



### **Media Configuration Tool Main Window**

The explanation below is on the Media Configuration Tool main window.

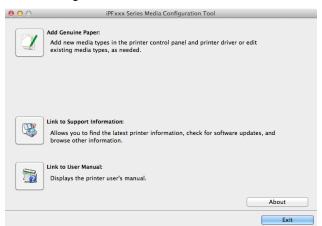



• For the step to open the Media Configuration Tool main window, see "Starting Method." →P.420

### • Add Genuine Paper button

When this button is clicked, the **Edit Media Types** dialog box is displayed, which allows you to add media information files released by Canon to the printer control panel and printer driver. You can also change names, toggle between displaying and hiding, and delete added media types.

You can also change the display order of the paper types.

Refer to "Editing Media Type Information for Genuine Paper and Feed Confirmed Paper" >P.422 for details on Add Genuine Paper.

### • Link to Support Information button

You can check information such as the latest information for the product and software version upgrade information.

### • Link to User Manual Button

Displays the printer user's manual

421

422

### **Editing Media Type Information for Genuine Paper and Feed Confirmed Paper**

To add genuine paper and feed confirmed paper to the printer control panel and printer driver and edit the media type information, click the **Add Genuine Paper** button in the Media Configuration Tool main window. Confirm the printer, where media type information is to be updated, to be displayed in **Printer** in the **Select Printer** dialog box, and then click the **Next** button.



Communication with the printer begins.




Do not attempt to print or turn the printer off while the program is communicating with the printer.

The Edit Media Types dialog box is displayed.



In the following screens, you cannot change the printer where media type information is to be updated.

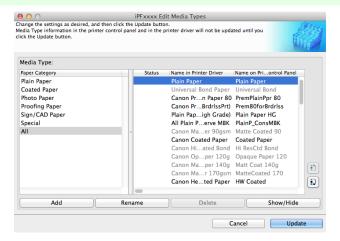



Paper that is displayed grayed out does not appear in the printer driver or printer panel.

### Add Button

To add genuine paper or feed confirmed paper to the printer control panel and printer driver, click this button. For details on the procedure for adding media types, see "Adding Media Types." >P.423



To add media types, download the media information file (.amf file) in advance from the Canon website.

#### Rename Button

To change the name on the printer control panel and the name in the printer driver for genuine paper and feed confirmed paper, select the paper to change and click this button.

For details on the procedure for changing paper display names, see "Changing Media Names." (→P.426)

#### • Delete Button

To delete added genuine paper and feed confirmed paper from the printer control panel and printer driver, select the paper to delete and click this button.

For details on the procedure for deleting added media types, see "Deleting Media Types You Have Added." → P.428

#### • Show/Hide Button

To change whether or not genuine paper or feed confirmed paper is displayed in the printer control panel and printer driver, select the paper to change and click this button.

For details on the procedure for changing whether or not to display media types, see "Switching Media Types Display Show/Hide." →P.429

## Change Display Order button ( ) or ( )



To change the display order of a media type in the printer control panel and printer driver, select the paper to change and click this button.

For details on the procedure for changing the display order of media types, see "Changing the Display Order of Media Types." → P.431



When you update the media type information, perform the same update on all of the PCs that are using that printer.



Note

It may not be possible to deleting, showing/hiding, and changing the display order under some conditions.

## **Adding Media Types**


Media information files (.amf files) released by Canon are registered in the printer control panel and printer driver.



- Do not perform printing on the target printer while adding the media types.
- Important Reinstalling Media Configuration Tool after registering a media information file may delete the registered media information file. In this case, first download and install latest Media Configuration Tool, then download and register the required media information file.


Adding Media Types iPF680

Open the **Edit Media Types** dialog box, and then click the **Add** button.

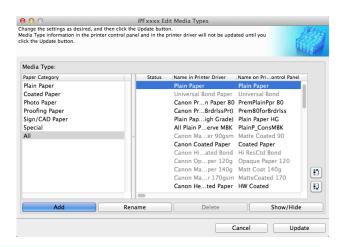





- For details on the procedure for opening the **Edit Media Types** dialog box, see "**Editing Media Type Information for Genuine Paper and Feed Confirmed Paper**." >P.422
- The **Add Media Type** dialog box displays. Click the **Browse** button.

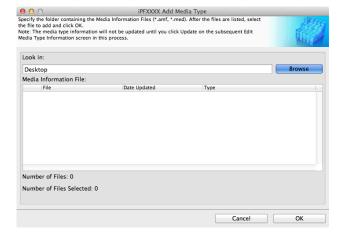

Open the folder that contains the media information files (.amf files).

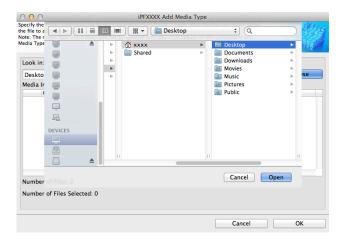


The names of the media information files contained in the selected folder are displayed in **Media Information**File in the **Add Media Type** dialog box. Select the check box for the paper you want to add and click the **OK** button.

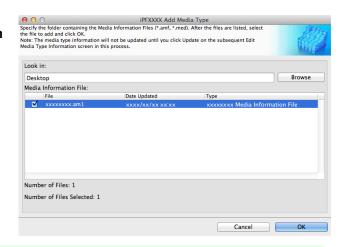



- If Master Media Information File is displayed as the Type of the Media Information File, the media type display order and media type display/non-display settings are initialized. Reconfigure these after added the master media information file.
- 5 Click **OK** when the confirmation message is displayed.
- In the Edit Media Types dialog box, click the Update button.

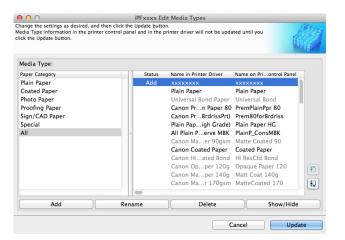

7 The **Confirm Update** dialog box is displayed.
Configure Update Target and click the **Execute** button.
Communication with the printer begins.





You should normally select Update the printer control panel and printer driver.

425

Changing Media Names iPF680



When setting a data to the printer that differs from the data to be updated, the selected media information file
is updated. When you would like to remain the data that is set to the printer, click the Cancel button.


Do not attempt to print or turn the printer off while the program is communicating with the printer.

8 Click the **OK** button.




## **Changing Media Names**

1 Open the Edit Media Types dialog box.

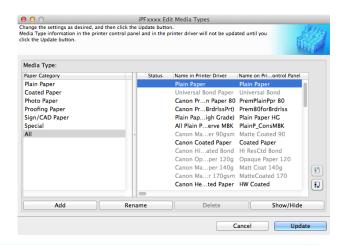



- For details on the procedure for opening the **Edit Media Types** dialog box, see "Editing Media Type Information for Genuine Paper and Feed Confirmed Paper." >P.422
- In the **Media Type** list, select the name to change. Click the **Rename** button.

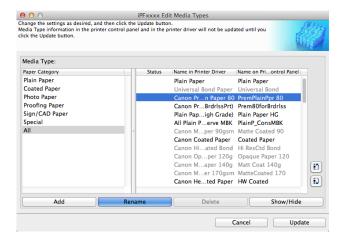

The Rename Media dialog box is displayed.
Edit the names in Name in Printer Driver and Name on Control Panel and click the OK button.



Changing Media Names

iPF680



low.


To restore the original names, click the Restore button.

• The characters that can be entered for Name in Printer Driver and Name on Control Panel are stated be-

alphanumeric, space, "-", ".", "\_", "(", ")", "+", "%", ",", "/"

 For Name in Printer Driver up to 32 one Byte characters can be entered, and for Name on Control Panel up to 16 one Byte characters can be entered.

In the Edit Media Types dialog box, click the Update button.

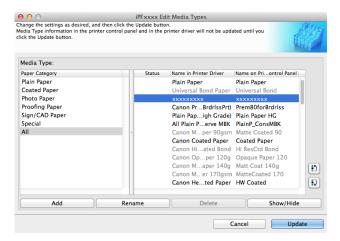

The Confirm Update dialog box is displayed. Configure Update Target and click the **Execute** button. Communication with the printer begins.





You should normally select Update the printer control panel and printer driver.




- When setting a data to the printer that differs from the data to be updated, the selected media information file is updated. When you would like to remain the data that is set to the printer, click the Cancel button.
- Do not attempt to print or turn the printer off while the program is communicating with the printer.
- 6 Click the **OK** button.



42.7


### **Deleting Media Types You Have Added**

1 Open the Edit Media Types dialog box.

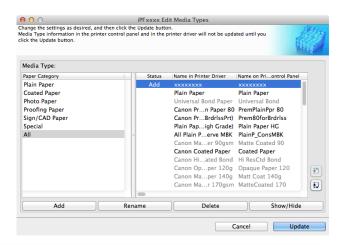




- For details on the procedure for opening the **Edit Media Types** dialog box, see "Editing Media Type Information for Genuine Paper and Feed Confirmed Paper." >P.422
- In the **Media Type** list, select the name of the media to delete.
  Click the **Delete** button.

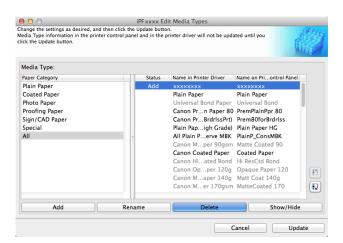




- Only paper for which Status in the Media Type is Add can be deleted.
- In the **Edit Media Types** dialog box, click the **Update** button.

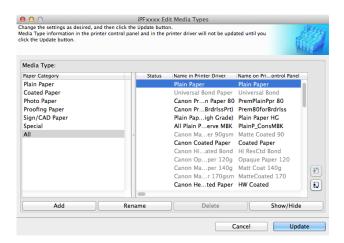



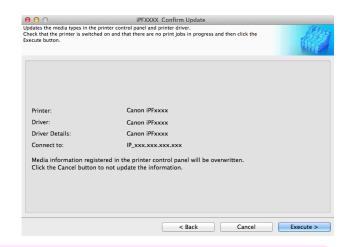




- When setting a data to the printer that differs from the data to be updated, the selected media information file is updated. When you would like to remain the data that is set to the printer, click the **Cancel** button.
- Do not attempt to print or turn the printer off while the program is communicating with the printer.
- 5 Click the **OK** button.



### **Switching Media Types Display Show/Hide**

1 Open the Edit Media Types dialog box.

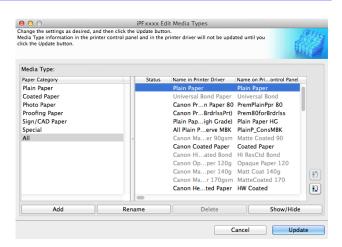




• For details on the procedure for opening the **Edit Media Types** dialog box, see "Editing Media Type Information for Genuine Paper and Feed Confirmed Paper." (>P.422)

In the Media Type list, select the name of the media to switch off or on for display.


Click the Show/Hide button.

The selected paper is alternately shown or hidden.

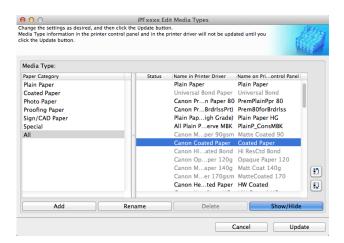



- You can select multiple paper.
- Note The names of media switched for non-display appear grayed out in the **Media Type** list.
  - · Each time you click the Show/Hide button, the display mode cycles from showing both the printer driver and printer panel, to hiding both the printer driver and printer panel, and then to showing only the printer panel.
- In the Edit Media Types dialog box, click the Update button.

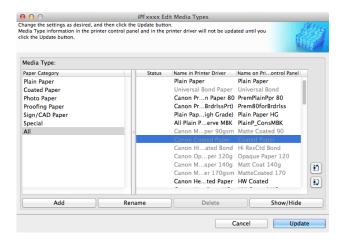

The Confirm Update dialog box is displayed. Configure Update Target and click the **Execute** button. Communication with the printer begins.



430



You should normally select Update the printer control panel and printer driver.




- When setting a data to the printer that differs from the data to be updated, the selected media information file
  is updated. When you would like to remain the data that is set to the printer, click the Cancel button.
- Do not attempt to print or turn the printer off while the program is communicating with the printer.
- 5 Click the **OK** button.



## **Changing the Display Order of Media Types**


1 Open the Edit Media Types dialog box.

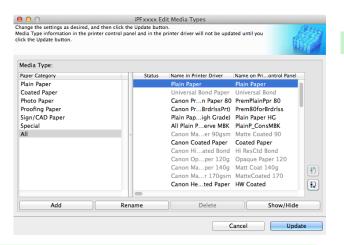




- For details on the procedure for opening the Edit Media Types dialog box, see "Editing Media Type Information for Genuine Paper and Feed Confirmed Paper." >P.422
- Select the paper in the **Media Type** list for which to change the display order, and then click the buttons to move the item ( or ).

The selected item moves one line up or down for every button click.

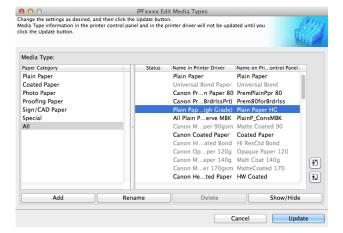

Checking the update iPF680

In the **Edit Media Types** dialog box, click the **Update** button.

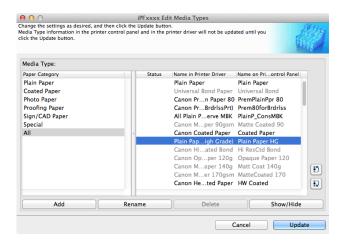

The **Confirm Update** dialog box is displayed.
Configure Update Target and click the **Execute** button.
Communication with the printer begins.






You should normally select Update the printer control panel and printer driver.



- When setting a data to the printer that differs from the data to be updated, the selected media information file
  is updated. When you would like to remain the data that is set to the printer, click the Cancel button.
- Do not attempt to print or turn the printer off while the program is communicating with the printer.

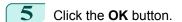



## Checking the update

After updating the media information using the Media Configuration Tool, you can check whether the update has been applied to the printer in the control panel of the printer.

Click the **About** button in the Media Configuration Tool main window to open the **About** dialog box.

2 Check the value xx.xx (xxxx) of MIT DB Version.



Check the value xx.xx (xxxx) of MIT in Set./Adj. Menu > Printer Info > System Info in the printer control panel.

If the values in Steps 2 and 3 are the same, the update has been applied to the printer.

# Memo

# iPF680

User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359

# **Control Panel**


Operations and Display Screen	436
Printer Menu	446

Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633

# Operations and Display Screen

Control Panel	436
Control Panel Display	438
How to View Instructions with Navigate	
Checking Instructions During Printer Operations	

# **Control Panel**

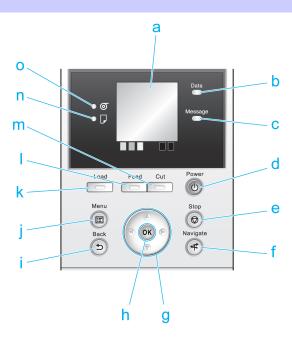

#### a Display Screen

Shows printer menus, as well as the printer status and messages.

# **b** Data Lamp (green)

Flashing

During printing, the Data lamp flashes when the printer is receiving or processing print jobs. Otherwise, this lamp flashes when the print job is paused or the printer is updating the firmware.

Off

There are no active print jobs when the Data lamp is off.

# c Message Lamp (orange)

On

A warning message is displayed.

Flashing

An error message is displayed.

• Off

The printer is off or is operating normally.

#### **d Power** button (green)

Turns the printer on and off. (See "Turning the Printer On and Off.") →P.17

The **Power** button is lit when the printer is on or in Sleep mode.

Control Panel

#### e Stop button

Cancels print jobs in progress and ends the ink drying period.

# f Navigate button

Enables you to check instructions for loading and removing paper or replacing ink tanks or printheads, as well as other operations. (See "How to View Instructions with Navigate.") >P.443

#### g Arrow buttons

#### • **◀** button

Press this button on the **Tab Selection screen** to move to another tab. In menu items requiring numerical input, press this button to move to another digit.

#### • ▲ button

Press this button in the menu to move to another item.

In menu items requiring numerical input, press this button to increment the number.

### • button

Press this button on the **Tab Selection screen** to move to another tab.

In menu items requiring numerical input, press this button to move to another digit.

#### ▼ button

Press this button in the menu to move to another item.

In menu items requiring numerical input, press this button to decrement the number.

### h OK button

Press this button on the **Tab Selection screen** to display the menu of the tab shown.

Pressing this button in menu items of each tab for which • is displayed at left will move to the lower level of the menu item, enabling you to execute menu commands or set menu values.

Also press this button if the Display Screen indicates to press the **OK** button.

#### i Back button

Displays the screen before the current screen.

#### **Menu** button

Displays the **Tab Selection screen**. (See "Menu Settings.") →P.456

#### k Load button

Press this button when loading or replacing paper.

(See "Loading Rolls in the Printer.") →P.373

(See "Loading Sheets in the Printer.") →P.392

#### Feed button

Pressing this button when rolls are loaded enables you to reposition the paper. (See "Feeding Roll Paper Manually.") >P.382

#### m Cut button

Pressing this button when rolls are loaded cuts the paper, if you have specified **Automatic** or **Eject** in **Cutting Mode** in the Control Panel menu. (See "**Specifying the Cutting Method for Rolls**.") →P.386

#### n Cut Sheet lamp (green)

Lit when sheets are selected as the paper source.

#### o Roll Media lamp (green)

Lit when rolls are selected as the paper source.



To recover from Sleep mode, any button can be pressed except the Power button.

Note

437

# **Control Panel Display**

After the printer starts up, the **Tab Selection screen** is displayed.

Each of the four tabs presents status, menus, and error information related to the particular tab.

# Types of tabs

The **Tab Selection screen** presents four tabs. Each tab is represented by an icon in the top row. Press the ◀ or ▶ button to access other tabs.

Paper tab

Ready
OK: Paper Menu

Plain Paper
ISO A2 Roll

A tab indicating status and showing menus related to paper. Pressing the **OK** button when this tab is highlighted will display the **Paper Menu**.

Top line displayed

The paper icon is highlighted.

Middle line displayed

Indicates the printer status and shows menu names.

Bottom line displayed

The first and second lines display the paper type and size.



A tab indicating status and showing menus related to ink. Pressing the **OK** button when this tab is highlighted will display the **Ink Menu**.

Top line displayed

The ink icon is highlighted.

Middle line displayed

Indicates the printer status and shows menu names.

Bottom line displayed

Here, the remaining ink level is indicated. (See "Checking Ink Tank Levels.") →P.546



A tab indicating status and showing menus related to print jobs. Pressing the **OK** button when this tab is highlighted will display the **Job Menu** menu.

Top line displayed

The job icon is highlighted.

Middle line displayed

Indicates the printer status and shows menu names.





A tab indicating status and showing menus related to settings and adjustment. Pressing the **OK** button when this tab is highlighted will display the **Set./Adj. Menu**.

Top line displayed

The settings/adjustment icon is highlighted.

Middle line displayed

Indicates the printer status and shows menu names.

Bottom line displayed

The remaining Maintenance Cartridge capacity is shown on the first line and **Tot.Print Area** on the second. The display unit for **Tot.Print Area** can be specified in the **Length Unit** menu. (See "Menu Settings.") →P.456

# Printer status and modes

The printer has the following status.



The printer is ready to receive jobs sent from the computer. Jobs sent from the computer are printed immediately.

#### **Printing Paused**



Printing is paused on the printer. Any jobs sent from the computer are held without being printed.

# Printing

ISO A2



Printing is in progress on the printer. Jobs sent from the computer are printed after the current job. The time left until printing is finished is indicated in the upper-right corner of the screen. (Values exceeding 10 hours are not shown.)

### Sleep

Blank display

The printer is in power-saving mode. The printer automatically enters Sleep mode to conserve power when idle for a specific period (by default, five minutes), that is, if no print jobs are received or buttons are pressed while all covers are closed.

You can specify the period before the printer enters **Sleep** mode in the **Sleep Timer** menu. (See "Menu Settings.") →P.456

After entering **Sleep** mode from **Standby** mode, the printer automatically recovers if print jobs are received, and the jobs are printed.

#### Off

The printer is not on.

Blank display

If no operations are performed on the printer for the duration of the time set in **Shut Down Timer** after entering Sleep mode, the printer automatically turns off. (See "**Menu Settings**.") >P.456




The printer requires your attention. Any jobs sent from the computer cannot be processed. The tab related to the error is displayed.

For information about the display in the case of multiple errors, see "Display Transitions in Error Status."

# Display Transitions in Normal Status

The display transitions while the printer is in the normal status (the status where no errors have occurred) are shown below.

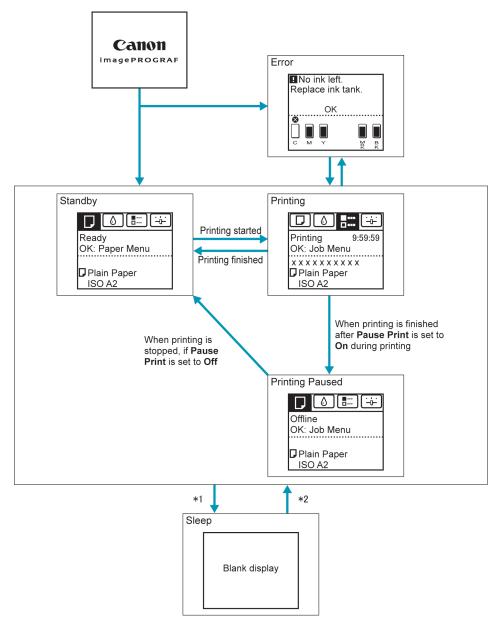


- \*1: The printer automatically enters **Sleep** mode when idle for a specific period (by default, five minutes), that is, if no print jobs are received or buttons are pressed while all covers are closed. However, it does not enter **Sleep** mode while error messages are displayed or when a roll can be manually advanced by pressing the **Feed** button.
- \*2: When the printer is in **Sleep** mode, you can press any button except the **Power** button to recover from **Sleep** mode. **Sleep** mode is also terminated if a print job is received or a command is issued from RemoteUI.

# Display Transitions in Error Status

The display transitions while an error has occurred on the printer are shown below.

If multiple errors have occurred, the tabs for errors that have occurred other than the currently displayed error are displayed flashing. You can move between the tabs to check the errors by pressing the ◀ and ▶ keys. If multiple errors have occurred in the Job tab and Settings/Adj. tab, the error message switches every four seconds within each tab.

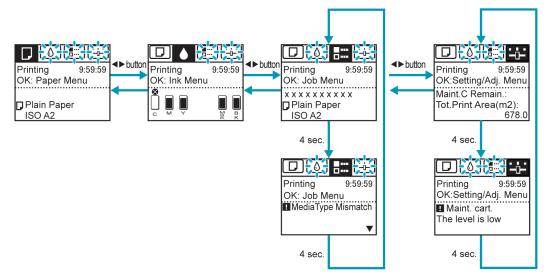

# **How to View Instructions with Navigate**

You can refer to instructions for loading paper, replacing ink tanks, and performing other operations on the printer control panel.

- 1 Press the Navigate button.
- Press ▲ or ▼ to select the desired navigation menu.

when fully inserted.

[ Pause]

Press ▲ or ▼ to select View Op. Guide, and then press the OK button. Instructions are now displayed.

Example: Loading sheets No Paper Loaded OK: Paper Menu Load the paper. Navigate button Navigate 1/2 Load Roll Paper Load Cut Sheet Eject Paper Roll Paper Feeding Roll Paper Cutting **OK** button Load Cut Sheet View Op. Guide Execute Back **OK** button Press Menu and Press ◀ to show Select Load Paper, the paper menu, then press **OK**. display Menu screen. then press OK. [ Pause] [•Pause] [ Pause] ० ° (§ 0 0 0 (20) Set width guide to Align cut sheets to Press ▼,then right guide with match paper width select Cut Sheet print side up. and fully insert and press OK. <sup>▼</sup>Pause Pause [•Pause] **1** 1 → 00 0 The buzzer sounds Press **OK** to start Input media type.

loading paper.

° (3)

[ Pause]

Can print when done loading paper.

# **Checking Instructions During Printer Operations**


You can refer to instructions on the printer control panel when loading paper, replacing ink tanks, or performing other operations.

#### How to view instructions

Once you complete an action described in the instructions, the printer detects the action and switches to the next instruction screen.

In the case of actions the printer cannot detect, instruction screens are switched every four seconds, and the sequence of operations is shown repeatedly.

When all actions in the sequence are finished, the instruction screen for the next step is displayed.

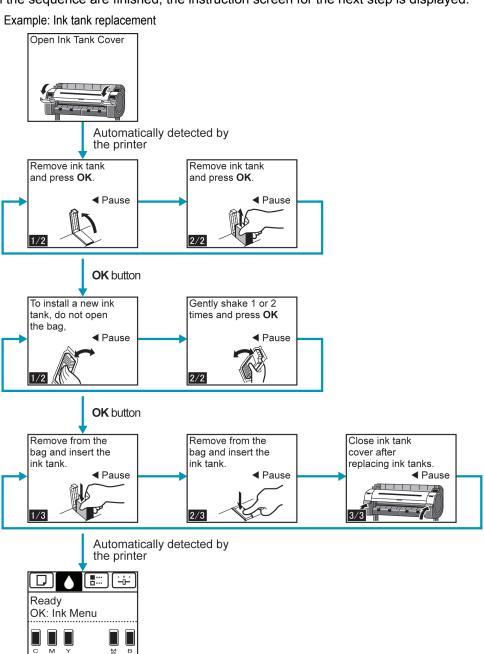



During a continuous display of instructions, you can press the ◀ button to pause the instructions on the current screen.
 Press the ◀ or ▶ button to display the previous or next screens. If you do not press the ◀ or ▶ button within 30 seconds, continuous display is resumed.

Press the  $\mathbf{OK}$  button to display the instruction screen for the next step.

# **Printer Menu**

Printer Menu Operations	446
Menu Operations	450
Status Print Printing Interface Setting Reports	

# **Printer Menu Operations**

The printer menu is classified into regular menu items available when no print job is in progress and menu during printing items only available while printing is in progress.

- Regular menu operations →P.446
- Menu operations during printing →P.446

# Regular menu operations

To view available menus organized on tabs, select a tab on the Tab Selection screen and press the OK button.



If the Tab Selection screen is not displayed, pressing OK will not display menus.
 Menus can be selected after you resolve the problem.

The following operations are available from the menu.

- Paper Menu
  - Paper menu settings
- Ink Menu
  - Ink menu operations
- Job Menu
  - Menu operations to manage print jobs
- Set./Adj. Menu

Menu operations for printer adjustment and maintenance

For a description of specific menu items available, see "Menu Settings." >P.456
For instructions on selecting menu items, see "Menu Operations." >P.447



By default, menu settings apply to all print jobs. However, for settings that are also available in the printer driver, the values specified in the printer driver take priority.

# Menu operations during printing

During printing, only a limited set of menu items are displayed. Menu items that are not displayed during printing should be operated after printing has finished.

To display menus during printing, select a tab on the **Tab Selection screen** on the Control Panel, and then press the **OK** button.



• If the **Tab Selection screen** is not displayed, pressing **OK** will not display menus. Menus can be selected after you resolve the problem.

The following operations are available from the menu during printing.

Ink Menu

Printer Menu

Ink menu operations

Job Menu

Menu operations to manage print jobs

· Set./Adj. Menu


Fine-tuning paper feeding
Display of printer-related information

For a description of specific menu items available, see "Menu Settings." →P.456
For instructions on selecting menu items during printing, see "Menu Operations." →P.447

# **Menu Operations**

To view available menus organized on tabs, select a tab on the **Tab Selection screen** and press the **OK** button. For details, see "Menu Settings." →P.456

When the Ink tab is selected and the OK button is pressed

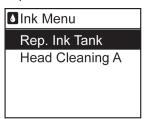



• If the **Tab Selection screen** is not displayed, pressing **OK** will not display menus. Menus can be selected after you resolve the problem.

Simply press buttons on the Control Panel to access menus on various tabs from the **Tab Selection screen** and set or execute **Menu** items.


The following section describes menu operations and how they are presented in this User Manual.

- Accessing menus → P.447
- Specifying menu items →P.449
- Specifying numerical values →P.449
- Executing menu commands →P.449

### Accessing menus

Printer menus are grouped by function.

Menus are displayed with the upper line selected. You can use the buttons on the Control Panel to access each menu.

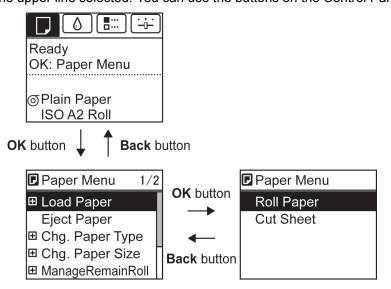

- Press **Back** button to access a higher menu in the menu list, and press **OK** button to access a lower one.
- Press ▲ to access a higher menu in the menu list, and press ▼ to access a lower one. If items of the menu list are more than the lines of the screen, press ▲ and ▼ to scroll the menu. Items you select are highlighted.
   The scroll bar at right indicates the current position in the overall menu.



• Lower menus are available if • is displayed at left next to the second and subsequent rows. To access the lower menus, select the menu and press the **OK** button.



Menu Operations


# Specifying menu items

Menu items can be set as follows.




Press ▲ or ▼ to select the desired setting, and then press the **OK** but-

After two seconds, the display reverts to the upper level menu.

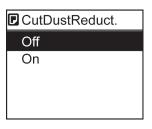



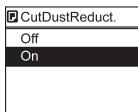




If a confirmation message is displayed regarding the setting you entered, follow the on-screen instructions.

• If you have changed the Interface Setup menu settings, a message confirming whether to register the settings is displayed if you press Back button or Menu button. Follow the instructions shown on the screen.

# Specifying numerical values

Follow these steps to enter numbers. In this example, network settings items are entered.

Press the ◀ or ▶ button to move to the next field for input.

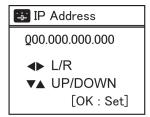

Press the ▲ or ▼ button to enter the value.



Hold down ▲ or ▼ to increase or decrease the value continuously.

Repeat steps 1 and 2 to complete the settings, and then press the **OK** button.



- If a confirmation message is displayed regarding the setting you entered, follow the on-screen instructions.
- If you have changed the Interface Setup menu settings, a message confirming whether to register the settings is displayed if you press **Back** button or **Menu** button. Follow the instructions shown on the screen.

# Executing menu commands

Menu commands can be executed as follows.



Press ▲ or ▼ to select the action to execute, and then press the **OK** button. The menu command is now executed.

449

# **Menu Structure**

The menu structure is shown categorized by tab. The \* on the right side of an item indicates the default value. The printer menu is classified into regular menu items available when no print job is in progress and menu during printing items only available while printing is in progress. see "Printer Menu Operations." >P.446

Regular menu	Menu during printing	
Paper Menu	Not displayed	
<b>△</b> Ink Menu	The same	
Job Menu	The same Job Menu as normal is displayed.	
Set./Adj. Menu	A limited Set./Adj. Menu containing the following items is displayed.	
	Adj. Fine Feed(*1)	
	Printer Info	


<sup>\*1:</sup> Only displayed in the menu during printing. Not displayed in the regular menu.

For instructions on menu operations, see "Menu Operations." →P.447 For details on menu items, see "Menu Settings." →P.456

# Paper Menu

The Paper Menu is not displayed during printing.

First Level	Second Level	Third Level	Fourth Level Fifth Level		
··(Load Paper	Roll Paper   Cut Sheet				
··Eject Paper					
···(Chg. Paper Type(*1) ·····(Roll Paper ·····(The paper type is displayed here.) (*1)					
	: Cut Sheet	(The paper type is dis	splayed here.) (*1)		
··Chg. Paper Size	Sheet Size	(The size of paper is o	displayed here.) (*2)		
		: CustomPaperSize	·····(Set the length and width)		
	Roll Length(*3)	····((Set the length)			
	En Roll Width(*4)	···· (Set the width)			
·· ManageRemainRoll	(Off*   On				
·· Paper Details	(The paper type is dis-	Head Height	Automatic*   Highest   High   Standard   Low   Low-		
	played here.) (*1)	Skew Check Lv.	est   Super Low		
		Cutting Mode(*6)	High Accuracy   Standard*   Loose   Off		
		Cutting Mode( 0)	Fast   Standard   Slow		
		Trim Edge First	Automatic   Off   On (Preset Len)   On(Input		
		Tilli Luge i list	Length)   Manual		
		· CutDustReduct.	·····Off   On		
		··VacuumStrngth	Automatic*   Strongest   Strong   Standard   Weak   Weakest		
		·· Scan Wait Time	Dry time Off*   1 sec.   3 sec.   5 sec.   7 sec.   9 sec.		
			Area(*5) Entire area*   Leading edge		
		··Roll DryingTime	Off   30 sec.   1 min.   3 min.   5 min.   10 min.   30 min.   60 min.		
		NearEnd RollMrgn	(3mm   20mm		
		NearEnd Sht Mrgn	(3mm   20mm		
		··BordlessOversize	····Standard*   Little		
		-			

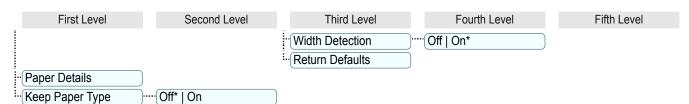

- \*1: For information on the types of paper the printer supports, refer to the **Paper Reference Guide**. (See "Displaying the Paper Reference Guide.") P363 Types of paper in the printer driver and related software (as well as on the Control Panel) are updated when you install the printer driver from the User Software CD-ROM or if you update paper information with the Media Configuration Tool. (See "Updating paper information.") P366
- \*2: For information on the sizes of paper the printer supports, see "Paper Sizes." →P.360
- \*3: Available only if ManageRemainRoll is On.
- \*4: Available only if Width Detection is Off.
- \*5: Leading edge is not available as a setting option in the Paper Detailed Settings dialog box of the printer driver.
- \*6: see "Specifying the Cutting Method for Rolls." →P.386


# **⊘** Ink Menu

First Level

Rep. Ink Tank

Head Cleaning A

# Job Menu

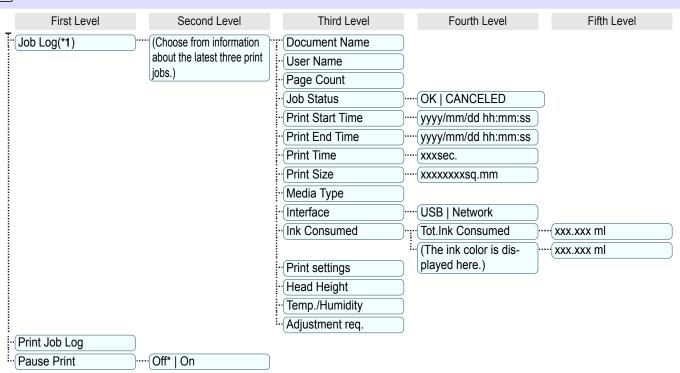


\*1: Restrictions apply if a password is configured using **Change Password** in the **Admin. Menu**. Viewing is possible for administrators only.


### Set./Adj. Menu


Limited items are displayed during printing. The displayed items are indicated by annotations.

First Level Second Level Third Level Fourth Level Fifth Level Sixth Level Seventh Level Eighth Level


Test Print Mozzle Check | Status Print | Interface Print | GL2 Set Print | Paper Details | Print Job Log | Menu Map | Color Palette

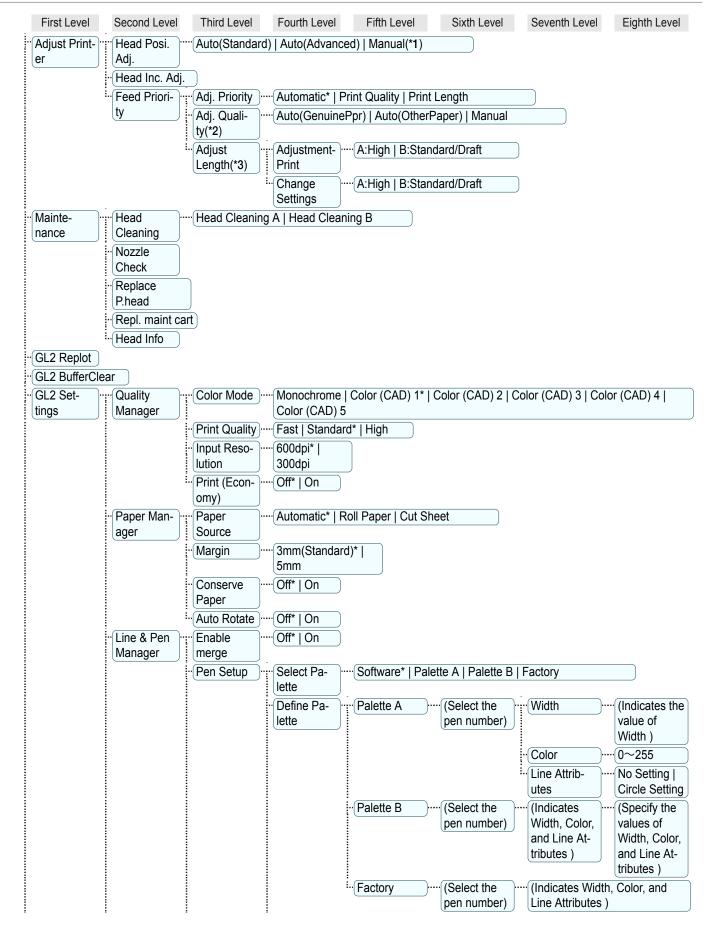

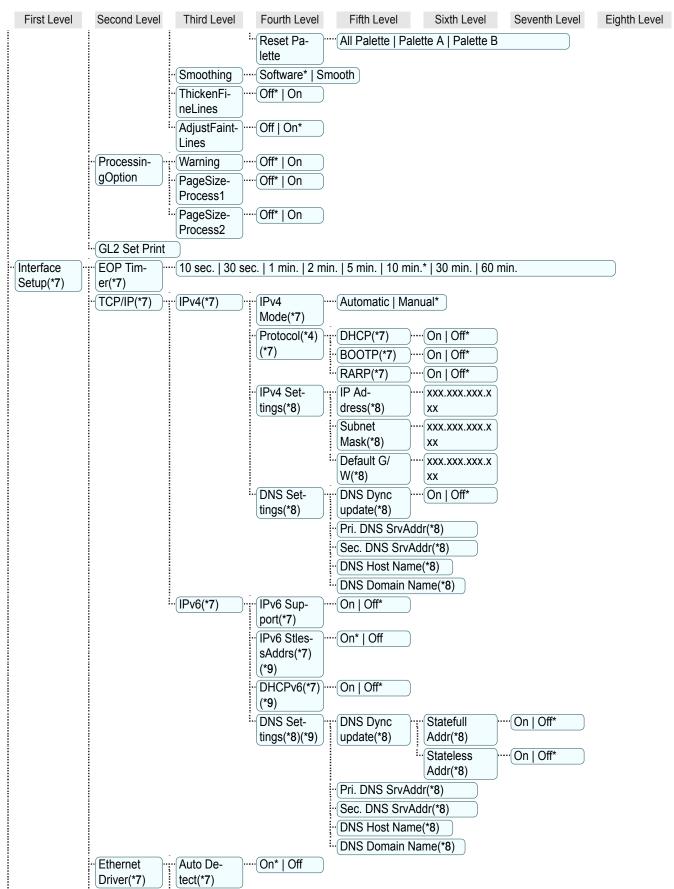

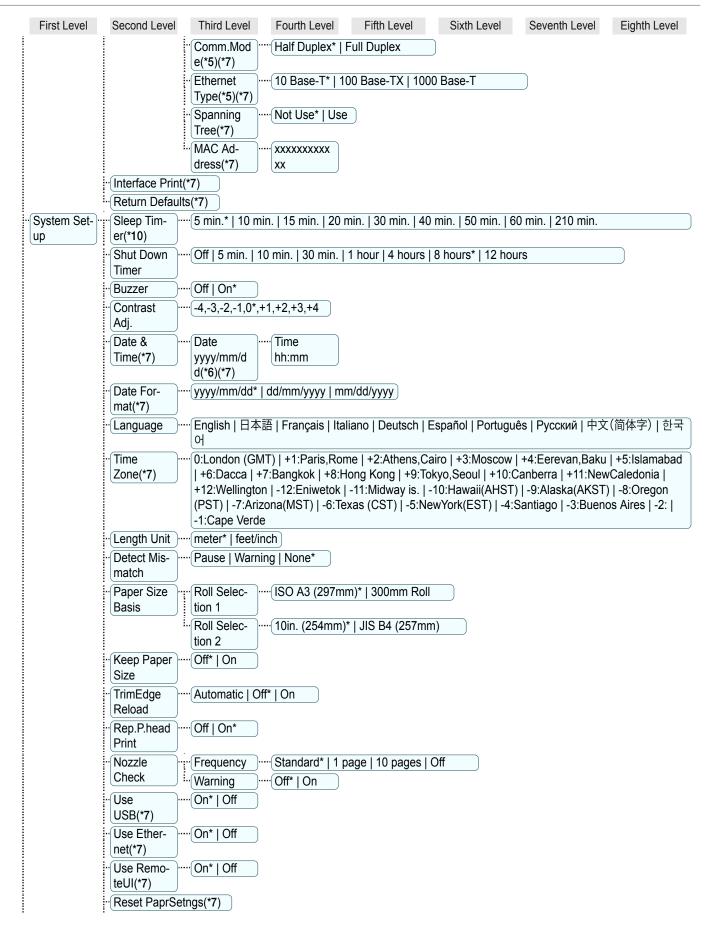

Menu Structure

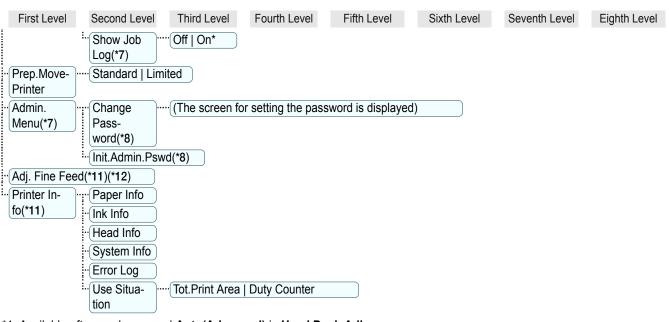

- \*1: Available after you have used Auto(Advanced) in Head Posi. Adj. once.
- \*2: Available if Adj. Priority is Automatic or Print Quality.
- \*3: Available if Adj. Priority is Automatic or Print Length.
- \*4: Not displayed if IPv4 Mode is Manual.
- \*5: Not displayed if Auto Detect is On.
- \*6: Follows the setting in **Date Format**.
- \*7: Restrictions apply if a password is configured using **Change Password** in the **Admin. Menu**. Viewing and configuration is possible for administrators, and only viewing for other users.
- \*8: Restrictions apply if a password is configured using **Change Password** in the **Admin. Menu**. Viewing and configuration is possible for administrators only.
- \*9: Not displayed if IPv6 Support is Off.
- \*10: Default setting for the time to enter the power save mode/Sleep mode is recommended.
- \*11: Displayed as the menu during printing while printing is in progress.
- \*12: Not displayed in the regular menu.

Menu Settings iPF680

# **Menu Settings**

Menu items are as follows.

The printer menu is classified into regular menu items available when no print job is in progress and menu during printing items only available while printing is in progress. see "Printer Menu Operations." >P.446

Menu during printing		
Not displayed		
The same Ink Menu as normal is displayed.		
The same Job Menu as normal is displayed.		
A limited <b>Set./Adj. Menu</b> containing the following items is displayed.		
Adj. Fine Feed (*1)     Printer Info		

<sup>\*1:</sup> Only displayed in the menu during printing. Not displayed in the regular menu.

For instructions on selecting menu items, see "Menu Operations." →P.447
For details on the displayed menu hierarchy, see "Menu Structure." →P.450

# Paper Menu

The **Paper Menu** is not displayed during printing.

Setting Item			Description, Instructions	
Load Paper			Select either sheets or rolls and load the paper.	
Eject Paper			Choose this item before removing loaded paper.	
Chg. Paper Type	(*1)		Change the type of paper loaded. (See "Changing the Type of Paper.") →P.376	
Chg. Paper Size			Change the size of paper loaded. (See "Specifying the Paper Length.") →P.378 (See "Paper Sizes.") →P.360	
ManageRemainR	Roll	Choose <b>On</b> to print a barcode at the end of a roll bef it. The printed barcode can be used in managing the paper left. Choose <b>Off</b> if you prefer not to print the ba (See "Keeping Track of the Amount of Roll Paper Left)		
Paper Details (The type of paper is displayed here.) (*1)	Head Height	Adjust the Printhead height. (See "Troubleshooting Paper Abrasion and Blurry Images.") →P.529		
	Skew Check Lv.	If you print on Japanese paper (washi) or other handmade paper that has an irregular width, choose <b>Loose</b> for a higher skew detection threshold, or choose <b>Off</b> to disable skew detection. However, if paper is loaded askew when detection is <b>Off</b> , note that paper jams or Platen soiling may occur.		
	Cutting Mode	Specify whether or not to cut with the standard round-bladed cutter. If you choose <b>Automatic</b> , the roll will be cut automatically using the Cutter Unit, depending on the printer driver settings.  Select <b>Eject</b> to prevent printed documents from falling immediately after printing such as when you wait for the ink to dry, etc. <b>Manual</b> prints lines at the cut position instead of cutting after printing.  (See "Specifying the Cutting Method for Rolls.") P386		
		Cut Speed	Choose the cutting speed. The preset selection represents the optimal cutting speed for the type of paper. We recommend keeping the preset cutting speed.  If you use adhesive paper, choosing <b>Slow</b> helps prevent adhesive from sticking to the cutter and keeps the cutter sharp.	
		Trim Edge First	Selects whether or not to automatically cut the leading edge of the roll paper when roll paper is loaded.	

iPF680 Menu Settings

(The type of paper			
Paper Details (The type of paper is displayed here.) (*1)	Trim Edge First	(See "Cutting the Leading Edge of Roll Paper Automatically.") → P.389	
	CutDustReduct.	If you choose <b>On</b> , a line will be printed at the cut position when paper cutting is selected. This option reduces the amount of debris given off after cutting. It also helps prevent adhesive from sticking to the cutter and keeps the cutter sharp if you use adhesive paper. (See "Reducing Dust from Cutting Rolls.") >P.391	
	VacuumStrngth	Specify the level of suction that holds paper against the Platen. (See "Adjusting the Vacuum Strength.") →P.537	
	Scan Wait Time	Specify the time to wait for the ink to dry between each scan (after the printhead finishes moving in one direction), in consideration of how quickly the ink dries. Also specify the applicable area for the ink drying time. Select <b>Entire area</b> to apply the ink drying time after each scan until the document is fully printed. Select <b>Leading edge</b> to apply the ink drying time after each scan only in the area 110–140 mm from the leading edge. (The applicable length varies depending on the <b>Print Quality</b> setting.) Note that printing will take longer if you specify the <b>Scan Wait Time</b> setting. In particular, when <b>Leading edge</b> is selected, colors may be uneven in the boundary between the areas with and without a drying time.	
	Roll DryingTime	Specify the time to wait for the ink to dry for each sheet.	
	NearEnd RollMrgn	Specify the minimum margin at the leading edge of roll paper to ensure better printing quality at the leading edge.  Note that if you choose <b>3mm</b> , it may lower the printing quality at the leading edge and affect feeding accuracy. The printed surface may be scratched, and ink may adhere to the leading edge. It may also cause the Platen to become soiled.	
	NearEnd Sht Mrgn	Specify a margin at the leading edge of sheets to ensure better printing quality at the leading edge.  Note that if you choose <b>3mm</b> , it may lower the printing quality at the leading edge and affect feeding accuracy. The printed surface may be scratched, and ink may adhere to the leading edge.	
	BordlessOver- size	Select the amount of oversize extension of the original during borderless printing.  Normally, we recommend that you set this to <b>Standard</b> .  If it is set to <b>Little</b> , although it will reduce soiling on the back surface, white patches may remain on the printed surface.	
	Width Detection	Specify this option to print inside boundaries or in other cases when specifying a particular starting position for printing.  Paper width and skew are not detected if you select <b>Off</b> . If paper is loaded askew, paper jams or Platen soiling may occur.	
	Return Defaults	Choose <b>OK</b> to restore <b>Paper Details</b> to the default values.	
Paper Details		Print the paper settings as specified in Paper Details.	
Keep Paper Type		Select <b>On</b> when printing on a particular type of paper regularly. (See "Changing the Type of Paper.") →P.376	
		CutDustReduct.  VacuumStrngth  Scan Wait Time  Roll DryingTime NearEnd RollMrgn  NearEnd Sht Mrgn  BordlessOver- size  Width Detection	

<sup>\*1:</sup> For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Displaying the Paper Reference Guide.") P363 Types of paper in the printer driver and related software (as well as on the Control Panel) are updated when you install the printer driver from the User Software CD-ROM or if you update paper information with the Media Configuration Tool. (See "Updating paper information.") P366

# Ink Menu

Setting Item	Description, Instructions
Rep. Ink Tank	Replace the Ink Tank at this point. Follow the instructions displayed to complete the required procedure. (See "Replacing Ink Tanks.") →P.540
Head Cleaning A	Printhead cleaning options. (See "Cleaning the Printhead.") → P.550  Execute <b>Head Cleaning A</b> if printing is faint, oddly colored, or contains foreign substances.

# Job Menu

	Description, Instructions		
	(Choose from information about the last three print jobs.)	Document Name	Indicates the document name of the selected print job.
		User Name	Indicates the name of the user who sent the print job.
		Page Count	Indicates the number of pages in the job.
		Job Status	Indicates the printing results.
		Print Start Time	Indicates when the print job was started.
		Print End Time	Indicates when the print job was finished.
		Print Time	Indicates the time required to print the job.
		Print Size	Indicates the paper size in the print job.
	Media Type	Indicates the type of paper in the print job.	
		Interface	Indicates the interface used for the print job.
		Ink Consumed	Indicates a rough estimate of how much ink was consumed per job.(*1)
		Print settings	A counter for maintenance purposes. Indicates job print settings.
		Head Height	A counter for maintenance purposes. Indicates the head height when jobs wereprinted.
		Temp./Humidity	A counter for maintenance purposes. Indicates the temperature and humiditywhen jobs were printed.
		Adjustment req.	A counter for maintenance purposes. Indicates adjustment conditions applied to jobs.

amount of ink consumed per

Choose On to stop printing.

print job.(\*1)

iPF680		Menu Setting
	Setting Item	Description, Instructions
Print Job Log		Print a record of print jobs, including the paper type and size, amount of ink consumed, and so on. Ink consumption indicates a rough estimate of the

# Set./Adj. Menu

**Pause Print** 

Limited items are displayed during printing. The displayed items are indicated by annotations.

		Settin	ng Item	Description, Instructions
Test	Nozzle Cl	heck		Print a test pattern to check the nozzles.
Print	Status Pr	int		Print information about the setting values and condition of the printer.
	Interface	Print		Print interface settings information.
	GL2 Set F	Print		Print the settings as specified in <b>GL2 Settings</b> .
	Paper De	tails		Print the paper settings as specified in Paper Details.
	Print Job	Log		Print a record of print jobs, including the paper type and size, amount of ink consumed, and so on. Ink consumption indicates a rough estimate of the amount of ink consumed per print job.(*1)
	Menu Ma	p		Print the menu structure.
	Color Pal	ette		Print the GL2 color palette.
Adjust Printer	Head Posi. Adj.	Auto(Standard)		The printer prints and reads a test pattern for automatic adjustment of Printhead alignment relative to the printing direction. (See "Automatic Adjustment to Straighten Lines and Colors.") →P.524
		Auto(Adv	anced)	The printer prints and reads a test pattern for automatic adjustment of Printhead alignment relative to the printing direction and spacing between nozzles and colors. (See "Automatic Adjustment to Straighten Lines and Colors.") → P.524
		Manual		Print a test pattern for adjustment of Printhead alignment relative to the printing direction. Enter the adjustment value manually based on the resulting pattern. (See "Manual Adjustment to Straighten Lines and Colors.")   P525
	Head Inc.	Head Inc. Adj.		Print a test pattern for adjustment of the Printhead orientation. (See "Adjusting Line Misalignment.") →P.527
	Feed	Adj. Pri-	Automatic	Specify exact paper feeding, if desired. Normally, select Au-
	Priority	ority	Print Quality	tomatic. Choose Print Quality for attractive printing.  Choosing Print Quality also makes banding less noticea-
			Print Length	ble. Choose <b>Print Length</b> if you prefer to feed the paper an exact amount.
		Adj. Quality	Auto(GenuinePpr)	Specify this mode with paper identified in the Paper Reference Guide. (See "Displaying the Paper Reference Guide.") →P.363

<sup>\*1:</sup> A rough estimate of the amount of ink consumed per print job is displayed. Actual ink consumption may be different. The average margin of error for estimates calculated according to Canon measurement conditions for ink costs is ±15%. Canon does not guarantee the accuracy of these estimates. Estimates may vary depending on conditions of use. Calculation of these estimates does not include ink consumed when cleaning printheads by forceful ejection of ink.

Description, Instructions

Setting Item

Adjust Printer		Adj. Quality	Auto(GenuinePpr)		The printer prints and reads a test pattern for automatic adjustment of the feed amount. (See "Automatic Banding Adjustment.") >P.532
		Auto(Othe		erPaper)	Specify this mode with paper not in the Paper Reference Guide. (See "Displaying the Paper Reference Guide.") → P.363  The printer prints and reads a test pattern for automatic adjustment of the feed amount. Note that this function takes more time and consumes more ink than Auto(GenuinePpr). (See "Automatic Banding Adjustment.") → P.532
			Manual		Use this mode with highly transparent media or other paper for which Auto(GenuinePpr) or Auto(OtherPaper) cannot be used.  Print a test pattern for adjustment of the feed amount based on the type of paper. (See "Manual Banding Adjustment.") → P.534
		Adjust	Adjust-	A:High	Print a test pattern for particular types of paper to compen-
		Length	ment- Print	B:Standard/Draft	sate for paper stretching or shrinkage, after which you enter the amount of adjustment. (See "Adjusting Line Length.") →P.536
			Change	A:High	Displayed when you have selected Feed Priority > Adj.
		Settings	B:Standard/Draft	Priority > Print Length.  Adjustment relative to the amount of stretching or shrinkage of the current paper.  Enter either the adjustment results from AdjustmentPrint or the discrepancy that you measured (as a percentage).  For paper that tends to stretch, increase the feed amount by choosing a higher adjustment value. For paper that tends to shrink, decrease the feed amount by choosing a lower adjustment value. (See "Adjusting Line Length.") P.536	
Mainte- nance	Head Cleaning				Clean the Printhead. (See "Cleaning the Printhead.") →P.550  Choose Head Cleaning A if printing is faint, oddly colored, or contains foreign substances.  Choose Head Cleaning B if no ink is printed at all, or if printing is not improved by Head Cleaning A.
	Nozzle Ch	eck			Print a test pattern to check the nozzles.
	Replace P.head  Repl. maint cart				Execute when replacing the Printhead. Follow the instructions displayed to complete the required procedure. (See "Replacing the Printhead.") →P.551  Not displayed during a warning message that the remaining Maintenance Cartridge capacity is low.
				Execute when replacing the Maintenance Cartridge. Follow the instructions displayed to complete the required procedure. (See "Replacing the Maintenance Cartridge.") →P.558	
	Head Info				Indicates information about the printhead.
GL2 Repl	ot				Clear the print data in the replot buffer.
GL2 Buffe	erClear				Print in monochrome.
GL2 Set-	Quality	Color	Monochrome		Print in monochrome.
tings	Manager	Mode	Color (CA	D) 1	Print in standard colors.
			Color (CAD) 2		Print with approximate colors emulating Canon iPF750, iPF755, iPF650, iPF765, iPF760, iPF765.(*2)

460

Menu Settings

			g Item	Description, Instructions
GL2 Set- tings	Quality Manager	Color r Mode	Color (CAD) 3	Print with approximate colors emulating Canon iPF500, iPF600, iPF700, iPF510, iPF610, iPF710, iPF605, iPF720, iPF810, iPF820, iPF815, iPF825.(*2)
			Color (CAD) 4	Print emulating the HP Designjet 500/800, in colors resembling colors produced by these printers.(*2)
			Color (CAD) 5	Print emulating the HP Designjet T1100, in colors resembling colors produced by this printer.(*2)
		Print Quality		Choose the print quality.
		Input Resolution		Choose the printer input resolution, 600dpi or 300dpi.
		Print (Economy)		When <b>On</b> is selected, print using less ink. However, the quality is lower than regular printing. Select <b>On</b> to conserve ink such as the layout confirmation. Note that although <b>Print (Economy)</b> is only available when <b>Fast</b> is selected in <b>Print Quality</b> , it might not be available depending on the paper type.
	Paper	Paper Sou	irce	Choose the source of paper for HP-GL/2 printing.
	Manager	Margin		Specify the margin around paper. The margin for the trailing edge of sheets is 23 mm (0.9 in).  However, if you have specified the leading margin in <b>Paper Details</b> , the larger of the setting values has priority.
		Conserve Paper		Conserves paper when printing.
		Auto Rotate		If the long side of an original is shorter than the roll width, the original is automatically rotated 90 degrees to conserve paper. Similarly, if the long side of an original in landscape orientation is longer than the roll width and the short side is shorter than the roll width, the original is repositioned to fit on the paper.  HP RTL print jobs are not rotated. Because HP RTL images are not rotated even if the paper is rotated 90 degrees, images may be cut off or the blank paper may be ejected. In this case, set <b>Auto Rotate</b> to <b>Off</b> .
	Line & Pen Manager	Enable merge		Specify whether to merge or print over colors where lines overlap.  Choose <b>Off</b> to print the second line over the first. Choose <b>On</b> to merge all overlapping colors.
		Pen Set- up	Select Palette	As pen values, choose <b>Software</b> , <b>Palette A</b> , <b>Palette B</b> , or <b>Factory</b> .  Choose <b>Software</b> to print according to software settings.  Choose <b>Palette A</b> or <b>Palette B</b> to print using the value specified in <b>Define Palette</b> .
			Define Palette	Specify the Width, Color, and Line Attributes in the palette Pen no Choose Factory to confirm the values when Factory is selected in Select Palette. In Line Attributes, choose No Setting or Circle Setting as the processing for the ends and junctions of lines.  • If you choose No Setting

iPF680

Description, Instructions

Setting Item

GL2 Set- tings	Line & Pen Manager	Pen Set- up	Define Palette	If you choose Circle Setting
			Reset Palette	Restore <b>Define Palette</b> to the default palette settings.
		Smoothing		Choose whether to print arcs as smooth curved lines or as multiple connected line segments.  • If you choose Software  Operation is determined by the application. If nothing is specified by the application, the result is as shown in the figure.  Note: By default, this is a 72-sided figure  • If you choose Smooth
		ThickenFi	neLines	Select <b>On</b> to print fine lines more distinctly.
		AdjustFai	ntLines	If fine lines are printed in colors that do not match the colors of other shapes, selecting <b>Off</b> may help produce the expected results. However, lines in some colors may appear broken.
	Proces-	Warning		Select <b>On</b> to have any GL2-related warnings displayed.
	singOp- tion	PageSizel	Process1	Set the position of the margin relative to the image range. Choose <b>Off</b> to set the margin outside the image range. Although the image will not be missing, you should print on paper larger than the size of the image range plus the margins.  Choose <b>On</b> to set the margin inside the image range. The image may be missing depending on the layout.
		PageSizel	Process2	Change the method of handling image range information. Normally, leave the setting <b>Off</b> . Try <b>On</b> if the image is missing or you get a blank paper.
	GL2 Set P	rint		Print GL2 settings information.
Interface Setup	EOP Time	r		Specify the timeout period before cancellation of print jobs that cannot be received by the printer.
	TCP/IP	IPv4	IPv4 Mode	Choose whether the printer IP address is configured automatically or a static IP address is entered manually.

iPF680 Menu Settings

		Settin	g Item			Description, Instructions
Interface TCP/IP Setup	TCP/IP	IPv4	Protocol	DHCP		Specify the protocol used to configure the IP address auto-
			ВООТР		matically.	
			RARP			
		IPv4	IP Addres	s	Specify the printer network information when using a static	
			Settings	Subnet M	ask	IP address.  Enter the IP address assigned to the printer, as well as the
				Default G	/ <b>W</b>	network subnet mask and default gateway.  The value that was automatically configured is displayed if you have set <b>IPv4 Mode</b> to <b>Automatic</b> .
			DNS Settings	DNS Dync update		Specify whether DNS server registration is updated automatically.
				Pri. DNS	SrvAddr	Specify the DNS server address.
				Sec. DNS	SrvAddr	
				DNS Host	Name	Specify the DNS host name.
				DNS Dom	ain Name	Specify the DNS domain name.
		IPv6	IPv6 Supp	ort		Specify whether to connect via IPv6.
			IPv6 Stles	sAddrs		Specify whether a IPv6 stateless address is used.
			DHCPv6			Specify whether DHCPv6 settings are used.
			DNS Settings	DNS Dync update	Statefull Addr	Specify whether DNS server registration is updated automatically.
					State- less Addr	
				Pri. DNS	SrvAddr	Specify the DNS server address.
				Sec. DNS	SrvAddr	
				DNS Host	Name	Specify the DNS host name.
				DNS Dom	ain Name	Specify the DNS domain name.
	Ethernet Aut Driver	Auto Dete	auto Detect			Specify the communication method. To apply your changes choose <b>Register Setting</b> . Choose <b>On</b> for automatic configuration of the LAN communication protocol. Choose <b>Off</b> to use settings values of <b>Comm.Mode</b> and <b>Ethernet Type</b> .
		Comm.Mo	de			Choose the LAN communication method.
		Ethernet 1	<b>Туре</b>			Choose the LAN transfer rate.
		Spanning Tree				Choose whether spanning-tree packets are supported over the LAN.
		MAC Addı	ress			Indicates the MAC address.
	Interface I	Print				Print interface settings information.
	Return De	faults				Choose <b>OK</b> to restore <b>Interface Setup</b> settings to the default values.
System	Sleep Tim	er				Specify the period before the printer enters sleep mode.
Setup	Shut Dow	Shut Down Timer				Sets the time until the printer turns off automatically. If no operations are performed on the printer for the duration of the time set in <b>Shut Down Timer</b> after entering Sleep mode, the printer automatically turns off.
	Buzzer					Choose <b>On</b> for the buzzer to sound once for warnings and three times for errors.

System Setup

Menu Settings iPF680

	Setting Item	Description, Instructions
Contrast Adj.		Adjust the Display Screen contrast level.
Date &	Date	Set the current date.
Time	Time	Set the current time. Available only if the <b>Date</b> setting is specified.
Date Form	nat	Specify the date format.
Language		Specify the language used on the Display Screen.
Time Zone	•	Specify the time zone. Time zone options indicate a main city in this time zone and the difference from Greenwich Mean Time.
Length Ur	nit	Choose the display unit for length. Change the unit displayed for the remaining amount of roll paper, <b>Tot.Print Area</b> , and so on.
Detect Mis	smatch	Specify printing behavior if the type and size of paper specified in the printer menu does not match the type and size in the printer driver.  Choose <b>Pause</b> to have printing paused under these circumstances. Choose <b>Warning</b> to continue printing after notification. Choose <b>None</b> to continue printing without notification.
Paper Size Ba- sis	Roll Selection 1	If roll size detection is activated, choose whether ISO A3 (297mm) or 300mm Roll is applied when a roll of an intermediate width is detected.
	Roll Selection 2	If roll size detection is activated, choose whether <b>10in</b> . <b>(254mm)</b> or <b>JIS B4 (257mm)</b> is applied when a roll of an intermediate width is detected.
Keep Paper Size		Choose On to use the paper size setting as the basis for printing instead of other settings. The margin setting of the printer menu will be used instead of the margin setting of the printer driver if the latter is smaller, which may prevent text or images in the margin from being printed.  SAMPLE  Choose Off to give priority to margin settings. The larger value is used if the margin specified in the printer driver does not match the margin in the printer menu.
TrimEdge Reload		Specify whether to trim the leading edge of the currently retracted roll when the roll is advanced. Cut the edge if you are concerned about any marks left on the roll when the roll is left in the retracted position.

iPF680 Menu Settings

Setting Item

Description Instructions

	Setting Item	Description, Instructions
System Setup	TrimEdge Reload	Specify <b>On</b> to have rolls cut when printing begins after Sleep mode or when the power is restored. Selecting <b>Automatic</b> will trim the edge when the roll has been in the retracted position for two days or more.
	Rep.P.head Print	Choose On to have the printer automatically execute the Advanced Adj. operations after you replace the Printhead. (See "Automatic Adjustment to Straighten Lines and Colors.") →P524
	Nozzie Check	In <b>Frequency</b> , specify the timing for automatic checks of nozzle clogging. Choose <b>Standard</b> to have the printer adjust the timing for checks based on the frequency of nozzle use. Choose <b>1 page</b> to check once per page. Choose <b>10 pages</b> to check once per 10 pages. Choose <b>Off</b> to not execute check.  If <b>On</b> is selected in <b>Warning</b> , a warning may be displayed on the Control Panel depending on the result of the nozzle check.
	Use USB	When <b>Off</b> is selected, the device can no longer be accessed via USB.
	Use Ethernet	When <b>Off</b> is selected, the device can no longer be accessed via Ethernet.
	Use RemoteUI	Choosing <b>Off</b> prohibits access from RemoteUI. Settings can only be configured from the control panel.
	Reset PaprSetngs	Restores settings that you have changed with Media Configuration Tool to the default values.
	Show Job Log	Selecting <b>Off</b> prevents display of the log in <b>Job Menu</b> > <b>Job Log</b> . Additionally, the log is not printed if you choose <b>Job Menu</b> > <b>Print Job Log</b> . Note that because job logs are not collected, the Status Monitor accounting functions will not work correctly.
Prep.Mov	ePrinter	When transferring the printer to another location, choose the level of transfer and follow the instructions on the screen. (See "Preparing to Transfer the Printer.") →P.568  Not displayed during a warning message that the remaining Maintenance Cartridge capacity is low.
Admin. Menu	Change Password	The password that can be entered is a number from 0 to 9999999.  The restriction states and main items are shown below. For more specific information on restricted items, see "Menu Structure." →P.450
		<ul> <li>Viewing and configuration by administrators only</li> <li>Change Password</li> <li>Init.Admin.Pswd</li> <li>Etc.</li> </ul>
		Viewing and configuration by administrators, and only viewing by other users     Date & Time     Time Zone     Use RemoteUI     Etc.
	Init.Admin.Pswd	Choose <b>OK</b> to restore the <b>Admin. Menu</b> password to the default values.

Status Print iPF680

	Setting Item	Description, Instructions
Adj. Fine Feed (*2) (*3)		Displayed when you have selected <b>Feed Priority &gt; Adj. Priority &gt; Automatic</b> or <b>Print Quality</b> . Fine-tune the feed amount manually.
Printer Info (*2)	Paper Info	Indicates the current paper size, type, and related printer settings.
	Ink Info	Indicates ink levels and maintenance cartridge capacity.
	Head Info	Indicates information about the printhead.
	System Info	Indicates the firmware version, serial number, and interface information.
	Error Log	Indicates the most recent error messages (up to five).
	Use Situation	A counter for maintenance purposes. Displays printer usage related information.

<sup>\*1:</sup> A rough estimate of how much ink was consumed per job is displayed. Actual ink consumption may be different. The average margin of error for estimates calculated according to Canon measurement conditions for ink costs is ±15%. Canon does not guarantee the accuracy of these estimates. Estimates may vary depending on conditions of use. Calculation of these estimates does not include ink consumed when cleaning printheads by forceful ejection of ink.

- \*2: Displayed as the menu during printing while printing is in progress.
- \*3: Not displayed in the regular menu.

# **Status Print**


You can print a **Status Print** report indicating the current status of the printer.

With **Status Print**, information is printed regarding the printer firmware version, various settings, and the status of consumables.

# Printing Status Print reports

- Load paper.

  If using cut sheets, load paper A4/Letter-sized, you will need three sheets.
- On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select Settings/Adj. tab (🗓).

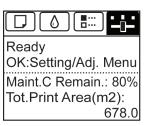



- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select **Test Print**, and then press the **OK** button.
- **5** Press ▲ or ▼ to select **Status Print**, and then press the **OK** button.

Status Print

# Checking the information in **Status Print** reports

The following information is included in **Status Print** reports.

Canon imagePROGRAF iPFxxxx Status Print	Printer model
Firm	Firmware version
Boot	Boot ROM version
MIT(DBF)	MIT database format version
MIT(DB)	MIT database version
S/N	Printer serial number
Date	Indicates when the status print report was printed.

Paper Menu		Information on the loaded paper.
	Roll Media Type	
	Cut Sheet Type	
	ManageRemainRoll	
	Keep Paper Type	

Job Menu		Job-related information.
	Job Log	A counter for maintenance purposes. Various information about previous jobs.

Set./Adj. Menu				Settings and adjustment information.
	System Setup		Printer system settings, as well as	
		Sleep Timer		settings regarding warnings and errors.
		Shut Down Timer		
		Buzzer		
		Contrast Adj.		
		Date Format		
		Language		
		Time Zone		
		Length Unit		
		Detect Mismatch		
		Paper Size Basis		Paper-related settings.
			Roll Selection 1	
			Roll Selection 2	
		Keep Paper Size		
		TrimEdge Reload		
		Rep.P.head Print		Settings after a test pattern was printed following head replacement.
		Nozzle Check		Nozzle-check settings.
			Frequency	
			Warning	
		Use USB	'	Use USB settings values.

467

Status Print iPF680

	Use Ethernet		Use Ethernet settings values.	
	Use RemoteUI		Settings used by RemoteUI.	
	Show Job Log		Print job settings.	
Adjust Printer			Adjustment settings.	
	Head Posi. Adj.		A counter for maintenance purpo-	
		Adjust Log	ses. Head position adjustment values for previous jobs.	
Printer Info			Ink information, RAM usage, and a record of errors.	
	Ink Info		Ink-related information.	
		MC	Maintenance Cartridge capacity (%)	
		(The ink color is displayed here.)	Ink levels. The remaining ink is displayed in a five-level scale.	
	System Info		Indicates the total amount of	
		RAM	RAM.	
	Error Log		The past five error codes.	

HEAD LOT NUMBER/ DATE OF INSTALLATION		ATE OF INSTALLATION	The printhead lot number and date and time when the Printhead was installed.
	HEAD INFxx		
PARTS STATUS			Utilization status of replacement parts that require servicing.
	COUNTER		
COUNTER			Utilization status of the cutter, media, and other items (indicating how much they have been used).
	CUTTER		
	MEDIA		
		LIFE TTL	
		LIFE ROLL	
		LIFE CUTSHEET	
	MEDIA 1-7,OTHER		
		NAME	
		TTL	
		ROLL	
		CUTSHEET	
	AFTER INSTALLATION		

DUTY		Counters for maintenance purposes. Needed when service is
	UNIT:m2	requested.
	UNIT:sq.f	
	UNIT:A4 Sheet	
	UNIT:Letter Sheet	


# **Printing Interface Setting Reports**

You can print an Interface Print report indicating the current interface settings values of the printer.

#### Printing Interface Print reports

- Load the paper.

  If using sheets, load paper A4/Letter-sized, you will need at least three sheets.
- On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab ( 🚟 ).

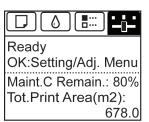



- If the Tab Selection screen is not displayed, press the Menu button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- 4 Press ▲ or ▼ to select **Test Print**, and then press the **OK** button.
- 5 Press ▲ or ▼ to select Interface Print, and then press the OK button.

#### Confirming Interface Print information

The following information is included in the **Interface Print** report.

Canon imagePROGRAF iPFxxxx Interface Print	Printer model
Firm	Firmware Version
Boot	Boot ROM Version
MIT(DBF)	MIT Database Format Version
MIT(DB)	MIT Database Version
S/N	Printer serial number
Date	The date when the interface setup print report was printed.

EOP Timer		Specify the timeout period before cancellation of print jobs that cannot be received by the printer.
TCP/IPv4	Frame Type	IPv4 settings values.
	Use DHCP	
	Use BOOTP	
	Use RARP	
	Enable DNS Dynamic Update	
	Use Zeroconf Function	
	IP Address	
	Subnet Mask	

469

TCP/IPv4	Gateway Address	IPv4 settings values
	LPD Printing	
	IPP Printing	
	IPP Printer URI	
	RAW Printing	
	Raw Mode Bi-direction	
	FTP Printing	
	WSD Printing	
	Use Discovery	
	Scope	
	Primary DNS Server Address	
	Secondary DNS Server Address	
	DNS Host Name	
	DNS Domain Name	
	MulticastDNS ServiceName	
	SNMPv1	
	SNMPv3	

TCP/IPv6	Use IPv6		l II
	Use DHCPv6	Stateful Address	
		Prefix Length	
		Primary DNS Server Address	
		Secondary DNS Server Address	
	Use a stateless address	Stateless Address 1	
		Prefix Length 1	
		Stateless Address 2	
		Prefix Length 2	
		Stateless Address 3	
		Prefix Length 3	
		Stateless Address 4	
		Prefix Length 4	
		Stateless Address 5	
		Prefix Length 5	
		Stateless Address 6	
		Prefix Length 6	
	Use a link-local Address	Link-Local Address	
		Prefix Length	
	Use a manual address	IP Address	
		Prefix Length	
		Default Router Address	
		Prefix Length	
		Primary DNS Server Address	

IPv6 settings values.

	Use a manual address	Secondary DNS Server Address	IPv6 settings values.
	Use the same host name and do- main name as IPv4	DNS Host Name	
		DNS Domain Name	
	Perform dynamic updating of stateful addresses		
	Dynamically update the stateless address		
	Dynamically update the manual addre	ss	

Network Interface	Physical Interface	Network interface settings values.
	Transmission Rate	
	MAC Address	
	Auto Detect	
	Communication	
	Ethernet Type	
	Spanning Tree	
	Use the Jumbo Frame Function	

# Memo

# iPF680

User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435

# **Printer Parts**


Printer parts	474
Optional accessories	480

Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633

# Printer parts

ront	474
ide	
pp Cover (Inside)	477
oll Cover (Inside)	478
arriage	478
k Tank Cover (Inside)	479
tand	481
ontrol Panel	.436

# **Front**

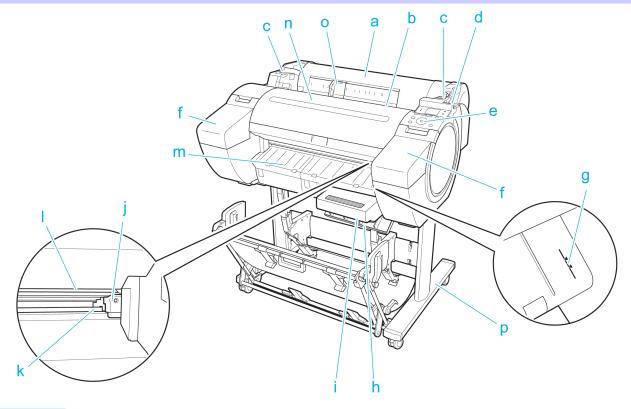

- a Roll Cover
  - Open this cover to load rolls. (See "Roll Cover (Inside).") →P.478
- b Paper Feed Slot

When loading paper, insert it here.

c Roll Ledge

When loading rolls, rest the Roll Holder here before loading it in the Roll Holder Slot.

d Release Lever

When releasing the Paper Retainer, push this lever back.

Control Panel

Use this panel to operate the printer and check the printer status. (See "Control Panel.") >P.436

f Ink Tank Cover

Open this cover to replace an Ink Tank. (See "Ink Tank Cover (Inside).") >P.479

Printer Parts

Front

# g Paper Alignment Line

An orange line for alignment of paper.

#### h Maintenance Cartridge Cover

Open this cover to replace the Maintenance Cartridge.

#### i Maintenance Cartridge

Absorbs ink used for maintenance purposes such as head cleaning. (Replace the cartridge when it is full.)

#### j Cutter Unit

A round-bladed cutter for automatic roll cutting.

#### k Cutter Rail

The Cutter Unit passes over this rail to cut paper.

#### Output Tray

All printed documents are ejected from this slot.

#### m Ejection Guide

Supports output paper.

#### n Top Cover

Open this cover to install the Printhead and remove any jammed paper from inside the printer, as needed. (See "Top Cover (Inside).") >P.477

#### Width Guide

When loading the sheets, move the guide to match the paper size.


#### Stand (Optional)

A stand that holds the printer. Equipped with casters to facilitate moving it. (See "Stand.") →P.481



 The Stand is normally offered as an optional accessory, but it may be provided as a standard accessory in some sales regions.

# Side

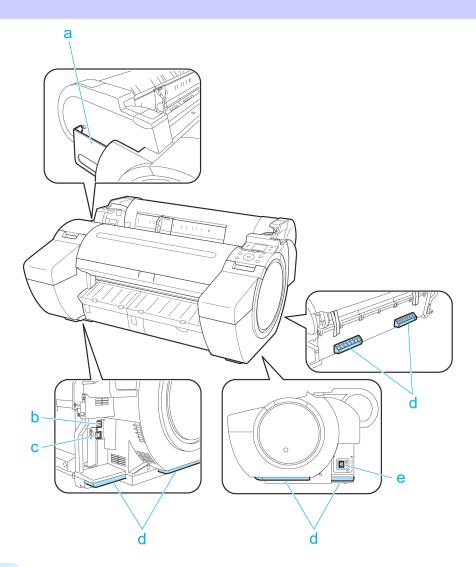

#### a Manual Pocket

Store printer manuals in this pocket.

#### **b** Ethernet Port

Connect an Ethernet cable to this port.

#### c USB Port

Connect a USB cable to this port. The printer is compatible with Hi-Speed USB connections.

#### d Carrying Handles


When carrying the printer, have three people hold it by these handles on the back at both ends. Grasp these parts on the left and right sides also when moving the printer with the stand attached.

#### e Power Supply Connector

Connect the power cord to this connector.

Top Cover (Inside)

## **Top Cover (Inside)**

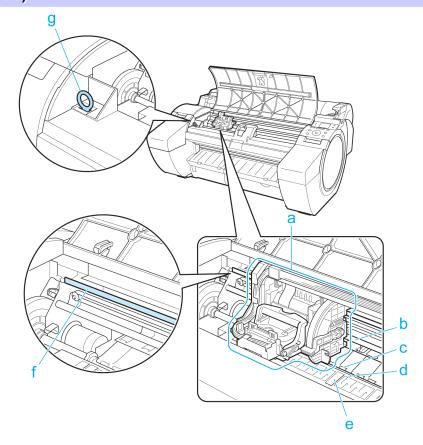

#### a Carriage

Moves the Printhead. The carriage serves a key role in printing. (See "Carriage.") →P.478

#### **b** Carriage Shaft

The Carriage slides along this shaft.

#### c Paper Retainer

Important in supplying the paper. This retainer holds paper as it is fed.

#### **d** Platen

The Printhead moves across the platen to print. Vacuum holes on the platen hold paper in place.

#### e Borderless Printing Ink Grooves

For catching ink outside the edges of paper during borderless printing.


#### f Linear Scale

The linear scale serves a key role in detecting the Carriage position. Be careful not to touch this part when cleaning inside the Top Cover or clearing paper jams.

#### g Cleaning Brush

When cleaning inside the printer under the Top Cover, use this brush to sweep away paper dust on the Platen.


# Roll Cover (Inside)

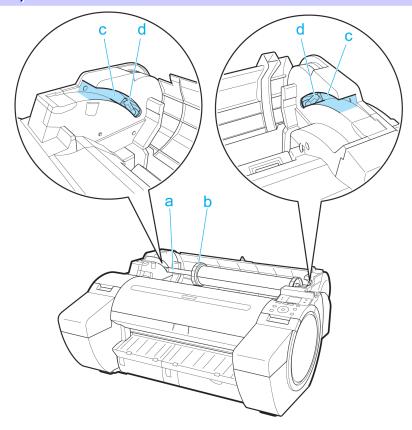

- a Roll Holder
  Load the roll on this holder.
- **b** Holder Stopper Secure rolls on the Roll Holder with this part.
- c Roll Loading SlotsSlide the Roll Holder along these slots.
- d Roll Holder Slot

  Load the Roll Holder into this holder slot.

# Carriage

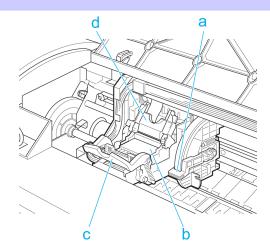

iPF680 Ink Tank Cover (Inside)

#### a Angle Adjustment Lever

Use this lever to fine-tune the printer to correct misalignment of printed lines.

#### **b** Printhead

The printhead is equipped with ink nozzles. The carriage serves a key role in printing.


#### c Printhead Fixer Lever

Locks the Printhead Fixer Cover.

#### d Printhead Fixer Cover

Holds the Printhead in place.

## Ink Tank Cover (Inside)

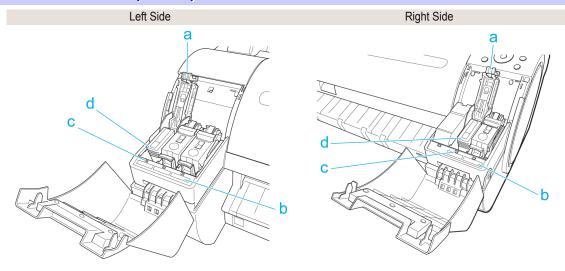

### a Ink Tank Lock Lever

A lever that locks the Ink Tank in place and protects it. Lift and press down the lever when replacing an Ink Tank.

#### b Ink Color Label

Load an Ink Tank that matches the color and name on this label.

#### c Ink Lamp (Red)

Indicates the state of the Ink Tank as follows when the Ink Tank Cover is opened.

The Ink Tank is installed correctly.

No lnk Tank is installed, or the ink level detection function has been released.

#### Flashing Slowly

Not much ink is left.

#### Flashing Rapidly

There is no ink left.

#### d Ink Tank

Cartridges of ink in various colors.


# Optional accessories

Roll Holder Set	480
Stand	481


# **Roll Holder Set**

Load a roll on the roll holder and then load the holder in the printer. The Roll Holder in the Roll Holder Set RH2-33 is for use with both 2-inch and 3-inch paper cores. Use the correct attachment for the particular paper core. (See "Attaching the Roll Holder to Rolls.") >P.370

- Roll Holder Set RH2-33
  - Roll Holder (for 2- and 3-inch paper cores)

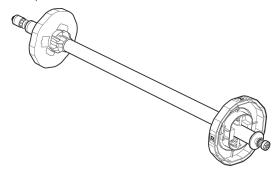

Attachments

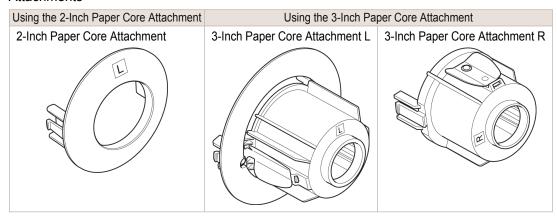


Stand

#### **Stand**

When using an optional Stand, you can store and stack documents printed on rolls.

Printer Stand ST-27

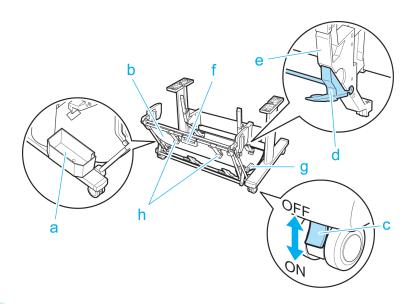

#### a Accessory Pocket

Stores printer accessories.

#### b Output Stacker

Printed documents are ejected into the output tray.

#### c Locking Caster

Lock to immobilize the caster.

Before moving the printer, always unlock all four casters. Moving the printer while casters are locked may scratch the casters or the floor.

#### d Adjustable Stopper

Pull out depending on the paper size when using the output stacker in the Extended position A. For details on the extended position, see "Using the Output Stacker." >P.399

#### e Paper Guide

Guides printed documents into the output stacker.

#### f Output stacker handle

This handle is grasped and supports the sliding output stacker when putting the output stacker into Extended position B and returning it to the regular position.

For details on the extended position, see "Using the Output Stacker." →P.399

#### g Output stacker release lever

Pull this lever towards you to release Extended position B.

For details on the extended position, see "Using the Output Stacker." >P.399

#### h Output Stacker Ejection Guides

This guide supports the paper that is output when using the output stacker in Extended position B.



• The Stand that can be used with this printer is Printer Stand ST-27 and Printer Stand ST-26.

- Note The Stand is normally offered as an optional accessory, but either one or the other of the Stand may be included as a standard accessory in some sales regions and periods.
  - The output stacker of the Printer Stand ST-26 has a regular position and an Extended position A. For details on the extended position, see "Using the Output Stacker." >P.399
  - The Stand is described in the illustration of Printer Stand ST-27. Note that the illustrations may look different from the appearance of your printer in some cases.

## User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473

# **Network Setting**

Network Environment	484
Using RemoteUI	486
Initial Settings	488
Mac OS Settings	496
Other Settings	497
Device Setup Utility (Windows)	500

Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633

# **Network Environment**

## **Network Environment**

#### System requirements

The system requirements, which vary depending on your network, are as follows.

- Printing over a TCP/IP network (when using IPv4)
  - · Compatible operating systems
    - Windows XP
    - Windows Server 2003
    - Windows Vista
    - Windows Server 2008
    - Windows 7
    - Windows 8
    - Windows Server 2003 x64
    - Windows Vista x64
    - Windows Server 2008 x64
    - Windows Server 2012 x64
    - Windows 7 x64
    - Windows 8 x64
    - OS X v10.6.8 or later
    - Unix (Solaris 9)
    - Unix (Red Hat 9)
- Printing over a TCP/IP network (when using IPv6)
  - · Compatible operating systems
    - Windows Vista
    - Windows Server 2008
    - Windows 7
    - Windows 8
    - Windows Vista x64
    - Windows Server 2008 x64
    - Windows Server 2012 x64
    - Windows 7 x64
    - Windows 8 x64
    - OS X v10.6.8 or later




- When using IPv6, you must specify IPv6 on the Control Panel or in RemoteUI. For instructions, "Configuring TCP/ IPv6 Network Settings" →P.491 or see "Configuring the Printer's TCP/IP Network Settings With RemoteUI." →P.492
- The imagePROGRAF printer driver is not compatible with Unix.

#### **Network Environment**

After confirming what type of network environment you will connect the printer to, set up the printer and computers as needed. For the specifications of the network interface, see "Specifications." >P.630

#### • Example of a Windows network

In Windows networks, print over TCP/IP.

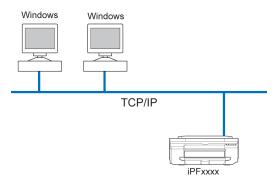




NetBIOS is not supported.

#### • Example of a Mac OS network

In Mac OS networks, print over TCP/IP using the Bonjour function.

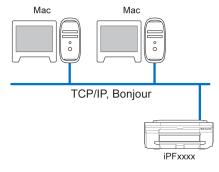

Using RemoteUI iPF680

# **Using RemoteUI**

## **Using RemoteUI**

RemoteUI is software with which you can access the printer via the network from your Web browser to confirm the printer status, operate jobs, and configure the settings. Since the software (Web server) for using RemoteUI is built in the printer, preparing software other than a Web browser is unnecessary. You can use RemoteUI if an imagePROG-RAF printer on a network is connected to your computer. If you start your Web browser and specify the IP address of the printer, the RemoteUI screen is displayed, and you can use RemoteUI.



• To use RemoteUI, an IP address must be set on the printer in advance. For the method of setting an IP address, see "Configuring the IP Address on the Printer." >P.488


#### What You Can Do With RemoteUI

With RemoteUI, you can access the printer via a network, configure network settings, and display the current status of the printer, various types of information, the processing status of jobs, etc.

#### Starting RemoteUI

Start RemoteUI by the following operations.

- 1 Start your Web browser.
- Enter the following URL in Address or Location. http://printer IP address or name/
  Example: http://xxx.xxx.xxx/
- The RemoteUI screen is displayed.

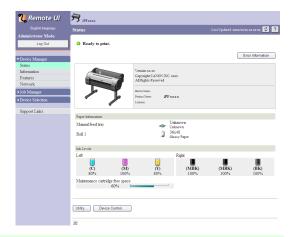



The screen slightly differs depending on the model of printer.

#### Configuring the Network With RemoteUI

For details on configuring printer settings for networks, refer to the following topics.

- Configuring the Printer's TCP/IP Network Settings With RemoteUI →P.492
- Specifying Printer-Related Information →P.497

Using RemoteUI



iPF680

• For the Web browser, use Netscape Navigator 6.0 or later, Internet Explorer 5.01 or later, or Firefox 1.5 or later. For Mac OS X, Safari 1.32 or later or 2.03 or later also is supported.

- This cannot be used connected via a proxy server. In environments where a proxy server is used, add the printer's IP
  address to Exceptions (addresses accessed without a proxy server) in the web browser proxy server settings. (Settings may vary depending on the network environment.)
- Enable JavaScript and cookies in the web browser.
- If you access RemoteUI with the printer name instead of its IP address, make sure the DNS settings are correctly configured.
- Depending on the network environment, you may not be able to start RemoteUI.
- Confirm whether System Setup > Use RemoteUI is set to On on the Control Panel of the printer.



- RemoteUI also offers many other features. You can display the ink levels, check error messages and other status information, and cancel print jobs.
- By factory default, the English screen is displayed. To change the display language, select the desired language under **Language** before logging on in administrator mode.
- If you login in Administrator Mode, you can configure to use the Jumbo Frame function in the **Network** page. However, this function might not be able to be used depending on the network environment.

# **Initial Settings**

Configuring the IP Address on the Printer  Configuring the IP Address Using imagePROGRAF Device Setup Utility  Configuring the IP Address Using the Printer Control Panel  Configuring the IP Address Using ARP and PING Commands	. 500 . 488
Configuring TCP/IPv6 Network Settings	. 491
Configuring the Printer Driver Destination (Windows)	
Configuring the Printer's TCP/IP Network Settings With RemoteUI	. 492

# Configuring the IP Address on the Printer

You must configure the printer's IP address before using the printer in a TCP/IP network.

The printer's IP address is configured automatically when you install the printer driver following the instructions in the Setup Guide.

Configure the IP address by using **imagePROGRAF Device Setup Utility**, the printer Control Panel, or ARP or PING commands, if the IP address is changed, or if you change the printer connection mode to a network connection. For details on configuring the IP address, refer to the following topics.

- Configuring the IP Address Using imagePROGRAF Device Setup Utility →P.500 (Windows)
- Configuring the IP Address Using the Printer Control Panel →P.488
- Configuring the IP Address Using ARP and PING Commands →P.489



- If you use a DHCP server for automatic assignment of the printer's IP address, printing may no longer be possible after the printer is turned off and on. This is because an IP address different from before has been assigned. Thus, when using DHCP server functions, consult your network administrator and configure the settings in one of the following ways.
- Configure the setting for dynamic DNS updating
   In the printer menu, either set DNS Dync update to On, or activate the setting Enable DNS Dynamic Update in RemoteUI.

(See "Menu Settings.") →P.456 (See "Configuring the Printer's TCP/IP Network Settings With RemoteUI.") →P.492

Configure the setting for assignment of the same IP address each time the printer starts up



We recommend configuring the printer's IP address even if you will use the printer in networks other than TCP/IP networks. Configuring the printer's IP address enables you to use RemoteUI to configure the network settings and manage the printer with a web browser.


For details on RemoteUI, see "Using RemoteUI." →P.486

# **Configuring the IP Address Using the Printer Control Panel**

This topic describes how to configure the printer's IP address on the Control Panel.



On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab ( ( ).

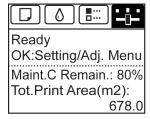



- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Interface Setup, and then press the OK button.
- Press ▲ or ▼ to select TCP/IP, and then press the OK button.
- 5 Press ▲ or ▼ to select IPv4, and then press the OK button.
- 6 Press ▲ or ▼ to select IPv4 Settings, and then press the OK button.
- 7 Press ▲ or ▼ to select IP Address, and then press the OK button.
- 8 After you press ◀ or ▶ to select the input field, numerical input is possible.
- Press the ▲ or ▼ button to enter the value.



- Pressing the ▲ button increases the number by 1. The maximum value is 9, after which 0 is displayed.
- Note Pressing the ▼ button decreases the number by 1. The minimum value is 0, after which 9 is displayed.
  - Hold down ▲ or ▼ to increase or decrease the value continuously.
  - Make sure the IP address you enter for the printer is not the same as any computer IP address in your network.
- 10 Repeat steps 8 and 9 to complete the settings, and then press the **OK** button.
- Press the **Menu** button.

  If you have changed the settings, a confirmation message is displayed. Press ▲ or ▼ to select **Yes**, and then press the **OK** button.





- Be sure to complete step 11. This will activate the values you have entered.
- Important If an error message is displayed, check the settings and correct any invalid values.



You can also specify the subnet mask and default gateway on the Control Panel.

# **Configuring the IP Address Using ARP and PING Commands**


This topic describes how to configure the IP address using ARP and PING commands.

To use the ARP and PING commands, you will need to know the printer's MAC address. You can confirm the MAC address on the Control Panel.

1 Check the printer's MAC address.

You can confirm the MAC address on the Control Panel as follows:

1. On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab ([♣]).

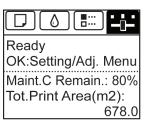

- 2. Press the **OK** button. The **Set./Adj. Menu** is displayed.
- 3. Press ▲ or ▼ to select Interface Setup, and then press the OK button.
- **4.** Press ▲ or ▼ to select **Ethernet Driver**, and then press the **OK** button.
- 5. Press ▲ or ▼ to select MAC Address, and then press the OK button.



- If the Tab Selection screen is not displayed, press the Menu button.
- Note You can investigate the MAC address by printing an interface setting report. (See "Printing Interface Setting Reports.") →P.469
- In Windows, open a command prompt, or in Mac OS, start Terminal.
- 3 Execute the following command to add entries to the ARP table for managing IP addresses and corresponding MAC addresses.

arp -s [IP address] [the printer's MAC address you have verified]

Example: arp -s xxx.xxx.xxx.xxx 00-1E-8F-xx-xx-xx



- In Mac OS when using Terminal, enter the arp command in the format arp -s xxx.xxx.xxx 00:1E: 8F:xx:xxx.xxx. For details, refer to the help file for the command line.
- Execute the following command to send the IP address to the printer and configure it. ping [IP address as specified in the ARP command] -I 479

  Example: ping xxx.xxx.xxx.xxx -I 479



- In -I, the I is the letter I.
- In Mac OS when using Terminal, enter the ping command in the format ping -s 479 xxx.xxx.xxx.xxx. For details, refer to the help file for the command line.




 The subnet mask and default gateway are set to 0.0.0.0. Use RemoteUI to change the subnet mask and default gateway to match your network settings.

For details on RemoteUI, see "Using RemoteUI." →P.486

# **Configuring TCP/IPv6 Network Settings**

When printing in a TCP/IPv6 network, you must configure the TCP/IPv6 settings on the Control Panel. Follow the steps below to configure the TCP/IPv6 network settings.

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Settings/Adj. tab ( ( ).

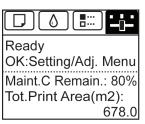



- If the Tab Selection screen is not displayed, press the Menu button.
- Press the **OK** button.
  The **Set./Adi. Menu** is displayed.
- Press ▲ or ▼ to select Interface Setup, and then press the OK button.
- Press ▲ or ▼ to select TCP/IP, and then press the OK button.
- 5 Press ▲ or ▼ to select IPv6, and then press the OK button.
- 6 Press ▲ or ▼ to select IPv6 Support, and then press the OK button.
- 7 Press ▲ or ▼ to select **On**, and then press the **OK** button.



Once you set IPv6 Support to On, the IPv6 StlessAddrs setting takes effect.



You can also configure IPv6 StlessAddrs and DHCPv6 from the printer Control Panel.

# **Configuring the Printer Driver Destination (Windows)**

This topic describes how to specify the printer driver destination if the printer's IP address is changed, or if you will use the printer over a network connection instead of via USB connection.

The procedure described below is the configuration based on the LPR or Raw protocol using the standard TCP/IP port in Windows ( **Standard TCP/IP Port** ).



Note

- If you will use the printer in a TCP/IP network, make sure the printer's IP address is configured correctly.
- Configuring the IP Address on the Printer →P.488
  - This section describes the procedure in Windows 7.
- 1 Open the **Devices and Printers** window.
- Right-click the icon of this printer and choose **Printer Properties** to open the printer properties window.
- Click the **Port** tab to display the **Port** sheet.

491

- 4 Click Add Port to display the Printer Ports dialog box.
- 5 In the Available Port list, select Standard TCP/IP Port.
- Click New Port.

  After the wizard starts, a window is displayed for the Welcome to the Add Standard TCP/IP Printer Port Wizard.
- 7 Click Next.
- In **Printer Name or IP Address**, enter the printer's IP address. If the DNS is configured, you can also enter the DNS Domain Name.
- Follow the instructions on the screen to add a printer port.
- 10 Click Close to close the Printer Ports dialog box.
- 11 Make sure the printer port you added is displayed under **Ports**, and that the port is selected.
- 12 Click Close to close the printer properties window.

## **Configuring the Printer Driver Destination (Mac OS)**

Specify the printer driver destination as follows if the printer's IP address is changed, or if you will use the printer over a network connection instead of via USB connection.

- If you switch to printing in a TCP/IP network, or if the printer's IP address is changed, see "Configuring the Destination in TCP/IP Networks ." →P.496
- If you switch to printing in a Bonjour network, see "Configuring the Destination for Bonjour Network ." →P.496

# Configuring the Printer's TCP/IP Network Settings With RemoteUI

Follow the steps below to configure the TCP/IP network settings.

#### When using an IPv4 IP address

Start the web browser and enter the following URL in the **Location** (or **Address** ) box to display the RemoteUI page.

http://printer IP address or name/

Example: http://xxx.xxx.xxx.xxx/

2 Select Administrator Mode and click Logon.



- If a password has been set on the printer, enter the password.
- Click Network in the Device Manager menu at left to display the Network page.
- 4 Click Edit in the upper-right corner of the TCP/IPv4 group to display the Edit TCP/IP Protocol Settings page.
- **5** Refer to the TCP/IP Settings Items table to complete the settings.

TCP/IP Settings Items

•		
Item	Details	Default Setting
Use DHCP	Activate this setting to use DHCP for configuring the IP address.	Off
Use BOOTP	Activate this setting to use BOOTP for configuring the IP address.	Off

Item	Details	Default Setting
Use RARP	Activate this setting to use RARP for configuring the IP address.	Off
Enable DNS Dynamic Update	Activate this setting to perform DNS server registration automatically.	Off
Use Zeroconf Function	Activate this setting to use Bonjour.	On
IP Address	Specify the printer's IP address.	0.0.0.0
Subnet Mask	Specify the printer's subnet mask.	0.0.0.0
Gateway Address	Specify the printer's default gateway.	0.0.0.0
LPD Printing	Activate this setting to use LDP Printing.	On
IPP Printing	Activate this setting to use IPP Printing.	On
IPP Printer URI	Specify the URI of the printer used for IPP printing using up to 252 characters.	printer
RAW Printing	Activate this setting to use Raw Printing.	On
RAW Mode Bi-direc- tion	Activate this setting to use Raw mode bidirectional communication.	Off
FTP Printing	Activate this setting to use FTP Printing.	On
Use Discovery	Activate this setting to use SLP Discovery function.	On
Scope	Enter the SLP search range.	default
SMTP Server Address	Specify the SMTP server's IP address. You can also specify the SMTP server domain name, if desired.	0.0.0.0
Primary DNS Server Address	Specify the IP address of the primary DNS server.	0.0.0.0
Secondary DNS Server Address	Specify the IP address of the secondary DNS server.	0.0.0.0
DNS Host Name  Specify the printer host name, up to 63 characters (1–63 characters). Use single-byte letters, numbers, and - (hyphens). Do not use numbers or - for the first character or - for the last character.		NB-18GBipxxxxxx
DNS Domain Name	Specify the printer domain name, up to 63 characters. Use single-byte letters, numbers, - (hyphens), and . (periods). Do not use numbers, -, or . for the first character, or - or . for the last character.	blank
Multicast DNS Service Name	Specify the printer's Multicast DNS service name. (1–63 characters) This name will be displayed when Bonjour functions are used.	Canon iPFxxxx (xxxxxx)

6 Click **OK** to display the **Network** page.



- If you specify to configure the IP address using DHCP, BOOTP, or RARP, there must be a server that supports such protocol running in the network.
- If you specify to configure the IP address using DHCP, BOOTP, or RARP, the IP address obtained by this method is used first. If you cannot obtain the IP address, the address specified in **IP Address** is used.
- It takes up to two minutes to determine whether DHCP, BOOTP, or RARP are available. We recommend clearing check boxes of options you will not use.
- If you are using a DNS server, select Enable DNS Dynamic Update and enter the IP Address for DNS servers and DNS domain name in Primary DNS Server Address, Secondary DNS Server Address and DNS Domain Name, respectively.

#### When using an IPv6 IP address

Start the web browser and enter the following URL in the **Location** (or **Address** ) box to display the RemoteUI page.

http://printer IP address or name/ Example: http://xxx.xxx.xxx.xxx/

2 Select Administrator Mode and click Logon.



- If a password has been set on the printer, enter the password.
- 3 Click **Network** in the **Device Manager** menu at left to display the **Network** page.
- 4 Click **Edit** in the upper-right corner of the **TCP/IPv6** group to display the **Edit TCP/IPv6 Protocol Settings** page.
- 5 Refer to the TCP/IPv6 Settings Items table to complete the settings. TCP/IPv6 Settings Items

Item		Details	Default Setting
Use IPv6		Activate to enable IPv6.	Off
Use DHCPv6		Activate when using a DHCPv6 server to acquire the IP address.	Off
Use a stateles	ss address	Activate when using an IPv6-compatible router to acquire the IP address.	On
Use a manual	address	Activate when configuring the IP address manually.	Off
	IP Address	Enter the printer's IP address.	::
	Prefix Length	Enter the IP address prefix length.	
	Default Router Address	Enter the default router address.	::
	Prefix Length	Enter the prefix length of the default router address.	
Primary DNS	Server Address	Specify the IP address of the primary DNS server.	::
Secondary DNS Server Address		Specify the IP address of the secondary DNS server.	::
Use the same name as IPv4	host name and domain	Activate when using the same DNS host and domain names as for IPv4.	Off
	DNS Host Name	Specify the printer host name, up to 63 characters (1–63 characters). Use single-byte letters, numbers, and - (hyphens). Do not use numbers or - for the first character or - for the last character.	NB-18GBip6xxxxxx
	DNS Domain Name	Specify the printer domain name, up to 63 characters. Use single-byte letters, numbers, - (hyphens), and . (periods). Do not use numbers, -, or . for the first character, or - or . for the last character.	blank
Perform dyna addresses	mic updating of stateful	Activate this setting to automatically register the stateful address with the DNS server.	Off
Dynamically of dress	update the stateless ad-	Activate this setting to automatically register the stateless address with the DNS server.	Off
Dynamically update the manual address		Activate this setting to automatically register the manual address with the DNS server.	Off

6 Click **OK** to display the **Network** page.

494

495



 If you are using a DNS server, select Enable DNS Dynamic Update and enter the IP Address for DNS servers and DNS domain name in Primary DNS Server Address, Secondary DNS Server Address and DNS Domain Name, respectively.

# Mac OS Settings

## **Configuring the Destination in TCP/IP Networks**

If you use the printer in a TCP/IP network, register the printer in **Print & Scan** (This is identified as **Printers & Scanners** or **Print & Fax** in other versions of Mac OS.) in the Mac OS **System Preferences**.



For details on how to register a printer using a TCP/IP network, see the OS User Manual.



If you use the printer in a TCP/IP network, make sure the printer's IP address is configured correctly. (See "Configuring the IP Address Using the Printer Control Panel.") >P.488

## **Configuring the Destination for Bonjour Network**

If you use the printer in a network that uses the Bonjour function, register the printer in **Print & Scan** (This is identified as **Printers & Scanners** or **Print & Fax** in other versions of Mac OS.) in the Mac OS **System Preferences**.



For details on how to register a printer using Bonjour, see the OS User Manual.



- Bonjour and IP Print (Auto) do not support printing to a printer on other network groups that require a router for connection. Make sure the computer and printer are on the same network. For information about network settings, ask your network administrator.
- By default, Bonjour is activated on the printer. You can activate or deactivate the Bonjour function or change the printer name by using RemoteUI. For instructions on changing it, see "Using RemoteUI." →P.486

# Other Settings

Specifying Printer-Related Information	497
Configuring the Communication Mode Manually	
Email Notification When Printing is Finished or Errors Occur	499
Initializing the Network Settings	499

# **Specifying Printer-Related Information**

Follow the steps below to specify device information and security settings.

Start the web browser and enter the following URL in the **Location** (or **Address** ) box to display the RemoteUI page.

http://printer IP address or name/ Example: http://xxx.xxx.xxx.xxx/

2 Select Administrator Mode and click Logon.



- If a password has been set on the printer, enter the password.
- 3 Click Information in the Device Manager menu at left to display the Information page.
- To display the relevant settings page, click **Edit** in the upper-right corner of **Device Information** or **Security**, depending on what information you want to specify.

  To change the administrator password, click the **Change Password** button in the **Security** group.
- Refer to the table of settings for device information and security as you complete these settings. Security setting items are displayed when you click the **Change Password** button in the **Security** group.

## Device Information Settings

Item	Details	Default Setting
Device Name	Enter a device name. (0–32 characters)	blank
Location	Enter the location where the device is installed. (0–32 characters)	blank
Administrator	Enter the administrator's name. (0–32 characters)	blank
Phone	Enter the administrator's contact information. (0–32 characters)	blank
Comments(E-mail)	Enter any comments regarding the administrator. (0–32 characters)	blank

#### Security Settings

Item	Details	Default Setting
New Password	Enter the new password. (0-9999999)	blank
Confirm	Enter the new password again to confirm it. (0-9999999)	blank


<sup>\*1:</sup>On the **Security** settings screen, besides entering a password, you can specify other security-related information, such as IP address-based SNMP or TCP usage restrictions, MAC address-based access restrictions, or IPP and FTP authentication settings.

6 Click **OK** to activate the settings.

# **Configuring the Communication Mode Manually**

This topic gives instructions for configuring the communication mode manually.

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Settings/Adj. tab ( ( •• )).

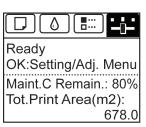



- If the Tab Selection screen is not displayed, press the Menu button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Interface Setup, and then press the OK button.
- Press ▲ or ▼ to select **Ethernet Driver**, and then press the **OK** button.
- 5 Press ▲ or ▼ to select Auto Detect, and then press the OK button.
- 6 Press ▲ or ▼ to select **Off**, and then press the **OK** button. The display reverts to the **Ethernet Driver** menu.
- 7 Press ▲ or ▼ to select Comm.Mode, and then press the OK button.
- Press ▲ or ▼ to select the communication mode, and then press the **OK** button. The display reverts to the **Ethernet Driver** menu.
- Press ▲ or ▼ to select **Ethernet Type**, and then press the **OK** button.
- Press ▲ or ▼ to select the Ethernet type, and then press the **OK** button. The display reverts to the **Ethernet Driver** menu.
- 11 Press ▲ or ▼ to select **Spanning Tree**, and then press the **OK** button.
- Press ▲ or ▼ to enable or disable spanning tree support, and then press the **OK** button. The display reverts to the **Ethernet Driver** menu.
- Press the **Menu** button.


  After the confirmation message is displayed, press the **OK** button.

  The new settings will take effect after the printer restarts.



## **Email Notification When Printing is Finished or Errors Occur**

The printer can notify you of the printer status by email. Even when you are away from the printer, you can know when printing is finished or if errors occur. Receive notification via email on your mobile phone or at your computer.

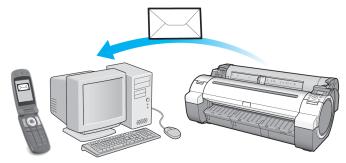

Use the **imagePROGRAF Status Monitor** (Windows) function to set up email recipients and message timing. Besides being informed of finished print jobs or errors, you can also complete settings for email notification when service is needed or it's time to replace consumables. For detailed instructions,see "Specifying Printer-Related Information." >P.497



- For details on email notification using imagePROGRAF Status Monitor (in Windows), refer to the imagePROGRAF Status Monitor help.
- Mail server authentication is only supported with imagePROGRAF Status Monitor.

## **Initializing the Network Settings**

Use RemoteUI to restore the network settings to the default values as follows.



- Initializing the network settings will also restore the default value of the printer's IP address. As a result, the RemoteUI page cannot be displayed in the web browser after this procedure.
- For instructions on reconfiguring the IP address, see "Configuring the IP Address on the Printer." →P.488
- For details on RemoteUI, see "Using RemoteUI." →P.486
- Start the web browser and enter the following URL in the **Location** (or **Address** ) box to display the RemoteUI page.

http://printer IP address or name/ Example: http://xxx.xxx.xxx.xxx/

2 Select Administrator Mode and click Logon.



- If a password has been set on the printer, enter the password.
- Click **Network** in the **Device Manager** menu at left to display the **Network** page.
- 4 Click Reset to Default settings in the lower-right corner of the Network Interface group.
- 5 After confirming the message, click **OK** to restore the network settings to the default values.



• You can also use imagePROGRAF Device Setup Utility or the Control Panel to restore the default network settings.

# **Device Setup Utility (Windows)**

imagePROGRAF Device Setup Utility	500
Installing imagePROGRAF Device Setup Utility	500
Configuring the IP Address Using imagePROGRAF Device Setup Utility	500

## imagePROGRAF Device Setup Utility

**imagePROGRAF Device Setup Utility** is a utility to establish communication between the printer and your computer by completing relevant settings. After the printer is installed, for example, you can use **imagePROGRAF Device Setup Utility** to complete the network settings initially.



- Starting **imagePROGRAF Device Setup Utility** will show a list of printers found on the network. In this list, select the printer (specifically, the printer's MAC address) that you want to set up, and then configure the basic settings from your computer, such as the printer's IP address and the network frame type.
- You can see which printers are online in the network by checking the printer list. Communication between your computer and these printers is possible.



- We recommend that your network or printer administrator complete the setup work using imagePROGRAF Device Setup Utility.
- For details, refer to the imagePROGRAF Device Setup Utility help.

# Installing imagePROGRAF Device Setup Utility

Install imagePROGRAF Device Setup Utility from the User Software CD-ROM provided with the printer as follows:

- 1 Insert the User Software CD-ROM in the CD-ROM drive.
- 2 On the Setup Menu window, click Install Individual Software.
- 3 Click Install in imagePROGRAF Device Setup Utility.
- Follow the instructions on the screen to proceed with the installation.

# Configuring the IP Address Using imagePROGRAF Device Setup Utility

On a computer running Windows, you can use **imagePROGRAF Device Setup Utility** provided with the printer to configure the printer's IP address. This topic describes how to configure the IP address using **imagePROGRAF Device Setup Utility**.



To configure network settings, you must be logged in with administrative rights such as Administrator account. We
recommend that your network administrator configure the network settings.




For instructions on installing imagePROGRAF Device Setup Utility, see "Installing imagePROGRAF Device Setup Utility." →P500

#### When specifying an IPv4 IP address

Start imagePROGRAF Device Setup Utility from the start menu.



- In the Device Name list displayed, select the printer to configure.
- 3 Choose **Protocol Settings** from the **Printer** menu.
- 4 Select the IPv4 tab.

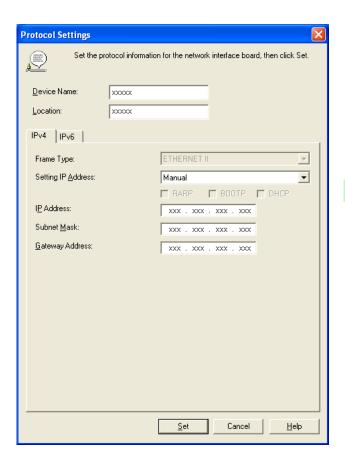

- 5 In the Setting IP Address list, choose Manual.
- 6 Enter the IP address assigned to the printer and click the **Set** button.
- 7 Click **OK** after the **Confirmation** message is displayed.
- 8 Exit imagePROGRAF Device Setup Utility.



- To configure the IP address automatically, choose Auto in the Setting IP Address list and select DHCP, BOOTP, or RARP.
- You can also specify the subnet mask and default gateway.


501

#### When specifying an IPv6 IP address

Start imagePROGRAF Device Setup Utility from the start menu.



- In the Device Name list displayed, select the printer to configure.
- Choose Protocol Settings from the Printer menu.
- 4 Select the IPv6 tab.

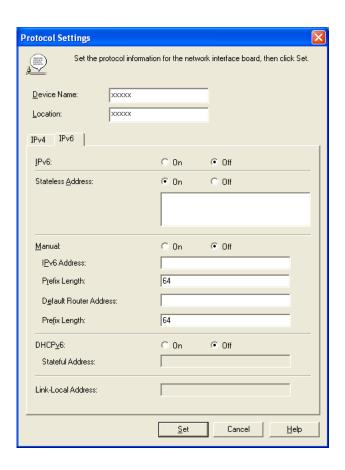

- 5 In IPv6, select On.
- When there is an IPv6-compatible router in the network environment, select **On** in **Stateless Address**. Additionally, when there is an DHCPv6-compatible server in the network environment, select **On** in **DHCPv6**.



- When there is no IPv6-compatible router or DHCPv6-compatible server, select On in Manual and enter the IPv6 Address and Prefix Length.
- 7 Click Set.
- 502 Click **OK** after the **Confirmation** message is displayed.
  - 9 Exit imagePROGRAF Device Setup Utility.

# 1715 S-1357

# iPF680

## User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483

# Print Job Management

Status Monitor (Windows)	504
Printmonitor (Mac OS)	506
Accounting (Windows)	508


Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633


503

# Status Monitor (Windows)

## The Features of imagePROGRAF Status Monitor

imagePROGRAF Status Monitor is a utility for checking the printer status and managing print jobs. Two screens are available in imagePROGRAF Status Monitor: **Printer List** shows a list of printers, and **Status Monitor** shows details for each printer.

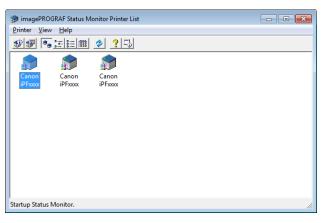

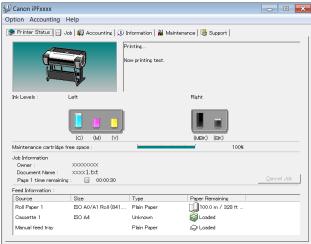

- You can view a list of the printers for which printer drivers have been installed on your computer, printers connected to your computer, and printers found on the network.
- If a printer error occurs, you can investigate the corrective action immediately.
- Printer status can be checked in real time on a computer monitor.
- Displays the ink level of every color in the printer. An icon and warning message will notify you when ink levels are low.
- The type of paper loaded in each media source is identified. You can also check to see if paper has run out.
- This way, the utility enables you to check printer information and take care of printer maintenance for optimal printing results.
- You can also set up automatic email notification of any printer problems or errors to email addresses you designate in advance.
- You can use the Accounting Manager to collect the print job logs for the printers and check information such as the printing costs.

504


For details of the Accounting Manager, see "Accounting Manager." >P.508



• For details, refer to the imagePROGRAF Status Monitor help.

### Job Management Using imagePROGRAF Status Monitor

You can use the **Job** sheet in imagePROGRAF Status Monitor for operations such as pausing and canceling print jobs.

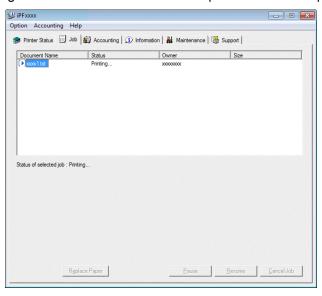

### Pausing/Resuming Print Jobs

Selecting a print job and clicking the **Pause** button pauses printing of the selected job. To resume printing of a paused print job, select the print job and click the **Resume** button.



• Once all the print data for a print job has been sent to the printer, the job can no longer be paused/resumed.

#### Canceling Print Jobs

Selecting a print job and clicking the Cancel Job button cancels printing of the selected job.




You cannot cancel other users' print jobs.

## Printmonitor (Mac OS)

### The Features of imagePROGRAF Printmonitor

imagePROGRAF Printmonitor is a utility for checking the printer status and managing print jobs.

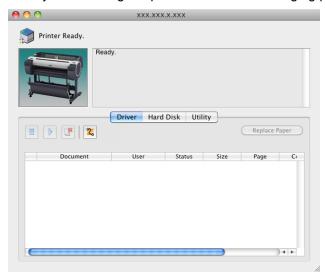

- Printer status can be checked in real time on a computer monitor.
- You can check the status of print jobs, cancel jobs, and manage them as needed.

1. Make sure the printer is on and connected to the network or to a local port.


- If a printer error occurs, you can investigate the corrective action immediately.
- You can also set up automatic email notification of any printer problems or errors to email addresses you designate in advance.



- If the status of the desired printer is not shown in imagePROGRAF Printmonitor, select the printer again as follows.
- Note
- 2. In the **Printer** menu, select the name of the desired printer. After the printer is detected, the printer status is shown.
- **3.** If information about the printer is not shown in step 2, choose **Search Printer** in the **Printer** menu. Printer names listed in the **Printer** menu are updated with the printers that are now detected.
- 4. In the **Printer** menu, select the name of the desired printer. After the printer is detected, the printer status is shown.

### Job Management Using imagePROGRAF Printmonitor

You can use the **Driver** Panel in imagePROGRAF Printmonitor for operations such as pausing and canceling print jobs.

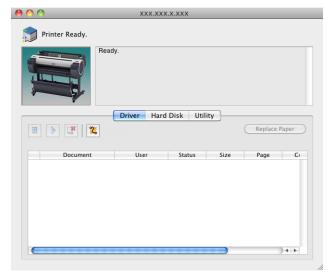

Pausing/Resuming Print Jobs

Selecting a print job and clicking the button pauses printing of the selected job.

To resume printing of a paused print job, select the print job and click the button.



• Once all the print data for a print job has been sent to the printer, the job can no longer be paused/resumed.

Canceling Print Jobs

Selecting a print job and clicking the <a>Image: Button cancels printing of the selected job.</a>



• You cannot cancel other users' print jobs.

## **Accounting (Windows)**

Accounting Manager  Launching the Accounting Manager  Accounting Manager Main Window  Job List Area	508 508 509 511
Accounting Manager Basic Procedures	513
Configuring Unit Costs in Accounting Manager	513
Setting the Unit Cost for Ink	515
Setting the Unit Cost for Items Other Than Ink and Paper	
Configuring Units and Display Settings in Accounting Manager	
Automatically Acquiring Print Job Logs at Regular Intervals	518
Canceling Regular Print Job Log Acquisition	518
Switching Between Displaying Jobs on Printer and Regularly Acquired Jobs	518
Exporting Print Job Data as a CSV File	519
Displaying Job Properties or Period Properties	519
Showing the Total Amount of Ink and Paper Consumed	520

### **Accounting Manager**

The Accounting Manager stores the printer's print job logs so that you can use the information for checking printing costs, etc.

The benefits of using the Accounting Manager are outlined below.

- Print Job Log Collection This allows you to check which documents were printed from each printer, who printed them and when.
- · Calculation of the Total Pages Used and the Total Cost This allows you to use the collected print job logs to calculate totals for items such as the number of pages printed, the amount of paper used and the printing costs incurred.
- Regular Data Acquisition for Print Jobs Job logs can be automatically collected periodically.
- Exporting Print Job Data This allows you to export collected print job data as a CSV file.



- The Accounting Manager in Status Monitor displays approximate estimates of the amount of paper consumed and the ink consumed per job. Canon cannot guarantee the accuracy of these estimates. These estimates will also vary depending on the conditions of printer use.
- Print job log collection is not performed when Set./Adj. Menu -> System Setup -> Show Job Log of the control panel is Off. However,
  - even if Show Job Log is set to Off, regularly acquired jobs that already have been retrieved at that time are dis-
  - When Show Job Log has been set to On again, all jobs within the printer at that time are displayed.

### Launching the Accounting Manager


The procedure for launching the Accounting Manager is shown below.

508

1 Open the imagePROGRAF Status Monitor window.

2

Select **Accounting** in the **Accounting** menu. Or, open the **Accounting** sheet and click the **Accounting** button.

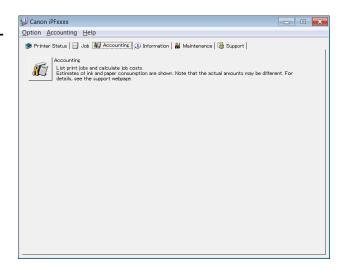



 If Show Job Log is set to off and an administrator password is configured in the printer, the administrator password needs to be entered on startup.


If the password is correct, you are logged on as administrator and Accounting starts. Furthermore, when you exit from Accounting, you can choose to log off as administrator.

- If you log off as administrator, you need to enter the password again the next time it starts.
- The administrator password can be set or cleared using Chg.Admin.Pswd/Init.Admin.Pswd in the Admin. Menu in the Set./Adj. Menu in the printer.

The administrator menu can only be displayed and configured by the administrator.

### **Accounting Manager Main Window**

The Accounting Manager main window consists of a title bar, menu bar, toolbars, listed job selection area, job list area, totals area and status bar.

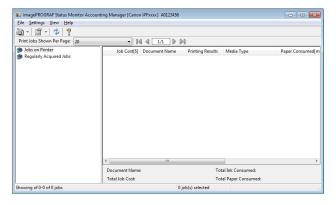

Title Bar

This displays the printer model, its serial number and the port number it is using.

₩ imagePROGRAF Status Monitor Accounting Manager [Canon iPFxxxx] A0123456

Menu Bar

Allows you to select the menu options required for operation.



#### Toolbars

Provide tool buttons and pull-down menus for the main operations.






You can opt to either show or hide the toolbars in the View menu.

#### · Listed Job Selection Area

You can use this area to select which job log is displayed.

If you are using regular data acquisition, this area allows you to view the collective job logs for each specified period.

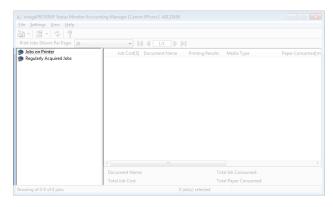


For more information on how to select the job logs displayed, see "Switching Between Displaying Jobs on Printer and Regularly Acquired Jobs." >P.518

### Job List Area

This area lists the details of acquired jobs.

Displays a list of the jobs in the printers or periodically acquired jobs. (See "Job List Area.") → P.511

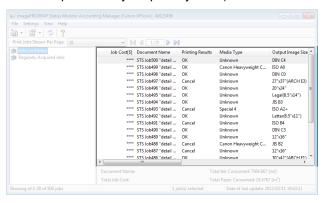




 You can change the items that are displayed and the display order using the Advanced Display Settings dialog box. The Advanced Display Settings dialog box can be displayed by selecting Advanced Display Settings from the Show menu.

#### · Totals Area

Displays the total costs for the selected job and the amounts of paper and ink consumed.

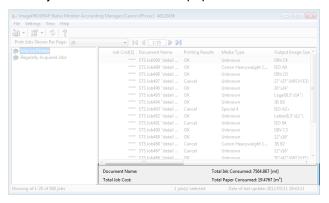




If you are viewing regularly acquired print jobs, selecting a period on the left side of the window displays the total
costs for that period and the amounts of paper and ink consumed.

#### Status Bar

Displays messages and other information.

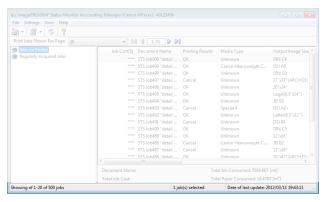

### **Job List Area**

The job items and details that can be displayed in the job list area are as follows.

• No.

The job serial number.

### Job Cost

The cost of printing.



If the ink and paper unit costs are not set, \*\*\*\* is displayed.

#### Document Name

This is the name of the printed document.

### Printing Results

**OK** is displayed when the print process was executed, and **Cancel** is displayed if the print process was not executed.

### Media Type

This is the type of paper used in printing.

### Output Image Size

The size of the image used for printing.



If the job has multiple pages, the size of the last page is displayed.

### Paper Consumed

The area of paper used for printing.



• The Paper Consumed may differ from the product of Paper Width and Paper Length.

### Paper Width

The width of paper used for printing.



• If the job has multiple pages, the width of the last page is displayed.

### Paper Length

The length of paper used for printing.

#### Ink Consumed

The amount of ink used for printing.

#### Owner

The sender of the job.

#### Print Job Start Time/Print Time

The time when printing started and the time taken to print.

### Number of Pages

The number of pages printed.

### Roll Paper Width

The width of roll paper used for printing.

### Paper Cost

The cost of paper used for printing.



• If the paper unit cost is not set, \*\*\*\* is displayed.

#### Total Ink Cost

The total value of the cost of ink used for printing.



• If the ink unit cost is not set, \*\*\*\* is displayed.

#### Total of Other Costs

The total value of costs other than paper and ink.

### Ink Cost Details

The cost of each ink color.

### Ink Consumption Details

The amount of each color of ink used.

### **Accounting Manager Basic Procedures**

The first time you use the Accounting Manager, use the following procedures to configure the settings.

- Configure unit costs, including the costs of ink and paper.

  For details of the unit cost settings, see "Configuring Unit Costs in Accounting Manager." 

  P.513
- Set options such as the units displayed.

  For details of the unit settings, see "Configuring Units and Display Settings in Accounting Manager." →P.517
- If you are using Regular Data Acquisition, configure the Regular Data Acquisition settings.

  For details of the Regular Data Acquisition settings, see "Automatically Acquiring Print Job Logs at Regular Intervals." 

  P.518
- Specify the jobs to be listed.
  For details of how to select the job logs displayed, see "Switching Between Displaying Jobs on Printer and Regularly Acquired Jobs." >P.518

This displays the required print job logs and lists the details.

### **Configuring Unit Costs in Accounting Manager**


Select **Unit Costs** in the **Settings** menu to open the **Unit Costs** dialog box. Configure the unit cost settings in this dialog box.



- When you select a job and then open the Unit Costs dialog box, items with unit costs that have not yet been configured for that job are shown highlighted.
- Setting the Unit Cost for Ink →P.514
- Setting the Unit Cost for Paper →P.515
- Setting the Unit Cost for Items Other Than Ink and Paper →P.516

### **Setting the Unit Cost for Ink**

Open the Ink sheet. Set the unit cost for ink in this sheet.

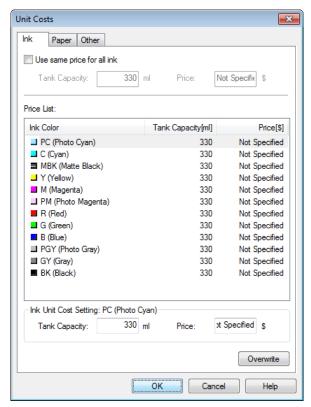

### To set the same unit cost for all the inks

- Select the **Use same price for all ink** checkbox.
- 2 Enter the Tank Capacity and corresponding Price.
- Click the **OK** button.



Your settings are not applied until you click the OK button.

### To set different unit costs for each ink color

- 1 Select the ink color to be costed.
- 2 Enter the Tank Capacity and corresponding Price.
- Click the **Overwrite** button.
- 4 Repeat steps 1 to 3 for all the inks.
- 5 Click the **OK** button.


514



• Your settings are not applied until you click the **OK** button.

### **Setting the Unit Cost for Paper**

Opens the Paper sheet. This sheet is used to configure the unit cost of paper.

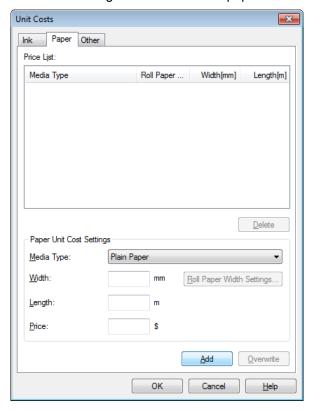

### **Setting Standard Prices**

- Select the media type in Media Type.
- 2 Enter the **Width** and **Length** of the paper, as well as the **Price** for the area of the configured width x height.
- Click the **Add** button. To change the unit cost of a media type that has already been configured, click the **Overwrite** button.
- 4 Click the **OK** button.



The settings are not applied until you click the OK button.


### Specifying Price by Roll Paper

Select the media type in Media Type.



516

Click the Roll Paper Width Settings button to display the Roll Paper Width Settings dialog box.

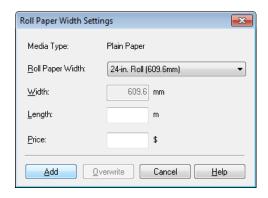


- 3 Enter the Roll Paper Width and Length of the paper, as well as the Price for the configured length.
- Click the Add button to return to the Paper sheet.
- To change the unit cost of a media type that has already been configured, click the **Overwrite** button.
- 6 Click the **OK** button.



- If you do not set the standard prices, you cannot set the price for each roll paper.
- If the Roll Paper Width is set to the same value as the Width of the paper configured in the standard prices, the cost is calculated using the price configured in the Roll Paper Width Settings dialog box.
  - The settings are not applied until you click the **OK** button.

### **Setting the Unit Cost for Items Other Than Ink and Paper**

Open the Other sheet. Use this sheet to set any price for items other than inks and paper.

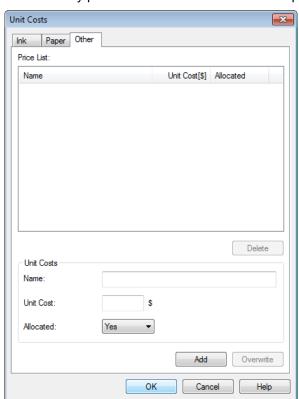

517

- Enter any name in the Name field.
- 2 Enter a value in **Unit Cost**.
- 3 Use **Allocated** to specify whether the costs are allocated as being incurred by the print job.
- Click the **Add** button. To change the unit cost for a media type you have already set, click the **Overwrite** button.
- 5 Click the **OK** button.




Your settings are not applied until you click the OK button.



You can set unit costs for up to 5 items.

### **Configuring Units and Display Settings in Accounting Manager**

Select **Units and Display** in the **Settings** menu to open the **Units and Display** dialog box. Use this dialog box to configure the display settings.

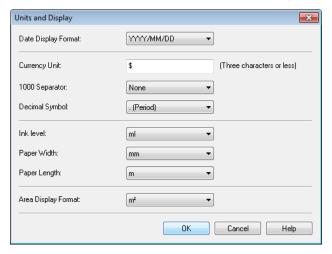

#### Date Display Format

Use this option to select the display format for dates. "YYYY" indicates the year, "MM" the month and "DD" the day.

#### Currency Unit

Enter the currency unit. Enter a text string up to 3 characters long.

### 1000 Separator

Use this option to select the symbol used as a separator in numbers. The symbol is inserted every 3 digits.

#### Decimal Symbol

Use this option to select the symbol used as a decimal point.

#### Ink Consumed

Use this option to select the unit used for ink consumption.

### Paper Width

Use this to select the unit used for paper width.

#### Paper Length

Use this to select the unit used for paper length.

#### Area Display Format

Use this to select the unit used for paper area.

### Automatically Acquiring Print Job Logs at Regular Intervals

This feature collects print job logs from the printer at regular intervals and saves the logs on your computer.

- Select Regular Data Acquisition in the Settings menu.
- Select Acquire print job logs regularly.
- Click the **OK** button to close the dialog box.



 Print job log collection is not performed when Set./Adj. Menu -> System Setup -> Show Job Log of the control panel is Off. However, even if Show Job Log is set to Off, regularly acquired jobs that already have been retrieved at that time are displayed.



- Immediately after you configure Regular Data Acquisition, no print jobs are displayed. Wait a few moments and then select Refresh in the View menu to display the print jobs.
- A maximum of 10,000 records are saved in a print job log. If this number is exceeded, jobs are deleted from the log starting from the oldest record. To save old data, it is recommended that you export the data as a CSV file. For details of how to export print job logs as CSV files, see "Exporting Print Job Data as a CSV File." >P.519

### **Canceling Regular Print Job Log Acquisition**

You can use this procedure to cancel the regular acquisition of print job logs from printers.

- Select Regular Data Acquisition in the Settings menu.
- Uncheck the Acquire print job logs regularly option.
- Click the **OK** button to close the dialog box.

### Switching Between Displaying Jobs on Printer and Regularly Acquired Jobs

The print job logs displayed by the Status Monitor Accounting Manager contain two types of job: Jobs on Printer and Regularly Acquired Jobs.

You can select whether to display Jobs on Printer or Regularly Acquired Jobs in the Listed Job Selection Area on the left side of the window.

#### Jobs on Printer

This shows a list of the print jobs currently held on printers.

You can change the number of jobs displayed per page using the **Print Jobs Shown Per Page** setting in the **View** menu or the toolbar.

You can skip to a particular page using the Go to option in the View menu or the toolbar.



For printers with built-in hard disks, you can view up to 500 print jobs per printer.

Note • For printers without built-in hard disks, you can view up to 32 print jobs per printer. However, only 10 jobs can be displayed if the printer is switched off.

### Regularly Acquired Jobs

This shows a list of regularly acquired print jobs.

To view all the jobs in a set period, specify the period using **Calculate Total for Period** and then **Starting Date** (or **Starting Day of Week** or **Starting Month**) in the **View** menu or the toolbar.

For example, to view monthly job logs starting on the 1st of each month, set Calculate Total for Period to Monthly and set Starting Date to 1.



Up to 10,000 regularly acquired jobs are displayed for each printer.

### **Exporting Print Job Data as a CSV File**

You can export the collected print job data in the form of a CSV file by selecting **Export Job Cost Data** in the **File** menu.



You can also select Export Job Cost Data using the icon in the toolbar.

#### Selected Jobs

Exports the data for the selected print jobs in the job list as a CSV file.



You can select multiple jobs by holding down the Shift key or Ctrl key as you click the job names.

#### Listed Jobs

Exports the data for the print jobs currently displayed in the list as a CSV file.

### **Displaying Job Properties or Period Properties**

You can display the **Job properties** dialog box or **Period Properties** dialog box to check detailed cost information and other items.

The **Job properties** dialog box displays detailed information about the selected job.

The Period Properties dialog box displays detailed information within the Regularly Acquired Jobs period.

#### • Displaying the **Job properties** Dialog Box

Select a job from the job list, and then select **Show Job Properties** from **Job properties** in the **File** menu. You can also select multiple jobs at once.



 You can also display the dialog box by selecting a job, right-clicking it, and then selecting Show Job Properties, or by using the icon in the toolbar.

#### • Displaying the **Period Properties** Dialog Box


Select a period from the **Regularly Acquired Jobs** list, and then select **Show Period Properties** from **Job properties** in the **File** menu. You can also select multiple periods at once.



You can also display the dialog box by selecting and right-clicking a period and then selecting Show Period Properties, or by using the icon in the toolbar.

520

#### • Components of the Job properties Dialog Box/Period Properties Dialog Box

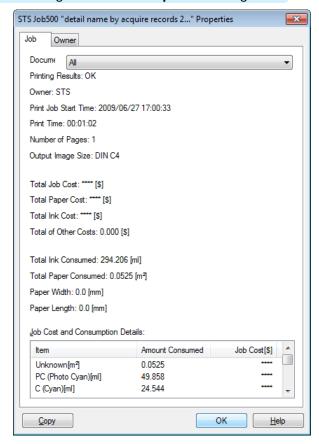

#### Job tab

Displays detailed information about the selected job. You can display detailed information about each job by selecting the corresponding **Document Name**.

- Owner tab
  - You can display detailed information about each owner by selecting the corresponding Owner.
- Copy button

Click this button to copy the displayed text information to the clipboard.

### **Showing, Saving and Loading Selected Unit Cost Data**

Show Unit Cost Data

Select **Show Unit Cost Data** in the **File** menu to open the **Unit Cost Data** dialog box. This lists the unit costs for items such as the selected ink and paper.

You can copy text-based information in this dialog box to the clipboard by clicking the **Copy** button.

Save Unit Cost Data

Select a destination folder using **Save Unit Cost Data** in the **File** menu. The unit cost data for items such as the selected ink and paper is saved as a file.

Load Unit Cost Data

Selecting Load Unit Cost Data in the File menu loads saved unit cost data.

### **Showing the Total Amount of Ink and Paper Consumed**

Select **Show Ink and Paper Consumed** in the **File** menu to open the **Show Ink and Paper Consumed** dialog box. This lists the total amounts of ink and paper consumed by the printer so far.

You can copy text-based information in this dialog box to the clipboard by clicking the Copy button.



• Up to 7 types of media are listed in order of the amount consumed. The total consumption for other media types is shown as **Other**.

# Memo

## iPF680

### User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503

# Adjustments for Better Print Quality

Adjusting the Printhead	524
Adjusting the feed amount	53

Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633

Adjusting the Printhead iPF680

## Adjusting the Printhead

Adjusting the Printhead	524
Adjusting Line Misalignment	527
Troubleshooting Paper Abrasion and Blurry Images	529

### **Adjusting the Printhead**

If printed documents are affected by the following problems, try adjusting the printhead.

- Printing is faint or affected by banding in different colors
   Execute Nozzle Check to check for printhead nozzle clogging.

   For instructions, see "Checking for Nozzle Clogging." 
   P.549
- Printed vertical lines are warped or colors are out of alignment Execute Head Posi. Adj. to adjust the printhead position.

Normally, execute **Auto(Standard)** or **Auto(Advanced)**. However, when using special paper or if printing is not improved after executing **Auto(Advanced)**, try **Manual**.

(See "Automatic Adjustment to Straighten Lines and Colors.") →P.524 (See "Manual Adjustment to Straighten Lines and Colors.") →P.525

· Printed lines are misaligned

Execute **Head Inc. Adj.** to adjust the angle of inclination of the printhead.

Even slight misalignment can be corrected.

(See "Adjusting Line Misalignment.") →P.527

Paper rubs against the printhead, or image edges are blurred
 Executing Head Height to adjust the printhead height may improve printing results.

 (See "Troubleshooting Paper Abrasion and Blurry Images.") →P.529


### **Automatic Adjustment to Straighten Lines and Colors**

If printed vertical lines are warped or colors are out of alignment, execute **Head Posi. Adj.** to adjust the Printhead alignment.

There are two modes for automatic Printhead adjustment: Auto(Standard) and Auto(Advanced).

Auto(Standard) will fix most slight image distortion or color misalignment, but if not, try Auto(Advanced).

Use **Auto(Standard)** or **Auto(Advanced)** to have the printer print and read a test pattern for automatic adjustment of the Printhead.

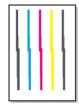





- This function is not available with Tracing Paper, Translucent Matte Film, or Clear Film.
- Important If adjustment is not possible as expected using special media, try another type of paper, or try Manual adjustment. (See "Manual Adjustment to Straighten Lines and Colors.") →P.525



- Because the results of adjustment vary depending on the type of paper used for adjustment, use the same type of paper as you will use for printing.
- Use **Auto(Standard)** if you have switched to another type of paper or if you want the boundaries between colors to appear as clear as possible.
- Use Auto(Advanced) to fine-tune the space between nozzles or colors if you have switched the printhead or if clearer printing is required. We recommend Auto(Advanced) for printing at the highest level of quality.

#### Paper to Prepare


When Using Rolls	An unused roll at least 10 inches wide
When Using Sheets	Auto(Standard): One sheet of unused paper of at least A4/Letter size
	Auto(Advanced): Six sheets of unused paper of at least A4/Letter size (or one sheet when using A2 or larger)

#### Perform adjustment as follows.

- 1 Load the paper.
  - Attaching the Roll Holder to Rolls →P.370
  - Loading Rolls in the Printer →P.373
  - Loading Sheets in the Printer →P.392



- Always make sure the loaded paper matches the type of paper specified on the printer. Adjustment cannot be completed correctly unless the loaded paper matches the settings.
- 2 On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab ( ----).

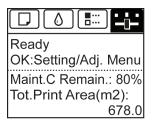



- If the Tab Selection screen is not displayed, press the Menu button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Adjust Printer, and then press the OK button.
- 5 Press ▲ or ▼ to select **Head Posi. Adj.**, and then press the **OK** button.
- 6 Press ▲ or ▼ to select Auto(Standard) or Auto(Advanced), and then press the OK button. A test pattern is printed for adjustment. Adjustment is now finished if you have printed on a roll or a sheet of A2 size or larger.
- If you are printing on sheets smaller than A2 size for **Auto(Advanced)**, a confirmation message is displayed requesting you to continue printing. Press the **OK** button and follow the instructions displayed.

### **Manual Adjustment to Straighten Lines and Colors**

If printed vertical lines are warped or colors are out of alignment, execute **Head Posi. Adj.** to adjust the Printhead alignment.

Normally, execute Standard.

(See "Automatic Adjustment to Straighten Lines and Colors.") →P.524

However, when printing on special paper, or if printing is not improved after **Standard**, try **Manual**. **Manual** adjustment requires you to examine the printed test pattern and enter an adjustment value.







We recommend using the type of paper you use most often for adjustment.

### Items to Prepare

When Using Rolls	An unused roll at least 254.0 mm (10.00 in) wide
When Using Sheets	Two sheets of unused paper, A4/Letter size (or one sheet when using A2)


Perform adjustment as follows.

- 1 Load paper.
  - Attaching the Roll Holder to Rolls →P.370
  - Loading Rolls in the Printer →P.373
  - Loading Sheets in the Printer →P.392



 Always make sure the loaded paper matches the type of paper specified on the printer. Adjustment cannot be completed correctly unless the loaded paper matches the settings.

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Settings/Adj. tab ( ).

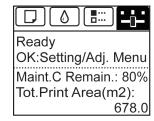




- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Adjust Printer, and then press the OK button.
- Press ▲ or ▼ to select **Head Posi. Adj.**, and then press the **OK** button.
- Press ▲ or ▼ to select Manual, and then press the OK button. A test pattern is printed for adjustment.



- Manual may be unavailable in some cases, even if it is displayed in the menu.
   If so, execute Standard once.
   (See "Automatic Adjustment to Straighten Lines and Colors.") >P.524
- If you printed on cut sheets, follow the instructions on the Display Screen and use another sheet of the same type of paper.

- 7 Press ▲ or ▼ to select **D**, and then press the **OK** button.
- 8 Press ▲ or ▼ to select **D-1**, and then press the **OK** button.
- Examine adjustment test pattern D-1 and determine the number with straight lines.

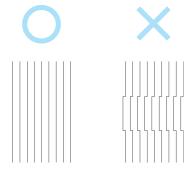



- If two patterns seem equally good and you cannot decide which one is better, choose an intermediate value.
   For example, choose 11 if you cannot decide whether pattern 10 or 12 is better.
- Press ▲ or ▼ to select the pattern number you have decided, and then press the **OK** button.
- Repeat steps 8–10 to specify the adjustment value for **D-2** to **D-17**. Note that **D-6** and **D-12** cannot be configured.
- 12 Press the Back button.
- 13 Press ▲ or ▼ to select Register Setting, and then press the OK button.
- Press ▲ or ▼ to select **Yes**, and then press the **OK** button.

  The adjustment value is now registered, and adjustment is complete.

## **Adjusting Line Misalignment**

If printed lines are misaligned, execute **Head Inc. Adj.** to adjust the angle of inclination of the Printhead. Executing **Head Inc. Adj.** requires you to examine a printed test pattern and enter an adjustment value.

#### Paper to Prepare

•	•
Rolls	An unused roll at least 10 inches wide
Sheets	One sheet of unused paper of at least A4/Letter size


Perform adjustment as follows.

- 1 Load the paper.
  - Attaching the Roll Holder to Rolls →P.370
  - Loading Rolls in the Printer →P.373
  - Loading Sheets in the Printer →P.392



- When loading paper, specify the type of paper correctly. Using paper that you have not specified on the printer may cause feeding problems and affect the printing quality.
- We recommend loading a type of paper that you use often.


On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab ( ( ).

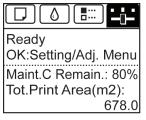




- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Adjust Printer, and then press the OK button.
- Press ▲ or ▼ to select **Head Inc. Adj.**, and then press the **OK** button.

  After the Carriage is moved, a message is displayed requesting you to open the Top Cover.
- 6 Open the Top Cover.

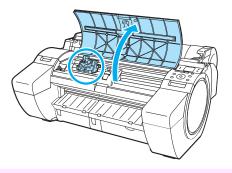




- If you accidentally move the Carriage, you will hear a warning tone. In this case, close the Top Cover.
- 7 Align the Angle Adjustment Lever with the red square and close the Top Cover.

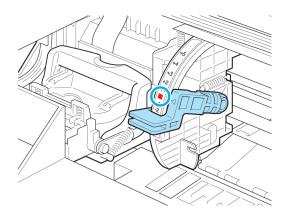

### A test pattern is printed for adjustment.




Do not touch the Linear Scale (a) or Carriage Shaft (b).
 Touching these parts may damage them.

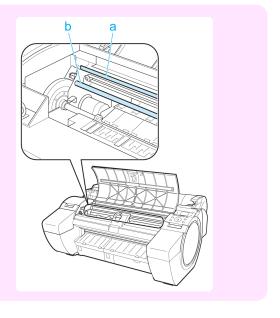

8 Examine the test pattern for adjustment. Determine the straightest set of lines.




Open the Top Cover and move the Angle Adjustment Lever to match the number (or the square) of the straightest set of lines. If no single set of lines is perfectly straight, move the Angle Adjustment Lever to a position between the numbers (or between the number and the square) of the two sets of lines that are least misaligned.

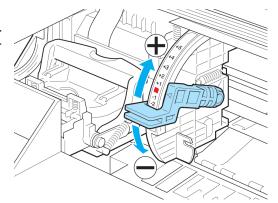

Close the Top Cover.

The Printhead is now straight, and adjustment is complete.

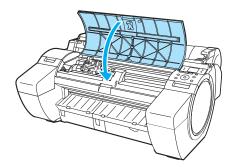

## Troubleshooting Paper Abrasion and Blurry Images

The Printhead height setting affects printing quality.

Specifying a low Printhead height makes images clearer and enhances printing quality but may cause paper to rub against the Printhead.


On the other hand, specifying a high Printhead height will prevent paper from rubbing against the Printhead but may reduce the printing quality.



• Paper rubbing against or becoming caught on the Printhead may jam or result in printed documents that are soiled.



- Raise or lower the printhead, depending on the nature of the problem.
  - (See "Paper rubs against the Printhead.") →P.591
  - (See "The edges of the paper are dirty.") →P.592
  - (See "Image edges are blurred or white banding occurs.") →P.595
- On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Paper tab (□).

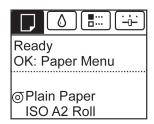




- If the Tab Selection screen is not displayed, press the Menu button.
- Press the **OK** button.
  The **Paper Menu** is displayed.
- Press ▲ or ▼ to select Paper Details, and then press the OK button.
- Press ▲ or ▼ to select the type of paper, and then press the **OK** button.



 When Head Height is set to Automatic, the setting value selected for the previous print job is displayed (to the right of Automatic) once you select the type of paper currently supplied. However, the value is cleared when the printer is turned off or the paper is replaced.

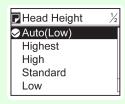

- 5 Press ▲ or ▼ to select **Head Height**, and then press the **OK** button.
- 6 Press ▲ or ▼ to select the desired setting value, and then press the **OK** button.



- Using Automatic will ensure that the printer adjusts the Printhead height to the optimal level before printing, accounting for the ambient temperature and humidity. When a setting other than Automatic is used, that value will always be applied.
- Depending on the type of paper, some setting values may not be available.

## Adjusting the feed amount

Adjusting the Feed Amount	531
Selecting a Feed Amount Adjustment Method	
Automatic Banding Adjustment	
Manual Banding Adjustment	
Fine-Tuning the Paper Feed Amount	
Adjusting Line Length	
A division of the Alexander Character	527
Adjusting the Vacuum Strength	337

### **Adjusting the Feed Amount**

If printed documents are affected by the following problems, try adjusting the feed amount.

- Banding in different colors
- Line length is not accurate in the direction paper is fed

To adjust the feed amount, do the following, in this order.

- Depending on the issue, adjust **Adj. Priority** to suit the particular type of paper. (See "Selecting a Feed Amount Adjustment Method.") →P.531
- Execute Adj. Quality or Adjust Length, depending on the selection in Adj. Priority.

  (See "Automatic Banding Adjustment.") →P.532

  (See "Manual Banding Adjustment.") →P.534

  (See "Adjusting Line Length.") →P.536
- After executing Adj. Quality, execute Adj. Fine Feed for further adjustment as needed. (See "Fine-Tuning the Paper Feed Amount.") >P.535

### **Selecting a Feed Amount Adjustment Method**

Methods of adjusting the amount paper is fed are set in **Adj. Priority**. Adjust **Adj. Priority** to suit your particular printing application.

- Print Quality: Adjusts the feed amount to reduce banding across the sheet in printed documents.
   Adj. Quality settings are applied. When Adj. Fine Feed is executed, the Adj. Fine Feed settings are applied in addition to the Adj. Quality settings.
- **Print Length**: Adjusts the feed amount for better accuracy of lines in printed documents. The settings of **A:High** or **B:Standard/Draft** in **Adjust Length** are applied.
- Automatic: Print Quality or Print Length is selected, depending on Print Priority as selected in the printer driver at the time of printing.

 $\label{lem:lemmage} \textbf{Image} \ \text{or} \ \textbf{Office} \ \textbf{Document} \\ \vdots \ \textbf{Print} \ \textbf{Quality} \ \text{is selected}.$ 


Line Drawing/Text: Print Length is selected.



- Either A:High or B:Standard/Draft in the Adjust Length menu is applied, depending on printer driver settings at the time of printing.
- If you have selected **Easy Settings** in the printer driver, follow these steps to confirm the **Print Priority** setting.
  - Windows: Click View Settings on the Main tab to display the View Settings dialog box.
  - Mac OS: Click View set. on the Main pane to display the View set. dialog box.

Follow these steps to configure the settings.

- 1 Load the paper.
  - Attaching the Roll Holder to Rolls →P.370
  - Loading Rolls in the Printer →P.373
  - Loading Sheets in the Printer →P.392
- 2 On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab ( ( ♣).

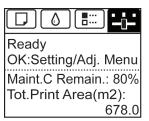



- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Adjust Printer, and then press the OK button.
- 5 Press ▲ or ▼ to select **Feed Priority**, and then press the **OK** button.
- 6 Press ▲ or ▼ to select Adj. Priority, and then press the OK button.
- Press ▲ or ▼ to select Automatic, Print Quality, or Print Length, and then press the OK button.

### **Automatic Banding Adjustment**

If printed images are affected by banding in different colors across the sheet, execute **Adj. Quality** for automatic adjustment of the paper feed amount.

There are two modes of automatic adjustment to correct banding: **Auto(GenuinePpr)** and **Auto(OtherPaper)**. In either mode, the printer prints and reads a test pattern for automatic adjustment of the feed amount.

- Auto(GenuinePpr)
  - Use this mode with paper identified in the **Paper Reference Guide**. (See "Types of Paper.") →P.360
- Auto(OtherPaper)

Use this mode with paper not in the **Paper Reference Guide**, or if **Auto(GenuinePpr)** does not eliminate banding. (See "Types of Paper.") → P.360



- Always check the Adj. Priority values before using Auto(GenuinePpr) or Auto(OtherPaper).
   (See "Selecting a Feed Amount Adjustment Method.") →P.531
- Adjustment is not possible with Auto(GenuinePpr) and Auto(OtherPaper) when using highly transparent media.
   In this case, use Manual adjustment.
   (See "Manual Banding Adjustment.") >P.534
- If additional fine-tuning is necessary after Auto(GenuinePpr) and Auto(OtherPaper), execute Adj. Fine Feed. (See "Fine-Tuning the Paper Feed Amount.") >P.535
- Use **Adjust Length** to ensure that lines in CAD drawings are printed at exactly the right length. (See "Adjusting Line Length.") →P.536
- This may take some time, depending on the type of paper.
- Use paper of the same type and size for adjustment as you will use for printing.

### Items to Prepare


When Using Rolls	An unused roll at least 10 inches wide
When Using Sheets	Auto(GenuinePpr): One sheet of unused paper, A4/Letter size
	Auto(OtherPaper): Two sheets of unused paper, A4/Letter size (or one sheet when using A2)

Perform adjustment as follows.

- 1 Load the paper.
  - Attaching the Roll Holder to Rolls →P.370
  - Loading Rolls in the Printer →P.373
  - Loading Sheets in the Printer →P.392



- Always make sure the loaded paper matches the type of paper specified. Adjustment cannot be completed correctly unless the loaded paper matches the settings.
- On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab ( ).

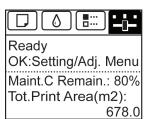



- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Adjust Printer, and then press the OK button.
- 5 Press ▲ or ▼ to select **Feed Priority**, and then press the **OK** button.
- 6 Press ▲ or ▼ to select Adj. Quality, and then press the OK button.
- Press ▲ or ▼ to select Auto(GenuinePpr) or Auto(OtherPaper), and then press the OK button. A test pattern is printed for adjustment.

Adjustment is now finished if you have printed on a roll or a sheet of A2 size or larger.



If you are printing on sheets smaller than A2 size for Auto(OtherPaper), a confirmation message is shown on the Display Screen requesting you to continue printing.

Press the **OK** button and follow the instructions on the Display Screen.

### **Manual Banding Adjustment**

If printed images are affected by banding in different colors, execute Adj. Quality for adjustment of the paper feed amount.

Use Manual adjustment with highly transparent media or other paper for which Auto(GenuinePpr) or Auto(OtherPaper) cannot be used.

(See "Automatic Banding Adjustment.") →P.532

Manual adjustment requires you to enter an adjustment value after a test pattern is printed.



• Use paper of the same type and size for adjustment as you will use for printing.

- Note Always check the Adj. Priority values before using Manual adjustment. (See "Selecting a Feed Amount Adjustment Method.") →P.531
  - If additional fine-tuning is necessary after Manual adjustment, use Adj. Fine Feed (See "Fine-Tuning the Paper Feed Amount.") → P.535
  - Use Adjust Length to ensure that lines in CAD drawings are printed at exactly the right length. (See "Adjusting Line Length.") →P.536

#### Paper to Prepare


When Using Rolls	An unused roll at least 10 inches wide
When Using Sheets	Two sheets of unused paper of at least A4/Letter size

Perform adjustment as follows.

- Load the paper.
  - Attaching the Roll Holder to Rolls →P.370
  - Loading Rolls in the Printer →P.373
  - Loading Sheets in the Printer →P.392



- Always make sure the loaded paper matches the type of paper specified. Adjustment cannot be completed correctly unless the loaded paper matches the settings.
- On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab ( -).

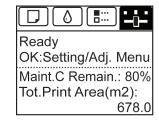




- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button. The Set./Adj. Menu is displayed.
- 534 Press ▲ or ▼ to select **Adjust Printer**, and then press the **OK** button.
  - Press ▲ or ▼ to select **Feed Priority**, and then press the **OK** button.

- 6 Press ▲ or ▼ to select Adj. Quality, and then press the OK button.
- Press ▲ or ▼ to select **Manual**, and then press the **OK** button. Test pattern A is printed for manual adjustment.



• When printing on sheets, follow the instructions on the Display Screen and remove the sheet.

8 Examine test pattern A for adjustment. Determine the pattern in which banding is least noticeable.

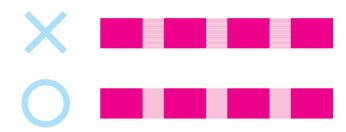



If banding seems least noticeable in two patterns but you cannot decide which one is better, choose an intermediate value.

For example, choose 11 if you cannot decide whether pattern 10 or 12 is better.

Press ▲ or ▼ to select the pattern number you have decided, and then press the **OK** button. Test pattern B is printed for adjustment.



• If you printed test pattern A on a sheet, follow the instructions on the Display Screen and use another sheet of the same type of paper.

Additionally, after test pattern B is printed, follow the instructions on the Display Screen and remove the sheet.

- 10 Examine test pattern B for adjustment. Determine the pattern in which banding is least noticeable.
- Press ▲ or ▼ to select the pattern number you have decided, and then press the **OK** button. The adjustment value is now registered, and adjustment is complete.

### **Fine-Tuning the Paper Feed Amount**


If the contrast is uneven or banding in different colors appears at 50 mm (2.0 in) intervals in printed documents, try executing **Adi. Fine Feed** during printing to fine-tune the feed amount.



- The Adj. Fine Feed menu is only displayed during printing.
   Additionally, it is displayed when you have selected Automatic or Print Quality in Adj. Priority in Feed Priority.
   (See "Menu Settings.") >P.456
- Always execute Adj. Quality before Adj. Fine Feed.
   Once you execute Adj. Quality, the Adj. Fine Feed value will revert to 0.
   (See "Automatic Banding Adjustment.") → P.532
   (See "Manual Banding Adjustment.") → P.534

Perform adjustment as follows.

On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab ( ( ).

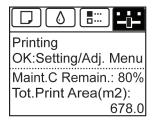



- If the Tab Selection screen is not displayed, press the Menu button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Adj. Fine Feed, and then press the OK button.
- Press ▲ or ▼ to select a setting value in the range -5 to 5, and then press the **OK** button. At this time, if banding in dark colors appears, select a setting value in the range 1 to 5, and if banding in light colors appears, select a setting value in the range -1 to -5.

### **Adjusting Line Length**

To ensure that lines in CAD drawings are printed at exactly the right length, use **Adjust Length** to adjust the amount that paper is advanced.

There are two options in Adjust Length: AdjustmentPrint and Change Settings.

AdjustmentPrint

After a test pattern is printed, you will measure the discrepancy based on the results of printing.

Change Settings

No test pattern is printed. Instead, you will measure a document already printed to determine the discrepancy.

Additionally, two modes are available in both **AdjustmentPrint** and **Change Settings**: **A:High** or **B:Standard/Draft**. Choose the mode that suits your particular printing application.

A:High

This setting is applied when **Highest** or **High** is selected in **Print Quality** in the printer driver.

B:Standard/Draft

This setting is applied when Standard or Fast is selected in Print Quality in the printer driver.



- Always check the Adj. Priority values before using Adjust Length. (See "Selecting a Feed Amount Adjustment Method.") →P.531
- Use paper of the same type and size for adjustment as you will use for printing.

#### Paper to Prepare


When Using Rolls	<ul><li>An unused roll at least 10 inches wide</li><li>High-precision ruler</li></ul>
When Using Sheets	<ul><li>One sheet of unused paper of at least A4/Letter size</li><li>High-precision ruler</li></ul>


Perform adjustment as follows.

- 1 Load the paper.
  - Attaching the Roll Holder to Rolls →P.370
  - Loading Rolls in the Printer →P.373
  - Loading Sheets in the Printer →P.392



Always make sure the loaded paper matches the type of paper specified. Adjustment cannot be completed
correctly unless the loaded paper matches the settings.

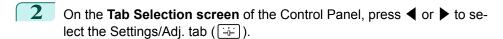

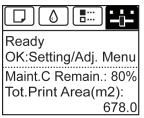




- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Adjust Printer, and then press the OK button.
- 5 Press ▲ or ▼ to select **Feed Priority**, and then press the **OK** button.
- 6 Press ▲ or ▼ to select Adjust Length, and then press the OK button.

meter in 50 mm increments and Inch in 1-inch increments.

Press ▲ or ▼ to select AdjustmentPrint or Change Settings, and then press the OK button.
When you select AdjustmentPrint, a test pattern is printed for you to measure the scale and calculate the discrepancy. The scale bar prints Milli-

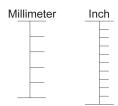



- A test pattern is printed in black when you choose A:High or in magenta if you choose B:Standard/Draft.
- Note To cancel printing the test pattern for adjustment, hold down the **Stop** button. When **"Stop printing?"** is displayed, press ▲ or ▼ to select **Yes**, and then press the **OK** button.
- Press ▲ or ▼ to enter the amount of discrepancy, and then press the **OK** button. If the scale is shorter than the actual size, use a positive setting value. If it is longer, use a negative value. The feed amount can be adjusted in 0.02% increments.

### **Adjusting the Vacuum Strength**

When printing on heavyweight paper or paper that curls or wrinkles easily, if the Printhead rubs against paper, adjusting the level of suction against paper on the Platen may improve results.



- Paper rubbing against or becoming caught on the Printhead may jam or result in printed documents that are soiled.
- On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Paper tab (□).






If the **Tab Selection screen** is not displayed, press the **Menu** button.

- Press the **OK** button.
  The **Paper Menu** is displayed.
- Press ▲ or ▼ to select Paper Details, and then press the OK button.
- Press ▲ or ▼ to select the type of paper, and then press the **OK** button.



When VacuumStrngth is set to Automatic, the setting value selected for the previous print job is displayed (to the right of Automatic) once you select the type of paper currently supplied.

However, the value is cleared when the printer is turned off or the paper is replaced.

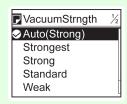

- Press ▲ or ▼ to select **VacuumStrngth**, and then press the **OK** button.
- 6 Press ▲ or ▼ to select the desired setting value, and then press the **OK** button.

### User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523

# Maintenance and Consumables

Ink Tanks	540
Printheads	549
Maintenance Cartridge	558
Cleaning the Printer	564
Other Maintenance	568


Troubleshooting	577
Error Message	607
Specifications	629
Appendix	633


## **Ink Tanks**

Ink Tanks Replacing Ink Tanks Checking Ink Tank Levels	. 540
When to Replace Ink Tanks	

### **Ink Tanks**

When purchasing, check the Model number.

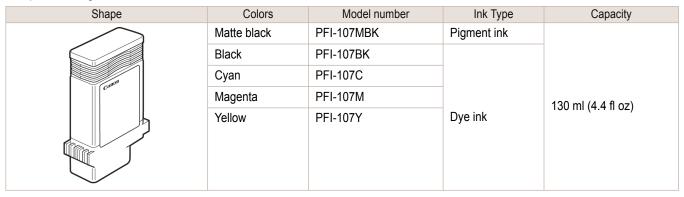

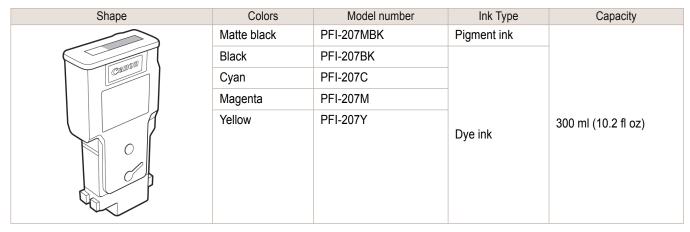



• For instructions on lnk Tank replacement, see "Replacing lnk Tanks." →P.540

## **Replacing Ink Tanks**

### Compatible ink tanks

For information on the compatible ink tanks for this printer, see "Ink Tanks." →P.540 Replacement ink tanks in 130 ml (4.4 fl oz) and 300 ml (10.2 fl oz) capacities are supported.



• Depending on the color, you can also use ink tanks of different capacities.

## Precautions when handling ink tanks

Take the following precautions when handling ink tanks.



- For safety, keep ink tanks out of the reach of children.
- If ink is accidentally ingested, contact a physician immediately.




- There may be ink around the ink supply section of ink tanks you removed. Handle ink tanks carefully during replacement. The ink may stain clothing.
- Do not install used ink tanks in another model of printer.
   This will prevent correct ink level detection, which may damage the printer or cause other problems.
- We recommend using up an Ink Tank in the course of printing within six months after breaking the seal. Printing quality may be affected if you use older ink tanks.
- Do not leave the printer without ink tanks installed for extended periods (a month or more). Residual ink may become clogged inside the printer and affect printing quality.


#### Confirm the message

When the ink level becomes low, a message is displayed on the Display Screen.

According to the message, replace the ink tank or prepare a new ink tank. (See "When to Replace Ink Tanks.") →P.546

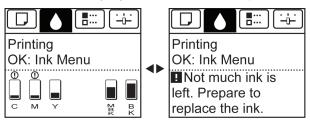

If a message requests you to replace an Ink Tank, press the **OK** button. In this case, you can skip the step **Access the menu for ink tank replacement.** Follow the instructions in **Remove the ink tanks**.

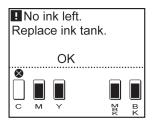



Do not remove an Ink Tank during initialization immediately after turning on the printer, or during printhead cleaning.
 Ink may leak out.




Ink Tank replacement is possible even during printing, when print jobs are being canceled, or when paper is being advanced.

#### Access the menu for Ink Tank replacement



On the **Tab Selection screen** of the Control Panel, press  $\triangleleft$  or  $\triangleright$  to select the lnk tab ( $\lozenge$ ).

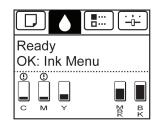


541



- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Ink Menu** is displayed.
- Press ▲ or ▼ to select **Rep. Ink Tank**, and then press the **OK** button. A message on the Display Screen requests you to open the Ink Tank Cover.

#### Remove the Ink Tank


Open the Ink Tank Cover and check the ink lamps. Ink lamps flash when there is little ink left.

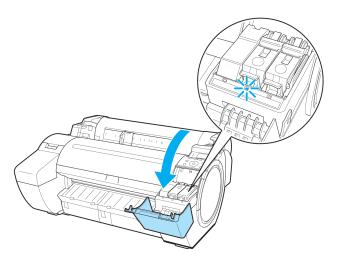

Press the tip of the Ink Tank Lock Lever of the color for replacement horizontally and pull the Ink Tank Lock Lever up to open it.




Hold the lnk Tank by the grips and remove it. Press the **OK** button.

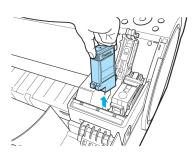



Do not turn off the printer while the Ink Tank is removed.
 It may cause the interior of the Ink Tank Cover to become soiled.

 If there is still ink in the lnk Tank you removed, store it with the ink holes (a) facing up. Otherwise, ink may leak and cause stains. Put the lnk Tank in a plastic bag and seal it.

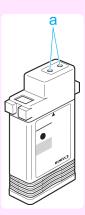




Dispose of used ink tanks according to local regulations.


#### Installing Ink Tanks


Before opening the pouch, gently agitate the lnk Tank once or twice. Agitate the ink in the lnk Tank by slowly rotating the lnk Tank upside-down and right side up repeatedly.

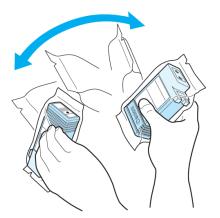

- After installing an ink tank, do not remove and shake it. Doing so may cause the ink to leak out.


Important • If you do not agitate the Ink Tank, the ink may settle, which may affect printing quality.

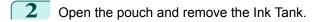


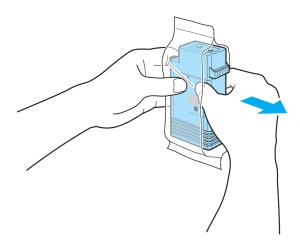



 Never touch the ink holes or electrical contacts. This may cause stains, damage the lnk Tank, and affect printing quality.

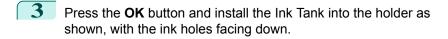

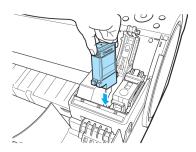





 Ink tanks cannot be installed in the holder if the color or orientation is incorrect.

If the Ink Tank does not fit in the holder, do not force it in. Check the Ink Tank serial number, the Ink Color Label, the color of the Ink Tank, and the orientation of the Ink Tank before reinstalling it

Forcing the Ink Tank into the holder may damage the printer.

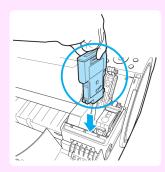


4 Push the lnk Tank Lock Lever closed until it clicks into place.

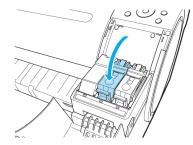




Do not push the lnk Tank in by hand.
 Forcing the lnk Tank into the holder may damage the printer.

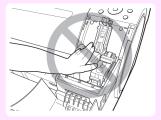


If a 130 ml (4.4 fl oz) ink tank is installed facing the wrong direction, the rotating part of the lnk Tank Lock Lever come out of place.

If this happens, open the lnk Tank Lock Lever to return it to the proper position.

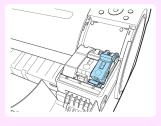



Make sure the Ink Lamp is lit in red.

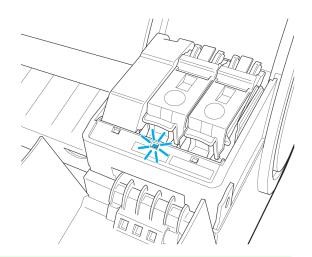




If the lnk Lamp is not lit, reinstall the tank.




Close the Ink Tank Cover.

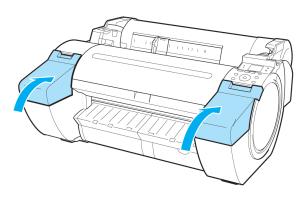

## **Checking Ink Tank Levels**

On the Display Screen, you can check how much ink is left in the ink tanks.

To check remaining lnk Tank levels, access the Tab Selection screen on the Control Panel and press ◀ or ▶ to select the lnk tab ( ( ).

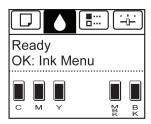



• If the **Tab Selection screen** is not displayed, press the **Menu** button.

- Note If an error has occurred and the **Tab Selection screen** cannot be displayed, display **Ink Info** as follows.
  - Press the **OK** button to display **Printer Info**.
  - 2. Press the ▲ or ▼ button to select Ink Info.
  - 3. Press the **OK** button.

The remaining ink levels shown on the Display Screen correspond to the inks identified by the Color Label on the bottom of the Display Screen.

Maintenance and Consumables

When to Replace Ink Tanks iPF680

These symbols may be displayed above the ink level: ! if ink is low, \* if no ink is left, and ? if you have deactivated ink level detection.

The remaining ink level is indicated as shown below.




If the Display Screen indicates to replace the Ink Tank, replace the Ink Tank. If a message is displayed indicating to check the remaining ink levels, or after tasks that consume a lot of ink such as large-format printing or head cleaning, check the remaining levels and replace Ink Tank as needed. (See "Replacing Ink Tanks.") > P.540

## When to Replace Ink Tanks

Replace or prepare to replace ink tanks in the following situations.


#### If a message for checking the ink is shown on the Display Screen

When there is little ink left, the **Message Lamp** is lit and "**Not much ink is left.**" is shown on the Display Screen. You can continue to print, but prepare to replace the lnk Tank. (See "Checking lnk Tank Levels.") →P.545

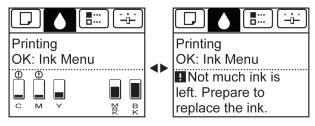

#### Before print jobs and maintenance that consume a lot of ink

If little ink is left, there may not be enough for large-format printing, head cleaning, and maintenance, which require a lot of ink. In this case, replace or prepare to replace the lnk Tank before maintenance.

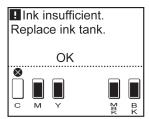

#### If a message for ink replacement is shown on the Display Screen

When ink runs out, the **Message Lamp** flashes, a message regarding lnk Tank replacement is shown on the Display Screen, and printing is disabled. Replace the lnk Tank at this point.



## Attach the Ink Tank Cover to the printer

If too much force is applied to the Ink Tank Cover while it is open, Ink Tank Cover may become detached from the printer.

If the Ink Tank Cover has become detached from the printer, attach it using the following procedure.




 Although the attachment procedure describes the Ink Tank Cover on the right side of the printer, the Ink Tank Cover on the left side can also be attached using the same procedure.







Move the Ink Tank Cover horizontally to align the position with the printer.

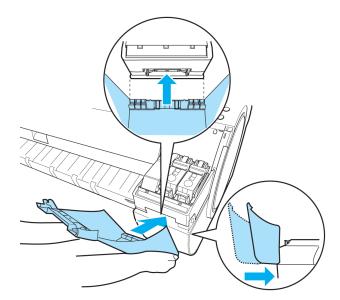


Rotate the Ink Tank Cover and place it on the printer.

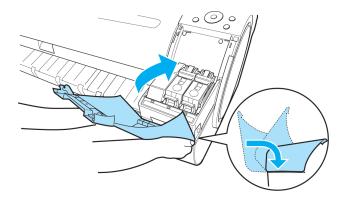

4 Push down on the near side of the lnk Tank Cover from the top until it clicks.

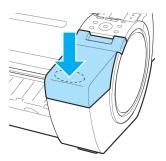

5 Open the Ink Tank Cover and check that it is attached to the printer.

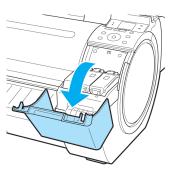


## Printheads

Printhead	549
Checking for Nozzle Clogging	550

## **Printhead**

When purchasing, check the Model number.

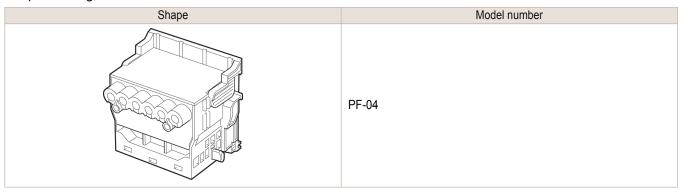



• For instructions on replacing the Printhead, see "Replacing the Printhead." →P.551

## **Checking for Nozzle Clogging**

If printing is faint or affected by banding in different colors, make sure the Printhead nozzles are clear by printing a test pattern to check the nozzles.



Nozzles are periodically checked to ensure they are clear. Configure the settings on the Control Panel menu in Nozzle
 Check. (See "Menu Settings.") → P.456

#### Paper to Prepare

When Using Rolls	An unused roll at least 254.0 mm (10.00 in) wide
When Using Sheets	One sheet of unused paper of at least A4/Letter size


- 1 Load paper.
  - Attaching the Roll Holder to Rolls →P.370
  - Loading Rolls in the Printer →P.373
  - Loading Sheets in the Printer →P.392
- 2 On the **Tab Selection screen** of the Control Panel, press ◀ or ▶ to select the Settings/Adj. tab ( ).





- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- 4 Press ▲ or ▼ to select **Test Print**, and then press the **OK** button.
- Press ▲ or ▼ to select **Nozzle Check**, and then press the **OK** button. The printer now prints a test pattern for checking the nozzles.
- 6 Check the printing results.

  If the horizontal lines are not faint or incomplete, the nozzles are clear.

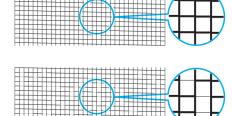

If some sections of the horizontal lines are faint or incomplete, the nozzles for those colors are clogged.

If horizontal lines are faint or incomplete, follow the steps below and check again for nozzle clogging.

- 1. Clean the Printhead. (See "Cleaning the Printhead.") →P.550
- Print a test pattern to check the nozzles.



 If you repeat these steps several times but the horizontal lines are still faint or incomplete, the Printhead may have reached the end of its useful life. Contact your Canon dealer for assistance.

## **Cleaning the Printhead**

If printing is faint, cleaning the Printhead may improve results.

Choose one of two Printhead cleaning modes ( **Head Cleaning A** or **Head Cleaning B** ), depending on the problem to resolve.

#### Head Cleaning A

Use this mode if printing is faint or contains foreign substances. This method of cleaning consumes the least amount of ink.

It takes about three minutes to complete.

#### Head Cleaning B

Use this mode if no ink is ejected at all, or if **Head Cleaning A** does not solve the problem. It takes about three and a half minutes to complete.





- Do not remove the Maintenance Cartridge or ink tanks during either **Head Cleaning A** or **Head Cleaning B**. Ink may leak or an error may occur.
- If printing does not improve even if you execute **Head Cleaning B**, try repeating **Head Cleaning B** once or twice. If this still does not improve printing, the Printhead may have reached the end of its useful life. Contact your Canon dealer for assistance.



By default, nozzles are checked at fixed intervals.
 Configure the settings on the Control Panel menu in Nozzle Check.
 (See "Menu Settings.") →P.456

Perform cleaning as follows.

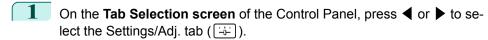

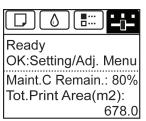



- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Maintenance, and then press the OK button.
- Press ▲ or ▼ to select **Head Cleaning**, and then press the **OK** button.
- Press ▲ or ▼ to select **Head Cleaning A** or **Head Cleaning B**, and then press the **OK** button. Head cleaning is now executed.
- 6 Print a test pattern to check the nozzles, and determine whether cleaning has cleared the nozzles. (See "Checking for Nozzle Clogging.") →P.549

## Replacing the Printhead

#### When to replace the Printhead

Replace the Printhead in the following situations.

- If the printing quality does not improve even after one or two cycles of Head Cleaning B from the printer menu
- If the Display Screen indicates "Open top cover and replace the printhead."
- If your Canon dealer has advised you to replace the Printhead

#### Compatible printheads

For information on compatible printheads, see "Printhead." →P.549

#### Precautions when handling the Printhead

Take the following precautions when handling the Printhead.



- For safety, keep the Printhead out of the reach of children.
- If ink is accidentally ingested, contact a physician immediately.
  - Do not touch the Printhead immediately after printing. The Printhead becomes extremely hot, and there is a risk of burns.



There may be ink around the nozzles of the Printhead you remove. Handle the Printhead carefully during replacement. The ink may stain clothing.

 Do not open the Printhead pouch until immediately before installation. After removing the Printhead from the pouch, install it right away. If the Printhead is left after the pouch is opened, the nozzles may dry out, which may affect printing quality.

#### Access the menu for Printhead replacement




 When replacing the Printhead immediately after printing, wait a few minutes before replacing it. The metal parts of the Printhead become hot during printing, and there is a risk of burns from touching these parts.



 Your hands may become dirty during Printhead replacement. Use the gloves provided with the new Printhead for replacement.



- Prepare a new Ink Tank when ink levels are low.
- When the remaining capacity of Maintenance cartridge is low, prepare a new Maintenance cartridge.
- On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Settings/Adj. tab ( ( ).

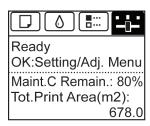




- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Maintenance, and then press the OK button.
- Press ▲ or ▼ to select **Replace P.head**, and then press the **OK** button.

  Ink begins being drawn in. When it finishes, instructions are displayed on the Display Screen. It takes about two minutes to complete.

#### Replace the Printhead


Open the Top Cover.
Instructions are now shown on the Display Screen regarding Printhead replacement.

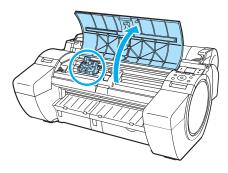




During Printhead replacement, do not move the Carriage from the position indicated. If you accidentally
move the Carriage, you will hear a warning tone, and Printhead replacement is no longer possible.
 If you move the Carriage by mistake, close the Top Cover. The Carriage will be moved to the position as
indicated.

If the Printhead Fixer Cover or Printhead Fixer Lever is dirty, use a damp cloth that you have wrung out completely to wipe it clean.

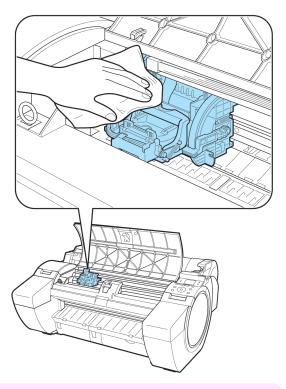





Do not touch the Linear Scale (a) or Carriage Shaft (b).
 Touching these parts may damage them.

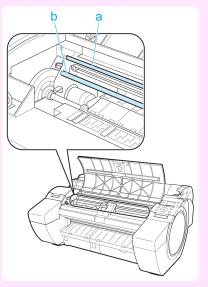


Pull the Printhead Fixer Lever forward all the way to open it completely.

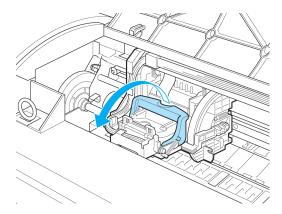

Pull up the Printhead Fixer Cover to open it completely.

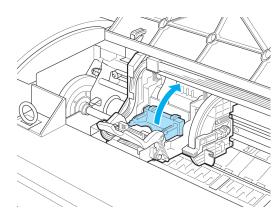

**5** Remove the Printhead and press the **OK** button.

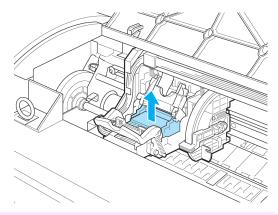




Never touch the metal contacts of the Carriage. Furthermore, do not allow any dirt or debris to become adhered to the metal contacts of the Carriage. These may damage the printer.



• Dispose of the used Printhead in accordance with local regulations.




Holding the new Printhead by the grips (a), remove it from the pouch.

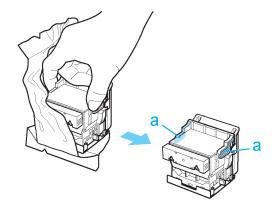




- When handling the Printhead, always hold it by the grips (a). Never touch the nozzles (b) or metal contacts (c). This may damage the Printhead and affect printing quality.
- Never touch the ink supply section (d). This may cause printing problems.

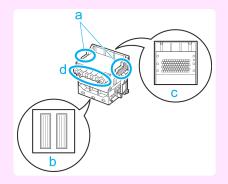


While firmly holding the Printhead you have removed, use your other hand to remove the orange Protective Part (a). Squeeze the grips (c) of Protective Part (b) and pull it down to remove it.

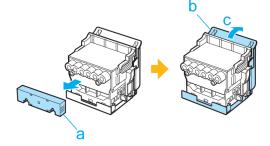




- The inside surface of the Protective Part (a) and Protective Part (b) is coated with ink to protect the nozzles. Be careful not to touch these surfaces when removing the caps.
- The Printhead contains ink to protect the nozzles. We recommend removing Protective Part (b) as you hold it over the Printhead package or safely out of the way to avoid spilling ink and staining your clothes or the surrounding area. If ink accidentally spills, wipe off the ink with a dry cloth.
- If you need to put a Printhead somewhere temporarily before installation, do not keep the nozzles and metal contacts facing down. If the nozzles or metal contacts are damaged, it may affect the printing quality.
- Do not reattach the removed Protective Part. Dispose of these materials in accordance with local regulations.


With the nozzles facing down and the metal contacts toward the back, insert the Printhead into the Carriage. Carefully push the printhead firmly into the Carriage, ensuring that the nozzles and metal contacts do not touch the carriage.

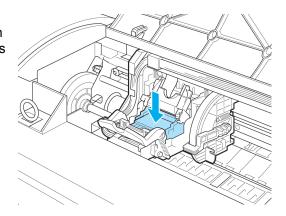


Pull the Printhead Fixer Cover down toward the front to lock the Printhead in place.

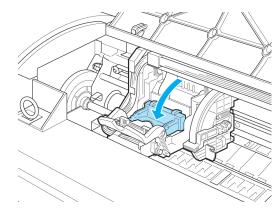

10 Push the Printhead Fixer Lever toward the back of the printer until it clicks.

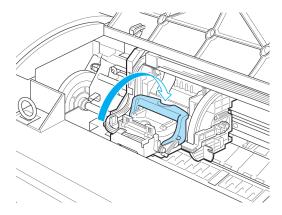

11 Close the Top Cover. Ink now fills the system. It takes about seven minutes to complete.

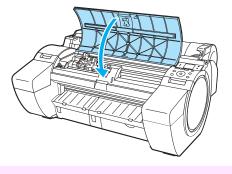

Important

· While ink is being filled, definitely do not remove the Ink Tank or Maintenance Cartridge. Ink may leak out.




After Printhead has been replaced and filled with ink, Head Posi. Adj. (Auto(Advanced)) is performed if you have selected Rep.P.head Print > On in the Control Panel menu. (See "Menu Settings.") →P.456
In this case, follow the instructions on the Display Screen for Printhead adjustment.
If Rep.P.head Print is Off, perform Head Posi. Adj. (Auto(Advanced)) yourself. (See "Automatic Adjustment to Straighten Lines and Colors.") →P.524

## Maintenance Cartridge

Maintenance Cartridge	558
Replacing the Maintenance Cartridge	
Checking the Remaining Maintenance Cartridge Capacity	
When to Replace the Maintenance Cartridge	563

## **Maintenance Cartridge**

When purchasing, check the Model number.

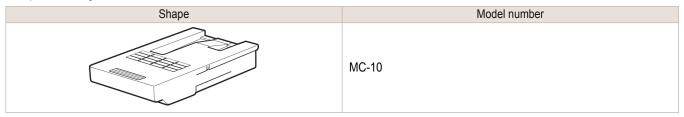



• For instructions on replacing the Maintenance Cartridge, see "Replacing the Maintenance Cartridge." →P.558

## **Replacing the Maintenance Cartridge**

#### Compatible maintenance cartridges

For information on compatible maintenance cartridges, see "Maintenance Cartridge." >P.558

#### Precautions when handling the Maintenance Cartridge

Take the following precautions when handling the Maintenance Cartridge.



- For safety, keep the Maintenance Cartridge out of the reach of children.
- If ink is accidentally ingested, contact a physician immediately.




- Do not remove the Maintenance Cartridge except to replace it. Ink may leak out.
- Do not remove an Maintenance Cartridge during initialization immediately after turning on the printer, during Printhead cleaning, while ink is being drawn out, or during initialization immediately after replacing the Maintenance Cartridge.

The Maintenance Cartridge may become damaged or ink may leak out.


- To prevent ink from leaking from a used Maintenance Cartridge, avoid dropping the cartridge or storing it at an angle. Otherwise, ink may leak and cause stains.
- Ink adheres to the top of the Maintenance Cartridge after it has been used. Handle the Maintenance Cartridge carefully during replacement. The ink may stain clothing.

#### Confirm the message

When the Maintenance Cartridge is almost empty, a message is shown on the Display Screen. According to the message, replace the Maintenance Cartridge or prepare a new Maintenance Cartridge. (See "When to Replace the Maintenance Cartridge.") > P.563

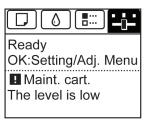


If a message is displayed requesting Maintenance Cartridge replacement, you can skip the step **Access the menu for Maintenance Cartridge replacement**. Follow the instructions in **Replace the Maintenance Cartridge**.

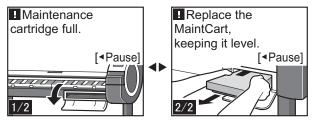

### Access the menu for Maintenance Cartridge replacement

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Settings/Adj. tab ( ).

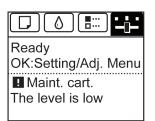




- If the **Tab Selection screen** is not displayed, press the **Menu** button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select **Maintenance**, and then press the **OK** button.
- Press ▲ or ▼ to select **Repl. maint cart**, and then press the **OK** button.

  A message on the Display Screen advises you to open the Maintenance Cartridge Cover.


### Replace the Maintenance Cartridge

Open the box, remove the plastic bag and packaging material, and take out the Maintenance Cartridge.

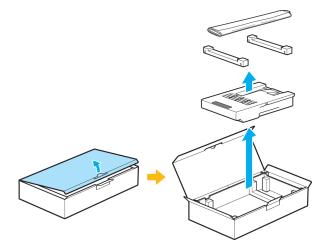





 Never touch the metal contacts (a). This may damage the Maintenance Cartridge.

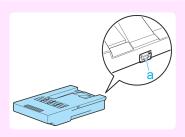

At this point, open the Maintenance Cartridge Cover.

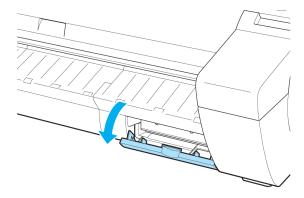


Hold the used Maintenance Cartridge by the grip (a) with one hand and put your other hand under the Maintenance Cartridge to hold it firmly on the bottom, keeping it level as you pull it out.

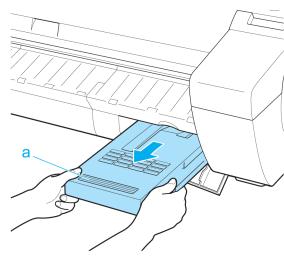




- Used Maintenance Cartridges are heavy. Always grasp the cartridge firmly and keep the cartridge level during removal and storage. If you drop a used Maintenance Cartridge or store it at an angle, ink may leak and cause stains.
- The remaining Maintenance Cartridge capacity is recorded on each printer. Do not install a used Maintenance Cartridge in another printer.
- 4 Keep the used Maintenance Cartridge level as you put it in the plastic bag. Expel excess air from the plastic bag and seal the zipper.

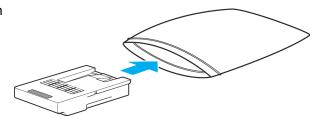

5 Confirm the Maintenance Cartridge is right-side up, put it in the box with the packaging material attached, and store it so that it stays level.

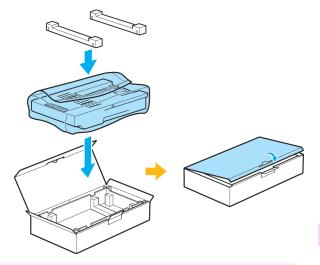




• Always put the used Maintenance Cartridge back in the box and store the box on a flat surface. Also, seal the zipper thoroughly. Otherwise, ink may leak and cause stains.



- Put the used Maintenance Cartridge in the plastic bag of the new cartridge, and dispose of it in accordance with local regulations.
- Keeping the new Maintenance Cartridge level, insert it all the way in.

  The printer now initializes the Maintenance Cartridge.

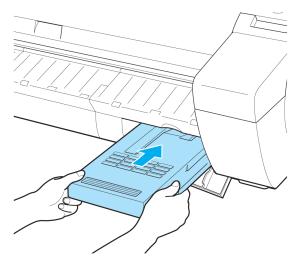




 Do not remove the Maintenance Cartridge during initialization immediately after replacing the Maintenance Cartridge. The Maintenance Cartridge may become damaged.



Close the Maintenance Cartridge Cover.

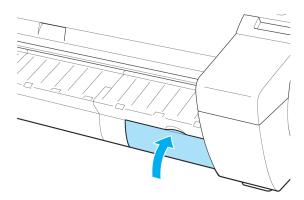



If you did not perform the operation in Access the menu for Maintenance Cartridge replacement, this is the end of the procedure and you do not need to press the **OK** key in the next step.



8 Press the **OK** button.




## **Checking the Remaining Maintenance Cartridge Capacity**

The Maintenance Cartridge absorbs excess ink from borderless printing, printhead cleaning, and other processes. You can confirm the remaining capacity of the Maintenance Cartridge by checking the Maintenance Cartridge capacity shown on the Display Screen.

To check remaining Maintenance Cartridge capacity, access the Tab Selection screen on the Control Panel and press ✓ or 

✓ to select the Settings/Adj. tab (

——).

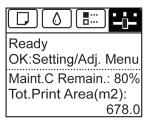



If the Tab Selection screen is not displayed, press the Menu button.

If the Display Screen indicates to replace the Maintenance Cartridge, replace the Maintenance Cartridge. If a message is displayed indicating to check the remaining capacity of the Maintenance Cartridge, or before tasks that deplete much of the capacity such as head cleaning or preparations to move the printer, check the remaining Maintenance Cartridge capacity and prepare a new Maintenance Cartridge as needed. (See "Replacing the Maintenance Cartridge.") → P.558


## When to Replace the Maintenance Cartridge

Replace or prepare to replace the Maintenance Cartridge in the following situations.

#### If a message for checking the Maintenance Cartridge is shown on the Display Screen


When the Maintenance Cartridge is almost full, the **Message Lamp** is lit and "**The level is low**" is shown on the Display Screen. You can continue to print, but check the remaining Maintenance Cartridge capacity and prepare to replace the Maintenance Cartridge with a new one. (See "Checking the Remaining Maintenance Cartridge Capacity.") 

RESERVITED RESERVITED

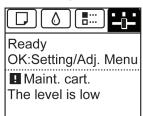


#### When much of the Maintenance Cartridge capacity is depleted

Printhead cleaning, Printhead replacement, and preparations to transfer the printer deplete much of the Maintenance Cartridge capacity. (In particular, preparing to move the printer depletes a lot of the capacity.) Check the remaining Maintenance Cartridge capacity before this maintenance and replace the Maintenance Cartridge if necessary.

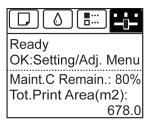

#### If a message for the Maintenance Cartridge replacement is shown on the Display Screen

When the Maintenance Cartridge is full, the **Message Lamp** flashes and a message to replace the Maintenance Cartridge is shown on the Display Screen. Printing is disabled, and you cannot replace the Printhead or transfer the printer. Replace the Maintenance Cartridge with a new one.

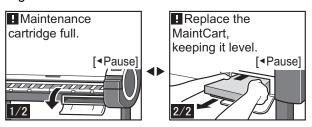

## Cleaning the Printer

Cleaning the Printer Exterior	564
Cleaning Inside the Top Cover	
Cleaning the Printhead	550


## **Cleaning the Printer Exterior**

Clean the printer regularly to maintain better printing quality and help prevent problems. To ensure a comfortable working environment, clean the printer exterior about once a month.

- Turn the printer off. (See "Turning the Printer On and Off.") →P.17
- Unplug the power cord from the outlet.



- Always turn off the printer and unplug the power cord before cleaning or maintenance. Accidentally leaving
  the printer on poses a risk of injury if you touch moving parts inside the printer.
- Using a damp cloth that you have wrung out completely, wipe the exterior surfaces of the printer. Dry the surfaces with a dry cloth.

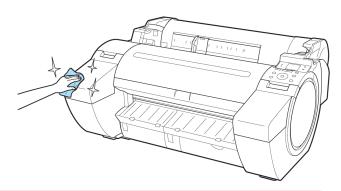



Never use flammable solvents such as alcohol, benzene, or thinner. If these substances come into contact
with electrical components inside the printer, there is a risk of fire or electrical shock.



- If the Ejection Guide is dirty, it may soil the edge of the paper when the paper is cut. We recommend cleaning the Ejection Guide even if it does not appear dirty, because it may actually be covered with paper dust.
   (See "Cleaning Inside the Top Cover.") → P.564
- 4 Plug the power cord into the outlet.


## **Cleaning Inside the Top Cover**

Clean inside the Top Cover about once a month to maintain better printing quality and help prevent problems. Also clean inside the Top Cover in the following situations to ensure optimal operation.


- · If the printed surface or the underside of paper is dirty after printing
- · After you have used up a roll
- · After borderless printing
- After printing on small paper
- After printing on paper that generates a lot of cutting debris
- · If you have replaced the roll
- After printing on paper that generates a lot of paper dust
- · After printing on adhesive paper



- If the Platen inside the Top Cover becomes dirty, it may soil the underside of paper. We recommend cleaning the Platen after borderless printing or printing on small paper.
- If the Ejection Guide is dirty, it may soil the edge of the paper when the paper is cut. We recommend cleaning the Ejection Guide even if it does not appear dirty, because it may actually be covered with paper dust.
- Printing on adhesive paper may leave adhesive on the Platen, Paper Retainer, or other parts. To prevent paper jams, we recommend cleaning inside the Top Cover after printing.
- 1 Open the Top Cover.

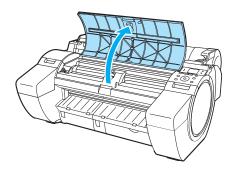

If paper dust has accumulated in the Vacuum holes (a) on the Platen or in the Borderless Printing Ink Grooves (b), use the Cleaning Brush (c), provided with the printer, to wipe it away.

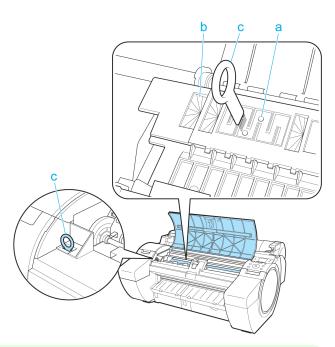




• If the Cleaning Brush is dirty, rinse it in water.



Using a damp cloth that you have wrung out completely, wipe inside the Top Cover to clean it. Wipe away any ink residue on the Platen as a whole (a), the Paper Retainer (b), Borderless Printing Ink Grooves (c), and Ejection Guide (d).

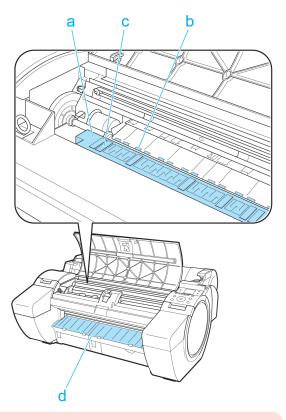




• Never use flammable solvents such as alcohol, benzene, or thinner. If these substances come into contact with electrical components inside the printer, there is a risk of fire or electrical shock.




- Do not use a dry cloth to wipe inside the Top Cover. This may create a static charge, which may attract dust and affect the printing quality.
- Do not touch the Linear Scale (a) or Carriage Shaft (b). This may stain your hands and damage the printer.

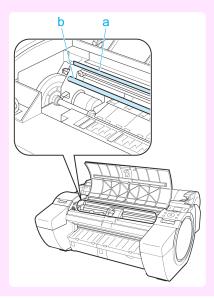




 When cleaning between the Platen and Ejection Guide, use a damp cloth that you have wrung out completely to wipe over the Output Tray and along grooves.

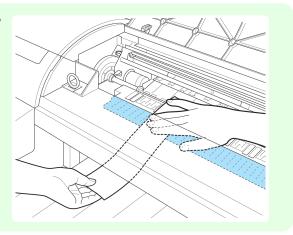

4 Close the Top Cover.

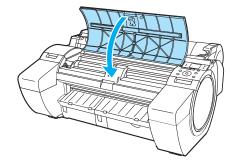

## Other Maintenance

Preparing to Transfer the Printer	. 568
Reinstalling the Printer	
Updating the Firmware	. 575

## **Preparing to Transfer the Printer**

To protect the internal parts in transit, always follow these steps before transferring the printer to a new location. Refer to the Setup Guide for details on packing the printer and installing it after transfer.



Avoid tilting the printer excessively in transit. This may cause ink in the printer to leak and cause stains.



- When you execute prepare to transfer, ink is drawn into the Maintenance Cartridge. Depending on the amount of free space in the mounted Maintenance Cartridge, you may need to replace it with a new one at this time.
   Note that replacement is not required if there is 80% or more free space. (See "Checking the Remaining Maintenance Cartridge Capacity.") >P.562
- Depending on the state of the printer, part replacement may be necessary when preparing to transfer the printer (that is, when you execute the printer menu item to prepare for transfer).

#### Remove paper


- 1 Remove the paper.
  - Rolls (See "Removing the Roll from the Printer.") →P.378
  - Sheets (See "Removing Sheets.") →P.397

## Access the Prep.MovePrinter menu

If a message instructing you to replace the Maintenance Cartridge is displayed on the Display Screen, replace the Maintenance Cartridge.

(See "Replacing the Maintenance Cartridge.") →P.558

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Settings/Adj. tab ( ( ••• )).

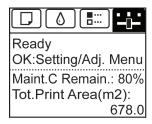



- If the Tab Selection screen is not displayed, press the Menu button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select Prep.MovePrinter, and then press the OK button.

**5** P

Press  $\blacktriangle$  or  $\blacktriangledown$  to select **Standard** or **Limited**, and then press the **OK** button. Displays the confirmation screen.



- If Limited is selected, do not transport in low temperature environments. The ink remaining in the printer
  may freeze and damage the printer.
- Press ▲ or ▼ to select Yes (or Execute if Limited is selected), and then press the OK button.

  Ink is now drawn into the Maintenance Cartridge.


  Once preparations are finished, a message on the Display Screen requests you to open the Ink Tank Cover.




- Do not remove the Maintenance Cartridge except when the message for replacing it is displayed. If you remove the Maintenance Cartridge while ink is being drawn out, the ink may leak out.
- If consumables must be replaced, the message "Consumables must be replaced. Call for service." is shown on the Display Screen and preparation is not possible. If this message is displayed, press the OK button and contact your Canon dealer for assistance.

#### Remove the Ink Tank


1 Open the lnk Tank Cover.

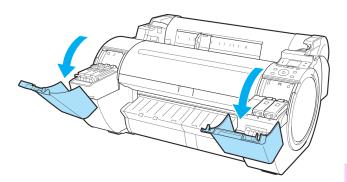

Pressing the tip of the lnk Tank Lock Lever horizontally, lift the lnk Tank Lock Lever to release the lock.

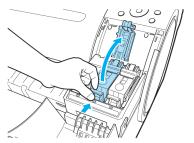


Holding the ink tanks by the grips, remove them.

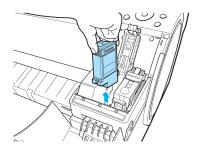





• Store the ink tanks you removed with the ink holes (a) facing up. Otherwise, ink may leak and cause stains.

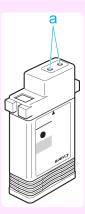


4 Repeat steps 2 and 3 to remove all ink tanks.

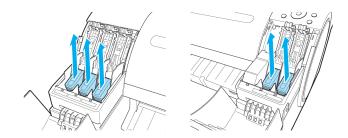

5 Push all ink tank lock levers closed until they click into place.

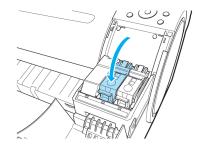

6 Close the Ink Tank Cover.
Ink is now drawn into the Maintenance Cartridge.

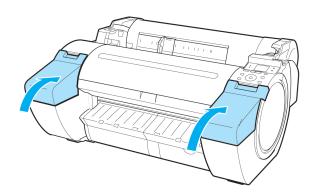



- Do not remove the Maintenance Cartridge except when the message for replacing it is displayed. If you remove the Maintenance Cartridge while ink is being drawn out, the ink may leak out.
- When the processing is complete, "Completed! Turn Power Off!!" is displayed. Press the Power button to turn the power off.




#### Pack the printer

Disconnect the power cord and interface cable.



- Turn off the printer before you unplug it. It may damage the printer if you unplug it before it is off and transfer
  it in that state. If you accidentally unplug the printer, plug it in again, reinstall the ink tanks, and follow this
  procedure again.
- Tape down printer covers to secure them, in the reverse order of tape removal during installation.

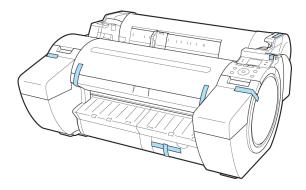


- Remove the Stand by reversing the installation procedure, when it was attached to the printer.
- 4 Disassemble and repackage the Stand by following the installation procedure in reverse.
- Repack the Roll Holder, Holder Stopper, and printer in shipping materials, and then package them in a shipping box.

## **Reinstalling the Printer**

The basic workflow for reinstalling the printer is as follows. For detailed instructions, see the Setup Guide.

#### Assemble the stand (optional)


If you are using the optional Stand, assemble the Stand by referring to the Printer Stand Setup Guide included with the Stand.

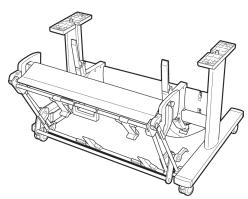



• The Stand must be assembled by at least two people on a flat surface. Attempting assembly by yourself poses a risk of injury or bending the Stand.


- When assembling the Stand, lock all four of the casters. Attempting to move the stand when the casters are not locked poses a risk of injury or damage to the location site.
- Before moving the assembled stand, lift the support rod to the position shown (a) and unlock all four casters. Moving the stand with the support rod lowered or the casters locked may cause injury or damage the area of installation or basket cloth.

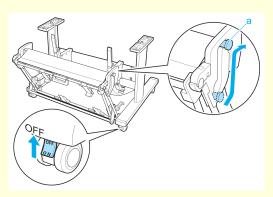

## Install the printer




Install the printer on a table or other flat surface. If you will use the printer on an optional Stand, assemble the Stand before mounting the printer on it, and then secure it with the Main Unit Securing Bolts.

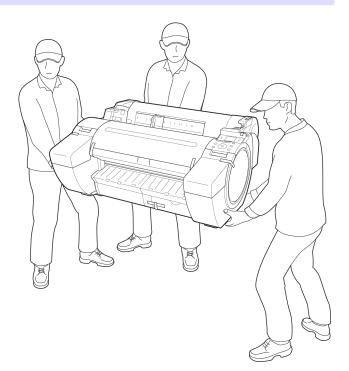


Reinstalling the Printer




- Moving the printer requires at least three people. Be careful to avoid back strain and other injuries.
- When moving the printer, firmly grasp the Carrying Handles. The printer may be unsteady if you hold it at other positions, which poses a risk of injury from dropping the printer.

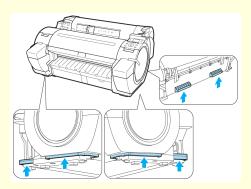

- When placing the printer on the Stand, lock all four of the casters of the Stand. Attempting to place the printer on the Stand while the casters are not locked poses a risk of injury.
- 2 Remove tape and packaging material attached to the printer.

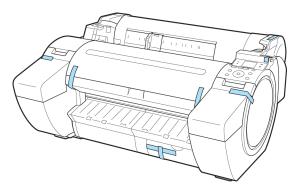


Connect the power cord to the Power Supply Connector on the right side of the printer.

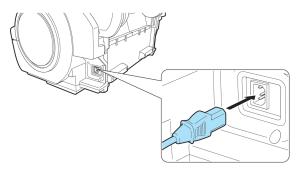

- 4 Plug the power cord into the outlet.
- Press the power button to turn the printer on. Instructions are displayed on the Display Screen.




6 Open the Ink Tank Cover and install the ink tanks.

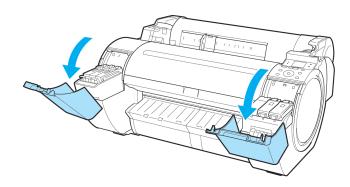


Load the Roll Media on the Roll Holder.

(See "Attaching the Roll Holder to Rolls.") →P.370

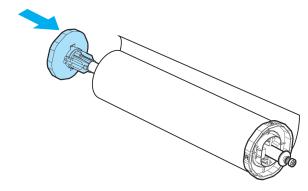

Load the Roll Media in the printer.
(See "Loading Rolls in the Printer.") →P373

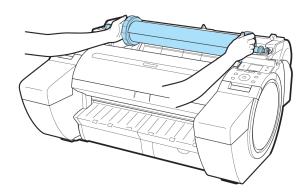

Install the software.

Note that the driver installation procedure varies depending on the type of connection.



• When the printer is connected to a network (via TCP/IP), the printer's IP address may be changed if you reinstall the printer.


In this case, be sure to reconfigure the printer's IP address.

## **Updating the Firmware**

Update the printer firmware to take advantage of new and improved printer functions.

#### Confirming the firmware version

On the **Tab Selection screen** of the Control Panel, press **◄** or **▶** to select the Settings/Adj. tab ( ( ).

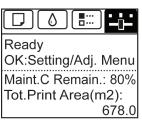



- If the Tab Selection screen is not displayed, press the Menu button.
- Press the **OK** button.
  The **Set./Adj. Menu** is displayed.
- Press ▲ or ▼ to select **Printer Info**, and then press the **OK** button.
- Press ▲ or ▼ to select **System Info**, and then press the **OK** button. The firmware version is displayed.

#### Updating the Firmware

To obtain the latest firmware, visit the Canon website. If the firmware available online is newer than the installed firmware, update the printer firmware. For details on downloading and updating the firmware, visit the Canon website.

# Memo

# Troubleshooting

# iPF680

User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539

# Troubleshooting

Frequently Asked Questions5	578
Problems Regarding Paper5	579
Printing does not start5	589
The printer stops during a print job5	590
Problems with the printing quality5	591
Cannot print over a network5	598
Installation problems5	599
HP-GL/2 problems6	501
Other problems 6	503

Error Message	607
Specifications	629
Appendix	633

# Frequently Asked Questions

#### **Frequently Asked Questions**

This section presents frequently asked questions and answers. To view more detailed explanations, click the hyperlinks in the answer column.

Question	Answer
I want to easily create vertical or horizontal banners.	You can print originals that are in landscape (or portrait) orientation automatically enlarged to fit the roll width. This is an easy way to create vertical or horizontal banners.  (See "Printing Vertical or Horizontal Banners (Large-Format Printing).") →P.97
Does this printer support sub-ink tank system?	This printer supports sub-ink tank system.  Even if an ink tank becomes empty during printing, since a certain amount of ink always is stored in a sub-ink tank, you can replace the ink tank while printing.  (See "Replacing Ink Tanks.")   P.540
I want to know how to configure roll cutting.	You can select the cutting method by the setting of the printer driver and the setting of the printer.  To cut rolls automatically after printing, set <b>Cutting Mode</b> of the printer to <b>Automatic</b> and <b>Automatic Cutting</b> of the printer driver to <b>Yes</b> .  When using paper for which ink adhesion takes time or the print surface is easily scratched, we recommend that you set the <b>Cutting Mode</b> setting of the printer to <b>Eject</b> .  (See "Specifying the Cutting Method for Rolls.") >P.386  (See "Cutting Roll Paper After Printing.") >P.152
I want to configure so that the roll is cut automatical- ly after waiting for the ink to dry.	In the printer driver, you can set the time for waiting until the ink dries.  Also, you can set likewise on the printer.  (See "Specifying the Ink Drying Time for Rolls.") → P.383  (See "Menu Structure.") → P.450
How do I print without borders?	When printing on rolls, you can perform borderless printing by configuring the printer driver. (when printing on cut sheets, you cannot perform borderless printing) (See "Borderless Printing on Paper of Equivalent Size.") →P.87 (See "Borderless Printing by Resizing Originals to Fit the Roll Width.") →P.90 (See "Borderless Printing at Actual Size.") →P.80
I want to know the paper types that can be used in this printer.	Concerning the paper that can be used in this printer, refer to the imagePROGRAF home page or the <b>Paper Reference Guide</b> .  (See "Displaying the Paper Reference Guide.") >P.363
The paper type that I want to print is not displayed on the Display Screen.	When using newly released paper, paper information must be registered on the printer and the printer driver. Download the new version of <b>Media Information File</b> from the imagePROGRAF website and install it. (See "Updating paper information.") →P366
Can I perform duplex printing?	This printer cannot perform duplex printing.  If you use the <b>Folded Duplex</b> function in the Free Layout of Windows software, you can print two pages one-sided, fold them at the center and suspend them to substitute for duplex printing.  (See "Prints using Folded Duplex (Windows).") → P.223
I want to perform enlargement printing.	With the printer driver, you can specify the ratio matching the document with the paper size and width and perform enlargement printing or reduction printing.  (See "Resizing Originals to Match the Paper Size.") → P.65  (See "Resizing Originals to Fit the Roll Width.") → P.67  (See "Resizing Originals by Entering a Scaling Value.") → P.71


# **Problems Regarding Paper**

Clearing Jammed Roll Paper Clearing a Jammed Sheet Clearing Jammed Paper (Paper Feed Slot)	. 579 . 582 . 585
Roll paper cannot be inserted into the Paper Feed Slot	
Paper is not cut neatly	
Depression on the leading edge is left	. 588
The size of clear film cannot be detected	

### **Clearing Jammed Roll Paper**


If paper from a roll becomes jammed, "Paper jam." is shown on the Display Screen of the Control Panel. Remove the jammed paper as follows.

Positioning your hands as shown, open the Roll Cover.

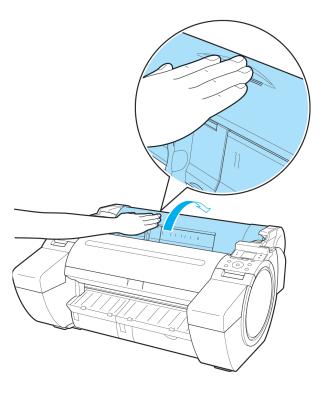




2 Cut the loaded roll paper with regular scissors or the like.

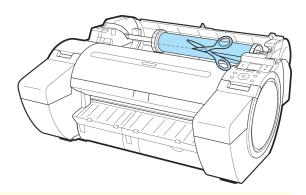




- When cutting paper, be careful to avoid injury or damage to the printer.
- Push the Release Lever back.

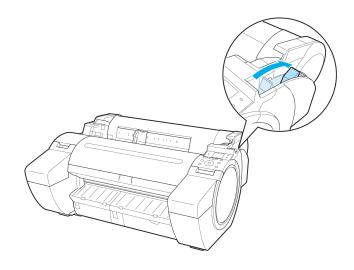


- Remove the jammed paper.
  - If paper is jammed inside the Top Cover
    - 1. Open the Top Cover and move the Carriage to the left or right side manually, away from the jam.

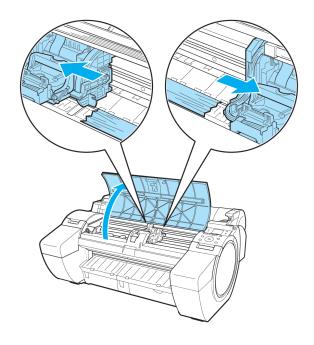


- Do not move the Carriage over jammed paper. This may damage the Printhead.
- 2. Clear any jammed paper from inside the Top Cover.

  After removing the paper, make sure there are no other scraps of paper in the printer.
- **3.** Close the Top Cover.

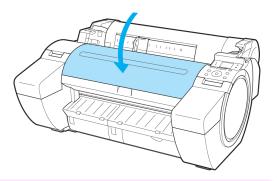




Do not touch the Linear Scale (a) or Carriage Shaft (b).
 This may stain your hands and damage the printer.

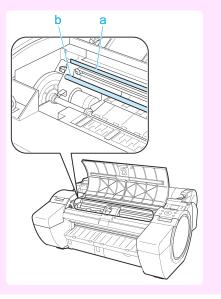


 If paper from a roll is jammed by the Paper Feed Slot Remove the jammed paper from the Paper Feed Slot.
 After removing the paper, make sure there are no other scraps of paper in the printer.

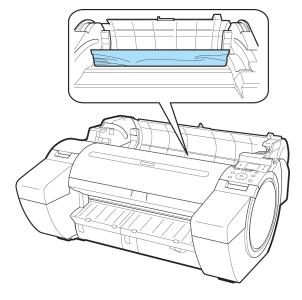


#### If the paper is jammed by the Ejection Guide

Remove the jammed paper from the Output Tray. After removing the paper, make sure there are no other scraps of paper in the printer.

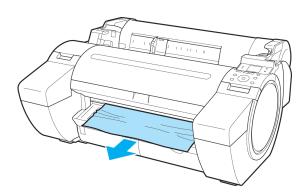


5 Pull the Release Lever forward.

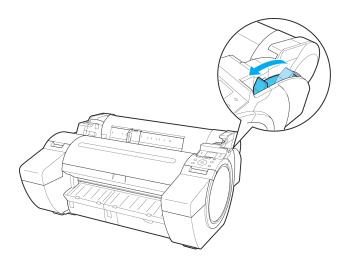

#### **Clearing a Jammed Sheet**


If a sheet becomes jammed, "**Paper jam.**" is shown on the Display Screen of the Control Panel. Remove the jammed paper as follows.

1 Push the Release Lever back.

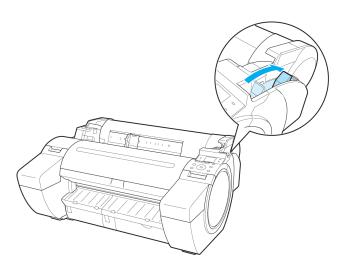


#### 2 Remove the jammed paper.

- If paper is jammed inside the Top Cover
  - 1. Open the Top Cover and move the Carriage to the left or right side manually, away from the jam.

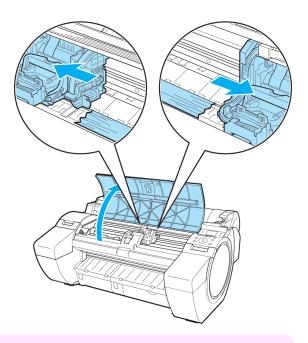




- Do not move the Carriage over jammed paper. This may damage the Printhead.
- Clear any jammed paper from inside the Top Cover.
   After removing the paper, make sure there are no other scraps of paper in the printer.
- 3. Close the Top Cover.

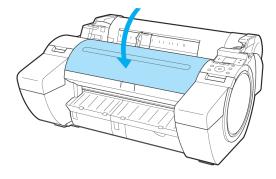





Do not touch the Linear Scale (a) or Carriage Shaft (b).
 This may stain your hands and damage the printer.

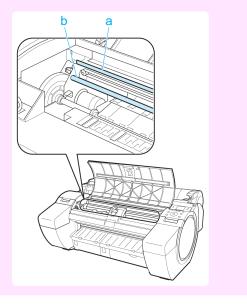

If the paper is jammed by the Paper Feed Slot
Remove the jammed paper from the Paper Feed Slot.
After removing the paper, make sure there are no other scraps of paper in the printer.

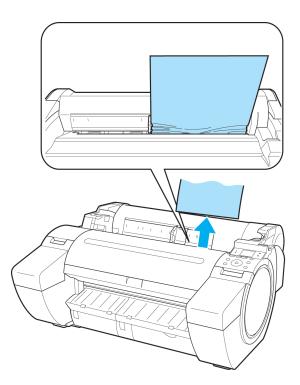


If the paper is jammed by the Ejection Guide
Remove the jammed paper from the Output Tray.
After removing the paper, make sure there are no other scraps of paper in the printer.

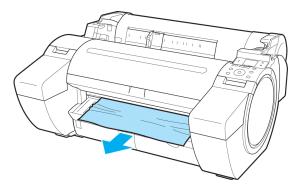




Pull the Release Lever forward.

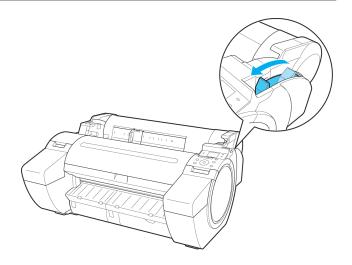


#### **Clearing Jammed Paper (Paper Feed Slot)**

Follow these steps to remove any scraps left in the Paper Feed Slot after you clear jammed sheets or roll paper.


- Turn the printer off. (See "Turning the Printer On and Off.") →P.17
- 2 Push the Release Lever back.

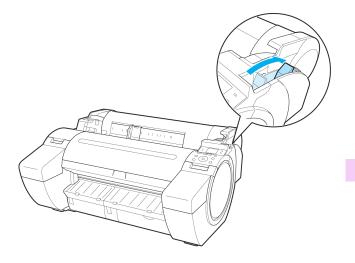


3 Positioning your hands as shown, open the Roll Cover.

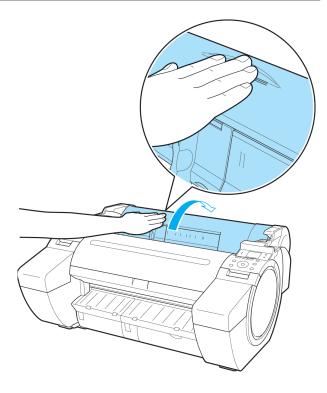


Fold an A4 sheet lengthwise four times and insert it through the gap of the Paper Feed Slot. Push the scrap out toward the Platen.

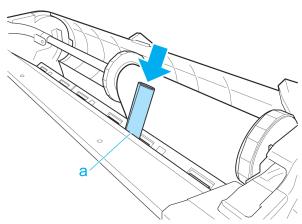

- 5 Remove the scrap when it is pushed out onto the Platen.
- 6 If any scraps remain inside the paper feed slot, repeat steps 4 and 5.
- Holding it at the positions indicated, close the Roll Cover.

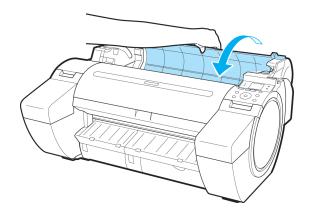

# 8 Pull the Release Lever forward.

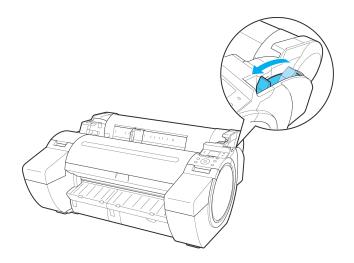

# Roll paper cannot be inserted into the Paper Feed Slot

Cause	Corrective Action
The roll paper is warped.	Straighten out curls and reload the roll.
Paper is jammed by the paper feed slot.	Remove the jammed paper.  (See "Clearing Jammed Roll Paper.") →P.579  (See "Clearing a Jammed Sheet.") →P.582
The paper source selection is incorrect.	Press the <b>Load</b> button and select the paper source.

# **Cannot load sheets**

Cause	Corrective Action
The paper source selection is incorrect.	Press the <b>Load</b> button and select the paper source.

# Paper is not cut neatly

Cause	Corrective Action
The paper is bent or curled at the cut position.	Straighten out any curling by the edges of the paper.
Paper rises by the ends of the cut position before it is cut.	Reload the paper correctly.
You are using paper that cannot be cut with the Cutter Unit.	Specify <b>Manual</b> in <b>Cutting Mode</b> in the Control Panel menu and use scissors or a cutting tool to cut the roll after printing.  (See "Specifying the Cutting Method for Rolls.") →P.386
<b>Cut Speed</b> is not configured correctly in the Control Panel menu.	Change the <b>Cut Speed</b> setting in the Control Panel menu. (See "Menu Structure.") →P.450
During cutting, printed documents fall out at an angle.	In the Control Panel menu, set <b>Cutting Mode</b> to <b>Eject</b> . Hold documents after printing, as they are cut.  (See "Specifying the Cutting Method for Rolls.")  P386

# Paper is not cut

Cause	Corrective Action
In the printer driver, <b>No</b> or <b>Print Cut Guideline</b> is specified in <b>Automatic Cutting</b> .	Specify <b>Yes</b> in <b>Automatic Cutting</b> in the printer driver.  (See "Page Setup Sheet (Windows).") →P.178  (See "Paper Detailed Settings Dialog Box (Mac OS).") →P.284
In the Control Panel menu, <b>Cutting Mode</b> is set to <b>Eject</b> or <b>Manual</b> .	If the <b>Cutting Mode</b> is <b>Eject</b> , press the <b>Cut</b> button to cut the paper. If the <b>Cutting Mode</b> is <b>Manual</b> , cut rolls with scissors or the like. (See "Specifying the Cutting Method for Rolls.") →P.386

#### Depression on the leading edge is left

Cause	Corrective Action
Keeping a roll in the printer for a long time without printing on it may leave a depression on the leading edge.	When printing quality is most important, we recommend setting <b>TrimEdge Reload</b> to <b>On</b> or <b>Automatic</b> so that the paper edge is automatically cut before printing. (See "Menu Structure.") →P.450

# The size of clear film cannot be detected

Cause	Corrective Action
The Platen is soiled with ink or other substances.	· ·
	(See "Cleaning Inside the Top Cover.") → P.564

# **Roll Paper is Continuously Ejected**

Cause	Corrective Action	
Although sheets are selected as the paper source, a roll was advanced.	After roll ejection stops, follow these steps to reload the roll.  1. Push the Release Lever back.  2. Open the Roll Cover.	
	<ol> <li>Using both hands, rotate the Roll Holder toward the back to rewind the roll. At this time, ensure that both ends of the roll are rewound evenly.</li> <li>Pull the Release Lever forward.</li> <li>Load the roll. At this time, be sure to press the Load button and select "Load Roll Paper". (See "Loading Rolls in the Printer.") →P373</li> </ol>	

# Printing does not start

The Data lamp on the Control Panel does not light up	589
The printer does not respond even if print jobs are sent	589
Ink Filling is displayed	589
The display screen indicates Agitating	

#### The Data lamp on the Control Panel does not light up

Cause	Corrective Action
The printer is not on.	Make sure the power cord is securely plugged in, all the way. Press the <b>Power</b> button to turn on the printer.
The target printer was not selected when printing.	<ul> <li>In Windows, select the printer by clicking Select Printer or Printer in the printing dialog box and try printing again.</li> <li>In Mac OS, open the dialog box of the printer driver, select the printer from the list of Printer, and try printing again.</li> </ul>
The print job is paused.	<ul> <li>In Windows, restart the print job as follows.</li> <li>1. Select the printer icon in the Printers and Faxes (or Printers) window.</li> <li>2. Clear Pause Printing in the File menu to restart the print job.</li> <li>In Mac OS, restart the print job as follows.</li> <li>1. Click Print &amp; Scan. (This is identified as Printers &amp; Scanners or Print &amp; Fax in other versions of Mac OS.)</li> </ul>
	2. Select the printer, and then Resume Printer (or Resume ) in the Printers menu to restart the print job.

#### The printer does not respond even if print jobs are sent

Cause	Corrective Action
In the Control Panel menu, <b>Pause Print</b> is <b>On</b> .	Set Pause Print to Off. (See "Pausing Printing.") →P.29
In the Control Panel menu, <b>Use USB</b> or <b>Use Ethernet</b> is set to <b>Off</b> .	Set <b>Use USB</b> or <b>Use Ethernet</b> to <b>On</b> . (See "Menu Settings.") ¬P.456

# Ink Filling.. is displayed

Cause	Corrective Action
The printer was forced off during operation.	Wait until the system has been filled with ink.

#### The display screen indicates Agitating...

Cause	Corrective Action
Ink agitation is in progress.	Please wait until ink agitation is finished.

# The printer stops during a print job

An error message is shown on the Display Screen	
The printer stops when printing a HP-GL/2 job (the carriage stops moving)	. 602

#### An error message is shown on the Display Screen

Cause	Corrective Action
The last portion of roll paper was used during a print job, and paper could not be advanced because the trailing edge is taped to the roll.	Remove the used roll and insert a new roll.  (See "Removing the Roll from the Printer.") →P.378  (See "Removing the Roll Holder from Rolls.") →P.381  (See "Loading and Printing on Rolls.") →P.19

# The printer ejects blank, unprinted paper

Cause	Corrective Action
The leading edge of the roll paper was cut to straighten it.	The leading edge of rolls may be cut to straighten it if <b>Trim Edge First</b> is set to a value other than <b>Off</b> in the Control Panel menu.  (See "Cutting the Leading Edge of Roll Paper Automatically.") →P.389
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and make sure the Printhead is in good condition for printing.  (See "Checking for Nozzle Clogging.") →P.549
A print job was received from an incompatible printer driver.	Use the correct imagePROGRAF printer driver for the printer and try printing again.
The printer has received print data that includes HP RTL commands when <b>Auto Rotate</b> is <b>On</b> in the Control Panel menu.	In the Control Panel, set <b>Auto Rotate</b> to <b>Off</b> and print again. (See "Menu Settings.") →P.456
The printer is damaged.	Contact your Canon dealer for assistance.

# Troubleshooting

# Problems with the printing quality

Problems with the printing quality
------------------------------------

Printing is faint	591
Printing is faint	591
The edges of the paper are dirty	592
The surface of the paper is dirty	593
The back side of the paper is dirty	
Printed colors are inaccurate	503
Banding in different colors occurs	594
Colors in printed images are uneven	594
Image edges are blurred or white banding occurs	
The contrast becomes uneven during printing	
The length of printed images is inaccurate in the feeding direction	506
Documents are printed in monochrome	
·	
Line thickness is not uniform	596
Lines are misaligned	597

# Printing is faint

Cause	Corrective Action
You may be printing on the wrong side of the paper.	Print on the printing surface.
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and see if they are clogged. (See "Checking for Nozzle Clogging.") →P.549
Because the printer was left without ink tanks installed for some time, ink has become clogged in the ink supply system.	After the ink tanks have been installed for 24 hours, run <b>Head Cleaning B</b> from the Control Panel.  (See "Cleaning the Printhead.") →P.550
Paper is jammed inside the Top Cover.	Follow the steps below to remove the jammed piece of paper inside the Top Cover.  1. Open the Top Cover and make sure the Carriage is not over the Platen.  2. Remove any scraps of paper inside the Top Cover.  (See "Clearing Jammed Roll Paper.") →P.579  (See "Clearing a Jammed Sheet.") →P.582  3. Close the Top Cover.
The ink was not dry when paper was cut.	Specify a longer drying period in the Control Panel menu, in <b>Paper Details &gt; Roll DryingTime</b> . (See "Menu Settings.") →P.456
Printing may be faint if <b>Print Quality</b> in <b>Advanced Settings</b> in the printer driver is set to <b>Standard</b> or <b>Fast</b> .	In Advanced Settings of the printer driver, choose Highest or High in Print Quality.  Printing in Fast or Standard mode is faster and consumes less ink than in Highest or High modes, but the printing quality is lower.  (See "Giving Priority to Particular Graphic Elements and Colors for Printing.")   P58
You are printing on paper that tends to generate dust when cut.	In the Control Panel menu, set <b>CutDustReduct</b> . in <b>Paper Details</b> to <b>On</b> . (See "Reducing Dust from Cutting Rolls.") →P.391

# Paper rubs against the Printhead

Cause	Corrective Action
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver.  (See "Loading Rolls in the Printer.") →P.373  (See "Loading Sheets in the Printer.") →P.392

Cause	Corrective Action
The type of paper specified in the printer driver does not match the type loaded in the printer.	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
·	1. Press the <b>Stop</b> button and stop printing.
	2. Change the type of paper in the printer driver and try printing again.
Paper has been loaded incorrectly, causing it to wrinkle.	Reload the paper.  (See "Loading Rolls in the Printer.") →P373  (See "Loading Sheets in the Printer.") →P392
The Printhead is set too low in the Control Panel menu.	In the Control Panel menu, set <b>Head Height</b> to <b>Automatic</b> .  (See "Troubleshooting Paper Abrasion and Blurry Images.") →P.529
You are printing on heavyweight paper or paper that curls or wrinkles easily after absorbing ink.	For paper-based media such as Heavyweight Coated Paper, set the VacuumStrngth to Strong or Strongest in the Control Panel menu. If the paper still rubs against the printhead, se the Head Height in the Control Panel menu to a higher value than the current setting.  (See "Adjusting the Vacuum Strength.") →P.537  (See "Troubleshooting Paper Abrasion and Blurry Images.") →P.529
	For film-based media such as Tracing Paper, set the VacuumStrngth to Standard, Strong or Strongest in the Control Panel menu. If the paper still rubs against the printhead, set the Head Height in the Control Panel menu to a higher value than the current setting.  (See "Adjusting the Vacuum Strength.") →P.537  (See "Troubleshooting Paper Abrasion and Blurry Images.") →P.529
	When printing on paper 0.1 mm (0.004 in) thick or less, choose a <b>VacuumStrngth</b> setting of <b>Weakest</b> in the Control Panel menu. If rubbing still occurs, in the Control Panel menu, use a higher <b>Head Height</b> setting.  (See "Adjusting the Vacuum Strength.") →P.537  (See "Troubleshooting Paper Abrasion and Blurry Images.") →P.529
When you have loaded paper, the paper you have loaded does not match the type selected on the Control Panel.	Be sure to select the correct type of paper in the Control Panel menu when loading paper. (See "Loading Rolls in the Printer.") →P373 (See "Loading Sheets in the Printer.") →P392

# The edges of the paper are dirty

Cause	Corrective Action
The Platen has become dirty after borderless printing or printing on small paper.	Open the Top Cover and clean the Platen. (See "Cleaning Inside the Top Cover.") →P.564
The type of paper as specified on the printer does not match the type specified	Make sure the same type of paper is specified on the printer as in the printer driver.  (See "Changing the Type of Paper.") →P.376
in the printer driver.	<ol> <li>Make sure the same paper type is specified in the printer driver as on the printer.</li> <li>Press the <b>Stop</b> button and stop printing.</li> <li>Change the type of paper in the printer driver and try printing again.</li> </ol>
The paper is wrinkled or warped.	Straighten out the wrinkles or curls and reload the paper. Do not use paper that has been printed on previously.  (See "Loading Rolls in the Printer.") →P.373  (See "Loading Sheets in the Printer.") →P.392
A cut line is printed because <b>CutDus- tReduct.</b> is <b>On</b> in the Control Panel menu to reduce cutting dust.	If this function is not needed, set <b>CutDustReduct</b> . to <b>Off</b> in the Control Panel menu. (See "Menu Settings.") → P.456
The Printhead is set too low in the Control Panel menu.	In the Control Panel menu, set <b>Head Height</b> to <b>Automatic</b> .  (See "Troubleshooting Paper Abrasion and Blurry Images.") →P.529

on
Paper, set the <b>VacuumStrngth</b> to e paper still rubs against the printhead, nigher value than the current setting.
ages.") → P.529
VacuumStrngth to Standard, Strong still rubs against the printhead, set the alue than the current setting.
ages.") (→P.529)

#### Corrective Actio Cause You are printing on heavyweight paper For paper-based media such as Heavyweight Coated or paper that curls or wrinkles easily af-Strong or Strongest in the Control Panel menu. If the ter absorbing ink. set the Head Height in the Control Panel menu to a hi (See "Adjusting the Vacuum Strength.") →P.537 (See "Troubleshooting Paper Abrasion and Blurry Ima For film-based media such as Tracing Paper, set the V or Strongest in the Control Panel menu. If the paper s Head Height in the Control Panel menu to a higher va (See "Adjusting the Vacuum Strength.") →P.537 (See "Troubleshooting Paper Abrasion and Blurry Ima The Ejection Guide is soiled. Clean the Ejection Guide. (See "Cleaning the Printer Exterior.") → P.564

#### The surface of the paper is dirty

Cause	Corrective Action
The Paper Retainer is soiled.	Clean the Paper Retainer.  (See "Cleaning Inside the Top Cover.") →P.564
You are using a paper that does not dry easily.	In the Control Panel menu, set <b>Roll DryingTime</b> to at least <b>1 min</b> . (See "Menu Settings.") →P.456
	When paper that does not dry easily is used for printing, it may curl during printing and touch the Output Tray.  In this case, in the Control Panel menu, complete the settings for <b>Dry time</b> and <b>Area</b> in <b>Scan Wait Time</b> .  However, note that printing will now take longer.  (See "Menu Settings.")  P.456

#### The back side of the paper is dirty

Cause	Corrective Action
The Platen has become dirty after borderless printing or printing on small paper.	Open the Top Cover and clean the Platen. (See "Cleaning Inside the Top Cover.") → P.564
The Platen has become soiled because you have set <b>Width Detection</b> to <b>Off</b> in the Control Panel menu.	Set <b>Width Detection</b> to <b>On</b> in the Control Panel menu, and then open the Top Cover and clean the Platen.  (See "Cleaning Inside the Top Cover.") →P.564
	Open the Top Cover and clean the Platen. After this, manually advance the roll onto the Platen before printing.  (See "Cleaning Inside the Top Cover.") → P.564  (See "Feeding Roll Paper Manually.") → P.382
The Paper Retainer is soiled.	Clean the Paper Retainer. (See "Cleaning Inside the Top Cover.") →P.564

#### Printed colors are inaccurate

Cause	Corrective Action
Color adjustment has not been activated in the <b>Advanced Settings</b> of the printer driver.	In the Advanced Settings of the printer driver, access Color Settings in Color Mode to adjust colors.  (See "Main Sheet (Windows).") →P.167  (See "Main Pane (Mac OS).") →P.281
Colors have not been adjusted on the computer or	Refer to the computer and monitor documentation to adjust the colors.
monitor.	Adjust the settings of the color management software, referring to the software documentation as needed.
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and see if they are clogged.

593

Cause	Corrective Action
The Printhead nozzles are clogged.	(See "Checking for Nozzle Clogging.") →P.549
<b>Application Color Matching Priority</b> is set to <b>Off</b> in the Windows printer driver.	Click <b>Special Settings</b> in the <b>Layout</b> sheet of the printer driver, and set <b>Application Color Matching Priority</b> to <b>On</b> in the dialog box that is displayed. (See "Layout Sheet (Windows).") →P.181
Color may change slightly even on the same model of printer if you use a different version of the firmware or printer driver, or when you print under different settings or in a different printing environment.	<ol> <li>Follow these steps to prepare the printing environment.</li> <li>Use the same version of firmware or printer driver.</li> <li>Specify the same value for all settings items.</li> </ol>

# **Banding in different colors occurs**

Cause	Corrective Action
The paper feed amount is out of adjustment.	Adjust the feed amount.  (See "Adjusting the Feed Amount.") →P.531
Printing does not proceed smoothly be- cause print jobs are interrupted during transmission.	Exit other applications and cancel other print jobs.
In the Control Panel menu, <b>Adj. Priority</b> is set to <b>Print Length</b> .	Setting Adj. Priority to Print Quality in the Control Panel menu and adjusting the feed amount may improve results.  (See "Adjusting the Feed Amount.") →P.531
The Printhead is out of alignment.	Adjust the Printhead alignment. (See "Automatic Adjustment to Straighten Lines and Colors.") →P.524
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and see if they are clogged. (See "Checking for Nozzle Clogging.") →P.549
Streaks may occur if you set the <b>Print Quality</b> too low.	Choose a higher level of <b>Print Quality</b> in the <b>Advanced Settings</b> of the printer driver and try printing again.  Printing in <b>Fast</b> or <b>Standard</b> mode is faster and consumes less ink than in <b>Highest</b> or <b>High</b> modes, but the printing quality is lower.  (See "Giving Priority to Particular Graphic Elements and Colors for Printing.")   P.58
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver.  (See "Loading Rolls in the Printer.") →P373  (See "Loading Sheets in the Printer.") →P392
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
	1. Press the <b>Stop</b> button and stop printing.
	2. Change the type of paper in the printer driver and try printing again.

# Colors in printed images are uneven

Cause	Corrective Action
<b>Line Drawing/Text</b> is selected when printing images in many solid colors.	In <b>Print Priority</b> in the <b>Advanced Settings</b> of the printer driver, choose <b>Image</b> .
You are printing on paper that curls easily.	Printed colors may appear uneven on the leading edge of paper that is susceptible to curling. Select a stronger level in <b>VacuumStrngth</b> in the Control Panel menu to increase suction against the paper, or specify a leading margin of 20 mm (0.79 in) or more. (See "Adjusting the Vacuum Strength.") >P.537
Printed colors may be uneven if you set the <b>Print Quality</b> too low.	Choose a higher level of <b>Print Quality</b> in the <b>Advanced Settings</b> of the printer driver. Printing in <b>Fast</b> or <b>Standard</b> mode is faster and consumes less ink than in <b>Highest</b> or <b>High</b> modes, but the printing quality is lower.  (See "Giving Priority to Particular Graphic Elements and Colors for Printing.")   P.58

Cause	Corrective Action
Color may be uneven between dark and light image areas.	Select Unidirectional Printing in the Advanced Settings of the printer driver.
When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be slightly uneven at the leading edges.	Specify <b>No</b> in <b>Automatic Cutting</b> in the printer driver before printing. In this case, the paper can be printed without borders on the left and right sides only. Cut the printed document ejected from the printer, and then use scissors or a cutting tool to cut away the edges on the top and bottom.
	Choose a higher level of <b>Print Quality</b> in the <b>Advanced Settings</b> of the printer driver. (See "Giving Priority to Particular Graphic Elements and Colors for Printing.") →P.58
The Printhead is out of alignment.	Adjust the Printhead alignment.  (See "Automatic Adjustment to Straighten Lines and Colors.") →P.524
Allowing printed documents to dry on top of each other may cause uneven colors.	To avoid uneven colors, we recommend drying each sheet separately.
Density may be uneven if you use Glossy Paper or Coated Paper.	In Advanced Settings of the printer driver, choose Highest or High in Print Quality.
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver.  (See "Loading Rolls in the Printer.") →P373  (See "Loading Sheets in the Printer.") →P392
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
	<ol> <li>Press the <b>Stop</b> button and stop printing.</li> <li>Change the type of paper in the printer driver and try printing again.</li> </ol>
Scan Wait Time > Area in the Control Panel menu is set to Leading edge.	When <b>Scan Wait Time &gt; Area</b> is set to <b>Leading edge</b> , colors may be uneven 110–140 mm from the leading edge. (The position varies depending on the <b>Print Quality</b> setting.) In this case, select <b>Scan Wait Time &gt; Area &gt; Entire area</b> . However, note that printing will now take longer. (See "Menu Settings.") →P.456

# Image edges are blurred or white banding occurs

Cause	Corrective Action
The Platen suction is too strong.	In the Control Panel menu, reduce the level of <b>VacuumStrngth</b> . (See "Adjusting the Vacuum Strength.") → P.537
Incorrect Printhead alignment value.	In the Control Panel menu, set <b>Head Height</b> to a lower height.  (See "Troubleshooting Paper Abrasion and Blurry Images.") →P.529
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver.  (See "Loading Rolls in the Printer.") →P.373  (See "Loading Sheets in the Printer.") →P.392
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
	<ol> <li>Press the <b>Stop</b> button and stop printing.</li> <li>Change the type of paper in the printer driver and try printing again.</li> </ol>

# The contrast becomes uneven during printing

	Cause	Corrective Action
	The paper feed amount is out of adjustment.	Adjust the feed amount.  (See "Adjusting the Feed Amount.") →P.531
	The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") →P373

595

Cause	Corrective Action
The type of paper specified in the printer driver	(See "Loading Sheets in the Printer.") →P.392
does not match the type loaded in the printer.	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
	<ol> <li>Press the <b>Stop</b> button and stop printing.</li> <li>Change the type of paper in the printer driver and try printing again.</li> </ol>

#### The length of printed images is inaccurate in the feeding direction

Cause	Corrective Action
In the Control Panel menu, <b>Adj. Priority</b> is set to <b>Print Quality</b> .	Set Adj. Priority to Print Length in the Control Panel menu, and then execute Adjust Length.  (See "Adjusting the Feed Amount.") →P.531
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver.  (See "Loading Rolls in the Printer.") →P.373  (See "Loading Sheets in the Printer.") →P.392
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
	<ol> <li>Press the <b>Stop</b> button and stop printing.</li> <li>Change the type of paper in the printer driver and try printing again.</li> </ol>

# Images are printed crooked

Cause	Corrective Action
In the Control Panel menu, <b>Skew Check Lv.</b> is set to <b>Loose</b> or <b>Off</b> .	In the Control Panel menu, set <b>Skew Check Lv.</b> to <b>Standard</b> .
In the Control Panel menu, Width Detection is set to Off.	Set Width Detection to On in the Control Panel menu.

#### Documents are printed in monochrome

Cause	Corrective Action
In the Advanced Settings of the printer driver, Monochrome, Monochrome (BK ink), or Monochrome Bitmap is specified in Color Mode.	In the <b>Advanced Settings</b> of the printer driver, specify <b>Color</b> in <b>Color Mode</b> and try printing again.
The Printhead nozzles are clogged.	Print a test pattern to check the color ink nozzles and see if they are clogged. (See "Checking for Nozzle Clogging.") →P.549

# Line thickness is not uniform

<ol> <li>Access the printer driver Properties dialog box from Print in the File menu of the source application, and follow these steps to print.</li> <li>Clear the option Open Preview When Print Job Starts on the Main sheet.</li> <li>Clear the option Page Layout on the Layout sheet.</li> <li>Click the Special Settings button in the Layout sheet, open the Special Settings dialog box, and set Fast Graphic Process to Off.</li> </ol>
Load paper of the same type as you have specified in the printer driver.  (See "Loading Rolls in the Printer.") >P.373  (See "Loading Sheets in the Printer.") >P.392  Make sure the same type of paper is specified in the printer driver as you have loaded in the

Cause	Corrective Action
The type of paper specified in the printer driver does not match the type loaded in the printer.	<ol> <li>Press the <b>Stop</b> button and stop printing.</li> <li>Change the type of paper in the printer driver and try printing again.</li> </ol>

# Lines are misaligned

Cause	Corrective Action
The Printhead alignment is not adjusted.	Adjust the Printhead alignment.  (See "Automatic Adjustment to Straighten Lines and Colors.") →P.524  (See "Manual Adjustment to Straighten Lines and Colors.") →P.525  (See "Adjusting Line Misalignment.") →P.527
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver.  (See "Loading Rolls in the Printer.") →P.373  (See "Loading Sheets in the Printer.") →P.392
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.
	1. Press the <b>Stop</b> button and stop printing.
	2. Change the type of paper in the printer driver and try printing again.

# Cannot print over a network

#### Cannot connect the printer to the network

Cause	Corrective Action
The Ethernet cable is not connected cor-	1. Make sure the printer is connected to the network with the correct Ethernet cable, and then turn the printer on. For instructions on connecting the cable, refer to the Setup Guide.
rectly to the printer's Ethernet port.	2. Make sure the Link indicator is lit.  The bottom indicator is green if the printer is connected via 1000Base-T, while the top indicator is orange if connected via 100Base-TX and the top indicator is green if connected via 10Base-T. If the Link indicator is not lit, check the following points.
	Make sure the connection point is on.
	<ul> <li>Make sure the end of the Ethernet cable is connected correctly.</li> <li>Insert the Ethernet cable until it clicks and locks in place.</li> </ul>
	<ul> <li>Make sure there is no problem with the Ethernet cable.</li> <li>If there is any problem, replace the Ethernet cable.</li> </ul>
	<ul> <li>Check the communication mode with the connection point.         Although the printer normally detects the communication mode and transmission rate of the communication point automatically (in auto negotiation mode), sometimes the communication point settings cannot be detected. In this case, configure the connection method manually, specifying the communication mode in use.         (See "Configuring the Communication Mode Manually.") →P.498     </li> </ul>

#### Cannot print over a TCP/IP network

Cause	Corrective Action
The printer's IP address is not configured correctly.	Make sure the printer's IP address is configured correctly.  (See "Configuring the IP Address Using imagePROGRAF Device Setup Utility.") →P.500  (See "Configuring the IP Address Using the Printer Control Panel.") →P.488
The printer's TCP/IP network settings are not configured correctly.	Make sure the printer's TCP/IP network settings are configured correctly.  (See "Configuring the Printer's TCP/IP Network Settings With RemoteUI.") →P.492
The computer you are trying to print from is not configured correctly.	Make sure the computer's TCP/IP network settings are configured correctly. (See "Configuring the Printer Driver Destination (Windows).") →P.491 (See "Configuring the Destination in TCP/IP Networks (Mac OS).") →P.496

#### Cannot print over a Bonjour network

Cause	Corrective Action	
The computer you are trying to print from is not configured correctly.	Make sure the computer is configured correctly.  (See "Configuring the Destination for Bonjour Network (Mac OS).") →P.496	
The computer and printer are not on the same network.	Due to the nature of Bonjour, you cannot print if the printer is on another network behind a router. Make sure the computer and printer are on the same network. For information about network settings, ask your network administrator.	

599

# Installation problems

#### The computer does not recognize the printer

Cause	Corrective Action
In the Control Panel menu, <b>Use USB</b> or <b>Use Ethernet</b> is set to <b>Off</b> .	Set <b>Use USB</b> or <b>Use Ethernet</b> to <b>On</b> . (See "Menu Settings.") →P.456

#### **Removing Installed Printer Drivers**

Follow these steps to remove installed printer drivers and utilities.

#### Removing printer drivers (Windows)

Remove the printer driver as follows.



- The following procedure is for Windows 7. The method of removing printer drivers varies depending on the version of Windows.
- From the Windows start menu, select All Programs > Canon Printer Uninstaller > imagePROGRAF Printer Driver Uninstaller to display the Delete Printer window.
- 2 Select the printer in the list and click **Delete**.
- Click **Yes** after the **Warning** message is displayed.
- Make sure that the printer has been removed from the list, and then click Exit.

#### Removing imagePROGRAF Status Monitor (Windows)

Remove imagePROGRAF Status Monitor as follows.



- The following procedure is for Windows 7. The method of removing printer drivers varies depending on the version of Windows
- Select Control Panel from the start menu.
- 2 Select Uninstall a program.



- If the User Account Control dialog box is displayed, click Yes.
- 3 Select imagePROGRAF Status Monitor, and then click the Uninstall button.

#### Removing imagePROGRAF Device Setup Utility (Windows)

Remove imagePROGRAF Device Setup Utility as follows.



 The following procedure is for Windows 7. The method of removing printer drivers varies depending on the version of Windows.

1

Select Control Panel from the start menu.



2 Select Uninstall a program.



• If the User Account Control dialog box is displayed, click Yes.

3 Select imagePROGRAF Device Setup Utility, and then click the Uninstall button.

600

# HP-GL/2 problems

With HP-GL/2, printing is misaligned	. 601
Lines or images are missing in printed HP-GL/2 jobs.	. 601
Lines are printed too thick or thin in HP-GL/2 print jobs	
HP-GL/2 jobs are printed in monochrome (or color)	. 601
Printed colors of lines are inaccurate during HP-GL/2 printing	602
HP-GL/2 jobs are printed 6 mm larger than specified	
HP-GL/2 jobs are printed at maximum size, even if a standard size is specified	. 602
HP-GL/2 printing takes a long time	
Replotting with HP-GL/2 jobs is not possible.	. 602
The printer stops when printing a HP-GL/2 job (the carriage stops moving)	

# With HP-GL/2, printing is misaligned

Cause	Corrective Action
The plotter origin is incorrect.	Check the printing commands.
The <b>Margin</b> setting in the Control Panel menu is incorrect.	Adjust the <b>Margin</b> setting values in the Control Panel menu. (See "Menu Settings.") →P.456

#### Lines or images are missing in printed HP-GL/2 jobs.

Cause	Corrective Action
The memory is full.	Check the size of the data in the print job.
An HP-GL/2 command not supported by this printer was received.	Check the print job and settings.
The printer has received print data that includes HP RTL commands when <b>Auto Rotate</b> is <b>On</b> in the Control Panel menu.	In the Control Panel, set <b>Auto Rotate</b> to <b>Off</b> and print again. (See "Menu Settings.") →P.456
PageSizeProcess1 in the Control Panel menu is set to On.	Set PageSizeProcess1 to Off in the Control Panel menu. (See "Menu Settings.") →P.456

#### Lines are printed too thick or thin in HP-GL/2 print jobs

Cause	Corrective Action
The <b>Width</b> setting in the Control Panel menu is incorrect.	Change the <b>Width</b> setting configured in <b>Pen no.</b> of the <b>Palette A</b> or <b>Palette B</b> selected in the Control Panel menu.  (See "Menu Settings.") →P.456
ThickenFineLines in the Control Panel menu is set to Off.	If fine lines are printed faintly, setting <b>ThickenFineLines</b> to <b>On</b> will print the lines more distinctly.  (See "Menu Settings.")   P.456

# HP-GL/2 jobs are printed in monochrome (or color)

Cause	Corrective Action
The Color Mode setting in the	Check the Color Mode setting in the Control Panel menu.
Control Panel menu is incorrect.	(See "Menu Settings.") →P.456
	However, for optimal Printhead performance, the printer consumes trace amounts of color ink even
	when Monochrome is selected as Color Mode.

#### Printed colors of lines are inaccurate during HP-GL/2 printing

Cause	Corrective Action	
<b>AdjustFaintLines</b> is <b>On</b> in the Control Panel menu.	Setting <b>AdjustFaintLines</b> to <b>Off</b> in the Control Panel menu may help produce the expected results. However, lines in some colors may appear broken.	

#### HP-GL/2 jobs are printed 6 mm larger than specified

Cause	Corrective Action
The page size of the HP-GL/2 print job, as created in the source application, is incorrect.	In the Control Panel menu, set PageSizeProcess1 to On. (See "Menu Settings.") →P.456

#### HP-GL/2 jobs are printed at maximum size, even if a standard size is specified

Cause	Corrective Action
The page size of the HP-GL/2 print job, as created in the source application, is incorrect.	In the Control Panel menu, set PageSizeProcess2 or Conserve Paper to On. The layout will be changed to the optimal layout.  (See "Menu Settings.") →P.456

#### HP-GL/2 printing takes a long time

Cause	Corrective Action
Large print jobs with a lot of data take longer to print.	Please wait a while until printing is finished.
A job was printed when <b>Input Resolution</b> in the Control Panel menu was set to <b>600dpi</b> .	In the Control Panel menu, set <b>Input Resolution</b> to <b>300dpi</b> and print again.  (See "Menu Settings.") →P.456

#### Replotting with HP-GL/2 jobs is not possible.

Cause	Corrective Action
The data was lost because of replotting.	Data for replotting is lost after the following operations. In this case, send the print job again.
	<ul> <li>The memory buffer was cleared from the Control Panel.</li> </ul>
	The printer was turned off.
	<ul> <li>The printer has received a new HP-GL/2 print job.</li> </ul>
	Printing has been canceled

#### The printer stops when printing a HP-GL/2 job (the carriage stops moving)

Cause	Corrective Action
The printer is analyzing the print job.	Please wait a while until printing is finished.
A job was printed when <b>Input Resolution</b> in the Control Panel menu was set to <b>600dpi</b> .	In the Control Panel menu, set <b>Input Resolution</b> to <b>300dpi</b> and print again. (See "Menu Settings.") →P.456

# Other problems

The Ink Tank Cover has become detached from the printer	
If the Printer Makes a Strange Sound	603
Messages advising to check the maintenance cartridge are not cleared	604
The printer consumes a lot of ink	

#### The Ink Tank Cover has become detached from the printer

Cause	Corrective Action
The Ink Tank Cover became detached from the printer because too much force was applied to the Ink Tank Cover.	Attach the Ink Tank Cover to the printer.  (See "Attach the Ink Tank Cover to the printer.") →P.547

# The printer does not go on

Cause	Corrective Action
The printer is unplugged.	Plug the power cord into the outlet, and then turn on the printer.
The specified voltage is not supplied.	Check the voltage of the outlet and breaker. (See "Specifications.") →P.630

#### If the Printer Makes a Strange Sound

Cause	Corrective Action
The printer makes a sound	The following sounds do not indicate a problem with the printer.
during opera- tion.	<ul> <li>There is a sound of suction from the Platen</li> <li>To prevent paper from rising, paper is held against the Platen by suction from Vacuum holes under it.</li> </ul>
	<ul> <li>There is a sound when a different size of paper is used and when the Carriage goes from side to side When paper of a different size is used, a valve is automatically activated to switch the area for paper suction, which may make a sound. This mechanism prevents suction from Vacuum holes where there is no paper. In addition, ink is ejected in sync with the movement of the Carriage back and forth to ensure optimal ink flow. At this time, the valve automatically switches the area for paper suction, which may make a sound.</li> </ul>
	<ul> <li>Roll paper makes a fluttering sound during printing</li> <li>There may be a fluttering sound when large paper is advanced.</li> </ul>
	<ul> <li>If you suddenly hear the tone for cleaning operations</li> <li>At regular intervals, for printer maintenance, cleaning operations will begin automatically, even if the printer is in Sleep mode.</li> </ul>
	<ul> <li>If you suddenly hear the tone for ink agitation         At regular intervals, to ensure optimal printing quality, the ink is agitated automatically, even if the printer is in Sleep mode.         The ink is also agitated automatically under the following conditions. Note that other operations are not possible while "Agitating" is displayed on the control panel.</li> </ul>
	After the printer is turned on
	In other cases, contact your Canon dealer.

#### Messages advising to check the maintenance cartridge are not cleared

Cause	Corrective Action
The printer has not detected the new Maintenance Cartridge that was used to replace the old one.	Remove the new Maintenance Cartridge you have just installed and insert it again firmly.  (See "Replacing the Maintenance Cartridge.") →P.558

#### The printer consumes a lot of ink

Cause	Corrective Action
Many full-page color images are printed.	In print jobs such as photos, images are filled with color. This consumes a lot of ink. This does not indicate a problem with the printer.
<b>Head Cleaning B</b> in the Control Panel menu is executed frequently.	<b>Head Cleaning B</b> in the Control Panel menu consumes a lot of ink. This does not indicate a problem with the printer. Unless the printer has been moved or stored for a long period or you are troubleshooting Printhead problems, we recommend not performing <b>Head Cleaning B</b> , to the extent possible.
You have just finished initial installation, when more ink is consumed to fill the system.	After initial installation or at the first-time use after transfer, ink flows into the system between the Ink Tank and Printhead.  Although the amount of remaining ink may drop as a result, it does not indicate a problem.
The Printhead nozzles are clogged.	Check for nozzle clogging.  (See "Checking for Nozzle Clogging.") →P.549

#### **Ink Level Detection**

Ink level detection will be deactivated if you load ink tanks once emptied.

#### Ink level detection

Ink tanks specified for this printer feature an ink level detection function to prevent the ink from running out during printing, which prevents printer damage. (See "Ink Tanks.") (>P.540)

This function will not work correctly if you use refill ink tanks. As a result, printing stops. Thus, before using refill ink tanks, you must cancel the ink level detection.

Printing with the ink level detection canceled may lead to printer damage and printing problems. Canon Inc. is not liable for any damage that may occur as a result of refilling ink.




- After ink level detection has been released, this function cannot be reactivated for currently loaded lnk Tank. To use ink level detection again, replace the lnk Tank with new ones specified for use with the printer.
- Repeatedly removing and inserting an Ink Tank may damage the connection between the Ink Tank and the printer, which may cause ink leakage from the Ink Tank and damage the printer.

#### Releasing ink level detection




On the Display Screen, a message indicates that the ink level cannot be detected. After checking the message, press the button.

Remaining level of the ink cannot be correctly detected. Check ink tank.

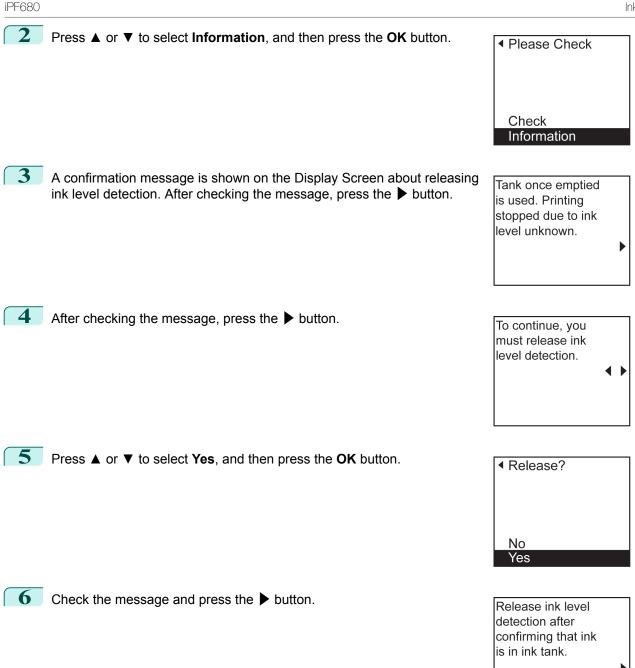

7 Check the message and press the ▶ button.

Canon is not liable for damages due to ink tank filling.

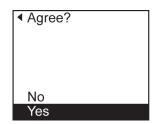


A confirmation message about updating ink information is shown on the Display Screen. After checking the message, press the ▶ button.

Release ink level detection. Perform after use of ink tank was registered?

10 Press ▲ or ▼ to select **Yes**, and then press the **OK** button.

Press ▲ or ▼ to select **Yes**, and then press the **OK** button.

Ink level detection is now released.

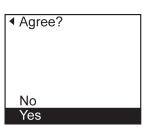

# Error Message

# iPF680

User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577

# **Error Message**

Error Messages	608
Messages regarding paper	610
Messages regarding ink	619
Messages regarding printing or adjustment	621
Messages regarding printheads	622
Messages regarding the maintenance cartridge	624
Messages regarding HP-GL/2	625
Other Messages	626

Specifications	629
Appendix	633

# **Error Messages**

Borderless printng not possible.	617
Cannot adjust paper feed.	621
Cannot adjust printhead.	
Cannot detect ink level correctly. Close tank cover.	
Cannot detect papr	
Cannot recognize print head.	
Check if ink tank is set, and its color and direction.	
Check printed document.	
Close Ink Tank Cover	
Olose IIIk Talik Oovel	020
Do not pull out ink tank.	620
End of paper feed.	617
ERROR Exxx-xxxx (x represents a letter or number)	
Error in cutter position.	
Execute printhead cleaning.	
Execute printinead clearing	023
GARO Wxxxx (x represents a number)	626
GL2: W0502 The parameter is out of range.	
GL2: W0504 This command is not supported.	
GL2: Wxxxx The memory is full. (xxxx is 0501, 0903, or 0904)	625
Hardware error. xxxxxxxx-xxxx (x represents a letter or number)	626
Ink insufficient.	619
Ink tank is empty.	620
Insert the maintenance cartridge.	
Insufficient paper for job	
Leading edge detection error.	
Maint. cart. The level is low	624
Maintenance cartridge full	624
Maintenance cartridge problem	624
MediaType Mismatch	610
Multi-sensor error	627
AL. 1.1.10	(10)
No ink left.	
No Maintenance Cartridge capacity.	
Not much ink is left.	620
Paper cutting failed.	616
Paper is crooked.	615
Paper jam	615
Paper mismatch	610
Paper not aligned with right guide.	
Paper position not suitable for borderless printing.	
Paper size not detected.	
PaprWidth Mismatch	
Parts replacement time has passed.	
Prepare for parts replacement.	
Printhead error	
Regular printing is selected, but a roll is loaded.	
Rel lever is in wrong position.	
Remaining level of the ink cannot be correctly detected. Check ink tank	619

609

Roll paper is not securely in contact with roll holder.	618
Roll printing is selected, but sheets are loaded.	614
Roll paper is not securely in contact with roll holder.  Roll printing is selected, but sheets are loaded.  Roll printing is selected.	613
Sheet printing is selected.	
The following ink tanks cannot be recognized.	620
The following ink tanks cannot be recognized.  The paper is too small.	611
The paper is too small.  The roll is empty.  This paper cannot be used.	611
The roll is empty.	614
This paper cannot be used.	613
This type of paper is not compatible with HP-GL/2.	625
Top cover is open.	627
Unknown file.	627
Wrong ink tank.	620
Wrong maintenance cartridge. Wrong printhead.	624
Wrong printhead.	622

#### 610

# Messages regarding paper

Paper mismatch	610
MediaType Mismatch	
The paper is too small.	611
The paper is too small	611
PaprWidth Mismatch	612
Paper size not detected.	612
Insufficient paper for job	613
This paper cannot be used.	613
Roll printing is selected.	613
Roll printing is selected, but sheets are loaded.	
The roll is empty.	614
Sheet printing is selected.	614
Regular printing is selected, but a roll is loaded.	
Paper jam	615
Paper is crooked.	615
Paper not aligned with right guide.	616
Cannot detect papr	616
Leading edge detection error.	616
Paper cutting failed.	616
End of paper feed	617
Rel lever is in wrong position.	617
Borderless printng not possible.	617
Paper position not suitable for borderless printing.	
Roll paper is not securely in contact with roll holder.	618

# Paper mismatch

Cause	Corrective Action
You tried to print a test pattern for printer adjustment on several sheets, but sheets of different types or sizes of paper were used.	When printing a test pattern for adjustment, use sheets of the same size and type of paper, in the required quantity.  Press ▲ or ▼ to select <b>Change Paper</b> , press the <b>OK</b> button, and replace the paper.  (See "Loading and Printing on Sheets.") →P.21  The printer now starts printing the test pattern.
	Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button.

# MediaType Mismatch

Cause	Corrective Action
When <b>Detect Mismatch</b> in the Control Panel menu is set to <b>Pause</b> , the type of paper loaded does not match the type specified in the printer driver.	Follow these steps to ensure the paper type matches on the printer and in the printer driver.  1. Press ▲ or ▼ to select Stop Printing, and then press the OK button.
	2. Change the paper type setting in the printer driver to the type loaded in the printer and try printing again.
	Follow these steps to ensure the paper type matches on the printer and in the printer driver.
	1. Press ▲ or ▼ to select Change Paper, and then press the OK button.

Cause	Corrective Action
When <b>Detect Mismatch</b> in the Control Panel menu is set to <b>Pause</b> , the type of paper loaded does not match the type specified in the printer driver.	<ol> <li>Replace the loaded paper with paper of the type and size you have specified in the printer driver.</li> <li>(See "Loading and Printing on Rolls.") →P.19</li> <li>(See "Loading and Printing on Sheets.") →P.21</li> </ol>
	Press ▲ or ▼ to select <b>Print</b> , and then press the <b>OK</b> button to resume printing. However, note that this error may cause paper jams and affect the printing quality.
When <b>Detect Mismatch</b> in the Control Panel menu is set to <b>Warning</b> , the type of paper loaded does not match the type specified in the printer driver.	You can continue to print, but note that this error may cause paper jams or problems in the printing results.

# The paper is too small.

Cause	Corrective Action
When <b>Detect Mismatch</b> in the Control Panel menu is set to <b>Pause</b> , paper smaller than the size specified in the printer driver is loaded.	Press ▲ or ▼ to select <b>Print</b> , and then press the <b>OK</b> button to resume printing. However, note that this error may cause paper jams and affect the printing quality.
	Adjust the paper size setting in the printer driver to match the size loaded in the printer as follows.
	1. Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button.
	2. Change the paper size setting in the printer driver to the size loaded in the printer and try printing again.
	Replace the loaded paper with paper of a size that matches the size setting in the printer driver as follows.
	<ol> <li>Press ▲ or ▼ to select Change Paper, and then press the OK button to stop printing.</li> </ol>
	<ol> <li>Replace the loaded paper to match the settings in the printer driver and try printing again.</li> <li>(See "Loading and Printing on Rolls.") →P.19</li> <li>(See "Loading and Printing on Sheets.") →P.21</li> </ol>
When <b>Detect Mismatch</b> in the Control Panel menu is set to <b>Warning</b> , paper smaller than the size specified in the printer driver is loaded.	You can continue to print, but note that this error may cause problems in the printing results.

#### The paper is too small.

#### "Replace paper with A4/LTR (vertical) or larger"

Cause	Corrective Action
The loaded paper is too small.	Replace the paper with paper of A4/Letter (vertical) size or larger as follows.
	<ol> <li>Press ▲ or ▼ to select Change Paper, press the OK button, and remove the paper.</li> <li>(See "Removing Sheets.") →P397</li> </ol>
	2. Switch to paper A4/Letter (vertical) or larger. (See "Loading and Printing on Sheets.") →P.21 The printer will resume printing.
	Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button.

#### "Replace roll with 10 in. wide or larger roll."

Cause	Corrective Action
The loaded paper is too small.	Replace the roll with a roll 10 inches in width or larger as follows.

611

Cause	Corrective Action
The loaded paper is too small.	<ol> <li>Press ▲ or ▼ to select Change Paper, and then press the OK button.</li> <li>(See "Removing the Roll from the Printer.") →P.378</li> <li>(See "Removing the Roll Holder from Rolls.") →P.381</li> </ol>
	<ol> <li>Replace the roll with a roll 10 inches wide or larger. (See "Attaching the Roll Holder to Rolls.") →P.370 (See "Loading Rolls in the Printer.") →P.373 The printer will resume printing.</li> </ol>
	Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button.

#### "Remove paper and check pap. size"

Cause

# A sheet has come out of the printer during printing.

#### Corrective Action

- 1. Press the Release Lever back and remove the paper.
- 2. Reload the sheet, aligning it with the guide on the right.
- Pull the Release Lever forward.
- 4. If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button.
  Printing will resume, starting from the page on which the error occurred.

(See "Loading Sheets in the Printer.") →P.392

#### **PaprWidth Mismatch**

When **Detect Mismatch** in the Control Panel menu is set to **Pause**, the width of the loaded roll does not match the width specified in **Fit Roll Paper Width** in the printer driver.

Cause

#### Corrective Action

Press ▲ or ▼ to select **Print**, and then press the **OK** button to resume printing.

However, note that this error may cause paper jams and affect the printing quality.

Press ▲ or ▼ to select **Stop Printing**, and then press the **OK** button.

Follow these steps to replace the roll to match the width specified in the printer driver.

- Press ▲ or ▼ to select Change Paper, and then press the OK button.
   (See "Removing the Roll from the Printer.") →P.378
   (See "Removing the Roll Holder from Rolls.") →P.381
- 2. Replace with paper of the width configured in the printer driver.

  (See "Attaching the Roll Holder to Rolls.") →P.370

  (See "Loading Rolls in the Printer.") →P.373

  The printer now starts printing the print job.

Make sure the roll width selected in the dialog box displayed when you select **Fit Roll Paper Width** in the printer driver matches the width of the roll loaded in the printer, and then try printing again.

#### Paper size not detected.

Cause	Corrective Action
Paper has been loaded	Follow these steps to reload the roll.
askew, or warped paper has been loaded.	<ol> <li>Press the OK button and reload the paper.</li> <li>(See "Loading Rolls in the Printer.") →P.373</li> </ol>
	2. Pull the Release Lever forward.

Cause	Corrective Action
Paper has been loaded askew, or warped paper has been loaded.	3. If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button. Printing will resume, starting from the page on which the error occurred.
	If this error recurs after you reload the roll, remove the Roll Holder from the printer, push the roll firmly in until it touches the Roll Holder flange, and reload the Roll Holder in the printer.  (See "Attaching the Roll Holder to Rolls.") →P.370
	Follow these step to reload a sheet.
	1. Push the Release Lever back.
	2. Load the sheet, aligning it with the guide on the right.  (See "Loading Sheets in the Printer.") →P.392
	3. Pull the Release Lever forward.
	4. If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button.  Printing will resume, starting from the page on which the error occurred.

### Insufficient paper for job

Cause

Corrective Action

The printer has received a print job longer than the amount of roll paper left when ManageRemainRoll in the Control Panel menu is On.

Press ▲ or ▼ to select Print, and then press the OK button to resume printing.

However, the roll paper may run out during the print job and you may not be able to print all of the document.

Press ▲ or ▼ to select Change Paper, and then press the OK button to stop printing.

Either change the printer driver Paper Source setting in the printer menu or replace the roll with a roll that has enough paper for the print job, and

(See "Removing the Roll from the Printer.") →P.378

then try printing again.

(See "Loading Rolls in the Printer.") →P.373

Press ▲ or ▼ and select **Stop Printing** or press the **Stop** button to stop printing.

### This paper cannot be used.

Cause	Corrective Action
Paper smaller than the printer's minimum supported size has been loaded.	Push the Release Lever back and load paper of the correct size. (See "Paper Sizes.") →P.360
Paper has been loaded that is too small to print the test pattern for printhead adjustment or nozzle checking.	Push the Release Lever back and load unused paper of A4 size or larger. More than one sheet may be required depending on the adjustment.

### Roll printing is selected.

Cause	Corrective Action
You have attempted to print on a roll, but no roll is loaded.	Press ▲ or ▼ to select "Load Roll Paper", and then press the OK button. Load the roll, and then print.  (See "Attaching the Roll Holder to Rolls.") →P.370  (See "Loading Rolls in the Printer.") →P.373
	Press ▲ or ▼ and select <b>Stop Printing</b> or press the <b>Stop</b> button to stop printing.

### Roll printing is selected, but sheets are loaded.

Cause	Corrective Action
A print job for rolls was received when a sheet is loaded.	Follow these steps to load and print on a roll.  1. Press ▲ or ▼ to select Eject Cut Sheet, press the OK button, and remove the sheet. (See "Removing Sheets.") → P.397
	2. Load a new roll.  (See "Loading Rolls in the Printer.") →P.373  The printer now starts printing the print job.
	Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button.

### The roll is empty.

Cause	Corrective Action	
The roll is empty.	Follow these steps to replace the used roll with a new roll of the same type and size.	
	<ol> <li>Press the Release Lever back and remove the roll.</li> <li>(See "Removing the Roll from the Printer.") →P.378</li> <li>(See "Removing the Roll Holder from Rolls.") →P.381</li> </ol>	
	2. Load the new roll.  (See "Attaching the Roll Holder to Rolls.") →P.370  (See "Loading Rolls in the Printer.") →P.373	
	3. If no barcode was printed on the roll, specify the type of paper.  (See "Changing the Type of Paper.")   P.376	
	<ul> <li>4. When you have selected ManageRemainRoll &gt; On in the control panel menu and a barcode is not printed on the roll, also specify the paper length.</li> <li>(See "Specifying the Paper Length.") →P.378</li> </ul>	
	5. If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button. Printing will resume, starting from the page on which the error occurred. If no message appears, printing will continue from the next page.	
There is remaining roll paper, but because it could not be advanced, it could not be detected.	The unused portion of the roll is heavy, and this is placing a burden on the printer. It may be helpful to change the printing mode, which will change the paper feed timing.  Choose a higher level of <b>Print Quality</b> in the <b>Advanced Settings</b> of the printer driver.  (See "Giving Priority to Particular Graphic Elements and Colors for Printing.")   P.58	

### Sheet printing is selected.

Cause	Corrective Action
You have attempted to print on a sheet, but no sheet is loaded.	Press ▲ or ▼ to select <b>Load Paper</b> , and then press the <b>OK</b> button. Load a sheet, and then print.  (See "Loading and Printing on Sheets.") →P.21
	Press ▲ or ▼ and select <b>Stop Printing</b> or press the <b>Stop</b> button to stop printing.

### Regular printing is selected, but a roll is loaded.

Cause	Corrective Action
A print job for printing on sheets was sent when a roll is loaded.	1. Press ▲ or ▼ to select Remove Roll Paper, and then press the OK button to stop printing.
was sent when a roll is loaded.	<ol> <li>After removing the roll, load and print on a sheet of the type and size of paper you have specified in the printer driver.</li> <li>(See "Removing the Roll from the Printer.") &gt;P.378</li> </ol>

Cause	Corrective Action
A print job for printing on sheets	(See "Loading and Printing on Sheets.") →P.21
was sent when a roll is loaded.	Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button to stop printing.

### Paper jam

Cause	Corrective Action	
A paper jam oc- curred in the printer during printing.	For roll paper, cut the paper on the upper side of the {Paper Feed Slot.  1. Push the Release Lever back and remove the jammed paper.  (See "Clearing Jammed Roll Paper.") →P.579  (See "Clearing a Jammed Sheet.") →P.582	
	2. Load the paper.  (See "Loading Rolls in the Printer.") →P.373  (See "Loading Sheets in the Printer.") →P.392	
	3. Pull the Release Lever forward.	
	4. If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button. Printing will resume, starting from the page on which the error occurred.	

### Paper is crooked.

Cause Corrective Action Paper loaded crooked was detected when the paper was advanced. Follow these steps to reload the roll. 1. Push the Release Lever back. 2. Adjust the right edge of the roll to make it parallel to the orange Paper Alignment Line. **3.** Pull the Release Lever forward. (See "Loading Rolls in the Printer.") →P.373 If this error recurs after you reload the roll, remove the Roll Holder from the printer, push the roll firmly in until it touches the Roll Holder flange, and reload the Roll Holder in the printer. (See "Attaching the Roll Holder to Rolls.") →P.370 Follow these step to reload a sheet. 1. Push the Release Lever back. 2. Pull out the sheet. Pull the Release Lever forward. **4.** Reload the sheet, aligning it with the guide on the right. (See "Loading Sheets in the Printer.") →P.392



To disable this message (if it is displayed repeatedly despite reloading paper, for example), choose Off or Loose in
the Skew Check Lv. setting of the printer menu. However, this may cause jams and printing problems because paper
may be askew when printed. Also, the Platen may become soiled, which may soil the back of the next document
when it is printed.

### Paper not aligned with right guide.

Cause	Corrective Action
When paper was loaded, it was not aligned with the guide on the right side.	Follow these step to reload a sheet.
	<ol> <li>Push the Release Lever back.</li> <li>Pull out the sheet.</li> <li>Pull the Release Lever forward.</li> <li>Reload the sheet, aligning it with the guide on the right.</li> </ol>

### **Cannot detect papr**

Cause	Corrective Action
The printer could not detect the paper.	Reload the paper as follows.
	1. Remove the paper and press the <b>OK</b> button.
	2. Reload the paper.  (See "Loading Sheets in the Printer.") →P392  (See "Loading Rolls in the Printer.") →P373

### Leading edge detection error.

Cause	Corrective Action
The leading edge of the paper cannot be detected.	Follow these step to reload a sheet.
	1. Push the Release Lever back.
	2. Reload the sheet straight, in the correct position. (See "Loading Sheets in the Printer.") →P.392

### Paper cutting failed.

Cause	Corrective Action
There are sheets left on the Ejection Guide.	<ol> <li>Push the Release Lever back and remove the paper.</li> <li>Load the paper.</li> <li>Pull the Release Lever forward.</li> </ol>
	<ul> <li>4. If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button.     Printing will resume, starting from the page on which the error occurred.     </li> <li>(See "Loading Rolls in the Printer.") &gt;P373</li> </ul>
There is a foreign object by the Output Tray, obstructing the Cutter Unit.	<ol> <li>Lift the Top Cover and remove the foreign object.</li> <li>If "Not finished printing. Finish printing remaining jobs?" is shown on the Display Screen, press the OK button. Printing will resume, starting from the page on which the error occurred.</li> </ol>
You are not using the printer under the recommended environmental conditions for the paper.	Use the printer only where the recommended environmental conditions for the paper are met. Note that various environmental conditions are recommended for various types of paper. For details on the recommended environmental conditions for paper, see Paper Reference Guide."  (See "Displaying the Paper Reference Guide.")   P.363
You are using paper that is not compatible with automatic cutting.	<ol> <li>Specify Manual as the cutting method and use scissors or a cutting tool to cut the roll.         (See "Specifying the Cutting Method for Rolls.") →P.386         For information about paper that is compatible with automatic cutting, see the Paper Reference Guide.         (See "Displaying the Paper Reference Guide.") →P.363</li> </ol>

Cause	Corrective Action
You are using paper that is not compatible with automatic cutting.	2. Push the Release Lever back and remove the paper.
In other cases, the Cutter Unit may be damaged.	Contact your Canon dealer for assistance.

# End of paper feed.

Cause	Corrective Action
Although an attempt was made to advance the paper manually, it reached the limit position that can be advanced.	Canceling manual advancing. (See "Feeding Roll Paper Manually.") →P.382

# Rel lever is in wrong position.

Corrective Action
the Release Lever forward.  off the printer and wait a while before restoring power.

### Borderless printng not possible.

Cause	Corrective Action
The print job received specifies a type or width of paper that is not compatible with borderless printing.	Follow these steps to change the settings of the print job to enable borderless printing.
	1. Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button.
	<ol> <li>Make sure the correct printer driver for the printer is selected and try printing again. For information on types of paper compatible with borderless printing, refer to the Paper Reference Guide. (See "Displaying the Paper Reference Guide.") →P.363</li> </ol>
	Press ▲ or ▼ to select <b>Print With Border</b> , and then press the <b>OK</b> button to continue printing. The document will be printed with a border.
The loaded paper is a size not com-	Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button.
patible with borderless printing.	Replace the paper with paper compatible for borderless printing as follows.
	<ol> <li>Press ▲ or ▼ to select Change Paper, and then press the OK button.</li> <li>(See "Removing the Roll from the Printer.") →P.378</li> <li>(See "Removing the Roll Holder from Rolls.") →P.381</li> </ol>
	2. Replace the paper with paper compatible for borderless printing.  (See "Attaching the Roll Holder to Rolls.") →P.370  (See "Loading Rolls in the Printer.") →P.373  The printer now starts printing the print job.  For information on types of paper compatible with borderless printing, refer to the Paper Reference Guide.  (See "Displaying the Paper Reference Guide.") →P.363
	Press ▲ or ▼ to select <b>Print With Border</b> , and then press the <b>OK</b> button to continue printing. The document will be printed with a border.
Because paper expands or contracts depending on the environment of use, it may become narrower or wider than the supported width for borderless printing.	Use each type of paper only where the recommended environmental conditions are met. For details on environmental conditions for various paper, see the <b>Paper Reference Guide</b> . (See " <b>Displaying the Paper Reference Guide</b> .") → P.363

# Paper position not suitable for borderless printing.

Cause	Corrective Action
Because paper expands or contracts depending on the environment of use, it may become narrower or wider than the supported width for borderless printing.	Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button.  Use each type of paper only where the recommended environmental conditions are met. For details on environmental conditions for various paper, see the <b>Paper Reference Guide</b> .  (See "Displaying the Paper Reference Guide.") →P.363
The paper is loaded askew.	Press ▲ or ▼ to select <b>Fix Paper Position</b> and straighten the paper so that the edges are between the ink grooves for borderless printing.  Insert the roll firmly until it touches the flange of the Roll Holder.  (See "Attaching the Roll Holder to Rolls.") →P.370
	Press ▲ or ▼ to select <b>Print With Border</b> , and then press the <b>OK</b> button to continue printing. The document will be printed with a border.
	Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button.

### Roll paper is not securely in contact with roll holder.

Cause	Corrective Action
When the roll was loaded, the roll was not inserted firmly all the way on the Roll Holder.	Follow these steps to reload the roll.  1. Press the <b>OK</b> button and remove the roll holder from the printer.
	2. Insert the roll firmly on the Roll Holder until it touches the flange. (See "Attaching the Roll Holder to Rolls.") →P.370
	3. Load the Roll Holder in the printer.

### iPF680 Ink insufficient.

# Messages regarding ink

Ink insufficient.	619
No ink left.	619
Remaining level of the ink cannot be correctly detected. Check ink tank.	619
Cannot detect ink level correctly. Close tank cover.	619
Close Ink Tank Cover	
Ink tank is empty.	620
Not much ink is left.	620
Check if ink tank is set, and its color and direction.	620
The following ink tanks cannot be recognized.	620
Wrong ink tank.	
Do not pull out ink tank.	620

### Ink insufficient.

Cause	Corrective Action
The ink level is low, so you cannot print, clean the Printhead, or do other operations that require ink.  There is not enough ink of the color with × displayed above the remaining ink indicator.	Press ▲ or ▼ to select <b>Rep. Ink Tank</b> , and then press the <b>OK</b> button. Replace the Ink Tank that is low with a new Ink Tank. (See "Replacing Ink Tanks.") →P.540
	Press ▲ or ▼ to select <b>Continue to print</b> , and then press the <b>OK</b> button to resume printing. However, note that this error may affect the printing quality.
	Press the <b>OK</b> button, open the Ink Tank Cover, and replace the Ink Tank for the color that does not have enough ink. (See "Replacing Ink Tanks.") → P.540

### No ink left.

Cause	Corrective Action
There is no ink left.  There are no ink colors with × displayed above the	Press the <b>OK</b> button, open the Ink Tank Cover, and replace the Ink Tank for the color that is out of ink.
remaining ink indicator.	(See "Replacing Ink Tanks.") →P.540


### Remaining level of the ink cannot be correctly detected. Check ink tank.

Cause	Corrective Action
Ink level detection cannot work correctly if	The refill ink tank can no longer be used. See the section Ink level detection and take the
you use refill ink tanks.	appropriate action. (See "Ink Level Detection.") →P.604

### Cannot detect ink level correctly. Close tank cover.

Cause	Corrective Action
The remaining ink level could not be correctly detected.	Close the Ink Tank Cover. The buzzer stops sounding. Next, "No ink left." →P.619

#### **Close Ink Tank Cover**

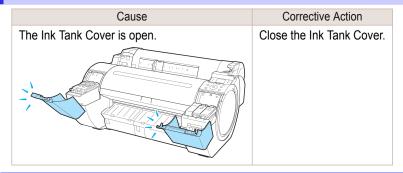

### Ink tank is empty.

Cause	Corrective Action
There is no ink left in an ink tank.  There are no ink colors with × displayed above the remaining ink indicator in the lnk tab top screen.  (See "Checking Ink Tank Levels.") →P.545	Open the Ink Tank Cover, and replace the Ink Tank for the color that is out of ink.  (See "Replacing Ink Tanks.") →P.540

### Not much ink is left.

C	Cause	Corrective Action
Not mud	ch ink is left.	Prepare a new Ink Tank.  We recommend replacing the Ink Tank with a new Ink Tank at this point if you plan to print large-format or high-quantity jobs.

### Check if ink tank is set, and its color and direction.

Cause	Corrective Action
There is no lnk Tank of the indicated color in the printer.	Load the Ink Tank. (See "Replacing Ink Tanks.") →P.540
There is a problem with the Ink Tank.	Replace it with a new lnk Tank. (See "Replacing lnk Tanks.") →P.540

### The following ink tanks cannot be recognized.

Cause	Corrective Action
An Ink Tank that is incompatible with the printer is loaded.	Load an Ink Tank that is compatible with the printer. (See "Replacing Ink Tanks.") →P.540

### Wrong ink tank.

Cause	Corrective Action
The Ink Tank in the printer is incompatible.	Load an Ink Tank specified for use with the printer. (See "Replacing Ink Tanks.") →P.540

### Do not pull out ink tank.

Cause	Corrective Action
The Ink Tank was removed using an incorrect procedure.	Install the Ink Tank that was removed. The buzzer stops sounding. Next, replace the Ink Tank using the procedure on the Display Screen in the Control Panel.

Messages regarding printing or adjustment	
Cannot adjust printhead.	622
Borderless printng not possible.	617
Cannot adjust paper feed.	621

### Cannot adjust paper feed.

Cause	Corrective Action
The Printhead nozzles are clogged.	Execute Adj. Quality again, as follows.
	1. Press the <b>OK</b> button to clear the error.
	2. Print a test pattern to check the nozzles.  (See "Checking for Nozzle Clogging.") →P.549
	3. Clean the Printhead if the nozzles are clogged.  (See "Cleaning the Printhead.") →P.550
	4. Execute Adj. Quality again. (See "Automatic Banding Adjustment.") →P.532
Highly transparent film is loaded that cannot be used for automatic feed amount adjustment.	Press the <b>OK</b> button to clear the error, and then adjust the feed amount manually. (See "Manual Banding Adjustment.") →P.534

# Check printed document.

Cause	Corrective Action
The Printhead nozzles are becoming clogged.	If printing is faint, clean the Printhead. (See "Cleaning the Printhead.") → P.550

# Messages regarding printheads

Cannot adjust printhead	622
Wrong printhead	622
Printhead error	622
Cannot recognize print head	622
Execute printhead cleaning	623

### Cannot adjust printhead.

Cause	Corrective Action
The Printhead nozzles are clogged.	Execute <b>Head Posi. Adj.</b> again, as follows.
	1. Press the <b>OK</b> button to clear the error.
	2. Print a test pattern to check the nozzles. (See "Checking for Nozzle Clogging.") →P.549
	3. Clean the Printhead if the nozzles are clogged.  (See "Cleaning the Printhead.") → P.550
	4. Execute Head Posi. Adj. again. (See "Automatic Adjustment to Straighten Lines and Colors.") →P.524
The Printhead cannot be aligned; highly transparent film is loaded.	Press the <b>OK</b> button to clear the error.  We recommend using a type of paper that you often use, other than film, for Printhead adjustment.  (See "Automatic Adjustment to Straighten Lines and Colors.") →P.524
The Printhead is installed crooked.	Straighten the Printhead as follows, and then execute <b>Head Posi. Adj.</b> again.
	1. Press the <b>OK</b> button to clear the error.
	2. Use <b>Head Inc. Adj.</b> to adjust the angle of inclination of the Printhead. (See "Adjusting Line Misalignment.") >P.527
	3. Execute <b>Head Posi</b> . <b>Adj</b> . again. (See "Automatic Adjustment to Straighten Lines and Colors.") →P.524

### Wrong printhead.

Cause	Corrective Action
An incompatible Printhead has been installed.	Open the Top Cover and replace the Printhead with a new one. (See "Replacing the Printhead.") →P.551

### **Printhead error**

Cause	Corrective Action
There is a problem with the Printhead.	Open the Top Cover and replace the Printhead with a new one. (See "Replacing the Printhead.") →P.551

### Cannot recognize print head.

Cause	Corrective Action
No Printhead is installed.	Follow these steps to install the Printhead.
	1. Open the Top Cover.
	2. Install the Printhead.  (See "Replacing the Printhead.") →P.551
The Printhead cannot be recognized because it is not installed correctly.	Follow these steps to reinstall the Printhead.

Cause	Corrective Action
The Printhead cannot be recognized because it is not installed correctly.	1. Open the Top Cover.
	2. Reinstall the Printhead.  (See "Replacing the Printhead.") →P.551

# Execute printhead cleaning.

Cause	Corrective Action
The Printhead noz- zles are clogged.	Follow these steps to clean the Printhead.  1. Stop printing by pressing ▲ or ▼ to select Stop Printing.
	2. Clean the Printhead.  (See "Cleaning the Printhead.") →P.550
	If the message is still displayed when printing, replace the Printhead.  (See "Replacing the Printhead.") →P.551
	Press ▲ or ▼ to select <b>Print</b> , and then press the <b>OK</b> button to resume printing. However, note that this error may affect the printing quality.

Messages	regarding	the	maintenance	e cartridae

Insert the maintenance cartridge	
Maint. cart. The level is low	624
No Maintenance Cartridge capacity.	
Maintenance cartridge full.	
Maintenance cartridge problem.	624

### Insert the maintenance cartridge.

Cause	Corrective Action
The Maintenance Cartridge is not installed.	Install the Maintenance Cartridge.
	(See "Replacing the Maintenance Cartridge.") →P.558

### Wrong maintenance cartridge.

Cause	Corrective Action
A Maintenance Cartridge for a different model of printer is installed.	Replace it with the Maintenance Cartridge for your particular model. (See "Maintenance Cartridge.") →P.558

### Maint. cart. The level is low

Cause	Cause Corrective Action	
The Maintenance Cartridge is almost full.	You can continue to print, but prepare a new Maintenance Cartridge to use when the message for replacement is displayed.	

### No Maintenance Cartridge capacity.

Cause	Corrective Action
The Maintenance Cartridge cannot absorb enough ink for Printhead cleaning or other operation.	After confirming that the printer has stopped operating, replace the Maintenance Cartridge.  (See "Replacing the Maintenance Cartridge.") →P.558

### Maintenance cartridge full.

Cause	Corrective Action
The Maintenance Cartridge is full.	After confirming that the printer has stopped operating, replace the Maintenance Cartridge.
	(See "Replacing the Maintenance Cartridge.") →P.558

### Maintenance cartridge problem.

	Cause	Corrective Action
An	incompatible or used Maintenance Cartridge has been in-	Install an unused Maintenance Cartridge specified for use with the printer.
stal	lled.	(See "Replacing the Maintenance Cartridge.") →P.558

# Messages regarding HP-GL/2

This type of paper is not compatible with HP-GL/2. 625	
GL2: Wxxxx The memory is full. (xxxx is 0501, 0903, or 0904)	
GL2: W0504 This command is not supported	

### This type of paper is not compatible with HP-GL/2.

Cause	Corrective Action
The printer has received a HP-GL/2 print job that cannot be printed on the paper that has been advanced.	Follow these steps to replace the type of paper in the printer.  1. Press ▲ or ▼ to select <b>Stop Printing</b> , and then press the <b>OK</b> button.
	<ol> <li>Replace the paper with a type compatible with HP-GL/2. For details on paper compatible with HP-GL/2, refer to the Paper Reference Guide.</li> <li>(See "Displaying the Paper Reference Guide.") →P.363</li> </ol>
	Press ▲ or ▼ to select <b>Print</b> , and then press the <b>OK</b> button to resume printing. However, note that this error may cause paper jams and affect the printing quality.

### GL2: Wxxxx The memory is full. (xxxx is 0501, 0903, or 0904)

Cause	Corrective Action
The printer memory is full. Because the entire print job could not be received, the printer may not be able to print the entire original Check the printing results.	

### **GL2: W0502 The parameter is out of range.**

Cause	Corrective Action
A parameter specified in a HP-GL/2 command is out of the supported range.	Check the print job.
	If you have specified <b>ProcessingOption &gt; Warning &gt; On</b> in the Control Panel menu, set it to <b>Off</b> instead.

### GL2: W0504 This command is not supported.

Cause	Corrective Action
The printer has received an unsupported HP-GL/2 command.	Check the print job.
	If you have specified <b>ProcessingOption &gt; Warning &gt; On</b> in the Control Panel menu, set it to <b>Off</b> instead.

# Other Messages

GARO Wxxxx (x represents a number)	626
Top cover is open.	627
Prepare for parts replacement.  Parts replacement time has passed.	. 627 627
Unknown file.  Multi-sensor error	
Error in cutter position.	. 627

### **GARO Wxxxx (x represents a number)**

Cause	Corrective Action
There is a problem with the print job.	Try printing again, using the correct printer driver.
	It is also possible to continue printing in this state. However, you may not be able to obtain the desired printing results.

### **ERROR Exxx-xxxx (x represents a letter or number)**

Cause	Corrective Action
An error requiring service may have occurred.  • ERROR Exxx-xxxx	Write down the error code and message, turn off the printer, and contact your Canon dealer for assistance.
Call for service.	
OK: Printer Info.	

### Hardware error. xxxxxxxxxxxx (x represents a letter or number)

Cause	Corrective Action
The last portion of roll paper was used during a print job. The paper was not advanced because the trailing edge is taped to the roll.	Turn off the printer and remove the roll from the printer before restoring power.
Fastening tape or the Belt Stopper has not been removed inside the Top Cover.	Turn off the printer, open the Top Cover and remove the tape or the Belt Stopper before restoring power.
An error requiring service may have occurred.  Hardware error.  xxxxxxxxxxxxxx  Turn off printer,  wait, then  turn on again.  OK: Printer Info.	Turn off the printer and wait at least three seconds before restoring the power.  If the message is displayed again, write down the error code and message, turn off the printer, and contact your Canon dealer for assistance.

### Hardware error. 03130031-2F7x (x is 0, 1, or 2)

Cause	Corrective Action
The ink tank is not installed correctly.	Turn off the power, remove and then reinstall all of the ink tanks, and then turn on the power. If the same message is displayed again, write down the error code and message, turn off the printer, and contact your Canon dealer for assistance. (See "Replacing Ink Tanks.") >P.540

### Top cover is open.

Cause	Corrective Action
The printer has detected that the Top Cover is open.	Open the Top Cover fully, remove any foreign objects, and close the Top Cover again.
	If the error occurs again, close the Top Cover, turn off the printer, and wait a while before restoring power.

### Prepare for parts replacement.

Cause	Corrective Action
It is almost time to replace consumables for which service is required.	If "Parts replacement time has passed." is displayed, you can continue to use the printer for some time.  Contact your Canon dealer for assistance.

### Parts replacement time has passed.

Cause	Corrective Action
It is past the recommended time to replace consumables for which service is required.	Contact your Canon dealer for assistance.

### Unknown file.

Cause	Corrective Action
Data sent to keep the printer up to date (such as paper information) is in the wrong format.	Check the data. Turn off the printer and wait a while before restoring power, and then resend the data.
You have uploaded firmware for a different model.	Check the firmware version. Turn off the printer and wait a while before restoring power, and then resend the firmware.
	If the message is displayed again, contact your Canon dealer for assistance.

### Multi-sensor error

Cause	Corrective Action
Direct sunlight or strong lighting may be shining on the printer and causing the sensor to malfunction.	Take steps to ensure the printer is not used when exposed to direct sunlight or strong lighting.
The performance of a sensor inside the printer may be impaired.	Turn off the printer and wait at least three seconds before restoring the power. If the message is displayed again, contact your Canon dealer for assistance.

### **Error** in cutter position.

Cause	Corrective Action
The Cutter Unit stops in the middle of cutting.	1. Push the Release Lever back and remove the paper.
	2. Pull the Release Lever forward.

# Memo

### iPF680

User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607

# **Specifications**

⊃rinter	Specifications	)	63	(
---------	----------------	---	----	---

ppenaix	633

### 630

# **Printer Specifications**

Specifications 630
Print Area 631

### **Specifications**



• The following values may vary depending on the operating environment.

#### Printer

Power supply		100-240 V AC (50/60 Hz	·)
Power consumption	During operation	140 W max.	
	Sleep mode	5 W max.	
	Off	0.5 W max. (*1)	
Operating noise (*2)	Sound pressure level	During operation	Approx. 47 dB (A)
		Standby	35 dB (A) max.
	Audio power level (during opera	tion)	Approx. 6.4 bels
Operating environment	Temperature	15-30°C (59-86°F)	
	Humidity	10–80%, non-condensing	
Dimensions (W × D × H)	Printer only		997×757×507 mm (39.3×29.8×20.0 in)
	Printer and Stand (When the Output Stacker is used)	Extended position A	997×887×1,062 mm (39.3×34.9×41.8 in)
		Extended position B	997×1,100×1,062 mm (39.3×43.3×41.8 in)
Weight	Printer only	Approx. 46.0 kg (101.4lb)	)
	Main unit and Stand(including Roll Holder. Does not include Printhead and Ink Tank.)	Approx. 56.7 kg (125.0 lb)	
Space for installation (W × D ×	Printer only	1,397×1,367×807 mm (55.0×53.8×31.8 in)	
H)	Printer and Stand	1,397×1,700×1,362 mm (55.0×66.9×53.6 in)	
Related standards International Energy Star Program, Law on Promoting Green Purcha (Japan), RoHS		n Purchasing/GPN (Japan), Eco Mark	

<sup>\*1:</sup> The printer uses a trace amount of power even when turned off. To stop all power consumption, turn off the printer and unplug the power cord.

#### Printing performance

Print method	Bubblejet
Maximum resolution	2400 dpi horizontally (*1) × 1200 dpi vertically
Printhead	PF-04
Number of nozzles	MBK: 5120; Others: 2560 each color

<sup>\*1:</sup> Prints with a minimum 1/2400 inch dot pitch between ink droplets.

<sup>\*2:</sup> Calculation based on ISO 7779. Operating conditions: On the **Main** sheet of the printer driver, **Media Type** > Plain Paper, **Advanced Settings** > **Print Priority** > **Line Drawing/Text**, and **Print Quality** > **Standard**.

Print Area

#### Memory

Memory	256 MB
--------	--------

#### Interface

USB	Format	Internal port
	Mode	Full-speed (12 Mbps), high-speed (480 Mbps), bulk transfer
	Connector	Series B (4-pin)
Ethernet	Format	Internal port
	Specification	IEEE 802.3 10Base-T, IEEE 802.3u 100Base-TX/Auto-Negotiation, IEEE 802.3ab 1000Base-T/Auto-Negotiation, IEEE 802.3x Full Duplex IEEE 802.3az EEE
	Protocols	SNMP (supports Canon-MIB), HTTP, TCP/IP (IPv4/IPv6)

#### Ink

For information on the ink the printer supports, see "Ink Tanks." →P.540

#### **Paper**

For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Displaying the Paper Reference Guide.") →P.363

Paper width	For information on the	For information on the paper widths the printer supports, see "Paper Sizes." →P.360	
Minimum paper length	Rolls	203.2 mm (8.0 in)	
	Sheets	279.4 mm (11.0 in)	
Maximum printable length (*1)	Rolls	18 m (19.7 yd)	
	Sheets	1,600 mm (63.0 in)	
Thickness	Rolls	0.07-0.8 mm (0.0028-0.031 in)	
	Sheets	0.07-0.8 mm (0.0028-0.031 in)	
Roll maximum outer diameter Supported paper core inner diameter		150 mm (6 in) or shorter	
		2 inches / 3 inches	
Print area For details, see "Print Area."		Area." →P.631	

<sup>\*1:</sup> Varies depending on the operating system or application.

Roll Holder Set	Roll Holder Set RH2-26
Stand	Printer Stand ST-27
Stand(*1)	Printer Stand ST-27

<sup>\*1:</sup> The stand that is included depends on the region where you purchased the printer.

#### **Print Area**

A margin required by the printer is added with respect to the size of paper loaded in the printer. Except in borderless printing, the actual printing area corresponds to the paper size minus the space for this margin.



Print Area

- Printable Area: The area that can be printed.
- There is no margin (that is, a margin of 0 mm) during borderless printing on rolls.
- Recommended Print Area: We recommend printing within this area.
- To print so that your original matches the print area exactly, use an oversized paper size that includes the required margin. (See "Printing on Oversize Paper.") →P.76

	Margins of Printable Area			Margins of Recommended Print Area		
	Top Edge Bottom Edge Sides Top Edge Bottom Edge		Sides			
Sheets	3 mm (0.12 in)	23 mm (0.91 in)	3 mm (0.12 in)	20 mm (0.79 in)	23 mm (0.91 in)	5 mm (0.20 in)
Rolls	0/3 mm (0/0.12 in)	0/3 mm (0/0.12 in)	0/3 mm (0/0.12 in)	20 mm (0.79 in)	5 mm (0.20 in)	5 mm (0.20 in)

#### Sheets




#### Printable Area

a margin of 3 mm (0.12 in) on top, 23 mm (0.91 in) on bottom, and 3 mm (0.12 in) on left and right sides is required.

#### · Recommended Print Area

A margin of 20 mm (0.79 in) on top, 23 mm (0.91 in) on bottom, and 5 mm (0.20 in) on left and right sides is required.

#### Rolls

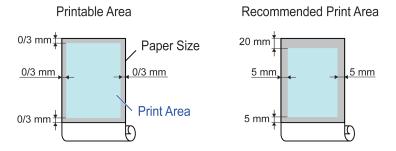

#### Printable Area

A margin of 3 mm (0.12 in) on all sides is required. During borderless printing, the margin on all sides is 0 mm. For information on paper compatible with borderless printing, see the **Paper Reference Guide**. (See "Types of Paper.") >P.360

#### Recommended Print Area

A margin of 20 mm (0.79 in) on top, 5 mm (0.20 in) on bottom, and 5 mm (0.20 in) on left and right sides is required.

# Appendix

### iPF680

User's Guide

Basic Printing Workflow	15
Enhanced Printing Options	31
Windows Software	157
Mac OS Software	275
Handling and Use of Paper	359
Control Panel	435
Printer Parts	473
Network Setting	483
Print Job Management	503
Adjustments for Better Print Quality	523
Maintenance and Consumables	539
Troubleshooting	577
Error Message	607
Specifications	629

# **Appendix**

▲Safety Precautions	634
Manuals for this printer	638
Disposal of the product	640

### Safety Precautions

Safety Precautions	. 634
Legal Notices	636

### **Safety Precautions**

Follow the warnings and precautions below to use the printer safely. Do not perform any operations or procedures other than as described in this manual. Doing so may result in unexpected accidents and can cause a fire or electrical shocks.

#### Printer location



Do not set up the printer in any location exposed to alcohol, thinner, or other volatile liquids. If these substances come
into contact with electrical components inside the printer, there is a risk of fire or electrical shock.



- Never install the printer on an unstable or vibrating surface. If it falls over, this could cause personal injury.
- Never set up the printer in a location that is exposed to high humidity or large amounts of dust, or exposed to direct sunlight, high temperature, or open flame. This could cause a fire or electrical shock. Use the printer location in an environment where temperature and humidity are within the ranges of 15 °C to 30 °C (59 °F to 86 °F) and 10 to 80% RH (with no condensation).
  - Never place the printer on a heavy wool or shag carpet. The fibers may enter the printer and cause a fire.
  - Keep the area around the power outlet clear of items so that you can disconnect the power cable immediately if the
    printer starts operating abnormally. In the event of a printer malfunction, remove the power cable from the outlet as
    soon as possible to prevent fire and electrical shocks.
  - Do not install the printer near sources of strong electromagnetic fields, whether equipment that generates such fields
    or places where such fields occur. This could damage the printer or cause malfunction.

#### Power Supply



Never handle the power cable with wet hands. Doing so may cause electrical shock.

- Warning Insert the power cable securely and completely into the power source. If the power cable is not inserted completely, this could cause a fire or electrical shock.
  - Do not use any power cable other than the one provided. This could cause a fire or electrical shock. Never use the power cable with any other electrical device.
  - Never cut the power cable or attempt to modify it, and never stretch it or bend it forcefully. Never place a heavy object
    on the power cable. Damaged sections of the power cable could cause a short circuit and may cause a fire or electrical shock.
  - Never connect the power cable to a power strip or any power source shared by other electrical devices. This could
    cause a fire or electrical shock.
  - Never knot the power cable or wrap it around itself. This could cause a fire or electrical shock.
  - Periodically disconnect the power cable and use a dry cloth to wipe away dust that has collected on the plug and the
    area around the power outlet. Leaving the power cable plugged in and not cleaned for a long period, especially in an
    area subject to dust, oil, and humidity, could cause the insulation material to deteriorate and lead to a fire.

Appendix



Always grip the plug to remove the power cable from the power outlet. Pulling on the power cable could damage the
cable and lead to a fire or electrical shock.

- Never use an extension cord. This could cause a fire or electrical shock.
- Never use any power source other than 100–120 / 220–240 V AC. This could cause a fire or electrical shock. The
  printer operating conditions are described below. Use the printer under the following conditions.

Power supply voltage: 100-120 / 220-240 V AC

Power supply frequency: 50/60 Hz

#### In an Emergency



If the printer emits smoke or strange odors, continuing to use the printer may cause a fire or electrical shock. Switch
the printer off immediately and remove the power plug from the power outlet. Contact your Canon dealer or support
center.

#### Cleaning the Printer



For cleaning, use a cloth dampened in water. Never use flammable solvents such as alcohol, benzene, or thinner. If
these substances come into contact with electrical components inside the printer, there is a risk of fire or electrical
shock.



 Always disconnect the power cable from the outlet before cleaning the printer. If the printer is switched on accidentally, moving parts inside the printer may cause personal injuries.

#### **Pacemakers**



This printer generates a low-level magnetic field. Anyone wearing a pacemaker who experiences discomfort while
working around the printer should leave the area. Consult a physician before continuing to work around the printer.

#### Moving the Printer



- Moving the printer requires at least three people, holding it on both sides and from behind. Be careful to avoid back strain and other injuries.
- When moving the printer, firmly grasp the Carrying Handles under each side and in back. The printer may be unsteady
  if you hold it at other positions, which poses a risk of injury from dropping the printer.

#### Printhead, Ink Tanks, and Maintenance Cartridge




- Always store consumables in a safe location out of the reach of small children. If a child licks or ingests ink accidentally, seek medical assistance immediately.
- If ink accidentally gets in your eyes, immediately rinse with water.
   If ink gets on your skin, immediately clean it off with soap and water.
   If irritation persists in your eyes or on your skin, contact a physician immediately.
- Avoid dropping or shaking printheads, ink tanks, and maintenance cartridges. Spilled ink can stain clothing and the work area.
- Never touch the electrical contacts of the Printhead after printing. The contacts become extremely hot and can cause minor burns.

Other



- Never disassemble the printer or attempt repairs. There are high voltage parts inside the printer that can cause a fire or electrical shock.
- Never use flammable sprays around the printer. The gas of flammable sprays can cause a fire or electrical shock, if it
  contacts high voltage points inside the printer.
- Never touch the cutting edge of Cutter Unit (a). This could cause personal injury.

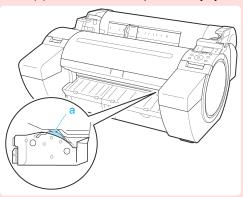



- Never insert your hand into the printer while it is printing. Moving parts inside the printer can cause injuries.
- Never place anything on the printer such as small metal objects (paper clips, staples), liquids, any type of liquid container that contains flammable liquids (alcohol, benzene, etc.). If such objects fall into the printer, this could cause a fire or electrical shock.
  - To prevent a fire hazard or dangerous electric shock, if a foreign object falls into or a liquid spills into the printer, press the Power button immediately to switch the printer off, unplug the printer power cable from the outlet, and then contact your Canon dealer or support center. If you continue to use the printer, this could cause a fire or electrical shock.



- Connect the interface cable correctly. To avoid damage, before connection make sure that the shape of the cable connector matches the connection point on the printer.
- During printing, turn on the ventilation system in the room.
- We recommend ensuring ample space for installation.

### **Legal Notices**

#### FCC Regulations (U.S.A)

Canon Large Format Printer

iPF680

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Safety Precautions

Legal Notices

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual.

If such changes or modifications should be made, you could be required to stop operation of the equipment. Canon U.S.A. Inc.

One Canon Park Melville, NY 11747, U.S.A.

Tel No. 1-800-652-2666

#### For CA, USA Only

Included battery contains Perchlorate Material - special handling may apply. See http://www.dtsc.ca.gov/hazardouswaste/perchlorate/ for detail.

#### Trademarks

- Canon, the Canon logo, and imagePROGRAF are trademarks or registered trademarks of CANON INC.
- Microsoft is a registered trademark of Microsoft Corporation.
- Windows is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Windows Vista is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Excel, Internet Explorer and PowerPoint are registered trademarks or trademarks of Microsoft Corporation in the U.S. and/or other countries.
- Mac, Mac OS, Bonjour, Safari and OS X are trademarks of Apple Inc., registered in the U.S. and other countries.
- Adobe RGB, a trademark of Adobe Systems Incorporated, is color space proposed by Adobe Systems Incorporated.

#### Copyright

Unauthorized reproduction of this user manual in whole or part is prohibited.

#### Legal Notice


- It is illegal to reproduce currency, bills, negotiable securities and other documents prohibited by law. Reproduction of such items may be subject to criminal prosecution.
- It is illegal to reproduce legal certificates, licenses, travel tickets, and certain public and private documents prohibited from reproduction by law. Reproduction of such items may be subject to criminal prosecution.
- Please note that intellectual property protected by copyright may not be reproduced without the express permission of the copyright holder except for personal or household use under limited circumstances.

# Manuals for this printer

### Manuals for this printer

This printer has the following manuals.

Name	Contents	Medium	
Setup Guide	Instructions for unpacking and setting up the printer, and for installing the software and electronic manuals.	Printed Manuals	
Quick Guide	Contains information such as a guide to exchanging paper, Ink Tank, and Printhead, and cautions for using the product safely.		
Basic Guide	Descriptions of basic printer operations.	Electronic manuals	
User's Guide	Detailed instructions for using the printer.		
Paper Reference Guide	This guide describes about the types and specifications of the available media on the printer.		

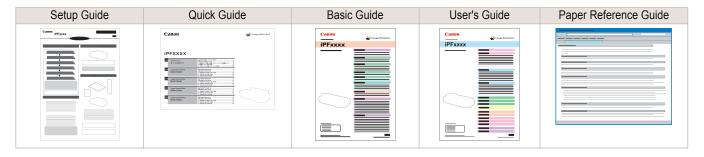

### **About This User Manual**

Symbols

The following symbols are used in this user manual to indicate safety information and explanations on restrictions or precautions in use.

Warning	Indicates warning items for which operating error poses a risk of death or serious injury. To ensure safe use, always follow these warnings.
Caution	Indicates caution items for which operating error poses a risk of injury. To ensure safe use, always follow these cautions.
Important	Indicates important information and restrictions that definitely are to be followed during operation. Be sure to read this information to prevent troubles, malfunctions, or damage to equipment or property by operating errors.
Note	Indicates helpful reference information and supplemental information on particular topics.

#### Button names and user interface elements

Key and button names on the control panel and user interface elements in software (such as menus and buttons) are indicated as follows in this user manual.

Control panel buttons	Example: Press the <b>OK</b> button.
Control panel messages	Example: <b>Head Cleaning</b> is displayed.
Software interface items	Example: Click <b>OK</b> .

(menus and buttons)	Example: Click <b>OK</b> .
Keyboard keys	Example: Press the Tab key.

#### Cross-reference

Other pages or manuals that provide related information are indicated as follows in this user manual.

Cross-reference in the same user manual	Example: see "Menu Structure." →P.450 Click the link to jump to the corresponding page.
Cross-reference in related manuals	Example: Refer to the Paper Reference Guide.
Other cross-reference	Example: See the printer driver help.

#### Figures and software screens

- Figures in this user manual may be different from the actual appearance of the printer in some cases.
- Screens depicted in this user manual for the printer driver or other software may be different from the actual screens because of subsequent updates.

#### · May we request

- The information in this user manual is subject to change without notice.
- We strive to ensure accuracy of information in this user manual, but if you notice errors or omissions, contact support center.

WEEE Directive iPF680

### Disposal of the product

#### **WEEE Directive**





#### Only for European Union and EEA (Norway, Iceland and Liechtenstein)

These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2012/19/EU), the Battery Directive (2006/66/EC) and/or national legislation implementing those Directives. If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration above an applicable threshold specified in the Battery Directive.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit  $\rightarrow$  www.canon-europe.com/weee , or  $\rightarrow$  www.canon-europe.com/battery

#### Nur für Europäische Union und EWR (Norwegen, Island und Liechtenstein)

Diese Symbole weisen darauf hin, dass dieses Produkt gemäß WEEE-Richtlinie (2012/19/EU; Richtlinie über Elektround Elektronik-Altgeräte), Batterien-Richtlinie (2006/66/EG) und nationalen Gesetzen zur Umsetzung dieser Richtlinien nicht über den Hausmüll entsorgt werden darf.

Falls sich unter dem oben abgebildeten Symbol ein chemisches Symbol befindet, bedeutet dies gemäß der Batterien-Richtlinie, dass in dieser Batterie oder diesem Akkumulator ein Schwermetall (Hg = Quecksilber, Cd = Cadmium, Pb = Blei) in einer Konzentration vorhanden ist, die über einem in der Batterien-Richtlinie angegebenen Grenzwert liegt. Dieses Produkt muss bei einer dafür vorgesehenen Sammelstelle abgegeben werden. Dies kann z. B. durch Rückgabe beim Kauf eines neuen ähnlichen Produkts oder durch Abgabe bei einer autorisierten Sammelstelle für die Wiederaufbereitung von Elektro- und Elektronik-Altgeräten sowie Batterien und Akkumulatoren geschehen. Der unsachgemäße Umgang mit Altgeräten kann aufgrund potenziell gefährlicher Stoffe, die generell mit Elektro- und Elektronik-Altgeräten in Verbindung stehen, negative Auswirkungen auf die Umwelt und die menschliche Gesundheit haben.

Durch Ihre Mitarbeit bei der umweltgerechten Entsorgung dieses Produkts tragen Sie zu einer effektiven Nutzung natürlicher Ressourcen bei.

Um weitere Informationen über die Wiederverwertung dieses Produkts zu erhalten, wenden Sie sich an Ihre Stadtverwaltung, den öffentlich-rechtlichen Entsorgungsträger, eine autorisierte Stelle für die Entsorgung von Elektro- und Elektronik-Altgeräten oder Ihr örtliches Entsorgungsunternehmen oder besuchen Sie → www.canon-europe.com/weee , oder → www.canon-europe.com/battery .

#### Union Européenne, Norvège, Islande et Liechtenstein uniquement.

Ces symboles indiquent que ce produit ne doit pas être mis au rebut avec les ordures ménagères, comme le spécifient la Directive européenne DEEE (2012/19/UE), la Directive européenne relative à l'élimination des piles et des accumulateurs usagés (2006/66/CE) et les lois en vigueur dans votre pays appliquant ces directives.

Si un symbole de toxicité chimique est imprimé sous le symbole illustré ci-dessus conformément à la Directive relative aux piles et aux accumulateurs, il indique la présence d'un métal lourd (Hg = mercure, Cd = cadmium, Pb = plomb) dans la pile ou l'accumulateur à une concentration supérieure au seuil applicable spécifié par la Directive.

641

Ce produit doit être confié au distributeur à chaque fois que vous achetez un produit neuf similaire, ou à un point de collecte mis en place par les collectivités locales pour le recyclage des Déchets des Équipements Électriques et Électroniques (DEEE). Le traitement inapproprié de ce type de déchet risque d'avoir des répercussions sur l'environnement et la santé humaine, du fait de la présence de substances potentiellement dangereuses généralement associées aux équipements électriques et électroniques.

Votre entière coopération dans le cadre de la mise au rebut correcte de ce produit favorisera une meilleure utilisation des ressources naturelles.

Pour plus d'informations sur le recyclage de ce produit, contactez vos services municipaux, votre éco-organisme ou les autorités locales compétentes, ou consultez le site > www.canon-europe.com/weee , ou

→ www.canon-europe.com/battery

#### Uitsluitend bestemd voor de Europese Unie en EER (Noorwegen, IJsland en Liechtenstein)

Met deze symbolen wordt aangegeven dat dit product in overeenstemming met de AEEA-richtlijn (2012/19/EU), de richtlijn 2006/66/EG betreffende batterijen en accu's en/of de plaatselijk geldende wetgeving waarin deze richtlijnen zijn geïmplementeerd, niet bij het normale huisvuil mag worden weggegooid.

Indien onder het hierboven getoonde symbool een chemisch symbool gedrukt staat, geeft dit in overeenstemming met de richtlijn betreffende batterijen en accu's aan dat deze batterij of accu een zwaar metaal bevat (Hg = kwik, Cd = cadmium. Pb = lood) waarvan de concentratie de toepasselijke drempelwaarde in overeenstemming met de genoemde richtlijn overschrijdt.

Dit product dient te worden ingeleverd bij een hiervoor aangewezen inzamelpunt, bijv. door dit in te leveren bij een hiertoe erkend verkooppunt bij aankoop van een gelijksoortig product, of bij een officiële inzameldienst voor de recycling van elektrische en elektronische apparatuur (EEA) en batterijen en accu's. Door de potentieel gevaarlijke stoffen die gewoonlijk gepaard gaan met EEA, kan onjuiste verwerking van dit type afval mogelijk nadelige gevolgen hebben voor het milieu en de menselijke gezondheid. Uw medewerking bij het op juiste wijze weggooien van dit product draagt bij tot effectief gebruik van natuurlijke hulpbronnen.

Voor verdere informatie over recycling van dit product kunt u contact opnemen met uw plaatselijke gemeente, afvaldienst, officiële dienst voor klein chemisch afval of afvalstortplaats, of kunt u terecht op

→ www.canon-europe.com/weee , of → www.canon-europe.com/battery .

#### Sólo para la Unión Europea y el Área Económica Europea (Noruega, Islandia y Liechtenstein)

Estos iconos indican que este producto no debe desecharse con los residuos domésticos de acuerdo con la Directiva sobre RAEE (2012/19/UE) y la Directiva sobre Pilas y Acumuladores (2006/66/CE) y/o la legislación nacional. Si aparece un símbolo químico bajo este icono, de acuerdo con la Directiva sobre Pilas y Acumuladores, significa que la pila o el acumulador contiene metales pesados (Hg = Mercurio, Cd = Cadmio, Pb = Plomo) en una concentración superior al límite especificado en dicha directiva.

Este producto deberá entregarse en un punto de recogida designado, por ejemplo, entregándolo en el lugar de venta al adquirir un producto nuevo similar o en un centro autorizado para la recogida de residuos de aparatos eléctricos y electrónicos (RAEE), baterías y acumuladores. La gestión incorrecta de este tipo de residuos puede afectar al medio ambiente y a la salud humana debido a las sustancias potencialmente nocivas que suelen contener estos aparatos. Su cooperación en la correcta eliminación de este producto contribuirá al correcto aprovechamiento de los recursos naturales.

Los usuarios tienen derecho a devolver pilas, acumuladores o baterías usados sin coste alguno. El precio de venta de pilas, acumuladores y baterías incluye el coste de la gestión medioambiental de su desecho, y no es necesario mostrar la cuantía de dicho coste en la información y la factura suministradas a los usuarios finales.

Si desea más información sobre el reciclado de este producto, póngase en contacto con su municipio, el servicio o el organismo encargado de la gestión de residuos domésticos o visite > www.canon-europe.com/weee , o

→ www.canon-europe.com/battery

#### Solo per Unione Europea e SEE (Norvegia, Islanda e Liechtenstein)

Questi simboli indicano che il prodotto non può essere smaltito con i rifiuti domestici, ai sensi della Direttiva RAEE (2012/19/UE), della Direttiva sulle Batterie (2006/66/CE) e/o delle leggi nazionali che attuano tali Direttive. Se sotto il simbolo indicato sopra è riportato un simbolo chimico, in osservanza della Direttiva sulle batterie, tale simbolo indica la presenza di un metallo pesante (Hg = Mercurio, Cd = Cadmio, Pb = Piombo) nella batteria o nell'accumulatore con un livello di concentrazione superiore a una soglia applicabile specificata nella Direttiva sulle batterie.

WEEE Directive iPF680

Il prodotto deve essere conferito a un punto di raccolta designato, ad esempio il rivenditore in caso di acquisto di un nuovo prodotto simile oppure un centro di raccolta autorizzato per il riciclaggio di rifiuti di apparecchiature elettriche ed elettroniche (RAEE) nonché di batterie e accumulatori. Un trattamento improprio di questo tipo di rifiuti può avere conseguenze negative sull'ambiente e sulla salute umana a causa delle sostanze potenzialmente nocive solitamente contenute in tali rifiuti.

La collaborazione dell'utente per il corretto smaltimento di questo prodotto contribuirà a un utilizzo efficace delle risorse naturali ed eviterà di incorrere in sanzioni amministrative ai sensi dell'art. 255 e successivi del Decreto Legislativo n. 152/06.

Per ulteriori informazioni sul riciclaggio di questo prodotto, contattare le autorità locali, l'ente responsabile della raccolta dei rifiuti, un rivenditore autorizzato o il servizio di raccolta dei rifiuti domestici, oppure visitare il sito

→ www.canon-europe.com/weee , 0 → www.canon-europe.com/battery .

#### Apenas para a União Europeia e AEE (Noruega, Islândia e Liechtenstein)

Estes símbolos indicam que este produto não deve ser eliminado juntamente com o seu lixo doméstico, segundo a Diretiva REEE de 2012/19/UE, a Diretiva de Baterias (2006/66/CE) e/ou a sua legislação nacional que transponha estas Diretivas.

Se houver um símbolo químico impresso como mostrado abaixo, de acordo com a Diretiva de Baterias, isto indica que um metal pesado (Hg = Mercúrio, Cd = Cádmio, Pb = Chumbo) está presente nesta pilha ou acumulador, numa concentração acima de um limite aplicável especificado na Diretiva.

Este produto deve ser entregue num ponto de recolha designado, por exemplo num local autorizado de troca quando compra um equipamento novo idêntico, ou num local de recolha autorizado para reciclar equipamento elétrico e eletrónico (EEE) em fim de vida, bem como pilhas e baterias. O tratamento inadequado deste tipo de resíduos pode ter um impacto negativo no ambiente e na saúde humana, devido a substâncias potencialmente perigosas que estão associadas com equipamentos do tipo EEE.

A sua cooperação no tratamento correto deste produto irá contribuir para a utilização mais eficaz dos recursos naturais.

Para obter mais informações acerca de como reciclar este produto, por favor contacte as suas autoridades locais responsáveis pela matéria, serviço de recolha aprovado para pilhas e baterias ou serviço de recolha de resíduos sólidos domésticos da sua municipalidade, ou visite 

www.canon-europe.com/weee , ou

→ www.canon-europe.com/battery

#### Gælder kun i Europæiske Union og EØS (Norge, Island og Liechtenstein)

Disse symboler betyder, at produktet ikke må bortskaffes sammen med dagrenovation i henhold til WEEE-direktivet (2012/19/EU), batteridirektivet (2006/66/EF) og/eller den lokale lovgivning, som disse direktiver er gennemført i. Hvis der i overensstemmelse med batteridirektivet er trykt et kemisk symbol under det symbol, der er vist ovenfor, betyder det, at batteriet eller akkumulatoren indeholder tungmetaller (Hg = kviksølv, Cd = cadmium, Pb = bly) i en koncentration, som ligger over de grænseværdier, der er beskrevet i batteridirektivet.

Produktet skal afleveres på et godkendt indsamlingssted, f.eks. i overensstemmelse med en godkendt én-til-én-procedure, når du indkøber et nyt tilsvarende produkt, eller på et godkendt indsamlingssted for elektronikaffald samt for batterier og akkumulatorer. Forkert håndtering af denne type affald kan medføre negative konsekvenser for miljøet og menneskers helbred på grund af de potentielt sundhedsskadelige stoffer, der generelt kan forefindes i elektrisk og elektronisk udstyr.

Når du foretager korrekt bortskaffelse af produktet, bidrager du til effektiv brug af naturressourcerne. Kontakt din kommune, den lokale affaldsmyndighed, det lokale affaldsanlæg, eller besøg > www.canon-europe.com/weee , eller > www.canon-europe.com/battery for at få flere oplysninger om genbrug af dette produkt.

#### Μόνο για την Ευρωπαϊκή Ένωση και τον ΕΟΧ (Νορβηγία, Ισλανδία και Λιχτενστάιν)

Αυτά τα σύμβολα υποδεικνύουν ότι αυτό το προϊόν δεν πρέπει να απορρίπτεται μαζί με τα οικιακά απορρίμματα, σύμφωνα με την Οδηγία για τα Απόβλητα Ηλεκτρικού και Ηλεκτρονικού Εξοπλισμού (ΑΗΗΕ) (2012/19/ΕΕ), την Οδηγία για τις Ηλεκτρικές Στήλες (2006/66/ΕΚ) ή/και την εθνική νομοθεσία που εφαρμόζει τις Οδηγίες εκείνες. Εάν κάποιο χημικό σύμβολο είναι τυπωμένο κάτω από το σύμβολο που φαίνεται παραπάνω, σύμφωνα με την Οδηγία για τις Ηλεκτρικές Στήλες, υποδηλώνει ότι κάποιο βαρύ μέταλλο (Hg = Υδράργυρος, Cd = Κάδμιο, Pb = Μόλυβδος) υπάρχει στην μπαταρία ή τον συσσωρευτή σε συγκέντρωση μεγαλύτερη από το ισχύον επίπεδο που καθορίζεται στην Οδηγία για τις Ηλεκτρικές Στήλες.

643

Αυτό το προϊόν πρέπει να παραδίδεται σε καθορισμένο σημείο συλλογής, π.χ. σε μια εξουσιοδοτημένη βάση ανταλλαγής όταν αγοράζετε ένα νέο παρόμοιο προϊόν ή σε μια εξουσιοδοτημένη θέση συλλογής για την ανακύκλωση των αποβλήτων ηλεκτρικού και ηλεκτρονικού εξοπλισμού (ΗΗΕ) και των ηλεκτρικών στηλών και συσσωρευτών. Ο ακατάλληλος χειρισμός αυτού του τύπου αποβλήτων μπορεί να έχει αρνητικό αντίκτυπο στο περιβάλλον και την υγεία του ανθρώπου, λόγω δυνητικά επικίνδυνων ουσιών που γενικά συνδέονται με τον ΗΗΕ.

Η συνεργασία σας για τη σωστή απόρριψη αυτού του προϊόντος θα συμβάλει στην αποτελεσματική χρήση των φυσικών πόρων.

Για περισσότερες πληροφορίες σχετικά με ανακύκλωση αυτού του προϊόντος, επικοινωνήστε με το τοπικό γραφείο της πόλης σας, την υπηρεσία απορριμμάτων, το εγκεκριμένο σχήμα ή την υπηρεσία απόρριψης οικιακών αποβλήτων ή επισκεφθείτε τη διεύθυνση → www.canon-europe.com/weee ή → www.canon-europe.com/battery .

#### Gjelder kun den europeiske union og EØS (Norge, Island og Liechtenstein)

Disse symbolene indikerer at dette produktet ikke skal kastes sammen med husholdningsavfall, i henhold til WEEE-direktivet (2012/19/EU), batteridirektivet (2006/66/EF) og/eller nasjonal lov som har implementert disse direktivene. Hvis et kjemisk symbol vises under symbolet vist ovenfor, i samsvar med batteridirektivet, indikerer dette at et tungmetall (Hg = kvikksølv, Cd = kadmium, Pb = bly) finnes i batteriet eller akkumulatoren i en konsentrasjon over en gjeldende øvre grense som er spesifisert i batteridirektivet.

Produktet må leveres til et dertil egnet innsamlingspunkt, det vil si på en autorisert en-til-en-basis når en kjøper et nytt lignende produkt, eller til et autorisert innsamlingssted for resirkulering av avfall fra elektrisk og elektronisk utstyr (EE-utstyr) og batterier og akkumulatorer. Feil håndtering av denne typen avfall kan være miljø- og helseskadelig på grunn av potensielt skadelige stoffer som ofte brukes i EE-utstyr.

Din innsats for korrekt avhending av produktet vil bidra til effektiv bruk av naturressurser.

Du kan få mer informasjon om resirkulering av dette produktet ved å kontakte lokale myndigheter, avfallsadministrasjonen, et godkjent program eller husholdningens renovasjonsselskap, eller gå til • www.canon-europe.com/weee , eller • www.canon-europe.com/battery .

#### Vain Euroopan unionin sekä ETA:n (Norja, Islanti ja Liechtenstein) alueelle.

Nämä tunnukset osoittavat, että sähkö- ja elektroniikkalaiteromua koskeva direktiivi (SER-direktiivi, 2012/19/EU), paristoista ja akuista annettu direktiivi (2006/66/EY) sekä kansallinen lainsäädäntö kieltävät tuotteen hävittämisen talousjätteen mukana.

Jos yllä olevan symbolin alapuolelle on paristodirektiivin mukaisesti painettu kemiallisen aineen tunnus, kyseinen paristo tai akku sisältää raskasmetalleja (Hg = elohopea, Cd = kadmium, Pb = lyijy) enemmän kuin paristodirektiivin salliman määrän.

Tuote on vietävä asianmukaiseen keräyspisteeseen, esimerkiksi kodinkoneliikkeeseen uutta vastaavaa tuotetta ostettaessa tai viralliseen sähkö- ja elektroniikkalaiteromun tai paristojen ja akkujen keräyspisteeseen. Sähkö- ja elektroniikkalaiteromun virheellinen käsittely voi vahingoittaa ympäristöä ja ihmisten terveyttä, koska laitteet saattavat sisältää ympäristölle ja terveydelle haitallisia aineita. Tuotteen asianmukainen hävittäminen säästää myös luonnonvaroja. Jos haluat lisätietoja tämän tuotteen kierrätyksestä, ota yhteys kunnan jätehuoltoviranomaisiin tai käyttämääsi jätehuoltoyhtiöön tai käy osoitteessa 

www.canon-europe.com/weee , tai 
www.canon-europe.com/battery .

#### Endast för Europeiska unionen och EES (Norge, Island och Liechtenstein)

De här symbolerna visar att produkten inte får sorteras och slängas som hushållsavfall enligt WEEE-direktivet (2012/19/EU), batteridirektivet (2006/66/EG) och/eller nationell lagstiftning som implementerar dessa direktiv. Om en kemisk symbol förekommer under ovanstående symbol innebär detta enligt Batteridirektivet att en tungmetall (Hg = Kvicksilver, Cd = Kadmium, Pb = Bly) förekommer i batteriet eller ackumulatorn med en koncentration som överstiger tillämplig gräns som anges i Batteridirektivet.

Produkten ska lämnas in på en avsedd insamlingsplats, t.ex. på en återvinningsstation auktoriserad att hantera elektrisk och elektronisk utrustning (EE-utrustning) samt batterier och ackumulatorer eller hos handlare som är auktoriserade att byta in varor då nya, motsvarande köps (en mot en). Olämplig hantering av avfall av den här typen kan ha negativ inverkan på miljön och människors hälsa på grund av de potentiellt farliga ämnen som kan återfinnas i elektrisk och elektronisk utrustning.

Din medverkan till en korrekt avfallshantering av produkten bidrar till effektiv användning av naturresurserna.

Om du vill ha mer information om var du kan lämna in den här produkten, kontakta ditt lokala kommunkontor, berörd myndighet eller företag för avfallshantering eller se 

www.canon-europe.com/weee , eller 

www.canon-europe.com/battery

WEEE Directive iPF680

#### Pouze Evropská unie a EHP (Norsko, Island a Lichtenštejnsko)

Tento symbol znamená, že podle směrnice OEEZ (2012/19/EU), směrnice o bateriích (2006/66/ES) a/nebo podle vnitrostátních právních prováděcích předpisů k těmto směrnicím nemá být tento výrobek likvidován s odpadem z domácností.

Je-li v souladu s požadavky směrnice o bateriích vytištěna pod výše uvedeným symbolem chemická značka, udává, že tato baterie nebo akumulátor obsahuje těžké kovy (Hg = rtuť, Cd = kadmium, Pb = olovo) v koncentraci vyšší, než je příslušná hodnota předepsaná směrnicí.

Tento výrobek má být vrácen do určeného sběrného místa, např. v rámci autorizovaného systému odběru jednoho výrobku za jeden nově prodaný podobný výrobek, nebo do autorizovaného sběrného místa pro recyklaci odpadních elektrických a elektronických zařízení (OEEZ), baterií a akumulátorů. Nevhodné nakládání s tímto druhem odpadu by mohlo mít negativní dopad na životní prostředí a lidské zdraví, protože elektrická a elektronická zařízení zpravidla obsahují potenciálně nebezpečné látky. Vaše spolupráce na správné likvidaci tohoto výrobku napomůže efektivnímu využívání přírodních zdrojů.

Chcete-li získat podrobné informace týkající se recyklace tohoto výrobku, obraťte se prosím na místní úřad, orgán pro nakládání s odpady, schválený systém nakládání s odpady či společnost zajišťující likvidaci domovního odpadu, nebo navštivte webové stránky www.canon-europe.com/weee nebo www.canon-europe.com/battery

#### Csak az Európai Unió és az EGT (Norvégia, Izland és Liechtenstein) országaiban

Ezek a szimbólumok azt jelzik, hogy a termék hulladékkezelése a háztartási hulladéktól különválasztva, az elektromos és elektronikus berendezések hulladékairól (WEEE) szóló (2012/19/EU) irányelvnek és az elemekről és akkumulátorokról, valamint a hulladék elemekről és akkumulátorokról szóló (2006/66/EK) irányelvnek megfelelően és/vagy ezen irányelveknek megfelelő helyi előírások szerint történik.

Amennyiben a fent feltüntetett szimbólum alatt egy vegyjel is szerepel, az elemekről és akkumulátorokról szóló irányelvben foglaltak értelmében ez azt jelzi, hogy az elem vagy az akkumulátor az irányelvben meghatározott határértéknél nagyobb mennyiségben tartalmaz nehézfémet (Hg = higany, Cd = kadmium, Pb = ólom).

E terméket az arra kijelölt gyűjtőhelyre kell juttatni – pl. hasonló termék vásárlásakor a régi becserélésére vonatkozó hivatalos program keretében, vagy az elektromos és elektronikus berendezések (EEE) hulladékainak gyűjtésére, valamint a hulladék elemek és hulladék akkumulátorok gyűjtésére kijelölt hivatalos gyűjtőhelyre. Az ilyen jellegű hulladékok nem előírásszerű kezelése az elektromos és elektronikus berendezésekhez (EEE) általánosan kapcsolható potenciálisan veszélyes anyagok révén hatással lehet a környezetre és az egészségre.

E termék megfelelő leselejtezésével Ön is hozzájárul a természeti források hatékony használatához.

A termék újrahasznosítását illetően informálódjon a helyi polgármesteri hivatalnál, a helyi közterület-fenntartó vállalatnál, a hivatalos hulladéklerakó telephelyen vagy a háztartási hulladék begyűjtését végző szolgáltatónál, illetve látogasson el a www.canon-europe.com/weee , vagy www.canon-europe.com/battery internetes oldalra.

#### Tylko dla krajów Unii Europejskiej oraz EOG (Norwegia, Islandia i Liechtenstein)

Te symbole oznaczają, że produktu nie należy wyrzucać razem z odpadami gospodarstwa domowego, zgodnie z dyrektywą WEEE w sprawie zużytego sprzętu elektrycznego i elektronicznego (2012/19/UE) lub dyrektywą w sprawie baterii (2006/66/WE) bądź przepisami krajowymi wdrażającymi te dyrektywy.

Jeśli pod powyższym symbolem znajduje się symbol chemiczny, zgodnie z dyrektywą w sprawie baterii oznacza to, że bateria lub akumulator zawiera metal ciężki (Hg = rtęć, Cd = kadm, Pb = ołów) w stężeniu przekraczającym odpowiedni poziom określony w dyrektywie w sprawie baterii.

Użytkownicy baterii i akumulatorów mają obowiązek korzystać z dostępnego programu zwrotu, recyklingu i utylizacji baterii oraz akumulatorów.

Niewłaściwe postępowanie z tego typu odpadami może mieć wpływ na środowisko i zdrowie ludzi ze względu na substancje potencjalnie niebezpieczne, związane ze zużytym sprzętem elektrycznym i elektronicznym.

Państwa współpraca w zakresie właściwej utylizacji tego produktu przyczyni się do efektywnego wykorzystania zasobów naturalnych.

W celu uzyskania informacji o sposobie recyklingu tego produktu prosimy o kontakt z właściwym urzędem miejskim lub zakładem gospodarki komunalnej bądź zapraszamy na stronę → www.canon-europe.com/weee , lub → www.canon-europe.com/battery .

iPF680 WEEE Directive

#### Platí len pre štáty Európskej únie a EHP (Nórsko, Island a Lichtenštajnsko)

Tieto symboly označujú, že podľa Smernice o odpade z elektrických a elektronických zariadení (OEEZ) 2012/19/EÚ, Smernice o batériách (2006/66/ES) a podľa platnej legislatívy Slovenskej republiky sa tento produkt nesmie likvidovať spolu s komunálnym odpadom.

Ak je chemická značka vytlačená pod vyššie uvedeným symbolom, znamená to, že táto batéria alebo akumulátor obsahuje ťažký kov (Hg = ortuť, Cd = kadmium, Pb = olovo) v koncentrácii vyššej, ako je príslušná povolená hodnota stanovená v Smernici o batériách.

Produkt je potrebné odovzdať do určenej zberne, napr. prostredníctvom výmeny za kúpu nového podobného produktu, alebo na autorizované zberné miesto, ktoré spracúva odpad z elektrických a elektronických zariadení (EEZ), batérií a akumulátorov. Nesprávna manipulácia s takýmto typom odpadu môže mať negatívny vplyv na životné prostredie a ľudské zdravie, pretože elektrické a elektronické zariadenia obsahujú potenciálne nebezpečné látky.

Spoluprácou na správnej likvidácii tohto produktu prispejete k účinnému využívaniu prírodných zdrojov.

Ďalšie informácie o recyklácii tohto produktu získate od miestneho úradu, úradu životného prostredia, zo schváleného plánu OEEZ alebo od spoločnosti, ktorá zaisťuje likvidáciu komunálneho odpadu. Viac informácií nájdete aj na webovej stránke: > www.canon-europe.com/weee , alebo > www.canon-europe.com/battery .

#### Üksnes Euroopa Liit ja EMP (Norra, Island ja Liechtenstein)

Antud sümbolid viitavad sellele, et vastavalt elektri- ja elektroonikaseadmete jäätmeid käsitlevale direktiivile (2012/19/ EL), patareisid ja akusid ning patarei- ja akujäätmeid käsitlevale direktiivile (2006/66/EÜ) ja/või nimetatud direktiive rakendavatele riiklikele õigusaktidele ei või seda toodet koos olmejäätmetega ära visata.

Kui keemiline sümbol on trükitud eespool toodud sümboli alla, siis tähendab see, et antud patareis või akus leiduva raskemetalli (Hg = elavhõbe, Cd = kaadmium, Pb = plii) kontsentratsioonitase on kõrgem kui patareisid ja akusid ning patarei- ja akujäätmeid käsitlevas direktiivis sätestatud piirmäär.

Antud tootest tekkinud jäätmed tuleb anda vastavasse kogumispunkti, nt müügipunkti, mis on volitatud üks ühe vastu vahetama, kui ostate uue sarnase toote, või vastavasse elektri- ja lektroonikaseadmete jäätmete ning patareide ja akude ümbertöötlemiseks mõeldud kogumispunkti. Antud liiki jäätmete vale käitlemine võib kahjustada keskkonda ja inimeste tervist elektri- ja elektroonikajäätmetes tavaliselt leiduvate potentsiaalselt ohtlike ainete tõttu. Antud tootest tekkinud jäätmete nõuetekohase kõrvaldamisega aitate kasutada loodusvarasid efektiivselt.

Täiendava teabe saamiseks elektri- ja elektroonikaseadmetest tekkinud jäätmete ning patarei- ja akujäätmete tagastamise ja ümbertöötlemise kohta võtke ühendust kohaliku omavalitsusega, asjakohase valitsusasutusega, asjakohase tootjavastutusorganisatsiooniga või olmejäätmete käitlejaga. Lisateavet leitate ka Interneti-leheküljelt

→ www.canon-europe.com/weee või → www.canon-europe.com/battery .

#### Tikai Eiropas Savienībai un EEZ (Norvēģijai, Islandei un Lihtenšteinai)

Šie simboli norāda, ka atbilstoši ES Direktīvai (2012/19/ES) par elektrisko un elektronisko iekārtu atkritumiem (EEIA), Direktīvai (2006/66/EK) par baterijām un akumulatoriem, un akumulatoru atkritumiem, ar ko atceļ Direktīvu 91/157/ EEK, un vietējiem tiesību aktiem šo izstrādājumu nedrīkst izmest kopā ar sadzīves atkritumiem.

Ja zem iepriekš norādītā simbola ir uzdrukāts ķīmiskais simbols, saskaņā ar direktīvu par baterijām un akumulatoriem tas nozīmē, ka šīs baterijas vai akumulatori satur smagos metālus (Hg = dzīvsudrabs, Cd = kadmijs, Pb = svins) un to koncentrācijas līmenis pārsniedz direktīvā par baterijām un akumulatoriem minēto piemērojamo slieksni.

Šis izstrādājums ir jānodod piemērotā savākšanas vietā, piemēram, apstiprinātā veikalā, kur iegādājaties līdzīgu jaunu produktu un atstājat veco, vai apstiprinātā vietā izlietotu elektrisko un elektronisko iekārtu un bateriju un akumulatoru pārstrādei. Nepareiza šāda veida atkritumu apsaimniekošana var apdraudēt vidi un cilvēka veselību tādu iespējami bīstamu vielu dēļ, kas parasti ir elektriskajās un elektroniskajās iekārtās.

Jūsu atbalsts pareizā šāda veida atkritumu apsaimniekošanā sekmēs efektīvu dabas resursu izmantošanu. Lai saņemtu pilnīgāku informāciju par šāda veida izstrādājumu nodošanu otrreizējai pārstrādei, sazinieties ar vietējo pašvaldību, atkritumu savākšanas atbildīgo dienestu, pilnvaroto organizāciju vai iestādi, kas veic sadzīves atkritumu apsaimniekošanu, vai apmeklējiet tīmekļa vietni (→ www.canon-europe.com/weee), vai → www.canon-europe.com/battery

#### Tik Europos Sajungai ir EEE (Norvegijai, Islandijai ir Lichtenšteinui)

Šie simboliai reiškia, kad šio gaminio negalima išmesti į buitines atliekas, kaip reikalaujama WEEE Direktyvoje (2012/19/ES) ir Baterijų direktyvoje (2006/66/EB) ir (ar) jūsų šalies nacionaliniuose įstatymuose, kuriais šios Direktyvos yra įgyvendinamos.

WEEE Directive IPF680

Jeigu cheminio ženklo simbolis yra nurodytas žemiau šio ženklo, tai reiškia, kad vadovaujantis Baterijų direktyvą, baterijų ar akumuliatorių sudėtyje yra sunkiųjų metalų (Hg = gyvsidabrio, Cd = kadmio, Pb = švino), kurių koncentracija viršija Baterijų direktyvoje nurodytas leistinas ribas.

Šį gaminį reikia pristatyti į specialųjį surinkimo punktą, pavyzdžiui, mainais, kai jūs perkate naują panašų gaminį, arba į specialiąją surinkimo vietą, kurioje perdirbamos elektrinės ir elektroninės įrangos atliekos bei naudotos baterijos ir akumuliatoriai. Dėl netinkamo šio tipo atliekų tvarkymo gali nukentėti aplinka ir iškilti grėsmė žmogaus sveikatai dėl galimai kenksmingų medžiagų, iš esmės susijusių su elektrine ir elektronine įranga.

Bendradarbiaudami ir teisingai utilizuodami šiuos gaminius, jūs padėsite efektyviai naudoti gamtinius išteklius. Daugiau informacijos apie gaminio perdirbimą jums gali suteikti vietinis biuras, atliekų tvarkymo bendrovė, sertifikuoti organai ar buitinių atliekų surinkimo įmonės. Taip pat siūloma apsilankyti interneto svetainėje

→ www.canon-europe.com/weee arba → www.canon-europe.com/battery

#### Samo za Evropsko unijo in EGP (Norveška, Islandija in Lihtenštajn)

Ti simboli pomenijo, da tega izdelka skladno z Direktivo OEEO (2012/19/EU), Direktivo 2006/66/ES in/ali nacionalno zakonodajo, ki uvaja ti direktivi, ne smete odlagati z nesortiranimi gospodinjskimi odpadki.

Če je pod zgoraj prikazanim simbolom natisnjen kemijski simbol, to v skladu z Direktivo pomeni, da je v tej bateriji ali akumulatorju prisotna težka kovina (Hg = živo srebro, Cd = kadmij, Pb = svinec), in sicer v koncentraciji, ki je nad relevantno mejno vrednostjo, določeno v Direktivi.

Ta izdelek je potrebno odnesti na izbrano zbirno mesto, t. j. pooblaščeno trgovino, kjer ob nakupu novega (podobnega) izdelka vrnete starega, ali na pooblaščeno zbirno mesto za ponovno uporabo odpadne električne in elektronske opreme (EEO) ter baterij in akumulatorjev. Neustrezno ravnanje s to vrsto odpadkov lahko negativno vpliva na okolje in človeško zdravje zaradi potencialno nevarnih snovi, ki so pogosto povezane z EEO.

Vaše sodelovanje pri pravilnem odlaganju tega izdelka predstavlja pomemben prispevek k smotrni izrabi naravnih virov.

Za več informacij o ponovni uporabi tega izdelka se obrnite na lokalen mestni urad, pristojno službo za odpadke, predstavnika pooblaščenega programa za obdelavo odpadkov ali na lokalno komunalo. Lahko pa tudi obiščete našo spletno stran > www.canon-europe.com/weee , ali > www.canon-europe.com/battery .

#### Само за Европейския съюз и ЕИП (Норвегия, Исландия и Лихтенщайн)

Тези символи показват, че този продукт не трябва да се изхвърля заедно с битовите отпадъци съгласно Директивата за ИУЕЕО (2012/19/ЕС), Директивата за батерии (2006/66/ЕО) и/или Вашето национално законодателство, прилагащо тези Директиви.

Ако под показания горе символ е отпечатан символ за химически елемент, съгласно разпоредбите на Директивата за батерии, този втори символ означава наличието на тежък метал (Hg = живак, Cd = кадмий, Pb = олово) в батерията или акумулатора в концентрация над указаната граница за съответния елемент в Директивата.

Този продукт трябва да бъде предаден в предназначен за целта пункт за събиране, например на база размяна, когато купувате нов подобен продукт, или в одобрен събирателен пункт за рециклиране на излязло от употреба електрическо и електронно оборудване (ИУЕЕО), батерии и акумулатори. Неправилното третиране на този тип отпадъци може да доведе до евентуални отрицателни последствия за околната среда и човешкото здраве поради потенциално опасните вещества, които обикновено са свързани с ЕЕО.

В същото време Вашето съдействие за правилното изхвърляне на този продукт ще допринесе за ефективното използване на природните ресурси.

За повече информация относно това къде можете да предадете за рециклиране на този продукт, моля свържете се с Вашите местни власти, с органа, отговорен за отпадъците, с одобрената система за ИУЕЕО или с Вашата местна служба за битови отпадъци, или посетете → www.canon-europe.com/weee , или → www.canon-europe.com/battery .

#### Doar pentru Uniunea Europeană și EEA (Norvegia, Islanda și Liechtenstein)

Aceste simboluri indică faptul că acest produs nu trebuie aruncat împreună cu deşeurile menajere, în conformitate cu Directiva DEEE (2012/19/UE), Directiva referitoare la baterii (2006/66/CE) şi/sau legile dvs. naţionale ce implementează aceste Directive.

Dacă un simbol chimic este imprimat sub simbolul de mai sus, în conformitate cu Directiva referitoare la baterii, acest simbol indică prezenţa în baterie sau acumulator a unui metal greu (Hg = Mercur, Cd = Cadmiu, Pb = Plumb) într-o concentraţie mai mare decât pragul admis specificat în Directiva referitoare la baterii.

iPF680 WEEE Directive

Acest produs trebuie înmânat punctului de colectare adecvat, ex: printr-un schimb autorizat unu la unu atunci când cumpărați un produs nou similar sau la un loc de colectare autorizat pentru reciclarea reziduurilor de echipament electric și electronic (EEE) și baterii și acumulatori. Administrarea neadecvată a acestui tip de deșeuri, ar putea avea un impact asupra mediului si asupra sănătății umane datorită substantelor cu potențial de risc care sunt în general asociate cu EEE

Cooperarea dvs. în direcția reciclării corecte a acestui produs va contribui la o utilizare eficientă a resurselor naturale. Pentru mai multe informații despre reciclarea acestui produs, vă rugăm să contactați biroul dvs. local, autoritățile responsabile cu deseurile, schema aprobată sau serviciul dvs. responsabil cu deseurile menajere sau vizitați-ne la → www.canon-europe.com/weee , sau → www.canon-europe.com/battery .

#### Samo za Europsku uniju i EEA (Norveška, Island i Lihtenštajn)

Oznaka pokazuje da se ovaj proizvod ne smije odlagati s komunalnim i ostalim vrstama otpada, u skladu s direktivom WEEE (2012/19/EC). Direktivom o baterijama (2006/66/EC) i Pravilnikom o gospodarenju otpadnim baterijama i akumulatorima te Pravilnikom o gospodarenju otpadnim električnim i elektroničkim uređajima i opremom.

Ako je ispod prethodno prikazane oznake otisnut kemijski simbol, u skladu s Direktivom o baterijama, to znači da se u ovoj bateriji ili akumulatoru nalazi teški metal (Hg = živa, Cd = kadmij, Pb = olovo) i da je njegova koncentracija iznad razine propisane u Direktivi o baterijama.

Ovaj bi proizvod trebalo predati ovlašenom skupljaču EE otpada ili prodavatelju koji je dužan preuzeti otpadni proizvod po sistemu jedan za jedan, ukoliko isti odgovara vrsti te je obavljao primarne funkcije kao i isporučena EE oprema. Otpadne baterije i akumulatori predaju se ovlaštenom skupljaču otpadnih baterija ili akumulatora ili prodavatelju bez naknade i obveze kupnje za krajnjeg korisnika. Neodgovarajuće rukovanje ovom vrstom otpada može utjecati na okoliš i ljudsko zdravlje zbog potencijalno opasnih supstanci koje se najčešće nalaze na takvim mjestima.

Vaša suradnja u pravilnom zbrinjavanju ovog proizvoda pridonijet će djelotvornom iskorištavanju prirodnih resursa. Dodatne informacije o recikliranju ovog proizvoda zatražite od svog lokalnog gradskog ureda, službe za zbriniavanje otpada, odobrenog programa ili komunalne službe za uklanjanje otpada ili pak na stranicama

→ www.canon-europe.com/weee iii → www.canon-europe.com/battery .

#### Només per a la Unió Europea i a l'Espai Econòmic Europeu (Noruega, Islàndia i Liechtenstein)

Aquests símbols indican que aquest producte no s'ha de llençar amb les escombraries de la llar, d'acord amb la RAEE (2012/19/UE), la Directiva relativa a piles i acumuladors (2006/66/CE) i la legislació nacional que implementi aquestes directives.

Si al costat d'aquest símbol hi apareix imprès un símbol químic, segons especifica la Directiva relativa a piles i acumuladors, significa que la bateria o l'acumulador conté un metall pesant (Hg = mercuri, Cd = cadmi, Pb = plom) en una concentració superior al límit aplicable especificat en la Directiva.

Aquest producte s'hauria de lliurar en un dels punts de recollida designats, com per exemple, intercanviant un per un en comprar un producte similar o lliurant-lo en un lloc de recollida autoritzat per al reciclatge de residus d'aparells elèctrics i electrònics (RAEE) i piles i acumuladors. La manipulació inadequada d'aquest tipus de residus podria tenir un impacte negatiu en l'entorn i en la salut humana, a causa de les substàncies potencialment perilloses que normalment estan associades a l'RAEE.

La vostra cooperació a l'hora de rebutjar correctament aquest producte contribuirà a la utilització efectiva dels recursos naturals.

Els usuaris tenen dret a retornar les bateries o els acumuladors usats sense cap càrrec. El preu de venda de les bateries i els acumuladors inclou el cost de la gestió ambiental dels residus i no es necessari mostrar l'import d'aquest cost en aquest fullet o en la factura que es lliuri a l'usuari final.

Per a més informació sobre el reciclatge d'aquest producte, contacteu amb l'oficina municipal, les autoritats encarregades dels residus, el pla de residus homologat o el servei de recollida d'escombraries domèstiques de la vostra localitat o visiteu > www.canon-europe.com/weee , o > www.canon-europe.com/battery .

#### Korisnici u Srbiji

Ovaj simbol označava da ovaj proizvod ne sme da se odlaže sa ostalim kućnim otpadom, u skladu sa WEEE Direktivom (2012/19/EU), Direktivom o baterijama (2006/66/EC) i nacionalnim zakonima.

Ukoliko je ispod gore navedenog simbola odštampan hemijski simbol, u skladu sa Direktivom o baterijama, ovaj simbol označava da su u ovoj bateriji ili akumulatoru prisutni teški metali (Hg – živa, Cd – kadmijum, Pb - olovo) u koncentracijama koje premašuju prihvatljivi prag naveden u Direktivi o baterijama.

Ovaj proizvod treba predati određenom centru za prikupljanje, npr. po principu "jedan-za-jedan" kada kupujete sličan novi proizvod, ili ovlašćenom centru za prikupljanje za reciklažu istrošene električne i elektronske opreme (EEE), baterija i akumulatora. Nepravilno rukovanje ovom vrstom otpada može imati negativne posledice po životnu sredinu i ljudsko zdravlje usled potencijalno opasnih materijala koji se uglavnom vezuju za EEE.

Vaša saradnja na ispravnom odlaganju ovog proizvoda će doprineti efikasnom korišćenju prirodnih resursa. Više informacija o tome kako možete da reciklirate ovaj proizvod potražite od lokalnih gradskih vlasti, komunalne službe, odobrenog plana reciklaže ili servisa za odlaganje kućnog otpada, ili posetite stranicu

→ www.canon-europe.com/weee , ili → www.canon-europe.com/battery .

# Index

A
Accounting
В
Bonjour Network
C
CAD       43, 47, 48, 49         Checking Ink Tank Levels       545         Cleaning       550, 564         Clearing a Jammed Sheet       582         Color Adjustment       173, 176, 305, 326         Color imageRUNNER Enlargement Copy       224, 225, 342, 343         Configuring the IP Address       488, 489, 500
D
Device Settings Sheet188Device Setup Utility500Drying Time383
F
Favorites Sheet
G
GARO Wxxxx (x represents a number)
Н
Hardware error
Interface
L
Large-Format Printing97Layout Sheet181Loading and Printing on Sheets21
M
Main Pane       281         Main Sheet       167         Maintenance Cartridge       558, 562, 563, 624         Menu Operations       446, 447         Menu Structure       450

N
Navigate 443 Nozzle 549
0
Orientation       148, 149, 253, 265         Oversize       76
P
Page Setup Pane       292         Page Setup Sheet       178         Paper Feed Slot       585, 587         PosterArtist       41         Power       254, 256, 258, 261, 262, 263, 265         Preparing to Transfer the Printer       568         Print Job Log       518         Printer Driver Settings       158, 276         Printhead       524, 549, 550, 551, 591, 622         Printing Posters in Sections       123         Printing Vertical or Horizontal Banners       97, 98, 101         Printing at Actual Size       80, 81, 83         Printing on Rolls       19
R
Removing the Roll
S
Size Options       180         Special Settings       184, 274         Specifications       630         Specifying Paper in the Printer Driver       32, 160, 277         Status Print       466         Support Sheet       187
U
Using the Output Stacker 399 Utility Sheet 186
W
Watermark         145, 146           When to Replace Ink Tanks         546

ENG