



Printer Software Guide

(For Canon Compact Photo Printer
Solution Disk Version 6)

Macintosh



Contents

Safety Precautions	3
Read This First	4
About the Manuals	4
Printing Flow Diagram	5
Printing	6
Selecting and Printing an Image	7
Printing Part of an Image (Trimming)	11
Editing and Printing Images	13
Appendix	15
Troubleshooting	15



Safety Precautions

The precautions noted within this guide are intended to instruct you in the safe and correct use of the products and to prevent injuries or damage to yourself, other persons and property. Please read and ensure that you understand them before proceeding to other sections of the guide.



Warning

This symbol indicates topics that could lead to death or serious injury if ignored or handled incorrectly.

Warning

Do not play the supplied CD-ROM(s) in any CD player that does not support data CD-ROMs. Playing the CD-ROM(s) in an audio CD player (music player) could damage the speakers. It is also possible to suffer from hearing loss from listening with headphones to the loud sounds of a CD-ROM played on a music CD player.

Disclaimer

- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions. Canon reserves the right to change the specifications of the hardware and software described herein at any time without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon.
- Canon makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, memory cards, personal computers, peripheral devices, or use of non-Canon memory cards.

Trademark Acknowledgments

- Macintosh and Mac OS are trademarks of Apple Computer Inc., registered in the United States and other countries.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.

Copyright © 2006 Canon Inc. All rights reserved.

Symbols Used in This Document



Indicates important items or prohibited actions that should always be observed when operating the machine. These should always be read to avoid damage to the machine or improper operation.

 


Indicates items for reference or supplementary information that should be noted by users.

Read This First

About the Manuals

These user guides describe how to connect the printer to your computer and print images.



Printer User Guide

Contains the information necessary to print from your computer, including printer preparation and handling notes, names of parts, installation of necessary software and the printer driver, and connection of the printer to your computer. Please read before using the printer.



This user guide



Describes how to print using the software provided on the supplied CD-ROM (Canon Compact Photo Printer Solution Disk).

Explanations are based on Mac OS X (v10.3). If you are using another version of the Mac OS, the actual screen contents and procedures may vary slightly from these shown.

Detailed explanations of operating procedures are given in the [Help] accompanying ImageBrowser.




If a problem occurs, refer to the following:

- Trouble with the printer itself:  See the *Printer User Guide*.
- Printing problems:  See this user guide.

Printing Flow Diagram


Follow the steps outlined below to prepare the printer and install the necessary software on your computer to enable printing.

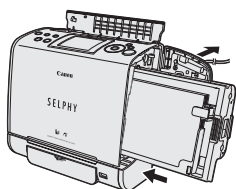

Prepare the printer.

Insert the Ink and Paper Integrated Cartridge (hereafter “cartridge”) into the printer.


☞ See the *Printer User Guide*.

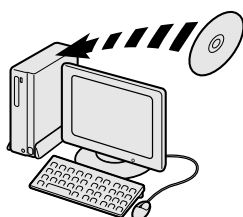

Install the software and printer driver on your computer.

Install the necessary software and printer driver on your computer from the Compact Photo Printer Solution Disk.

☞ See the *Printer User Guide*.

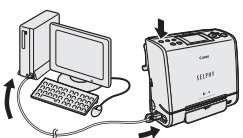

Connect the printer to your computer.

Connect the printer with a commercially available USB cable, and then turn on the printer.

☞ See the *Printer User Guide*.



Print.

Start the software, select an image and print it.

☞ See this user guide.

Printing

The following software is included in the CD-ROM provided with your printer. This section describes how to use this software to print images.

For details on other procedures, see the [Help] menu accompanying each software application.

- ImageBrowser

This software is used to organize and manipulate image taken with digital cameras, on your computer. You can organize your images then edit and print them in an easy series of operations.

Before printing, verify that the printer is on, and that the printer is properly connected to your computer with a USB cable.



Printers and computer displays use different color reproduction methods, and lighting conditions and display settings affect the appearance of colors on your computer's display. Therefore, the colors in prints may differ from what you see on the screen. This is not a printer malfunction.

Selecting and Printing an Image

This example prints a single image, fit to a whole sheet, with no borders.




- 1 **Click the [ImageBrowser] icon in the Dock (the bar displayed at the bottom of the desktop), to start ImageBrowser.**

If the [ImageBrowser] icon does not appear in the Dock, navigate to where you installed the application and double-click the [Canon Utilities] folder, [ImageBrowser] folder, and [ImageBrowser] icon.


- 2 **Select the image you want to print.**

The background of the selected image changes to blue.

To select multiple images, hold down the [shift] key or the [⌘] (command) key while clicking on images.

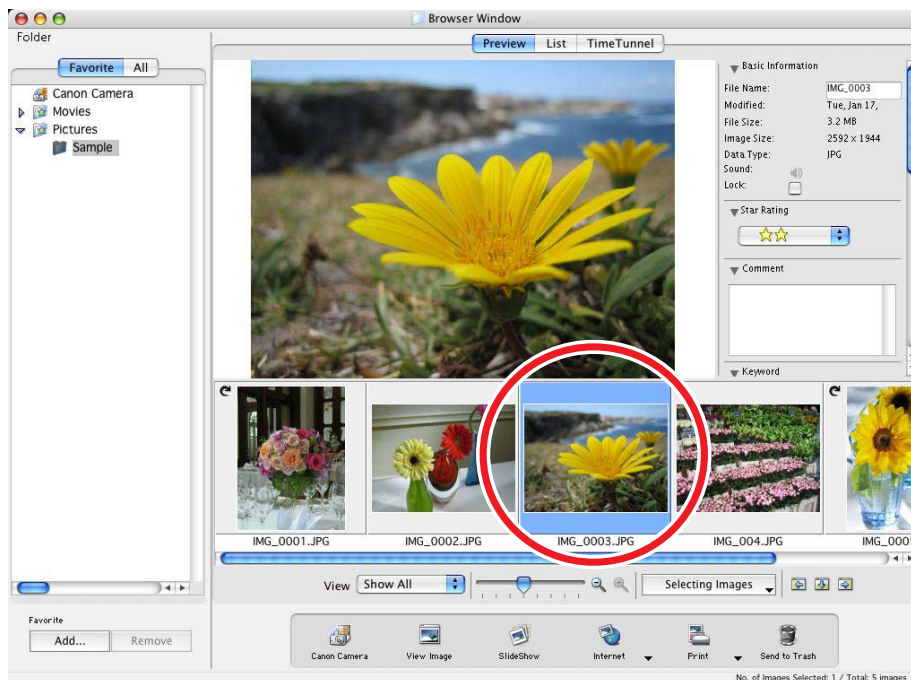


3 Click [Print] and then select [One Photo per page Print] from the menu that is displayed.

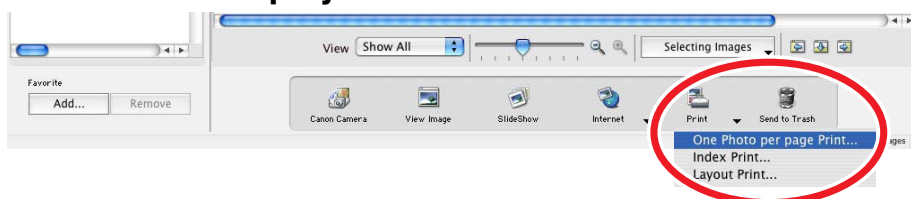


There are three types of layouts in the menu. Select the one that suits your needs.

One Photo per page Print	Prints one image fit to a whole sheet. You can easily print out photos. If you select multiple images, that number of images are printed.
Index Print	A list of thumbnails and printing information is printed.
Layout Print	You can choose a printing style and print in a variety of layouts. There are the following types of layouts. <ul style="list-style-type: none">• Custom layout printing• Fixed size printing• Tiled printing


4 Select your printer, and then click the [Page Setup] button.

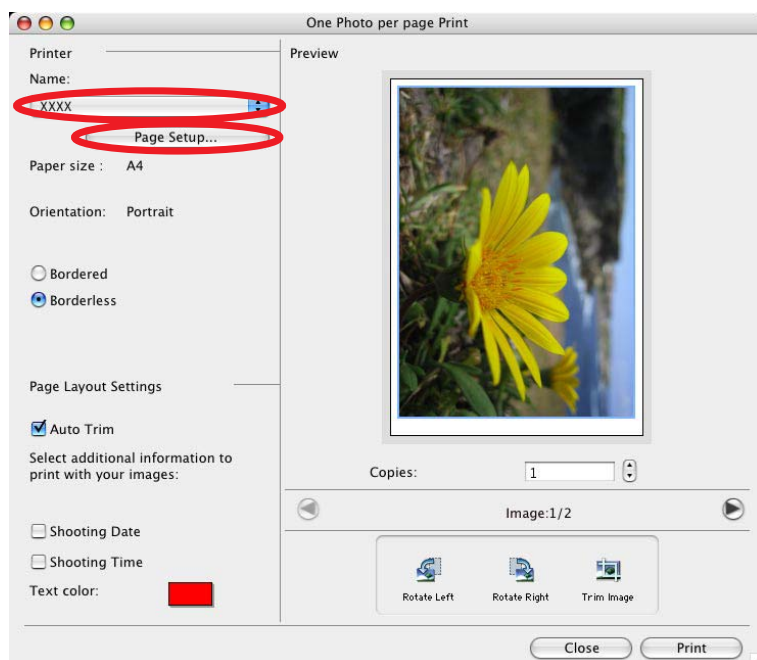

- 5** Select your printer in [Format for], specify [Paper Size] and [Orientation], and then click the [OK] button.

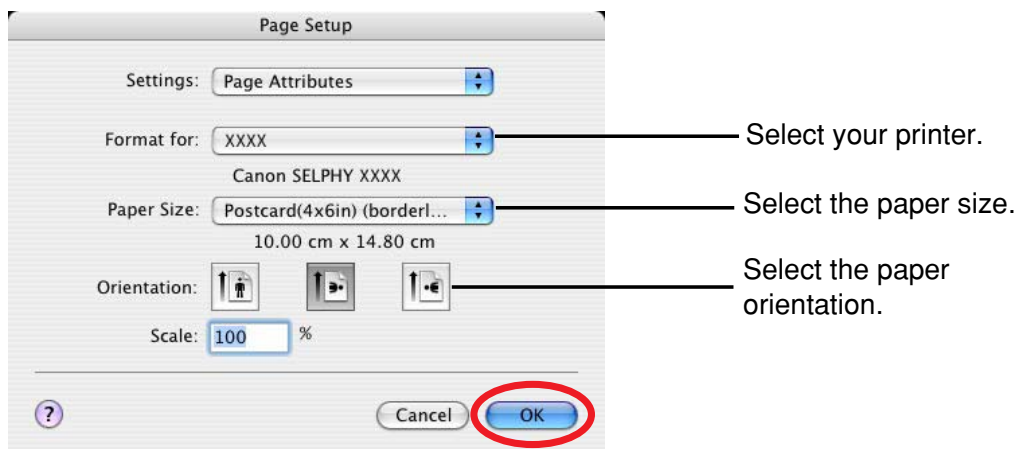

- 6** Select any other necessary items.

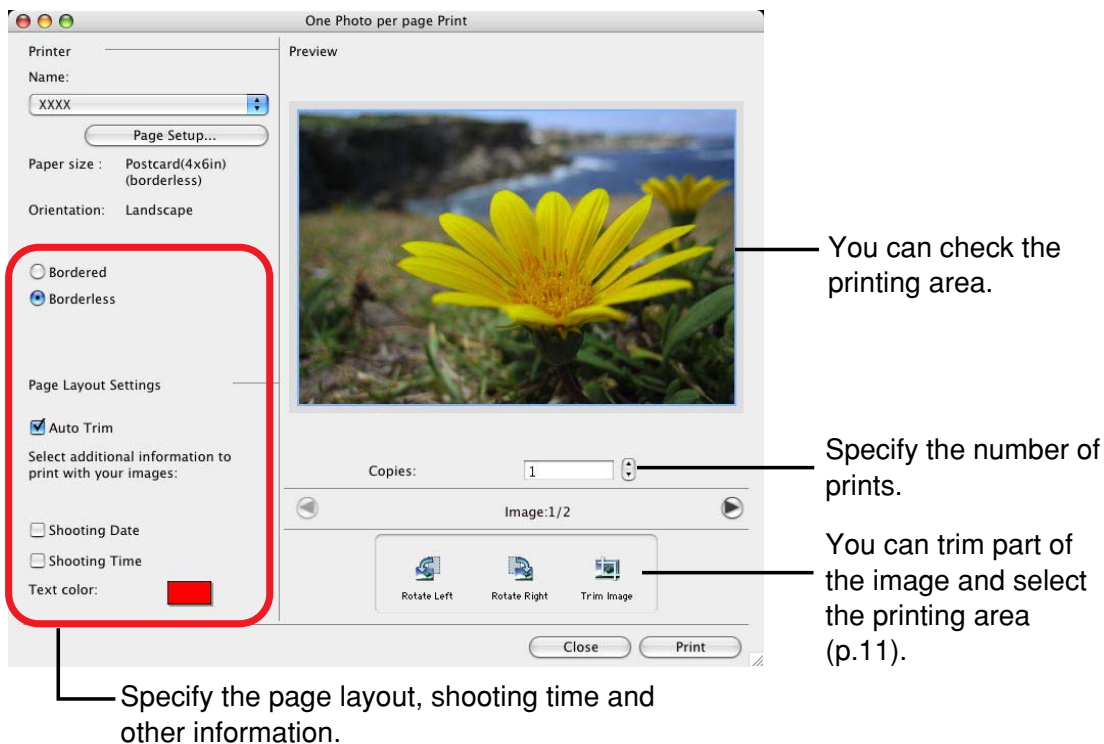


- If you select [Bordered], the image is automatically resized to fit within the print.
- If you select [Borderless], a slight border is trimmed from the image during printing.
- You can add text to an image with the [Edit] menu. (This is only available with [Layout Print].)

7 Click the [Print] button.



8 Select your printer in [Printer], and then specify the items in [Quality & Media].

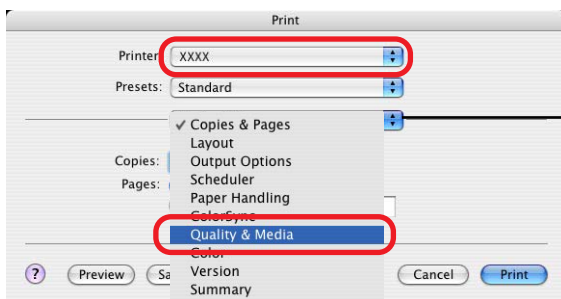

You can adjust the brightness and color of the print result in [Color]. (Do not change the [Layout] setting.)




- When using a black and white cartridge, select [Quality & Media], next select [Cartridge], and then select [B/W].
- Save the settings you made by selecting [Presets], then select [Save As...].


9 Click the [Print] button. Printing starts.

Printing Part of an Image (Trimming)

You can select and then print a portion of an image. This is useful when you only want to print part of an image, or if the part you are most interested in is not at the center of the image.

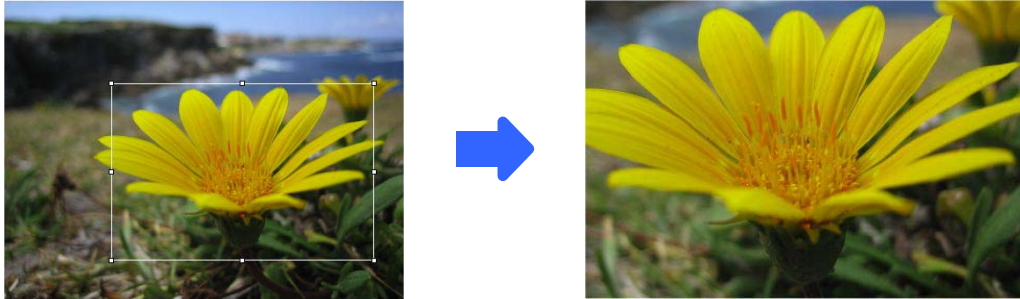


- 1 Follow steps 1 to 6 of *Selecting and Printing an Image* on page 7, select an image, and then click [Trim Image].

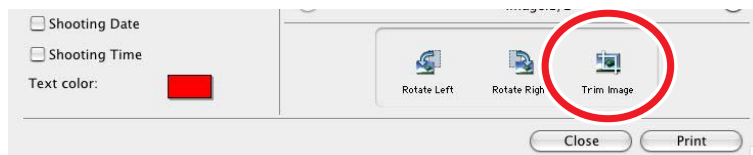

2 Select the portion of the image to be printed.


The area inside the white trimming frame is the area that will be printed. You can drag the edge of the trimming frame to change its size, or drag inside the frame to move it.

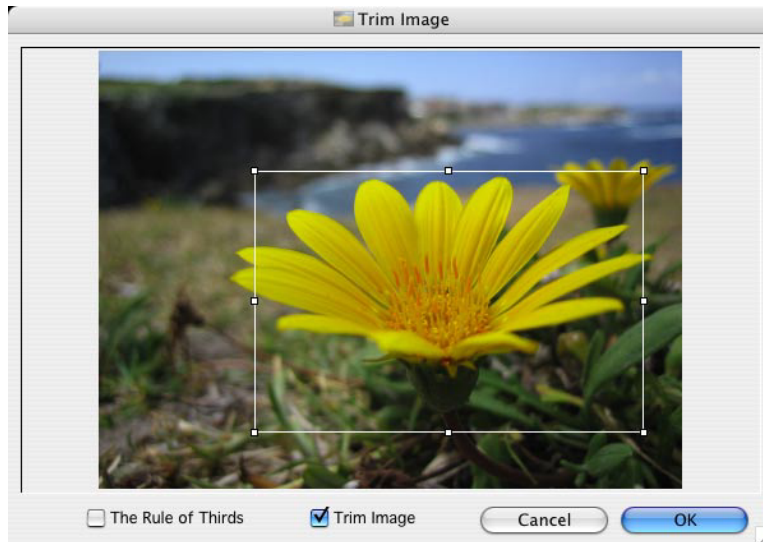

Since a slight border is trimmed from the image during borderless printing, we recommend that you select an area that is slightly larger than the part of the image you want to print.

3 Click the [OK] button to close the trimming dialog box.

4 Click the [Print] button.

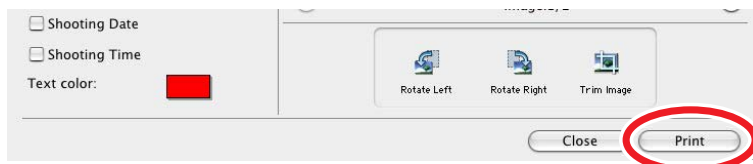


5 Select your printer at [Printer] in the Print window, set the required items and then click [Print].

Printing starts.

Editing and Printing Images


You can correct red eyes, add text and do other editing tasks by using ImageBrowser's edit function.

1 Double-click the image you want to edit.

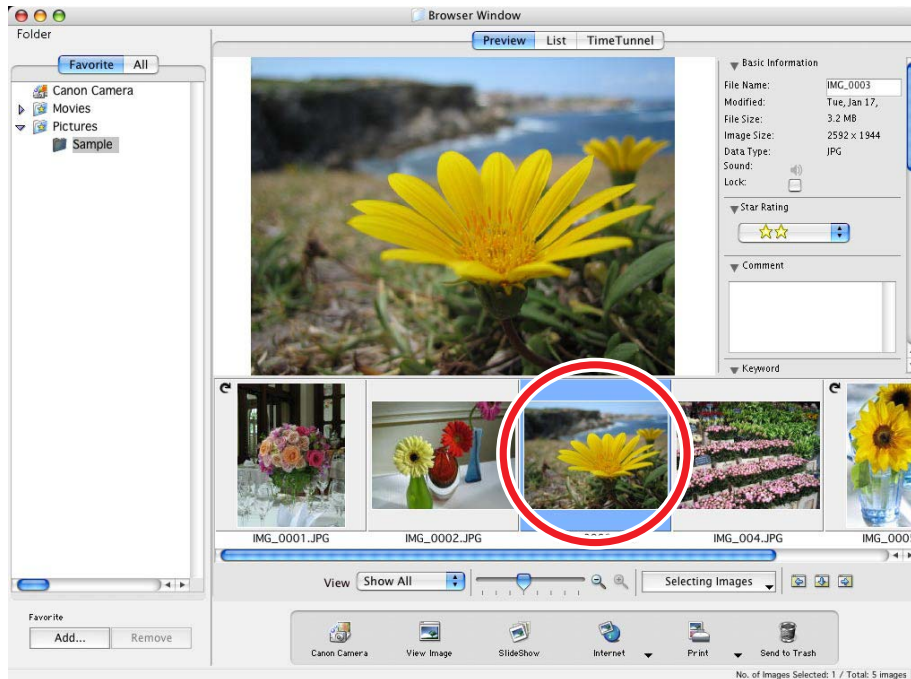

The viewer (image display) window appears.

- 2** Click [Edit] and then select the desired function from the menu that is displayed to do editing.

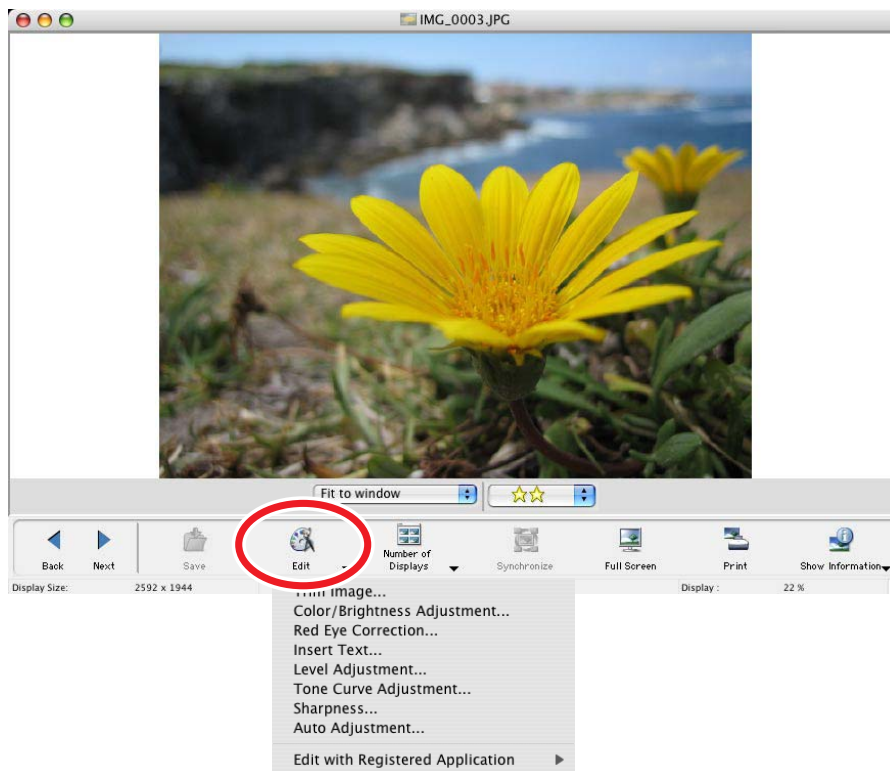

- 3** Save the edited image and click  to close the viewer (image display) window.

- 4** **Print the edited image.**
Follow the procedure in *Selecting and Printing an Image* on page 7.

Appendix

Troubleshooting

This section describes how to troubleshoot problems.



- Follow the instructions displayed on your computer to resolve errors that occur during printing.
- Use the information in this section in conjunction with the *Printer User Guide*.
- If the problem still exists after trying these solutions, restart your computer. If the problem still persists, uninstall the printer driver and then install it again.

The printer cannot be selected.

Cause : The printer driver is not installed.

Correction : Follow the procedure in the *Printer User Guide* to install the printer driver. Reinstall it if you suspect that it was not installed correctly.

Cause : The printer does not appear in the Printers list.

Correction : Add your printer to the Printers list.

Printing does not start.

Cause : No power is supplied to the printer.

Correction : Turn the printer on.

Cause : The USB cable is not connected correctly.

Correction : Check the USB cable to make sure it is connected correctly.

Printing stops while it is in progress.



When a print job that was stopped is restarted, the parts that were already printed are printed again. If you delete the print job, redo the print job from the step where image selection is done.

Cause : Power to the printer goes off while printing is in progress.

Correction : Turn the printer on.

Cause : The USB cable is not connected correctly.

Correction : Check the USB cable to make sure it is connected correctly.

Cause : A USB hub is being used for the connection.

Correction : Be sure to use the USB cable to connect the printer directly to your computer. If you connect to a USB hub, the printer may not function properly.

Cause : The internal temperature of the printer has risen.

Correction : This is not a malfunction. When the printer cools, printing will automatically resume.

The color of an image seen on the screen is different from that seen in prints.

Cause : Printers and computer displays use different color reproduction methods, and lighting conditions and display settings affect the appearance of colors on your computer's display.

Correction : You cannot print colors that exactly match those of the display, but you can adjust color using [Color] (➡ p.10).

