


# PowerShot A400 SYSTEM MAP

DIGITAL CAMERA

Canon

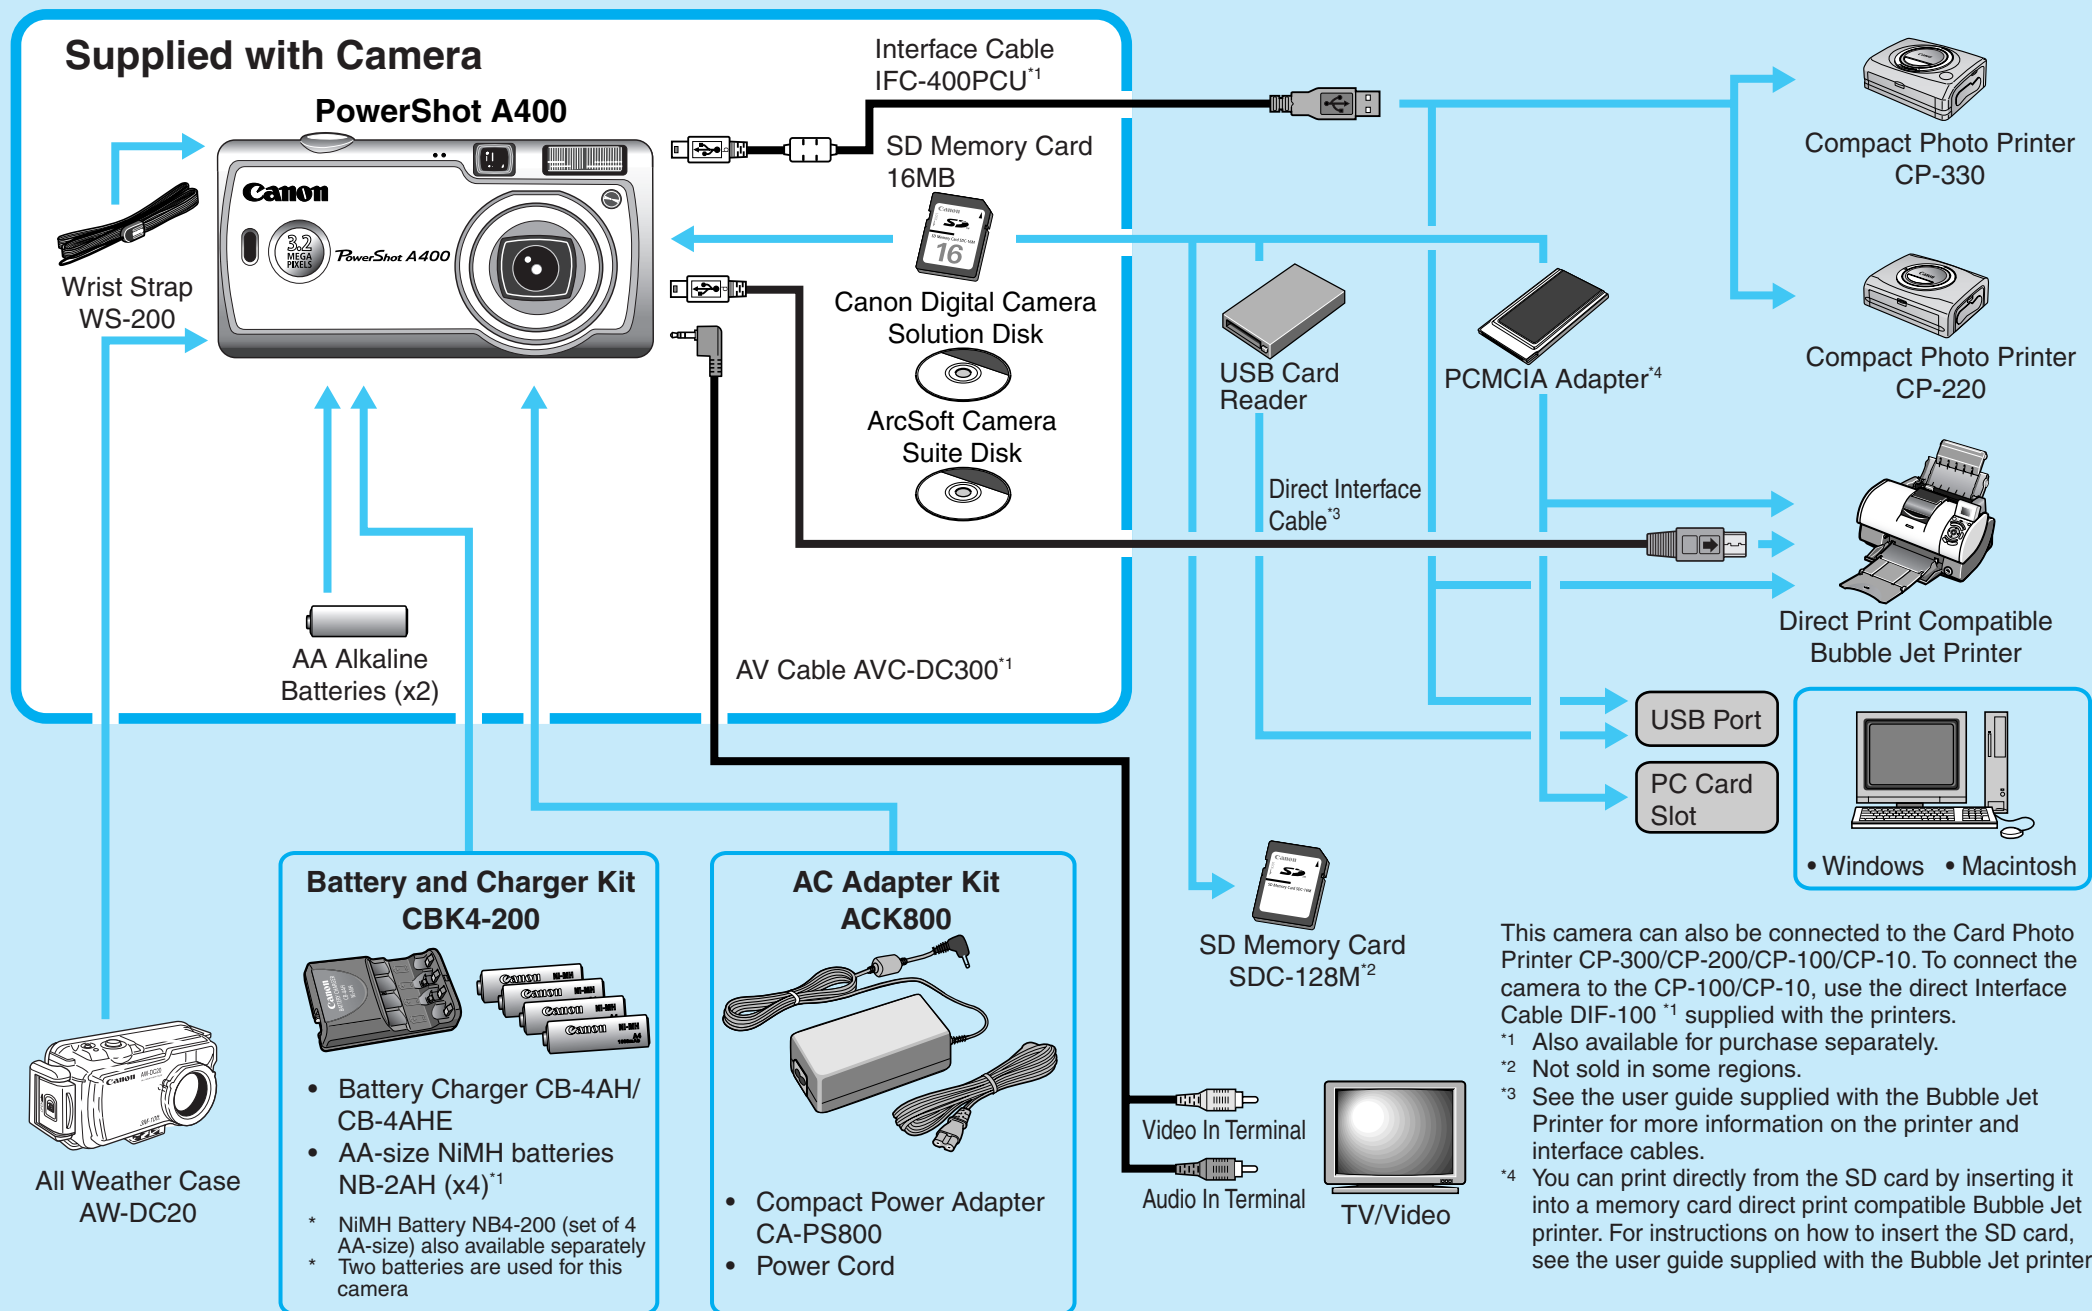

## Confirming the Package Contents

The camera package should contain the following items. Contact your camera retailer if any are missing.

- Digital Camera
- Wrist Strap WS-200
- AA Alkaline Batteries (×2)
- SD Memory Card (16MB)
- SD Memory Card Case
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- “For Windows® XP and Mac OS X Users” Leaflet
- System Map (this sheet)
- “Canon Customer Support” Leaflet
- Warranty Card

## Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls. ***Some accessories are not sold in some regions.***

### CP Printers

- **Compact Photo Printer CP-330/CP-220**
- **Card Photo Printer CP-300/CP-200/CP-100**

These super-compact, light-weight printers print high-quality postcard size, L-size, wide size (100 x 200 mm)<sup>\*1</sup> and credit card size images. The Canon rechargeable battery<sup>\*2</sup> makes these printers portable, even allowing you to print your images outdoors. (The rechargeable battery is included with the CP-330/CP-300.)

<sup>\*1</sup> Wide size supported by CP-330/CP-220 only

<sup>\*2</sup> CP-330/CP-300/CP-100 only

- **Color Ink/Paper Set KP-36IP, KP-108IP, KL-36IP, KC-36IP, KW-24IP\***
- **Color Ink/Label Set KC-18IL**
- **Color Ink/Full-Sized Label Set KC-18IF**  
Color ink, paper and label sets.

\* KW-24IP supported by CP-330/CP-220 only

## Optional Accessories

The following camera accessories are sold separately. ***Some accessories are not sold in some regions.***

### Power Supplies

- **AC Adapter Kit ACK800**  
This kit lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.
- **Battery and Charger Kit CBK4-200**  
This dedicated battery charger kit includes both a charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Convenient when taking or playing back large numbers of images.
- **NiMH Battery NB4-200**  
A set of four rechargeable AA-size NiMH batteries.  
(Two batteries are used for this camera.)

### Other Accessories

- **SD Memory Card**  
SD memory cards are used to store images recorded by the camera. A 128 MB capacity Canon SD Memory Card is also available.
- **AV Cable AVC-DC300**  
Use this cable to connect the camera to a TV set.

### Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

**Windows:** Systems running preinstalled Windows 98 (including Second Edition), Windows Me, Windows 2000, Windows XP  
**Macintosh:** Mac OS 9.0 – 9.2, Mac OS X (v10.1/v10.2/v10.3)\*  
\* Only systems equipped with genuine Apple-brand built-in USB interfaces.

- **Interface Cable IFC-400PCU**  
Use this cable to connect the camera to a computer, Compact Photo Printer CP-330/CP-220, Card Photo Printer CP-300/CP-200, or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).

- **All Weather Case AW-DC20**  
A waterproof case for the PowerShot A400. You can use this case to take underwater shots at depths of up to 3 meters (9.8 feet), and of course it's ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.

- **Battery and Charge Adapter Kit BCA-CP100**  
This rechargeable lithium-ion battery and charger for the CP-330/CP-300/CP-100 let you print images on the move.
- **Car Battery Adapter CBA-CP100**  
Allows you to print images on the go, using a car cigarette lighter as a power source.
- **Card Photo Printer CP-10**  
Prints high-quality, credit card-size images.

### Bubble Jet Printers

For more information, visit your nearest Canon retailer.