



Supplied with Camera

 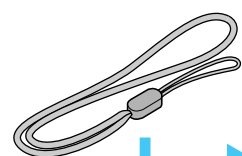


Wrist Strap
WS-800

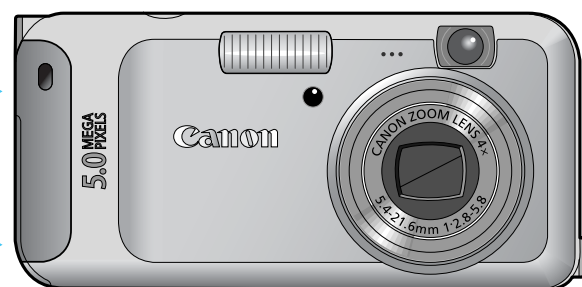


AA Alkaline
Batteries (x2)

Interface Cable IFC-400PCU *1



Memory Card (16 MB)

 


Canon Digital Camera
Solution Disk

AV Cable
AVC-DC300 *1



High-Power Flash
HF-DC1

Battery and Charger Kit CBK4-300 *6

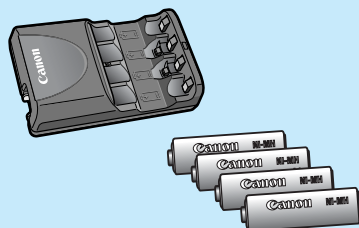


- Battery Charger CB-5AH/CB-5AHE
- AA-size NiMH batteries NB-3AH (x4)

* A separately sold four-cell set of AA nickel metal hydride batteries (NB4-300) is also available

* Two batteries are used for this camera


AC Adapter Kit ACK800

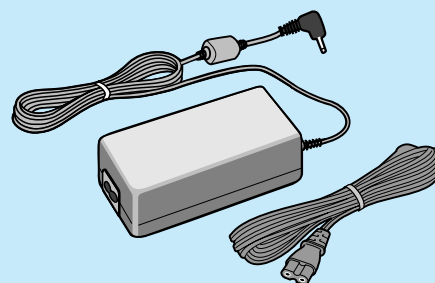

- Compact Power Adapter CA-PS800
- Power Cord




PCMCIA Adapter

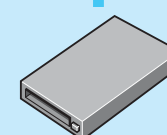


USB Card Reader


Direct Interface Cable

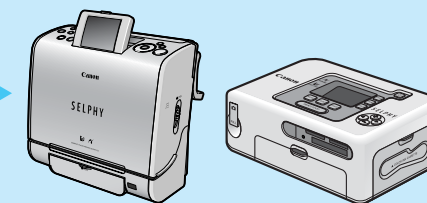

Compact Photo Printers
(SELPHY Series) *2, *3

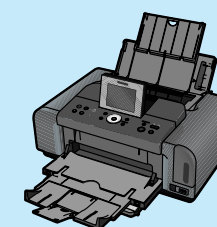

Direct Print Compatible
Bubble Jet Printer *4
(PIXMA series)

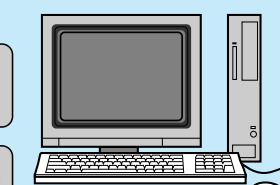


Windows/Macintosh

USB Port

PC Card Slot

Video IN Terminal

Audio IN Terminal

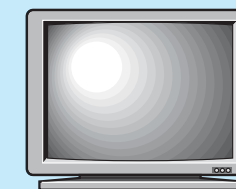

TV/Video



SD Memory Card *5
•SDC-128M
•SDC-512MSH

*1 Also available for purchase separately.

*2 See the user guide supplied with the printer for more information on the printer.

*3 This camera can also be connected to the Card Photo Printer CP-10/CP-100/CP-200/CP-300.

*4 See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.

*5 Not sold in some regions.

*6 The Battery and Charger Kit CBK4-200 can also be used.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-800
- AA Alkaline Batteries (×2)
- Memory Card (16MB)
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- System Map (this sheet)
- Warranty Card
- "Canon Customer Support" Leaflet

Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

Flash

- **High-Power Flash HF-DC1**
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

Power Supplies

- **AC Adapter Kit ACK800**
Kit for using power from a household electrical outlet.
Recommended to power a camera for an extended period of time or when connecting to a computer.
- **Battery and Charger Kit CBK4-300**
These dedicated battery charger kits include both a charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Convenient when taking or playing back large numbers of images and playing for extended periods of time.
- **NiMH Battery NB4-300**
A set of four rechargeable AA-size NiMH batteries. Two batteries are used for this camera.

Other Accessories

- **SD Memory Card**
SD Memory Cards are used to store images recorded by the camera.
Canon brand cards are available in 128 MB and 512 MB capacities.
- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
- **AV Cable AVC-DC300**
Use this cable to connect the camera to a TV set. This cable, however, cannot be connected to the PowerShot A420 Digital Camera.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
- **Bubble Jet Printers (PIXMA series)**

For more information, visit your nearest Canon retailer.