


Canon

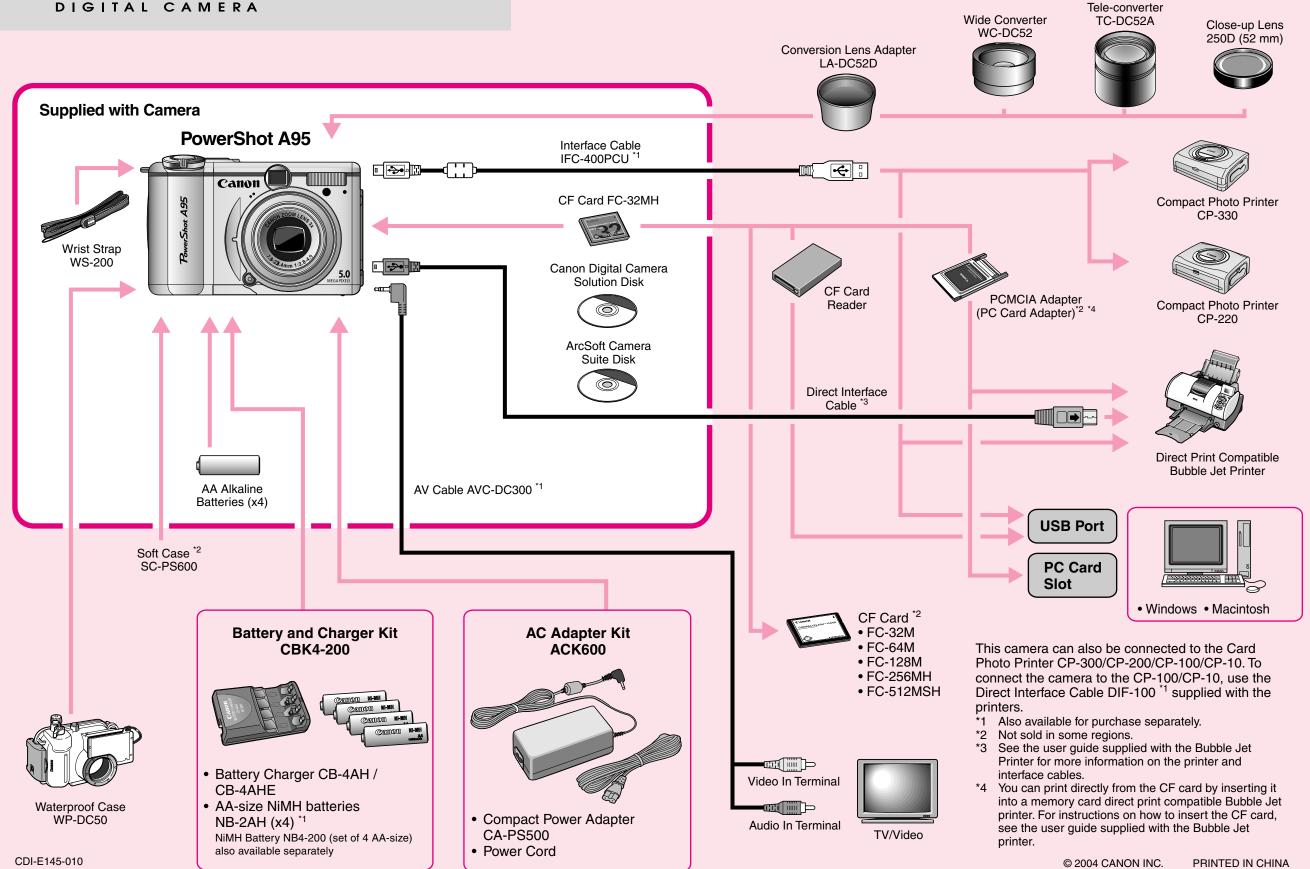

Confirming the Package Contents

The camera package should contain the following items. Contact your camera retailer if any are missing.

- Digital Camera
- Wrist Strap WS-200
- AA Alkaline Batteries (×4)
- CompactFlash™ Card FC-32MH
- CompactFlash Card Case
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- "For Windows® XP and Mac OS X Users" Leaflet
- System Map (this sheet)
- "Canon Customer Support" Leaflet
- Warranty Card

Optional Accessories

The following camera accessories are sold separately. Some accessories are not sold in some regions.

Lenses, Lens Adapter

Conversion Lens Adapter LA-DC52D

This adapter is required for mounting the wide converter, tele-converter and close-up lens to the camera.

Wide Converter WC-DC52

Converts the focal distance of the body lens by a factor of approximately 0.7 (35mm film equivalent at maximum wide angle: approximately 26.6 mm) when attached.

Tele-converter TC-DC52A

Converts the focal distance of the body lens by a factor of approximately 1.75 (35mm film equivalent at maximum telephoto: approximately 200 mm) when attached.

• Close-up Lens 250D (52 mm) A lens for shooting at higher magnifications when the camera's macro mode is used.

Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

Windows: Systems running preinstalled Windows 98 (including Second Edition), Windows Me, Windows 2000, Windows XP

Macintosh: Mac OS 9.0 – 9.2, Mac OS X (v10.1/v10.2/ v10.3)*

 * Only systems equipped with genuine Applebrand built-in USB interfaces.

Interface Cable IFC-400PCU

Use this cable to connect the camera to a computer, Compact Photo Printer CP-330/CP-220, Card Photo Printer CP-300/CP-200, or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).

 PCMCIA Adapter (PC Card Adapter) Allows you to load a CF card into the computer's PC card slot.

Other Accessories

CF Cards

CompactFlash[™] (CF) cards are used to store images recorded by the camera. Canon CF cards are available in 32 MB, 64 MB, 128 MB, 256 MB and 512 MB.

● AV Cable AVC-DC300

Use this cable to connect the camera to a TV set. • Waterproof Case WP-DC50

A waterproof case for the PowerShot A95. You can use this case to take underwater shots at depths of up to 40 meters (130 feet). And of course it's also ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.

Soft Case SC-PS600

Protects the camera from dust and scratches.

Power Supplies

• AC Adapter Kit ACK600 This kit lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.

Battery and Charger Kit CBK4-200

This dedicated battery charger kit includes both a charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Convenient when taking or playing back large numbers of images.

NiMH Battery NB4-200

A set of four rechargeable AA-size NiMH batteries.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls. *Some accessories are not sold in some regions.*

CP Printers

- Compact Photo Printer CP-330/CP-220, Card Photo Printer CP-300/CP-200/CP-100 These super-compact, light-weight printers print highquality postcard size, L-size, wide size (100 x 200 mm)*1 and credit card size images. The Canon rechargeable battery*² makes these printers portable, even allowing you to print your images outdoors. (The rechargeable battery is included with the CP-330/CP-300.) *1 Wide size supported by CP-330/CP-220 only
- *2 CP-330/CP-300/CP-100 only
- Color Ink/Paper Set KP-36IP, KP-108IP, KL-36IP, KC-36IP, KW-24IP*
- Color Ink/Label Set KC-18IL
- Color Ink/Full-Sized Label Set KC-18IF Color ink and paper/label sets. * KW-24IP supported by CP-330/CP-220 only

- Paper Cassette PCL-CP100 L-size paper cassettes.
- Paper Cassette PCC-CP100 Credit card size paper cassette (required to print with the CP-220, CP-200).
- Paper Cassette PCW-CP100 Wide-size (100 x 200 mm) paper cassette (for CP-330, CP-220).
- Computer Connection Kit CCK-CP200 Connects your computer to the CP-100 or the CP-10, allowing you to print images directly from your computer. With the CP-330, CP-220, CP-300 and CP-200 printers, you can use the software included with the printers to print images from your computer.
- Battery and Charge Adapter Kit BCA-CP100 This rechargeable lithium-ion battery and charger for the CB 220/CB 200/CB 100 let you print images on

the CP-330/CP-300/CP-100 let you print images on the move.

- Car Battery Adapter CBA-CP100 Allows you to print images on the go, using a car cigarette lighter as a power source.
- Card Photo Printer CP-10 Prints high-quality, credit card size images.

Bubble Jet Printers

For more information, visit your nearest Canon retailer.