


PowerShot S70/S60 SYSTEM MAP

DIGITAL CAMERA

Canon

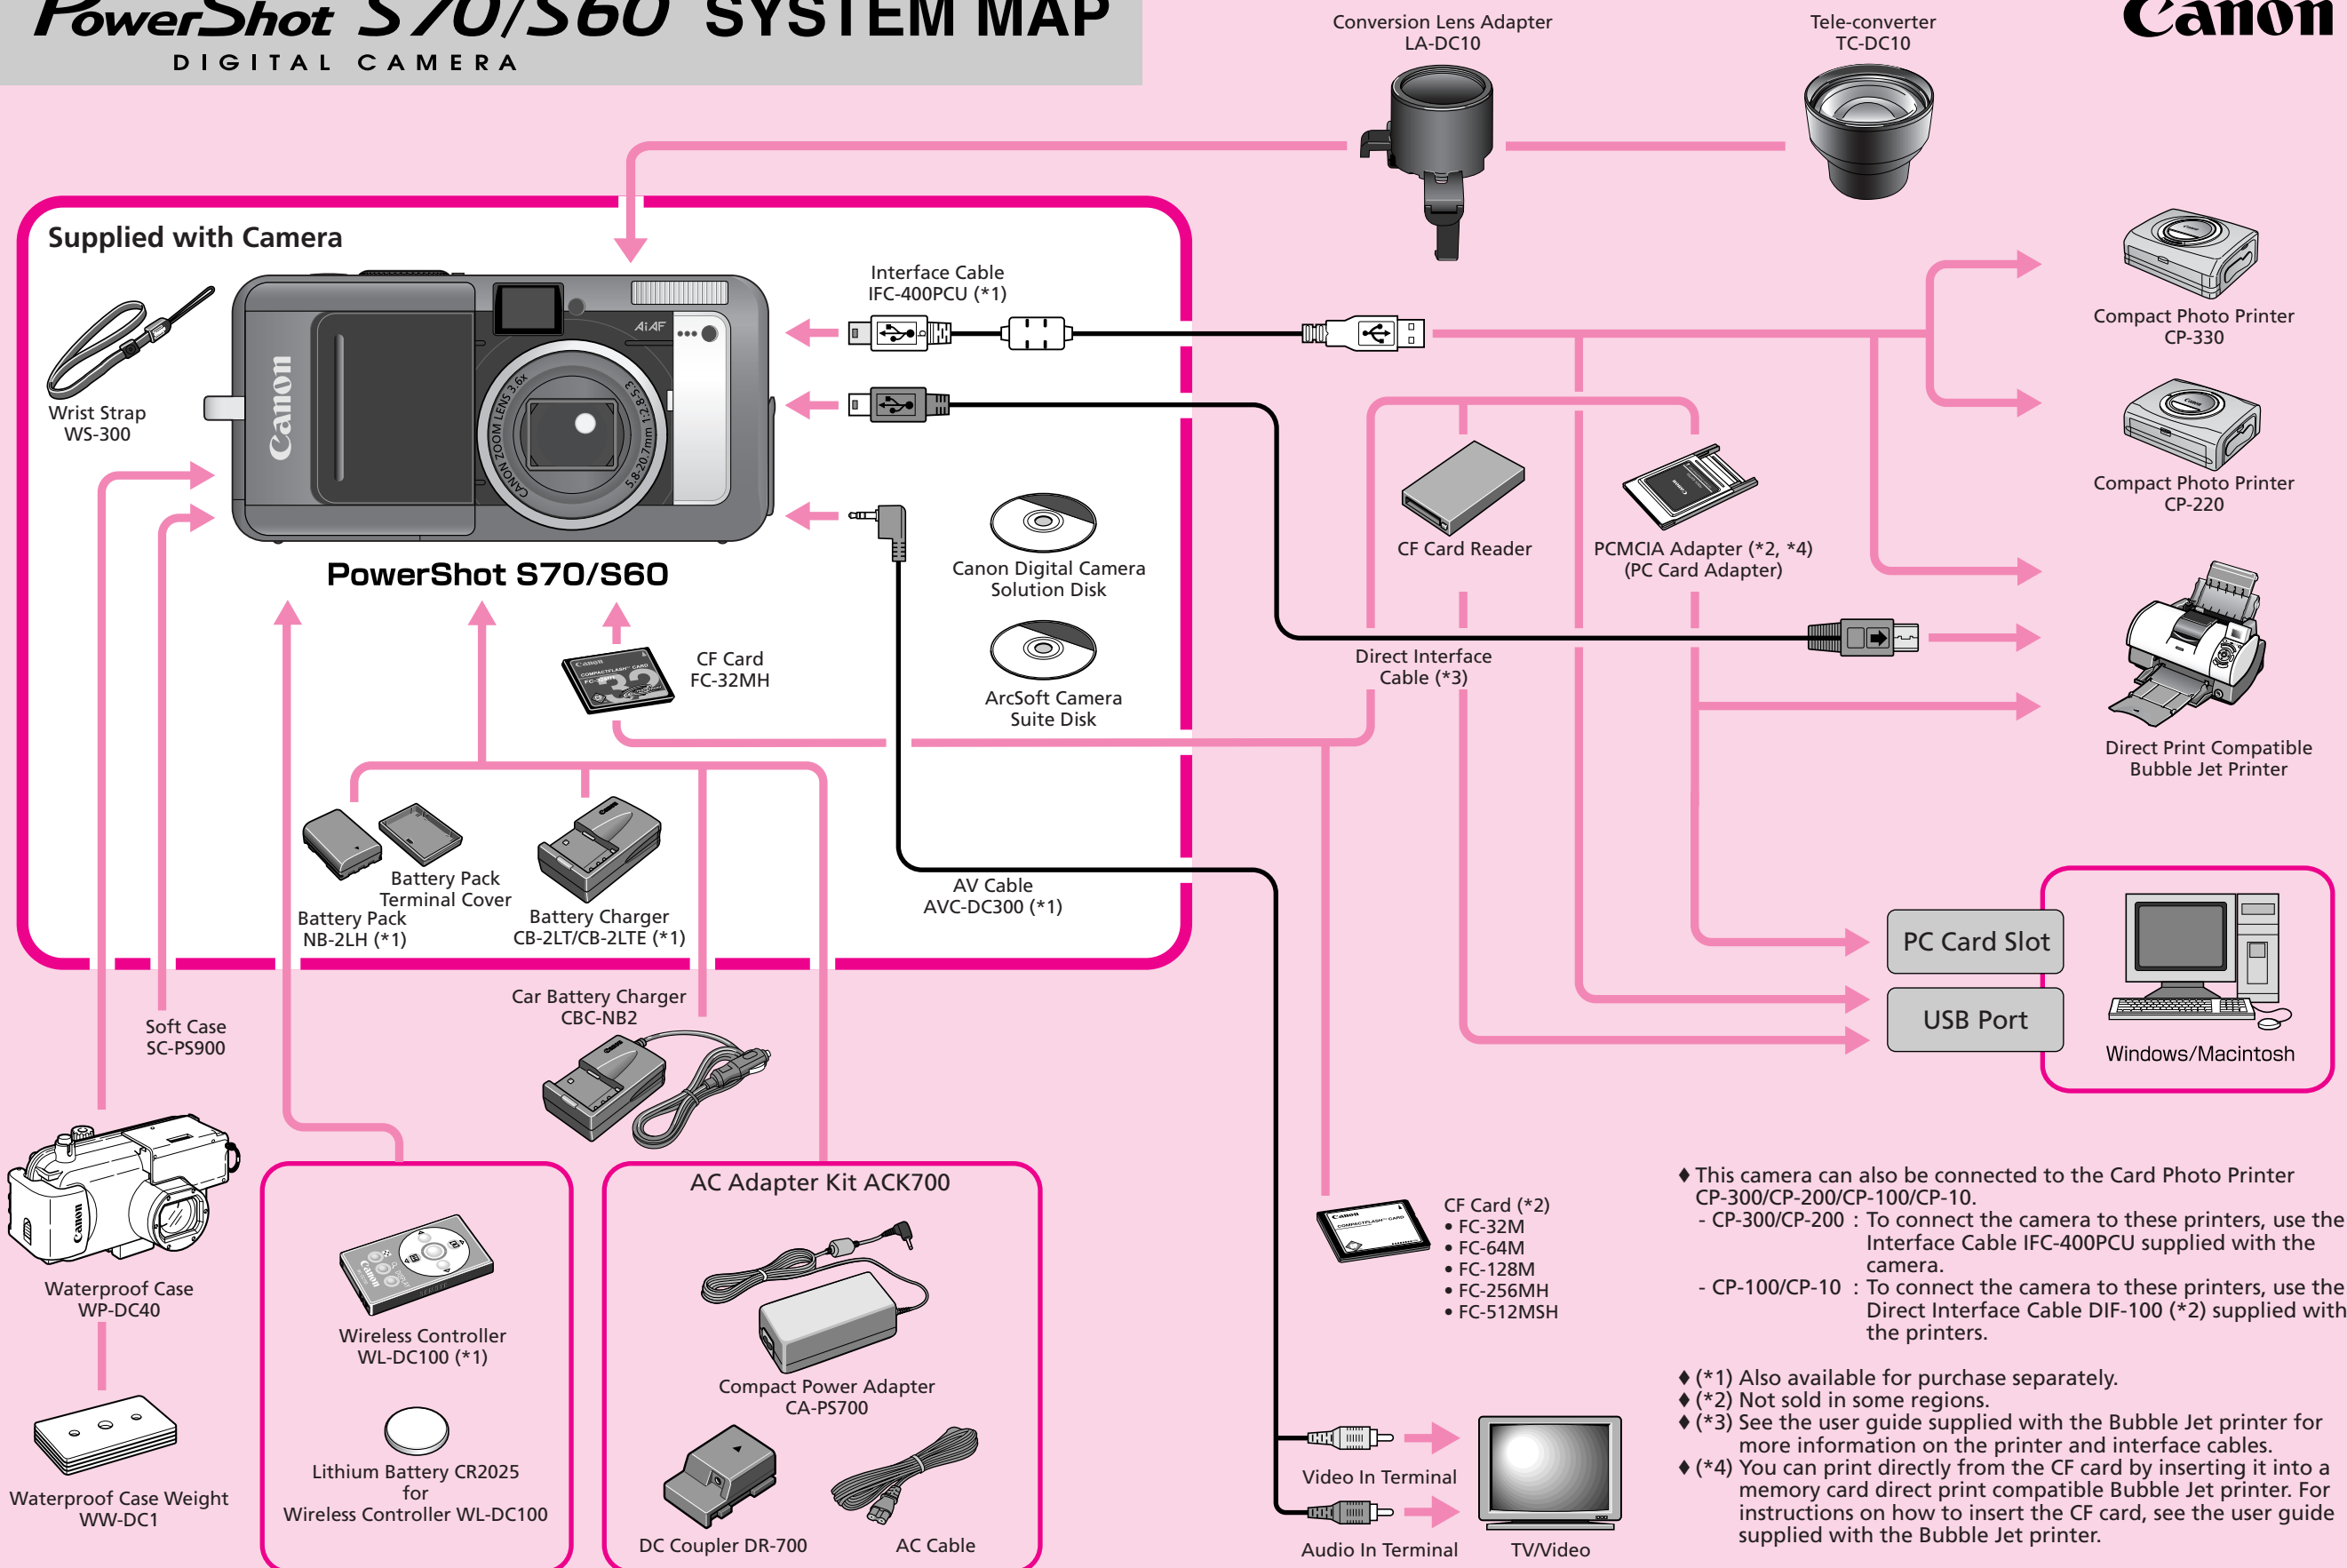

- ◆ This camera can also be connected to the Card Photo Printer CP-300/CP-200/CP-100/CP-10.
- CP-300/CP-200 : To connect the camera to these printers, use the Interface Cable IFC-400PCU supplied with the camera.
- CP-100/CP-10 : To connect the camera to these printers, use the Direct Interface Cable DIF-100 (*2) supplied with the printers.

- ◆ (*1) Also available for purchase separately.
- ◆ (*2) Not sold in some regions.
- ◆ (*3) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- ◆ (*4) You can print directly from the CF card by inserting it into a memory card direct print compatible Bubble Jet printer. For instructions on how to insert the CF card, see the user guide supplied with the Bubble Jet printer.

Confirming the Package Contents

The camera package should contain the following items. Contact your camera retailer if any are missing.

- Digital Camera
- Wrist Strap WS-300
- Battery Pack NB-2LH
- Battery Pack Terminal Cover
- Battery Charger CB-2LT/CB-2LTE
- CompactFlash™ Card FC-32MH
- CompactFlash Card Case
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- “For Windows® XP and Mac OS X users” Leaflet
- System Map (this sheet)
- “Canon Customer Support” Leaflet
- Warranty Card

Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

Lenses, Lens Adapter

- **Conversion Lens Adapter LA-DC10**
This conversion lens adapter is required for mounting the tele-converter to the camera.
- **Tele-converter TC-DC10**
Converts the focal distance of the body lens by a factor of approximately 2 (35mm film equivalent at telephoto end: approximately 200 mm) when attached.

Power Supplies

- **AC Adapter Kit ACK700**
This adapter kit lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.
 - **Compact Power Adapter CA-PS700**
 - **DC Coupler DR-700**
 - **AC Cable**
- **Battery Charger CB-2LT/CB-2LTE**
A battery charger for Battery Pack NB-2LH.
- **Battery Pack NB-2LH**
Rechargeable lithium ion battery.
- **Car Battery Charger CBC-NB2**
Allows you to change your camera's battery from the cigarette lighter socket of your car.

Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

PowerShot S70

Windows:	Systems running preinstalled Windows 98 (Second Edition only), Windows Me, Windows 2000 Service Pack 4 only, or Windows XP (including Service Pack 1).
Macintosh:	Mac OS X (v10.1.5 - v10.3)*
*Only systems equipped with genuine built-in USB interfaces.	

PowerShot S60

Windows:	Systems running preinstalled Windows 98 (including Second Edition), Windows Me, Windows 2000, or Windows XP (including Service Pack 1).
Macintosh:	Mac OS 9.0 - 9.2, Mac OS X (v10.1/v10.2/v10.3)*
*Only systems equipped with genuine built-in USB interfaces.	

- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Compact Photo Printer (CP-330/CP-220), Card Photo Printer (CP-300/CP-200) or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
- **PCMCIA Adapter (PC Card Adapter)**
Allows you to load a CF card into the computer's PC card slot.

Other Accessories

- **CF Cards**
CompactFlash™ (CF) cards are used to store images recorded by the camera. Canon CF cards are available in 32 MB, 64 MB, 128 MB, 256 MB and 512 MB.
- **AV Cable AVC-DC300**
Use this cable to connect the camera to a TV set.
- **Wireless Controller WL-DC100**
Operates camera from a distance.
- **Soft Case SC-PS900**
Protects the camera from dust and scratches.
- **Waterproof Case WP-DC40**
You can use this case to take underwater shots at depths of up to 40 meters (130 feet). And of course it's also ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.
- **Waterproof Case Weight WW-DC1**
Used with the Canon Waterproof Case to prevent the case from floating while taking pictures underwater.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls. **Some accessories are not sold in some regions.**

CP Printers

- **Compact Photo Printer CP-330/CP-220, Card Photo Printer CP-300/CP-200/CP-100**
These super-compact, light-weight printers print high-quality postcard size, L-size, wide size (100 x 200 mm)*¹ and credit card-size images. The Canon rechargeable battery*² makes these printers portable, even allowing you to print your images outdoors. The rechargeable battery is included with the CP-330/CP-300.
*¹ Wide size supported by CP-330/CP-220 only
*² CP-330/CP-300/CP-100 only
 - **Color Ink/Paper Set KP-36IP, KP-108IP, KL-36IP, KC-36IP, KW-24IP***
 - **Color Ink/Label Set KC-18IL**
 - **Color Ink/Full-Sized Label Set KC-18IF**
Color ink and paper/label sets.
* KW-24IP supported by CP-330/CP-220 only
 - **Paper Cassette PCL-CP100**
L-size paper cassettes.

- **Paper Cassette PCC-CP100**
Credit card-size paper cassette (required to print with the CP-220, CP-200).
- **Paper Cassette PCW-CP100**
Wide-size (100 x 200 mm) paper cassette (for CP-330, CP-220).
- **Computer Connection Kit CCK-CP200**
Connects your computer to the CP-100 or the CP-10, allowing you to print images directly from your computer. With the CP-330, CP-220, CP-300 and CP-200 printers, you can use the software included with the printers to print images from your computer.
- **Battery and Charge Adapter Kit BCA-CP100**
This rechargeable lithium-ion battery and charger for the CP-330/CP-300/CP-100 let you print images on the move.
- **Car Battery Adapter CBA-CP100**
Allows you to print images on the go, using a car cigarette lighter as a power source.
- **Card Photo Printer CP-10**
Prints high-quality, credit card-size images.

Bubble Jet Printers

For more information, visit your nearest Canon retailer.