



PowerShot SD20 DIGITAL ELPH

DIGITAL IXUS i⁵

CDI-E156-010

XXXXXX

© 2004 CANON INC.

PRINTED IN JAPAN

The following manuals are supplied with your camera. Please refer to them as need be.

Contents of This Guide

Included accessories and separately sold equipment information.

Reference Guides

System Map

1. Install the battery pack and the SD card.

This Guide
Quick Start Guide

2. Shoot images with the camera.

Camera User Guide

3. Play back the images.

Direct Print User Guide

4. Erase any unwanted images.

Supplied with a printer
Printer User Guide

Learn the names of camera components.

5. Print the images.

• Camera User Guide
• Software Starter Guide

6. Install the software.

Windows

Macintosh

7. Download the images to a computer.

Windows

Macintosh

What you can do with the software

The various ways of using the software

• ZoomBrowser EX Software User Guide
• ImageBrowser Software User Guide
These PDF format manuals are available on the Canon website. Please download them from the following URL:
<http://web.canon.jp/Imaging/information-e.html>


1 Preparing the Camera

→ Camera User Guide

A. Charge the battery pack.

Place the battery pack in the battery charger and plug the charger into a power outlet. The charge indicator lights red while charging and changes to green when the battery pack is charged.

Charging the battery pack takes approximately 95 minutes.

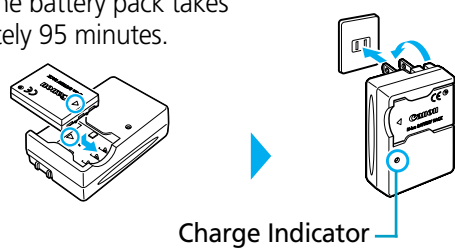

Charge Indicator

• Battery charger model names and types vary by region.

B. Install the battery pack.

Slide the SD card slot/battery cover open. Push the battery lock in the direction of the arrow and hold it while aligning the ▲ on the battery pack and camera back to insert the battery pack.



Battery Lock ▲ symbol

C. Install the SD card.

Insert the SD card all the way until it clicks. Slide the SD card slot/battery cover closed.




To remove the SD card
Push in the SD card until you hear it click, then release it.




2 Shooting → Camera User Guide

A. Set the mode switch to (Shooting).

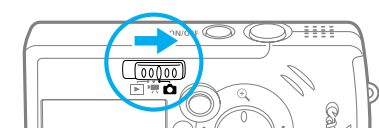

B. Press the ON/OFF button to turn the camera on.

The power lamp will light.

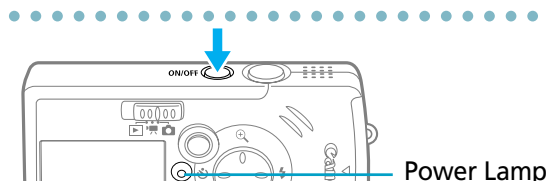

Power Lamp

C. Set the date and time (first time the camera is powered on).


- Use the ◀ or ▶ button to select the items you wish to set, and the ▲ or ▼ button to change the value.
- Check that the date and time shown are correct, then press the SET button.




D. Aim the camera at the subject you wish to capture and compose the image.

E. Focus and shoot.

- Press the shutter button halfway to focus.
 - The camera focuses and two beeps sound.

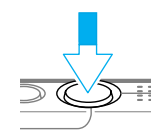


- Press the shutter button all the way to shoot.

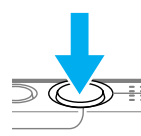


3 Playback → Camera User Guide

A. Set the mode switch to (Playback).

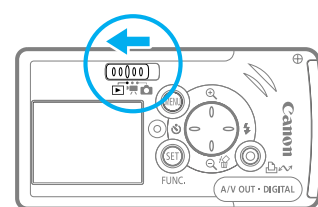


B. Play back the images.

Use the ◀ or ▶ button to display the image you wish to see.

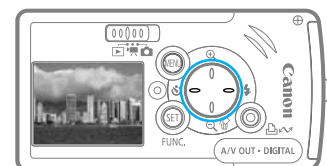

4 Erasing an Image → Camera User Guide

A. In Playback mode, use the ◀ or ▶ button to select an image to delete (1) and press the button (2).

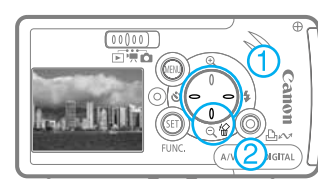

B. When the confirmation screen appears, check that [Erase] is selected and press the SET button.


Select [Cancel] using the ◀ or ▶ button to cancel without erasing.



Quick Reference → Camera User Guide

Mode Switch

- Shooting:**
Slide the mode switch to (camera icon).
- Movie:**
Slide the mode switch to (movie icon).
- Playback:**
Slide the mode switch to (right arrow icon).

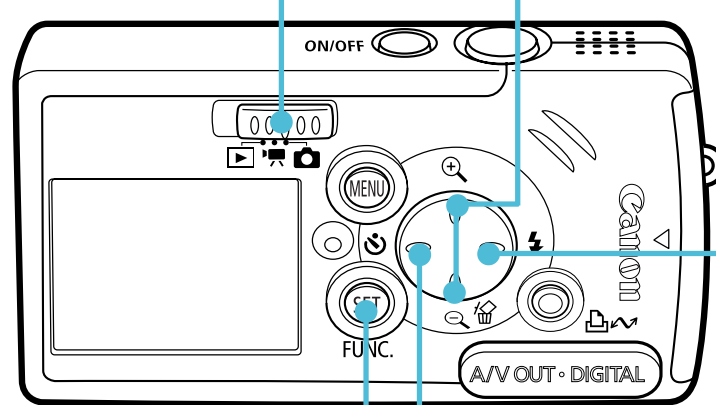

Digital Zoom

Images can be digitally magnified up to approximately 6.5x

- Press this button for a telephoto shot.
The subject will appear larger.
- Press this button for a wide-angle shot.
The subject will appear smaller.

Continuous Shooting, Self-timer

Each press of the button cycles between the following settings.

- Single Shot
- Continuous Shooting
- Self-timer

Flash

The flash setting changes with each push of the button.
*The flash cannot be set in some shooting modes.

- Auto
- Auto with Red-eye reduction
- Flash on with Red-eye reduction
- Flash on
- Flash off
- Slow-synchro

Recordable area: 30 cm to 2.0 m (1.0- 6.6 ft.)
Red-eye reduction: This feature reduces the effect of light reflecting back from the eyes and making them appear red.
Slow Synchro: The flash timing is adjusted to a slow shutter speed, allowing you to shoot night sceneries.

In addition, there are functions that can be set in each shooting mode.
For details, see "Functions Available in Each Shooting Mode" at the end of the Camera User Guide.

5 Printing with a Direct Print Compatible Printer → Direct Print User Guide


A. Connect the camera to the printer and turn on the printer's power.

Set the camera to playback mode and turn the power on.



Camera

Interface Cable

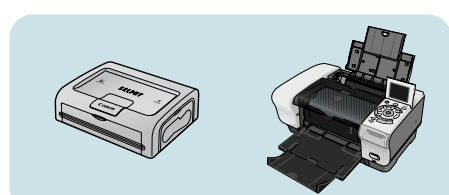

Printers


B. or appears* in the upper left corner of the camera's LCD monitor, indicating that the printer is ready to print.

* The displayed icon may vary depending on the printer model.



C. Display an image for printing and press the button.

The button will flash blue and the printing will start.

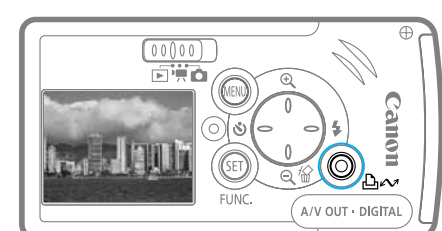

Please turn over

