



Supplied with Camera

PowerShot SD20 DIGITAL ELPH /
DIGITAL IXUS i⁵

Wrist Strap WS-500

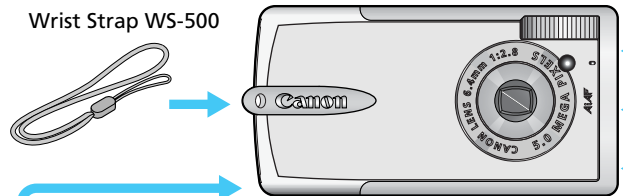

 Interface Cable IFC-400PCU(*1)



Canon Digital Camera
Solution Disk




ArcSoft Camera
Suite Disk



AV Cable
AVC-DC300(*1)

Audio / Video
in Terminal

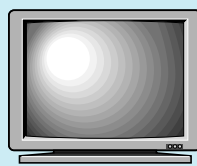


TV / Video

SD Memory Card(*4)
SDC-128M
SDC- 512MSH



 
USB Card Reader




PCMCIA Adapter



 
Direct Interface Cable(*2)



 Compact Photo Printer
(SELPHY CP series)



Card Photo Printer

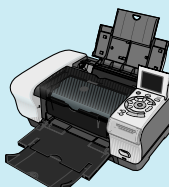


Direct Print Compatible
Bubble Jet Printer(*3)
(PIXMA series/SELPHY DS series)

PC Card Slot

USB Port

Windows/Macintosh

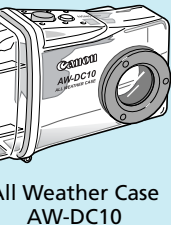

All Weather Case
AW-DC10

This camera can also be connected to the Card Photo printers.

- CP-100/CP-10: To connect the camera to these printers, use the Direct Interface Cable DIF-100 (*1) supplied with the printers.
- Other than CP-100/CP-10: To connect the camera to these printers, use the Interface Cable IFC-400PCU supplied with the camera.
- (*1) Also available for purchase separately.
- (*2) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- (*3) You can print directly from the SD card by inserting it into a memory card direct print compatible Bubble Jet printer. For instructions on how to insert the SD card, see the user guide supplied with the Bubble Jet printer.
- (*4) Not sold in some regions.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-500
- Battery Charger CB-2LU/CB-2LUE
- Battery Pack NB-3L
- Cover for Battery Pack
- SD Memory Card (32MB)
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- "For Windows® XP and Mac OS X Users" Leaflet
- System Map (this sheet)
- "Canon Customer Support" Leaflet
- Warranty Card

Optional Accessories

The following camera accessories are sold separately.

Some accessories are not sold in some regions.

Power Supplies

- **Battery Charger CB-2LU/CB-2LUE**

An adapter for charging Battery Pack NB-3L.

- **Battery Pack NB-3L**

Rechargeable lithium-ion battery.

Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

Windows: Systems running preinstalled Windows 98 Second Edition (SE) only, Windows Me, Windows 2000 Service Pack 4 only, or Windows XP (including Service Pack 1).
Macintosh: Mac OS X (v10.1.5 – v10.3)*
* Only systems equipped with genuine built-in USB interfaces.

- **Interface Cable IFC-400PCU**

Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), Card Photo Printer (other than CP-100/CP-10), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).

Other Accessories

- **SD Memory Card**

SD memory cards are used to store images recorded by the camera.

Canon brand cards are available in 128 MB and 512 MB capacities.

- **AV Cable AVC-DC300**

Use this cable to connect the camera to a TV set.

- **All Weather Case AW-DC10**

A waterproof case for the PowerShot SD20 DIGITAL ELPH / DIGITAL IXUS i⁵.

You can use this case to take underwater shots at depths of up to 3 meters (9.8 feet), and of course it's ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
- **Card Photo Printers**
- **Bubble Jet Printers**

For more information, visit your nearest Canon retailer.