
Canon

PowerShot SD200 DIGITAL DIGITAL CLPH IXUS 30 SYSTEM MAP

PowerShot SD300 DIGITAL DIGITAL CLPH DIGITAL ELPH

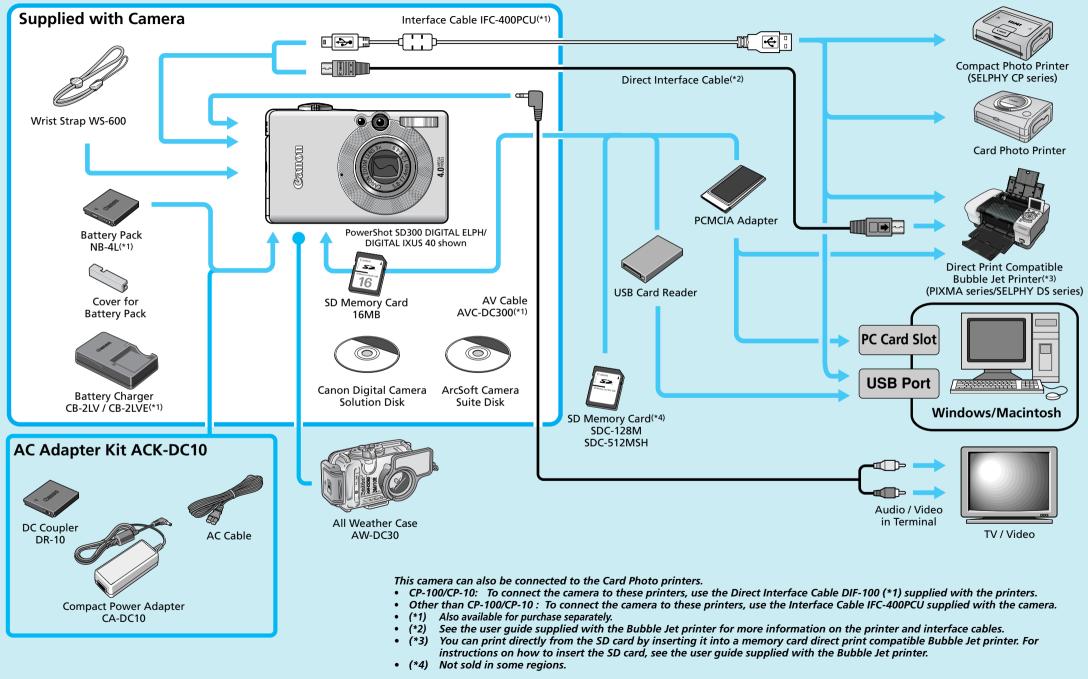

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-600
- Battery Charger CB-2LV/CB-2LVE
- Battery Pack NB-4L
- Cover for Battery Pack
- SD Memory Card (SDC-16M)
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- System Map (this sheet)
- Warranty Card
- "For Windows[®] XP and Mac OS X Users" Leaflet*
- "Canon Customer Support" Leaflet*
- "Use of Genuine Canon Accessories Recommended" Leaflet*
- * These leaflets are printed together on one sheet of paper. Please separate them before reading.

Optional Accessories

The following camera accessories are sold separately. *Some accessories are not sold in some regions.*

Power Supplies

AC Adapter Kit ACK-DC10

The kit includes the following accessories.

- Compact Power Adapter CA-DC10 An adapter for supplying power to operate the camera.
- DC Coupler DR-10 Coupler used with the power adapter.
- AC Cable
- Battery Charger CB-2LV/CB-2LVE

An adapter for charging Battery Pack NB-4L.

• Battery Pack NB-4L

Rechargeable lithium-ion battery.

Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

- Windows: Systems running preinstalled Windows 98 Second Edition (SE) only, Windows Me, Windows 2000 Service Pack 4 only, or Windows XP (including Service Pack 1).
 Macintosh: Mac OS X (v10.1.5 – v10.3)* * Only systems equipped with genuine built-in USB interfaces.
- Interface Cable IFC-400PCU

Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), Card Photo Printer (other than CP-100/CP-10), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).

Other Accessories

• SD Memory Card

SD memory cards are used to store images recorded by the camera. Canon brand cards are available in 128 MB and 512 MB capacities.

• AV Cable AVC-DC300

Use this cable to connect the camera to a TV set.

• All Weather Case AW-DC30

A waterproof case for the PowerShot SD300 DIGITAL ELPH/DIGITAL IXUS 40 or PowerShot SD200 DIGITAL ELPH/DIGITAL IXUS 30. You can use this case to take underwater shots at depths of up to 3 meters (10 feet), and of course it's ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

• Compact Photo Printers (SELPHY series)

- Card Photo Printers
- Bubble Jet Printers

For more information, visit your nearest Canon retailer.