

PowerShot G6

DIGITAL CAMERA

System Map



Lens Hood LH-DC30



Speedlite 220EX



Speedlite 420EX




Speedlite 550EX



Speedlite 580EX



Macro Ring Lite MR-14EX (*1)

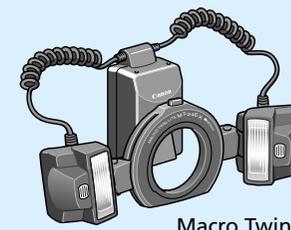

Macro Twin Lite MT-24EX (*1)

Wide Converter WC-DC58N



Tele-Converter TC-DC58N




Close-up Lens 250D (58mm) (*1)



Conversion Lens Adapter LA-DC58D

Supplied with Camera

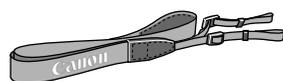


Neck Strap NS-DC3



Lens Cap




Wireless Controller WL-DC100 (*2)

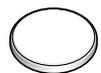


Lithium Battery CR2025 for Wireless Controller WL-DC100

Soft Case SC-DC40 (*3)

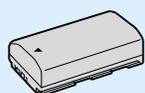


Battery Pack BP-511/512/514

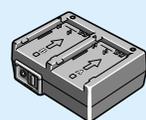

Battery Charger CG-570 (*6)



Car Battery Cable CB-570

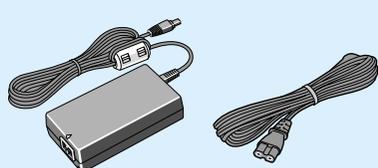

Compact Power Adapter CA-560




PowerShot G6




CF Card FC-32MH



Canon Digital Camera Solution Disk

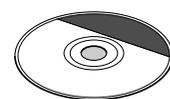

ArcSoft Camera Suite Disk

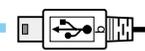


Interface Cable IFC-400PCU (*2) for PC and Macintosh



Direct Interface Cable (*4)

AV Cable AVC-DC300 (*2)

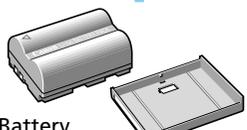

Battery Pack BP-511A (*2)



Terminal Cover



Battery Charger CG-580 (*2)



 
Battery Charger CB-5L (*2)

Battery charger model names and types vary by region.



CF Card Reader


PCMCIA Adapter (PC Card Adapter) (*3) (*5)



Compact Photo Printer CP-330



Compact Photo Printer CP-220

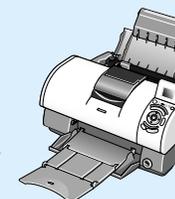

Direct Print Compatible Bubble Jet Printer

PC Card Slot

USB Port



Windows/Macintosh

Audio / Video in Terminal

TV / Video

- CF Card (*3)
- FC-32M
- FC-64M
- FC-128M
- FC-256MH
- FC-512MSH

• This camera can also be connected to the Card Photo printer CP-300/CP-200/CP-100/CP-10. To connect the camera to the Card Photo printer CP-100 and CP-10, use the Direct Interface Cable DIF-100 (*2) supplied with the printers.

- (*1) The separately sold Macro Lite Adapter 58C is required for the combined use of Macro Ring Lite MR-14EX/Macro Twin Lite MT-24EX and Close-up Lens 250D.
- (*2) Also available for purchase separately.
- (*3) Not sold in some regions.
- (*4) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- (*5) You can print directly from the CF card by inserting it into a memory card direct print compatible Bubble Jet printer. For instructions on how to insert the CF card, see the user guide supplied with the Bubble Jet printer.
- (*6) Separately sold Compact Power Adapter CA-560 or CA-570 can be used to charge the battery pack from a household power source.

Confirming the Package Contents

The camera package should contain the following items. Contact your camera retailer if any are missing.

- Digital Camera
- Lens Cap
- Neck Strap NS-DC3
- Battery Charger CG-580* or Battery Charger CB-5L*
- Battery Pack BP-511A
- Terminal Cover (for Battery Pack BP-511A)
- CompactFlash™ Card FC-32MH
- Case for CompactFlash Card
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Wireless Controller WL-DC100
- Lithium Battery CR2025 (for Wireless Controller WL-DC100)
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- "For Windows® XP and Mac OS X Users" Leaflet
- System Map (this publication)
- "Canon Customer Support" Leaflet
- Warranty Card

*Battery charger model names and types vary by region.

Optional Accessories

The following optional accessories are available. *Some accessories are not sold in some regions.*

Lens/Lens Adapter/Lens Hood

- **Wide Converter WC-DC58N**
Converts the focal distance of the body lens by a factor of 0.7 when attached.
- **Tele-converter TC-DC58N**
Converts the focal distance of the body lens by a factor of 1.75 when attached.
- **Close-up Lens 250D (58mm)**
A lens for shooting at higher magnifications when the camera's macro mode is used.
- **Conversion Lens Adapter LA-DC58D**
Adapter for fitting the wide-converter, tele-converter, close-up lens, Macro Ring Lite MR-14EX, and Macro Twin Lite MT-24EX to the camera.
- **Lens Hood LH-DC30**
Attaching the Lens Hood to the camera reduces the unwanted glare which may occur when shooting a backlit subject or when using wide angle settings.

Flash

- **EX-Series Speedlites**
Speedlites for Canon EOS models. Subjects are optimally illuminated for crisp, natural images.
 - **Speedlite 220EX/420EX/550EX/580EX**
Speedlite Transmitter ST-E2 (sold separately) is also available.
- **Macro Ring Lite MR-14EX**
- **Macro Twin Lite MT-24EX**
As macro photography dedicated flashes, they can be used for various macro flash photography purposes.

Power Supplies

- **Compact Power Adapter CA-560**
An adapter for powering the digital camera from a household power source. You are recommended to use the compact power adapter to power the camera for prolonged use or during a computer connection.

Please check the cable of the CA-560 you purchased. A ferrite core should be located near the adapter. If there is no ferrite core, please contact your retailer.



- **Battery Pack BP-511/511A/512/514**
Rechargeable lithium ion battery.
- **Battery Charger CG-570**
Battery packs can be charged from a household power source using Compact Power Adapter CA-560 or Compact Power Adapter CA-570 (sold separately).
- **Car Battery Cable CB-570**
Required when charging the battery pack from the cigarette lighter socket of your car, using the Battery Charger CG-570.
- **Battery Charger CG-580**
- **Battery Charger CB-5L**
A small convenient battery charger that charges the battery packs using a household power source.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls. *Some accessories are not sold in some regions.*

CP Printer

- **Compact Photo Printer CP-330/CP-220, Card Photo Printer CP-300/CP-200/CP-100**
These super-compact, light-weight printers print high-quality postcard size, L-size, wide size (100 x 200 mm)*¹ and credit card-size images. The Canon rechargeable battery*² makes these printers portable, even allowing you to print your images outdoors. The rechargeable battery is included with the CP-330/CP-300.
 - *¹ Wide size supported by CP-330/CP-220 only
 - *² CP-330/CP-300/CP-100 only
- **Color Ink/Paper Set KP-36IP, KP-108IP, KL-36IP, KC-36IP, KW-24IP***
- **Color Ink/Label Set KC-18IL**
- **Color Ink/Full-Sized Label Set KC-18IF**
Color ink and paper/label sets.
 - * KW-24IP supported by CP-330/CP-220 only
- **Paper Cassette PCL-CP100**
L-size paper cassettes.

- **Paper Cassette PCC-CP100**
Credit card-size paper cassette (required to print with the CP-220, CP-200).
- **Paper Cassette PCW-CP100**
Wide-size (100 x 200 mm) paper cassette (for CP-330, CP-220).
- **Computer Connection Kit CCK-CP200**
Connects your computer to the CP-100 or the CP-10, allowing you to print images directly from your computer. With the CP-330, CP-220, CP-300 and CP-200 printers, you can use the software included with the printers to print images from your computer.
- **Battery and Charge Adapter Kit BCA-CP100**
This rechargeable lithium-ion battery and charger for the CP-330/CP-300/CP-100 let you print images on the move.
- **Car Battery Adapter CBA-CP100**
Allows you to print images on the go, using a car cigarette lighter socket as a power source.
- **Card Photo Printer CP-10**
Prints high-quality, credit card-size images.

Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

Windows: Systems running preinstalled Windows 98 Second Edition, Windows Me, Windows 2000 SP4, or Windows XP (including Service Pack 1).

Macintosh: Mac OS X (v10.1.5 – v10.3)*

*Only systems equipped with genuine built-in USB interfaces.

- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Compact Photo Printer (CP-330/CP-220), Card Photo Printer (CP-300/CP-200) or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
- **PCMCIA Adapter (PC Card Adapter)**
Allows you to load a CF card into the computer's PC card slot.

Others

- **CF Cards**
CompactFlash™ (CF) cards are used to store images recorded by the camera. Canon brand cards are available in 32 MB, 64 MB, 128 MB, 256 MB, and 512 MB capacities.
- **AV Cable AVC-DC300**
A cable used to connect the camera to a TV or video player.
- **Wireless Controller WL-DC100**
Operates camera from a distance.
- **Soft Case SC-DC40**
Protect the camera from scratches and dirt.

Bubble Jet Printers

For more information, visit your nearest Canon retailer.