


## Supplied with Camera

Interface Cable IFC-400PCU(\*1)



Wrist Strap WS-600

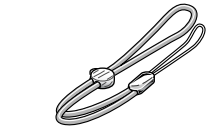

Battery Pack  
NB-4L(\*1)



 
Cover for  
Battery Pack



Battery Charger  
CB-2LV / CB-2LVE(\*1)




Memory Card (16 MB)



Canon Digital Camera  
Solution Disk

AV Cable  
AVC-DC300(\*1)

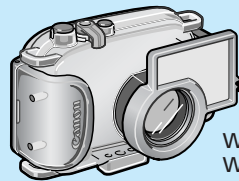

Waterproof Case  
WP-DC4




High-Power Flash  
HF-DC1


## AC Adapter Kit ACK-DC10




DC Coupler  
DR-10

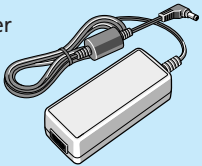


Power Cord

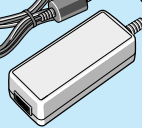


Compact Power Adapter  
CA-DC10

 

Direct Interface Cable(\*2)

 

PCMCIA Adapter

 


USB Card Reader



SD Memory Card(\*4)  
SDC-128M  
SDC-512MSH



Compact Photo Printer(\*3)  
(SELPHY CP series)

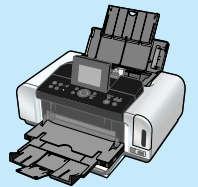


Direct Print Compatible  
Bubble Jet Printer  
(PIXMA series/SELPHY DS series)

PC Card Slot


USB Port



Windows/Macintosh

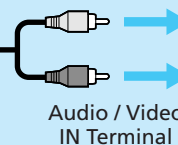

Audio / Video  
IN Terminal

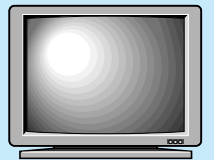

TV / Video

- (\*1) Also available for purchase separately.
- (\*2) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- (\*3) This camera can also be connected to the Card Photo Printer CP-10/CP-100/CP-200/CP-300.
- (\*4) Not sold in some regions.

## Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-600
- Battery Charger CB-2LV/CB-2LVE
- Battery Pack NB-4L
- Cover for Battery Pack
- Memory Card (16 MB)
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- System Map (this sheet)
- Warranty Card
- "For Windows® XP and Mac OS X Users" Leaflet\*
- "Canon Customer Support" Leaflet\*
- "Use of Genuine Canon Accessories Recommended" Leaflet\*

\* These leaflets are printed together on one sheet of paper. Please separate them before reading.

## Optional Accessories

The following camera accessories are sold separately.

***Some accessories are not sold in some regions.***

### Flash

- **High-Power Flash HF-DC1**  
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

### Power Supplies

- **AC Adapter Kit ACK-DC10**  
The kit includes the following accessories.
  - **Compact Power Adapter CA-DC10**  
An adapter for supplying power to operate the camera.
  - **DC Coupler DR-10**  
Coupler used with the power adapter.
  - **Power Cord**
- **Battery Charger CB-2LV/CB-2LVE**  
An adapter for charging Battery Pack NB-4L.
- **Battery Pack NB-4L**  
Rechargeable lithium-ion battery.

### Other Accessories

- **SD Memory Card**  
SD memory cards are used to store images recorded by the camera.  
Canon brand cards are available in 128 MB and 512 MB capacities.
- **Interface Cable IFC-400PCU**  
Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
- **AV Cable AVC-DC300**  
Use this cable to connect the camera to a TV set.
- **Waterproof Case WP-DC4**  
When you attach this waterproof case to the camera, you can use it to take underwater shots at depths of up to 40 meters (131 feet), and of course it's ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.

## Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting the printer to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
- **Bubble Jet Printers**

For more information, visit your nearest Canon retailer.