 


Supplied with Camera

Wrist Strap
WS-300

 
PowerShot SD110 DIGITAL ELPH /
DIGITAL IXUS IIs

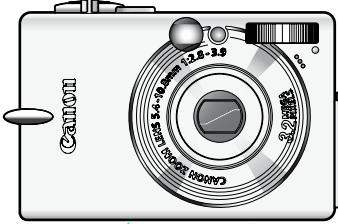


SD Memory Card
16MB



Cover for
Battery Pack




Battery Pack
NB-3L (*1)

 


Battery Charger
CB-2LU/2LUE (*1)

 Soft Case SC-DC20 (*4)

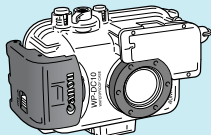


Waterproof Case
WP-DC10

 
AC Adapter Kit ACK900

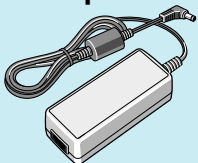

Compact Power Adapter
CA-PS500

 

DC Coupler
DR-900

 

AC Cable



Interface Cable
IFC-400PCU (*1)



Direct Interface Cable (*2)

 
 


Canon Digital Camera
Solution Disk



ArcSoft Camera
Suite Disk

AV Cable
AVC-DC300 (*1)

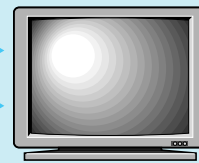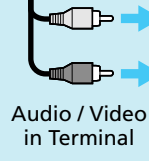


TV / Video


USB Card Reader



 
SD Memory Card
SDC-128M (*4)




PCMCIA Adapter
(*3)

 

Card Photo Printer
CP-300

 

Card Photo Printer
CP-200

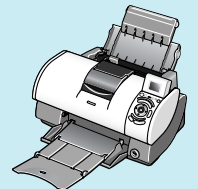 

Direct Print Compatible
Bubble Jet Printer

PC Card Slot

USB Port



•Windows
•Macintosh

- This camera can also be connected to the Card Photo printer CP-100 and CP-10 using the Direct Interface Cable DIF-100 (*1) supplied with the printers.
- (*1) Also available for purchase separately.
- (*2) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- (*3) You can print directly from the SD card by inserting it into a memory card direct print compatible Bubble Jet printer. For instructions on how to insert the SD card, see the user guide supplied with the Bubble Jet printer.
- (*4) Not sold in some regions.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-300
- Battery Charger CB-2LU/2LUE
- Battery Pack NB-3L
- Cover for Battery Pack
- SD Memory Card (16MB)
- SD Memory Card Case
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- "For Windows® XP and Mac OS X Users" Leaflet
- System Map (this sheet)
- "Canon Customer Support" Leaflet
- Warranty Card

Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

Power Supplies

- **AC Adapter Kit ACK900**
The kit includes the following accessories.
 - **Compact Power Adapter CA-P5500**
An adapter for supplying power to operate the camera.
 - **DC Coupler DR-900**
Coupler used with the power adapter.
 - **AC Cable**
- **Battery Charger CB-2LU/2LUE**
An adapter for charging Battery Pack NB-3L.
- **Battery Pack NB-3L**
Rechargeable lithium-ion battery.

Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

Windows: Systems running preinstalled Windows 98 (including Second Edition), Windows Me, Windows 2000, or Windows XP.
Macintosh: Mac OS 9.0 – 9.2, Mac OS X (v10.1/v10.2)*
* Only systems equipped with genuine built-in USB interfaces.

- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Card Photo Printer CP-300 or CP-200, or to a Bubble Jet printer (refer to your Bubble Jet printer user guide for more information).

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls. **Some accessories are not sold in some regions.**

Card Photo Printers (CP Series)

- **Card Photo Printer CP-300/CP-200/CP-100**
These super-compact, light-weight printers print high-quality postcard size, L-size and card size images. The Canon rechargeable battery* makes these printers portable, even allowing you to print your images outdoors. The rechargeable battery is included with the CP-300. (*CP-300/CP-100 only)
 - **Color Ink/Paper Set KP-36IP, KL-36IP, KC-36IP**
 - **Color Ink/Label Set KC-18IL**
 - **Color Ink/Full-Sized Label Set KC-18IF**
Color ink and paper set.
 - **Paper Cassette PCL-CP100**
L-size paper cassette.
 - **Paper Cassette PCC-CP100**
Credit card-size paper cassette (required to print with the CP-200).
- **Computer Connection Kit CCK-CP200**
Connects your computer to the CP-100 or the CP-10, allowing you to print images directly from your computer. With the CP-300 and CP-200 printers, you can use the software included with the printers to print images from your computer.
- **Battery and Charge Adapter Kit BCA-CP100**
This rechargeable lithium-ion battery and charger for the CP-300/CP-100 lets you print images on the move.
- **Car Battery Adapter CBA-CP100**
Allows you to print images on the go, using a car cigarette lighter as a power source.
- **Card Photo Printer CP-10**
Prints high-quality, credit card-size images.

Other Accessories

- **SD Memory Card**
SD memory cards are used to store images recorded by the camera.
A 128 MB capacity Canon SD Memory Card is also available.
- **AV Cable AVC-DC300**
Use this cable to connect the camera to a TV set.
- **Waterproof Case WP-DC10**
A waterproof case for the PowerShot SD110 DIGITAL ELPH / DIGITAL IXUS IIs.
You can use this case to take underwater shots at depths of up to 40 meters (130 feet), and of course it's ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.
- **Soft Case SC-DC20**
Protects the camera from dust and scratches. The case pocket can be used to store items, such as battery packs and SD cards.

Bubble Jet Printers

For more information, visit your nearest Canon retailer.