

1. DPOF Image Selection

- 1. Without the printer connected to the camera, use the Play menu, select **Print Order** and press **SET**.
- 2. Select the **[ORDER]** button and press **SET**. If the Print Type is set to **[Standard]** or **[Both]**, use the ◀ (left) or ▶ (right) and select single images and ▲ (up) or ▼ (down) to set the number of copies.
- 3. For **[Index]** Print Type, use the ◀ (left) or ▶ (right) to select images and ▲ (up) or ▼ (down) to mark or remove the mark from the images. Press the **MENU** button when selections are complete.
- 4. While in Print Order menu, press the **[Set up]** button and select the following:

Print Type	Standard	Prints one image per page
	Index	Prints the selected images together at a reduced size in an index format
	Both	Prints the images in both the Standard and Index formats
Date	Adds the Date to the print	
File No.	Adds the file number to the print	

- 5. When finished, press the **MENU** button.

2. DPOF Printing

- 1. Connect your camera to the i70 Color Bubble Jet Printer.
- 2. In the **Play** menu, select **[Print Order]** and press **SET**.
- 3. Select **[PRINT]** and press **SET**. Select **[Style]** and press **SET** to choose Print Style settings described in the “Selecting Paper and Options” section of this document. Then, press **MENU** to return to the previous screen.
- 4. Select **[OK]** and press **SET** to begin printing.

Troubleshooting and Support

Printing Errors

- A message may appear on the LCD monitor if an error occurs during the printing process. Use the ◀ (left) or ▶ (right) arrow to select **[Stop]** or **[Resume]** and press the **SET** button. The printing will resume automatically after the error is corrected.
- The type of error will determine whether the **[Continue]** and **[Stop]** options appear.

For a complete listing of frequently asked questions and technical support visit: www.canontechsupport.com.

Canon

i70 Series
Color Bubble Jet Printer

Bubble Jet Direct Quick Reference Sheet

What is Bubble Jet Direct ?

Bubble Jet Direct is a product feature that allows you to print photos directly from a compatible Canon Digital Camera without the use of a computer.



For a listing of compatible Bubble Jet Direct digital cameras visit our Web site at www.usa.canon.com/consumer/bubblejetdirect.




1. Connecting Your Camera

- 1. **TURN THE PRINTER ON.**
- 2. Make sure the digital camera is **TURNED OFF.**



You can use a household power supply or battery pack to power the camera when connecting it to the printer. If using a battery pack, ensure that it is fully charged.

- 3. Connect the digital camera to the i70 printer using the USB interface cable provided with your camera.

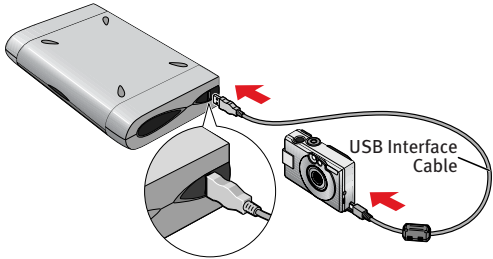


The camera's cable connector is located under the terminal cover on the camera. Make sure the 'Canon' logo on the cable faces front of the camera (lens side).

- 4. **TURN THE CAMERA ON.**
- 5. Set camera on Replay Mode. The  will appear on the LCD monitor when the printer is connected correctly.




2. Selecting Images and Number of Copies

- 1. In Replay Mode select the image to print by using the ◀ (left) or ▶ (right) arrow on the camera. Press **SET**.
- 2. From the Print Setting menu, select the **[Copies]** option using the ▲ (up) or ▼ (down) arrow on the camera. Select the number of copies using the ◀ (left) or ▶ (right) arrows.






 **Note** *To crop your photos, use the Trimming or Printing area feature displayed in the Replay mode.*




3. Selecting Paper and Options

- 1. From the **[Style]** menu choose  **Paper**,  **Borders** and  **Date** using the ▲ (up) or ▼ (down) arrows on the camera. Set the selection using the ◀ (left) or ▶ (right) arrows.



 Paper		Select the paper size from the following: <ul style="list-style-type: none">• Card # 1 – Photo Paper Pro 4” x 6”• Card # 2 – Photo Paper Plus Glossy 4” x 6”• Card # 3 – Photo Paper Plus Glossy 5” x 7”• LTR – Photo Paper Pro 8.5” x 11” or Photo Paper Plus Glossy 8.5” x 11”• A4 – Photo Paper Pro (European size) or Photo Paper Plus Glossy (European size)
 Borders	 Borderless	Prints right to the edge of the paper
	 Bordered	Prints with a border
 Date		Prints the photo’s creation date

- 2. When finished, press the **MENU** button.

 **Note** *With borderless printing, your image will be automatically sized to fit the selected paper size. Slight image cropping may occur.*

4. Printing

Basic printing

- 1. Use the ▲ (up), ▼ (down), ◀ (left) or ▶ (right) arrows to select **[Print]**.
- 2. Press the **SET** button to start printing.


Canceling printing


- 1. Press the **SET** button to stop printing. A confirmation message will display.
- 2. Use the ◀ (left) or ▶ (right) arrows to select **[OK]** and press the **SET** button.
- 3. The printer will stop printing and eject the paper.



5. Disconnecting Your Camera

- 1. Disconnect the camera from the printer.

 **Important** *When disconnecting the cable from the camera, hold the plug (closest to the camera) and pull. Never pull on the cable. Some digital cameras require that you [Push] a button on the connector to remove the cable.*

- 2. When the camera is disconnected the  logo will disappear from the LCD monitor and the camera will revert to the standard replay mode.
- 3. **TURN THE CAMERA OFF.**

What is Digital Print Order Format (DPOF™)?

Digital Print Order Format allows users to mark images on DPOF compatible digital cameras with special instructions. Using DPOF settings, you can:

- Print one image per page of all or selected images
- Print an index sheet (thumbnail images) of selected images
- Add file number and (or) date information to selected images
- Print only selected images on a CompactFlash™ card or print all images on a CompactFlash card