Canon

Start Here Easy Setup Instructions













- head cleaning after the cover is closed.

5 Connect the Printer and Load Paper

For USB Port:

1 TURN THE PRINTER OFF.



2 Connect one end of the USB cable to the computer, the other to the printer.



9 Pinch the paper guide and slide it to the left. Load a sheet of blank paper in the paper rest. Slide the guide toward the left edge of the paper.





Canon

6 Windows Printer Driver Installation and Print Head Alignment

1 Be sure to **TURN THE PRINTER OFF** before continuing.



NOTE: For Windows[®] XP or Windows 2000, log on to Windows as an Administrator before continuing.

IMPORTANT: If you see the Found New Hardware Wizard, click Cancel.



- 2 Close any open software applications, then insert the "Setup Software & User's Guide" CD-ROM. The setup program should run automatically.
 - **NOTE:** If the setup program does not run, click Start, then Run, then type D:\msetup.exe, where D is your CD-ROM drive.
- 8 Read the License Agreement, then click Yes to continue.

4 When the main menu appears, click **Install**.



5 When the Printer Port window appears. TURN THE PRINTER ON. The software will begin identifying the printer port being used.



IMPORTANT: If your computer cannot detect a printer port, click Help and refer to the online instructions.

- **6** Register your product to ensure product support. Follow the on-screen instructions.
- **7** When the Terminate Installation window appears, click **OK**.
- 8 When the Memory Card Utility screen appears, click Install. Follow the on-screen instructions.



- **9** When the Terminate Installation window appears, click **OK**.
- **1** When the software menu appears, click Install and follow the on-screen instructions.



- When the Terminate Installation window appears, click OK, then Exit.
- **1** Click **Yes** when you are prompted to restart your computer.
- **13** Start the print head alignment procedure.
 - a. For Windows XP/2000 click Start, select **Control Panel, Printers and Other** Hardware, then Printers and Faxes.
 - **b**. Right-click the *i***900D** icon, then click Printing Preferences.
 - **NOTE:** For Windows 98/Me click Start, then select Settings, Printers. Right-click the *i*900D icon, then click **Properties**.
 - c. Click the Maintenance tab, then click on the **Print Head Alignment** icon.
 - **d**. When asked to start the print head alignment, click **OK** and follow the onscreen instructions.



1 Click **OK** to exit the Maintenance tab. Print head alignment is now complete.



Part no. QA7-2784-V01 © 2003 Canon U.S.A., Inc. Canon is a registered trademark of Canon Inc. All other products and brand names are registered trademarks of their respective owners. Specifications subject to change without notice. P-i900D-ESI-0503 Printed in Thailand

Mac[®] OS X Printer Driver Installation and Print Head Alignment

Optional Photo Paper Tray

A	This printer requires print head alignment.
a	Start Utility, click [Print Head Alignment] on the [Test Print] panel to start alignment.
3	panel to start alignment.

- then **Applications** folder. Double-click
- select *i*900D, then click the Configure icon.

00	BJ Printer Utili	ty	
Test Prin	t Varrale Check		
	Prints a nozzle-check pattern.		
	rint Head Alignment		
	t will align the print heads t	o correct any error i	in
\sim			
0.00	011 .0000	6	Ouit

- **1** Make sure that the paper guide has been moved to the left side and the paper tray is fully extended.
- **2** Install the Photo Paper Tray. Put the Photo Paper Tray along the paper rest and insert it until it clicks into place.



3 Open the Photo Paper Tray cover, adjust the paper guide and load the paper, printing side up. Close the cover.



4 You can print from both paper trays. 4" x 6" : Turn the knob to the left until it points at **PRINT. Letter:** Turn the knob to the right until it points at **REMOVE.**

Letter



5 If you want to remove the Photo Paper Tray, turn the knob so that it points at **REMOVE** and push the lever up while lifting the Photo Paper Tray out.

