Canon

Start Here Easy Setup Instructions

1 Unpack the Printer	2 Prepare the Printer	3 Install the Print Head	4 Install
1 Carefully remove all items from the box.	Remove the shipping tape from the front and sides of the printer.	1 Remove the print head from its package.	1 Peel back th remove the p ink tank (BC
000			
	Shipping Tape	2 Turn the print head over, then remove the orange protective cap.	2 Twist off and protective ca
i 850 Photo Printer	Plug the power cord into the back of the printer and connect the other end to a power outlet.		
		NOTE: Do not touch the electrical contacts.	NOTE: To avoit the sides of a
Power Cord		Print Nozzle	3 Insert the inl (Refer to the Press down place.
		3 Raise the gray lock lever.	
i 850 Print Head	Press the POWER button.		4 Insert the reaction their assigned
Ink Tanks BCI-3eC Cyan BCI-3eM Magenta BCI-3eBK Black BCI-3eY Yellow	Open the front cover. The print head holder automatically moves to the center. Remove the protective tape.	 Gently slide the print head into the holder. The print head will rest at a slight angle. Do not press it down. 	
Quick Start Guide	Protective tape		5 Close the fro paper rest an
	Serial number	 Lower the gray lock lever until it locks into place. 	
Documentation and Software Kit a NOTE: The " <i>i</i> 850 Setup Software & User's Guide" CD-ROM contains printer drivers, software applications and electronic manuals.	Write down the serial number located to the right of the print head. You will need this later to register the product.		



ll the Ink Tanks

the orange tab and completely ne plastic wrapper from the yellow BCI-3eY).



and discard the orange e cap. Protective cap



void spilling ink, never press on of an ink tank.

ink tank into the correct slot. he color guide on the print head.)


vn until the ink tank clicks into



remaining three ink tanks into gned slots.




front cover. Open and pull out the tand the output tray.

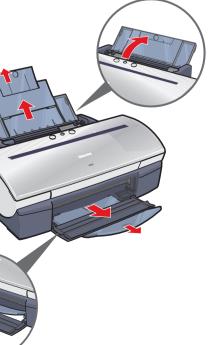

5 Connect the Printer To Your Computer


For USB Cables:

- **1** Turn the printer off.
 - **IMPORTANT:** Be sure printer is off before continuing, or the computer will attempt to install the printer driver before the printer is ready.
- 2 Connect one end of the USB cable to the computer, the other to the printer.

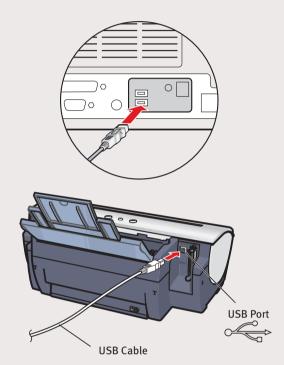


For Parallel Cables:

 
1 Turn the printer off.



2 Connect one end of the parallel cable to the computer, the other to the printer.

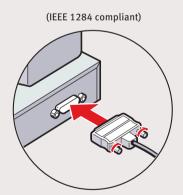

Parallel Cable

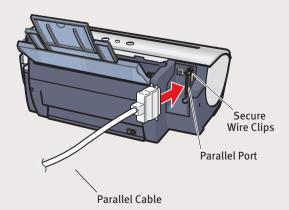


Continue with Step 6 on side two.



6211011

Troubleshooting chapter in the *i850*

Quick Start Guide for instructions.

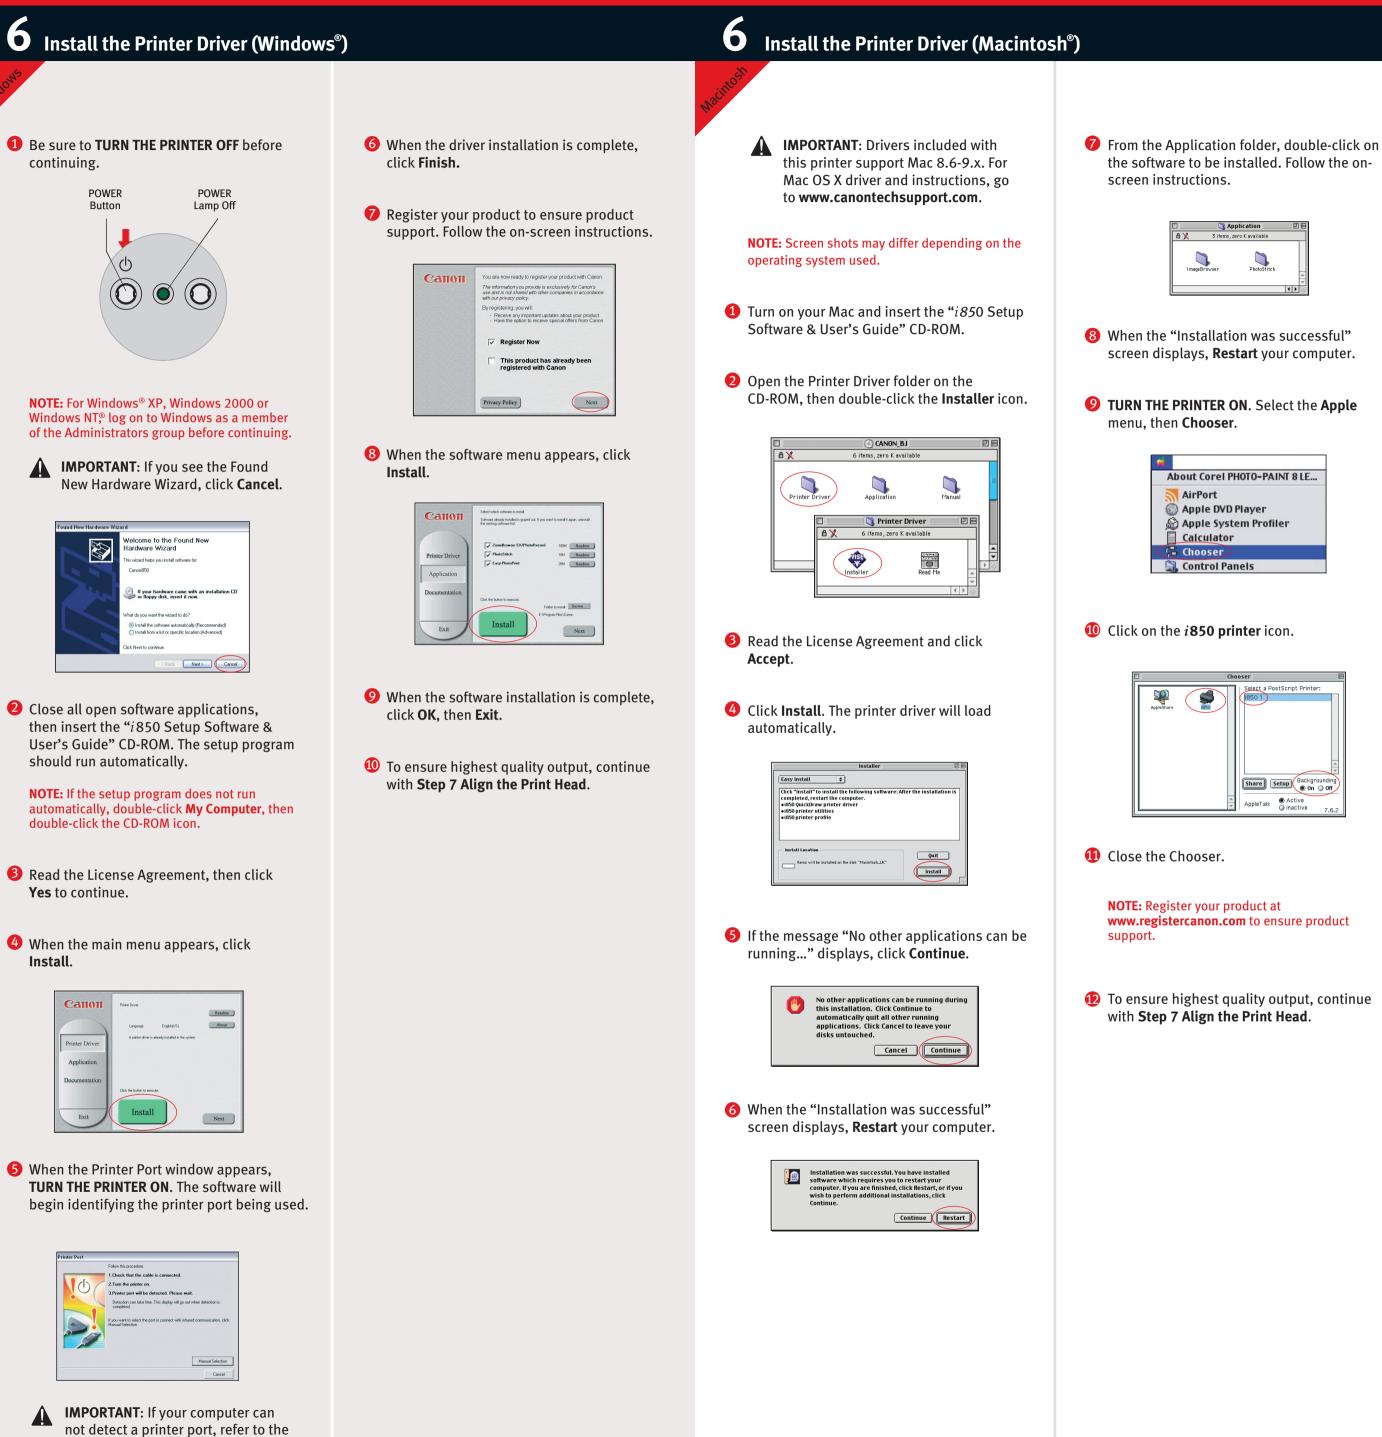

	🐧 Ар	plication	ÐE
8 <u>X</u> 8	3 items, z	tero Kavailable	
Image	Browser	PhotoStitch	

Align the Print Head

Before using the printer, align the print head to ensure the best quality printing.

- **1** Load a stack of blank paper in the paper rest.
- **2** Start the alignment procedure.

Windows:

- a. For Windows XP select Start, Settings, then Control Panel, then click on Printers and Other Hardware, then Printers and Faxes.
- b. Right-click the Canon i850 icon, then click Printing Preferences.
- c. Click the Maintenance tab, then click the **Print Head Alignment** icon.
- d. When asked to start print head alignment, click **OK**.



e. Follow the on-screen instructions to complete print head alignment.

Macintosh:

- a. From the File menu in a software application, click Page Setup.
- **b.** Click the **Utilities** button.
- c. Select Test Print from the pull down menu.
- d. Click the Print Head Alignment icon.

Canon i850 Printer U	tility Vers	ion 4.1
Cleaning TestPrint Auto Power Custom Settin		
	Canon i850 Printer Utility	Version 4.
	Test Print C Nozzłe Check Pattern Prints a nozzle-check pattern, Image: Print Head Algoment It will algoment It will algom the print heads to correct any error in their installation position.	
		Close

e. Follow the on-screen instructions to complete print head alignment.

3 Click OK (Windows) or Close (Macintosh) when finished.