Unpack the Printer

2 Prepare the Printer

1 Remove the shipping tape from the

front and back of the printer.


Install the Ink Tanks

Connect the Printer and Load Paper


1 Carefully remove all items from the box.




i860 Series

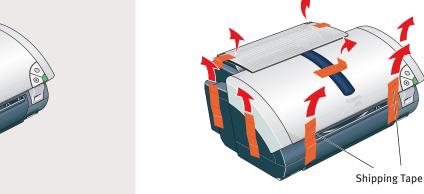


2 Plug the power cord into the back of the printer and connect the other end to a power outlet.

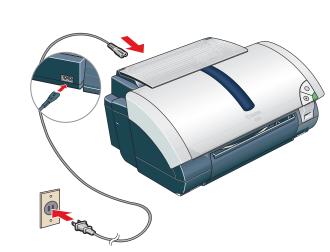

3 Press the POWER button. The printer will initialize.

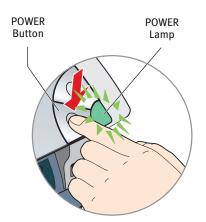


4 Open the front cover. The print head holder automatically moves to the center. Remove the protective tape.

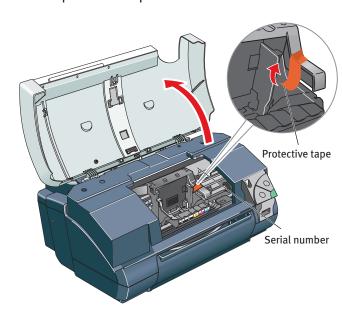

5 Write down the serial number located to the right of the print head holder. You will need this later to register the product.


1 Remove the print head from its package.

 
Install the Print Head



Tear at notch to open

- 2 Remove the orange protective cap from the print head nozzles.
 - **NOTE:** Do not touch the electrical contacts or the print head nozzles.

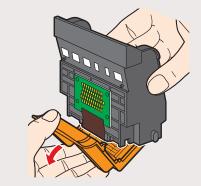


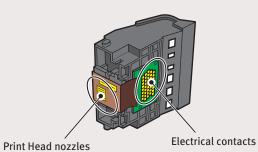

3 Raise the lock lever on the printer.




4 Slide the print head into the holder. The print head will rest at a slight angle.

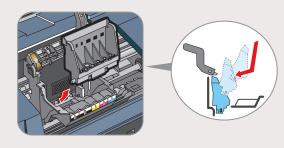


5 Lower the lock lever and press it down until it clicks into place.



1 Peel back the orange tab and completely remove the plastic wrapper from the Cyan Ink Tank (BCI-6C).

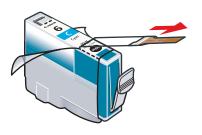

- 2 Twist off and discard the orange protective cap.
- **NOTE:** To avoid spilling ink, never press on the sides of an ink tank.

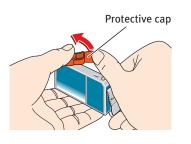

3 Insert the ink tank into the correct slot. (Refer to the color guide on the print head holder.)


Press down until the ink tank clicks into place.



4 Insert the remaining ink tanks into their assigned slots.



5 Close the front cover and extend the paper rest and paper output tray.

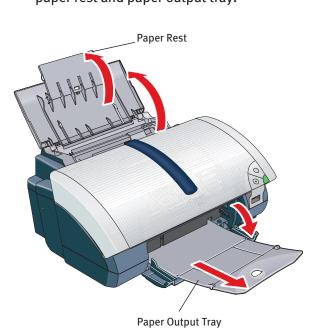

NOTE: The printer will perform a print head cleaning after the cover is closed. driver before the printer is ready.

For USB Port:


1 TURN THE PRINTER OFF.

2 Connect one end of the USB cable to the computer, the other to the printer.

IMPORTANT: Be sure the printer is

will attempt to install the printer


off before continuing, or the computer

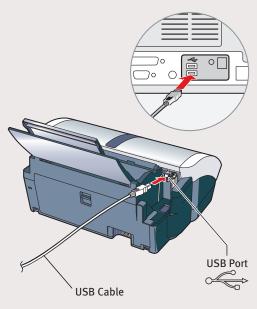


For Parallel Port:

1 TURN THE PRINTER OFF.

2 Connect one end of the parallel cable to the computer, the other to the printer.

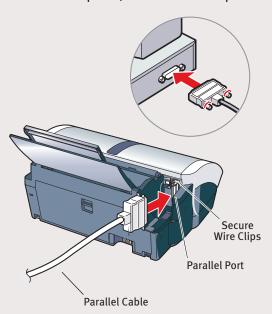

3 Pinch the paper guide and slide it to the left. Load a sheet of blank paper in the paper rest. Slide the guide toward the left edge of the paper.

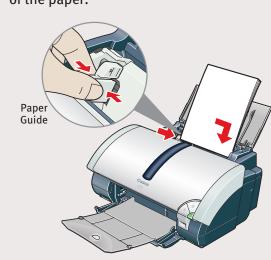

Continue with Step 6 on side two.







Desktop Photo Printer



Documentation and Software Kit




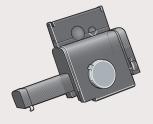


Photo Paper Tray

 


i860 Series Print Head

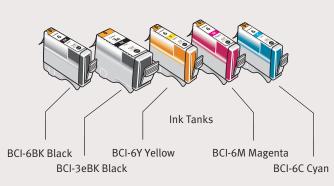

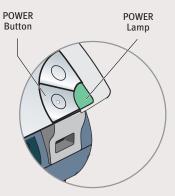

- NOTE: For Windows® XP or Windows 2000, log on to Windows as an Administrator before continuing.
- IMPORTANT: If you see the Found New Hardware Wizard, click Cancel.

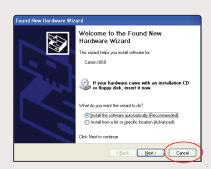

- Close any open software applications, then insert the "Setup Software & User's Guide" CD-ROM. The setup program should run automatically.
 - NOTE: If the setup program does not run, click Start, then Run, then type D:\msetup.exe, where D is your CD-ROM drive.
- 3 Read the License Agreement, then click **Yes** to continue.
- 4 When the main menu appears, click Install.



When the Printer Port window appears, **TURN THE PRINTER ON.** The software will begin identifying the printer port being used.



IMPORTANT: If your computer cannot detect a printer port, click Help and refer to the online instructions.

- 6 Register your product to ensure product support. Follow the on-screen instructions.
- When the Terminate Installation window appears, click **OK.**
- 8 When the software menu appears, click **Install** and follow the on-screen instructions.



- When the Terminate Installation window appears, click OK, then Exit.
- Click Yes when you are prompted to restart your computer.
- 1 Start the print head alignment procedure.
 - a. For Windows XP/2000 click **Start**, select **Control Panel**, **Printers and Other Hardware**, then **Printers and Faxes**.
 - **b.** Right-click the *i*860 icon, then click **Printing Preferences**.
 - NOTE: For Windows 98/Me click Start, then select Settings, Printers. Right-click the *i*860 icon, then click Properties.
 - c. Click the Maintenance tab, then click on the Print Head Alignment icon.
 - **d.** When asked to start the print head alignment, click **OK** and follow the on-screen instructions.



Click **OK** to exit the Maintenance tab. Print head alignment is now complete.

6 Mac® OS X Printer Driver Installation and Print Head Alignment

- NOTE: For Mac OS 8.6 to 9.x printer driver instructions, refer to the "Appendix" of the *Quick Start Guide*.
 - 1 Turn on your Mac and your printer and insert the "Setup Software & User's Guide" CD-ROM.
 - 2 Double-click the CD-ROM icon, then the Mac OS X folder, then the Printer Driver folder.



3 Double-click the i860 210.pkg icon.



- When the "Authenticate" screen appears, enter your administrator name and password, then click **OK**.
- When the "Welcome to the BJ printer driver Installer" screen appears, click **Continue**.
- 6 Read the Software License Agreement and click **Continue**, then click **Agree**.
- Select a destination for the printer driver to be installed. Then click **Continue**.



8 Click Install. When a message asking for your confirmation to proceed with the installation appears, click Continue Installation.



When the message "The software was successfully installed" appears, click Restart. **10** When the message asking you to align the print head appears, click **OK**.



- 1 Start the print head alignment procedure.
 - a. Double-click the Macintosh HD icon, then Applications folder. Double-click the Utilities folder, then the Print Center icon.
 - **b.** When the Printer List screen appears, select *i*860, then click the **Configure** icon.




c. Select i860 and click Select.



- **d.** Click the down-arrow to select **Test Print**.
- e. Click the **Print Head Alignment** icon and follow the on-screen instructions.




- Click Quit to exit the BJ Printer Utility. Print head alignment is now complete.
- Access your CD-ROM again. From the Application folder, double-click on the software to be installed.

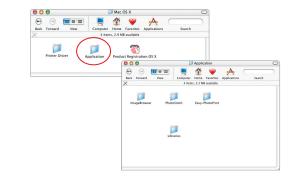


- Pollow the on-screen instructions. When the "Installation has finished" screen appears, click **OK**.
- Register your product to ensure product support. Double-click on the **Product Registration** icon, found in the **Mac OS X** folder. Follow the on-screen instructions.

Optional Photo Paper Tray


1 With the paper rest open, pinch and slide the paper guide to the left end.

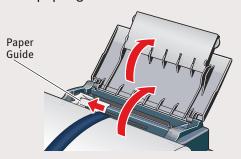


2 Install the Photo Paper Tray. Put the Photo Paper Tray along the paper rest and insert it until it clicks into place.

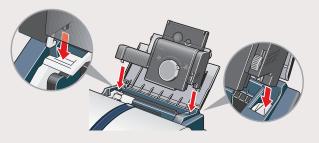


3 Open the Photo Paper Tray cover, adjust the paper guide and load the paper, printing side up. Close the cover.

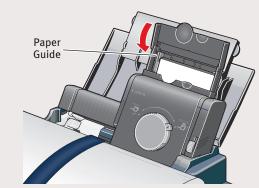

- 4 You can print from both paper trays.
 - 4" x 6": Turn the knob to the left until it points at **PRINT.**
 - **Letter:** Turn the knob to the right until it points at **REMOVE.**

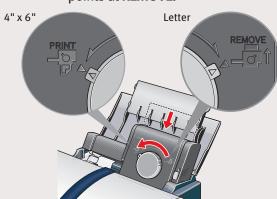

If you want to remove the Photo Paper Tray, turn the knob so that it points at **REMOVE** and push the lever up while lifting the Photo Paper Tray out.

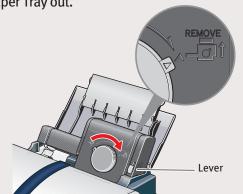

Part No. QA7-2895-V01
© 2003 Canon U.S.A., Inc.
Canon is a registered trademark of Canon Inc.
All other products and brand names are registered trademarks or trademarks of their respective owners.
Specifications subject to change without notice.
P-i860-ESI-0603

Printed in Thailand