

Canon

Exif Print


BUBBLE JET
DIRECT


PictBridge


Wi-Fi
CERTIFIED

PIXMA iP4000R

Setup Guide



Exif Print

This printer supports ExifPrint.

Exif Print is a standard for enhancing the communication between digital cameras and printers. By connecting to an Exif Print-compliant digital camera, the camera's image data at the time of shooting is used and optimized, yielding extremely high quality prints.

Canadian Radio Interference Regulations

This digital apparatus does not exceed the Class B limits for radio noise emissions from a digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Industry Canada.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur NMB-003 d'Industrie Canada intitulée « Appareils numériques ».

International ENERGY STAR® Program

As an ENERGY STAR® Partner, Canon Inc. has determined that this product meets the ENERGY STAR guidelines for efficiency.



The International ENERGY STAR® Office Equipment Program is a global program that promotes energy saving through the use of computer and other office equipment. The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business can participate voluntarily. The targeted products are office equipment such as computers, monitors, printers, faxes and copiers.

Their standards and logos are uniform among participating nations.

Power Requirements

Never use a power supply voltage other than that supplied in the country of purchase. Using the incorrect voltage could cause a fire or electric shock. The correct power supply voltages and frequencies are as follows:

AC 110-120V, 50-60Hz

AC 220-240V, 50-60Hz

Conformity declaration for R&TTE

We, Canon hereby declare that this equipment (printer) PIXMA iP4000R is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment. This equipment should be installed and operated with minimum distance at least 20cm between the radiator and persons body (excluding extremities: hands, wrists, feet and legs) and must not be co-located or operated with any other antenna or transmitter.

Table of Contents

 
Preface	2
Introduction	2
Setup Outline	3
Shipping Materials	4
Confirming Your Connection Type	5
Connecting over Wireless LAN via an Access Point	6
Connecting over Wired LAN	7
Connecting with USB Connection	7
Using both USB Cable and Wireless LAN Connections	8
Using both USB Cable and Wired LAN Connections	8
Setting Up	9
Installing the Print Head	9
Installing the Ink Tanks	12
Loading Paper	14
Confirming the Setup Procedure	15
Using the Printer for the First Time	15
Using the Printer Already Connected to a Network	15
Setting Up the Printer and the Computer	16
Before Setup	16
First-time Setup for Use over Wireless LAN	19
First-time Setup for Use over Wired LAN	31
Setting Up for Use with USB Connection	39
Setting Up an Additional Computer to Use a Printer Already Connected to a Network	45
Aligning the Print Head	51
Basic Operations	55
Printing with Windows	55
Printing with Macintosh	58
Print Head Maintenance	60
Appendix	62
Printing Photographs Directly from a Digital Camera	62
Notes on Handling the USB Interface (for Windows Users)	67
Printing and Initializing Network Settings	67
For Further Details...	68
Troubleshooting	70

Preface


Introduction

Thank you for purchasing a Canon Bubble Jet Printer.

This Setup Guide uses the following symbols to indicate important information. Always observe the instructions indicated by these symbols.



 Instructions that, if ignored, could result in death or serious personal injury caused by incorrect operation of the equipment. These must be observed for safe operation.



Instructions that, if ignored, could result in personal injury or material damage caused by incorrect operation of the equipment. These must be observed for safe operation.

Also read the Safety Precautions in the *User's Guide*. Observe the warnings and cautions to avoid personal injury or damage to the printer.

Trademark Notices

- Canon is a registered trademark of Canon Inc.
- BJ is a trademark of Canon Inc.
- PIXMA is a trademark of Canon Inc.
- Microsoft® and Windows® are registered trademarks of Microsoft Corporation in the U.S. and other countries.
- Microsoft® Windows® XP, Microsoft® Windows® 2000, Microsoft® Windows® Millennium Edition, and Microsoft® Windows® 98 are expressed respectively as Windows XP, Windows 2000, Windows Me, and Windows 98 in this *Setup Guide*.
- Apple, Mac, and Macintosh are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.
- Wi-Fi is a registered trademark of the Wi-Fi Alliance.
- Wi-Fi CERTIFIED is a certification mark of the Wi-Fi Alliance.
- All other trademarks and registered trademarks appearing in this *Setup Guide* are the property of their respective owners.

Copyright ©2004 CANON INC.

All rights reserved. No part of this publication may be transmitted or copied in any form whatsoever without the express written permission.

Setup Outline

Follow the steps below to start using the printer.

Step 1

Check the supplied material. (see page 4)

Make sure the supplied items are included.

Step 2

Confirm the type of your connection. (see page 5)

There are several ways to connect the printer and your computer.

Decide on a connection type that matches your network setup.

Step 3

Set the printer. (see page 9)

Place the printer and install the print head and the ink tanks.

Step 4

Confirm setup procedure. (see page 15)

Setup procedure differs depending on the type of your connection.

Make sure you know which setup procedure to perform.

Step 5

Set up the printer and the computer. (see page 16)

Install the driver to use the printer and the software to connect it to a network.

Setup complete

The printer is now ready for use.

Shipping Materials

Check that all the following items are in the box. If anything is missing or is damaged, contact your Canon Service Representative.

- ☐ Printer
- ☐ Setup Software & User's Guide CD-ROM
- ☐ Setup Guide
- ☐ Print Head
- ☐ 5 Ink Tanks
- ☐ USB cable

To use the printer over wireless LAN, you need an access point. To use the printer over wired LAN, you need an ethernet cable (and a hub, if you are connecting multiple computers). Purchase them separately as necessary.

Confirming Your Connection Type

If your printer is connected to a network, it can be shared by multiple computers.

This printer can be used over wireless or wired LAN, as well as with USB connection.

Connection type available for this printer are as follows.

- wireless LAN via an access point (see page 6)
- wired LAN (see page 7)
- USB connection (see page 7)
- combination of USB connection and wireless LAN (see page 8)
- combination of USB connection and wired LAN (see page 8)

To connect to the printer in a certain connection type, it must be available to your computer network setup in the first place. Before starting setup, make sure you know the type of connection available to your computer, and decide on a connection type for your printer.

➡ **Note**


Refer to the manuals of your network devices for necessary information. In an office setup, consult your network administrator.

Connecting over Wireless LAN via an Access Point

Your computer communicates with the printer via an access point (the infrastructure mode). To share the printer among multiple computers, connect them to the access point.


Important

- When using this printer in a wireless LAN setup, use the infrastructure mode. It does not support the ad-hoc mode.
- An access point is needed to set up the infrastructure mode.
- If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.

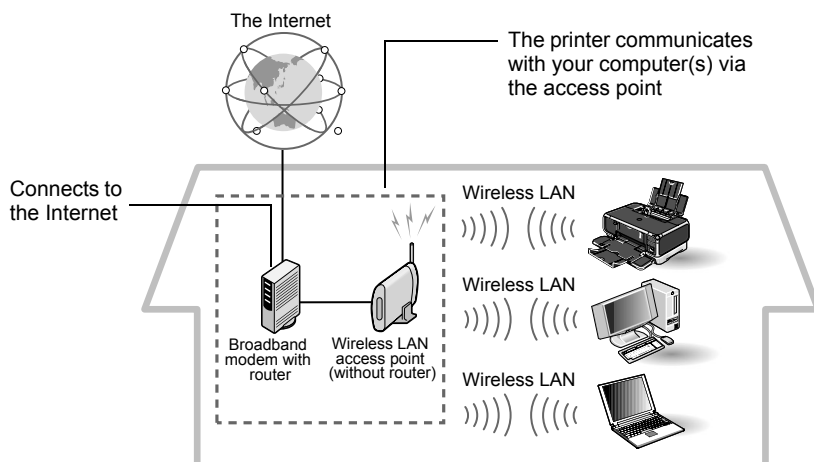

Notes

- A wireless LAN card or adapter must be installed in your computer to connect your computer to the wireless LAN.
- A variant is the wireless LAN setup shown below, where your wireless LAN access point has the router function, instead of your Internet connection device, such as a broadband modem. The type of device in use in your network may vary. Refer to the manual of your device for details.

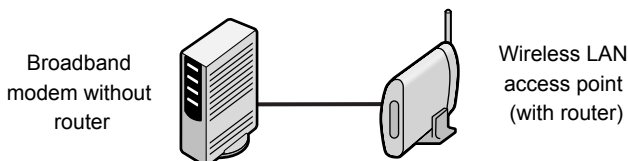


- The printer and the router need to be in the same network.

To set up the printer for use over wireless LAN, see “First-time Setup for Use over Wireless LAN” on page 19 after you finished setting the printer.

Connecting over Wired LAN

Your computer communicates with the printer via an Ethernet network.

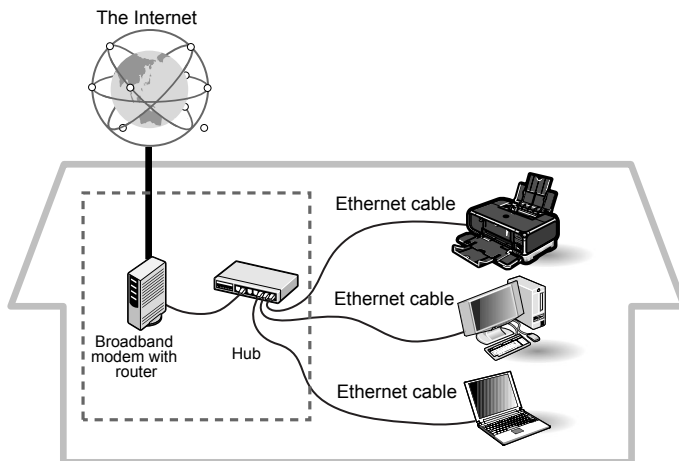


To set up the printer for use over wired LAN, see “First-time Setup for Use over Wired LAN” on page 31 after you finished setting the printer.

➡ **Note**

Your hub may have the router function. The type of device in use in your network may vary. Refer to the manual of your device for details.

Connecting with USB Connection


Your computer communicates with the printer via a USB cable.

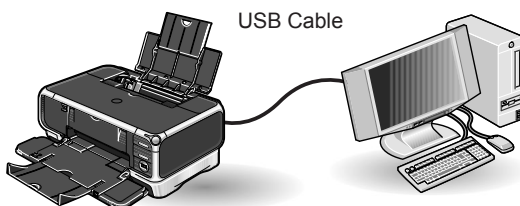

To set up the printer for use with USB connection, see “Setting Up for Use with USB Connection” on page 39 after you finished setting the printer.

Using both USB Cable and Wireless LAN Connections

A computer communicates directly with the printer with a USB cable, while other computers are connected over a wireless LAN (infrastructure mode).

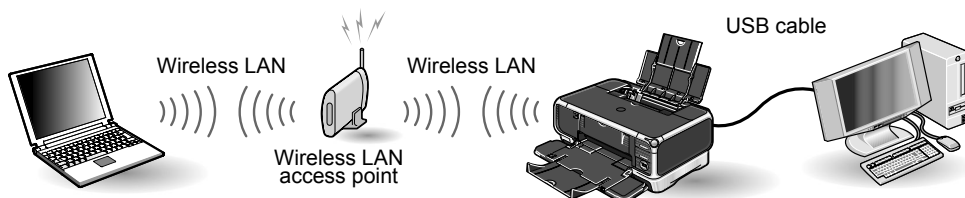

➔ Note


A wireless LAN card or adapter must be installed in your computer to connect your computer to the wireless LAN.

You need to perform setup both on the computer to be used with USB connection and on the computers to be used over wireless LAN.

To set up the printer in this configuration, see “First-time Setup for Use over Wireless LAN” on page 19 and “Setting Up for Use with USB Connection” on page 39 after you finished setting the printer.

Using both USB Cable and Wired LAN Connections

A computer communicates directly with the printer with a USB cable, while other computers are connected over wired LAN.

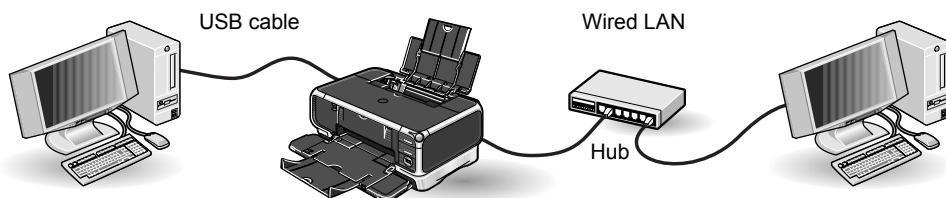

➔ Note

To connect over wired LAN, your computer needs to be connected to a hub or a similar network device.

You need to perform setup both on the computer to be used with USB connection and on the computers to be used over wired LAN.

To set up the printer in this configuration, see “First-time Setup for Use over Wired LAN” on page 31 and “Setting Up for Use with USB Connection” on page 39 after you finished setting the printer.

Important

To use this printer over wired and wireless LAN at the same time, the wired and wireless networks need to be physically separate, and the printer needs to be assigned a different network address for each network. Since this requires advanced network knowledge, we recommend that you do not use the printer with wired and wireless LAN at the same time.

Setting Up


Installing the Print Head

Warning

- Never attempt to plug the power cord into the power outlet or unplug the power cord when your hands are wet.
- Never damage, modify, stretch, or excessively bend or twist the power cord. Do not place heavy objects on the power cord.
- Never use any power supply other than the standard power supply available in the country of purchase. Using the incorrect voltage and frequency could cause a fire or electric shock.
- Always push the plug all the way into the power outlet.

Note


If you do not intend to use the printer for a long period of time, unplug the power cord from the power outlet after turning off the printer.

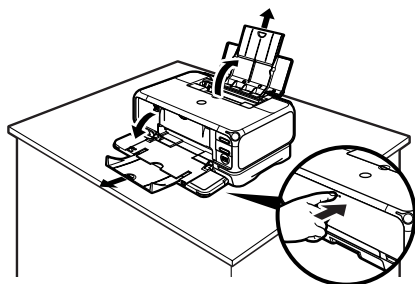

1 Place the printer on a flat surface.

Note


Even though wireless communication between different rooms or floors is possible, the radio status may become poor. Do not place the printer where its communication with the access point may be blocked.

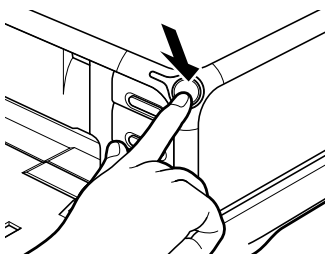

2 Plug the printer in.

3 Turn on the printer. Do NOT turn on the computer yet.

The POWER lamp flashes and the printer begins to operate. Wait until the POWER lamp remains fully lit.

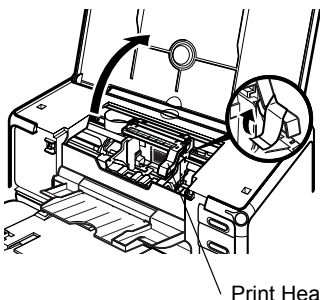

- 4** Open the Paper Output Tray and Top Cover, and then pull down the Inner Cover.


Important

The Print Head Holder moves to the center when the Top Cover is opened. Be careful not to touch it while it is moving.

Push the upper center (◎ ◎ ◎) of the Front Cover to open the Paper Output Tray.

→ Note

Support the Front Cover with your hand when opening the tray.

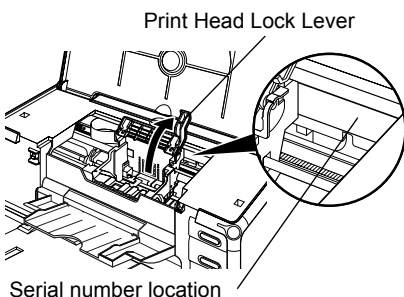


- 5** Remove the tape.
- 6** Raise the Print Head Lock Lever.

Do not touch internal parts other than the Print Head Lock Lever.


→ Note

For the customers in the United States

Write down the serial number located to the right of the print head holder. You will need this later to register the product.

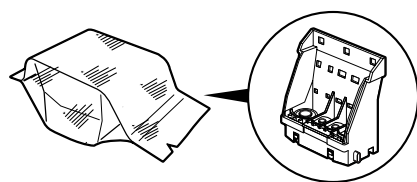


- 7** Remove the print head from its package.

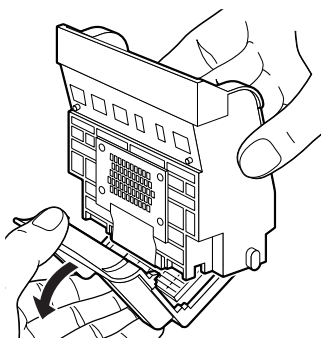


8 Remove the protective cap from the Print Head.

→ Notes

- Do not touch the Print Head Nozzles or electrical contacts.
- Do not attempt to reattach the protective cap once it has been removed.

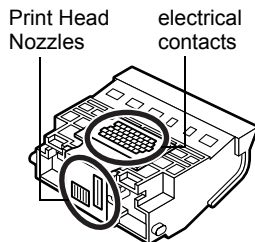

Print Head

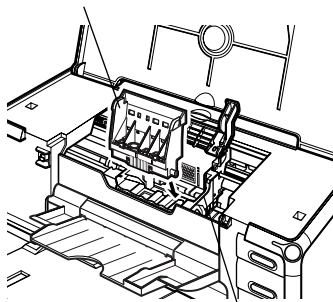


Print Head Holder

9 Place the Print Head in the holder.

The print head will rest at a slight angle.

→ Note

Be careful not to touch any parts inside the printer.

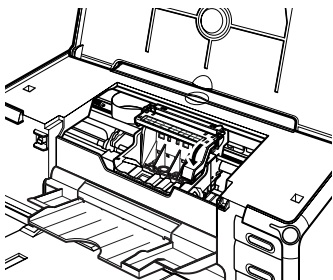


10 Lock the Print Head into place by lowering the lever.

Do not touch the lever once the Print Head has been installed.

Installing the Ink Tanks


Caution

- For safety reasons, store ink tanks out of the reach of small children.
- Do not drop or shake ink tanks as this may cause the ink to leak out and stain your clothes and hands.
- Be sure to remove the clear film from the ink tank in the exact order as shown in step 2.

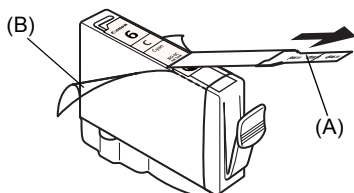

- 1** Unpack the cyan ink tank.
- 2** Pull the orange tape (A) off in the direction of the arrow and remove the clear film. Then, remove the film (B).


Protective cap

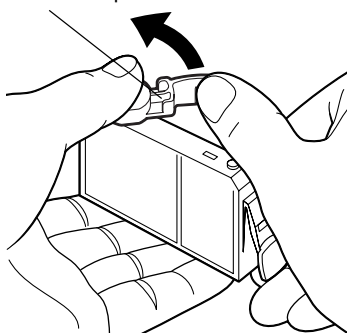


- 3** Hold the ink tank as shown in the diagram and remove the orange protective cap.


→ Notes

- Do not squeeze the side of ink tanks as this may cause the ink to leak out and stain your clothes and hands.
- Do not touch the open ink port.
- Do not reattach the protective cap once you have removed it.

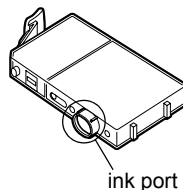

- 4** Insert the cyan ink tank into the right-hand slot. Press the  mark on the ink tank until it clicks into place.

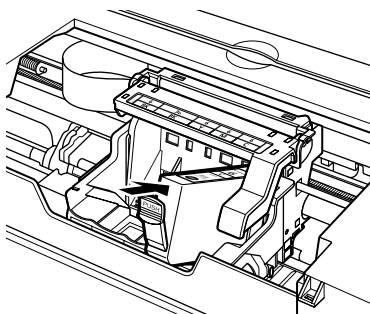

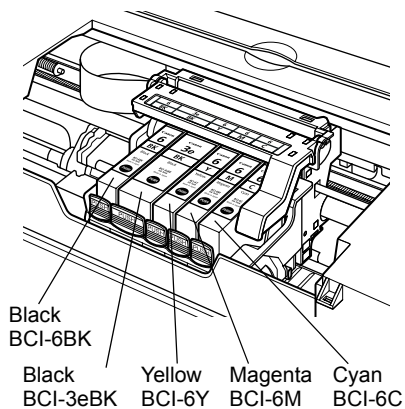

5 Use the same procedure to install the other ink tanks into their appropriate slots.

Check the labels to make sure that each tank is in the correct position.


→ Notes

- Only install the ink tanks in the positions specified by the labels.
- If ink tanks are not installed in the right position, colors will not be printed correctly. Immediately reinstall the tank in the correct position and carry out Print Head Cleaning. For details, refer to the *User's Guide*.

6 Put back the Inner Cover and close the Top Cover.

Loading Paper

This section describes how to load paper in the Sheet Feeder. When performing the print head alignment, you need to load paper in the Sheet Feeder.

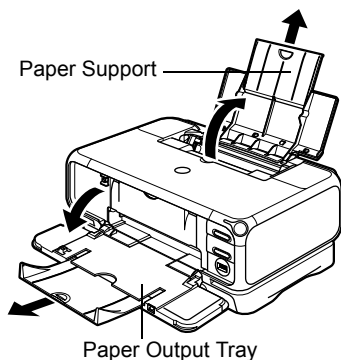


- 1** Pull out the Paper Support and Paper Output Tray completely as shown.

Push the upper center (● ● ●) of the Front Cover to open the Paper Output Tray.

➔ **Note**


Support the Paper Output Tray with your hand when opening the tray.

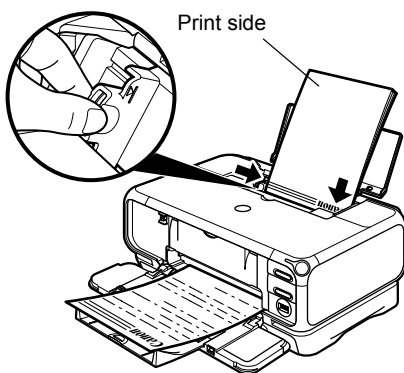

- 2** Load the paper and align it with the right side of the Sheet Feeder.

You can load up to 150 sheets of plain paper (64 gsm/17 lb). Do not exceed this limit.

- 3** Slide the paper guide against the left side of the paper stack.

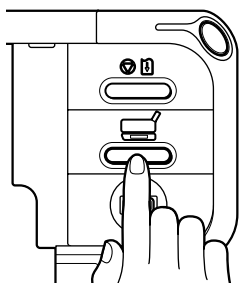


- 4** Ensure that the Sheet Feeder lamp is lit. If not, press the Paper Feed Switch.

➔ **Notes**

- Other than the Sheet Feeder, you can load paper in the Cassette. For information on loading the print media in the Cassette, refer to the *User's Guide*.
 - You can select the paper source also from the printer driver. For details, refer to the *User's Guide*.
-

Confirming the Setup Procedure

 Along with the various types of connection this printer is capable of (see “Confirming Your Connection Type” on page 5), necessary setup procedure also differs with whether you are setting up the printer for the first time or if the printer is already set up and you are adding new computers to use the printer.



- Before proceeding to setup, make sure to read and follow directions in “Before Setup” on page 16.
- If you are using wireless LAN, see “Confirming Settings of your Access Point” on page 18 and make a note of the access point settings.

Using the Printer for the First Time

When the printer is set up for the first time, the printer itself needs to be set up to be used over a network, as well as the computer that uses it. Refer to the setup procedure for your connection type.

- Connecting over Wireless LAN (Infrastructure Mode)
See “First-time Setup for Use over Wireless LAN - Windows” on page 19 or “First-time Setup for Use over Wireless LAN - Macintosh” on page 25. Before setup, make sure that your computer’s connection with the access point is operational.
- Connecting over Wired LAN
See “First-time Setup for Use over Wired LAN - Windows” on page 31 or “First-time Setup for Use over Wired LAN - Macintosh” on page 35. Before setup, make sure that your computer’s connection via the network is operational.
- Connecting with USB
See “Setting Up for Use with USB Connection - Windows” on page 39 or “Setting Up for Use with USB Connection - Macintosh” on page 42.

Using the Printer Already Connected to a Network

If the printer is already set up to be shared over a network and you are adding a computer to use it, the new computer needs to be set up but the printer itself does not need to be set up again.

See “Setting Up an Additional Computer to Use a Printer Already Connected to a Network - Windows” on page 45 or “Setting Up an Additional Computer to Use a Printer Already Connected to a Network - Macintosh” on page 48. Before setup, make sure that your computer’s connection with the network is operational.

Setting Up the Printer and the Computer

Before Setup

Make sure of the following before proceeding to installation.

- Disable virus detection or any other resident programs.
- Make sure you are connected to the Internet through your LAN. To confirm this, see if you can browse the web.
- If MAC address filtering or IP address filtering is set to the access point or the router to connect to, disable it.
- To find out the MAC address of your printer, print the network settings information. To print the network setting information, see “Printing and Initializing Network Settings” on page 67.
- If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.

➡ Note

For details on the SSID, WEP key, WPA key, MAC address filtering, or IP address filtering of the access point, refer to its manual. See “Confirming Settings of your Access Point” on page 18 and make a note of the access point settings.

- Disable the firewall of any security software until the setup is complete. For details on firewalls, see “On Firewalls” on page 17.
- If you are using wireless LAN connection, make sure that the computer and the access point is set up properly and wireless communication is possible.
- If you are using wireless LAN connection, make sure you know the name of the network you are using (SSID).
- If you are using wireless LAN connection, and a WEP key or a WPA key is set to the access point, make sure you know the WEP or the WPA key.
- If you are using wired LAN, make sure that your computer and network devices such as hubs are set up properly so that communication is possible through the wired LAN.
- When the printer is already shared over a network and you are adding a computer to use it, disable the printer’s access control features if it is enabled.

■ For Windows

- When using Windows XP, you must log on as the administrator. When using Windows 2000, you must log on as a member of the administrators group. Do not switch users during setup.
- If the following screen appears automatically, click **Cancel** to quit the screen, turn off the printer, remove the USB cable, then resume setup. Re-insert the *Setup Software & User's Guide* CD-ROM.



If you are using Windows XP Service Pack 1 or earlier and you have Internet Connection Firewall enabled, a dialog box asking you for confirmation to disable the firewall will appear during setup. Click **Yes** to disable the firewall. When setup is complete, the firewall will be re-enabled automatically.

To confirm the version of your Windows XP, see “Confirming the version of Windows XP” on page 82.

For details on firewalls, see “On Firewalls” on page 17.

➡ **Note**

Some programs, such as network configuration software, may automatically enable Internet Connection Firewall. Check settings of any such program.

■ On Firewalls

A firewall is a system that prevents unauthorized access to a local network from the outside.

However, a firewall may prevent proper setup or wireless communication of the printer. When setting up the printer for a use over a network, disable the firewall of your security software.

➡ **Note**

For information on the firewall feature of your security software, refer to its manual. In an office setup, consult your network administrator.

■ Confirming Settings of your Access Point

When setting up the printer to be used over wireless LAN, the printer's network settings are configured to match those of the access point. Therefore, if you are using wireless LAN, we recommend that you confirm the necessary information on the access point before entering the setup process. Check and fill in the table below.

SSID/network name		
Stealth/closed network	<input type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
ANY-Rejection	<input type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
Radio channel	Channel () The printer can communicate in channels 1 to 11.	
Encryption	<input type="checkbox"/> Disabled	<input type="checkbox"/> Enabled <input type="checkbox"/> WEP: key () <input type="checkbox"/> WPA: key () This printer supports only the PSK-TKIP authentication type.
MAC address filtering	<input type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
IP address filtering	<input type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
Client-to-Client Blocking	<input type="checkbox"/> Disabled	<input type="checkbox"/> Enabled

➔ **Note**


For information on how to confirm the settings of the access point, refer to the manual provided with the access point.

- If Stealth (closed network) or ANY-Rejection feature is enabled
We recommend you to disable it before entering setup.
- If MAC address filtering is enabled
We recommend that you register the printer's MAC address to the access point before entering setup. To confirm the MAC address of the printer, print the printer's network information. See "Printing Network Setting Information" on page 67.
- If IP address filtering is enabled
Disable the access point's IP address filtering feature before entering setup.
- If Client-to-Client Blocking is enabled
An access point may be capable of blocking all direct transmission among clients associated to it. If such feature is enabled, disable this feature before entering setup.

First-time Setup for Use over Wireless LAN

When you are setting up the printer to be used over wireless LAN (infrastructure mode) for the first time, the printer is set up to be used over a network, as well as the computer that uses it. Follow these steps.

■ First-time Setup for Use over Wireless LAN - Windows

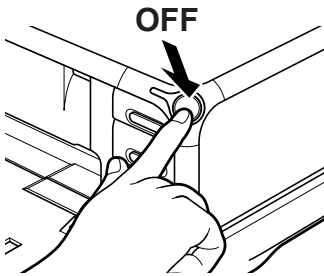


- 1 Ensure that the printer and the computer are turned off.
- 2 Turn on the computer and start Windows. If any applications automatically run, quit them.

Do NOT turn the printer on at this stage.

- 3 Place the *Setup Software & User's Guide* CD-ROM in the CD-ROM drive.

➔ Note

- If the CD-ROM does not run automatically, click **Start** and select **My Computer**, then double-click the CD-ROM icon. For non-XP Windows, double-click **My Computer** in the Windows screen, then double-click the CD-ROM icon.
- If the language selection screen appears, select the language, then click **OK**.
- If the location selection message appears, select your place of residence, then click **Next**.

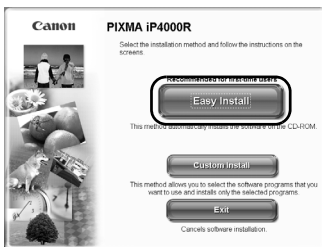


- 4 Follow the instructions displayed on screen. When the screen shown on the left is displayed, click **Easy Install**.

➔ Note


When you select **Easy Install**, the items included in the CD-ROM are installed automatically. To select particular items to install, click **Custom Install** and follow the instruction on the screen.




- 5 When the list of applications to install appears, verify the contents, click **Install**, then follow the instructions on the screen.

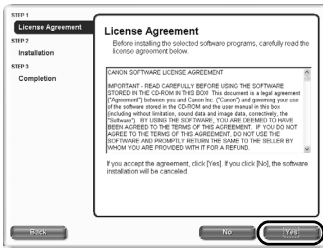


6 Read the **License Agreement** carefully and click **Yes**.

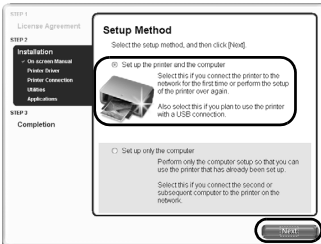


7 Select **Set up the printer and the computer** and click **Next**.

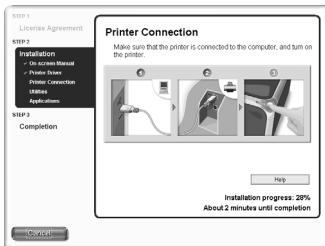


8 When the screen shown on the left appears, connect the printer with a USB cable.

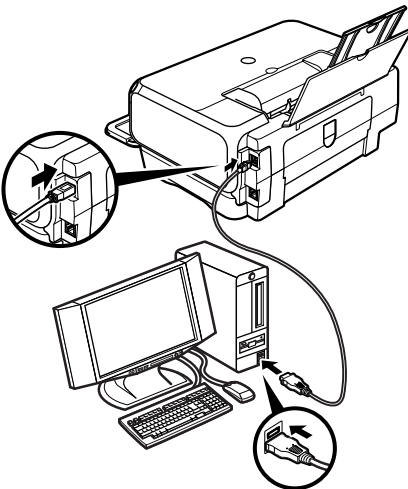

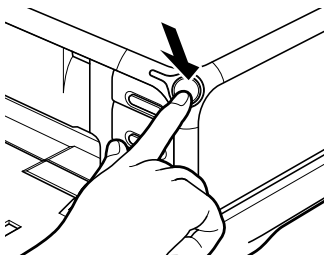


9 Turn on the printer.

If the printer is recognized, the next screen will appear automatically. If the connection is not recognized, click **Help** and follow its instructions.

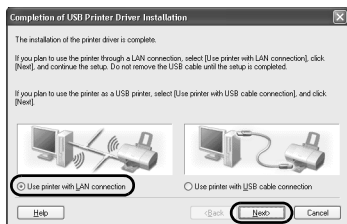

10 Select **Use printer with LAN connection** and click **Next**.

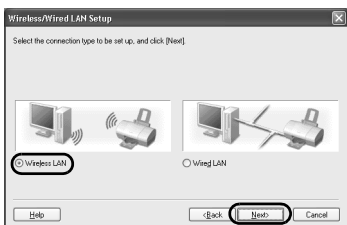

11 Select **Wireless LAN** and click **Next**.

➡ **Note**

If the printer's network settings have been set before, the **Printer Network Setup** dialog box is displayed. For details, see “The Printer Network Setup dialog box is displayed during setup” in “Troubleshooting” on page 79.

12 Setup automatically detects your access point.

Important

If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.

- ❑ An access point is detected automatically and setup proceeds to the next step when
 - Setup detects an access point with the same SSID as the access point currently connected to your computer, and the access point is not using encryption.
 - Setup did not detect an access point with the same SSID as the access point currently connected to your computer (or your computer is currently not connected to an access point in the first place), but a single access point without encryption was detected.

- ❑ If the detected access point is using encryption
When setup detects an access point with the same SSID as the access point currently connected to your computer, and the access point is using encryption (WEP or WPA), the **Access Points** dialog box is displayed with the access point highlighted in the list.

Enter the network key (WEP key or WPA key) set to the access point and click **Connect**.


- ❑ If multiple access points were detected
If setup did not detect an access point with the same SSID as the access point currently connected to your computer (or your computer is currently not connected to an access point in the first place), and two or more access points were detected, the **Access Points** dialog box is displayed.

Select your target access point and click **Connect**.

If **WEP** or **WPA** is displayed in the **Encryption** column, a network key (WEP or WPA key) is set to your access point. Enter the network key (WEP key or WPA key) set to the access point and click **Connect**.

Important

You cannot connect to an access point using WPA-802.1x or an access point using WPA-PSK with type of dynamic encryption set to AES. See “The Access Points dialog box is displayed during setup” on page 72.

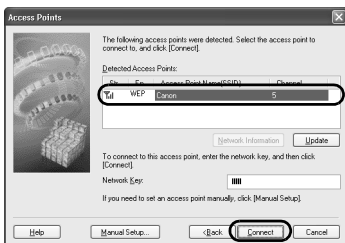

➔ Notes

- If the **Encryption** column is blank, the access point is not encrypted.
 - For details, see “The Access Points dialog box is displayed during setup” in “Troubleshooting” on page 72.
 - For details on the access point’s SSID and network key (WEP key or WPA key) setting, refer to the manual provided with the access point.
-

- ❑ If no access points were detected, or your target access point is not displayed

If the **An access point could not be detected** message appears, click **OK** to display the **Access Points** dialog box. Click **Update** to perform detection again. If your access point is still not listed, take the following measures.

- Ensure that the access point is on and then click **Update**.
- Ensure that the printer is on and connected to your computer with a USB cable, then click **Update**.
- Move your printer closer to the access point and remove possible obstructions, then click **Update**.
- If all above fails, use manual searching. For details, see “The target access point is not detected, or you want to specify access point settings manually” in “Troubleshooting” on page 74.
- Using your access point’s utility software, check if your access point is set to the stealth mode, i.e., set not to broadcast its SSID, or is set to reject clients whose SSID is set to ANY. If so, click **Manual Setup** and enter the access point’s SSID in **SSID**.

13 Setup automatically detects the printer.


The iP4000R connected with a USB cable is detected automatically.

If the printer was not detected, the **Set Printer IP Address** dialog box appears. Click **Connect** to retry detection. If the printer is still not detected, take the following measures.

- Ensure that the printer is on and connected to your computer with a USB cable, then click **Connect**.
- Move your printer closer to the access point and remove possible obstructions, then click **Connect**.
- Ensure that the computer's connection with the access point is operational, then click **Connect**.
- If all above fails, use manual searching. To confirm the IP address, click **Network Information** in the **Set Printer IP Address** dialog box. For details, see "The Set Printer IP Address / Printer IP Address Setup dialog box is displayed during setup" in "Troubleshooting" on page 77.

➔ Note


Be sure to re-connect the printer to your computer with a USB cable when changing the wireless LAN setting. Otherwise, your computer may fail to communicate with the printer.

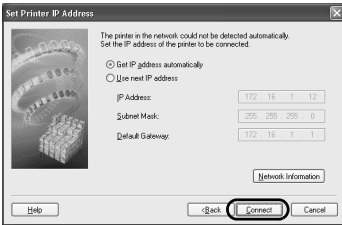

14 Remove the USB cable, and click **Finish**.

To change the port name, click **Set Port Name**. For details, see "Changing the port name" in "Troubleshooting" on page 81.

Setup will next install application programs.

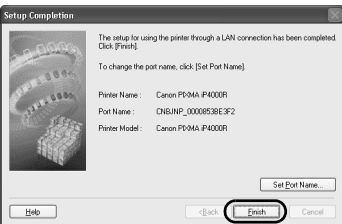


15 When the installation results are displayed, click **OK**.

If you are prompted to restart the computer, click **Yes** and restart the computer.

➔ Note

If the online registration dialog box appears, follow the on-screen instructions to register your product.

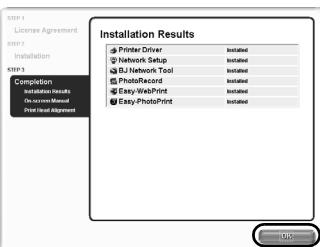

- 16** When the **On-Screen Manual** dialog box appears, click **Next**.


Printer software installation is now complete. Setup next proceeds to perform print head alignment.

- 17** When the **Print Head Alignment** dialog box appears, confirm that a sheet of A4 or Letter-sized plain paper is loaded in the Sheet Feeder, and click **Execute**.

Go to step 5 of “Aligning the Print Head - Windows” on page 52.

■ First-time Setup for Use over Wireless LAN - Macintosh

- 1** Connect the printer with a USB cable.

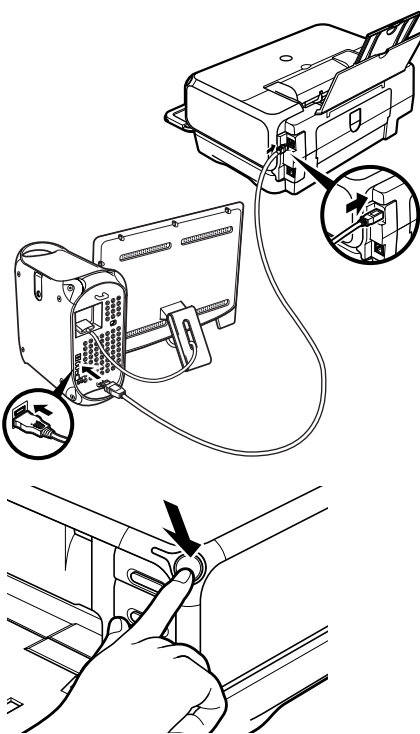


- 2** Turn on the printer.

- 3** Turn on the Mac.

- 4** Place the *Setup Software & User's Guide CD-ROM* in the CD-ROM drive.

- 5** Double-click the **Mac OS X** folder, then double-click the **Printer Driver** folder.



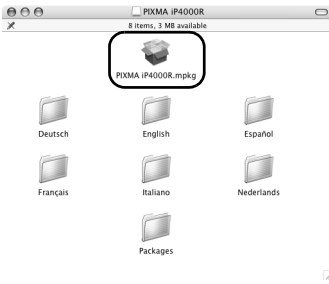

6 Double-click **PIXMA iP4000R xxx.pkg**.


“x” represents a number.

➔ **Note**

When using Mac OS X v.10.2, the **Authenticate** dialog box appears. Enter the administrator’s name and password, and click **OK**.

7 Click **Continue**.


8 Read the **License Agreement** carefully and click **Continue**, then click **Agree**.

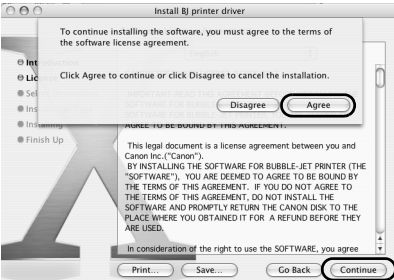

9 Select a destination to where you want to install the printer driver, and click **Continue**.


10 Click **Install**.

When using Mac OS X v.10.2, go to step 12.

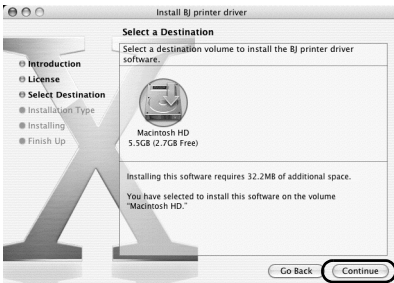

11 Enter the administrator’s name and password, and click **OK**.


➔ **Note**

If you have forgotten the administrator name and/or password, click  and follow the instructions in **Mac Help**.



12 A message asking for your confirmation to restart your Mac appears on the screen. Read the message, then click **Continue Installation**.


Software installation will start.

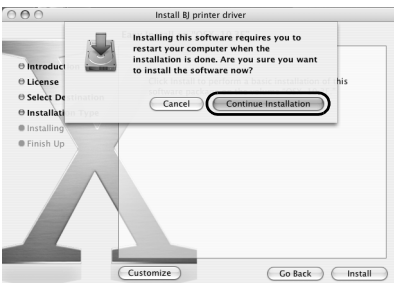



13 Click **Restart**.

When the computer restarts, BJ Network Tool will start up. If it does not start automatically, select **Library - Printers - Canon - BJ Printer - Utilities - BJ Network Tool**.

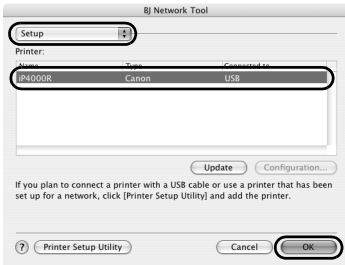

14 Select **Setup** from the pop-up menu and **IP4000R** in **Printer**, then click **OK**.

If the **The printer could not be detected** message is displayed, check that your printer is connected with a USB cable and turned on, then click **Update**.



15 Select **Wireless LAN** and click **OK**.

➡ **Note**

If the printer's network settings have been set before, the **Printer Network Setup** dialog box is displayed. For details, see "The Printer Network Setup dialog box is displayed during setup" in "Troubleshooting" on page 79.

16 Setup automatically detects your access point.

Important

If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.

- ❑ An access point is detected automatically and setup proceeds to the next step when
 - Setup detects an access point with the same network name (SSID) as the access point currently connected to your computer (when using AirPort Admin Utility version 3.1 or later), and the access point is not using encryption.
 - Setup did not detect an access point with the same network name (SSID) as the access point currently connected to your computer (or your computer is currently not connected to an access point in the first place), but a single access point without encryption was detected.


- ❑ If the detected access point is using encryption
When setup detects an access point with the same network name (SSID) as the access point currently connected to your computer, and the access point is using encryption (Password (WEP key) or WPA), the **Access Points** dialog box is displayed with the access point highlighted in the list.

 
Enter the network key (Password (WEP key) or WPA key) set to the access point and click **Connect**.

- ❑ If multiple access points were detected
If setup did not detect an access point with the same network name (SSID) as the access point currently connected to your computer (or your computer is currently not connected to an access point in the first place), and two or more access points were detected, the **Access Points** dialog box is displayed.

Select your target access point and click **Connect**.

If **WEP** or **WPA** is displayed in the **Encryption** column, a network key (Password (WEP key) or WPA key) is set to your access point. Enter the network key (Password (WEP key) or WPA key) set to the access point and click **Connect**.

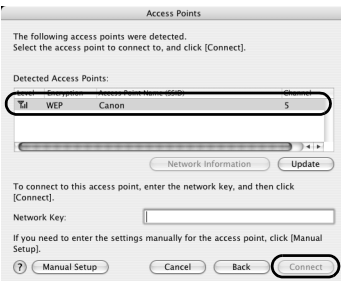



You cannot connect to an access point using WPA Enterprise or an access point using WPA Personal with type of dynamic encryption set to AES. See “The Access Points dialog box is displayed during setup” on page 72.

→ **Notes**

- If the **Encryption** column is blank, the access point is not encrypted.
 - For details, see “The Access Points dialog box is displayed during setup” in “Troubleshooting” on page 72.
To confirm the password (WEP key) or the WPA key when using AirPort Base Station, use the AirPort Admin Utility. For details, refer to its online help.
 - For details on the access point’s network name (SSID) and network key (WEP key or WPA key) setting, refer to the manual provided with the access point.
-

- ☐ If no access points were detected, or your target access point is not displayed

If the **An access point could not be detected** message appears, click **OK** to display the **Access Points** dialog box. Click **Update** to perform detection again. If your access point is still not listed, take the following measures.

- Ensure that the access point is on and then click **Update**.
- Ensure that the printer is on and connected to your computer with a USB cable, then click **Update**.
- Move your printer closer to the access point and remove possible obstructions, then click **Update**.
- If all above fails, use manual searching. For details, see “The target access point is not detected, or you want to specify access point settings manually” in “Troubleshooting” on page 74.
- Using your access point’s utility software, check if your access point is set to a closed network / stealth mode. If so, click **Manual Setup** and enter the access point’s network name (SSID) in **Network (SSID)**.

17 Setup automatically detects the printer.




The iP4000R connected with a USB cable is detected automatically.

If the printer was not detected, the **Printer IP Address Setup** dialog box appears. Click **Connect** to retry detection. If your printer is still not detected, take the following measures.

- Ensure that the printer is on and connected to your computer with a USB cable, then click **Connect**.
- Move your printer closer to the access point and remove possible obstructions, then click **Connect**.
- Ensure that the computer's connection with the access point is operational, then click **Connect**.
- If all above fails, use manual searching. To confirm the IP address, click **Network Information** in the **Set Printer IP Address** dialog box. For details, see "The Set Printer IP Address / Printer IP Address Setup dialog box is displayed during setup" in "Troubleshooting" on page 77.

➡ **Note**

Be sure to re-connect the printer to your computer with a USB cable when changing the wireless LAN setting. Otherwise, your computer may fail to communicate with the printer.

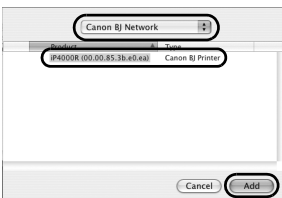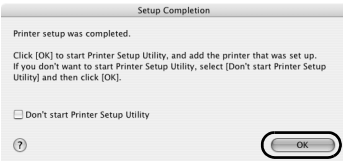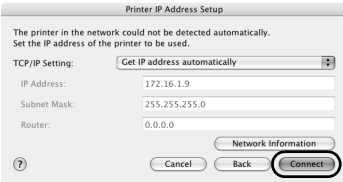

18 Remove the USB cable and click **OK**.

The Printer Setup Utility (Print Center on Mac OS X v.10.2) will start up.

19 Click **Add**.

20 Select **CANON BJ Network** from the pop-up menu, select **iP4000R** from the list of printers, and click **Add**.

The alphanumeric string after the printer name is its MAC address.



21 Confirm that your printer is added to the list of printers.

Printer driver setup is now complete.

22 Install applications. In the *Setup Software & User's Guide CD-ROM*, double-click **CANON_BJ** and then double-click **Application**.

Double-click the installer in folder for each application you want to install.


23 Perform print head alignment before you start using your printer.

See "Aligning the Print Head - Macintosh" on page 53.

First-time Setup for Use over Wired LAN

When you are setting up the printer to be used over wired LAN for the first time, the printer is set up to be used over a network, as well as the computer that uses it. Follow these steps.

■ First-time Setup for Use over Wired LAN - Windows

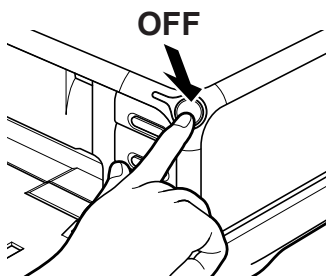


- 1 Ensure that the printer and the computer are turned off.
- 2 Turn on the computer and start Windows. If any applications automatically run, quit them.

Do NOT turn the printer on at this stage.

- 3 Place the *Setup Software & User's Guide CD-ROM* in the CD-ROM drive.

➔ Note

- If the CD-ROM does not run automatically, click **Start** and select **My Computer**, then double-click the CD-ROM icon. For non-XP Windows, double-click **My Computer** in the Windows screen, then double-click the CD-ROM icon.
- If the language selection screen appears, select the language, then click **OK**.
- If the location selection message appears, select your place of residence, then click **Next**.

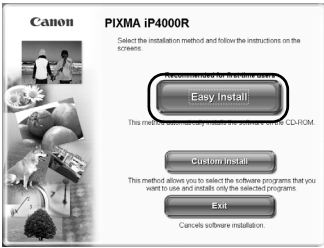


- 4 Follow the instructions displayed on screen. When the screen shown on the left is displayed, click **Easy Install**.

➡ **Note**


When you select **Easy Install**, the items included in the CD-ROM are installed automatically. To select particular items to install, click **Custom Install** and follow the instruction on the screen.






- 5 When the list of applications to install appears, verify the contents, click **Install**, then follow the instructions on the screen.

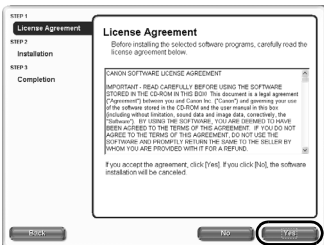

- 6 Read the **License Agreement** carefully and click **Yes**.

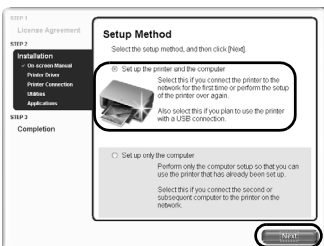

- 7 Select **Set up the printer and the computer** and click **Next**.

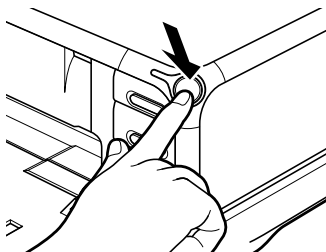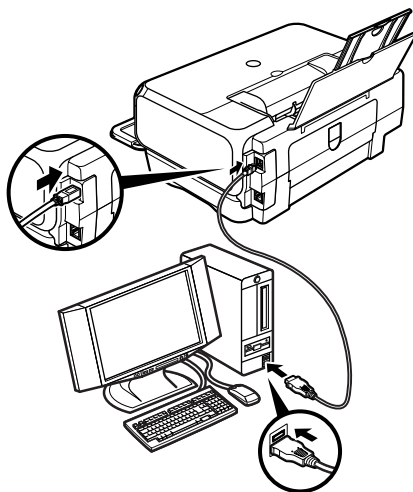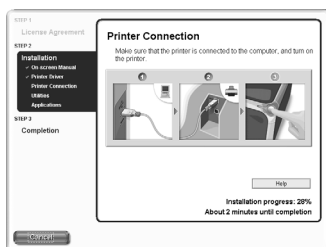


- 8** When the screen shown on the left appears, connect the printer with a USB cable and connect the printer to the network devices such as hubs with an ethernet cable.

Note

Connection may vary depending on your network setup.

- 9** Turn on the printer.

If the printer is recognized, the next screen will appear automatically. If the connection is not recognized, click **Help** and follow its instructions.

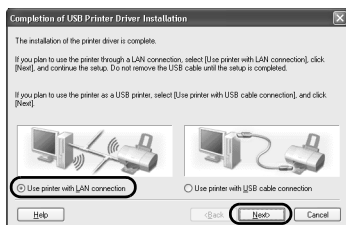

- 10** Select **Use printer with LAN connection** and click **Next**.

11 Select **Wired LAN** and click **Next**.

➡ **Note**

If the printer's network settings have been set before, the **Printer Network Setup** dialog box is displayed. For details, see "The Printer Network Setup dialog box is displayed during setup" in "Troubleshooting" on page 79.

12 Setup automatically detects the printer.

The iP4000R connected with a USB cable is detected automatically.




If the printer was not detected, the **Set Printer IP Address** dialog box appears. Click **Connect** to retry detection. If the printer is still not detected, take the following measures.


- Ensure that the printer is on and connected to your computer with a USB cable, then click **Connect**.
- Use manual searching. To confirm the IP address, click **Network Information** in the **Set Printer IP Address** dialog box. For details, see "The Set Printer IP Address / Printer IP Address Setup dialog box is displayed during setup" in "Troubleshooting" on page 77.

13 Remove the USB cable, and click **Finish**.

To change the port name, click **Set Port Name**. For details, see "Changing the port name" in "Troubleshooting" on page 81.

Setup will next install application programs.

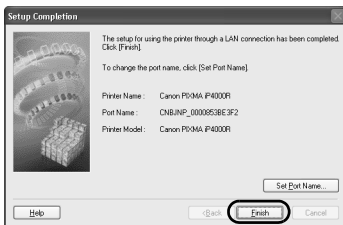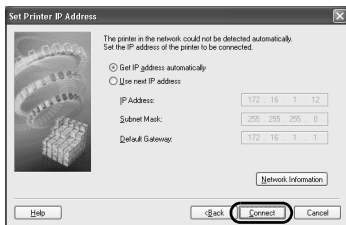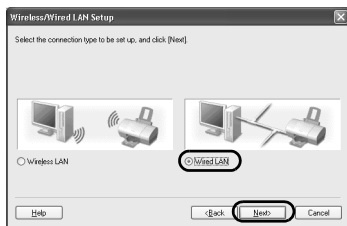

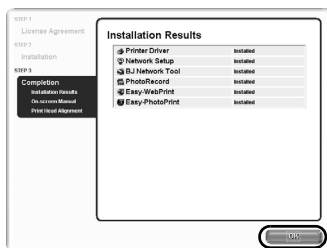

14 When the installation results are displayed, click **OK**.

If you are prompted to restart the computer, click **Yes** and restart the computer.

➔ **Note**

If the online registration dialog box appears, follow the on-screen instructions to register your product.


15 When the **On-Screen Manual** dialog box appears, click **Next**.

Printer software installation is now complete. Setup next proceeds to perform print head alignment.

16 When the **Print Head Alignment** dialog box appears, confirm that a sheet of A4 or Letter-sized plain paper is loaded in the Sheet Feeder, and click **Execute**.

Go to step 5 of “Aligning the Print Head - Windows” on page 52.


■ First-time Setup for Use over Wired LAN - Macintosh

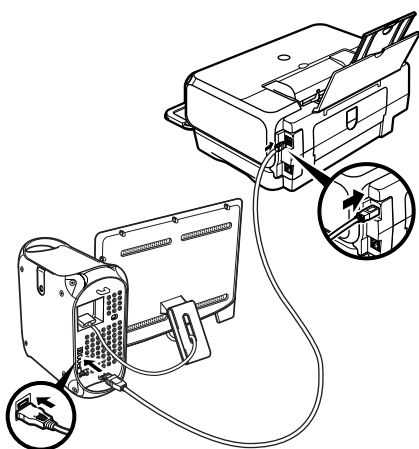

1 Connect the printer with a USB cable and connect the printer to the network devices such as hubs with an ethernet cable.

➔ **Note**


Connection may vary depending on your network setup.

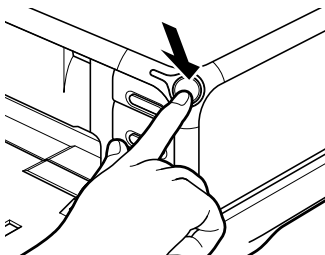

- 2** Turn on the printer.
- 3** Turn on the Mac.
- 4** Place the *Setup Software & User's Guide CD-ROM* in the CD-ROM drive.



- 5** Double-click the **Mac OS X** folder, then double-click the **Printer Driver** folder.

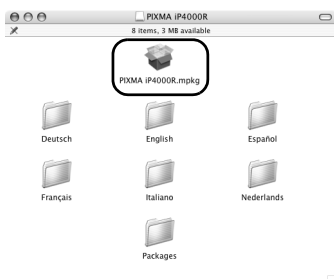


- 6** Double-click **PIXMA iP4000R xxx.pkg**.

“x” represents a number.

➔ **Note**

When using Mac OS X v.10.2, the **Authenticate** dialog box appears. Enter the administrator's name and password, and click **OK**.


- 7** Click **Continue**.
- 8** Read the **License Agreement** carefully and click **Continue**, then click **Agree**.

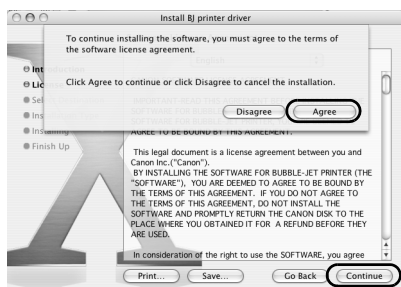

- 9** Select a destination to where you want to install the printer driver, and click **Continue**.

- 10** Click **Install**.


When using Mac OS X v.10.2, go to step 12.

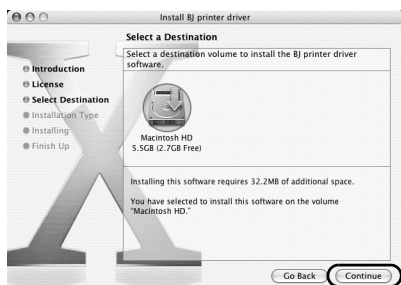




- 11** Enter the administrator's name and password, and click **OK**.

➔ **Note**

If you have forgotten the administrator name and/or password, click  and follow the instructions in **Mac Help**.

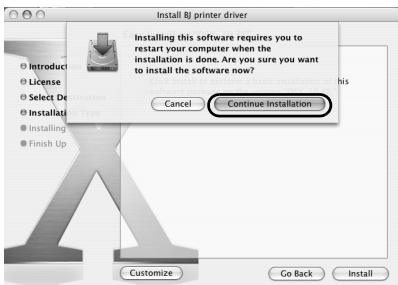


- 12** A message asking for your confirmation to restart your Mac appears on the screen. Read the message, then click **Continue Installation**.

Software installation will start.




- 13** Click **Restart**.

When the computer restarts, BJ Network Tool will start up. If it does not start automatically, select **Library - Printers - Canon - BJ Printer - Utilities - BJ Network Tool**.

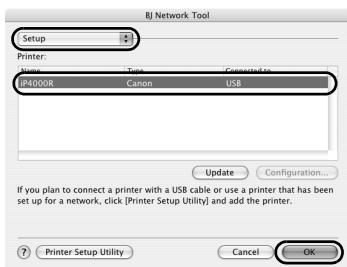

- 14** Select **Setup** from the pop-up menu and **IP4000R** in **Printer**, then click **OK**.

If the **The printer could not be detected** message is displayed, check that your printer is connected with a USB cable and turned on, then click **Update**.

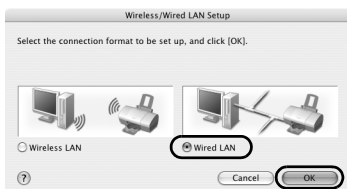

- 15** Select **Wired LAN** and click **OK**.

➔ **Note**

If the printer's network settings have been set before, the **Printer Network Setup** dialog box is displayed. For details, see "The Printer Network Setup dialog box is displayed during setup" in "Troubleshooting" on page 79.

16 Setup automatically detects the printer.



The iP4000R connected with a USB cable is detected automatically.

If the printer was not detected, the **Printer IP Address Setup** dialog box appears. Click **Connect** to retry detection. If your printer is still not detected, take the following measures.

- Ensure that the printer is on and connected to your computer with a USB cable, then click **Connect**.
- Use manual searching. To confirm the IP address, click **Network Information** in the **Set Printer IP Address** dialog box. For details, see “The Set Printer IP Address / Printer IP Address Setup dialog box is displayed during setup” in “Troubleshooting” on page 77.

17 Remove the USB cable and click OK.


The Printer Setup Utility (Print Center on Mac OS X v.10.2) will start up.

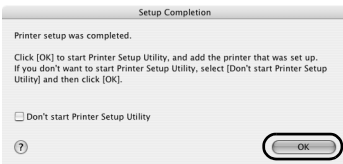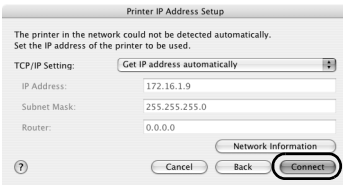

18 Click Add.

19 Select CANON BJ Network from the pop-up menu, select iP4000R from the list of printers, and click Add.

The alphanumeric string after the printer name is its MAC address.

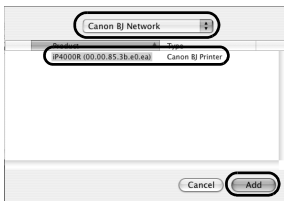



20 Confirm that your printer is added to the list of printers.

Printer driver setup is now complete.

21 Install applications. In the *Setup Software & User's Guide CD-ROM*, double-click **CANON_BJ** and then double-click **Application**.

Double-click the installer in folder for each application you want to install.


22 Perform print head alignment before you start using your printer.

See "Aligning the Print Head - Macintosh" on page 53.

Setting Up for Use with USB Connection

When you are setting up the printer to be used as a standalone printer with USB connection, follow these steps.

■ Setting Up for Use with USB Connection - Windows

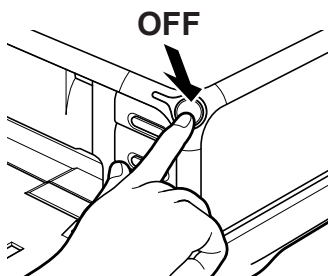


- 1 Ensure that the printer and the computer are turned off.
- 2 Turn on the computer and start Windows. If any applications automatically run, quit them.

Do NOT turn the printer on at this stage.

- 3 Place the *Setup Software & User's Guide CD-ROM* in the CD-ROM drive.

→ Notes

- If the CD-ROM does not run automatically, click **Start** and select **My Computer**, then double-click the CD-ROM icon. For non-XP Windows, double-click **My Computer** in the Windows screen, then double-click the CD-ROM icon.
- If the language selection screen appears, select the language, then click **OK**.
- If the location selection message appears, select your place of residence, then click **Next**.

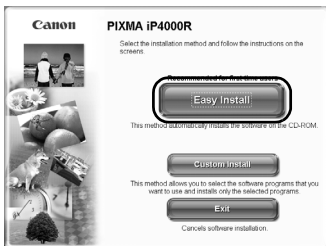


- 4 Follow the instructions displayed on screen. When the screen shown on the left is displayed, click **Easy Install**.

➔ **Note**


When you select **Easy Install**, the items included in the CD-ROM are installed automatically. To select particular items to install, click **Custom Install** and follow the instruction on the screen.




- 5 When the list of applications to install appears, verify the contents, click **Install**, then follow the instructions on the screen.

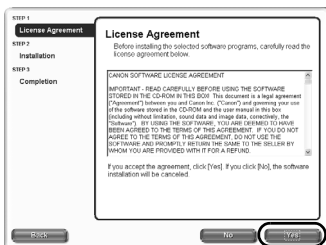



- 6 Read the **License Agreement** carefully and click **Yes**.

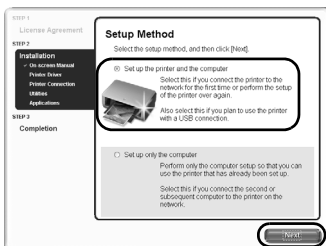

- 7 Select **Set up the printer and the computer** and click **Next**.

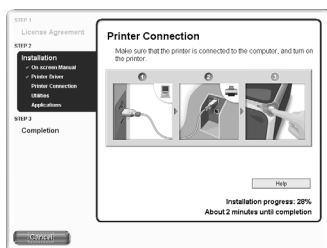


- 8** When the screen shown on the left appears, connect the printer with a USB cable.

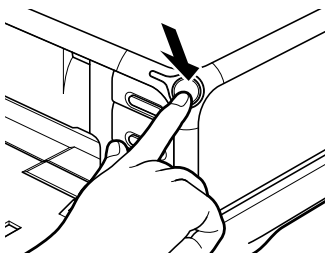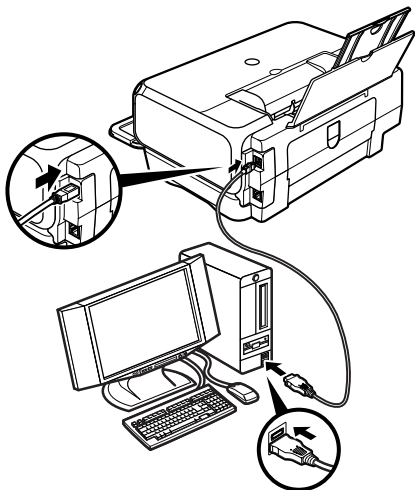


- 9** Turn on the printer.

If the printer is recognized, the next screen will appear automatically. If the connection is not recognized, click **Help** and follow its instructions.

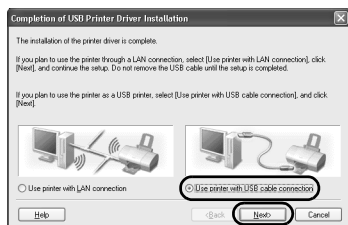

- 10** Select **Use printer with USB cable connection** and click **Next**.

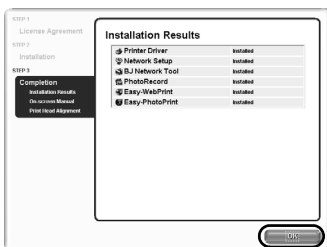

11 When the installation results are displayed, click **OK**.

If you are prompted to restart the computer, click **Yes** and restart the computer.

➔ **Note**

If the online registration dialog box appears, follow the on-screen instructions to register your product.

12 When the **On-Screen Manual** dialog box appears, click **Next**.


Printer software installation is now complete. Setup next proceeds to perform print head alignment.


13 When the **Print Head Alignment** dialog box appears, confirm that a sheet of A4 or Letter-sized plain paper is loaded in the Sheet Feeder, and click **Execute**.

Go to step 5 of “Aligning the Print Head - Windows” on page 52.


■ Setting Up for Use with USB Connection - Macintosh

1 Connect the printer with a USB cable.

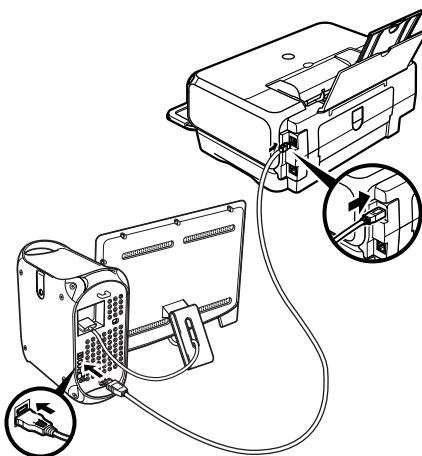

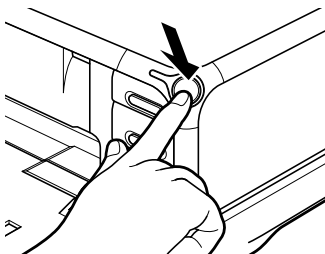

- 2** Turn on the printer.
- 3** Turn on the Mac.
- 4** Place the *Setup Software & User's Guide CD-ROM* in the CD-ROM drive.

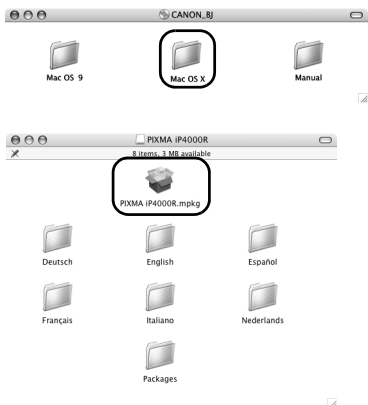


- 5** Double-click the **Mac OS X** folder, then double-click the **Printer Driver** folder.
- 6** Double-click **PIXMA iP4000R xxx.pkg**.

“x” represents a number.

➔ **Note**

When using Mac OS X v.10.2, the **Authenticate** dialog box appears. Enter the administrator's name and password, and click **OK**.


- 7** Click **Continue**.
- 8** Read the **License Agreement** carefully and click **Continue**, then click **Agree**.

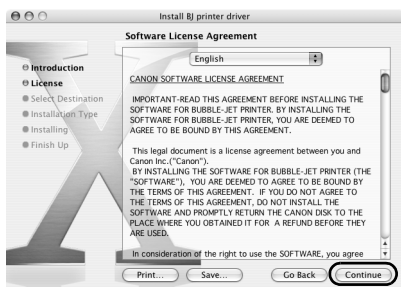

- 9** Select a destination to where you want to install the printer driver, and click **Continue**.

- 10** Click **Install**.


When using Mac OS X v.10.2, go to step 12.

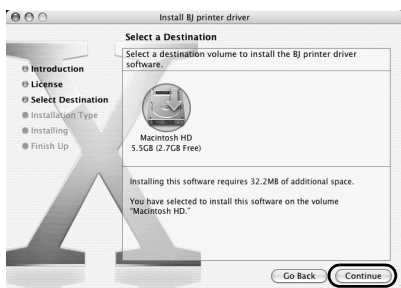




11 Enter the administrator's name and password, and click **OK**.

➔ **Note**

If you have forgotten the administrator name and/or password, click  and follow the instructions in **Mac Help**.

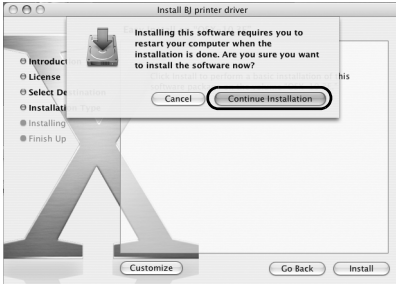

12 A message asking for your confirmation to restart your Mac appears on the screen. Read the message, then click **Continue Installation**.


Software installation will start.




13 Click **Restart**.

When the computer restarts, BJ Network Tool will start up. If it does not start automatically, select **Library - Printers - Canon - BJ Printer - Utilities - BJ Network Tool**.

14 Select **Setup** from the pop-up menu.

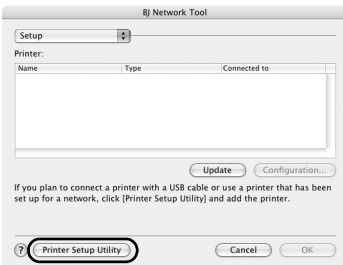

15 Click **Printer Setup Utility (Print Center on Mac OS X v.10.2)**.

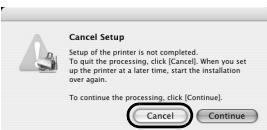

16 Click **Cancel**.



17 Confirm that your printer is added to the list of printers.

The alphanumeric string after the printer name is its MAC address.

➔ **Note**

If the printer does not appear on the list, click **Add** and select **USB** from the pop-up menu. Select **iP4000R** from the list of printers and click **Add**.

Printer driver setup is now complete.

18 Install applications. In the *Setup Software & User's Guide CD-ROM*, double-click **CANON_BJ** and then double-click **Application**.

Double-click the installer in folder for each application you want to install.

19 Perform print head alignment before you start using your printer.

See “Aligning the Print Head - Macintosh” on page 53.


Setting Up an Additional Computer to Use a Printer Already Connected to a Network

When your printer is already set up to be used over a network, and you want to set up another computer to use the shared printer, the computer needs to be set up to use the printer, but not the printer itself. Follow these steps.

■ **Setting Up an Additional Computer to Use a Printer Already Connected to a Network - Windows**

➔ **Notes**

- Make sure the computer you are setting up is NOT connected to the printer via a USB cable.
- Make sure the printer is properly set up and is currently available for use over the wireless or wired network.

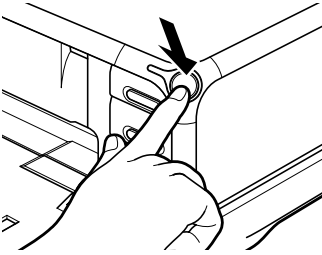

- 1** Turn on the printer.
- 2** Turn on the computer.

- 3** Place the *Setup Software & User's Guide CD-ROM* in the CD-ROM drive.

➔ **Notes**


- If the CD-ROM does not run automatically, click **Start** and select **My Computer**, then double-click the CD-ROM icon. For non-XP Windows, double-click **My Computer** in the Windows screen, then double-click the CD-ROM icon.
 - If the language selection screen appears, select the language, then click **OK**.
 - If the location selection message appears, select your place of residence, then click **Next**.
-


- 4** Follow the instructions displayed on screen. When the screen shown on the left is displayed, click **Easy Install**.

➔ **Note**


When you select **Easy Install**, the items included in the CD-ROM are installed automatically. To select particular items to install, click **Custom Install** and follow the instruction on the screen.

- 5** When the list of applications to install appears, verify the contents, click **Install**, then follow the instructions on the screen.

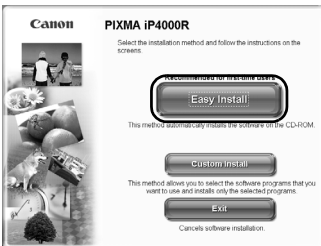


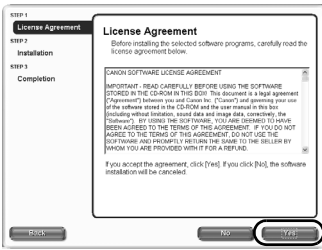

6 Read the **License Agreement** carefully and click **Yes**.

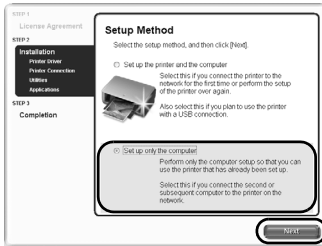

7 Select **Set up only the computer** and click **Next**.

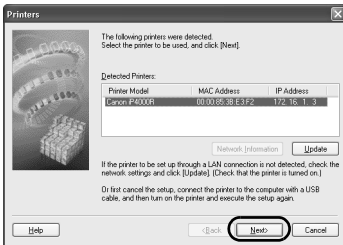


8 Select the printer in the **Printers** dialog box, and click **Next**.

Notes

If the printer was not detected, confirm the following and click **Update**.

- Ensure that the printer is on.
- Ensure that the firewall is turned off.
- When using wireless LAN, confirm that the computer can communicate with the access point.
- When using wired LAN, confirm that the computer is connected to the hub.
- Confirm that the printer is not set to use access control.

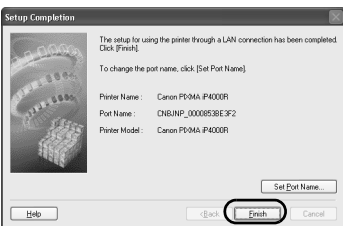

9 Click **Finish** in the **Setup Completion** dialog box.

To change the port name, click **Set Port Name**. For details, see “Changing the port name” in “Troubleshooting” on page 81.

Setup will next install application programs.



10 When the installation results are displayed, click **OK**.

If you are prompted to restart the computer, click **Yes** and restart the computer.


11 When the **On-Screen Manual** dialog box appears, click **Next**.

Printer software installation is now complete. You can skip print head alignment if it is already adjusted properly.

■ Setting Up an Additional Computer to Use a Printer Already Connected to a Network - Macintosh

➔ **Notes**


- Make sure the computer you are setting up is NOT connected to the printer via a USB cable.
- Make sure the printer is properly set up and is currently available for use over the wireless or wired network.

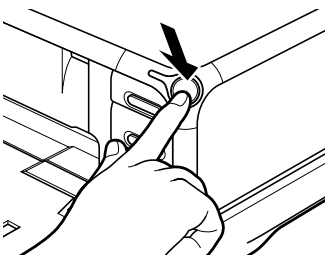

- 1** Turn on the printer.
- 2** Turn on the Mac.
- 3** Place the *Setup Software & User's Guide CD-ROM* in the CD-ROM drive.



- 4** Double-click the **Mac OS X** folder, then double-click the **Printer Driver** folder.

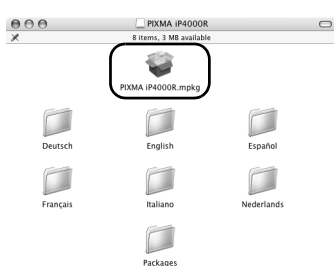


- 5** Double-click **PIXMA iP4000R xxx.pkg**.

“x” represents a number.


➔ **Note**

When using Mac OS X v.10.2, the **Authenticate** dialog box appears. Enter the administrator's name and password, and click **OK**.

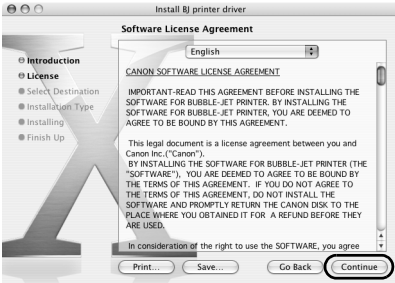

6 Click **Continue**.

7 Read the **License Agreement** carefully and click **Continue**, then click **Agree**.

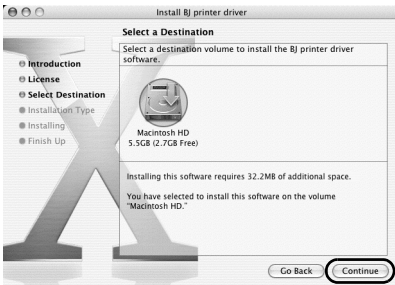

8 Select a destination volume to install the printer driver, and click **Continue**.


9 Click **Install**.


When using Mac OS X v.10.2, go to step 11.



10 Enter the administrator's name and password, and click **OK**.

➔ **Note**

If you have forgotten the administrator name and/or password, click  and follow the instructions in **Mac Help**.

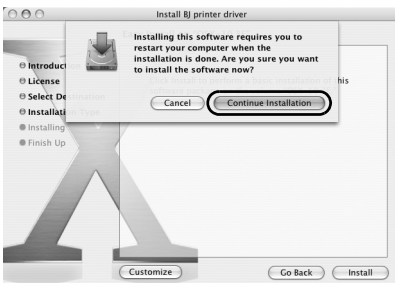

11 A message asking for your confirmation to restart your Mac appears on the screen. Read the message, then click **Continue Installation**.

Software installation will start.





12 Click **Restart**.

When the computer restarts, BJ Network Tool will start up. If it does not start automatically, select **Library - Printers - Canon - BJ Printer - Utilities - BJ Network Tool**.

13 Select **Setup** from the pop-up menu.

14 When a message appears notifying that no printer was detected, click **OK**.

15 Click **Printer Setup Utility (Print Center on Mac OS X v.10.2)**.

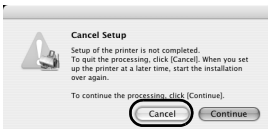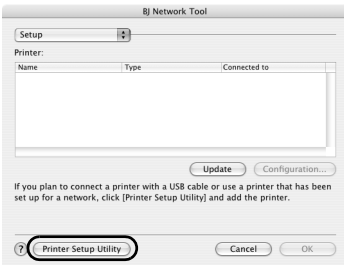


16 Click **Cancel**.

17 Click **Add**.




18 Select **CANON BJ Network** from the pop-up menu, select **iP4000R** from the list of printers, and click **Add**.

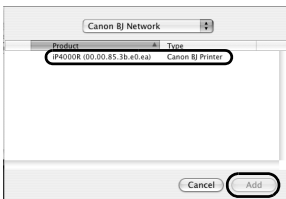

19 Confirm that your printer is added to the list of printers.

The alphanumeric string after the printer name is its MAC address.

Printer driver setup is now complete.

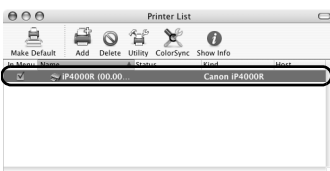



20 Install applications. In the *Setup Software & User's Guide CD-ROM*, double-click **CANON_BJ** and then double-click **Application**.

Double-click the installer in folder for each application you want to install.

Software setup is now complete. You can skip print head alignment if it is already adjusted properly.

Aligning the Print Head

Aligning the print head allows you to print without shifting the color registration, and is a necessary step to print properly.

→ Notes

- The Print Head can be aligned also from the printer itself. With the printer on, load a sheet of Letter-sized plain paper in the Sheet Feeder. Hold the **RESUME/CANCEL** button until the **POWER** lamp flashes four times.
- You need to load a sheet of A4 or Letter-sized plain paper in the Sheet Feeder when you carry out the print head alignment.

■ Aligning the Print Head - Windows

1 Click **Start** and select **Control Panel**, **Printers and Other Hardware**, and then **Printers and Faxes**.

→ Note


For non-Windows XP users, click **Start**, then select **Settings**, **Printers**.


2 Click the icon for your printer.

3 Open the **File** menu and select:


- Windows XP/Windows 2000 → **Printing Preferences**
- Windows Me/Windows 98 → **Properties**

to open the setting screen.

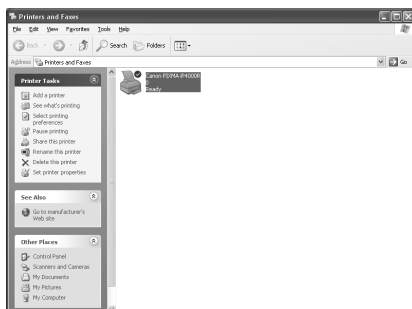

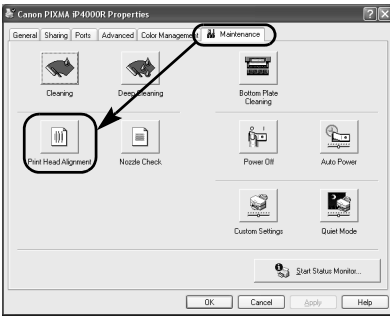

- 4 Click the **Maintenance** tab, and click **Print Head Alignment**.

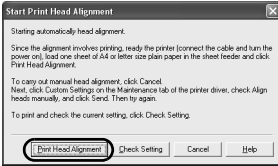

- 5 Read the message and click **Print Head Alignment**.


It takes about 80 seconds to start printing. Do not open the Top Cover while printing.



- 6 If a message warning you not to perform other operations appears, click **OK**.

- 7 Ensure the pattern shown on the left is printed.

The Print Head is aligned automatically. The printer is now ready to use.

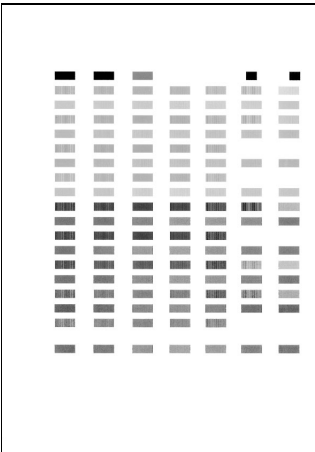

→ Notes

- If the pattern is not printed successfully, refer to “Eleven Flashes” in “The Power Lamp Flashes Orange” of the *User’s Guide*.
- At first-time setup, if you are prompted to restart the computer, click **Yes** to restart the computer.

■ Aligning the Print Head - Macintosh

1 Double-click the hard disk icon where the printer driver was installed, the **Applications** folder, and then the **Utilities** folder.

2 Double-click the **Printer Setup Utility** icon.

When using Mac OS X v.10.2, double-click the **Print Center** icon.

3 Select your printer from the **Name** list and click **Utility**.

If the printer is not displayed in the **Printer List**, you need to add it on the list.



For details, follow the instructions in **Mac Help**.

When using Mac OS X v.10.2, select your printer from the **Name** list and click **Configure**.

4 Select your printer from the **Product** list and click **Maintenance**.


BJ Printer Utility appears.

5 Select **Test Print** from the pop-up menu, and click **Print Head Alignment**.

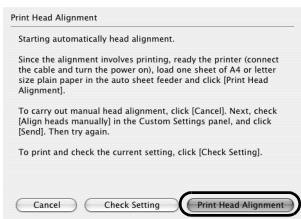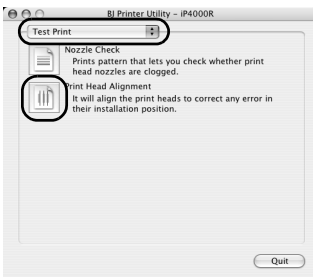

6 Read the message and click **Print Head Alignment**.

It takes about 80 seconds to start printing. Do not open the Top Cover while printing.

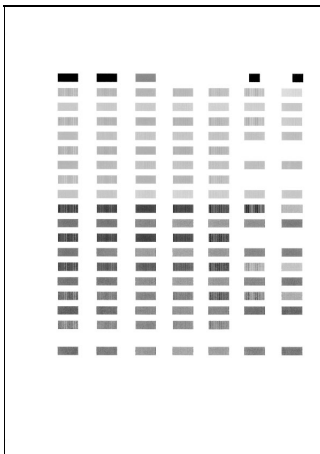

7 Ensure that the pattern on the left is printed.

The Print Head is aligned automatically. The printer is now ready to use.

➡ **Note**

If the pattern is not printed successfully, refer to “Eleven Flashes” in “The Power Lamp Flashes Orange” of the *User's Guide*.

Basic Operations


⚠ Caution

- If you detect smoke, unusual smells or strange noises around the printer, immediately switch the printer off and always unplug the printer. Contact your local Canon service representative.
- To avoid injury, never put your hand or fingers inside the printer while it is printing.

Printing with Windows

Adjusting the print settings according to your needs allows you to produce better quality prints. In this section, we will use NotePad for the purpose of explanation. The procedures and the screens that appear on your computer may differ depending on the application that you use.


■ Printing

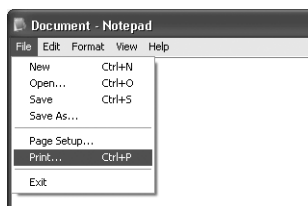

1 Print the document from the application.


From the **File** menu, click **Print**.

Refer to the application's users manual for the actual procedures.

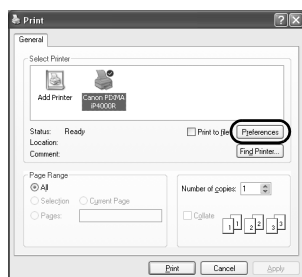

2 Ensure that your printer is selected, then click:


- Windows XP → **Preferences**
- Windows Me/Windows 98 → **Properties**
- Windows 2000 → **Main** tab

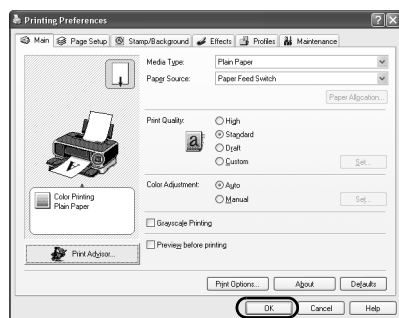

3 Specify the required settings and click OK.

→ Notes

- If you use anything other than plain paper, see "Basic Printing Settings" on page 57.
- This section describes the procedure for selecting the paper source with the Paper Feed Switch on the printer. For details about the other settings for specifying the paper source, refer to "Changing the Paper Source" on the *User's Guide*.

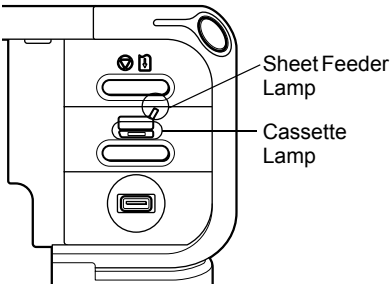

- 4** Ensure that the proper lamp of the paper source is lit.


If not, press the Paper Feed Switch on the printer.

- 5** To start printing, click **Print**.

Printing will start in a few moments.

■ Basic Printing Settings

For the best print quality, specify the minimum requirement settings in the **Main** tab. To get the best results, ensure you select the type of media loaded in the printer when printing on paper other than plain paper.

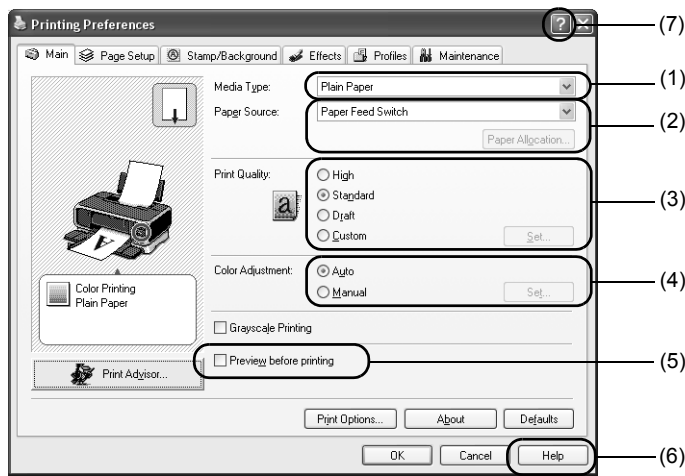

(1) Media Type	Select the type of media loaded in the printer.
(2) Paper Source	Select the setting here when you do not specify the paper source with the Paper Feed Switch on the printer.
(3) Print Quality	Select one option from High , Standard , and Draft . Select Custom to set the print quality manually.
(4) Color Adjustment	To control the color adjustment settings in more detail, select Manual .
(5) Preview before printing	Select this to check the layout before printing.
(6) Help	Click this for a more detailed explanation of the functions in the tab. (This may not appear when using Windows XP or Windows 2000. If this happens, click Start then select All Programs (or Programs) - Canon PIXMA iP4000R - Guide .)
(7) ?	Click this to change the cursor shape to ?. By clicking on the item's name with this ? cursor, an explanation will be displayed.


➔ Notes

- Clicking **Print Advisor** allows you to change to the most appropriate print settings simply by answering questions when prompted.
- Use the application to specify the paper size and paper orientation. Before printing, open the settings screen and check that **Page Size** in the **Page Setup** tab is the same as that specified within application.
- Refer to the *User's Guide* for more information about printer driver functionality.

Printing with Macintosh


Adjusting the print settings according to your needs allows you to produce better quality prints.

■ Printing

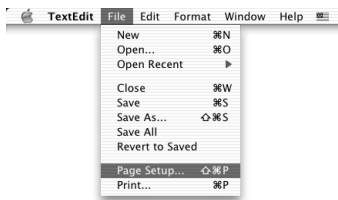


- 1 Open the **Page Setup** dialog box in your application.

From the **File** menu, click **Page Setup**. Refer to the application's users manual for the actual procedures.

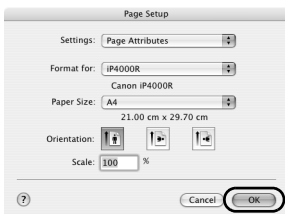


- 2 Specify the page setup, then click **OK**.

For details, see “Page Setup” on page 59.

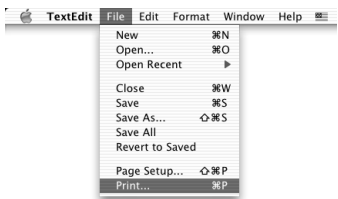


- 3 Open the **Print** dialog box in your application to print the document.

From the **File** menu, click **Print**. Refer to the application's users manual for the actual procedures.

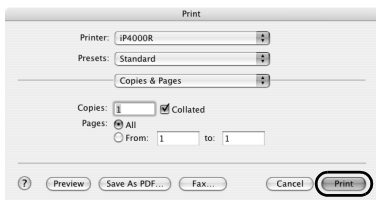

- 4 Specify the printing settings according to your requirements.

For details, see “Basic Printing Settings” on page 59.

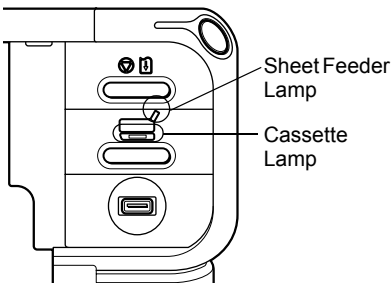

- 5 Ensure that the proper lamp of the paper source is lit.


If not, press the Paper Feed Switch on the printer.

- 6 Click **Print**.

Printing will start in a few moments.


■ Page Setup

From the **Page Setup** dialog box, specify the **Paper Size** settings.

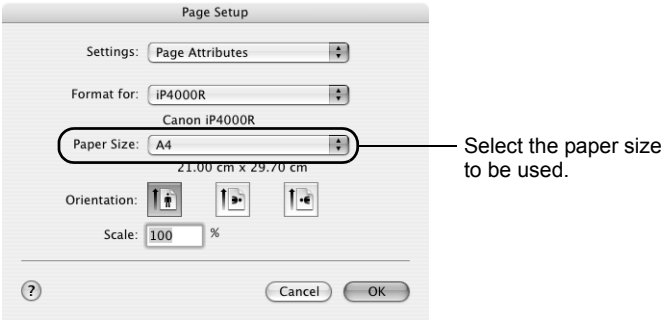

■ Basic Printing Settings

For the best print quality, specify the minimum requirement settings in the **Print** dialog box. Select **Quality & Media** from the pop-up menu to change the display of the dialog box. To get the best results, ensure you select the type of media loaded in the printer when printing on paper other than plain paper.

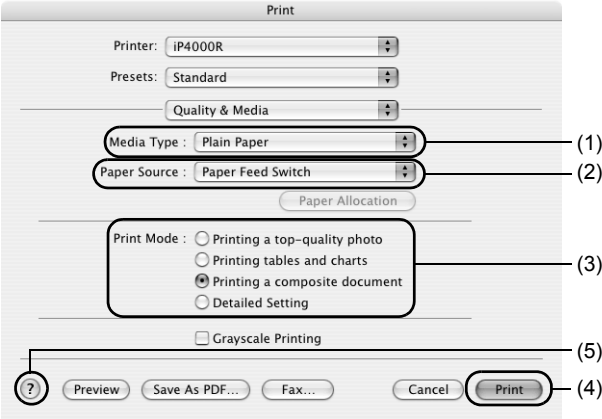

(1) Media Type	Select the type of media loaded in the printer.
(2) Paper Source	Select the setting here when you do not specify the paper source with the Paper Feed Switch on the printer.
(3) Print Mode	Select the type of document you want to print. To specify more detailed settings for the print quality, click Detailed Setting .
(4) Print	Click this to start printing.
(5) ?	Click this for more information about other printer driver functions. ? appears also in the Page Setup dialog box.

➡ **Note**

Refer to the *User's Guide* for more information about printer driver functionality.

Print Head Maintenance

■ If Blurring Occurs or If a Specific Color Does Not Print

Perform **Print Head Cleaning** to improve the print quality. Ensure that the printer is turned on and follow the instructions below.

- Windows
Open the **Printer Properties** dialog box and click the **Maintenance** tab. Click **Cleaning**. For details, refer to the *User's Guide*.
- Macintosh
Open the **BJ Printer Utility** dialog box and select **Cleaning** from the pop-up menu. Click **Cleaning**. For details, refer to the *User's Guide*.

■ When the Printer Runs out of Ink

Replace the empty ink tank with a new one.
Specify the following ink tanks when purchasing.

Black : BCI-6BK



Black : BCI-3eBK



Yellow : BCI-6Y




Magenta : BCI-6M



Cyan : BCI-6C






Print Head Lock Lever

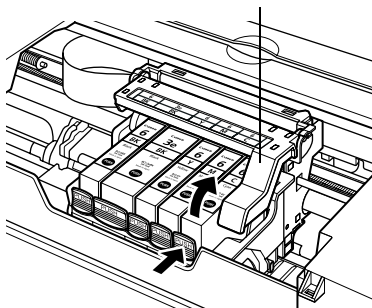

- 1** Open the Paper Output Tray.
- 2** Open the Top Cover and pull down the Inner Cover, then remove the empty ink tank.

Do not touch the Print Head Lock Lever.

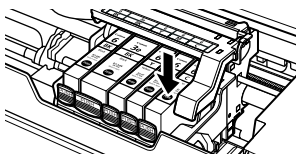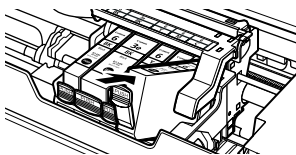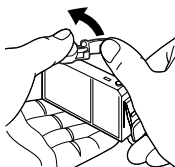

3 Install the new ink tank.

Put back the Inner Cover and close the Top Cover when finished.

➡ **Note**

For more details about maintenance, refer to the *User's Guide*.

Appendix

Printing Photographs Directly from a Digital Camera

Connecting a digital still camera or camcorder to the printer allows you to print recorded images directly without using a computer. This printer supports both PictBridge and Canon Bubble Jet Direct.

→ **Notes**

- PictBridge is an industry standard enabling a range of digital photo solutions, including the direct printing of photos from a digital still camera or a digital video camcorder* without the need to use a computer.
- Canon Bubble Jet Direct allows you to print photos from a Canon Bubble Jet Direct compatible (PictBridge incompatible) digital camera or digital video camcorder without a computer by simply connecting the digital camera or digital video camcorder to this printer.

* Hereafter, the digital still camera and digital video camcorder are collectively called a digital camera or camera.

■ **Connecting to a Digital Camera**

Caution

Do not connect any equipment other than the camera ready for PictBridge or Canon Bubble Jet Direct to the Direct Print Port of the printer. If you do so, electric shock, fire, or damage to the camera could result.

→ **Notes**

- When producing photos with the digital camera connected to the printer, it is advisable to use the AC adapter supplied with the camera. If you use the camera battery, be sure to charge it fully.
- The Print Head cannot be aligned using the controls of the digital camera. For information on how to align the Print Head from the printer, see page 51.
- Depending on the model or brand of your camera, you may have to select a mode of producing photos compliant with PictBridge before connecting the camera.
You may also have to turn on the camera or select Play mode manually after connecting the camera to the printer.
Perform necessary operations according to the instruction manual supplied with your camera.
- When printing from your PC, be sure to unplug the cable connecting the digital camera.


1 Turn on the printer.

Make sure the camera is turned off.

2 Load the paper in the printer.

3 Connect the digital camera to the printer.

- (1) Connect the camera to the printer using the USB cable (for connection to a computer) supplied with the camera.
- (2) Turn on and set up the camera for direct printing.
When the connection between the camera and printer has been established, the **POWER** lamp on the printer flashes once.
* The power-on sequence may differ depending on the model or brand of the camera.

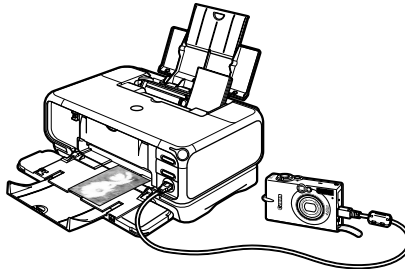

Either of the following icons will appear on the LCD of the digital camera display when the printer is correctly connected.



A PictBridge-compliant digital camera.



A Canon Bubble Jet Direct compatible digital camera.

■ Printing Photographs Directly from a PictBridge-Compliant Digital Camera

Default Camera Settings

When a PictBridge-compliant camera is connected and printing is started with no printing option selected, this printer operates based on the following default settings:

- Paper size 10 x 15 cm / 4" x 6"
- Paper type Photo (Photo Paper Plus Glossy)
- Layout Borderless
- Trimming Off (No trimming)
- Image optimize On (ExifPrint)
- Date print Off (No printing)

About the Settings Explained Below

The settings explained on the following pages cannot be made on some cameras. If any setting cannot be made, the default setting explained above is used.

Names of settings that are displayed on Canon PictBridge-compliant cameras are used in the description given below.

Different names may be displayed on your camera depending on the brand or model.

For details, refer to your camera's instruction manual.

About Paper size and Paper type

To change the paper size or paper type, operate the camera to select the PictBridge print setup mode and confirm or check the settings.

To print on Photo Paper Pro, select **Fast Photo** from **Paper type** on the display of the camera. Select **Photo** for Photo Paper Plus Glossy.

If using a Canon PictBridge-compatible camera, you can select **5" x 7"** from **Paper size**

The following sizes and types of paper can be loaded in the printer by selecting options from **Paper size** and **Paper type**.

Paper size setting	Paper type setting	Paper loaded in printer
10 x 15 cm / 4" x 6" (Default)	Photo (Default)	Photo Paper Plus Glossy
	Fast Photo	Photo Paper Pro
	Photo	Photo Paper Plus Semi-gloss
	Photo	Glossy Photo Paper
13 x 18 cm / 5" x 7"	Photo	Photo Paper Plus Glossy
A4	Photo	Photo Paper Plus Glossy
	Fast Photo	Photo Paper Pro
	Photo	Photo Paper Plus Semi-gloss
	Photo	Glossy Photo Paper
5.4 x 8.6 cm / Credit Card	Photo	Glossy Photo Paper

When **4" x 6"** is selected from **Paper size**, “2-up”, “4-up”, “9-up”, and “16-up” options may be available in **Layout**.

About Image optimize

If you use a Canon PictBridge-compliant camera, you can select **VIVID**, **NR**, or **VIVID+NR**. (Note that these options cannot be selected for some models.)

➡Notes

- When **VIVID** is selected, green and blue portions of photos are printed vividly.
- When **NR** (Noise Reduction) is selected, noise in blue portions, such as the sky, and dark portions is removed.
- When **VIVID+NR** is selected, functions of both **VIVID** and **NR** are performed.

About Date print

If “On” is selected, the shooting date recorded in Exif image data is printed in the lower-right corner of each photo.

➡ Notes

- This printer can handle only Exif/JPEG image data to produce photos using PictBridge.
 - Never disconnect the USB cable during printing.
 - When disconnecting the USB cable between the digital camera and printer, follow the instructions given in the Instruction Manual of the camera.
 - Controls of the digital camera cannot be used for the following:
 - Print quality setting
 - Printer maintenance
 - For the digital camera operation method and troubleshooting, refer to your digital camera’s manual.
 - For print error messages, refer to the *User’s Guide*.
-

■ Printing Photographs Directly from a Canon Bubble Jet Direct Compatible Digital Camera

Media Types for Digital Camera

When you connect a digital camera, you can use the following media:

Digital Camera Setting	Media Type
Card #1	Photo Paper Pro 4" x 6" / 101.6 x 152.4 mm
Card #2	Photo Paper Plus Glossy 4" x 6" / 101.6 x 152.4 mm
	Photo Paper Plus Semi-gloss 4" x 6" / 101.6 x 152.4 mm
	Glossy Photo Paper 4" x 6" / 101.6 x 152.4 mm
Card #3	Photo Paper Plus Glossy 5" x 7" / 127.0 x 177.8 mm
LTR	Photo Paper Pro Letter size
	Photo Paper Plus Glossy Letter size
	Photo Paper Plus Semi-gloss Letter size
	Glossy Photo Paper Letter size
A4	Photo Paper Pro A4 size
	Photo Paper Plus Glossy A4 size
	Photo Paper Plus Semi-gloss A4 size
	Glossy Photo Paper A4 size


➔ Notes

- For the digital camera operation method and troubleshooting, refer to your digital camera's manual.
 - For print error messages, refer to the *User's Guide*.
 - By operating the digital camera, you can make the following prints:
 - You can make a standard print from the image displayed in the single display mode or in the index display mode.
 - You can print specified numbers of images, or make an index print by editing the DPOF.
 - For the images taken with an ExifPrint-compatible digital camera, the Photo Optimizer PRO function can be used.
 - If date printing is set from the digital camera, the date when the photograph was taken is to be printed (excluding the index print).
 - Images will be scaled automatically according to the image size set on the digital camera and the size of the media set on the printer.
 - The digital camera does not support the following functions:
 - Print quality setting
 - Printer maintenance
 - Images other than Exif may not be index printed.
-

Notes on Handling the USB Interface (for Windows Users)

If installation of the printer driver does not proceed as instructed in this *Setup Guide*, there may be a problem with the USB driver installation.
Try reinstalling the printer driver.

■ Reinstalling

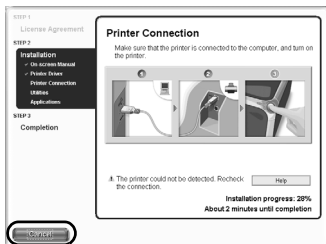

The screen shown on the left appears when the installation of the printer driver fails.

If the reinstallation is unsuccessful;

- 1** Click **Cancel** on the **Printer Connection** dialog box.
- 2** Click **Start Over** on the **Installation Failure** dialog box.
- 3** Click **Back** on the screen which appears next.
- 4** Click **Exit** on the Welcome screen, then remove the CD-ROM.
- 5** Turn the printer and computer off.
- 6** Check the cable connection.
- 7** Restart the computer.
- 8** Reinstall the printer driver (see page 16).

 
Printing and Initializing Network Settings

■ Printing Network Setting Information

To print the current network settings of the printer, hold down the **RESUME/CANCEL** button until the POWER lamp flashes 6 times, then release it.

The following information is printed.


- Printer name
- Firmware version
- Wireless LAN information
- Wired LAN information
- Printer access control
- Admin password
- Device status



This printout contains valuable information about your computer. Handle it with care.

■ Initializing Network Settings

 To initialize the network settings of the printer, follow these steps.



Note that initialization erases all connection settings with computers, disabling printing.

- 1** Make sure that the printer is connected to your computer with a USB cable.
- 2** Turn on the printer.
- 3** Start BJ Network Tool.

On Windows, click **Start** and select **All programs** (or **Programs**), **BJ Network Tool** and then **BJ Network Tool**.

On Macintosh, select **Library - Printers - Canon - BJPrinters - Utilities - BJ Network Tool**.

- 4** Select **Maintenance** from the **Settings** menu.
- 5** Click **Initialize** under **Setting Initialization** in the **Maintenance** dialog box.
- 6** Click **Yes** in the **Initialize Settings** dialog box (Windows) or **OK** in the **Setting Initialization** dialog box (Macintosh).

For Further Details...

For further information on printing operation or about the printer in general, refer to the *User's Guide*. For further information on network setup, refer to the *Network Guide*. The guides are HTML manuals you can browse through on your computer.

■ User's Guide Contents

- Printer parts and their functions
- Using the sheet feeder and the cassette
- Printer driver functions
- Routine maintenance
- Printing media
- Troubleshooting (printing related)
- Specifications

■ Network Guide Contents

- Overview
- On Security
- Changing and Confirming Network Settings
- Troubleshooting (network setting related)
- Appendix
- Glossary

■ How to View the User's Guide/Network Guide

For Windows

Double-click the **iP4000R User's Guide** or the **iP4000R Network Guide** short-cut icon on the desk top, or click **Start** and select **All Programs** (or **Programs**), **Canon PIXMA iP4000R Manual** and **User's Guide** or **Network Guide**.

For Mac OS X

- (1) Load the CD-ROM in your computer, and double-click the **OS X** folder.
- (2) Double-click the **Manual** folder.
- (3) Select a language folder.
- (4) Double-click the **User's Guide** or the **Network Guide** folder.
- (5) Double-click the icon for the **iP4000R_UG_ENG.htm** or the **iP4000R_NWG_ENG.htm** file.

■ Applications Included in the CD-ROM Package

Easy-WebPrint (Windows)

You can easily print out homepages displayed on Internet Explorer in full size without its right-hand side being cropped. This application is automatically added to the Internet Explorer toolbar. Internet Explorer 5.5. or later must be installed.

Easy-PhotoPrint (Windows/Macintosh)

You can make a Borderless Print easily and quickly, just by selecting a photograph taken with a digital camera and the paper type on which to print. Also it has tools to correct red eye caused by the camera's flash or smooth and beautify the facial skin. It is compatible with ExifPrint.

PhotoRecord (Windows)

You can create fun and unique photo albums with a click of your mouse. It is compatible with ExifPrint.

For more information on the applications, refer to the Photo Application Guide.

■ BJ Printer Driver Systems Requirements

For Windows

- Use a computer on which Windows XP, Windows 2000, Windows Me or Windows 98 can operate.
- USB interface
- CD-ROM drive
- Available hard-disk space for printer driver installation

Windows XP/Windows 2000: 50MB

Windows Me/Windows 98: 15MB

For Macintosh

- Use a Macintosh series computer equipped with USB interface on which Mac OS X v.10.2.1 or later can operate.
- Available hard-disk space for printer driver installation
Mac OS X v.10.2.1 or later: 100 MB
- The following functions are not supported when using Mac OS X v.10.2.1 or later:
 - Manual Duplex Printing
 - Poster Printing
 - Fit-to-Page Printing
 - Booklet Printing
 - Reverse Order Printing (supported with Mac OS X v.10.3.x)
 - Photo Optimizer Pro

Additional Systems Requirements for Electronic Manuals

- Pentium® 75 MHz equivalent or higher processor (Pentium® 133 MHz equivalent or higher processor recommended)
- 2x or higher CD-ROM drive (4x or higher recommended)
- 15 MB of available hard-disk space (when installing the electronic manuals)
- Windows: Microsoft® Internet Explorer 5.0 or later
- Mac OS: Microsoft® Internet Explorer 5.0 or later, Safari 1.0 or later

Troubleshooting


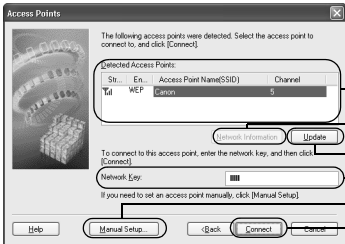
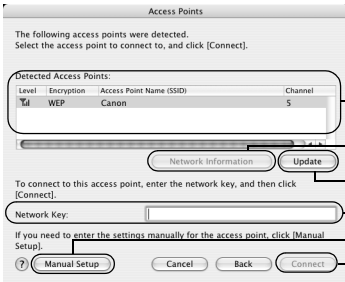
Cause and measures on possible troubles in the setup procedure are explained here.





➡ **Note**



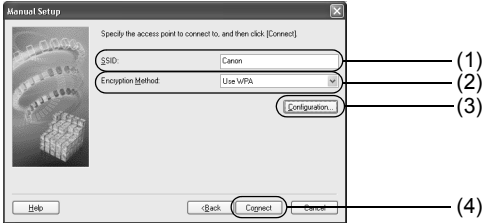
If you do not find a description for your trouble here, refer to “Troubleshooting” on the *User’s Guide* and the *Network Guide*. For details on viewing the guides, see “How to View the User’s Guide/Network Guide” on page 68.


- The computer cannot communicate with the printer or an access point between rooms or floors, page 71
- Cannot set up the printer, page 71
- When encryption (WEP or WPA) is enabled, the printer cannot be set up again, page 71
- The Access Points dialog box is displayed during setup, page 72
- The target access point is not detected, or you want to specify access point settings manually, page 74
- Cannot connect with an access point to which a WEP key is set (You forgot the WEP key), page 75
- How to set a WEP key, page 76
- Cannot connect to the target access point, page 76
- The Set Printer IP Address / Printer IP Address Setup dialog box is displayed during setup, page 77
- Checking the IP address or the MAC address of the printer, page 78
- Checking the IP address of the computer, page 78
- The Printer Network Setup dialog box is displayed during setup, page 79
- The printer cannot communicate with the access point in a wireless LAN, page 80
- Cannot communicate with the printer after applying MAC address filtering or entering a WEP key to the access point, page 80
- No printer is detected after the network settings are changed in Windows, page 81
- The Enter Password / Password Input dialog box is displayed during setup, page 81
- The admin password was forgotten, page 81
- Changing the port name, page 81
- Cannot print out the network setting information, page 81
- Using the printer in a multiple access point setup, page 81
- Re-setting the printer whose setup was canceled halfway, page 82
- Confirming the version of Windows XP, page 82

Problem	Possible Cause and Measures
The computer cannot communicate with the printer or an access point between rooms or floors	Although wireless communication between rooms or floors is possible, the wireless communication quality may become poor. The wall must be made of a material that allows radio waves to pass through. If the wall material prevents communication, set the printer in the same room as the access point.
Cannot set up the printer	<p>Confirm the following:</p> <ul style="list-style-type: none"> • The USB cable is connected to the correct port. • The printer driver is already installed. • The printer is turned on. If it is, turn it off and then turn it on again. • Printing via USB connection is possible. If you cannot print through USB connection, see “Setting Up the Printer and the Computer” on page 16 and connect the USB cable properly. • The firewall feature of a security software may prevent proper setup or communication over a network. When setting up the printer for use over a network, disable the firewall of your security software. Turn it back on when setup is complete. If you are using Windows XP Service Pack 1 or earlier and you have Internet Connection Firewall enabled, a dialog box asking you for confirmation to disable the firewall will appear during setup. Click Yes to disable the firewall. When setup is complete, the firewall will be re-enabled automatically. To confirm the version of your Windows XP, see “Confirming the version of Windows XP” on page 82. Some network configuration programs will enable a firewall by default. Check the settings of any such software. • The printer, the computer, and the access point are on the same network segment. Do not use the printer through a router. <p>Macintosh</p> <ul style="list-style-type: none"> • The priority of the network to be used is set high. If not, select System Preferences - Network and select Network Port Configurations from the Show pop-up menu, and modify the priority of the network.
When encryption (WEP or WPA) is enabled, the printer cannot be set up again	Initialize the printer's network settings to default (see “Initializing Network Settings” on page 68) and perform setup again with the USB cable connected.



Problem	Possible Cause and Measures
<p>The Access Points dialog box is displayed during setup</p>	<p>The Access Points dialog box is displayed when:</p> <ul style="list-style-type: none"> - No access point is detected. - Multiple access points are detected. - Entry of a network key is necessary to communicate with the target access point. <p> Important</p> <p>If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.</p> <p>Follow the instructions below to detect access points.</p> <ul style="list-style-type: none"> • When no access point is detected It may take several minutes to detect access points. For details, see “The printer cannot communicate with the access point in a wireless LAN” on page 80. • When multiple access points are detected The printer may communicate with other access points used in the vicinity. Select the target access point, then click Connect. You can also click Manual Setup to specify the settings of the target access point manually on the Manual Setup dialog box. <p>Windows</p>  <p>Macintosh</p> 


Problem	Possible Cause and Measures
<p>The Access Points dialog box is displayed during setup</p> <p>(Continued)</p>	<p>(1) Detected Access Points</p> <p>The signal strength, network key (WEP or WPA) usage, network name (SSID), and the used channel are displayed.</p> <p>The signal strength is indicated by the number of bars displayed with the antenna.</p> <p> :Good</p> <p> :Fair</p> <p> :Poor</p> <p>Whether a network key is used or not is indicated as follows.</p> <p>Blank: Not used</p> <p>WEP: WEP key used</p> <p>WPA: WPA key used</p> <p>(2) Network Information</p> <p>The Network Information dialog box is displayed to confirm network settings when your access point or your printer cannot be detected automatically during setup for use over the network. This button is enabled when an access point was not detected or could not be connected.</p> <p>(3) Update</p> <p>Click to search for access points again when the target access point is not detected.</p> <p>Make sure that the access point is powered on.</p> <p>(4) Network Key</p> <p>If a password (WEP key) or a WPA key is set to the target access point, enter the pre-shared key or the passphrase in the same format and length as the access point. The network key can be entered when an access point using WEP or EAP/PSK is selected.</p> <p>(5) Manual Setup</p> <p>Click when the target access point is not detected, or to specify settings of the access point manually. The Manual Setup dialog box is displayed. If your access point is using the stealth / closed network feature, specify settings here.</p> <p>(6) Connect</p> <p>Connects to the selected access point.</p> <p> Important</p> <ul style="list-style-type: none"> When an access point using WPA-802.1x (Windows) or WPA Enterprise (Macintosh) is selected, the Connect button is grayed out and cannot be clicked. When an access point using WPA-PSK (Windows) or WPA Personal (Macintosh) with type of dynamic encryption set to AES is selected, the Connect button can be clicked but is not operable.


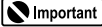
Problem	Possible Cause and Measures
<p>The target access point is not detected, or you want to specify access point settings manually</p>	<p>If the target access point is not detected or if you want to specify access point settings manually, click Manual Setup in the Access Points dialog box.</p> <p> Important</p> <p>If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.</p> <p> Windows</p> <p>Set the target access point and click Connect.</p>  <p>Enter the settings for the target access point.</p> <p>(1) SSID</p> <p>Enter the SSID set to the access point.</p> <p>SSID is also called ESS-ID. For details, refer to the manual of your access point.</p> <p>(2) Encryption Method</p> <p>Select an encryption method from Do Not Use, Use WEP, or Use WPA.</p> <p>When using a network key, communication is encrypted using the string you specified. If the key has been set to the access point but not to the printer, the setting window is displayed.</p> <p>For details on WEP setting, refer to “WEP Details dialog box” on the <i>Network Guide</i>. For details on WPA setting, refer to “Changing the WPA Detailed Settings” on the <i>Network Guide</i>.</p> <p>(3) Configuration</p> <p>The detailed settings dialog box is displayed. WEP or the WPA key selected in Encryption Method can be confirmed and changed.</p> <p>(4) Connect</p> <p>Connects to the specified access point.</p>

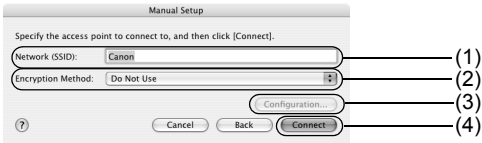Problem	Possible Cause and Measures
<p>The target access point is not detected, or you want to specify access point settings manually (Continued)</p>	<div data-bbox="348 108 460 140">Macintosh</div> <p data-bbox="348 140 762 164">Set the target access point and click Connect.</p> <div data-bbox="348 177 829 320"></div> <p data-bbox="348 347 748 371">Enter the settings for the target access point.</p> <p data-bbox="348 379 533 403">(1) Network (SSID)</p> <p data-bbox="378 403 841 427">Enter the network ID (SSID) set to the access point.</p> <p data-bbox="378 435 1042 491">SSID is also called ESS-ID. For details, refer to the manual of your access point.</p> <p data-bbox="348 499 572 523">(2) Encryption Method</p> <p data-bbox="378 523 1042 627">Select an encryption method from Do Not Use, Use Password (WEP), or Use WPA. When using a network key, communication is encrypted using the string you specified. If the key has been set to the access point but not to the printer, the setting window is displayed.</p> <p data-bbox="378 635 1028 707">For details on WEP setting, refer to “WEP Details dialog box” on the <i>Network Guide</i>. For details on WPA setting, refer to “Changing the WPA Detailed Settings” on the <i>Network Guide</i>.</p> <p data-bbox="348 715 518 738">(3) Configuration</p> <p data-bbox="378 738 1016 794">The detailed settings dialog box is displayed. The WEP or the WPA key selected in Encryption Method can be confirmed and changed.</p> <p data-bbox="348 802 465 826">(4) Connect</p> <p data-bbox="378 826 729 850">Connects to the specified access point.</p>
<p>Cannot connect with an access point to which a WEP key is set (You forgot the WEP key)</p>	<p>For information on how to set up the access point, refer to the manual provided with the access point. Make sure that the computer and the access point can communicate, then set up the printer to match the settings of the access point.</p>



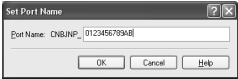
Problem	Possible Cause and Measures
How to set a WEP key	<p>Refer to the manual provided with the access point and check the access point settings.</p> <p>Confirm that the computer and the access point can communicate with each other.</p> <p>Then set up the printer to match the settings of the access point.</p> <p>When using WEP, the key length, key format, the key to use (out of 1 to 4), and the authentication method must match among the access point, the printer, and the computer.</p> <p>For an access point using the WEP method such as the following, use the hexadecimal key format for the printer.</p> <p>Example:</p> <p>Using 64 bit key length, when the string "canon" is entered, an access point generates the following codes.</p> <p>Key 1: C9 42 28 B3 AE</p> <p>Key 2: 87 C0 FB 05 6B</p> <p>Key 3: 9A 15 FB F8 F3</p> <p>Key 4: 62 56 67 58 44</p> <p>To communicate with such an access point, the key to use must be set to the same key number as selected in the access point, and its code must be set to the printer in hexadecimal format.</p> <p>Normally, select Auto for the authentication method. If you want to specify the method manually, select Open System or Shared Key according to the setting of the access point.</p> <p>➡ Note</p> <p>When the AirPort Base Station is used as an access point:</p> <ul style="list-style-type: none"> • To confirm the password (WEP key), use the AirPort Admin Utility. For details, refer to its online help. • Select 64 bit if 40 bit WEP is selected for the key length in the AirPort Base Station.
Cannot connect to the target access point	<p>Confirm the following;</p> <ul style="list-style-type: none"> • The network name / SSID of the target access point and the printer are identical. For information on how to set up a WEP key, see "How to set a WEP key" on page 76. • Infrastructure is selected as the network type. • If a network key is set to the access point, set the printer to match it. • If MAC address filtering is set to the access point, register the MAC address of the printer or disable MAC address filtering. • The wireless channel to be used may be limited depending on wireless network devices installed in the computer. Refer to the manual provided with your computer or your wireless network device. • Make sure that the channel set to the access point is valid to communicate with the computer, confirmed above. If not, change the channel set to the access point. • When connecting to an AirPort Base Station, use alphanumeric characters for the name of the network (SSID). • Make sure that there is no barrier or obstacle between the access point and the printer.

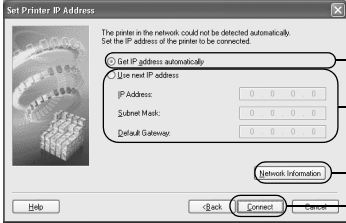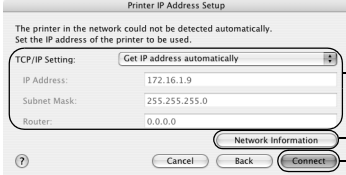Problem	Possible Cause and Measures
<p>The Set Printer IP Address / Printer IP Address Setup dialog box is displayed during setup</p>	<p>The following dialog box is displayed if no printer was detected on the network. Specify an IP address to detect the target printer.</p> <div data-bbox="348 164 822 427">  </div> <p>(1) Get IP address automatically Detects the printer automatically. If automatic printer detection fails, check the network settings and your network connection.</p> <p>(2) Use next IP address Select this check box to manually specify the IP address for the printer to detect.</p> <p>IP Address/Subnet Mask/Default Gateway Enter each value to specify a fixed IP address when Use next IP Address is selected.</p> <p>(3) Network Information The Network Information dialog box is displayed to confirm network settings when your access point or your printer cannot be detected automatically during setup for use over the network. This button is enabled when an access point was not detected or could not be connected.</p> <p>(4) Connect Searches for the printer with the specified settings.</p> <div data-bbox="348 895 826 1110">  </div> <p>(1) TCP/IP Setting Select Get IP address automatically or Use next IP address. Select Get IP address automatically to search for the target printer automatically. If it fails, check the network settings and the network connection.</p> <p>IP Address/Subnet Mask/Router Enter each value to specify a fixed IP address when Use next IP address is selected.</p> <p>(2) Network Information The Network Information dialog box is displayed to confirm network settings when your access point or your printer cannot be detected automatically during setup for use over the network. This button is enabled when an access point was not detected or could not be connected.</p> <p>(3) Connect Searches for the printer with the specified settings.</p>

Problem	Possible Cause and Measures
Checking the IP address or the MAC address of the printer	<p>To check the IP address or the MAC address of the printer, print out the printer setup information or use BJ Network Tool.</p> <p>For information on how to print out the printer network setting information, "Printing and Initializing Network Settings" on page 67.</p> <p>To display the Network Information dialog box, in the BJ Network Tool, select Network Information from the View menu.</p>
Checking the IP address of the computer	<p>To check the IP address assigned to the computer, follow the procedure below.</p> <p>Windows</p> <ul style="list-style-type: none"> • When using Windows XP/Windows 2000 <ol style="list-style-type: none"> 1 From the Start menu, select (All) Programs, Accessories, and then Command Prompt. 2 Enter "ipconfig" and press the Enter key. The IP addresses of the network devices installed in your computer are displayed. • When using Windows Me/Windows 98 <ol style="list-style-type: none"> 1 From the Start menu, select Run. 2 Enter "winipcfg" in the Name text box and click OK. Select the network device to display the IP address. <p>Macintosh</p> <ol style="list-style-type: none"> 1 From the Apple menu, select System Preferences, and then Network. 2 From the Show pop-up menu, select the interface to use. <p> Important</p> <p>Select AirPort when using wireless LAN.</p> <ol style="list-style-type: none"> 3 Select the TCP/IP tab. The currently assigned IP address is displayed.

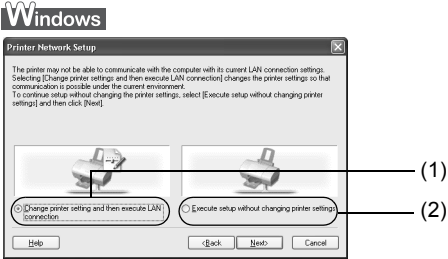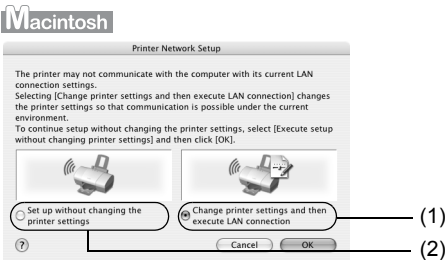Problem	Possible Cause and Measures
<p>The Printer Network Setup dialog box is displayed during setup</p>	<p>The Printer Network Setup dialog box is displayed in the following cases.</p> <ul style="list-style-type: none"> - when you are re-setting a printer whose setup was canceled halfway - when you changed the network settings - when you are already using a printer over a wireless LAN <p>If you canceled setup or changed the network settings, perform network setup again.</p> <div data-bbox="348 279 795 539">  </div> <p>(1) Change printer setting and then execute LAN connection The printer network settings will be changed to enable communication under the current network settings.</p> <p>(2) Execute setup without changing printer settings Continues computer setup with the settings specified to the printer. Select this when you are not currently connected to a network but want to set up the computer with the settings specified to the printer.</p> <p>➔ Note After setup, confirm that the printer and the computer (or the access point, when using wireless LAN) can communicate with each other. If not, perform network setup again.</p> <div data-bbox="348 869 795 1129">  </div> <p>(1) Change printer settings and then execute LAN connection The printer network settings will be changed to enable communication under the current network settings.</p> <p>(2) Set up without changing the printer settings Continues computer setup with the settings specified to the printer. Select this when you are not currently connected to a wireless LAN but want to set up the computer with the settings specified to the printer.</p> <p>➔ Note After setup, confirm that the printer and the computer (or the access point, when using wireless LAN) can communicate with each other. If not, perform network setup again.</p>

Problem	Possible Cause and Measures
The printer cannot communicate with the access point in a wireless LAN	<ol style="list-style-type: none"> 1 Click Update to search for access points again from the Access Points dialog box. 2 If the access point is still not detected, move the printer closer to the access point or remove any obstacles, and then click Update. 3 If the access point is still not detected, click Manual Setup to specify the settings of the access point in the Manual Setup dialog box, and then click Connect. 4 Make sure that the computer and the access point can communicate with each other. For details, see "Checking if the computer and the printer (access point) can communicate with each other" on the <i>Network Guide</i>. 5 Disconnect the power cord of the access point, plug in the cord again, and then click Update. <ul style="list-style-type: none"> • Access point settings For information on how to modify the settings of the access point, see the manual provided with the access point. When MAC address filtering is set to the access point, register the MAC address of the printer or disable MAC address filtering. When the access point does not permit SSID broadcasting, or if the stealth function / closed network is enabled, enter the network name (SSID), etc, to the printer manually. When an SSID or a network key is set to the access point, enter the identical SSID or network key as those set to the access point. SSID is case-sensitive. For information on how to set WEP, see "How to set a WEP key" on page 76. • Wireless channels Computers with a built-in wireless network card may restrict the wireless channels it can use. Check the channel available to the wireless network card. For information on how to check wireless channel, see the manual provided with the computer or the wireless network card. Make sure that the wireless channel the access point is using is one that the computer supports. If not, change the wireless channel set to the access point to one supported by the computer. • Location Make sure that there is no barrier or obstacle between the access point and the printer.
Cannot communicate with the printer after applying MAC address filtering or entering a WEP key to the access point	<ul style="list-style-type: none"> - Refer to the manual provided with the access point to confirm the access point setting. Make sure that the computer and the access point can communicate with each other under this setting. - If you are performing MAC address filtering at the access point, confirm that the MAC addresses for both the computer and the printer are registered. - If you are using a WEP key, make sure that the key for the computer and the printer matches that set to the access point. - Besides the WEP key itself, the key length, key format, the key ID to use, and the authentication method must match among the printer, the access point, and the computer. - Normally, select Auto for the authentication method. If you want to specify the method manually, select Open System or Shared Key according to the setting of the access point.

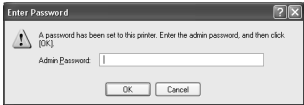Problem	Possible Cause and Measures
Windows No printer is detected after the network settings are changed in Windows	Wait until the IP address is assigned to the computer. You may need to restart your computer. When you are using Windows Me or Windows 98, you need to restart the computer. Search for the printer again after confirming a valid IP address is assigned to the computer.
The Enter Password / Password Input dialog box is displayed during setup	<p>The following dialog box is displayed if an administrator password is set to the printer which has already been set up.</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> Windows  </div> <div style="text-align: center;"> Macintosh  </div> </div> <p>Admin Password</p> <p>Enter the administrator password you have set. The administrator password consists of alphanumeric characters and is no longer than 32 characters. The password is case-sensitive.</p> <p>For security, your entry will be displayed by “*” (asterisks) for Windows and “•” (bullets) for Macintosh.</p>
The admin password was forgotten	Restore the printer setting to factory default. All settings previously set will be lost after initialization. Set up the printer again to use it. For details, see “Printing and Initializing Network Settings” on page 67.
Windows Changing the port name	<p>To change the port name, click Set Port Name in the Add Port dialog box.</p> <p>The Set Port Name dialog box is displayed, where you specify the port name. When you have 2 or more printers, you may want to change the port name for identification.</p> <div style="text-align: center;">  </div> <p>Port Name</p> <p>Port names should consist of alphanumeric characters and be no longer than 24 characters (12 characters under Windows Me or Windows 98), excluding the prefix. The port name includes the fixed prefix “CNBJNP_”, which you do not need to enter.</p>
Cannot print out the network setting information	See “Printing and Initializing Network Settings” on page 67 to print out printer setting information. If it fails, use BJ Network Tool or Network Configuration to confirm the network settings from the computer.
Using the printer in a multiple access point setup	<p>Confirm the following;</p> <ul style="list-style-type: none"> • The access point to be used can communicate with the printer and the computer. • Under Windows XP, the priority of the access point is set to highest in the Preferred networks list displayed by clicking the Wireless Networks tab in the Wireless Network Connection Properties dialog box. • The wireless channel of the access point is far enough away with those of other access points. <p>For more information, see the manual provided with the access point.</p>

Problem	Possible Cause and Measures
Re-setting the printer whose setup was canceled halfway	Restore the printer to the factory settings and set up the printer again. For details, see "Printing and Initializing Network Settings" on page 67. For setup procedures, see "Setting Up the Printer and the Computer" on page 16.
Confirming the version of Windows XP	<p>If you are using Windows XP, you may need to confirm your system version to configure the network setting of your computer.</p> <p>To check the version of Windows XP, follow these steps.</p> <ol style="list-style-type: none"> 1 Right click My Computer from the Start menu and select Properties. System Properties will be displayed. 2 Confirm that the General tab is displayed. 3 Confirm your Windows XP version under System.

Conformity declaration for R&TTE

CE 0560 !

English	Hereby, Canon, declares that this PIXMA iP4000R is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Finnish	Canon vakuuttaa täten että PIXMA iP4000R tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Dutch	Hierbij verklaart Canon dat het toestel PIXMA iP4000R in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG
	Bij deze verklaart Canon dat deze PIXMA iP4000R voldoet aan de essentiële eisen en aan de overige relevante bepalingen van Richtlijn 1999/5/EC.
French	Par la présente Canon déclare que l'appareil PIXMA iP4000R est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE
	Par la présente, Canon déclare que ce PIXMA iP4000R est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables
Swedish	Härmed intygar Canon att denna PIXMA iP4000R står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Danish	Undertegnede Canon erklærer herved, at følgende udstyr PIXMA iP4000R overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF
German	Hiermit erklärt Canon, dass sich dieser/diese/dieses PIXMA iP4000R in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet". (BMW i)
	Hiermit erklärt Canon die Übereinstimmung des Gerätes PIXMA iP4000R mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 1999/5/EG. (Wien)

Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Canon ΔΗΛΩΝΕΙ ΟΤΙ PIXMA iP4000R ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ
Italian	Con la presente Canon dichiara che questo PIXMA iP4000R è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Spanish	Por medio de la presente Canon declara que el PIXMA iP4000R cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE
Portuguese	Canon declara que este PIXMA iP4000R está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Malti	Hawnhekk, Canon, jiddikjara li dan PIXMA iP4000R jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC

Regulatory Information

For 110-120V, 50/60Hz model

Color Printer Model: K10245 (Contains IC 498C-K30242)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of a shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A., Inc.
One Canon Plaza
Lake Success, NY 11042
1-516-328-5600

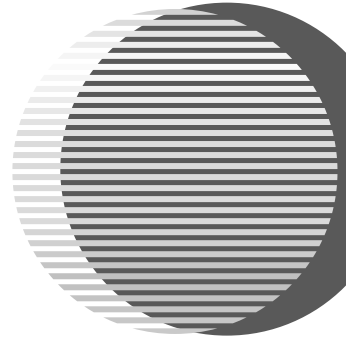

The following ink tanks are compatible with iP4000R.
For details on ink tank replacement, refer to “Print Head Maintenance” in this guide.



BCI-6BK



BCI-3eBK



BCI-6Y



BCI-6M



BCI-6C