 
 


1 Unpack the Printer

 
- Carefully remove all items from the box.

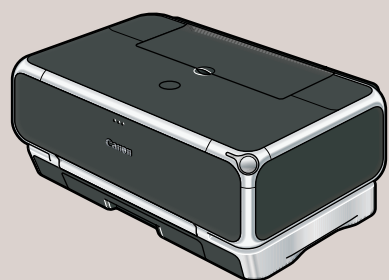


PIXMA iP5000 Series
Photo Printer

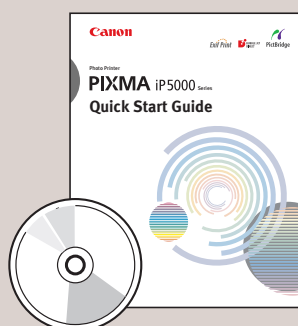


Documentation and
Software Kit

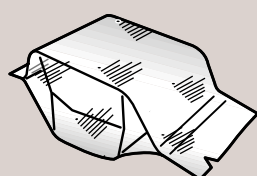

PIXMA iP5000 Series
Print Head

 


Power Cord

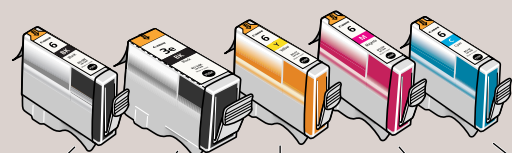 


BCI-6BK Black
BCI-3eBK Black
BCI-6Y Yellow
BCI-6M Magenta
BCI-6C Cyan
Ink Tanks

2 Prepare the Printer

 
- Remove all shipping tape and clear plastic from the printer.
- Plug the power cord into the back of the printer and connect the other end to a power outlet. Press the POWER button. The printer will initialize.

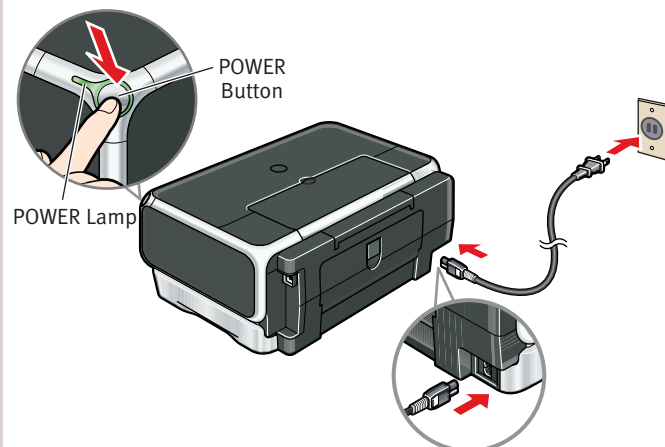

 
- Lower the front cover. Raise the top cover. Lower the inner cover.

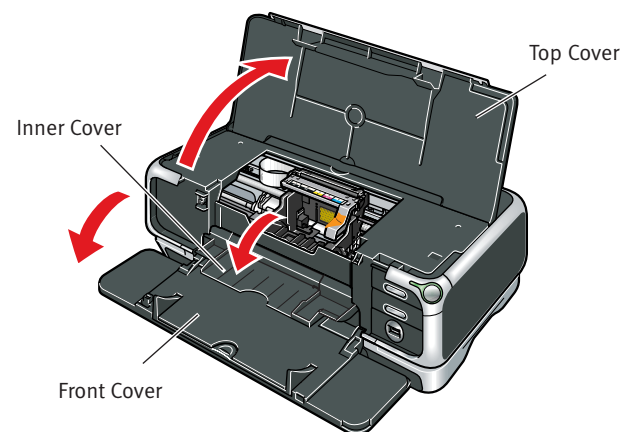

 - The print head holder automatically moves to the center. Remove the protective tape.

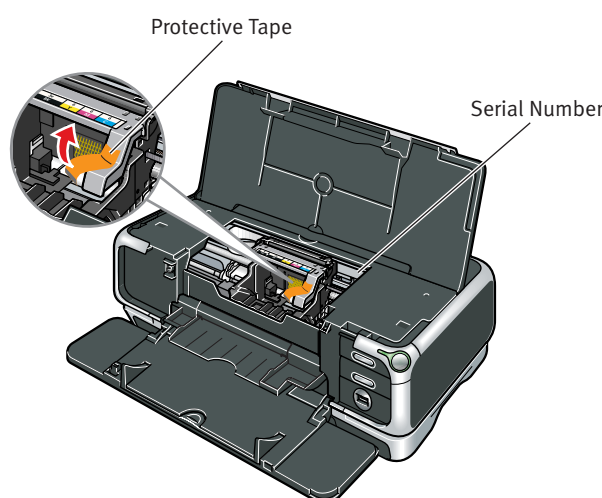


 - Write down the serial number located to the right of the print head holder. You will need this later to register the product.

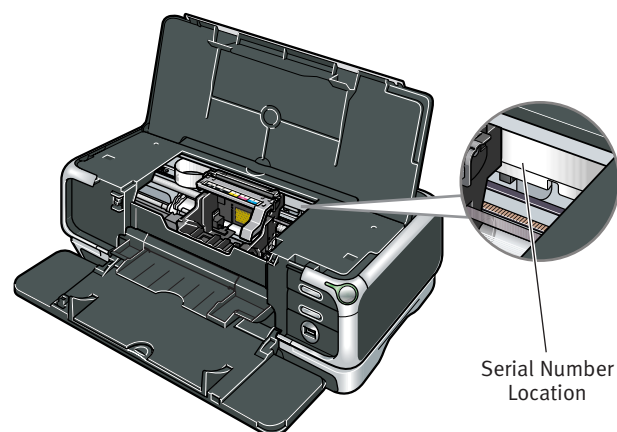


3 Install the Print Head

 - Remove the print head from its package.

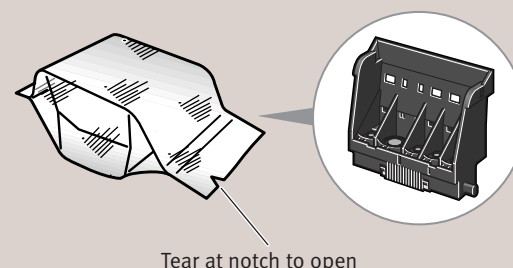


- Remove the orange protective cap from the print head.

 
NOTE: Do not touch the print head nozzles and the electrical contacts.

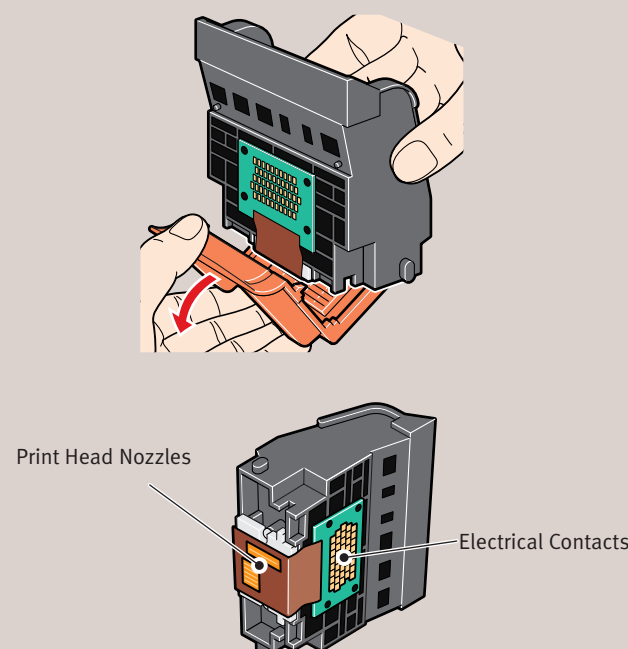


- Raise the print head lock lever.

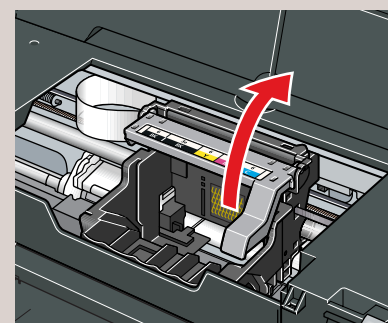 

 - Slide the print head into the holder. The print head will rest at a slight angle.

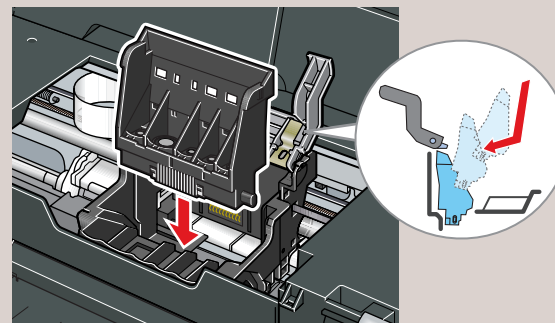

 - Lower the print head lock lever and press it down until it clicks into place.

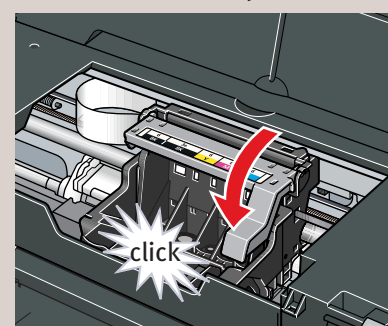


4 Install the Ink Tanks

- Peel back the orange tab and completely remove the plastic wrapper from the Cyan Ink Tank (BCI-6C).




- Twist off and discard the orange protective cap.

 
NOTE: To avoid spilling ink, never press on the sides of an ink tank.

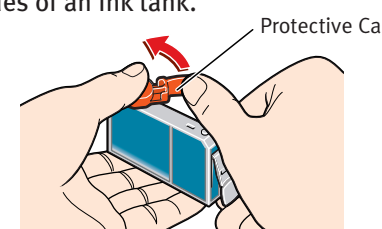

 - Insert the ink tank into the correct slot. (Refer to the color guide on the print head lock lever.) Press down until the ink tank clicks into place.

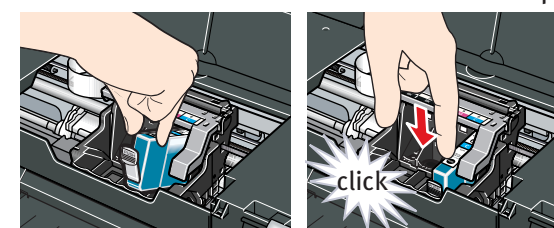


 - Insert the remaining four ink tanks into their assigned slots.

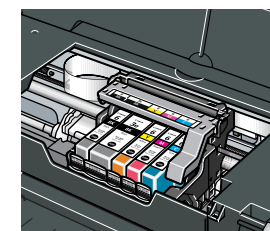

- Close (a) the inner cover and then (b) the top cover. Lift open the paper support and extend the paper output tray.

 IMPORTANT: Be sure to close the inner cover completely, or the paper will not feed properly.

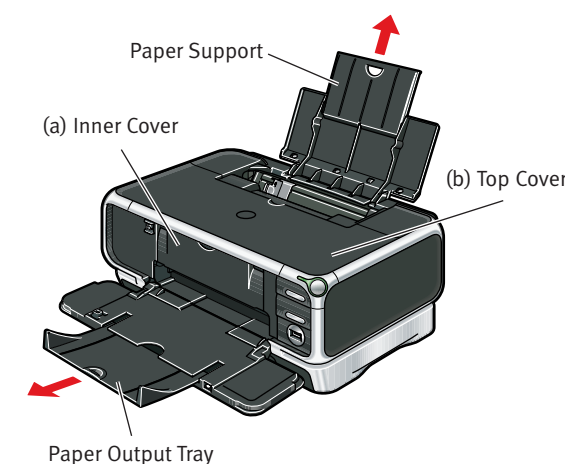


NOTE: The printer will perform a print head cleaning. Wait until the POWER lamp displays a steady green light before proceeding.

5 Connect the Printer and Load Paper


IMPORTANT: Be sure the printer is off before continuing, or the computer will attempt to install the printer driver before the printer is ready.

- TURN THE PRINTER OFF.

 - Connect one end of the USB cable to the computer, the other to the printer.

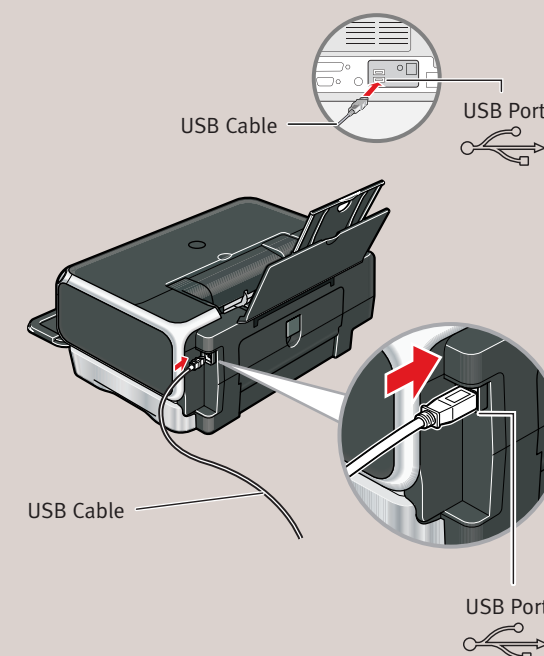

 - Remove the shipping tape from the paper guide. Pinch the paper guide and slide it to the left. Load a few sheets of blank paper into the auto sheet feeder, then slide the paper guide toward the left edge of the paper.

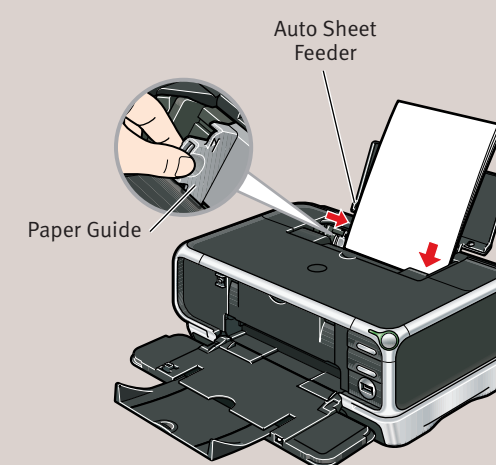

IMPORTANT: Print Head Alignment (Step 6) requires that 8.5" x 11" paper is loaded in the Auto Sheet Feeder (top paper feeder).

Continue with Step 6
on side two.

 


6 Windows® Printer Driver Installation and Print Head Alignment

- 1 Be sure to **TURN THE PRINTER OFF** before continuing.

NOTE: For Windows® XP or Windows 2000, log on to Windows as a member of the Administrators group before continuing.


IMPORTANT: If you see the Found New Hardware Wizard, click Cancel.

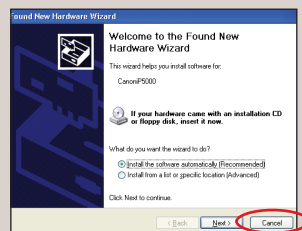

- 2 Close any open software applications including anti-virus, computer security and other software. Then insert the Setup Software & User's Guide CD-ROM. The setup program should run automatically.


NOTE: If the setup program does not run, click **Start**, then **Run**, then type **D:\msetup.exe**, where **D** is your CD-ROM drive.

 - 3 When the main menu appears, click **Easy Install** and follow on-screen instructions.

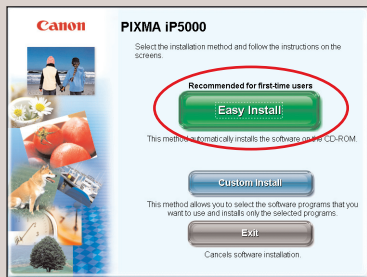

NOTE: Select **Easy Install** in order to install the application software, electronic manual and printer driver. Select **Custom Install** in order to choose the options you would like to install.

 - 4 When the "Printer Connection" window appears, **TURN THE PRINTER ON**. The software will begin identifying the printer port being used.

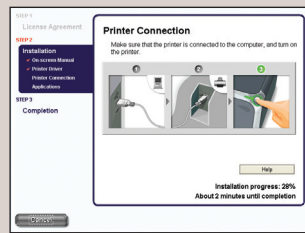


IMPORTANT: If your computer cannot detect a printer port, click **Help** and refer to the online instructions.

- 5 Follow the on-screen instructions to install the remaining software. When the "Installation Results" window appears, click **OK**.

- 6 Follow the on-screen instructions to register your product.

 - 7 When the "Print Head Alignment" screen appears, ensure that letter size paper is loaded in the auto sheet feeder (top paper feeder). Click **Execute** and follow on-screen instructions.

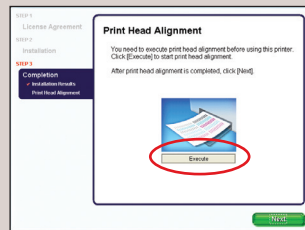

NOTE: Print head alignment will take several minutes to complete.

- 8 When the "Installation completed successfully" screen appears, click **Exit**.

NOTE: When **Restart** is displayed, ensure the **Restart the system now (recommended)** check box is selected, then click **Restart**.

 
6 Macintosh® Printer Driver Installation and Print Head Alignment

NOTE: For Mac OS 9.x printer driver instructions, refer to the "Appendix" of the *Quick Start Guide*.


- 1 Turn on your Mac and your printer and insert the "Setup Software & User's Guide" CD-ROM.

NOTE: Log on as an Administrator before continuing.

- 2 Double-click the CD-ROM icon, then the **Mac OS X** folder, then the **Printer Driver** folder.

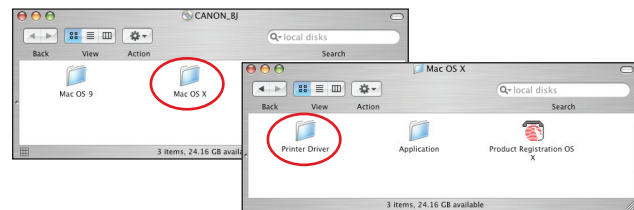

 
- 3 Double-click the **PIXMA iP5000 290.pkg** icon, then follow the on-screen instructions.

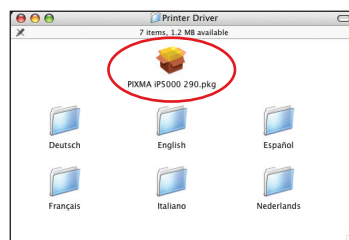

NOTE: When the "Authenticate" screen appears, enter your administrator name and password. If you do not know your administrator name or password, click **?**, then follow the on-screen instructions.


- 4 When the message "The software was successfully installed" appears, click **Restart**.

 - 5 When a message asking you to align the print head appears, click **OK**.




- 6 Start the print head alignment procedure.

 - a. Double-click the **Macintosh HD** icon, then **Applications** folder. Double-click the **Utilities** folder, then the **Printer Setup Utility** icon.

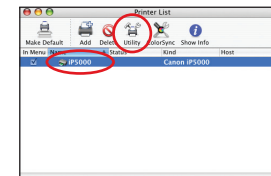


If the printer is not displayed in the **Printer List**, you need to add it on the list. For details, follow the instructions in **Mac Help**.

 - c. Select **iP5000** and click **Maintenance**.

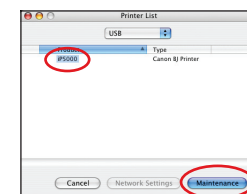

- d. Ensure that letter size paper is loaded in the auto sheet feeder (top paper feeder).

 
- e. Click the down-arrow to select **Test Print**. Click the **Print Head Alignment** icon and follow the on-screen instructions.

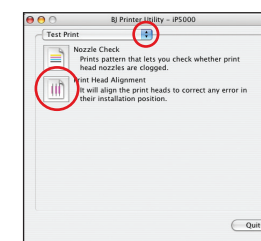

NOTE: Print head alignment will take several minutes to complete.

- 7 Click **Quit** to exit the BJ Printer Utility. Print head alignment is now complete.

 - 8 Access your CD-ROM again. From the **Application** folder on the CD-ROM, double-click on the software to be installed.

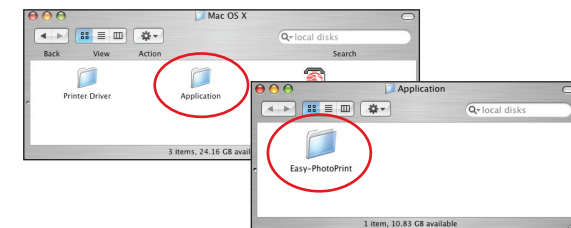

- 9 Follow the on-screen instructions. When the "Installation is completed" screen appears, click **OK**.

 
- 10 Double-click on the **Product Registration** icon, found in the **Mac OS X** folder, to register your product.

7 Cassette Loading


NOTE: Loading paper in the cassette provides additional paper handling flexibility. For additional information visit the electronic *User's Guide*.

- 1 Push in the paper output tray and close the front cover.


- 2 Pull out the cassette from the bottom of the printer.

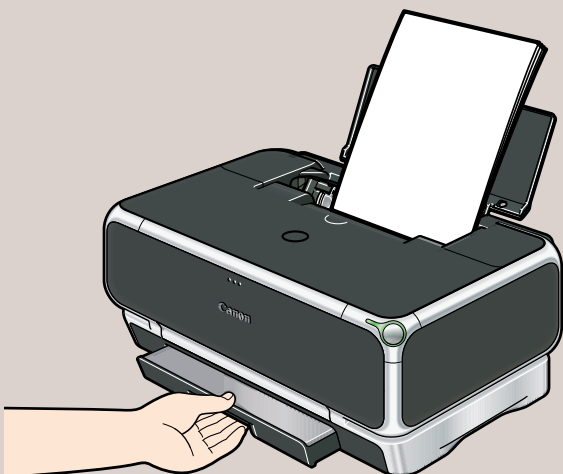


- 3 Remove the cover of the cassette.

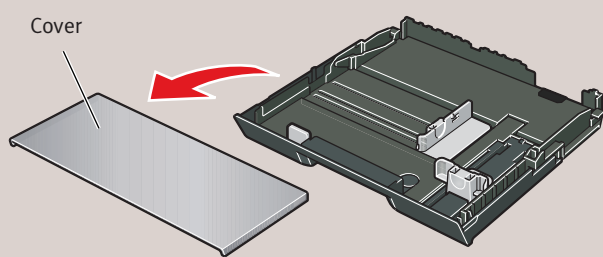 

 
NOTE: For letter-size (8.5" x 11") paper, push the tab and extend the tray.

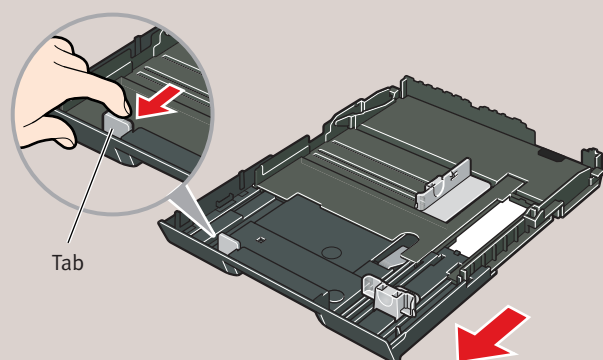

 
- 4 Slide the long edge paper guide to the left and the short edge paper guide toward you.

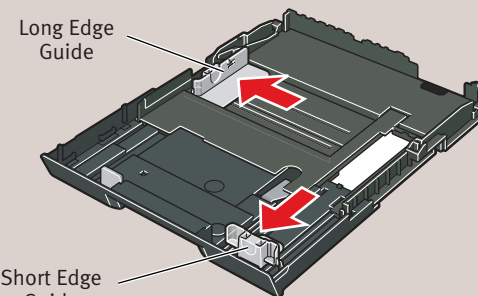

 
- 5 Load paper so that the top right corner touches the inside corner of the cassette. Adjust paper guides to the edges of paper.

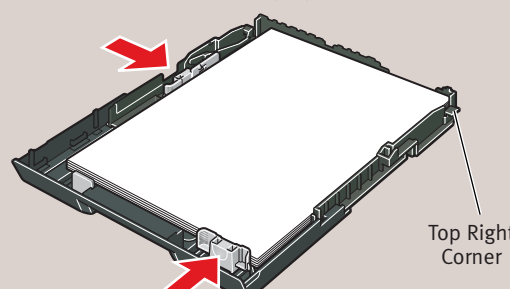

- 6 Replace the cover of the cassette.

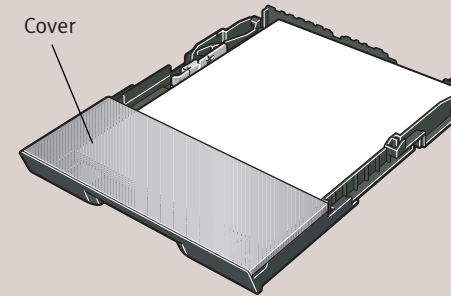 


 - 7 Insert cassette completely into the printer until it clicks into place.

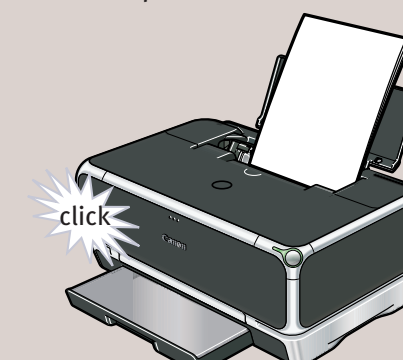

NOTE: For letter-size (8.5" x 11") paper, the front edge of the cassette will extend beyond the bottom of the printer.

 - 8 Lower the front cover and extend the paper output tray.

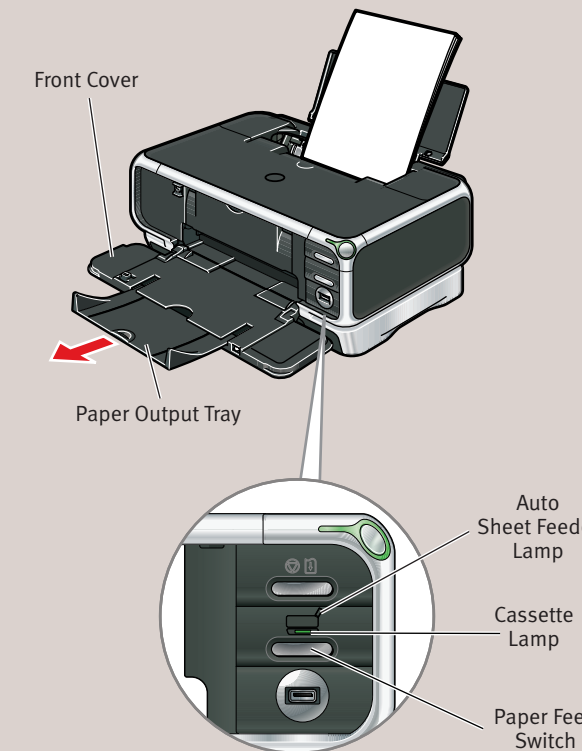

NOTE: When feeding paper from the cassette, press the paper feed switch so that the cassette lamp turns on.