

Additions and Corrections for the Basic Guide, Facsimile Guide and Set-Up Instructions for the Machine

Please note the following additions and corrections for the pages listed below in each manual.

Basic Guide

■P.2-22

"The Number of Output Sheets" of "face down" for "Plain Paper" and "Recycled Paper" should be corrected as follows:

Incorrect	Correct
approx. 100 sheets	approx. 80 to 100 sheets

■P.5-3

The following IMPORTANT statement should be added:



IMPORTANT

When you make copies immediately after connecting the power cord, the print quality may deteriorate. Make copies after making sure the sound of machine operation stops.

■P.5-7

The following statements should be added in "Adjusting the Color Balance" section: Please refer to this note when you use the color balance setting for color-copy.

When the preview image is yellow-looking.	Change the yellow to lower side, or change the magenta and cyan to higher side.
When the preview image is magenta-looking.	Change the magenta to lower side, or change the yellow and cyan to higher side.
When the preview image is cyan-looking.	Change the cyan to lower side, or change the yellow and magenta to higher side.
When the preview image is red-looking.	Change the yellow and magenta to lower side, or change the cyan to higher side.
When the preview image is green-looking.	Change the yellow and cyan to lower side, or change the magenta to higher side.
When the preview image is blue-looking.	Change the magenta and cyan to lower side, or change the yellow to higher side.

Note : Adjustment on the monotone area have an instant effect on your imaging.

■P.8-12

The following IMPORTANT statements should be added under step 13:



IMPORTANT

- When you make copies immediately after replacing a toner cartridge, the print quality may deteriorate. Make copies after making sure the sound of machine operation stops.
- When <INSERT * CARTRIDGE> still appears in the LCD after inserting a cartridge, disconnect and connect the power cord.
* Indicates either "C", "M", "Y", or "K".

■P.8-29

The following IMPORTANT statements should be added under step 7:




IMPORTANT

- When you make copies immediately after replacing the drum cartridge, the print quality may deteriorate. Make copies after making sure the sound of machine operation stops.
- When <INSERT DRUM> still appears in the LCD after inserting the cartridge, disconnect and connect the power cord.

Facsimile Guide

■P.1-2

The "Directory key" and "Coded Dial key" in the illustration of "One-Touch Panel Closed" should be switched as follows:

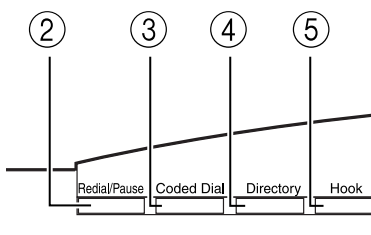

③ Coded Dial key

Press [Coded Dial], followed by a two-digit code to dial fax/telephone number registered for coded speed dialing.

④ Directory key

Enables you to search for fax/telephone numbers by the name under which they are registered for speed dialing, and then use the number for dialing.

Set-Up Instructions for the Machine

■P.5

Please refer to the following IMPORTANT statement before performing the step 5 on p.5:



IMPORTANT

When you install the toner cartridge "BLACK," follow the steps below:

- 1 Close the cartridge cover and lower the scanning platform.
- 2 Press [Menu] on the operation panel
→ ◀ or ▶ to select <10.MAINTENANCE> on the LCD → press [Set].
- 3 Press ◀ or ▶ to select <1.CHANGE CARTRIDGE> → press [Set]
→ <1.BLACK> → [Set].
- 4 Lift the scanning platform and open the cartridge cover → install the cartridge.