Canon

Fax Driver Guide

Fax Driver Ver. 3.95



Fax Driver Guide

| 🍤 Hov | w This Manual Is Organized |
|-----------|--|
| Chapter 1 | Before You Start |
| Chapter 2 | Getting Started |
| Chapter 3 | Fax Driver Options |
| Chapter 4 | Canon Cover Sheet Editor |
| Chapter 5 | Special Fax Driver Options |
| Chapter 6 | Appendix |
| | Includes information about additional software used with the fax driver and the index. |

Contents

| Preface | . v iii |
|-----------------------------------|----------------|
| How to Use This Manual | viii |
| Symbols Used in This Manual | viii |
| Buttons Used in This Manual | viii |
| Displays Used in This Manual | ix |
| Abbreviations Used in This Manual | x |
| Legal Notices | xi |
| Trademarks | x i |
| Copyright | xi |
| Disclaimers. | xii |

Chapter 1 Before You Start

| Introduction | .1-2 |
|--------------------------|------|
| Supported Canon Products | .1-2 |
| System Requirements | .1-5 |
| Where to Find Help | .1-7 |

Chapter 2 Getting Started

| Installing the Software |
|---|
| Standard Installation |
| Dynamic Installation |
| Alternate Fax Driver (Windows NT 4.0/2000/XP/Server 2003) |
| Using the Add Printer Wizard2-20 |
| USB Connection Installation (Windows 98/Me/2000/XP/Server 2003)2-22 |
| USB Standard Installation (Windows 98/Me/2000/XP/Server 2003) 2-22 |
| USB Installation Using the Add Printer Wizard (Windows |
| 98/Me/2000/XP/Server 2003) |
| Plug and Play Installation (Windows 98) |
| Plug and Play Installation (Windows Me) |
| Plug and Play Installation (Windows 2000) |
| Plug and Play Installation (Windows XP/Server 2003) |
| Installing the Canon Driver Information Assist Service |
| Updating the Existing Fax Drivers2-39 |
| Using the Installer |

| Using the Add Printer Wizard | 2-40 |
|--|------|
| Updating the Alternate Fax Driver (Windows NT 4.0/2000/XP/Server | |
| 2003) | 2-43 |
| Windows NT 4.0 | 2-43 |
| Windows 2000/XP/Server 2003 | 2-45 |
| Uninstalling the Fax Driver | 2-46 |
| Specifying the Installed Optional Fax Board | 2-48 |
| Specifying the Installed Fax Memory | 2-51 |

Chapter 3 Fax Driver Options

| Faxing a Document | 3-2 |
|--|--------|
| Sending a Document | 3-2 |
| Sending to a Remote Memory Box | 3-5 |
| Specifying Recipients | 3-9 |
| Adding a New Name and Fax Number | |
| Adding a Recipient from the Address Book | . 3-11 |
| Defining Address Book Entries | . 3-13 |
| Person (Single) Entry | . 3-13 |
| New Entry | . 3-14 |
| Edit Entry | . 3-17 |
| Delete Entry | . 3-18 |
| Group Entry | . 3-19 |
| New Group | . 3-19 |
| Edit Group | . 3-21 |
| Delete Group | . 3-23 |
| Registering Additional Address Books | . 3-24 |
| Attaching a Cover Sheet to a Fax | . 3-27 |

Chapter 4 Canon Cover Sheet Editor

| What Is the Cover Sheet Editor? | |
|-------------------------------------|-----|
| Installing the Cover Sheet Editor | 4-3 |
| Installation | 4-3 |
| Launching | 4-5 |
| Uninstalling | 4-6 |
| | |
| Opening, Saving, and Closing a File | |
| Opening, Saving, and Closing a File | |
| | 4-7 |
| Opening a File | |

| Saving a New File | 4-8 |
|--|------|
| Saving an Existing File | 4-9 |
| Closing a File | 4-9 |
| Creating an Original Cover Sheet | 4-10 |
| Inserting Text | 4-10 |
| Adjusting Text Properties | 4-11 |
| Font | 4-11 |
| Font Size | 4-11 |
| Font Color | 4-12 |
| Bold Formatting | 4-12 |
| Italic Formatting | 4-12 |
| Underlining | 4-12 |
| Aligning Text | 4-13 |
| Specifying Text Properties | 4-13 |
| Specifying Text Box Properties | 4-15 |
| Specifying Fields | 4-16 |
| Inserting Sender and Recipient Information Fields When Editing | |
| Text | 4-17 |
| Inserting Sender and Recipient Information Fields When Not Editing | |
| Text | |
| Inserting Repeating Fields | |
| Inserting Borders Between Repeating Fields | |
| Inserting Sheets to Send Field When Editing Text | |
| Inserting Sheets to Send Field When Not Editing Text | |
| Inserting Remark and Comment Fields When Editing Text | |
| Inserting Remark and Comment Fields When Not Editing Text | |
| Creating Objects | |
| Lines | 4-21 |
| Rectangles | |
| Rounded Rectangles | |
| Ovals | |
| Inserting Images. | |
| Editing Objects | |
| Selecting an Object | |
| Moving an Object within the Same Cover Sheet | |
| Moving an Object to a Different Cover Sheet. | |
| Resizing an Object | |
| Copying an Object by Dragging | |
| Copying an Object by Using Button or Menu Commands | 4-25 |

| Duplicating an Object4-26 | j |
|---|---|
| Deleting an Object | ; |
| Grouping Objects4-26 | ; |
| Specifying Object Properties4-27 | , |
| Arranging Objects4-28 | } |
| Changing the Order of Display4-28 | 3 |
| Aligning Multiple Objects4-29 |) |
| Specifying Grid Options |) |
| Showing Grids |) |
| Snapping Objects to Grid4-30 |) |
| Specifying Grid Properties4-30 |) |
| Printing a Cover Sheet4-33 | ; |
| Registering an Original Cover Sheet as a Template | ļ |

Chapter 5 Special Fax Driver Options

| Job Accounting Features |
|--|
| Job Accounting Overview5-2 |
| Specifying the ID and Password5-2 |
| Faxing with Job Accounting (Windows 98/Me)5-4 |
| Faxing with Job Accounting (Windows NT 4.0/2000/XP/Server 2003)5-5 |
| With Allow Password Setting Selected |
| With Allow Password Setting Not Selected |
| Setting the Fax Send Time5-7 |

Chapter 6 Appendix

| Additional Software | . 6-2 |
|---|-------|
| Canon Port Setting Tool | . 6-2 |
| Device Status Extension (Windows 2000/XP/Server 2003) | . 6-3 |
| Glossary | . 6-4 |
| Index | . 6-6 |

Preface

Thank you for purchasing this Canon product. Please read this manual thoroughly before operating the product in order to familiarize yourself with its capabilities, and to make the most of its many functions. After reading this manual, store it in a safe place for future reference.

How to Use This Manual

Symbols Used in This Manual

The following symbols are used in this manual to explain procedures, restrictions, handling precautions, and instructions that should be observed for safety.

Indicates operational requirements and restrictions. Be sure to read these items carefully in order to operate the product correctly, and to avoid damage to the product.

NOTE Indicates a clarification of an operation, or contains additional explanations for a procedure. Reading these notes is highly recommended.

Buttons Used in This Manual

The following button names are a few examples of how buttons to be clicked are expressed in this manual:

Buttons on Computer Operation Screens: [Button Name]

Examples: [OK]


[Next]

Displays Used in This Manual

Screen shots of computer operation screens used in this manual may differ from the ones you actually see, depending on the operating system and the model or options that come with your machine.

The buttons that you should click are marked with a _____, as shown below.

When multiple buttons can be clicked, they are highlighted and mentioned in the order in which they should be clicked.

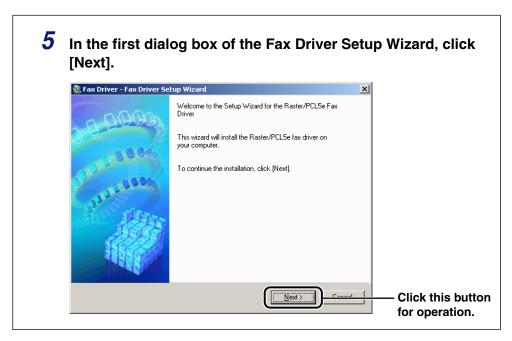

Abbreviations Used in This Manual

In this manual, product names and model names are abbreviated as follows:

| Microsoft [®] Windows [®] 98 operating system: | Windows 98 |
|---|---------------------|
| Microsoft® Windows® Millennium Edition operating system: | Windows Me |
| Microsoft [®] Windows NT [®] 4.0 operating system: | Windows NT 4.0 |
| Microsoft [®] Windows [®] 2000 operating system: | Windows 2000 |
| Microsoft [®] Windows [®] XP operating system: | Windows XP |
| Microsoft [®] Windows Server [™] 2003 operating system: | Windows Server 2003 |

Legal Notices

Trademarks

Canon, the Canon logo, imageRUNNER, imageCLASS, imagePASS, iR, LASER CLASS, and NetSpot are trademarks of Canon Inc.

Citrix, MetaFrame, and MetaFrame XP are trademarks of Citrix Systems, Inc. in the United States and other countries.

Microsoft, the Windows logo, Windows, and Windows NT are registered trademarks of Microsoft Corporation in the United States and other countries.

Windows Server is a trademark of Microsoft Corporation in the United States and other countries.

Novell, NDPS, and NetWare® are trademarks of Novell, Inc.

Other product and company names herein may be the trademarks of their respective owners.

Copyright

Copyright 2005 by Canon Inc. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system without the prior written permission of Canon Inc.

Disclaimers

The information in this document is subject to change without notice.

CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR AGAINST INFRINGEMENT OF ANY PATENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

Before You Start CHAPTER

This chapter describes the system environments required for using the fax driver. It also explains where to find help and information regarding the installation and use of this driver.

| Introduction |
|-----------------------------|
| Supported Canon Products1-2 |
| System Requirements |
| Where to Find Help1-7 |

Introduction

The fax driver gives users of Microsoft Windows 98, Windows Millennium Edition, Windows NT Version 4.0, Windows 2000, Windows XP, or Windows Server 2003 (hereafter called Windows 98/Me/NT 4.0/2000/XP/Server 2003) operating system the ability to make full use of the fax function of the printer. If your printer is equipped with the optional fax subsystem, the fax driver enables you to access the fax function.

The fax driver is conceptually akin to a printer driver. A user would select [Print] from any Windows application software, select the Canon fax driver as the printer, and specify its destination(s) and options.

The fax driver would then convert this into an image that conforms to standard fax protocols, to be printed or stored on the recipient fax machine(s).

Supported Canon Products

The Fax Driver Version 3.95 is available for the following Canon products:

| Printer Name | Driver Name |
|----------------------------------|-------------------------|
| Color imageRUNNER C2620 | Canon iR C2620 (FAX) |
| imagePASS-C1 (Color iR C2620-C1) | Canon iR C2620-C1 (FAX) |
| imagePASS-C2 (Color iR C2620-C2) | Canon iR C2620-C2 (FAX) |
| Color imageRUNNER C3200 | Canon iR C3200 (FAX) |
| imagePASS-C1 (Color iR C3200-C1) | Canon iR C3200-C1 (FAX) |
| Color imageRUNNER C3220 | Canon iR C3220 (FAX) |
| imagePASS-C1 (Color iR C3220-C1) | Canon iR C3220-C1 (FAX) |
| imagePASS-C2 (Color iR C3220-C2) | Canon iR C3220-C2 (FAX) |
| imageRUNNER C3100 | Canon iR C3100 (FAX) |
| imagePASS-E1 (iR C3100-E1) | Canon iR C3100-E1 (FAX) |
| imageRUNNER C3170i | Canon iR C3170 (FAX) |
| imageRUNNER C3170U | Canon iR C3170 (FAX) |
| imageRUNNER C5800 | Canon iR C5800 (FAX) |
| imagePASS-D1 (iR C5800-D1) | Canon iR C5800-D1 (FAX) |
| imageRUNNER C5870U | Canon iR C5870 (FAX) |

| imagePASS-G1 (iR C5870-G1) Canon iR C5870-G1 (FAX) imageRUNNER C6800 Canon iR C6800 (FAX) imagePASS-D1 (iR C6800-D1) Canon iR C6800-D1 (FAX) imageRUNNER C6870U Canon iR C6870 (FAX) imagePASS-G1 (iR C6870-G1) Canon iR C6870-G1 (FAX) imageRUNNER 2010F Canon iR 1600-2000 (FAX) imageRUNNER 2010F Canon iR2020 (FAX) imageRUNNER 2020 Canon iR2020 (FAX) imageRUNNER 2030 Canon iR2230 (FAX) imageRUNNER 2830 Canon iR2270/iR2870 (FAX) imageRUNNER 2870/2270 Canon iR2270/iR2870 (FAX) imageRUNNER 3300/2800/2200 Canon iR220-3300 (FAX) imageRUNNER 3300i Canon iR220/iR3320 (FAX) imageRUNNER 3300i Canon iR2220/iR3320 (FAX) imageRUNNER 3320G Canon iR2220/iR3320 (FAX) imageRUNNER 3320J/2220i Canon iR3230 (FAX) imageRUNNER 3320N/2220N Canon iR3230 (FAX) imageRUNNER 3320N/2220N Canon iR330-400 PCL (FAX) imageRUNNER 400/330 with Network Canon iR330-400 PCL (FAX) imageRUNNER 400/330 with Network Canon iR330-400 PCL (FAX) imageRUNNER 400/330 with Network Can | Printer Name | Driver Name |
|--|-------------------------------|---------------------------------|
| imagePASS-D1 (iR C6800-D1)Canon iR C6800-D1 (FAX)imageRUNNER C6870UCanon iR C6870 (FAX)imagePASS-G1 (iR C6870-G1)Canon iR C6870-G1 (FAX)imageRUNNER 2010FCanon iR1600-2000 (FAX)imageRUNNER 2016Canon iR2016 (FAX)imageRUNNER 2020Canon iR2020 (FAX)imageRUNNER 2230Canon iR2230 (FAX)imageRUNNER 2830Canon iR2230 (FAX)imageRUNNER 2870/2270Canon iR2270/iR2870 (FAX)imageRUNNER 3300/2200Canon iR2270/iR2870 (FAX)imageRUNNER 3300/2200Canon iR2200-3300 (FAX)imageRUNNER 3300Canon iR2200/iR3320 (FAX)imageRUNNER 3320GCanon iR2220/iR3320 (FAX)imageRUNNER 3320/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320/2220iCanon iR3530 (FAX)imageRUNNER 3320/2220iCanon iR3530 (FAX)imageRUNNER 400/330Canon iR3530 (FAX)imageRUNNER 400/330Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570-M3) | imagePASS-G1 (iR C5870-G1) | Canon iR C5870-G1 (FAX) |
| imageRUNNER C6870UCanon iR C6870 (FAX)imagePASS-G1 (iR C6870-G1)Canon iR C6870-G1 (FAX)imageRUNNER 2010FCanon iR1600-2000 (FAX)imageRUNNER 2016Canon iR2016 (FAX)imageRUNNER 2020Canon iR2020 (FAX)imageRUNNER 2020Canon iR2230 (FAX)imageRUNNER 2830Canon iR2830 (FAX)imageRUNNER 2870/2270Canon iR2270/iR2870 (FAX)imageRUNNER 2870/2270GCanon iR2270/iR2870 (FAX)imageRUNNER 3300/2800/2200Canon iR220-3300 (FAX)imageRUNNER 3300iCanon iR220/iR320 (FAX)imageRUNNER 3300iCanon iR220/iR320 (FAX)imageRUNNER 3320GCanon iR2220/iR3320 (FAX)imageRUNNER 3320J/22201Canon iR2220/iR3320 (FAX)imageRUNNER 3320J/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3530Canon iR3530 (FAX)imageRUNNER 400/330Canon iR3530 (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR3570/iR4570 (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/5570Canon iR3570/iR4570 (FAX)imageRUNNER 6570/5570Canon iR3570/iR6570-M3 (FAX)imageRUNNER 6570/5570Canon iR570/iR6570-M3 (FAX)imageRUNNER 6570/5570Canon iR570/iR6570-M3 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570-M3 (FAX)imageRUNNER 65 | imageRUNNER C6800 | Canon iR C6800 (FAX) |
| imagePASS-G1 (iR C6870-G1)Canon iR C6870-G1 (FAX)imageRUNNER 2010FCanon iR1600-2000 (FAX)imageRUNNER 2016Canon iR2016 (FAX)imageRUNNER 2020Canon iR2020 (FAX)imageRUNNER 2020Canon iR2230 (FAX)imageRUNNER 2230Canon iR2230 (FAX)imageRUNNER 2830Canon iR2230 (FAX)imageRUNNER 2870/2270Canon iR2270/iR2870 (FAX)imageRUNNER 2870/2270GCanon iR2270/iR2870 (FAX)imageRUNNER 3300/2800/2200Canon iR2200-3300 (FAX)imageRUNNER 3300/2800/2200Canon iR2200-3300 (FAX)imageRUNNER 3300/2800/2200Canon iR2220/iR3320 (FAX)imageRUNNER 3300/2800/2200Canon iR2220/iR3320 (FAX)imageRUNNER 3300/2800/2200Canon iR2220/iR3320 (FAX)imageRUNNER 3300/2800/2201Canon iR2220/iR3320 (FAX)imageRUNNER 33201/22201Canon iR2220/iR3320 (FAX)imageRUNNER 33201/22201Canon iR2220/iR3320 (FAX)imageRUNNER 400/330Canon iR3530 (FAX)imageRUNNER 400/330Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 6570/3570GCanon iR5570/iR6570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 510Canon iR528 500 (FAX) | imagePASS-D1 (iR C6800-D1) | Canon iR C6800-D1 (FAX) |
| imageRUNNER 2010FCanon iR1600-2000 (FAX)imageRUNNER 2016Canon iR2016 (FAX)imageRUNNER 2020Canon iR2020 (FAX)imageRUNNER 2230Canon iR2230 (FAX)imageRUNNER 2830Canon iR2830 (FAX)imageRUNNER 2830Canon iR2270/IR2870 (FAX)imageRUNNER 2870/2270Canon iR2270/IR2870 (FAX)imageRUNNER 2870/2270GCanon iR2200-3300 (FAX)imageRUNNER 3300/2800/2200Canon iR2200-3300 (FAX)imageRUNNER 3300/2800/2200Canon iR2200/3300 (FAX)imageRUNNER 3300iCanon iR2200/IR3320 (FAX)imageRUNNER 3320GCanon iR2220/IR3320 (FAX)imageRUNNER 3320I/22201Canon iR2220/IR3320 (FAX)imageRUNNER 3320N/2220NCanon iR3200 (FAX)imageRUNNER 3320N/2220NCanon iR3530 (FAX)imageRUNNER 400/330Canon iR3530 (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400-PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/5570Canon iR3570/IR4570 (FAX)imageRUNNER 4570/3570Canon iR3570/IR4570 (FAX)imageRUNNER 4570/3570Canon iR5570/IR6570 (FAX)imageRUNNER 6570/5570Canon iR5570/IR6570 (FAX)imageRUNNER 6570/5570Canon iR5570/IR6570-M3 (FAX)imageCLASS 2300Canon iR5570/IR6570-M3 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER C6870U | Canon iR C6870 (FAX) |
| imageRUNNER 2016Canon iR2016 (FAX)imageRUNNER 2020Canon iR2020 (FAX)imageRUNNER 2230Canon iR2200 (FAX)imageRUNNER 2830Canon iR2230 (FAX)imageRUNNER 2870/2270Canon iR2270/iR2870 (FAX)imageRUNNER 2870/2270GCanon iR2270/iR2870 (FAX)imageRUNNER 2870G/2270GCanon iR220-3300 (FAX)imageRUNNER 3300/2800/2200Canon iR2200-3300 (FAX)imageRUNNER 3300iCanon iR2220/iR3320 (FAX)imageRUNNER 3320GCanon iR2220/iR3320 (FAX)imageRUNNER 3320i/2220iCanon iR3220/iR3320 (FAX)imageRUNNER 3320i/2220iCanon iR3220/iR3320 (FAX)imageRUNNER 3320i/2220iCanon iR320-400 PCL (FAX)imageRUNNER 400/330Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/3570Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570- | imagePASS-G1 (iR C6870-G1) | Canon iR C6870-G1 (FAX) |
| imageRUNNER 2020Canon iR2020 (FAX)imageRUNNER 2230Canon iR2230 (FAX)imageRUNNER 2830Canon iR2230 (FAX)imageRUNNER 2870/2270Canon iR2830 (FAX)imageRUNNER 2870/2270Canon iR2270/iR2870 (FAX)imageRUNNER 2870G/2270GCanon iR2207/iR2870 (FAX)imageRUNNER 3300/2800/2200Canon iR220-3300 (FAX)imageRUNNER 3300iCanon iR2200-3300 (FAX)imageRUNNER 3320GCanon iR2220/iR3320 (FAX)imageRUNNER 3320/2220iCanon iR3200 (FAX)imageRUNNER 3320/2220iCanon iR3200 (FAX)imageRUNNER 3320/2220iCanon iR3300 (FAX)imageRUNNER 3300Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR3570/iR4570 (FAX)imageRUNNER 4570/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 4570/3570GCanon iR5570/iR6570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageRUNNER 510Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570-M3)Canon iR5270/iR6570-M3 (FAX)imageRUNNER 5 | imageRUNNER 2010F | Canon iR1600-2000 (FAX) |
| imageRUNNER 2230Canon iR2230 (FAX)imageRUNNER 2830Canon iR2830 (FAX)imageRUNNER 2870/2270Canon iR2270/iR2870 (FAX)imageRUNNER 2870G/2270GCanon iR2270/iR2870 (FAX)imageRUNNER 3300/2800/2200Canon iR2200-3300 (FAX)imageRUNNER 3300iCanon iR2200-3300 (FAX)imageRUNNER 3320GCanon iR2200/IR3320 (FAX)imageRUNNER 3320J/2220iCanon iR2220/IR3320 (FAX)imageRUNNER 3320J/2220iCanon iR2220/IR3320 (FAX)imageRUNNER 3320J/2220NCanon iR2220/IR3320 (FAX)imageRUNNER 3320N/2220NCanon iR3530 (FAX)imageRUNNER 3320N/2220NCanon iR3530 (FAX)imageRUNNER 400/330Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400 PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 6570/5570Canon iR3570/iR4570 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570.M3 (FAX)imageRAS-M3 (iR6570/5570-M3)Canon iR5570/iR6570.M3 (FAX)imageRAS S 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 2016 | Canon iR2016 (FAX) |
| imageRUNNER 2830Canon iR2830 (FAX)imageRUNNER 2870/2270Canon iR2270/iR2870 (FAX)imageRUNNER 28706/2270GCanon iR2270/iR2870 (FAX)imageRUNNER 3300/2800/2200Canon iR2200-3300 (FAX)imageRUNNER 3300/2800/2200Canon iR2200-3300 (FAX)imageRUNNER 3300iCanon iR2200/R3320 (FAX)imageRUNNER 3320i/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320i/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320i/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR3530 (FAX)imageRUNNER 3320N/2220NCanon iR330-400 PCL (FAX)imageRUNNER 400/330canon iR330-400 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 4570/5570Canon iR3570/iR4570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570 M3 (FAX)imageRLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 2020 | Canon iR2020 (FAX) |
| imageRUNNER 2870/2270Canon iR2270/iR2870 (FAX)imageRUNNER 2870G/2270GCanon iR2270/iR2870 (FAX)imageRUNNER 3300/2800/2200Canon iR2200-3300 (FAX)imageRUNNER 3300iCanon iR2200-3300 (FAX)imageRUNNER 3320GCanon iR2220/iR3320 (FAX)imageRUNNER 3320i/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR3530 (FAX)imageRUNNER 3320N/2220NCanon iR3530 (FAX)imageRUNNER 400/330Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/5570Canon iR3570/iR4570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570 (FAX)imageRUNSER 510Canon LASER CLASS 500 (FAX)LASER CLASS 510Canon LC700 (FAX) | imageRUNNER 2230 | Canon iR2230 (FAX) |
| imageRUNNER 2870G/2270GCanon iR2270/iR2870 (FAX)imageRUNNER 3300/2800/2200Canon iR2200-3300 (FAX)imageRUNNER 3300iCanon iR2200-3300 (FAX)imageRUNNER 3320GCanon iR2220/iR3320 (FAX)imageRUNNER 3320i/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3530Canon iR3530 (FAX)imageRUNNER 400/330Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with NetworkCanon iR330-400 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/5570Canon iR3570/iR4570 (FAX)imageRUNNER 5070Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imagePASS 510Canon iR5570/iR6570-M3 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 2830 | Canon iR2830 (FAX) |
| imageRUNNER 3300/2800/2200Canon iR2200-3300 (FAX)imageRUNNER 3300iCanon iR2200-3300 (FAX)imageRUNNER 3320GCanon iR2220/iR3320 (FAX)imageRUNNER 3320i/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR3530 (FAX)imageRUNNER 3320N/2220NCanon iR3530 (FAX)imageRUNNER 400/330Canon iR3530 (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 40/3570Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 40/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4070/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 5070Canon iR5070 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570 (FAX)imageCLASS 2300Canon iR5570/iR6570.M3 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 2870/2270 | Canon iR2270/iR2870 (FAX) |
| imageRUNNER 3300iCanon iR2200-3300 (FAX)imageRUNNER 3320GCanon iR2220/iR3320 (FAX)imageRUNNER 3320i/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR3530 (FAX)imageRUNNER 3530Canon iR3530 (FAX)imageRUNNER 400/330Canon iR3530 (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570G/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570-M3 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageRUNSER 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 2870G/2270G | Canon iR2270/iR2870 (FAX) |
| imageRUNNER 3320GCanon iR2220/iR3320 (FAX)imageRUNNER 3320i/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3530Canon iR3530 (FAX)imageRUNNER 400/330Canon iR350 (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570G/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 45705570Canon iR5570/iR4570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 3300/2800/2200 | Canon iR2200-3300 (FAX) |
| imageRUNNER 3320i/2220iCanon iR2220/iR3320 (FAX)imageRUNNER 3320N/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3530Canon iR3530 (FAX)imageRUNNER 400/330Canon iR3530 (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 5070Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 3300i | Canon iR2200-3300 (FAX) |
| imageRUNNER 3320N/2220NCanon iR2220/iR3320 (FAX)imageRUNNER 3530Canon iR3530 (FAX)imageRUNNER 400/330Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570G/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 5070Canon iR5070 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570 (FAX)imageCLASS 2300Canon iR2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 3320G | Canon iR2220/iR3320 (FAX) |
| imageRUNNER 3530Canon iR3530 (FAX)imageRUNNER 400/330Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570G/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 4570G/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 5070Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 3320i/2220i | Canon iR2220/iR3320 (FAX) |
| imageRUNNER 400/330Canon iR330-400 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 4570G/3570GCanon iR5070 (FAX)imageRUNNER 5070Canon iR5070 (FAX)imageRUNNER 5070Canon iR5070 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 3320N/2220N | Canon iR2220/iR3320 (FAX) |
| imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 5070Canon iR5070 (FAX)imageRUNNER 5070Canon iR5070 (FAX)imageRUNNER 6570/5570Canon iR5070 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imageRUNNER 6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 3530 | Canon iR3530 (FAX) |
| Multi-PDL Printer Board-P1Canon IR330-400-P1/R1 PCL (FAX)imageRUNNER 400/330 with Network Multi-PDL Printer Board-R1Canon iR330-400-P1/R1 PCL (FAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570G/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 5070Canon iR5070 (FAX)imageRUNNER 6570/5570Canon iR5070 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 400/330 | Canon iR330-400 PCL (FAX) |
| Multi-PDL Printer Board-R1Canon IR330-400-PT/RT PCL (PAX)imageRUNNER 4570/3570Canon iR3570/iR4570 (FAX)imageRUNNER 4570G/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 5070Canon iR5070 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | | Canon iR330-400-P1/R1 PCL (FAX) |
| imageRUNNER 4570G/3570GCanon iR3570/iR4570 (FAX)imageRUNNER 5070Canon iR5070 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | | Canon iR330-400-P1/R1 PCL (FAX) |
| imageRUNNER 5070Canon iR5070 (FAX)imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 4570/3570 | Canon iR3570/iR4570 (FAX) |
| imageRUNNER 6570/5570Canon iR5570/iR6570 (FAX)imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 4570G/3570G | Canon iR3570/iR4570 (FAX) |
| imagePASS-M3 (iR6570/5570-M3)Canon iR5570/iR6570-M3 (FAX)imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 5070 | Canon iR5070 (FAX) |
| imageCLASS 2300Canon iC2300 (FAX)LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imageRUNNER 6570/5570 | Canon iR5570/iR6570 (FAX) |
| LASER CLASS 510Canon LASER CLASS 500 (FAX)LASER CLASS 700 seriesCanon LC700 (FAX) | imagePASS-M3 (iR6570/5570-M3) | Canon iR5570/iR6570-M3 (FAX) |
| LASER CLASS 700 series Canon LC700 (FAX) | imageCLASS 2300 | Canon iC2300 (FAX) |
| | LASER CLASS 510 | Canon LASER CLASS 500 (FAX) |
| MF7280 Canon MF7200 series (FAX) | LASER CLASS 700 series | Canon LC700 (FAX) |
| | MF7280 | Canon MF7200 series (FAX) |

IMPORTANT

- The fax options are available only if a fax board is installed in your printer.
- The LASER CLASS 510 supports only Windows 98/Me/2000/XP/Server 2003.
- In this guide, these printer names are hereafter referred to as the following:
- imagePASS-C1 (Color iR C2620-C1): Color imageRUNNER C2620-C1
- imagePASS-C1 (Color iR C3200-C1): Color imageRUNNER C3200-C1
- imagePASS-C1 (Color iR C3220-C1): Color imageRUNNER C3220-C1
- imagePASS-C2 (Color iR C2620-C2): Color imageRUNNER C2620-C2
- imagePASS-C2 (Color iR C3220-C2): Color imageRUNNER C3220-C2
- imagePASS-D1 (iR C5800-D1): imageRUNNER C5800-D1
- imagePASS-D1 (iR C6800-D1): imageRUNNER C6800-D1
- imagePASS-E1 (iR C3100-E1): imageRUNNER C3100-E1
- imagePASS-G1 (iR C5870-G1): imageRUNNER C5870-G1
- imagePASS-G1 (iR C6870-G1): imageRUNNER C6870-G1
- imagePASS-M3 (iR6570/5570-M3): imageRUNNER 6570/5570-M3
- imageRUNNER C3170i: imageRUNNER C3170
- imageRUNNER C3170U: imageRUNNER C3170
- imageRUNNER C5870U: imageRUNNER C5870
- imageRUNNER C6870U: imageRUNNER C6870
- imageRUNNER 400/330 with Network Multi-PDL Printer Board-P1 and R1: imageRUNNER 400/330-P1/R1

System Requirements

The fax driver can be used in the following system environments:

Operating System Software

- Microsoft Windows 98
- Microsoft Windows Me
- Microsoft Windows NT 4.0
- Microsoft Windows 2000
- Microsoft Windows XP
- Microsoft Windows Server 2003

With a Server-Based Computing Environment

- Compatible Windows Terminal Server (Service)
 - Microsoft Windows NT 4.0 Terminal Server Edition
 - Microsoft Windows 2000 Server
 - Microsoft Windows Server 2003
- Compatible Software
 - Citrix MetaFrame XP
 - Citrix MetaFrame 1.8
 - Citrix MetaFrame Presentation Server 3.0
 - Citrix Presentation Server 4.0

Computer

Any computer which runs the above operating system software properly

If you are using the Color imageRUNNER C2620-C1, Color imageRUNNER C2620-C2, Color imageRUNNER C3200-C1, Color imageRUNNER C3220-C1, Color imageRUNNER C3220-C2, imageRUNNER C3100-E1, imageRUNNER C5800-D1, imageRUNNER C5870-G1, imageRUNNER C6800-D1, imageRUNNER 400/330, imageRUNNER 400/330-P1/R1, or imageRUNNER 6570/5570-M3, after selecting a port, you need to specify a queue as described below. (You cannot specify <Direct> as the queue for the imageRUNNER 400/330.)

- LPR

For Windows TCP/IP, enter either <Print>, <Hold>, or <Direct> as the queue.

- RAW

The following four port numbers are available:

9100: Enter either <Print>, <Hold>, or <Direct> as the queue.

9101: The queue will be set to <Direct>.

9102: The queue will be set to <Print>.

9103: The queue will be set to <Hold>.

- SMB

Select any of the three queues displayed after selecting a printer from the network tree.

Where to Find Help

Here is where to get immediate help if you are having problems installing or using the fax driver.

README. TXT file

Any hints, enhancements, limitations, and restrictions you need to be aware of when installing and using your fax driver are included in the README.TXT file provided with the driver. This file is located in \FAX\us_eng.

Online Help

You can locate additional help for questions you may have regarding your fax in the Online Help file provided with the driver. In the fax properties dialog box, you can click [Help] to display additional information about every feature and option in the fax driver. You can also click [?] (Help) in the upper right corner of most dialog boxes, and then click a specific item in the dialog box for help on that item.

■ Canon Authorized Dealers or Service Providers

If the Online Help file does not provide the information you need, contact your local authorized Canon dealer or service provider.

2 CHAPTER

Getting Started

This chapter describes instructions for installing the software and specifying the installed fax memory.

| Installing the Software | |
|--|------|
| Installing the Fax Driver | |
| USB Connection Installation (Windows 98/Me/2000/XP/Server 2003) | 2-22 |
| Installing the Canon Driver Information Assist Service. | 2-36 |
| Updating the Existing Fax Drivers | 2-39 |
| Updating the Alternate Fax Driver (Windows NT 4.0/2000/XP/Server 2003) | 2-43 |
| Uninstalling the Fax Driver | |
| Specifying the Installed Optional Fax Board | 2-48 |
| Specifying the Installed Fax Memory | 2-51 |


Installing the Software

This section describes instructions for installing the software.

Installing the Fax Driver

Before using the fax function on your printer, you must install the fax driver for it.

Refer to the figure below in order to decide which procedure to use and read the corresponding pages in this manual.

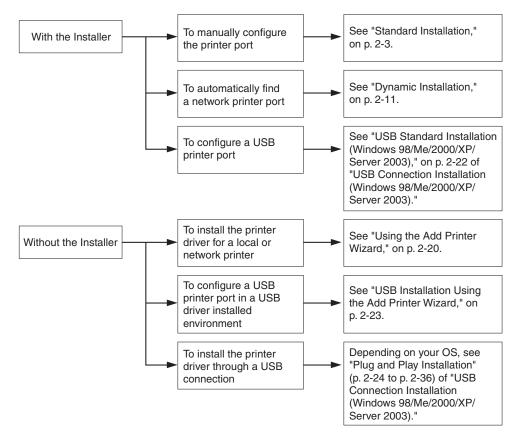



- For Windows NT 4.0/2000/XP/Server 2003, log on as the Administrator when you install the driver.
- If you use the Installer, you can also update existing drivers simultaneously while installing a new driver, or update existing drivers without installing a new driver. Canon machines whose fax drivers can be updated are listed under "Supported Canon Products," on p. 1-2.

Standard Installation

Standard installation is when you select an existing printer port manually.


You can also install a network printer or set up a shared printer by following the procedure below.

NOTE

If you are using a printer connected to a network using TCP/IP protocol, you can automatically search for a port to install the fax driver. For instructions, see "Dynamic Installation," on p. 2-11.

- **1** Insert the Fax Driver Software CD-ROM into the CD-ROM drive.
- 2 Double-click the [My Computer] icon → the CD-ROM drive icon.
- **3** Double-click the following folders: $[FAX] \rightarrow [us_eng]$.
- **4** Double-click the [Setup.exe] icon to start the installation process.

5 In the first dialog box of the Fax Driver Setup Wizard, click [Next].

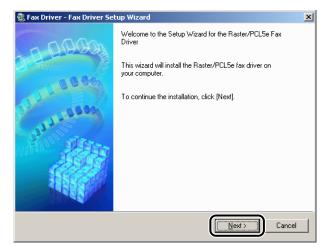

The [License Agreement] dialog box is displayed.

6 Read the license agreement carefully. If you agree to the terms \rightarrow click [Yes].

7 Select [Manually Set Port to Install] \rightarrow click [Next].



NOTE

If you have installed Canon Driver Information Assist Service and are using an operating system equipped with Windows Firewall, when the following message box is displayed, click [Yes] or [No].

- If you select [Yes], Windows Firewall will be configured to unblock the connection for Canon Driver Information Assist Service, so that you can set up the configuration automatically or use the Job Accounting feature.
- If you select [No], you cannot use Canon Driver Information Assist Service.

| Warning | 8 | |
|----------|--|--------|
| <u>.</u> | Canon Driver Information Assist Service is already installed. To use Canon Driver Information Assist Service, you must remove the Windows Firewall block set against this program. Do you want to change the Windows Firewall settings so that the block will be re | moved? |

8 Click [Next].

| 🍓 Fax Driver - Fax Driver Setup Wizard 🛛 🗶 |
|---|
| Select Process Select the items to install and the process to install the fax driver. |
| Raster/PCL5e Fax Driver |
| Canon Driver Information Assist Service Install this service only if you want to add shared faxes, obtain device information, or use the job accounting function. |
| < <u>Back</u> Cancel |

If the required drivers have already been installed using the installer, the following screen is displayed. Select an option under [Process to Install Fax Driver] \rightarrow click [Next].

| 🍓 Fax Driver - Fax Driver Setup Wizard | X |
|---|----------------|
| Select Process Select the items to install and the process to install the fax driver. | |
| Raster/PCL5e Fax Driver | |
| Process to Install Fax Driver |] |
| Add Faxes and Update Existing Drivers | |
| Add Faxes | |
| C Update Existing Drivers | |
| Canon Driver Information Assist Service | |
| Install this service only if you want to add shared faxes, obtain device information, accounting function. | or use the job |
| | |
| < <u>B</u> ack | Cancel |

[Process to Install Fax Driver]

- [Add Faxes and Update Existing Drivers]: You can install a new driver and update existing drivers simultaneously.
- [Add Faxes]: You can add a new driver without affecting existing drivers.
- [Update Existing Drivers]: You can update the existing drivers already installed without having to add a new one. To do this, see "Updating the Existing Fax Drivers," on p. 2-39.

If you want to install the Canon Driver Information Assist Service together with the fax driver, also select [Canon Driver Information Assist Service].



- If you are using a shared fax in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to set up the fax configuration automatically or to use the Job Accounting feature.
- If the Canon Driver Information Assist Service is already installed on your computer, [Canon Driver Information Assist Service] does not display.
- If you are using an operating system equipped with Windows Firewall, when the following message box is displayed, click [Yes] or [No].
 - If you select [Yes], Windows Firewall will be configured to unblock the connection for Canon Driver Information Assist Service, so that you can set up the configuration automatically or use the Job Accounting feature.
 - If you select [No], you cannot use Canon Driver Information Assist Service.

| Warning | |
|---|--------|
| To use Canon Driver Information Assist Service, you must remove the Windows Firewall block set against this program. Do you want to change the Windows Firewall settings so that block will be removed? | |
| | Yes No |

9 Select the fax driver(s) you want to install from [Fax List] → click [Add].

| 🍓 Fax Driver - Fax Driver Setup Wizard | × |
|--|--------|
| Select Faxes to Install Select the faxes to add, and then click [Add]. The same fax can be selected more than once. | |
| Fax List: Canon IR C3200-C1 (FAX) Canon IR C3220 (FAX) Canon IR C53200 (FAX) Canon IR C5800 (FAX) | × |
| A Back | Cancel |
| <u>≺B</u> ack <u>N</u> ext> | Cancel |

The fax driver(s) you selected is added to [Fax List for Driver Installation].

Ø NOTE

To delete a fax driver that you do not want to install from [Fax List for Driver Installation], select the appropriate fax driver \rightarrow click [Remove].

10 Verify that the fax driver(s) you want to install is selected in the [Fax List for Driver Installation] → click [Next].

| Fax Driver - Fax Driver Setup Wizard | × |
|--|---------------|
| Select Faxes to Install Select the faxes to add, and then click [Add], The same fax can be selected more than once. | |
| Fax List: | |
| Canon iR C3200-C1 (FAX) Canon iR C3220(-FIAX) Canon iR C3220(-FIAX) Canon iR C5800(FAX) Canon iR C5800-D1 (FAX) Canon iR C5870(FAX) Canon iR C5870(FAX) Canon iR C5870(FAX) Canon IR C5870(FAX) Canon IR C5870(FAX) | ► |
| Eaclist for Driver Installation: | _ |
| Canon iR C6870 (FAX) | |
| | |
| < <u>B</u> ack | Next > Cancel |

11 Select a port.

| 🍓 Fax Driver - Fax Driver Setup Wi | izard X |
|---|--|
| Fax Information Set the port to be used for the selecte Also, you can specify a name for the fo | |
| Selected Fax: | Canon iR C6870 (FAX) Canon Raster/PCI 5e Driver Ver IX XX |
| Port: | Not Set 🔽 |
| | Add Port |
| Eax Name: | Canon iR C6870 (FAX) |
| 🔲 Set as Default | |
| 🔲 Use as <u>S</u> hared Fax | |
| S <u>h</u> ared Name: | |
| | Drivers to Add |
| | Current Fax: 1 |
| | Number of Faxes to Set: 1 |
| | < <u>B</u> ack <u>N</u> ext > Cancel |



- If more than one fax driver is selected, this dialog box will reappear to enable selection of different ports for other fax drivers.
- If you are using the Color imageRUNNER C2620-C1, Color imageRUNNER C2620-C2, Color imageRUNNER C3200-C1, Color imageRUNNER C3220-C1, Color imageRUNNER C3220-C2, imageRUNNER C3100-E1, imageRUNNER C5800-D1, imageRUNNER C5870-G1, imageRUNNER C6800-D1, imageRUNNER C6870-G1, or imageRUNNER 6570/5570-M3, only LPR, RAW, or SMB can be selected as the port. The machine is not compatible with NetWare and IPP.

• If you want to set a standard port:

□ Select the printer port you want to use from [Port].

• If you want to set a port for a network printer:

- Click [Add Port].
- □ Select [Network] from [Add Port] dialog box \rightarrow click [OK].

| Add Port | × |
|--|--------|
| Select the port to add, and then click [OK]. | |
| | |
| Port to Add: | |
| | |
| Network | |
| Standard TCP/IP Port | |
| | |
| | |
| ОК | Cancel |
| | |

 \Box Select the network printer \rightarrow click [OK].

| Network Port Settings |
|--|
| Select a shared fax with which to create a port. |
| |
| |
| OK Cancel |

• If you want to add a port:

- Click [Add Port].
- \Box Select the printer port you want to add from [Add Port] dialog box \rightarrow click [OK].

| Add Port | | × |
|--------------------------------|-----------------|--------|
| Select the port to add, and th | nen click [OK]. | |
| | | |
| | | |
| Port to Add: | | |
| Local Port | | |
| PDF Port | | |
| Standard TCP/IP Port | | |
| | | |
| 1 | | |
| | (OK | Cancel |
| | | |

Ports displayed in the [Add Port] dialog box vary depending on the operating system you are using.

- □ Specify the settings for the port you want to add in the dialog box displayed → click [OK].
- 12 Enter a fax name in [Fax Name] if necessary → select [Set as Default] if you want to set the fax as the default printer → click [Next].

| 🍓 Fax Driver - Fax Driver Setup W | izard 🗙 |
|--|--|
| Fax Information Set the port to be used for the selecte Also, you can specify a name for the f | |
| Selected Fax: Use Driver: <u>P</u> ort: | Canon iR C6870 (FAX) Canon Raster/PCL5e Driver Ver. x.xx [LPT1: Add Port |
| Eax Name: | Canon iR C6870 (FAX) |
| Use as <u>S</u> hared Fax | |
| S <u>h</u> ared Name: | Drivers to Add Current Fax: 1 Number of Faxes to Set: 1 |
| | < Back Next > Cancel |

Ø NOTE

- If you want to specify shared fax settings, or are installing an alternate driver in Windows NT 4.0/2000/XP/Server 2003, select [Use as Shared Fax]. For instructions on how to specify detailed settings for a shared fax, see steps 2 to 4 of "Alternate Fax Driver (Windows NT 4.0/2000/XP/Server 2003)," on p. 2-18.
- If you have selected [Network] in the [Add Port] dialog box, you cannot set [Fax Name] and [Use as Shared Fax].

13 Verify the installation settings \rightarrow click [Start].

| 🌸 Fax Driver - Fax Driver Setup Wizard 🔹 🔊 | |
|--|--|
| The setup program will install the drivers with the following settings. Confirm the settings. | |
| Fax List for Driver Installation: | |
| = Add = Fax: Canon iR C6870 (FAX) Driver : : Canon iR C6870 (FAX) Pot : LPT1: | The information shown in the window may diffe according to your |
| Click [Start] to install. | system |
| < <u>Back</u> Cancel | parameters. |

14 After the files are copied, click [Exit] to finish the installation.

If you want to restart your computer, select [Restart My Computer Now].

The printer icon is displayed in the [Printers] folder. The driver is now installed.

Dynamic Installation

If you are using a printer connected to a network using TCP/IP protocol, you can automatically search for its printer port. To install the fax driver by dynamic installation, follow the procedure below.


IMPORTANT

You can search only for printers in the same subnet as your computer.

Ø NOTE

- If you are using a local printer or a printer connected to a network using a protocol other than TCP/IP, see "Standard Installation," on p. 2-3.
- Dynamic Installation is not available for the LASER CLASS 510, because this model does not come with a network interface.

- **1** Insert the Fax Driver Software CD-ROM into the CD-ROM drive.
- **2** Double-click the [My Computer] icon \rightarrow the CD-ROM drive icon.
- **3** Double-click the following folders: $[FAX] \rightarrow [us_eng]$.
- **4** Double-click the [Setup.exe] icon to start the installation process.
- **5** In the first dialog box of the Fax Driver Setup Wizard, click [Next].

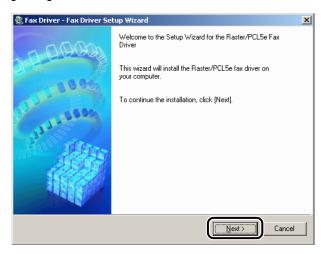

The [License Agreement] dialog box is displayed.

6 Read the license agreement carefully. If you agree to the terms \rightarrow click [Yes].

7 Select [Search for Network Faxes to Install] \rightarrow click [Next].

| 鑬 Fax Driver - Fax Driver Setup Wizard | × |
|--|--------|
| Fax Installation Select fax installation. | |
| Fax Installation Manually Set Port to Install Search for Network Faxes to Install Regotivate Faxes in the Sleep Mode and Search | |
| Installs faxes connected to the TCP/IP network. | |
| < <u>B</u> ack Next > | Cancel |

Ø NOTE

- To search for faxes in sleep mode on the network, select [Reactive Faxes in the Sleep Mode and Search].
- If you have installed Canon Driver Information Assist Service and are using an operating system equipped with Windows Firewall, when the following message box is displayed, click [Yes] or [No].
 - If you select [Yes], Windows Firewall will be configured to unblock the connection for Canon Driver Information Assist Service, so that you can set up the configuration automatically or use the Job Accounting feature.
 - If you select [No], you cannot use Canon Driver Information Assist Service.

| Warning | |
|----------|--|
| <u>!</u> | Canon Driver Information Assist Service is already installed. To use Canon Driver Information Assist Service, you must remove the Windows Firewall block set against this program. Do you want to change the Windows Firewall settings so that the block will be removed? |

8 Click [Next].

| 鑬 Fax Driver - Fax Driver Setup Wizard | × |
|--|---|
| Select Process Select the items to install and the process to install the fax driver. | 7 |
| Raster/PCL5e Fax Driver | |
| Canon Driver Information Assist Service | |
| Install this service only if you want to add shared faxes, obtain device information, or use the job accounting function. | |
| | |
| | |
| | |
| | |
| | |
| < Back | |

If the required drivers have already been installed using the installer, the following screen is displayed. Select an option under [Process to Install Fax Driver] \rightarrow click [Next].

| 🍓 Fax Driver - Fax Driver Setup Wizard 🔀 🗙 |
|--|
| Select Process Select the items to install and the process to install the fax driver. |
| Raster/PCL5e Fax Driver |
| Process to Install Fax Driver |
| C Add Faxes and Update Existing Drivers |
| |
| Canon Driver Information Assist Service |
| Install this service only if you want to add shared faxes, obtain device information, or use the job accounting function. |
| < Back Next > Cancel |

[Process to Install Fax Driver]

- [Add Faxes and Update Existing Drivers]: You can install a new driver and update existing drivers simultaneously.
- [Add Faxes]: You can add a new driver without affecting existing drivers.

If you want to install the Canon Driver Information Assist Service together with the fax driver, select [Canon Driver Information Assist Service] \rightarrow click [Next].



- If you are using a shared fax in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to set up the fax configuration automatically or to use the Job Accounting feature.
- If the Canon Driver Information Assist Service is already installed on your computer, [Canon Driver Information Assist Service] does not display.
- If you are using an operating system equipped with Windows Firewall, when the following message box is displayed, click [Yes] or [No].
 - If you select [Yes], Windows Firewall will be configured to unblock the connection for Canon Driver Information Assist Service, so that you can set up the configuration automatically or use Job Accounting feature.
 - If you select [No], you cannot use Canon Driver Information Assist Service.

| Warning | |
|---------|---|
| | To use Canon Driver Information Assist Service, you must remove the Windows Firewall block set against this program. Do you want to change the Windows Firewall settings so that block will be removed? |
| | <u>Y</u> es <u>N</u> o |

9 Select the fax driver(s) you want to install from [Fax List] → click [Add].

| 🍓 Fax Driver - Fax Di | river Setup Wizard | | × |
|---|---------------------------|-----------------------------|--------------|
| Select Faxes to Install Select the faxes to ac | ld, and then click [Add]. | | |
| Fax List: | | Select | |
| Davice Name | Product Name | ID Address | MAC Address |
| IR C3100 | iR C3100 | 172.25.7.201 | 000085365CC1 |
| Eax List for Driver Instal | | Remove | |
| Device Name | Product Name | IP Address | MAC Address |
| I | | | |
| Set Fax Information | | | |
| | [| < <u>B</u> ack <u>N</u> ext | Cancel |

If you want to select all the fax drivers found, click [Select All].

If the Fax List is not displayed, click [Search Again].

The fax driver(s) you selected is added to [Fax List for Driver Installation].

NOTE

- To delete a fax driver that you do not want to install from [Fax List for Driver Installation], select the appropriate fax driver → click [Remove].
- If the appropriate fax machine cannot be found, refer to "Standard Installation," on p. 2-3, to install the fax driver.
- 10 Check that the fax driver(s) you want to install is selected in the [Fax List for Driver Installation] dialog box.
- 11 If you want to specify the fax settings, including the name or default fax setting, select [Set Fax Information] → click [Next].

| 🍓 Fax Driver - Fax D | river Setup Wizard | | × |
|---|---------------------------|--------------|---------------------|
| Select Faxes to Install Select the faxes to ad | ld, and then click [Add]. | | |
| Fax <u>L</u> ist: | | Selec | ct All Search Again |
| Device Name | Product Name | IP Address | MAC Address |
| • | | | |
| <u>, , , , , , , , , , , , , , , , , , , </u> | <u>A</u> dd ↓↑ | Barran I | |
| <u>Fax List for Driver Insta</u> | | Remove | |
| Device Name | Product Name | IP Address | MAC Address |
| iR C3100 | iR C3100 | 172.25.7.201 | 000085365CC1 |
| | <u></u> | | |
| Set Fax Information |) | | |
| | | < Back | kt > Cancel |

If you do not want to specify these settings, click [Next] \rightarrow skip to step 13.

12 Enter a fax name in [Fax Name] if necessary → select [Set as Default] if you want to set the fax as the default printer → click [Next].

| 🍓 Fax Driver - Fax Driver Setup V | Vizard X |
|---|-------------------------------------|
| Fax Information Set the port to be used for the select Also, you can specify a name for the | red fax. fax. |
| Selected Fax: | Canon iR C3100 (FAX) |
| Use Driver: | Canon Raster/PCL5e Driver Ver. x.xx |
| Port: | IP_172.25.7.201 |
| | Add Port |
| Eax Name: | IR C3100 |
| 🔲 Set as Defa <u>u</u> lt | |
| I Use as Shared Fax | |
| S <u>h</u> ared Name: | |
| | Drivers to Add |
| | Current Fax: 1 |
| | Number of Faxes to Set: 1 |
| | < Back Next > Cancel |

NOTE

If you want to specify shared fax settings, or are installing an alternate driver in Windows NT 4.0/2000/XP/Server 2003, select [Use as Shared Fax]. For instructions on how to specify detailed settings for a shared fax, see steps 2 to 4 of "Alternate Fax Driver (Windows NT 4.0/2000/XP/Server 2003)," on p. 2-18.

13 Verify the installation settings \rightarrow click [Start].

| Fax Driver - Fax Driver Setup Wizard The setup program will install the drivers with the following settings. Confirm the settings. | |
|--|---|
| Fax List for Driver Installation: = Add = Fax: IP C3100 Driver : Canon IR C3100 (FAX) Port : IP_172.25.7.201 | The information shown in the window may differ according to your system parameters. |

14 After the files are copied, click [Exit] to finish the installation.

If you want to restart your computer, select [Restart My Computer Now].

The printer icon is displayed in the [Printers] folder. The driver is now installed.

Alternate Fax Driver (Windows NT 4.0/2000/XP/Server 2003)

If you are using one or more shared printers in Windows NT 4.0/2000/XP/Server 2003, you can install an alternate fax driver. Installing an alternate fax driver enables you to install a fax driver on a client PC via a network.

To specify settings for the shared fax, follow the procedure below.

1 Start the Installer \rightarrow follow the instructions in the dialog boxes.

See steps 1 to 11 of "Standard Installation," on p. 2-3.

2 Select [Use as Shared Fax] \rightarrow enter a share name.

| 🍓 Fax Driver - Fax Driver Setup Wiz | zard 🔀 |
|--|--|
| Fax Information Set the port to be used for the selected Also, you can specify a name for the fa | |
| Selected Fax: Use Driver: <u>P</u> ort: | Canon iR C6870 (FAX) Canon Raster/PCL5e Driver Ver. x.xx Not Set |
| | Add Port |
| Eax Name: | Canon iR C6870 (FAX) |
| Set as Default | |
| Use as Shared Fax | |
| S <u>h</u> ared Name: | IRC6870F |
| | Drivers to Add |
| | Current Fax: 1 Number of Faxes to Set: 1 |
| | < <u>B</u> ack <u>N</u> ext > Cancel |

If you want to set the operating system on which the driver will run, click [Drivers to Add].

3 Select operating system from [Drivers to Add] \rightarrow click [OK].

| Drivers to Add | | | |
|--|--|--|--|
| Select systems for additional drivers (alternate drivers) that you want to install from the list below so that users on the following systems can download them automatically when they connect. | | | |
| Drivers to Add: | | | |
| Windows 98/Millennium Edition Windows NT 4.0 | | | |
| × | | | |
| OK Cancel | | | |

4 In the [Fax Information] dialog box, click [Next].

| Wizard X |
|--|
| sted fax. e fax. |
| Canon iR C6870 (FAX) |
| Canon Raster/PCL5e Driver Ver. x.xx |
| Not Set |
| Add Port |
| Canon iR C6870 (FAX) |
| |
| iRC6870F |
| Drivers to Add Current Fax. 1 Number of Faxes to Set 1 < Back |
| |

5 Follow the instructions in the dialog or message boxes to complete the installation.

See steps 13 to 14 of "Standard Installation," on p. 2-3.

IMPORTANT

To use the fax driver on the client PC, double-click the shared printer icon for the alternate fax driver on the server PC.

Using the Add Printer Wizard

To install a fax driver from the [Printers] folder in the Windows Control Panel, follow the procedure below.


1 On the [Start] menu, point to [Settings] \rightarrow click [Printers].

NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- 2 In the [Printers] folder, double-click the [Add Printer] icon to start the Add Printer Wizard \rightarrow follow the instructions on the screen to continue the installation.
- 3 Insert the Fax Driver Software CD-ROM into the CD-ROM drive → click [Have Disk].

| Add Printer Wizard | | | | | |
|--|---|--------|--|--|--|
| Add Printer Wizard The manufacturer and model determine which printer to use. | | | | | |
| | urer and model of your printer. If your printer came with an ir <. If your printer is not listed, consult your printer documental | | | | |
| Manufacturers: | Printers: | | | | |
| APS-PS AST AT&T Brother Bull Cenon Chiran | Canon iR1600-2000 PCL5e Canon iR2500 PCL5e Canon iR2270/R2870 PCL5e Canon iR2200/3300 PCL5e Canon iR22800 PCL5e Canon iR2830 PCL5e Canon iR2830 PCL5e Canon iR2830 PCL5e Canon iR2830 PCL5e | | | | |
| | <u>Windows Update</u> <u>Have</u> | e Disk | | | |
| | < <u>B</u> ack <u>N</u> ext > | Cancel | | | |


4 Click [Browse] to select the folder of the driver you want to install \rightarrow click [OK].

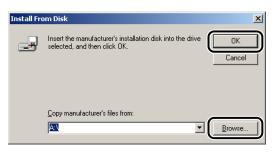

You can select the driver from the following folders on the CD-ROM:

| OS | Path |
|------------------------------|----------------------|
| Windows 98/Me: | \FAX\us_eng\win98_me |
| Windows NT 4.0: | \FAX\us_eng\winnt40 |
| Windows 2000/XP/Server 2003: | \FAX\us_eng\win2k_xp |

5 Select your fax model from [Printers] \rightarrow click [Next].

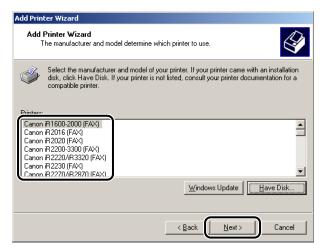

6 Follow the instructions on the screen to continue \rightarrow click [Finish] to start copying the files.

The printer icon is displayed in the [Printers] folder. The driver is now installed.

USB Connection Installation (Windows 98/Me/2000/XP/ Server 2003)

If your printer supports a USB port, you can send faxes via the USB port. The following fax driver installation methods enable you to do so.

■ If a USB driver has been installed on your computer:

If you have performed a USB installation using the Canon PCL5c, PCL5e, PCL6, PS, UFR, or UFR II printer driver on your computer, the USB driver has already been installed. In this case, you can install the fax driver by following either the standard installation or the Add Printer Wizard procedure.

■ If a USB driver has not been installed on your computer:

Install the USB driver and the fax driver according to the Plug and Play procedure.

NOTE

- If you are using the Color imageRUNNER C2620, Color imageRUNNER C3200, Color imageRUNNER C3220, imageRUNNER C3170, imageRUNNER C5800, imageRUNNER C6800, imageRUNNER 2016, imageRUNNER 2020, imageRUNNER 2230, imageRUNNER 2830, imageRUNNER 2870/2270, imageRUNNER 2870G/2270G, imageRUNNER 3530, imageRUNNER 4570/3570, imageRUNNER 4570G/3570G, imageRUNNER 5070, imageRUNNER 6570/5570, LASER CLASS 510, or MF7280, you can fax in a USB environment. However, you cannot set up the fax configuration automatically or use the Job Accounting feature in a USB environment.
- If you are using an operating system equipped with Windows Firewall, the Found New Hardware Wizard may be displayed during installation. In this case, select [No, not this time] → click [Next] → install the USB driver and fax driver according to the Plug and Play procedure.

USB Standard Installation (Windows 98/Me/2000/XP/Server 2003)

1 Start the Installer \rightarrow follow the instructions in the dialog boxes.

See steps 1 to 10 of "Standard Installation," on p. 2-3.

2 Select [Use Standard Port] from [Port Settings] → click [Settings].

| 👘 Fax Driver - Fax Driver Setup Wi | zard | × |
|--|--|----------|
| Fax Information Set the port used for the selected fax. Click Next to proceed. | | |
| Selected Fax: Use Driver: | Canon iR C3200 (FAX) Canon Raster/PCL5e Driver Ver x.xx | : |
| Port Settings: | Use Standard Port Use Network Printer Add Port | Settings |
| Port Set: | Not Set | |
| <u>F</u> ax Name: | Canon iR C3200 (FAX) | |
| Set as Default Install5hield ———————————————————————————————————— | < Back Next> | Cancel |

- **3** Select the USB port from the list \rightarrow click [OK].
- **4** In the [Fax Driver Setup Wizard] dialog box, click [Next].
- **5** Follow the instructions in the dialog box or message boxes to complete the installation.

See steps 13 to 14 of "Standard Installation," on p. 2-3.

USB Installation Using the Add Printer Wizard (Windows 98/Me/2000/ XP/Server 2003)

1 On the [Start] menu, point to [Settings] \rightarrow click [Printers].

NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].

- 2 In the [Printers] folder, double-click the [Add Printer] icon to start the Add Printer Wizard → follow the instructions on the screen to continue the installation.
- **3** When the port setting screen is displayed, select the USB port.

| Add Printe | er Wizard | | | |
|------------|----------------------------|-------------------------------------|---|------|
| | t the Printer | Port nunicate with printers thro | igh ports. | Ø |
| | lect the port y w port. | ou want your printer to us | . If the port is not listed, you can create a | |
| 0 | Use the follo | wing port: | | |
| | Port | Description | Printer 🔺 | |
| | COM2: | Serial Port | | |
| | COM3: | Serial Port | | |
| | COM4: FILE: | Serial Port Print to File | | |
| | USB001 | Virtual printer port for U | B | |
| | | | E) | |
| | Note: Most o | computers use the LPT1: p | ort to communicate with a local printer. | |
| C | <u>C</u> reate a nev | v port: | | |
| | Type: | Local Port | _ | |
| | | | | |
| | | | < <u>B</u> ack <u>N</u> ext > Ca | ncel |

4 Follow the instructions in the dialog box or message boxes to complete the installation.

See steps 3 to 6 of "Using the Add Printer Wizard," on p. 2-20.


Plug and Play Installation (Windows 98)

- **1** Connect the cable from the printer's USB port to the PC's USB port, and then turn the printer ON.
- **2** Start Windows, and then insert the Fax Driver Software CD-ROM into the CD-ROM drive.

The Add New Hardware Wizard starts.

3 In the first dialog box of the Add New Hardware Wizard, click [Next].

4 Select [Search for the best driver for your device. (Recommended)] \rightarrow click [Next].

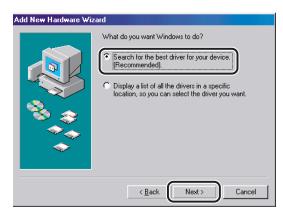

5 Select [Specify a location] → click [Browse] to select [\FAX\us_eng\usbport\win98] on the CD-ROM → click [Next].

| Add New Hardware Wi | zard |
|---|--|
| | Windows will search for new drivers in its driver database on your hard drive, and in any of the following selected locations. Click Next to start the search. Eloppy disk drives CD-ROM drive Microsoft Windows Update |
| 100 (1) 100 (1 | |

6 Follow the instructions on the screen \rightarrow click [Finish] after the files are copied.

The USB driver is now installed. The Add New Hardware Wizard restarts. Continue with the installation to install the fax driver.

7 In the first dialog box of the Add New Hardware Wizard, click [Next].

8 Select [Display a list of all the drivers in a specific location, so you can select the driver you want] \rightarrow click [Next] \rightarrow follow the instructions on the screen.

| Add New Hardware ₩iz | rard |
|----------------------|---|
| | What do you want Windows to do? Search for the best driver for your device. (Recommended). |
| | < Back Next > Cancel |

9 Click [Have Disk].

| Add Nev | w Hardware Wizard |
|-----------------|---|
| ٨ | Select the manufacturer and model of your hardware device. If you have a disk that contains the updated driver, click Have Disk. To install the updated driver, click Finish. |
| <u>M</u> anufa | |
| AST AT&T | Canon BubbleJet BJ-10e |
| Brother | |
| Bull | Canon Bubble-Jet BJ-20 |
| C-Itoh Canon | Canon Bubble-Jet BJ-30 Canon Bubble-Jet BJ-100 |
| Citizen | Canon Bubbleviet BJ-100 |
| | Have Disk |
| | < <u>B</u> ack Next> Cancel |

10 Click [Browse] to select the folder containing the driver you want to install \rightarrow click [OK].



You can select the driver from the following folder on the CD-ROM:

\FAX\us_eng\win98_me

11 Select your fax model from [Models] \rightarrow follow the instructions on the screen \rightarrow click [Finish] after the files are copied.

| Add Nev | w Hardware Wizard |
|---|---|
| ٩ | Select the manufacturer and model of your hardware device. If you have a disk that contains the updated driver, click Have Disk. To install the updated driver, click Finish. |
| Models: | |
| Canon Canon Canon Canon Canon | ir C3100 (FAX) ir C3100-E1 (FAX) ir C3200 (FAX) ir C3200 (FAX) ir C3200-C1 (FAX) ir C3200-C1 (FAX) ir C3200(FAX) ir C3200-C1 (FAX) ir C3200-C1 (FAX) |
| | Have Disk |
| | < Back Next > Cancel |

The fax driver is now installed.

Plug and Play Installation (Windows Me)

- **1** Connect the cable from the printer's USB port to the PC's USB port, and then turn the printer ON.
- **2** Start Windows, and then insert the Fax Driver Software CD-ROM into the CD-ROM drive.

The Add New Hardware Wizard starts.

3 In the first dialog box of the Add New Hardware Wizard, select [Automatic search for a better driver (Recommended)] → click [Next].



4 Select the [FXUUSBME.INF] file in the [Select Other Driver] dialog box \rightarrow click [OK].

| US_ENG\USBPORT\WINME\FXUUSBME.INF 6-8-2000 |
|--|
| |
| |
| |
| |
| |
| |
| |
| |
| |

5 Follow the instructions on the screen \rightarrow click [Finish] after the files are copied.

The USB driver is now installed. The Add New Hardware Wizard restarts. Continue with the installation to install the fax driver.

6 In the first dialog box of the Add New Hardware Wizard, click [Next].

- 7 Select [Specify the location of the driver (Advanced)] \rightarrow click [Next].
- 8 Select [Display a list of all drivers in a specific location, so you can select the driver you want] → click [Next].
- **9** Select [Printer] as the device type \rightarrow click [Next].
- **10** Click [Have Disk].

| Add New Hardware Wizar | d |
|--|---|
| | turer and model of your hardware device. If you have a e updated driver, click Have Disk. To install the updated |
| Manufacturers: | Mo <u>d</u> els: |
| AST AT AST AST AST AST AST AST AST AST A | Canon Bubble-Jet BJ-10e Canon Bubble-Jet BJ-10ex Canon Bubble-Jet BJ-10ex Canon Bubble-Jet BJ-20 Canon Bubble-Jet BJ-30 Canon Bubble-Jet BJ-100 Canon Bubble-Jet BJ-130 |
| | < Back Next > Cancel |

11 Click [Browse] to select the folder containing the driver you want to install \rightarrow click [OK].



You can select the driver from the following folder on the CD-ROM:

\FAX\us_eng\win98_me

12 Select your fax model from [Models] \rightarrow follow the instructions on the screen \rightarrow click [Finish] after the files are copied.

| Add Nev | w Hardware Wizard |
|---|---|
| ý | Select the manufacturer and model of your hardware device. If you have a disk that contains the updated driver, click Have Disk. To install the updated driver, click Finish. |
| Models: | |
| Canon Canon Canon Canon Canon | IR C3100 (FAX) IR C3100.E1 (FAX) IR C3170 (FAX) IR C3200 (FAX) IR C3200.C1 (FAX) IR C3220 (FAX) IR C3220 (FAX) IR C3220.C1 (FAX) |
| | Have Disk |
| | <pre><back next=""> Cancel</back></pre> |
| | |

The fax driver is now installed.

Plug and Play Installation (Windows 2000)

- **1** Connect the cable from the printer's USB port to the PC's USB port, and then turn the printer ON.
- **2** Start Windows, and then insert the Fax Driver Software CD-ROM into the CD-ROM drive.

The Found New Hardware Wizard starts.

3 In the first dialog box of the Found New Hardware Wizard, click [Next].

4 Select [Display a list of the known drivers for this device so that I can choose a specific driver] \rightarrow click [Next].


| Found New Hardware Wizard |
|---|
| Install Hardware Device Drivers A device driver is a software program that enables a hardware device to work with an operating system. |
| This wizard will complete the installation for this device: |
| Unknown |
| A device driver is a software program that makes a hardware device work. Windows needs driver files for your new device. To locate driver files and complete the installation click Next. |
| What do you want the wizard to do? |
| O Search for a suitable driver for my device (recommended) |
| Display a list of the known drivers for this device so that I can choose a specific driver |
| |
| < Back |

5 Select [Printers] from [Hardware types] \rightarrow click [Next].

6 Click [Have Disk].

| Found New Hardware Wizard |
|---|
| Add Printer Wizard |
| Select the manufacturer and model of your printer. If your printer came with an installation disk, click Have Disk. If your printer is not listed, consult your printer documentation for a compatible printer. |
| Manufacturers: Printers: |
| APS-PS Canon Bubble-Jet BJ-10e |
| AST Canon BubbleJet BJ-10ex AT&T Canon BubbleJet BJ-10sx |
| Brother Canon Bubble Jet BJ-20 |
| Bull Canon Bubble Jet BJ-30 |
| Canon Canon Bubble Jet BJ-100 |
| Have Disk |
| < <u>B</u> ack <u>N</u> ext> Cancel |

7 Click [Browse] to select the folder containing the driver you want to install \rightarrow click [OK].

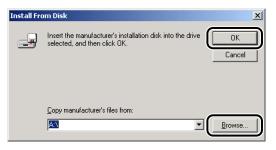

You can select the driver from the following folder on the CD-ROM:

\FAX\us_eng\win2k_xp

8

Select your fax model from [Printers] \rightarrow follow the instructions on the screen \rightarrow click [Finish] after the files are copied.

| Found Ne | lew Hardware Wizard |
|----------------------------------|---|
| Add | Printer Wizard |
| Í | Select the manufacturer and model of your printer. If your printer came with an installation disk, click Have Disk. If your printer is not listed, consult your printer documentation for a compatible printer. |
| Canon Canon Canon Canon | |
| | <u>Back</u> <u>Next</u> Cancel |

The fax driver is now installed.

Plug and Play Installation (Windows XP/Server 2003)

1 Connect the cable from the printer's USB port to the PC's USB port, and then turn the printer ON.

2 Start Windows, and then insert the Fax Driver Software CD-ROM into the CD-ROM drive.

The Found New Hardware Wizard starts.

NOTE 🖉

If you are using an operating system with Windows Firewall, the following dialog box may be displayed. In this case, select [No, not this time] \rightarrow click [Next] to proceed to step 3.



3 Select [Install from a list or specific location (Advanced)] → click [Next].



4 Select [Don't search. I will choose the driver to install] → click [Next].


| und New Ha | rdware Wizard |
|---------------|--|
| Please cho | pose your search and installation options. |
| C <u>S</u> ea | rch for the best driver in these locations. |
| | the check boxes below to limit or expand the default search, which includes local s and removable media. The best driver found will be installed. |
| v. | Search removable media (floppy, CD-ROM) |
| Г | Include this location in the search: |
| | G:\ Browse |
| Choo | 't search. I will choose the driver to install.) |
| the d | river you choose will be the best match for your hardware. |
| | |
| | |
| | < <u>B</u> ack <u>N</u> ext > Cancel |

5 Select [Printer] from [Hardware types] \rightarrow click [Next].

6 Click [Have Disk].



7 Click [Browse] to select the folder containing the driver you want to install \rightarrow click [OK].

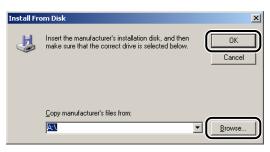

You can select the driver from the following folder on the CD-ROM:

\FAX\us_eng\win2k_xp

| Found Ne | ew Hardware Wizard |
|----------------------------------|---|
| Add | Printer Wizard |
| I | Select the manufacturer and model of your printer. If your printer came with an installation disk, click Have Disk. If your printer is not listed, consult your printer documentation for a compatible printer. |
| Canon Canon Canon Canon | IR1600-2000 (FAX) IR2200-3300 (FAX) IR2 (B2200 (FAX) IC2300 (FAX) LC2300 (FAX) LC500 (FAX) LC700 (FAX) |
| | Have Disk |
| | <u> < B</u> ack <u>N</u> ext > Cancel |

The fax driver is now installed.


Installing the Canon Driver Information Assist Service

After installing the fax driver, you can setup the fax configuration automatically and use the Job Accounting feature. If you are using a shared fax in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC.

If the software is not installed in your computer, follow the procedure below to install it.

- **1** Insert the Fax Driver Software CD-ROM into the CD-ROM drive.
- 2 Double-click the [My Computer] icon → the CD-ROM drive icon.
- **3** Double-click the following folders: $[FAX] \rightarrow [us_eng]$.
- **4** Double-click the [Setup.exe] icon to start the installation process.

5 In the first dialog box of the Fax Driver Setup Wizard, click [Next].

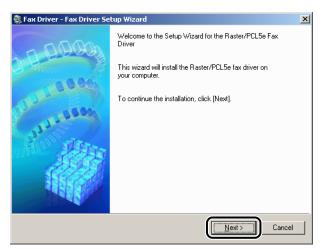

The [License Agreement] dialog box is displayed.

6 Read the license agreement carefully. If you agree to the terms \rightarrow click [Yes].

7 Select [Manually Set Port to Install] \rightarrow click [Next].



8 Select [Canon Driver Information Assist Service] → click [Next].



NOTE

If you are using an operating system equipped with Windows Firewall, when the following message box is displayed, click [Yes] or [No].

- If you select [Yes], Windows Firewall will be configured to unblock the connection for Canon Driver Information Assist Service, so that you can set up the configuration automatically or use the Job Accounting feature.
- If you select [No], you cannot use Canon Driver Information Assist Service.



9 After the files are copied, click [Exit] to finish the installation.

If you want to restart your computer, select [Restart My Computer Now].

The Canon Driver Information Assist Service is now installed.

Updating the Existing Fax Drivers

Canon machines whose fax drivers can be updated using this version of the driver are listed under "Supported Canon Products," on p. 1-2.

Using the Installer

If you use the Installer to install new fax drivers, the Installer updates the existing ones at the same time that the new drivers are installed.

You can also update the existing drivers already installed without having to add a new driver by following the procedure below.

NOTE

You can also update an old version of the alternate printer driver simultaneously.

1 Start the Installer \rightarrow follow the instructions in the dialog boxes.

See steps 1 to 8 of "Standard Installation," on p. 2-3.

2 Select [Update Existing Drivers] \rightarrow click [Next].

| 🎄 Fax Driver - Fax Driver Setup Wizard 🔀 |
|---|
| Select Process Select the items to install and the process to install the fax driver. |
| ✓ Raster/PCL5e Fax Driver |
| Process to Install Fax Driver |
| Add Faxes and Update Existing Drivers |
| C Add Faxes C Update Existing Drivers |
| Canon Driver Information Assist Service Install this service only if you want to add shared faxes, obtain device information, or use the job accounting function. |
| < <u>B</u> ack Cancel |

3 Verify the installation settings \rightarrow click [Start].

| 🍓 Fax Driver - Fax Driver Setup Wizard | × |
|---|------------------|
| The setup program will install the drivers with the fo Confirm the settings. | lowing settings. |
| Fax List for Driver Installation: | |
| = Update = Fax Canon iR C3200 (FAX) Driver : Canon iR C3200 (FAX) Port : LPT1: | |
| Click [Start] to install. | |
| | < Back |

4 After the files are copied, click [Exit] to finish the installation.

Restart your computer when a message appears prompting you to do so.

The fax drivers already installed are now updated.

IMPORTANT

To use the updated alternate printer driver on the client PC, first uninstall the current printer driver \rightarrow double-click the shared printer icon for the updated alternate printer driver on the server PC.

Using the Add Printer Wizard

1 Insert the Fax Driver Software CD-ROM into the CD-ROM drive.

2 On the [Start] menu, point to [Settings] \rightarrow click [Printers].

NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].

- 3 In the [Printers] folder, right-click the fax driver icon you want to update \rightarrow click [Properties].
- 4 Click the [Details] tab (Windows 98/Me), [General] tab (Windows NT 4.0), or [Advanced] tab (Windows 2000/XP/ Server 2003).
- **5** Click [New Driver] \rightarrow follow the instructions on the screen.

| Canon iR2200-3300 (FAX) Properties | ? × |
|---|------|
| General Details Edit Address Book Register Cover Sheet Special Configuration | |
| Canon iR2200-3300 (FAX) | |
| Print to the following gort: LPT1: (ECP Printer Port) ✓ | |
| Print using the following driver: Canon iR2200-3300 (FAX) | |
| Capture Printer Port End Capture | |
| Timeout settings Not selected: 15 seconds | |
| Transmission retry: 180 seconds | |
| Spool Settings Port Settings | |
| | |
| OK Cancel Apply | lelp |

NOTE

For Windows NT 4.0, take note of the fax name displayed at the top of the [Details] sheet.

6 Click [Have Disk] to specify the driver path on the CD-ROM → follow the instructions on the screen.

| Add Print | ter Wizard | |
|---|------------|--|
| ٩ | | nd model of your printer. If your printer came with an ve Disk. If your printer is not listed, consult your printer patible printer. |
| Manufac Brother Bull C-Itoh Canon Citizen Compac Datapro | | ninters: Canon iR5000-6000 PS3 Canon iR200-3300 PS3 Canon iR105 PS3 Canon iR105 PS3 Canon iR500 PS3 Canon iR500 e53 Canon iR500 e500-L1 PCL6 Canon iR5500-M1 PCL6 Lave Disk |
| | | <back next=""> Cancel</back> |

If you are using Windows NT 4.0, proceed to step 7.

If you are using Windows 98/Me/2000/XP/Server 2003, skip to step 8.

For Windows 98/Me/2000/XP/Server 2003, the fax driver is updated.

7 If a message box appears asking whether you want to replace the existing driver, select [Replace existing driver] → click [OK].



The fax driver is updated.

NOTE 🖉

Check whether the fax name has been changed. If so, rename the fax with its original name, which you have taken note of in step 5. For example, you may see the fax name being changed in the following way: from <Canon iR2200-3300 (FAX)> to <Canon iR2200-3300 (FAX) (Copy 2)>.

- 8 Repeat steps 1 to 7 for all other existing Canon fax drivers, if necessary.
- **9** Restart the computer.
- 10 Check the fax configuration settings in the [Configuration] sheet (for Windows 98/Me) or [Device Settings] sheet (for Windows NT 4.0/2000/XP/Server 2003), and then reconfigure them if they have been changed.

NOTE

- For the imageRUNNER 400/330 and imageRUNNER 400/330-P1/R1, [Configuration] sheet is displayed regardless of the operating system you are using.
- If you are using a shared fax in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to set up the fax configuration automatically or to use the Job Accounting feature. (See "Installing the Canon Driver Information Assist Service," on p. 2-36.)

Updating the Alternate Fax Driver (Windows NT 4.0/2000/ XP/Server 2003)

If you use a shared fax on a network, and an alternate fax driver is installed on the server, the alternate fax driver is updated simultaneously when you install a new driver with the Installer. To update the alternate fax driver manually without using the Installer, follow the procedure below.

Windows NT 4.0

- **1** On the [Start] menu, point to [Settings] \rightarrow click [Printers].
- 2 In the [Printers] folder, right-click the shared fax driver you want to update → click [Properties].
- **3** In the fax properties dialog box, click the [Sharing] tab.

4 Select the alternate fax driver you want to update from [Alternate Drivers] \rightarrow click [OK].

| 🖗 Canon iR2200-3300 (FAX) Properties | ? × |
|---|----------------|
| General Ports Scheduling Sharing Security Configuration | |
| 🏈 Canon iR2200-3300 (FAX) | |
| C Not Shared | |
| ● <u>S</u> hared | |
| Share Name: CanoniR2 | |
| You may install alternate drivers so that users on the following systems can download them automatically when they connect. | |
| Windows NT 4.0 x86 [installed] Windows NT 4.0 MIPS Windows NT 4.0 Alpha Windows NT 4.0 Alpha Windows NT 3.5 or 3.51 x86 Windows NT 3.5 or 3.51 MIPS | |
| To modify the permissions on the printer, go to the Security tab. | |
| | |
| | |
| | OK Cancel Help |

5 When a message appears prompting you to insert the CD-ROM, insert the Fax Driver Software CD-ROM into the CD-ROM drive \rightarrow click [OK].

6 Click [Browse] to specify the driver path in the CD-ROM \rightarrow click [OK].

The alternate fax driver is updated.

To use the updated fax driver on the client PC, first uninstall the current fax driver \rightarrow double-click the shared printer icon for the updated alternate fax driver on the server PC.

1 On the [Start] menu, point to [Settings] \rightarrow click [Printers].

NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- 2 Click [Server Properties] on the [File] menu to open the [Print Server Properties] dialog box → click the [Drivers] tab.
- 3 Select the alternate fax driver you want to update → click [Update] (Windows 2000), [Replace] (Windows XP), or [Reinstall] (Windows Server 2003).

| 🗳 Print Server Properties | <u>?</u> × |
|--|------------|
| Forms Ports Drivers Advanced | |
| | |
| Installed printer drivers: | |
| AdobePS Acrobat Distiller Intel Windows 2000 | = |
| Canon iR2200-3300 (FAX) Intel Windows 2000 | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| Add <u>R</u> emove <u>U</u> pdate Prop <u>e</u> rtie | s |
| OK Cancel A | pply |

4 When a message appears prompting you to insert the CD-ROM, insert the Fax Driver Software CD-ROM into the CD-ROM drive → click [OK].

5 Click [Browse] to specify the driver path in the CD-ROM \rightarrow click [OK].

The alternate fax driver is updated.

IMPORTANT

To use the updated fax driver on the client PC, first uninstall the current fax driver \rightarrow double-click the shared fax icon for the updated alternate fax driver on the server PC.

Uninstalling the Fax Driver

It is recommended that you use the Uninstaller to uninstall an unnecessary driver.


- 1 On the [Start] menu, point to [Programs] → [Canon Printer Uninstaller] → click [Raster PCL5e Fax Driver Uninstaller].
- 2 In the [Delete Fax] dialog box, select the fax driver you want to delete.

| 🥳 Delete Fax | | × |
|--|--------------------------------------|----------------|
| To start deleting, select the fax you wa | ant to delete and then click Delete. | |
| Caultana | | |
| Canon iR C3200 (FAX) | Driver Name | Version |
| Canon IR C3200 [FAX] | Canon iR C3200 (FAX) | x.xx |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| , | | |
| | Select <u>A</u> ll | <u>D</u> elete |
| | | |
| | Г | Evà |
| | | E <u>x</u> it |

3 Click [Delete].



5 Click [Exit] in the [Delete Fax] dialog box.

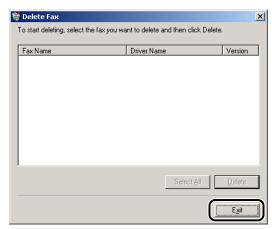

Ø NOTE

You can also start the Uninstaller from the Fax Driver Software CD-ROM. To do so, double-click the [UNINSTAL.exe] icon in the following folder: \FAX\us_eng\misc

Specifying the Installed Optional Fax Board

Before sending a document by fax, you may need to specify the optional fax board installed in your fax.

The fax configuration can be setup automatically while installing the driver, depending on the port selected for the machine. If the machine cannot be configured automatically, follow the procedure below in order to do it manually.

NOTE

- A fax board can be specified for the imageRUNNER C3170, imageRUNNER 2010F, imageRUNNER 2870/2270, imageRUNNER 2870G/2270G, imageRUNNER 4570/3570, imageRUNNER 4570G/3570G, imageRUNNER 5070, imageRUNNER 6570/5570, and LASER CLASS 700 series.
- You can specify the line to use for fax transmission after specifying the optional fax board.

1 On the [Start] menu, point to [Settings] \rightarrow click [Printers].

NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- 2 In the [Printers] folder, right-click the printer icon for your fax \rightarrow click [Properties].

3 In the fax properties dialog box, click the [Configuration] tab (for Windows 98/Me) or [Device Settings] tab (for Windows NT 4.0/2000/XP/Server 2003).

The [Configuration] sheet (for Windows 98/Me) or [Device Settings] sheet (for Windows NT 4.0/2000/XP/Server 2003) is displayed.

| non iR1600-2000 (FAX |) Properties | ? |
|--------------------------|---|------|
| ieneral Details Edit Add | tress Book Register Cover Sheet Special Configuration | |
| Fax Board Options: | None | |
| Uob Accounting | Settings | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | Get Device Status About | |
| | OK Cancel Apply | Help |



For the imageRUNNER 400/330 and imageRUNNER 400/330-P1/R1, [Configuration] sheet is displayed regardless of the operating system you are using.

4 Select an optional fax board from [Fax Board Options].

5 Click [OK].

The installed optional fax board is specified.



- After the optional fax board is selected, set the telephone line for fax transmission from [Line Selection] in the [Special] sheet.
- Clicking [Get Device Status] automatically specifies the optional fax board. If you are using a shared fax in the Print Server (Point and Print) environment, however, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to set up the fax configuration automatically by clicking [Get Device Status]. (See "Installing the Canon Driver Information Assist Service," on p. 2-36.)
- If you are using a local fax (connected to an LPT port, USB port, etc.), you cannot set up the fax configuration automatically.

Specifying the Installed Fax Memory

Before sending a document by fax, you need to specify the amount of fax memory.

🥟 NOTE

- Fax memory can be specified for the imageRUNNER 400/330 and imageRUNNER 400/ 330-P1/R1.
- The number of recipients to which you can send simultaneously depends on the fax memory.

1 On the [Start] menu, point to [Settings] \rightarrow click [Printers].

NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- 2 In the [Printers] folder, right-click the printer icon for your fax \rightarrow click [Properties].

3 In the fax properties dialog box, click the [Configuration] tab (for Windows 98/Me) or [Device Settings] tab (for Windows NT 4.0/2000/XP/Server 2003).

The [Configuration] sheet (for Windows 98/Me) or [Device Settings] sheet (for Windows NT 4.0/2000/XP/Server 2003) is displayed.

| 爹 Canon iR330-400 PCL | (FAX) Properties | <u>? ×</u> |
|-----------------------|---------------------------------|-------------------|
| General Sharing Ports | Advanced Security Configuration | 1 |
| Fax Memory: | 32 MB | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | About |
| | OK | Cancel Apply Help |

NOTE

For the imageRUNNER 400/330 and imageRUNNER 400/330-P1/R1, [Configuration] sheet is displayed regardless of the operating system you are using.

4 Select the amount of memory from [FAX Memory].

5 Click [OK].

The installed memory size is specified.

3 CHAPTER

Fax Driver Options

This chapter describes instructions for faxing a document, and specifying various settings for faxing documents.

| Faxing a Document. | |
|--|--|
| Sending a Document | |
| Sending to a Remote Memory Box | |
| Specifying Recipients | |
| Adding a New Name and Fax Number | |
| Adding a Recipient from the Address Book | |
| Defining Address Book Entries | |
| Person (Single) Entry | |
| Group Entry | |
| Registering Additional Address Books | |
| Attaching a Cover Sheet to a Fax | |

Faxing a Document

This section describes how to fax a document and how to send a document to the memory box of the recipient's fax.

Sending a Document

To send a document by fax, follow the procedure below.

1 In application software, with the document open, select [Print].

2 In the [Print] dialog box, select your fax from [Name] \rightarrow click [Properties].

The fax properties dialog box opens.

NOTE

Some application software may have a different method with which to select a fax driver.

3 Specify the various settings in the [Edit Address Book], [Register Cover Sheet], and [Special] sheets \rightarrow click [OK].

| dit Address Book Register Cover Sheet Special | | | | | |
|---|------------------------|------------|------------|---------------|--------------------|
| Show: All | | | | - | |
| Address <u>B</u> ook: | | | | | |
| Recipient Name | Company | Dept./Div. | Fax Number | Descrip 🔺 | Add Person |
| 🕵 System | | | | | Add Course |
| 😳 Sales | | | | | Add G <u>r</u> oup |
| 🕵 Robert Brown | XYZ Corporation | System | 012xxxx | | Edit |
| 👲 Peter Wilson | ABC Company | | 123жжж | | |
| 🔯 Management | | | | | Delete |
| 🙎 Lucie Jones | XYZ Corporation | Sales | O14xxxx | | 2000 |
| 👲 John Smith | XYZ Corporation | System | 012xxxx | -1 | |
| S Andrew Johns | ABC Company | | 1250000 | | |
| • | | | | | |
| Detaiļs: | | | | | |
| Notes : | | | | <u></u> | |
| | | | | | |
| John Smith : 012xxx Bobert Brown : 012y | /000 | | | | |
| | (XXX | | | | |
| | (XXX | | | = | |
| John Smith : 012xxx Robert Brown : 012x | xxx | | | V | |
| | xxx | | | ب <u>۲</u> | |
| | | | . 1 | P | 1 |
| | specify a <u>F</u> old | er | Import | Export | About |

4 Click [OK] in the [Print] dialog box.

The [Fax Sending Settings] dialog box opens.

5 In the [Sending Settings] sheet, specify the name and fax number of the fax recipient \rightarrow click [Add to Recipient List].

| Fax Sending Settings | | ? × |
|-----------------------------------|----------------------------|-----------------------------|
| Sending Settings Edit Address | s Book Cover Sheet | , |
| Recipient <u>N</u> ame: | Robert Brown |) |
| Fa <u>x</u> Number: | 012xxxx |) |
| Advanced Eunction: | Subaddress : Off | <u>S</u> ettings |
| | | Add to Address <u>B</u> ook |
| | Add to Recipient List | |
| Recipient List: Recipient Name | Fax Number | Address Book |
| Hooplank Hanta | | |
| | | Delete |
| | | |
| | | |
| Number of Recipients: | 0 | |
| ☐ Set the <u>T</u> ime to Send | | |
| Sending Time : | 00 : 00 × (00:00 to 23:59) | |
| | | OK Cancel Help |

6 Click the [Cover Sheet] tab → specify a format for the cover sheet attachment.

| ax Sending Settings | | | | ? > |
|---|------------|---|--------------------------|------------------|
| Sending Settings Edit Address Boo Cover She | et | | | |
| Cover Sheet A | ttachment: | Different Sheet to I | Each Recipient | |
| Style: | | Template 1 | | - |
| | e: | Sender Sender Name: Company: Dept./Div.: Fax Number: Recipient | Yes Yes Yes Yes | • |
| ☐ Insert <u>A</u> tte | ntion Note | | Γ | <u>S</u> ettings |
| Attention | | Urgent | | × |
| Comment to Include: | | orgent | | |
| | | | | A V |
| | | | | Pre <u>v</u> iew |
| | | OK | Cancel | Help |

7 Click [OK] in the fax properties dialog box.

The fax is sent to the specified recipient(s).

NOTE

For the Color imageRUNNER C2620-C1, Color imageRUNNER C2620-C2, Color imageRUNNER C3200-C1, Color imageRUNNER C3220-C1, Color imageRUNNER C3220-C2, imageRUNNER C3100-E1, imageRUNNER C5800-D1, imageRUNNER C5870-G1, imageRUNNER C6800-D1, imageRUNNER C6870-G1, or imageRUNNER 6570/5570-M3, print jobs sent from the fax driver are not recorded on the controller job log.

Sending to a Remote Memory Box

This mode is useful for sending a confidential document by fax. Documents that are to be sent and stored in the memory box of the recipient's fax require a valid subaddress and password.

Ø NOTE

- Obtain the subaddress and password of the memory box of the recipient's fax from the recipient.
- This function is not available for the imageRUNNER 2016, imageRUNNER 2020, imageRUNNER 400/330, imageRUNNER 400/330-P1/R1, LASER CLASS 510, and MF7280.
- In application software, with the document open, select [Print].

2 In the [Print] dialog box, select your fax name from [Name] → click [Properties].

The fax properties dialog box opens.

Ø NOTE

Some application software may have a different method for selecting a fax driver.

3 Specify the various settings in the [Edit Address Book], [Register Cover Sheet], or [Special] sheet \rightarrow click [OK].

| , Address Book: | | | | - | |
|--|-----------------|------------|------------|-----------|--------------------|
| - Recipient Name | Company | Dept./Div. | Fax Number | Descrip 🔺 | Add Perso <u>n</u> |
| 👧 System | | | | | Add Course |
| 🕵 Sales | | | | | Add G <u>r</u> oup |
| 🕵 Robert Brown | XYZ Corporation | System | 012xxxx | | Edit |
| 🕵 Peter Wilson | ABC Company | | 123xxxx | | |
| 🔯 Management | | | | | Delete |
| 🕵 Lucie Jones | XYZ Corporation | Sales | O14xxxx | | <u>D</u> 0000 |
| 👲 John Smith | XYZ Corporation | System | 012xxxx | _ | |
| Andrew Johns | ABC Company | | 125000 | | |
| | | | | | |
| Detaiļs: | | | | | |
| Notes: | | | | <u> </u> | |
| John Smith : 012xxx Robert Brown : 012; | | | | | |
| | | | | | |
| | | | | | |
| - | | | | | |
| | | | | | |

4 Click [OK] in the [Print] dialog box.

The [Fax Sending Settings] dialog box opens.

5 In the [Sending Settings] sheet, specify the name and fax number of the recipient.

6 Click [Settings].

| Fax Sending Settings | | ?× |
|--------------------------------|----------------------------|-----------------------------|
| Sending Settings Edit Address | Book Cover Sheet | |
| Recipient <u>N</u> ame: | Robert Brown | _ |
| Fa <u>x</u> Number: | 012xxxx | _ |
| Advanced Eunction: | Subaddress : Off | <u>S</u> ettings |
| | , | Add to Address <u>B</u> ook |
| | Add to Recipient List | |
| Re <u>c</u> ipient List: | | |
| Recipient Name | Fax Number | Address Book |
| | | Delete |
| | | |
| | | |
| Number of Recipients: | 0 | |
| ☐ Set the <u>T</u> ime to Send | | |
| Sending Time : | 00 : 00 = [00:00 to 23:59] | |
| | | OK Cancel Help |

7 Select [Use Subaddress] \rightarrow enter the subaddress and password of the memory box of the recipient's fax \rightarrow click [OK].

| anced Function Settings |
|-------------------------|
| Subaddress: Password: |
| OK Cancel Help |

8 Click [Add to Recipient List].

9 Click the [Cover Sheet] tab → specify the format of the cover sheet attachment.

| Fax Sending Settings | | | | ? × |
|----------------------------------|----------------------------|--|--------------------------|-----------------------|
| Sending Settings Edit Address Bo | Cover Sheet | | | |
| | Cover Sheet Attachment: | Different Sheet to Ea | ch Recipient | E) |
| | S <u>t</u> yle: | Template 1 | | • |
| | Items to I <u>n</u> clude: | Sender Sender Name: Company: Dept./Div.: Fax Number: | Yes Yes Yes Yes | 1 |
| | | Recipient | | ▼ <u>S</u> ettings |
| | Insert Attention Note | | _ | |
| | Attention Note: | Urgent | | v. |
| Comment to Include: | | | | |
| | | | | 4 |
| | | | Γ | Pre⊻iew |
| | | OK | Cancel | Help |

10 Click [OK] in the [Fax Sending Settings] dialog box.

The document is sent to and stored in the memory box of the recipient's fax.

NOTE

The data can be output only if the correct password is specified on the recipient's fax.

Specifying Recipients

You can specify the names and fax numbers of people you want to send a fax to, by adding them to [Recipient List]. You can add recipients by:

- Entering a new name and a new fax number in [Recipient Name] and [Fax Number].
- Selecting a recipient in the [Select Recipient from Address Book] dialog box.

Ø NOTE

For Windows NT 4.0/2000/XP/Server 2003, you can use or edit the Address Book only if you are permitted access to the folder where the Address Book file is saved (by default, Power Users and higher have access to the folder). If you are not permitted access to the folder, you can use the Address Book in one of the following ways:

- Log on as a user who has access to the folder.
- Click [Specify a Folder] in the [Edit Address Book] sheet, and save the Address Book file in a folder, such as the My Documents folder, where you have Write permission.

Adding a New Name and Fax Number

1 From the [Fax Sending Settings] dialog box, display the [Sending Settings] sheet.

| x Sending Settings | | ? |
|--------------------------------|----------------------------|-----------------------------|
| Sending Settings Edit Addres | s Book Cover Sheet | |
| Recipient <u>N</u> ame: | | |
| Fa <u>x</u> Number: | | |
| Advanced Eunction: | Subaddress : Off | Settings |
| | ļ | Add to Address <u>B</u> ook |
| | Add to Recipient List | |
| Re <u>c</u> ipient List: | | |
| Recipient Name | Fax Number | Address Book |
| Robert Brown | 012**** | Delete |
| Number of Recipients: | 1 | |
| ☐ Set the <u>I</u> ime to Send | | |
| Sending Time : | 00 : 00 + [00:00 to 23:59] | |
| | | OK Cancel Help |

For details on how to access the [Fax Sending Settings] dialog box, see "Sending a Document," on p. 3-2.

2 Enter the name and fax number you want to add in [Recipient Name] and [Fax Number].

3 Click [Add to Recipient List].

The new recipient is displayed in [Recipient List].

Adding a Recipient from the Address Book

1 From the [Fax Sending Settings] dialog box, display the [Sending Settings] sheet.

| x Sending Settings | | <u>?</u> × |
|--------------------------------|----------------------------|------------------------------|
| Sending Settings Edit Addres | s Book Cover Sheet | |
| Recipient <u>N</u> ame: | | _ |
| Fa <u>x</u> Number: | | _ |
| Advanced Eunction: | Subaddress : Off | Settings |
| | J | Add to Address <u>B</u> ook. |
| | Add to Recipient List | |
| Re <u>c</u> ipient List: | | |
| Recipient Name | Fax Number | Address Book |
| Robert Brown | 012xxxx | Delete |
| Number of Recipients: | 1 | |
| | • | |
| Set the <u>T</u> ime to Send | | |
| Sending Time : | 00 : 00 💌 (00:00 to 23:59) | |
| | | OK Cancel Help |

For details on how to access the [Fax Sending Settings] dialog box, see "Sending a Document," on p. 3-2.

2 Click [Address Book].

The [Select Recipient from Address Book] dialog box opens.

| elect Recipient from Addr | ess Book | | | | ? |
|----------------------------|------------------------|------------------|--------------|-------------------|---------------|
| Address <u>B</u> ooks: | A <u>d</u> dress List: | <u>S</u> earch t | y Recipient: | | |
| 😣 Canon Fax Driver Address | Book Recipient Name | Company | Dept./Div. | Fax Number | Description 🔺 |
| | 👷 Andrew Johnson | n ABC Com | | 125xxxx | |
| | 🧕 🧕 John Smith | XYZ Corp | System | 012xxxx | |
| | 🛛 👷 Lucie Jones | XYZ Corp | Sales | 014xxxx | |
| | 🕵 Management | | | | |
| | 👷 Peter Wilson | ABC Com | | 123xxxx | |
| | 👷 Robert Brown | XYZ Corp | System | 012xxxx | - |
| 4 | - La 2 00 | | | | |
| | | | | | |
| D <u>e</u> tails: | | | | | |
| | | | | | * |
| | | | | | |
| ļ | | | | | 7 |
| | | dd to List | <u> </u> | | |
| | | an or First | | | |
| Re <u>c</u> ipient List: | | | | | |
| | | | | | |
| | | | | | |
| | | | _ | | |
| Number of Recipients: | 0 | | | <u>R</u> emove fr | om List |
| | | | | | |
| | | | | OK | Coursel |
| | | | | OK | Cancel |

3 Select the address book you want to use from [Address Books].

NOTE

If you want to use an address book other than Canon Fax Driver Address Book, register the book before using it. (See "Registering Additional Address Books," on p. 3-24.)

4 Select an entry \rightarrow click [Add to List].

5 Click [OK] in the [Select Recipient from Address Book] dialog box.

The new recipient is displayed in [Recipient List] in the [Sending Settings] sheet.

This section describes instructions for defining person and group entries in the [Edit Address Book] sheet.

Ø NOTE

For Windows NT 4.0/2000/XP/Server 2003, you can use or edit the Address Book only if you are permitted access to the folder where the Address Book file is saved (by default, Power Users and higher have access to the folder). If you are not permitted access to the folder, you can use the Address Book in one of the following ways:

- Log on as a user who has access to the folder.
- Click [Specify a Folder] in the [Edit Address Book] sheet, and save the Address Book file in a folder, such as the My Documents folder, where you have Write permission.

Person (Single) Entry

Clicking [Add Person] in the [Edit Address Book] sheet opens the [Add Person] dialog box for defining a new person (single) entry. You see the same dialog box under the title [Edit Person], if you click [Edit] in the [Edit Address Book] sheet when a person (single) entry is selected from [Address Book]. The [Edit Person] dialog box enables you to change information on an existing person (single) entry.

New Entry

1 From the fax properties dialog box, display the [Edit Address Book] sheet.

| Show: All | legister Cover Sheet | Special | | - | |
|--|----------------------|------------|------------|-----------|--------------------|
| Address Book: | | | | _ | |
| - Recipient Name | Company | Dept./Div. | Fax Number | Descrip 🔺 | Add Perso <u>n</u> |
| 🕵 System | | | | | Add Crown |
| 🙀 Sales | | | | | Add Group |
| 🕵 Robert Brown | XYZ Corporation | System | 012xxxx | | Edit |
| 👷 Peter Wilson | ABC Company | | 123xxxx | - | |
| 🕵 Management | | | | | Delete |
| 👷 Lucie Jones | XYZ Corporation | Sales | O14xxxx | | <u>D</u> 0/040 |
| 🕵 John Smith | XYZ Corporation | System | 012xxxx | | |
| Andrew Johns | ABC Company | | 1250000 | | |
| | | | | | |
| Detaiļs: | | | | | |
| Notes: | | | | | |
| John Smith : 012xxx Robert Brown : 012x | | | | | |
| inobolic biolini : orbi | | | | | |
| | | | | = | |
| न । | | | | | |
| | | | | | |
| | | | . 11 | _ | |
| | Specify a Fold | er | Import | Export | About |

For details on how to access the fax properties dialog box, see "Sending a Document," on p. 3-2.

2 Click [Add Person].

The [Add Person] dialog box opens.

| Add Person | ? |
|-----------------------------|--|
| Prefix: Eirst: | Last: Suffig: |
| Recipient <u>N</u> ame: | |
| <u>C</u> ompany: | |
| Dept./Div.: | |
| Fax Number | |
| Primary Number: | |
| Descrip <u>t</u> ion: | |
| Secondary Number: | |
| Descripti <u>o</u> n: | |
| Ad <u>v</u> anced Function: | Subaddress Primary Number : Off Secondary Number : Off |
| Not <u>e</u> s: | <u>×</u> |
| | OK Cancel <u>H</u> elp |

3 Enter information about the new person, such as [Recipient Name] and [Company].

4 Enter the fax number.

You can enter two fax numbers: a primary number and a secondary number.

5 Enter information about the fax numbers in each respective [Description].

6 If you want to send documents to the memory box of the recipient's fax, click [Settings].

If you do not want to use this option, skip to step 8.

NOTE

For the imageRUNNER 2016, imageRUNNER 2020, imageRUNNER 400/330, imageRUNNER 400/330-P1/R1, LASER CLASS 510, and MF7280, [Settings] is not displayed. If you are using one of these models, skip to step 8.

7 Select [Use Subaddress for Primary Number] and/or [Use Subaddress for Secondary Number] \rightarrow enter the subaddress and the password of the recipient's fax \rightarrow click [OK].

| <u>S</u> ubaddress: | | | |
|----------------------|--------------|--------|--|
| Password: | Ē | | |
| Use Subaddress I | or Secondary | Number | |
| Su <u>b</u> address: | | | |
| | | | |

Ø NOTE

- Obtain the subaddress and password of the memory box of the recipient's fax from the recipient.
- You can leave the password blank if password is not registered at the recipient's fax.

8 Enter any additional information about the person in [Notes].

9 Click [OK] to create the new person (single) entry.

NOTE

If you specify two fax numbers for one person, two entries for that person are displayed in [Address Book].

Edit Entry

1 From the fax properties dialog box, display the [Edit Address Book] sheet \rightarrow select [Person] from [Show].

| ddress Book: | rson | | | | |
|---------------------------------|-----------------|------------|------------|-------------|--------------------|
| Recipient Name | Company | Dept./Div. | Fax Number | Description | Add Perso <u>n</u> |
| Andrew Johns | | | 125хжж | | Add Group |
| 👷 John Smith | XYZ Corporation | System | 012xxxx | - H | Add alloab |
| 👲 Lucie Jones | XYZ Corporation | Sales | 014xxxx | | <u>E</u> dit |
| 👰 Peter Wilson | ABC Company | | 123xxxx | | |
| 👲 Robert Brown | XYZ Corporation | System | 012xxxx | | Delete |
| etaiļs: | | | | | |
| Prefix : | | | | | |
| irst : Andrew .ast : Johnson | | | | | |
| Suffix : | | | | | |
| lotes : | | | | T | |
| | | | | | |
| (| | | | | |

For details on how to access the fax properties dialog box, see "Sending a Document," on p. 3-2.

All person (single) entries are displayed in [Address Book].

2 Select the person you want to edit \rightarrow click [Edit].

The [Edit Person] dialog box opens.

| Edit Person | ?> |
|-----------------------------|---|
| Prefix: Eirst: | Last: Suffig: |
| Recipient <u>N</u> ame: | Robert Brown |
| <u>C</u> ompany: | XYZ Corporatiom |
| Dept./Div.: | System |
| Fax Number | |
| Primary Number: | 012xxxx |
| Descrip <u>t</u> ion: | |
| Secondary Number: | |
| Descripti <u>o</u> n: | |
| Ad <u>v</u> anced Function: | Subaddress Primary Number : Off Secondary Number: Off |
| | |
| Not <u>e</u> s: | × |
| | OK Cancel <u>H</u> elp |

- **3** Update the information if necessary.
- **4** Click [OK] to modify the selected person (single) entry.

Delete Entry

- **1** Select the person (single) entry you want to delete from [Address Book].
- **2** Click [Delete].

Group Entry

Clicking [Add Group] in the [Edit Address Book] sheet opens the [Add Group] dialog box for defining a new group. A group can contain both persons and other groups. You see the same dialog box under the title [Edit Group], if you click [Edit] in the [Edit Address Book] sheet when a group entry is selected from Address Book.

The [Edit Group] dialog box enables you to change information on an existing group entry.

New Group

1 From the fax properties dialog box, display the [Edit Address Book] sheet.

| ompany Dept./Div. Fax Number Description YZ Corporation System 012xxxx BC Company 123xxxx Edit YZ Corporation Sales 014xxxx PC Corporation System 012xxxx RF Company 125xxxx T |
|---|
| YZ Corporation System 012xxxx BC Company 123xxxx YZ Corporation Sales 014xxxx Delete |
| YZ Corporation System 012xxxx Edit BC Company 123xxx Delete YZ Corporation Sales 014xxxx YZ Corporation System 012xxxx RC Company 125xxx |
| YZ Corporation System 012xxxx Edit BC Company 123xxx Delete YZ Corporation Sales 014xxxx YZ Corporation System 012xxxx RC Company 125xxx |
| BC Company 123xxx YZ Corporation Sales 014xxxx PZ Corporation System 012xxxx BC Company 125vxxx Company 125vxx Company 125vx Company 125vx Com |
| YZ Corporation Sales 014xxxx Z Corporation System 012xxxx RC Company 125xxxx |
| V2 Corporation Sales 014xxxx V2 Corporation System 012xxxx RC Company 125vxxx |
| V2 Corporation Sales 014xxxx V2 Corporation System 012xxxx RC Company 125vxxx |
| |
| |
| |
| 2 |
| |
| |
| |
| |
| |
| T |
| ¥. |
| E E |
| |
| |
| * |

For details on how to access the fax properties dialog box, see "Sending a Document," on p. 3-2.

2 Click [Add Group].

The [Add Group] dialog box opens.

| d Group | | | | ? |
|----------------------------|-----------------|------------|------------|-----------------|
| oup <u>N</u> ame: | | | | |
| Recipients to Add | | | | |
| Show: Pe | rson | | • | |
| Available Recipients: | | | | |
| Recipient Name | Company | Dept./Div. | Fax Number | Description |
| S Andrew Johns | | | 125xxxx | 1 |
| 👰 John Smith | XYZ Corporation | System | 012xxxx | |
| 👰 Lucie Jones | XYZ Corporation | Sales | 014xxxx | |
| 👰 Peter Wilson | ABC Company | | 123xxxx | |
| 👰 Robert Brown | XYZ Corporation | System | 012xxxx | |
| | | | Delete | • |
| | A <u>d</u> d | | Delete | |
| Details | | | | |
| <u>C</u> urrent Group Memb | ers: | | | |
| Not <u>e</u> s: | | | | |
| | | | OK Canc | el <u>H</u> elp |

3 Enter the new group name.

4 Select persons or groups as members of the new group from [Available Recipients] → click [Add].

If you want to add a group to the new group, select [Group] or [All] from [Show] to view group entries.

To remove an entry from [Current Group Members], select it \rightarrow click [Delete].

NOTE

You can select multiple entries by holding down [SHIFT] or [CTRL] on the keyboard and clicking each entry that you want to select.

5 Click [OK] to create the new group entry.

Edit Group

1 From the fax properties dialog box, display the [Edit Address Book] sheet \rightarrow select [Group] from [Show].

| anon iR2200-3300 | (FAX) Properties | : | | | | ? × |
|--------------------------------|----------------------|------------|-------------|---------------|--------------------|-----|
| Edit Address Book | Register Cover She | et Special | | | | |
| Show: | oup | | | | | |
| Address <u>B</u> ook: | | | | | | |
| Recipient Name | Company | Dept./Div | . Fax Numbe | r Descriptior | Add Perso <u>n</u> | |
| 😨 Management 😨 Sales | | | | | Add Group | |
| 🕵 System | | | | | <u>E</u> dit | |
| | | | | | <u>D</u> elete | |
| | | | | | | |
| • | | | | | | |
| Detaiļs: | | | | | | |
| Notes : Peter Wilson : 123x | xxx | | | <u> </u> | | |
| | | | | | | |
| | | | | V | | |
| | | | | | | |
| | Specify a <u>F</u> o | lder | Import | Export | Abou <u>t</u> | |
| | | | OK | Cancel | Apply Hel | p |

For details on how to access the fax properties dialog box, see "Sending a Document," on p. 3-2.

To view all person (single) and group entries, select [All] from [Show].

All group entries are displayed in [Address Book].

2 Select the group you want to edit \rightarrow click [Edit].

The [Edit Group] dialog box opens.

| Group | | | | 3 |
|-----------------------------|-----------------|----------------------------------|------------|-------------|
| oup <u>N</u> ame: Sys | stem | | | |
| Recipients to Add | | | | |
| Show: Pe | rson | | - | |
| Available Recipients: | | | | |
| Recipient Name | Company | Dept./Div. | Fax Number | Description |
| Standrew Johns | | b opti b th | 125xxxx | 00000,2000 |
| Q Lucie Jones | XYZ Corporation | Sales | 014xxxx | |
| | ABC Company | | 123xxxx | |
| | A <u>d</u> d | _ ↓↑ | Deļete | |
| <u>C</u> urrent Group Membe | | Smith 012xxxx t Brown 012xxxx | | |
| Not <u>e</u> s: | | | | |
| | | | DK Cano | cel Help |

3 Change the group name if necessary.

4 Edit the group.

• To add a person or a group to the selected group:

□ Select the person or group you want to add from [Available Recipients].

Click [Add].

• To remove a member of the selected group:

Select the person or group you want to remove from [Current Group Members].

Click [Delete].

NOTE

You can select multiple entries by holding down [SHIFT] or [CTRL] on the keyboard and clicking each entry that you want to select.

5 Click [OK] to modify the selected group entry.

Delete Group

- **1** Select the group entry you want to delete from [Address Book].
- 2 Click [Delete].

Registering Additional Address Books

You can select fax recipients from address books other than the Canon Fax Driver Address Book if they are registered with the fax driver. Follow the procedure below to register the address books you want to use.

NOTE

1

You can register the Messaging API Address Book and the Windows Address Book.

From the fax properties dialog box, click the [Special] tab.

Canon iR2200-3300 (FAX) Properties ? × Special Edit Address Book | Register Cover Shei Letter -Page Size: - Orientation Α Portrait C Landscape A Resol<u>u</u>tion O Ultra Fine 🖲 Fine Specify Outside Dialing Prefix Address Books.. Restore Defaults ΟK Cancel Help

For details on how to access the fax properties dialog box, see "Sending a Document," on p. 3-2.

2 Click [Address Books].

The [Address Books] dialog box opens.

3 Click [Register].

| Address Books | ? × |
|-------------------------------|------------------|
| Address Book <u>L</u> ist: | |
| Canon Fax Driver Address Book | |
| | |
| | |
| | |
| <u>R</u> egister <u>E</u> dit | . <u>D</u> elete |
| | Cancel |
| 00 | Cancel |

The [Register Address Book] dialog box opens.

4 Select the address book you want to register from [Available Address Books] → click [OK].

| Register Address Book | ? × |
|----------------------------------|--------|
| Available Address <u>B</u> ooks: | |
| Canon Fax Driver Address Book | |
| Windows Address Book | |
| | |
| | Cancel |

The dialog box corresponding to the selected address book opens.

5 Specify the required settings in the dialog box.

For detailed information about an item in the dialog box, click [?] (Help) \rightarrow click the specific item in the dialog box you want to know about.

6 Click [OK] in the dialog box.

The registered address book is added to [Address Book List] in the [Address Books] dialog box.

| Address Books | ? × |
|---|----------------|
| Address Book List: | |
| Canon Fax Driver Address Book Windows Address Book | |
| Windows Address book | |
| | |
| | |
| | |
| [<u>R</u> egister] | <u>D</u> elete |
| ОК | Cancel |

7 Click [OK] in the [Address Books] dialog box.

This section describes instructions for attaching a cover sheet to an outgoing fax.

1 From the [Fax Sending Settings] dialog box, click the [Cover Sheet] tab.

| s Sending Settings | | | ? |
|--------------------------------|-------------------------|--|---------------------------------|
| ending Settings Edit Address | Boo Cover Sheet | | |
| | Cover Sheet Attachment: | None | • |
| | Style: | Template 1 | v |
| | | Sender Sender Name: Company: Dept./Div: Fax Number: Recipient | Yes Yes Yes Yes Yes |
| | Insert Attention Note | | <u>S</u> ettings |
| | Attention Note: | Urgent | v |
| Comment to Include: | | | |
| | | | Ā |
| | | | Pre <u>v</u> iew |
| | | OK | Cancel Help |

For details on how to access the [Fax Sending Settings] dialog box, see "Sending a Document," on p. 3-2.

- **2** Select an option for attaching the cover sheet to the fax from [Cover Sheet Attachment].
- **3** Select a cover sheet template from [Style].

4 Click [Settings] to specify the items to include on the cover sheet.

The [Item Settings] dialog box opens.

5 Display the [Sender] sheet → select check boxes according to the information you want to print on the cover sheet → enter the information in the text boxes for the selected items.

| Item Settings | | | ? × |
|--|--------------------------|------------------|------|
| Sender Recipient Logo | Signature Sheets to Send | 1 | |
| Include Sender Name Sender Name: Include Company Company: Include Dept./Div. | | | |
| <u>D</u> ept./Div.: ✓ Include <u>F</u> ax Number Fax Nu <u>m</u> ber: | | | |
| | Import Sender | <u>S</u> ave Sen | der |
| | OK | Cancel | Help |

You can select the following check boxes:

- [Include Sender Name]
- [Include Company]
- [Include Dept./Div.]
- [Include Fax Number]

NOTE

You can save the information entered in the [Sender] sheet in a file by clicking [Save Sender]. Then, when you send a fax, you can import the information by using [Import Sender], instead of entering the sender information each time you send a fax.

6 Click the [Recipient] tab \rightarrow select check boxes according to the information you want to print on the cover sheet.

| Item Settings ? | × |
|--|---|
| Sendi Recipient ogo Signature Sheets to Send | |
| Include Recipient Name Include Company Include Dept./Div. Include Fax Number | |
| OK Cancel Help | |

You can select the following check boxes:

- [Include Recipient Name]
- [Include Company]
- [Include Dept./Div.]
- [Include Fax Number]

NOTE

The information of the recipients specified in the [Sending Settings] sheet prints on the cover sheet.

7 Click the [Logo] or [Signature] tab.

| Item Settings | ? | × |
|---------------------------|----------------------------|----|
| Sender Recipier Logo Sign | nature Sheets to Send | _, |
| Print with Loga | | |
| File <u>N</u> ame: | | |
| | Browse | |
| | Manual Scaling | |
| | Scaling: 100 × (50 to 200) | |
| | Position | |
| | | |
| | 1 Y: 0 (+50 to 50) | |
| | Move to <u>C</u> enter | |
| | | |
| | OK Cancel Help | |

- 8 Select [Print with Logo] or [Print with Signature] to include a logo or signature on the cover sheet.
- 9 Click [Browse] → select a bitmap logo or signature file name in [File Name].
- 10 Specify the magnification and position of the selected logo or signature.

11 Click the [Sheets to Send] tab → select [Include Number of Sheets to Send] → enter the number of sheets you are going to send as a fax.

| Item Settings Sender Recipient Logo Signatur Sheets to Send | ? × |
|--|------|
| Implude Number of Sheets to Send Number of Sheets to Send: | |
| | |
| | |
| | |
| OK Cancel | Help |

12 Click [OK] in the [Item Settings] dialog box.

- 13 Select [Insert Attention Note] → select a note from [Attention Note] or enter a note.
- 14 Enter any other information you want to include on the cover sheet in [Comment to Include].
- 15 Click [Preview] if you want to check the preview image on the cover sheet.

16 Click [OK].

The specified cover sheet is attached to the fax when the fax is sent.

CHAPTER

Canon Cover Sheet Editor

This chapter describes instructions for installing the Canon Cover Sheet Editor, launching the editor, and creating and registering original cover sheets.

| What Is the Cover Sheet Editor? | |
|---|--|
| Installing the Cover Sheet Editor | |
| Installation | |
| Launching | |
| Uninstalling | |
| Opening, Saving, and Closing a File | |
| Opening a File | |
| Saving and Closing a File | |
| Creating an Original Cover Sheet | |
| Inserting Text | |
| Adjusting Text Properties | |
| Specifying Fields | |
| Creating Objects. | |
| Editing Objects | |
| Specifying Object Properties | |
| Arranging Objects. | |
| Specifying Grid Options | |
| Printing a Cover Sheet | |
| Registering an Original Cover Sheet as a Template | |

What is the Cover Sheet Editor?

The Canon Cover Sheet Editor is software for creating original fax cover sheet templates for use with a Canon fax driver.

After registering cover sheets created with this software in your fax driver, you can use them with any fax. If you specify fields instead of manually entering data for sender or recipient information, the actual sender or recipient information that you select in the fax driver is automatically entered in the cover sheet when the fax is sent.

With the Canon Cover Sheet Editor, you can do the following:


- Insert text using different fonts, font styles, and font sizes into a cover sheet.
- Insert a variety of objects, such as drawings and images, into a cover sheet.
- Use the field feature for creating cover sheets for sending faxes to multiple recipients.
- Add fields for specifying remarks and comments in addition to the sender and recipient information fields.
- Easily edit the display order and position of objects, and group different objects.
- Align objects on a grid while you work with them.

This section describes how to install and uninstall the Canon Cover Sheet Editor.

Installation

To install the Canon Cover Sheet Editor, follow the procedure below.

- **1** Insert the Fax Driver Software CD-ROM into the CD-ROM drive.
- 2 Double-click the [My Computer] icon → the CD-ROM drive icon.
- **3** Double-click the following folders: $[FAX] \rightarrow [us_eng] \rightarrow [CSE]$.
- **4** Double-click the [setup] icon to start the installation process.
- **5** In the first dialog box of the Installer, click [Next] \rightarrow follow the instructions on the screen to continue the installation.

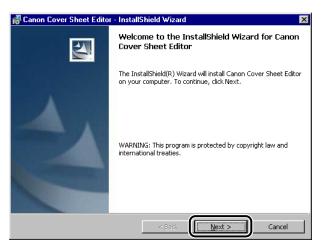


- 6 Read the Canon Cover Sheet Editor license agreement carefully. If you agree to the terms, select [I accept the terms in the license agreement.] → click [Next] → follow the instructions on the screen to continue the installation.
- 7 In the dialog box for selecting a setup type, select [Complete] or [Custom] \rightarrow click [Next].

| 🖟 Canon Cover Sheet Editor - InstallShield Wizard |
|--|
| Setup Type Choose the setup type that best suits your needs. |
| Please select a setup type. |
| Custom Hoose which program features you want installed and where they will be installed. (Requires the most disk pace.) |
| InstallShield |

Ø NOTE

If you select [Custom] in the dialog box for selecting [Setup Type], you can specify the directory into which the Canon Cover Sheet Editor is to be installed.

8 Click [Install] to start copying the files.

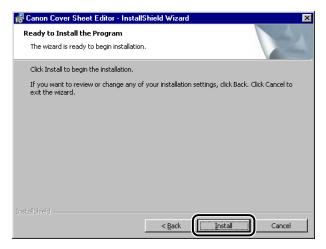

Launching

To start the Cover Sheet Editor, follow the procedure below.

1 On the [Start] menu, point to [Programs] \rightarrow [Canon] \rightarrow [CSE] \rightarrow click [Cover Sheet Editor].

The Canon Cover Sheet Editor starts.

| 🖣 Eile Edit Vi | Sheet Edito | | | | | Help | | | | | | - | | - | | | | | | | - 16 - 16 |
|----------------|-------------|---|---|---|---|------|------|---|----|---|-----|---|-----|---|---|--|-----|---|---|-------|--------------|
| | | | | | | | 1000 | , | • | 0 | | | | | | | | | | | 215 |
| | | | | | | | 1003 | 6 | _ | 4 | | | | | | | | | | | |
| 🗟 A 🛛 | / 🗆 🔿 | 0 | 2 | | | | | | | | | | | | | | | | | | |
| | | ~ | - | - | | Ŧ | B | T | Ul | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| 566 | | | | | | | | | | | | | | | | | | | | | |
| 요용의 1 | ս փո իր | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | _ | _ | _ | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | * | | | | | • | | | | • | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | 1.1.1.1 | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | 1.1 | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | * | | | * | | | • • | | • | | | | • | | | 1 | |
| | | | | | | | | | | | | | | | | | | | | · • | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | • • | | | | • • | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | · • | |
| | | | | | | | | | | | | | | | | | | | | · • | |
| | | | | | + | | | * | | | • | | • | | ٠ | | • | | | · · · | |
| | | | | | | | | | | | | | | | | | | | | · • | |
| | | | | | | | | | | | | | | | | | | | | 1.1 | |

If it becomes necessary to uninstall the Canon Cover Sheet Editor, follow the procedure below.

- **1** On the [Start] menu, point to [Settings] \rightarrow click [Control Panel].
- 2 Double-click the [Add/Remove Programs] icon → select [Canon Cover Sheet Editor] → click [Add/Remove].
- **3** When the [InstallShield Wizard] dialog box appears, follow the instructions on the screen.

The Canon Cover Sheet Editor is uninstalled.

Opening, Saving, and Closing a File

This section describes how to create, open, save, and close files.

Opening a File

Creating a New File

To create a new cover sheet, follow the procedure below.

1 Click [1] (New) on the toolbar.

You can also select [New] from the [File] menu.

The [New] dialog box opens.

2 Select a paper size for the new cover sheet \rightarrow click [OK].



The New Cover Sheet screen appears.

Opening a Saved Cover Sheet

You can open a saved cover sheet by specifying its file name.

To open a saved cover sheet, follow the procedure below.

1 Click [💋] (Open) on the toolbar.

You can also select [Open] from the [File] menu.

The [Open] dialog box opens.

2 Specify the file name of the cover sheet that you want to open.

NOTE

Clicking [Preview] displays an image of the selected cover sheet.

3 Click [Open].

The selected cover sheet appears.

Saving and Closing a File

Saving a New File

If you save a cover sheet, you can register it later in the fax driver for use as an original cover sheet.

1 Click [💾] (Save) on the toolbar.

You can also select [Save] or [Save as] from the [File] menu.

The [Save as] dialog box opens.

2 Enter a name for the file in [File name] \rightarrow specify the location where you want to save the file \rightarrow click [Save].

The file extension is automatically set to ".cse".

Saving an Existing File

Follow the procedure below to save an existing cover sheet after editing it.

1 Click [💾] (Save) on the toolbar.

You can also select [Save] from the [File] menu.

- To preserve the opened file as it was before editing, select [Save As] and specify a different name or location for saving the edited file. Selecting [Save] will overwrite the existing file.
- Selecting the [Save as] command is necessary only to specify a different file name or a different location to save the cover sheet.

Closing a File

Follow the procedure below to close a currently open cover sheet without exiting the Canon Cover Sheet Editor.

1 Click the lower [X] (Close) at the top-right corner of the Canon Cover Sheet Editor main window.



You can also select [Close] from the [File] menu.

Ø NOTE

If you close a cover sheet that has not been saved after editing, a message appears asking whether you want to save the changes. Click [Yes] to save the changes, or [No] if you do not want to save changes. Click [Cancel] if you do not want to close the cover sheet.

Creating an Original Cover Sheet

This section describes how to insert text, adjust text properties, specify fields, create objects, adjust objects, and specify grid options in order to create an original cover sheet.

Inserting Text

You can insert text and numbers into the cover page. The properties of any text or the text box itself can also be changed. To edit the text, change to the edit mode by clicking anywhere inside of a text box, and then place the cursor on the text that you want to edit.

1 Click [A] (Text Box) on the toolbar.

You can also select [Text Box] from the [Insert] menu.

2 Drag the pointer on the area of the cover sheet to insert text.

A square or rectangular text box appears.


3 Click inside the text box.

The cursor for editing text appears.

4 Enter the desired text.

Adjusting Text Properties

You can change text properties whenever you want. When you change text properties, all text inside the selected text box is affected.

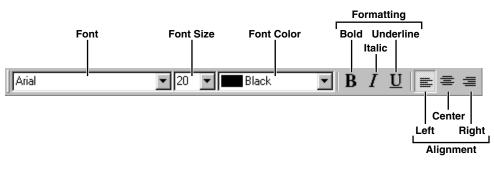

Ø NOTE

Text properties for field settings inside a text box are also changed according to the text properties you specified. For details on field features, see "Specifying Fields," on p. 4-16.

Font

1 Click inside the text box.

The text box is now ready for editing.

2 Select the desired font from the [Font] drop-down menu on the toolbar.

Font Size

1 Click inside the text box.

The text box is now ready for editing.

2 Select the desired font size from the font [Size] drop-down menu on the toolbar.

You can also enter the desired font size directly into [Size].

Font Color

1 Click inside the text box.

The text box is now ready for editing.

2 Select the desired font color from the font [Color] drop-down menu on the toolbar.

Bold Formatting

1 Click inside the text box.

The text box is now ready for editing.

2 Click [B] (Bold) on the toolbar.

To undo the bold formatting, click $[\mathbf{B}]$ (Bold) once more.

Italic Formatting

1 Click inside the text box.

The text box is now ready for editing.

2 Click [I] (Italic) on the toolbar.

To undo the italic formatting, click [I] (Italic) once more.

Underlining

1 Click inside the text box.

The text box is now ready for editing.

2 Click $[\underline{U}]$ (Underline) on the toolbar.

To undo the underlining, click $[\underline{U}]$ (Underline) once more.

Aligning Text

1 Click inside the text box.

The text box is now ready for editing.

2 Click [≡] (Align Left), [≡] (Align Center), or [≡] (Align Right) on the toolbar.

Specifying Text Properties

You can specify all of the properties for text inside a text box simultaneously.

[Preview] inside the [Text Properties] dialog box displays a preview of how the text would appear with the currently selected settings. Use it as a guide if you are specifying settings.

1 Click inside the text box.

The text box is now ready for editing.

2 Click [] (Properties) on the toolbar.

You can also select [Properties] from the [Edit] menu. You can also right-click inside the text box \rightarrow click [Properties]. The [Text Properties] dialog box opens. **3** Select [Font], [Font Style], and [Size] from the respective list boxes.

| Text Propert | ies |
|-----------------|---|
| Preview: | abc |
| | Font: Arial Arial Arial Black Arial Black Arial Black Arial Black Arial Black Bold Bold Italic Bold Italic Bold Italic |
| Effects: | ☐ Stri <u>k</u> ethrough ☐ <u>U</u> nderline |
| C <u>o</u> lor: | Black 💌 |
| Alignment: | G Align Left C Align Center C Align Bight |
| | OK Cancel |

You can also enter the desired font size directly into [Size].

- **4** Select [Strikethrough] or [Underline] to draw a line through or to underline text.
- **5** Select the desired text color from [Color].
- 6 Specify [Alignment] for the text.
- 7 Click [OK].

Specifying Text Box Properties

Follow the procedure below to specify the type of border, border color, and background color of the selected text box.

1 Click anywhere on the border of the text box.

The border of the text box is selected.

2 Click [] (Properties) on the toolbar.

You can also select [Properties] from the [Edit] menu.

You can also display the [Text Box Properties] dialog box by double-clicking anywhere on the border of the text box.

The [Text Box Properties] dialog box opens.

| Text Box P | roperties | ? × |
|------------------|------------------------|-----|
| Line Style: | Solid | - |
| Width: | 0.5 * mm (0.1 to 50.0) | |
| <u>C</u> olor: | Black | • |
| <u>F</u> ill in: | White | • |
| | OK Canc | el |

3 Select the desired border type from [Line Style].

4 Specify the [Width] setting to set the thickness of the border.

NOTE


The [Width] setting is available only if [Line Style] is set to 'Solid'.

- **5** Select the desired color of the border from [Color].
- **6** Select the desired background color for the text box from [Fill in].
- **7** Click [OK].

Specifying Fields

You can show sender or fax recipient information, such as the name, fax number, company name, and department/division name on the cover sheet using a feature called a "field."

Fields are objects in the cover sheet that you can replace with data when sending a fax. Actual sender and recipient information as specified in the fax driver is automatically inserted in the corresponding fields on the cover sheet during transmission.

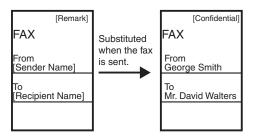


Available fields:

- Sender information: Name, Fax Number, Company, Dept./Div.
- Recipient information: Name, Fax Number, Company, Dept./Div.
- Sheets to send
- Other information: Remark, Comment

A recipient information field that contains multiple values is called a "repeating field." This feature is convenient for using the same cover sheet to send faxes to multiple recipients.

The repeating field is used to insert data for every recipient specified in the fax driver.

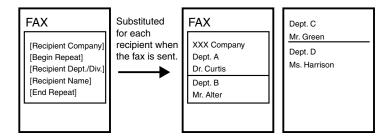

In addition to the [Sender Information] and [Recipient Information] fields, you can also insert [Sheets to Send], [Remark], and [Comment] fields on the cover sheet. When the fax is sent, the number of sheets to send as a fax specified in the fax driver is inserted in the [Sheets to Send] field, information specified in the fax driver, such as [Urgent] or [Confidential] is inserted in the [Remark] field, and comments specified in the fax driver are entered in the [Comment] field.

Inserting Sender and Recipient Information Fields When Editing Text

- **1** Inside the text box, place the cursor to where you want to insert the field.
- 2 Click the [Insert] menu → point to [Sender Information] or [Recipient Information] → select the field (such as [Name], [Fax Number], [Company], and [Dept./Div.]) to insert.

The selected field is inserted.

🥟 NOTE

If you select [Insert All], all of the available fields for sender or recipient information are inserted simultaneously. The fields are inserted in this order: [Name], [Fax Number], [Company], and [Dept./Div.]. You can change the position of the fields as needed.

Inserting Sender and Recipient Information Fields When Not Editing Text

 Click the [Insert] menu → point to [Sender Information] or [Recipient Information] → select the field (such as [Name], [Fax Number], [Company], and [Dept./Div.]) to insert.

2 Drag the pointer on the area of the cover sheet to where you want to insert the field.

A square or rectangular text box containing the selected field appears.

Ø NOTE

If you select [Insert All], all of the available fields for sender or recipient information are inserted simultaneously. The fields are inserted in this order: [Name], [Fax Number], [Company], and [Dept./Div.]. You can change the position of the fields as needed.

Inserting Repeating Fields

Follow the procedure below to show information for multiple recipients on the cover sheet when sending a fax.

- 1 Insert the desired recipient information field, such as [Name], [Fax Number], [Company], and [Dept./Div.].
- **2** Inside the text box, place the cursor to the left of the field to repeat.
- 3 Click the [Insert] menu → point to [Recipient Information] → click [Begin Repeat].

The [Begin Repeat] field is inserted.

- **4** Inside the text box, place the cursor to the right of the field to repeat.
- 5 Click the [Insert] menu → point to [Recipient Information] → click [End Repeat].

The [End Repeat] field is inserted.

The field between the [Begin Repeat] and [End Repeat] fields is replaced with multiple recipients' information when sending a fax.

Ø NOTE

The text box may not be able to accommodate all of the actual data for a repeating field if a large number of recipients are specified for sending a fax. In this case, a new page is automatically created and data that does not fit into the text box displays from the top of the new page.

Inserting Borders Between Repeating Fields

When you specify a repeating field for recipient information, you can also select whether to insert borders between the values for easier reading.

1 Click the [Insert] menu → point to [Recipient Information] → click [Borders].

The [Border Settings] dialog box opens.

2 Select [Insert a Border Between Repeats] to insert borders between multiple values in a repeating recipient information field.

| Border Setti | ings ?X |
|----------------|------------------------|
| Insert a | Border Between Repeats |
| Line Style: | Solid 🔽 |
| <u>W</u> idth: | 0.2 mm (0.1 to 10.0) |
| <u>C</u> olor: | Black 💌 |
| | OK Cancel |

If you do not want to insert borders between the values, deselect this check box \rightarrow click [OK].

3 Select the type of line to use as the border from [Line Style].

4 Specify the [Width] setting to set the thickness of the borders.

NOTE

The [Width] setting is available only if [Line Style] is set to 'Solid'.

5 Select the desired color of the borders from [Color].

6 Click [OK].

Inserting Sheets to Send Field When Editing Text

- **1** Inside the text box, place the cursor where you want to insert the field.
- **2** From the [Insert] menu, select [Sheets to Send].

The [Sheets to Send] field is inserted.

Inserting Sheets to Send Field When Not Editing Text

- **1** From the [Insert] menu, select [Sheets to Send].
- **2** Drag the pointer on the area of the cover sheet to insert the field.

A square or rectangular text box containing the selected field appears.

Inserting Remark and Comment Fields When Editing Text

- 1 Inside the text box, place the cursor to where you want to insert the field.
- **2** From the [Insert] menu, select either [Remark] or [Comment]. The [Remark] field or the [Comment] field is inserted depending on your selection.

Inserting Remark and Comment Fields When Not Editing Text

- **1** From the [Insert] menu, select either [Remark] or [Comment].
- **2** Drag the pointer on the area of the cover sheet to insert the field.

A square or rectangular text box containing the selected field appears.

Creating Objects

You can draw lines, rectangles, rounded rectangles, or ovals on the cover sheet. You can also change their properties once they are drawn.

Lines

1 Click [/] (Line) on the toolbar.

You can also select [Line] from the [Drawing] menu.

2 Drag the pointer on the area of the cover sheet to draw the line.

Rectangles

1 Click [**D**] (Rectangle) on the toolbar.

You can also select [Rectangle] from the [Drawing] menu.

2 Drag the pointer on the area of the cover sheet to draw the rectangle.

To draw a square, hold down [SHIFT] on the keyboard while dragging.

Rounded Rectangles

1 Click [**D**] (Rounded Rectangle) on the toolbar.

You can also select [Rounded Rectangle] from the [Drawing] menu.

2 Drag the pointer on the area of the cover sheet to draw the rounded rectangle.

To draw a rounded square, hold down [SHIFT] on the keyboard while dragging.

You can adjust the degree of the curve or the roundness of the corners of the rounded rectangle. To do so, click anywhere outside the newly created rounded rectangle \rightarrow click the rounded rectangle again \rightarrow click and drag the inner handle in its upper right corner to change the degree of the curve.

Ovals

1 Click [O] (Oval) on the toolbar.

You can also select [Oval] from the [Drawing] menu.

2 Drag the pointer on the area of the cover sheet to draw the oval.

To draw a circle, hold down [SHIFT] on the keyboard while dragging.

Inserting Images

1 Click [**2**] (Image) on the toolbar.

You can also select [Image] from the [Insert] menu.

The [Open] dialog box opens.

2 Specify the file name of the bitmap file that you want to insert.

NOTE 🖉

Clicking [Preview] opens the [Preview] dialog box, where an image of the highlighted bitmap file is displayed.

3 Click [Open].

Editing Objects

You can copy, move, and delete objects, such as lines, rectangles, rounded rectangles, ovals, images, and text boxes on the cover sheet.

Selecting an Object

1 Click the object to select.

You can also drag the pointer completely over the object.

The object is selected.



You can also select multiple objects by holding down [SHIFT] on the keyboard and clicking each object that you want to select, or by dragging the pointer completely over the objects. If you want to deselect any of the objects you selected, hold down [SHIFT] on the keyboard \rightarrow click the objects that you want to deselect.

Moving an Object within the Same Cover Sheet

1 Select the object to move.

NOTE

You can select multiple objects and move them at the same time.

2 Drag the selected object to the desired location.

You can also use any of the four arrow keys [\leftarrow], [\uparrow], [\rightarrow], or [\downarrow] to move the object in the desired direction in 0.1 mm increments.

NOTE

- Hold down [SHIFT] on the keyboard while dragging to move the object horizontally or vertically only.
- Hold down [CTRL] on the keyboard while dragging to copy the selected object and drag the copy to the desired location.
- If [Snap to Grid] is specified, holding down [SHIFT] on the keyboard while pressing an arrow key moves the object in the direction of the arrow in half-grid space increments. If [Snap to Grid] is not specified, holding down [SHIFT] on the keyboard while pressing an arrow key moves the object in the direction of the arrow in 2.0 mm increments.

Moving an Object to a Different Cover Sheet

1 Select the object to move.

DOTE 🤔

You can select multiple objects and move them at the same time.

2 Click [\mathscr{F}] (Cut) on the toolbar.

You can also select [Cut] from the [Edit] menu.

3 Display the second cover sheet.

NOTE

If the second cover sheet is open, you can select it from the [Window] menu.

4 Click [📴] (Paste) on the toolbar.

You can also select [Paste] from the [Edit] menu.

The selected object is moved to the active cover sheet.

Resizing an Object

Select the object whose size you want to change.

Ø NOTE

You can select multiple objects and change all of their sizes at the same time.

2 Drag any handle on the selected object to change its size.

NOTE

The shape of the pointer changes depending on which handle you place it over.

- Dragging the handles on the top and bottom sides of the object changes its height.
- Dragging the handles on the left and right sides of the object changes its width.
- Dragging the handles on the corners of the object changes both its height and width.

Copying an Object by Dragging

1 Select the object to copy.

NOTE

You can select multiple objects and copy them at the same time.

2 Hold down [CTRL] on the keyboard \rightarrow drag the selected (copied) object to the desired location.


Ø NOTE

Dragging the selected object without holding down [CTRL] on the keyboard moves the object to the new location instead of copying it.

Copying an Object by Using Button or Menu Commands

You can use button and menu commands to copy an object, such as a line, rectangle, rounded rectangle, oval, image, or text box on the same cover sheet or to another cover sheet.

Follow the procedure below.

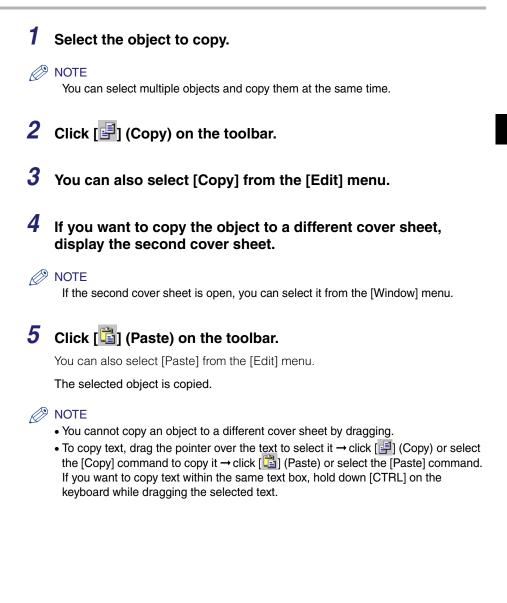

Duplicating an Object

Duplicating enables you to copy and paste an object in one operation.

1 Select the object to duplicate.

NOTE

You can select multiple objects and duplicate them at the same time.

2 Click [🔄] (Duplicate) on the toolbar.

You can also select [Duplicate] from the [Edit] menu.

The selected object is duplicated.

Deleting an Object

1 Select the object to delete.

🦻 NOTE

You can select multiple objects and delete them at the same time.

2 Click $[\times]$ (Delete) on the toolbar.

You can also select [Delete] from the [Edit] menu, or press [DELETE] on the keyboard.

The selected object is deleted.

Grouping Objects

You can edit or handle multiple objects that are grouped together as a single object. You can move, copy, or change the size of grouped objects in a single operation. You can also simultaneously modify the properties of all objects in the group.

1 While holding down [SHIFT] on the keyboard, select all the objects to group.

2 Click []] (Group) on the toolbar.

You can also select [Group] from the [Layout] menu.

You can ungroup objects by selecting the group of objects that you want to ungroup and clicking [2] (Ungroup) on the toolbar or selecting [Ungroup] from the [Layout] menu.

Specifying Object Properties

Follow the procedure below to change the line style, line color, and background color of objects, such as lines, rectangles, rounded rectangles, ovals, and images.

1 Select the object whose properties you want to change.

NOTE

You can select multiple objects and change their properties at the same time.

2 Click [[] (Properties) on the toolbar.

You can also select [Properties] from the [Edit] menu, or display the [Object Properties] dialog box by double-clicking the selected object.

The [Object Properties] dialog box opens.

3 Select the desired line type for the object from [Line Style].

4 Specify the [Width] setting to set the thickness of the line.

NOTE

The [Width] setting is available only if [Line Style] is set to 'Solid'.

5 Select the desired line color for the object from [Color].

6 Select the desired background color for the object from [Fill in].

NOTE

[Fill in] cannot be specified if the selected object is either a line or an image.

7 Click [OK].

Arranging Objects

You can rearrange the order and appearance of objects, such as lines, rectangles, rounded rectangles, ovals, images, and text boxes on the cover sheet.

Changing the Order of Display

If multiple objects overlap, you can specify the order in which they overlap. Use the following four commands to change the order of display of overlapping objects:

- [Bring to Front]: Moves the selected object to the front.
- [Send to Back]: Moves the selected object to the back.
- [Bring Forward]: Moves the selected object one level higher.
- [Send Backward]: Moves the selected object one level lower.

1 Select the object whose display order you want to change.

Ø NOTE

- You can select multiple objects and change the order of display for all of them at the same time.
- If the object you want to select lies behind other objects and thus is hidden from view, press [TAB] on the keyboard repeatedly until the object you want is selected. You can also select in reverse order by holding down [SHIFT] on the keyboard while pressing [TAB] on the keyboard.

2 Click [⁴] (Bring to Front), [⁴] (Send to Back), [⁴] (Bring Forward), or [⁴] (Send Backward) on the toolbar.

NOTE

You can also select [Bring to Front], [Send to Back], [Bring Forward], or [Send Backward] from the [Layout] menu.

Aligning Multiple Objects

You can align multiple selected objects according to their left edge, right edge, top edge, bottom edge, or center in one operation. The position of the last selected object becomes the point of reference of alignment.

Use the following commands to change the alignment of the selected objects:

- [Align Left]: Aligns the left edge of all objects along the left edge of the last selected object.
- [Align Center]: Aligns the left-right center axis of all objects along the left-right center axis of the last selected object.
- [Align Right]: Aligns the right edge of all objects along the right edge of the last selected object.
- [Align Top]: Aligns the top edge of all objects along the top edge of the last selected object.
- [Align Middle]: Aligns the top-bottom center axis of all objects along the top-bottom center axis of the last selected object.
- [Align Bottom]: Aligns the bottom edge of all objects along the bottom edge of the last selected object.

1 While holding down [SHIFT] on the keyboard, select the objects to align.

Select the object to be used as the point of reference last.

NOTE

If you drag the pointer to select multiple objects, the object positioned in the front is used as the point of reference.

Click [□] (Align Left), [□] (Align Center), [□] (Align Right), [□] (Align Top), [□] (Align Middle), or [□] (Align Bottom) on the toolbar.

You can also click the [Layout] menu \rightarrow point to [Distribute Horizontally] or [Distribute Vertically] \rightarrow select the type of alignment you want.

Specifying Grid Options

The grid function is useful for arranging created objects.

Showing Grids

You can display the grid on the cover sheet to help you create and arrange objects.

1 On the toolbar, click [**1**] (Show Grids) to activate the grid.

You can also activate the command by clicking [Show Grids] from the [View] menu.

Hide the grid by clicking the activated [#] (Show Grids) to deactivate it or by clicking [Show Grids] from the [View] menu.

Snapping Objects to Grid

If you activate the [Snap to Grid] setting for the cover sheet, objects are aligned along the grid when they are moved or resized on the cover sheet.

1 On the toolbar, click [1] (Snap to Grid) to activate the grid.

You can also activate the command by clicking [Snap to Grid] from the [View] menu.

Deactivate the [Snap to Grid] setting by clicking the activated [1] (Snap to Grid) or by clicking [Snap to Grid] from the [View] menu.

Ø NOTE

[Snap to Grid] is available only after this setting is specified. It does not affect objects that are modified before this setting is specified.

Specifying Grid Properties

Follow the procedure below to specify the properties for the grid on the cover sheet, such as type, color, and spacing. You can also specify whether to display the grid and whether to snap objects to the grid.

1 Select [Grid Properties] from the [View] menu.

The [Grid Properties] dialog box opens.

2 Select [Show Grids].

| Grid Prope | rties ? 🕽 | <u><</u> |
|------------------|------------------------------------|-------------|
| Show ! | <u>G</u> rids | |
| Туре: | Dotted | |
| | 🛗 🔿 Dashed | |
| <u>C</u> olor: | | |
| Spacing: | Horizontal: 5.0 📩 mm (1.0 to 50.0) | |
| | ⊻ertical: 5.0 mm (1.0 to 50.0) | |
| 🔽 <u>S</u> nap t | o Grid | |
| | Restore Defaults OK Cancel | |

Deselect the check box if you do not want to display the grid.

NOTE

Deselecting this check box disables the [Type], [Color], and [Spacing] settings.

3 Select [Dotted] or [Dashed].

4 Click the button to the right of [Color].

The [Color Setting] dialog box opens.

| Color Setting |
|-------------------------|
| Basic colors: |
| |
| |
| |
| |
| |
| |
| Custom colors: |
| |
| |
| Define Custom Colors >> |
| OK Cancel |

5 Select a color to use as the grid's basic color in the [Color Setting] dialog box.

• To select basic color:

□ Select the color you want from [Basic colors].

• To create your own color:

- □ Click on a color that is the closest to the color you want.
- □ Click [Define Custom Colors].

The color matrix appears on the left of the [Color Setting] dialog box.

 \Box Adjust the luminosity of the color \rightarrow click [Add to Custom Colors].

6 Click [OK] in the [Color Setting] dialog box.

7 Specify the [Horizontal] and [Vertical] spacing for the grid.

NOTE

You can change the unit of measurement for the spacing in the [Unit Setting] dialog box displayed by selecting [Unit] from the [View] menu.

8 To align objects along the grid, select [Snap to Grid].

To deactivate [Snap to Grid], deselect the check box.

9 Click [OK].

NOTE 🖉

Clicking [Restore Defaults] in the [Grid Properties] dialog box restores all [Grid Properties] settings for the cover sheet to their default values.

Printing a Cover Sheet

Follow the procedure below to print the cover sheet.

1 Click [[(Print) on the toolbar.

You can also select [Print] from the [File] menu. The [Print] dialog box opens.

2 Select the printer \rightarrow click [OK].

As necessary, click [Properties] to specify detailed print settings.

3 Specify the number of copies to print.

NOTE

[All] is the only active selection for the [Print range] setting because the cover sheet consists of only one page.

4 Click [OK].

Registering an Original Cover Sheet as a Template

You can register the cover sheet created with the Canon Cover Sheet Editor with the fax driver for use as a template.

1 On the [Start] menu, point to [Settings] \rightarrow click [Printers].

🖉 NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- In the [Printers] folder, right-click the printer icon for your fax
 → click [Properties] (Windows 98/Me), [Document Default]
 (Windows NT 4.0), or [Printing Preferences] (Windows 2000/ XP/Server 2003).

3 Click the [Register Cover Sheet] tab.

| Canon iR2200-3300 (FAX) Propert | ies | ? × |
|----------------------------------|---|------|
| General Details Edit Address Boo | Register Cover Sheet pecial Configuration | |
| | Style: | |
| | Template 1 Template 2 | |
| | Template 3 | |
| | | |
| | | |
| | | |
| | | |
| | Pre <u>v</u> iew <u>R</u> egister Delete | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | OK Cancel Apply H | lelp |

4 Click [Register].

The [Register Cover Sheet] dialog box opens.

| Register Cov | er Sheet | | ? × |
|--------------------|---------------------|-------|--------------|
| Look in: 🔂 | My Pictures | - 🗈 🜌 | * |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | - | | |
| File <u>n</u> ame: | | | <u>O</u> pen |
| Files of type: | Cover Sheet (*.cse) | • | Cancel |

5 Select the cover sheet template file \rightarrow click [Open].

The selected template is added to [Style] in the [Register Cover Sheet] sheet.

🤔 NOTE

In addition to the default templates, you can add up to 30 templates to the fax driver.

5 CHAPTER

Special Fax Driver Options

This chapter describes instructions for using the Job Accounting features, and for setting the time to send a fax.

| Job Accounting Features | 5-2 |
|---|-----|
| Job Accounting Overview | 5-2 |
| Specifying the ID and Password | 5-2 |
| Faxing with Job Accounting (Windows 98/Me) | 5-4 |
| Faxing with Job Accounting (Windows NT 4.0/2000/XP/Server 2003) | 5-5 |
| Setting the Fax Send Time | 5-7 |

Job Accounting Features

This section describes Job Accounting, how to specify the ID and password for Job Accounting, and how to fax with Job Accounting.

Job Accounting Overview

Job Accounting enables you to sum fax totals for each department or user for management purposes, under an ID and a password assigned to each department or user.

A document will be faxed only if the specified ID and password are verified as valid.

- If you are using a shared fax in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to use the Job Accounting feature. (See "Installing the Canon Driver Information Assist Service," on p. 2-36.)
- If you are using a local fax (connected to an LPT port, USB port, etc.), you cannot use the Job Accounting feature.

🥟 NOTE

Job Accounting is not available for the imageRUNNER 400/330, imageRUNNER 400/ 330-P1/R1, and LASER CLASS 510.

Specifying the ID and Password

In order to fax documents using the Job Accounting feature, follow the procedure below to specify the ID and password.

On the [Start] menu, point to [Settings] \rightarrow click [Printers].

🧷 NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].

- 2 In the [Printers] folder, right-click the printer icon for your fax \rightarrow click [Properties].
- **3** From the fax properties dialog box, click the [Configuration] sheet (for Windows 98/Me) or [Device Settings] sheet (for Windows NT 4.0/2000/XP/Server 2003).

For details on how to access the fax properties dialog box, see "Sending a Document," on p. 3-2.

NOTE

For the imageRUNNER 400/330 and imageRUNNER 400/330-P1/R1, [Configuration] sheet is displayed no matter what you are using which operating system.

4 Click [Get Device Status] to confirm that [Job Accounting] is selected, or manually select [Job Accounting] and [Allow Password Setting] if necessary.

| Canon iR2200-3300 (FAX) Properties | × |
|--|---|
| General Sharing Ports Advanced Color Management Security Configuration | |
| Sender: | l |
| | l |
| V Job Accounting Settings | l |
| Allow Password Setting | l |
| | l |
| | l |
| | l |
| | l |
| | l |
| | l |
| | l |
| | l |
| | l |
| Get Device Status About | |
| OK Cancel Apply Help | |

5 Click [Settings] to open the [ID/Password Settings] dialog box → enter the ID and password.

| ID/Password Settings | ? × |
|----------------------|------------------|
| <u>I</u> D: | |
| Password: | |
| | ⊻erify |
| Confirm ID/Password | when Sending Fax |
| | OK Cancel |

Ø NOTE

- The ID and password can be changed when faxing a document only if [Confirm ID/ Password when Sending Fax] is selected in the [ID/Password Settings] dialog box.
- For Windows NT 4.0/2000/XP/Server 2003, you can specify the password in the [ID/Password Settings] dialog box only if [Allow Password Setting] is selected in the [Device Settings] sheet.
- You can leave the password blank.
- **6** Click [Verify] to confirm that the specified ID and password are valid.
- **7** Click [OK].

Faxing with Job Accounting (Windows 98/Me)

To fax with Job Accounting, follow the procedure below.

- 1 In application software, with the document open, select [Print].
- **2** Click [Properties] in the [Print] dialog box.
- **3** Specify the various settings in the fax properties dialog box.

- 4 Click [OK] to close the fax properties dialog box \rightarrow click [OK] in the [Print] dialog box.
- 5 If the [Confirm ID/Password] dialog box opens, enter the ID and the password \rightarrow click [OK].

| Confirm II | D/Password | ? | × |
|------------|----------------------|-----------|---|
| | Confirm ID and passw | ord. | |
| | <u>I</u> D: | [| |
| | Password: | | |
| | | OK Cancel | |

The document is faxed with the specified ID and password.

🤌 NOTE

- The [Confirm ID/Password] dialog box opens only if [Confirm ID/Password when Sending Fax] is selected in the [ID/Password Settings] dialog box. Otherwise, the document is faxed under the previously specified ID and password.
- You can leave the password blank.

Faxing with Job Accounting (Windows NT 4.0/2000/XP/ Server 2003)

The procedure for faxing with Job Accounting differs depending on whether [Allow Password Setting] is selected in the [Device Settings] sheet.

With Allow Password Setting Selected

The password for Job Accounting can be specified in advance in the [ID/Password Settings] dialog box.

- **1** In application software, with the document open, select [Print].
- **2** Click [Properties] in the [Print] dialog box.

3 Specify the various settings in the fax properties dialog box.

4 Click [OK] to close the fax properties dialog box \rightarrow click [OK] in the [Print] dialog box.

The document is faxed with the specified ID and password.

With Allow Password Setting Not Selected

The password for Job Accounting cannot be specified in the [ID/Password Settings] dialog box.

- 1 In application software, with the document open, select [Print].
- **2** Click [Properties] in the [Print] dialog box.
- **3** Specify the various settings in the fax properties dialog box.
- 4 Click [OK] to close the fax properties dialog box \rightarrow click [OK] in the [Print] dialog box.
- 5 In the [Confirm ID/Password] dialog box, enter the password → change the ID, if necessary.

NOTE

You can leave the password blank.

6 Click [OK].

The document is faxed with the specified ID and password.

Setting the Fax Send Time

By temporarily storing data in the printer, you can set the time at which a fax will be sent.

1 In application software, with the document open, select [Print].

The [Print] dialog box opens.

- 2 In the [Print] dialog box, select your fax driver name from [Name] → click [OK].
- 3 In the [Sending Settings] sheet, specify the name and fax number of the fax recipient → click [Add to Recipient List].
- **4** Select [Set the Time to Send] \rightarrow specify the time to send a fax.

| ax Sending Settings | | ? × |
|---------------------------------|------------------------------|---------------------|
| Sending Settings Edit Address B | look Cover Sheet | |
| Recipient <u>N</u> ame: | | _ |
| Fa <u>x</u> Number: | | _ |
| Advanced Eunction: | Subaddress : Off | <u>S</u> ettings |
| | 1 | Add to Address Book |
| | Add to Recipient List | |
| Re <u>c</u> ipient List: | | |
| Recipient Name Robert Brown | Fax Number 012xxxx | Address Book |
| In oper brown | 012XXXX | Delete |
| | | |
| Number of Recipients: | 1 | |
| Set the <u>T</u> ime to Send | | |
| Sending Time : | 00 : 00 + (0:00 to 23:59) | |
| | | OK Cancel Help |

5 Click [OK] in the fax properties dialog box.

The data is stored temporarily in the printer, and the fax is sent at the specified time.



Appendix

This chapter provides information about additional software used with the fax drivers.

| Additional Software | 2 |
|---|---|
| Canon Port Setting Tool | 2 |
| Device Status Extension (Windows 2000/XP/Server 2003) | 3 |
| Glossary | 1 |
| Index | 3 |

This section describes additional software used with the fax driver.

Canon Port Setting Tool

The Canon Port Setting Tool enables you to correspond the device driver installed in your computer with the network address for the device. If you cannot set up the fax configuration automatically or use the Job Accounting feature properly when you are using SMB (Server Message Block) or NDPS (Novell Distributed Print Services), you need to specify the port using the Canon Port Setting Tool.

- In Windows Explorer, double-click the following folders: [Program Files] → [Canon] → [Portset].
- **2** In the [Portset] folder, double-click the [Portset.exe] icon to start the Canon Port Setting Tool.

NOTE 🖉

- The Canon Port Setting Tool is installed with the fax driver.
- For more information about using the Canon Port Setting Tool, see the Online Help. To display the Online Help, start the Canon Port Setting Tool → click [Help].

Device Status Extension (Windows 2000/XP/Server 2003)

If you use a shared fax in Windows 2000/XP/Server 2003, you can browse information on the shared fax and manage fax jobs through a web browser.

Installing Device Status Extension in Windows 2000/XP/Server 2003 enables you to browse detailed information on faxes supporting Device Status Extension. Device Status Extension also enables you to start the NetSpot Console from the [Device Status Extension] window to set up faxes. NetSpot Console is software which monitors job status and devices connected to the network.

NOTE

- For instructions on how to install and use the Device Status Extension, see the README.TXT file located in the following folders on the Printer Driver Software CD-ROM:
 - \DSE\english\win2000
 - \DSE\english\winxp
 - \DSE\english\winServer2003
- Some products do not come with the Device Status Extension.



С

Canon Driver Information Assist Service

A software module that is specialized in retrieval of information from devices. When you are using a shared printer in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to set up the printer configuration automatically or to use the Job Accounting feature.

D

Device Status Extension

An extension for Windows 2000/XP/Server 2003 that enables you to view information about shared printers, and to manage print jobs using your Web browser. If you are using NetSpot Console, Device Status Extension also enables you to start NetSpot Console from the Device Status Extension screen to set up printers.

L

Log on

Entering a user name and password as a means of user authentication to start a computer session or access to a service.

Ν

NDPS

Novell Distributed Print Services. A printing system developed by Novell, for managing printers in a network environment.

NetSpot Console

A web-based version of NetSpot. Being browser enabled, it can be used to browse and manage network devices.

Ρ

Port Setting Tool

A software utility that enables you to confirm and reset the correspondence between the port of the device driver installed in Windows and its network address. The Port Setting Tool is useful when the printer driver is unable to acquire the device status information properly. If NetSpot Job Monitor is installed in your computer, you can also use this utility to set the update interval for acquiring information and for checking device types.

Protocol

A set of rules that govern the transmission of data across a network.

S

Sender's Name

Your personal or organization name. The sender's name, fax number, date, and time sent are printed on each page that you send. You can register up to 99 sender names, that are selected using the TTI selector, before sending.

SMB

Server Message Block. A protocol that provides file and printer sharing over a network for Windows computers.

Subaddress

Subaddress is the Global telecommunications standard provided by ITU-T (International Telecommunication Union - Telecommunication Standardization Sector). As long as the remote party's machine supports the same standards, confidential or relayed communications are possible by attaching a subaddress and a password in advance.

Т

TCP/IP

Transmission Control Protocol/Internet Protocol. The protocol used to connect to the Internet and to wide area networks.

Transmission Time

A fax transmission consists of three stages: the machine sending the fax connects with the machine receiving it, the message is then transmitted, after which the sender and the receiver exchange signals to confirm the end of transmission. The transmission time described in this guide is not the total time required for the entire transmission, but only the time taken for the message transmission.

Index

A

Add Port, 2-10 Add Printer Wizard, 2-20 Additional software, 6-2 Canon Port Setting Tool, 6-2 Device Status Extension (Windows 2000/XP/ Server 2003), 6-3 Address book, 3-11, 3-12, 3-13, 3-24 Address book entries, 3-13 Group entry, 3-19 Person (single) entry, 3-13 Alternate fax driver, 2-43 Attaching cover sheet, 3-27

С

Canon Driver Information Assist Service, 2-6, 2-14, 2-36, 2-43, 2-50, 5-2, 6-4 Canon Port Setting Tool, 6-2, 6-5 Client PC, 2-18 Confidential document by fax, 3-5 Cover Sheet, 3-4, 3-8, 3-27 Cover sheet template, 3-27, 4-2 Creating original cover sheet, 4-10 Adjusting text properties, 4-11 Arranging objects, 4-28 Creating objects, 4-21 Editing objects, 4-22 Inserting text, 4-10 Specifying field, 4-16 Specifying grid options, 4-30 Specifying object properties, 4-27

D

Device status extension (Windows 2000/XP/ Server 2003), 6-3, 6-4 Driver Information Assist Service, 2-6, 2-14, 2-36, 2-43, 2-50, 5-2, 6-4 Dynamic installation, 2-11

F

Fax board, 2-48 Fax memory, 2-51 Fax send time, setting, 5-7 Faxing document, 3-2 Sending document, 3-2 Sending to Remote Memory Box, 3-5 Faxing with Job Accounting, 5-5 With allow password, 5-5 Without allow password, 5-6 Field. 4-16 Border between repeating fields, 4-19 Remark and comment, 4-20 Repeating fields, 4-18 Sender and recipient information, 4-17 Sheets to send, 4-20 Field feature, 4-2

G

Grid options, specifying, 4-30 Showing grids, 4-30 Snapping objects to grid, 4-30 Specifying grid properties, 4-30 Group entry, 3-19 Delete group, 3-23 Edit group, 3-21 New group, 3-19

Η

Help, 1-7

Installing Cover Sheet Editor, 4-3 Installation, 4-3 Launching, 4-5 Uninstalling, 4-6 Installing fax driver, 2-2 Alternate fax driver (Windows NT 4.0/2000/XP/ Server 2003), 2-18 Dynamic installation, 2-11 Standard installation, 2-3 Using Add Printer Wizard, 2-20 Installing software, 2-2 Canon Driver Information Assist Service, 2-6, 2-14, 2-36, 2-43, 2-50, 5-2, 6-4 Fax driver, 2-2 Fax driver through USB connection, 2-22 Uninstalling fax driver, 2-46 Updating alternate fax driver (Windows NT 4.0/ 2000/XP/Server 2003), 2-43 Updating existing fax driver, 2-39 Introduction, 1-2 Supported Canon products, 1-2

J

Job Accounting features, 5-2 Faxing with job accounting, 5-4, 5-5 Overview, 5-2

L

License agreement, 2-4, 2-12, 2-37 Log on, 2-3, 6-4 Logo sheet, 3-30

Μ

Memory box, 3-2, 3-5, 3-7, 3-15 Messaging API Address Book, 3-24 Microsoft Windows 2000, 1-2, 1-5 Microsoft Windows 98, 1-2, 1-5 Microsoft Windows Me (Millennium Edition), 1-2, 1-5 Microsoft Windows NT 4.0, 1-2, 1-5 Microsoft Windows Server 2003, 1-2, 1-5 Microsoft Windows XP, 1-2, 1-5

Ν

NDPS (Novell Distributed Print Services), 6-2, 6-4 NetSpot Console, 6-3, 6-4 Network printer, 2-3, 2-9

0

Objects, arranging, 4-28 Aligning multiple objects, 4-29 Changing order of display, 4-28 Objects, creating, 4-21 Inserting images, 4-22 Lines, 4-21 Ovals, 4-22 Rectangles, 4-21

Rounded rectangles, 4-21 Objects, editing, 4-22 Copying by dragging, 4-24 Copying by using button or menu commands, 4-25 Deleting, 4-26 Duplicating, 4-26 Grouping, 4-26 Moving to different cover sheet, 4-23 Moving within same cover sheet, 4-23 Resizing, 4-24 Selecting, 4-22 Online Help, 1-7 Opening, saving, and closing file, 4-7 Closing file, 4-9 Creating new file, 4-7 Opening file, 4-7 Opening saved cover sheet, 4-8 Saving and closing file, 4-8 Operating system software, 2-21

Ρ

Appendix

Password, 3-5, 3-7, 3-16 Person (single) entry, 3-13 Delete entry, 3-18 Edit entry, 3-17 New entry, 3-14 Port selection, 2-8 Preview, 4-8 Primary number, 3-15 Printing cover sheet, 4-33 Process to install Fax Driver, 2-6, 2-14 Protocols, 1-2, 6-5

R

README. TXT file, 1-7

Recipient sheet, 3-29 Recipients, specifying, 3-9 Adding new name and fax number, 3-10 Adding recipient from address book, 3-11 Registering additional address book, 3-24 Registering original cover sheet as template, 4-34 Remote Memory Box, 3-5 Repeating field, 4-16, 4-18

S

Secondary number, 3-15 Sender sheet, 3-28 Shared fax, 2-43 Shared printer, 2-18 Signature sheet, 3-30 SMB (Server Message Block), 6-2, 6-5 Specifying installed fax memory, 2-51 Specifying installed optional fax board, 2-48 Standard installation, 2-3 Standard port, 2-9 Subaddress, 3-5, 3-7, 3-16, 6-5 Subnet, 2-11 Supported Canon products, 1-2 System requirements, 1-5 Computer, 1-6 Operating system software, 1-5, 2-21 With server-based Computing Environment, 1-5

Т

TCP/IP protocol, 2-11 Text properties, 4-11 Aligning text, 4-13 Bold formatting, 4-12 Font, 4-11 Font color, 4-12 Font size, 4-11 Italic formatting, 4-12 Specifying text properties, 4-13 Text box properties, 4-15 Underlining, 4-12

U

Updating existing fax drivers, 2-39 Using Add Printer Wizard, 2-40 Using Installer, 2-39 USB connection installation, 2-22 Plug and Play installation, 2-24, 2-27, 2-30, 2-33 USB installation using Add Printer Wizard, 2-23 USB standard installation, 2-22 USB port, 2-22

W

What is Cover Sheet Editor?, 4-2 Where to find Help, 1-7 Canon authorized dealers, 1-7 Online Help, 1-7 README. TXT file, 1-7 Windows Address Book, 3-24 Appendix 9



CANON INC. 30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan CANON U.S.A., INC. One Canon Plaza, Lake Success, NY 11042, U.S.A. CANON CANADA INC. 6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada **CANON EUROPA N.V.** Bovenkerkerweg 59-61 1185 XB Amstelveen, The Netherlands CANON FRANCE S.A.S. 17, quai du Président Paul Doumer 92414 Courbevoie Cedex, France CANON COMMUNICATION & IMAGE FRANCE S.A.S. (Pour les utilisateurs de l'imprimante laser uniquement) 12, rue de l'Industrie 92414 Courbevoie Cedex, France CANON (U.K.) LTD. Woodhatch, Reigate, Surrey, RH2 8BF, United Kingdom **CANON DEUTSCHLAND GmbH** Europark Fichtenhain A10, 47807 Krefeld, Germany CANON ITALIA S.p.A. Via Milano, 8 20097 San Donato Milanese (MI) Italy CANON LATIN AMERICA. INC. 703 Waterford Way Suite 400 Miami, Florida 33126 U.S.A. **CANON AUSTRALIA PTY. LTD** 1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia **CANON CHINA CO., LTD** 15F, North Tower, Beijing Kerry Centre, 1 Guang Hua Road, Chao Yang District, 100020, Beijing, China CANON SINGAPORE PTE. LTD. 1 HarbourFront Avenue #04-01 Keppel Bay Tower, Singapore 098632 CANON HONGKONG CO., LTD 19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong