



**LASER PRINTER  
FAX • COPIER • SCANNER**

**MULTIPASS™  
L6000**

# **MultiPASS Desktop Manager for Windows® NT**

**Canon Computer Systems  
CUSTOMER CARE CENTER  
1-800-423-2366  
Canon Canada  
1-800-263-1121**

---

## ***Copyright***

This manual is copyrighted by Canon Computer Systems, Inc. (CCSI) with all rights reserved. Under the copyright laws, this manual may not be reproduced in any form, in whole or part, without the prior written consent of CCSI.

© 1999 Canon Computer Systems, Inc.

## ***Disclaimer***

Canon Computer Systems, Inc. has reviewed this manual thoroughly in order that it will be an easy to use guide to your MultiPASS Desktop Manager for Windows NT for your Canon MultiPASS L6000. All statements, technical information, and recommendations in this manual and in any guides or related documents are believed reliable, but the accuracy and completeness thereof are not guaranteed or warranted, and they are not intended to be, nor should they be understood to be, representations or warranties concerning the products described.

Your MultiPASS and the software media included with your system have been sold to you subject to the limited warranties set forth in the warranty card and license agreement enclosed with the respective product. All software is licensed AS IS, as described in the license agreement enclosed with the software media. Further, CCSI reserves the right to make changes in the specifications of the products described in this manual at any time without notice and without obligation to notify any person of such changes.

## ***Trademarks***

Canon is a registered trademark and MultiPASS, ScanGear, and UHQ are trademarks of Canon Inc.

All other product and brand names are registered trademarks, trademarks, or service marks of their respective owners.



ENERGY STAR® COMPLIANT

As an ENERGY STAR® Partner, Canon U.S.A., Inc. has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

# Contents

---

<b>Chapter 1</b>	<b>Introduction .....</b>	<b>1-1</b>
	Desktop Manager Features: an Overview .....	1-2
	Desktop Manager Software Package .....	1-3
	System Requirements .....	1-5
	About This Guide .....	1-5
	Conventions Used in This Guide .....	1-6
	Other User Assistance .....	1-7
<b>Chapter 2</b>	<b>Installing the Desktop Manager Software .....</b>	<b>2-1</b>
	Installing the Software .....	2-2
	Preparing for the Installation .....	2-3
	Installing the Software .....	2-4
	Overwriting the MultiPASS Printer Options .....	2-6
	Setting the Default Printer .....	2-7
	Setting Default Printing Options .....	2-7
<b>Chapter 3</b>	<b>Printing with the MultiPASS Printer .....</b>	<b>3-1</b>
	Printing a Document .....	3-2
	Printing Envelopes .....	3-3
	Changing the Printer Settings .....	3-6
	An Alternative Method for Changing Printer Settings .....	3-6
	Choosing a Print Mode .....	3-7
	Setting and Saving a Custom Print Mode .....	3-9
	Setting Paper Options .....	3-15
<b>Chapter 4</b>	<b>Using the Desktop Manager .....</b>	<b>4-1</b>
	Desktop Manager: an Overview .....	4-2
	Features of the Desktop Manager Window .....	4-3
	Understanding Desktop Manager Folders .....	4-6
	System-Defined Folders .....	4-6
	User-Defined Folders .....	4-8
	Viewing Documents in the Desktop Manager .....	4-8

<b>Chapter 5</b>	<b>PC Faxing .....</b>	<b>5-1</b>
	Faxing with Your Computer .....	5-2
	Sending a Fax from Your Computer (PC Faxing) .....	5-2
	Specifying a Fax Recipient .....	5-5
	Defining Send Fax Options .....	5-7
	Processing the Fax .....	5-9
	Creating a Fax Memo .....	5-12
	Receiving a Fax .....	5-13
	Using the Fax Log .....	5-14
	Working with Jobs in the Send Fax Manager .....	5-16
	Setting Up the Address Book .....	5-21
	Address Book Features .....	5-21
	Working with Address Book Entries .....	5-22
	Printing the Address Book .....	5-27
	Importing the Address Book .....	5-27
	Exporting the Address Book .....	5-29
	Designing a Fax Cover Page .....	5-31
	Using the Cover Page Designer .....	5-32
	Creating a New Cover Page .....	5-34
	Making Image Adjustments .....	5-48
	Adding Annotations to Your Cover Page .....	5-63
	Opening and Modifying a Fax Cover Page .....	5-65
	Reverting to the Last Saved Version .....	5-66
	Printing a Cover Page .....	5-67
	Renaming a Cover Page .....	5-67
	Deleting a Cover Page .....	5-68
 <b>Chapter 6</b>	 <b>Scanning .....</b>	 <b>6-1</b>
	Scanning Overview .....	6-2
	Features of the ScanGear Window .....	6-2
	Scanning with the Desktop Manager .....	6-4
	Scanning from a Windows Application .....	6-5
	Setting the Preview Scan Options .....	6-6
	Setting the Scan Mode .....	6-6
	Setting the Scan Resolution .....	6-7
	Setting Preferences .....	6-9
	Setting Paper Size .....	6-11
	Setting Black and White Options .....	6-11
	Adjusting the Preview Image for Final Scan .....	6-12
	Clearing the Preview Area .....	6-13
	Adjusting the Preview Image View .....	6-13

Adjusting the Selection Size .....	6-14
Moving an Image .....	6-15
Reversing the Image Tone .....	6-15
Mirroring an Image .....	6-15
Rotating an Image .....	6-16
Scaling the Image Output Size .....	6-16
Adjusting the Tone of the Preview Image .....	6-16
Features of the Tone Tab .....	6-17
Adjusting Contrast and Brightness .....	6-18
Changing Gamma Curve Values .....	6-19
Adjusting Histogram Tone Levels .....	6-20
Using Tone Curves .....	6-22
Adjusting Contrast/Brightness for Black and White Scan Mode ..	6-25
 <b>Chapter 7 Working with Documents in the Desktop Manager .....</b>	<b>7-1</b>
Managing Your Documents in the Desktop Manager .....	7-3
Selecting Documents in the Desktop Manager .....	7-3
Printing a Document in the Desktop Manager .....	7-4
Creating a Folder .....	7-5
Moving a Document .....	7-5
Copying a Document .....	7-6
Renaming a Document or Folder .....	7-7
Deleting a Document or Folder .....	7-8
Restoring a Deleted Folder or Document .....	7-9
Emptying the Trash Folder .....	7-9
Importing a Document .....	7-10
Exporting a Document .....	7-10
Attaching a Document to Electronic Mail (E-mail) .....	7-11
Manipulating a Document in Document View .....	7-12
Arranging Documents in Document View .....	7-12
Scrolling Through a Multi-page Document .....	7-12
Removing a Page from a Document .....	7-13
Splitting a Document .....	7-14
Merging a Document .....	7-14
Indexing and Searching for Documents .....	7-15
Setting Up the Search Index .....	7-16
Assigning Index Criteria to Documents .....	7-21
Searching Your Documents .....	7-25
Redisplaying the Result of Your Last Search .....	7-30
Modifying a Document .....	7-30
Features of the MultiPASS Viewer Window .....	7-32

	Adjusting the Document Image .....	7-34
	Making Image Adjustments .....	7-39
	Adding Annotations to Your Document .....	7-54
	Revising Your Annotations .....	7-61
	Reverting to the Last Saved Version .....	7-63
	Printing the Document .....	7-63
	Adjusting the MultiPASS Viewer Default Options .....	7-66
<b>Chapter 8</b>	<b>MultiPASS Printer Setup and Other Utilities in the Desktop Manager .....</b>	<b>8-1</b>
	Setting Up Fax Options in the Desktop Manager .....	8-2
	Setting Up Fax Preferences .....	8-3
	Setting Up Send Fax Options .....	8-4
	Setting Up Advanced Send Fax Options .....	8-6
	Setting Up Receive Fax Options .....	8-9
	Setting Up Advanced Receive Fax Options .....	8-11
	Setting Up Speed Dial Assignments .....	8-15
	Setting Up System Options .....	8-18
	Using the Launcher .....	8-20
	Making a Phone Call from the Desktop Manager .....	8-23
	Using the MultiPASS Status Monitor .....	8-25
	Using the Minimized Status Monitor .....	8-25
	Using the Status Monitor Window .....	8-26
	Status Messages .....	8-27
	Disconnecting the MultiPASS Printer .....	8-28
	Restarting MultiPASS Connection .....	8-29
	Removing the Desktop Manager .....	8-29
	Reinstalling the Desktop Manager .....	8-31
<b>Chapter 9</b>	<b>Frequently Asked Questions .....</b>	<b>9-1</b>
	MultiPASS Printer Cannot Be Initialized. ....	9-2
	MultiPASS Service Cannot Be Restarted. ....	9-2
	Faxes Are Not Being Sent Correctly. ....	9-2
	Faxes Are Not Being Received Correctly. ....	9-4
	Images Are Not Scanning Properly .....	9-5
	Documents Are Not Being Copied. ....	9-6
	Documents Are Not Printing Correctly. ....	9-6
	Paper Is Not Loading Correctly. ....	9-9
	The Print Quality Is Not Satisfactory. ....	9-10
<b>Appendix A</b>	<b>Fax/Phone Characters .....</b>	<b>A-1</b>

<b>Glossary.....</b>	<b>G-1</b>
<b>Index .....</b>	<b>I-1</b>

# Chapter 1

## Introduction

---

Welcome and congratulations on your purchase of the Canon MultiPASS L6000 and its accompanying MultiPASS Desktop Manager for Windows NT software (hereafter referred to as the MultiPASS printer and Desktop Manager, respectively).

With your MultiPASS printer, the Desktop Manager software package enables you to perform a variety of tasks, meeting all your printing, faxing, and scanning needs.

- ❑ Desktop Manager Features: an Overview ..... 1-2
- ❑ Desktop Manager Software Package ..... 1-3
- ❑ System Requirements ..... 1-5
- ❑ About This Guide ..... 1-5
  - Conventions Used in This Guide ..... 1-6
- ❑ Other User Assistance ..... 1-7



# ***Desktop Manager Features: an Overview***

This section reviews some of the features of the Desktop Manager. For detailed information and instructions, refer to later chapters in this guide.

## **❑ Print a Document**

The MultiPASS printer can be configured as the Windows NT default printer, allowing you to print a document in any Windows NT application.

You can also define and customize print options that affect the output of your printed documents.

## **❑ Fax a Document**

You can fax a document from your computer, from within a Windows NT application, or from the Desktop Manager. You can attach a fax cover page and even schedule the transmission time that the fax should be sent. Predefined fax cover pages are available for you to use, or you can design your own.

For associates to whom you repeatedly send faxes or e-mail, you can set up an Address Book, containing predefined fax and e-mail information for each recipient (such as the fax or e-mail number). When you send a fax or an e-mail message from your computer, the recipient information is then readily available in the Address Book.

You can also receive faxes from your business and personal contacts directly into your PC.

## **❑ Scan an Image**

The TWAIN-compliant scan driver enables you to use the MultiPASS printer to scan black and white documents, photographs, and other images directly into the Desktop Manager or into another Windows NT application.

## **❑ Import or Export a Document**

You can import, export, store, and manage .BMP, .FPX, .JPG, .PCX, or .TIF documents and images directly in the Desktop Manager.

❑ **Manipulate or Annotate a Document**

You can manipulate or annotate any document placed in the Desktop Manager — which occurs by sending or receiving a fax, scanning an image, or importing a file. You manipulate a document by scrolling through and viewing its contents; removing a page; splitting or merging it with another document; editing it by cropping, rotating or flipping; adjusting the document brightness, contrast, size, or image type; or by printing the document. You annotate a document by adding a text annotation, graphic or text stamp, sticky note, highlighting, or by creating a simple drawn graphic.

❑ **Set MultiPASS Printer Options**

Options that affect certain operations of your MultiPASS printer can be set manually on the MultiPASS printer itself or in the Desktop Manager. These options include parameters that affect sending and receiving faxes, and the assignment of speed dial numbers. Option settings defined in the Desktop Manager override any corresponding option setting you previously set up on the MultiPASS printer.

## ***Desktop Manager Software Package***

The Desktop Manager software package includes drivers and a set of utility programs which are automatically installed on your system when you install the software package. The drivers allow the MultiPASS printer to communicate with software on your computer.

The following drivers and application programs are installed:

❑ **MultiPASS Desktop Manager for Windows NT**

The MultiPASS Desktop Manager for Windows NT coordinates sending faxes directly from your computer (PC faxes), receiving faxes into your computer, and scanning images. The Desktop Manager enables you to store and manage the resulting documents.

❑ **MultiPASS Printer Driver**

The MultiPASS printer driver enables you to use the MultiPASS printer as the default printer in any Windows NT application that supports printing.

❑ **MultiPASS Fax Driver**

The MultiPASS fax driver enables you to send a PC fax from any Windows NT application that allows faxing.

❑ **Scan Driver (ScanGear for MultiPASS)**

The scan driver enables you to scan an image into the Desktop Manager or most Windows NT applications that supports TWAIN-compliant scanning.

❑ **MultiPASS Service**

The MultiPASS Service (MPService) enables and controls all the communication between your computer and the MultiPASS printer. MPService must be running for jobs to be processed with the Desktop Manager and the MultiPASS printer (such as receiving faxes in the Desktop Manager, scheduling faxes, scanning, and printing).

MPService starts automatically when you start your computer, even if you have not yet logged into Windows. If you log off Windows and leave the computer on, MPService continues to run, to receive and send any faxes to and from the Desktop Manager.

❑ **MultiPASS Status Monitor**

The MultiPASS Status Monitor monitors the activity occurring through the bi-directional parallel port to which the MultiPASS printer is connected. The Status Monitor displays status messages about the current activity. The Status Monitor is installed as part of the Windows NT startup group, and is automatically started when you log into Windows.

❑ **Send Fax Manager**

The Send Fax Manager displays an ordered queue of fax jobs and their status.

# System Requirements

To successfully install and operate the Desktop Manager with the MultiPASS printer, your system must meet the following minimum requirements:

- ☐ An IBM or compatible computer with a Pentium 90 processor or higher. An Intel Pentium processor is recommended.
- ☐ Microsoft Windows NT 4.0
- ☐ Microsoft Windows NT Service Pack 3 or later
- ☐ 32 megabytes (MB) of RAM. 64 MB of RAM is recommended.
- ☐ 60 MB of available hard disk space. 150 MB of available hard disk space is recommended
- ☐ CD-ROM drive, or access to one over a network connection
- ☐ 256-color SVGA monitor or greater
- ☐ A bi-directional, IEEE-1284-compatible parallel cable 6.6 feet (2 meters) in length or shorter. For help in purchasing the correct cable, consult your dealer or retailer.

## About This Guide

This guide assumes you have a basic understanding of Windows NT. This includes how to start your system and navigate within the Windows NT environment. You should be familiar with common Windows NT terms such as window, dialog box, button, icon, menu, application, select, open, close, click, double-click, drag, and list box.

For assistance in familiarizing yourself with Windows NT, refer to your Microsoft Windows NT user documentation.

## ***Conventions Used in This Guide***

The following types of formatting identify specific types of information provided in this guide.

Italicized text

Used to stress the importance of a word or phrase, or to refer to the title of another guide. For example:

You *cannot* access the dialog box ....  
—or—  
...the *Microsoft Windows NT User's Guide*....

Text in quotation marks

Used to refer to the title of a section within the guide. For example:

...the “Installing the Software” section....

Click, double-click

Use of the word *click* or *double-click* provides instructions for selecting or choosing a command or option, generally with a mouse.

Monospaced text

Used for commands you might type when installing the software, or system messages that may display on your screen. For example:

A : \SETUP

## Other User Assistance

In addition to this guide, the following information and instructions on using the MultiPASS printer and Desktop Manager software are available.

- ❑ **MultiPASS Desktop Manager Online Help**  
The online help includes context-sensitive help about a window or dialog box and step-by-step instructions for performing Desktop Manager tasks.
- ❑ **Canon MultiPASS L6000 User's Manual**  
This manual offers detailed information on how to operate your MultiPASS printer. It includes paper handling, stand-alone operations (versus PC faxing), daily maintenance, and troubleshooting. Please note that all information in the *User's Manual* regarding the Desktop Manager pertains to Windows 98 and Windows 95 (not Windows NT).
- ❑ **Quick Start Guide**  
This guide summarizes the steps for setting up your MultiPASS system.

# Chapter 2

## Installing the Desktop Manager Software

---

This chapter provides information and instructions for installing the Desktop Manager software, and for setting the default printer and port.

- ❑ Installing the Software ..... 2-2
  - Preparing for the Installation ..... 2-3
  - Installing the Software ..... 2-4
  - Overwriting the MultiPASS Printer Options ..... 2-6
- ❑ Setting the Default Printer ..... 2-7
- ❑ Setting Default Printing Options ..... 2-7



**Note**

---

If you followed the instructions in the *Quick Start Guide* and have already installed all the MultiPASS software, you can skip this chapter.

---

# Installing the Software

Your MultiPASS software comes with a Master Installer that makes installing the MultiPASS software fast and easy. The Master Installer starts up and loads the software in this order:

- ☐ MultiPASS Desktop Manager (including the printer and fax drivers)
- ☐ MultiPASS ODBC (Open DataBase Connectivity) Interface
- ☐ ScanGear for MultiPASS.

By default, the Desktop Manager software is installed on your C: drive in a folder named MultiPASS (C:\Program Files\Canon\MultiPASS\), unless you specify another drive or folder during installation. The installation process also changes some of your system files to allow all the Desktop Manager components to work properly.

During installation, you are prompted to enter certain fax setup information. This information can later be changed in the Desktop Manager, as described in a later chapter.



## Note

---

The fax setup information you enter during installation adjusts corresponding settings in your MultiPASS printer. Therefore, any fax information you may have manually set on the MultiPASS printer is replaced by the information you enter when installing the Desktop Manager.

---

During installation, the MultiPASS Status Monitor is automatically added to your Windows NT StartUp group. This setup enables your system to automatically start the MultiPASS Status Monitor each time you start Windows NT.

When installation is complete, the Master Installer determines whether or not your computer needs to be restarted.





#### Note

---

When you installed Windows NT on your computer, you may have formatted the partitions on your hard drive with NTFS (New Technology File System). In this case, you can operate the MultiPASS Desktop Manager *only* if you log in as the Administrator or with Administrator privileges.

---

## Preparing for the Installation

Before you begin installing the software, take some time to prepare your system and fax setup information required for installation.

- ☐ Connect the MultiPASS printer to the parallel port on your computer.

The selected parallel port must be a dedicated port. The MultiPASS printer does not operate with a redirected or virtual parallel port.

- ☐ Prepare the following fax setup information, which is entered during installation:
  - Your preferred mode for receiving faxes with the MultiPASS printer: automatically switching between a telephone and fax call, automatically receiving fax calls only, requiring you to manually receive fax calls, or handling incoming calls with an answering machine connected directly to the MultiPASS printer.
  - Fax Heading/Unit Name  
The name you want to appear in the fax header (usually your name or company name), which appears in the top margin of each page of a fax transmission.
  - Fax Number  
The number for the fax line connected to your MultiPASS printer. This information is printed in the fax header, displaying in the top margin of each page of a fax transmission.
  - Company Name (for Cover Page)  
Name of your company. Once entered, this information is available to print on a fax cover page.

- **Outside Dialing Prefix**  
If applicable, the number for accessing an outside line through your office phone system (usually 9).
  - **Fax Receive Mode**  
The method by which you want the MultiPASS printer to handle incoming faxes when your PC is on: upload the fax directly to the Desktop Manager or print the fax from the MultiPASS printer.
- ☐ **Start Windows.** If any Windows applications are open, close the applications. With the applications closed, you ensure that the Desktop Manager software installs properly.



**Note**

---

In accordance with recent amendments to the FCC rules governing the use of facsimile equipment, you are now required to include your fax number, name or company name, and the date and time of the fax you are sending every time that you send a fax. Be sure to enter this information during installation.

---



**Note**

---

If you are attempting to *reinstall* the Desktop Manager software, you must first remove the current installation. For instructions on removing the software, refer to Chapter 8, “MultiPASS Printer Setup and Other Utilities in the Desktop Manager.”

---

## ***Installing the Software***

Once you have prepared your system and the required fax information, you are ready to install the Desktop Manager software.



**Note**

---

You must log on to Windows NT as Administrator or have Administrator privileges before installing the Desktop Manager software. If you do not have Administrator privileges for Windows NT, ask your system administrator to install the MultiPASS Desktop Manager software on your PC.

---

 
**To install the Desktop Manager software:**

1. Insert the installation CD into your disk drive.
2. If AutoRun is enabled, the installation Welcome screen automatically appears.

If installation does not start automatically:

- On the Windows taskbar, click Start, and then click Run.
- In the Run dialog box, type the following command and click OK (where D: is your CD drive).

D:\SETUP

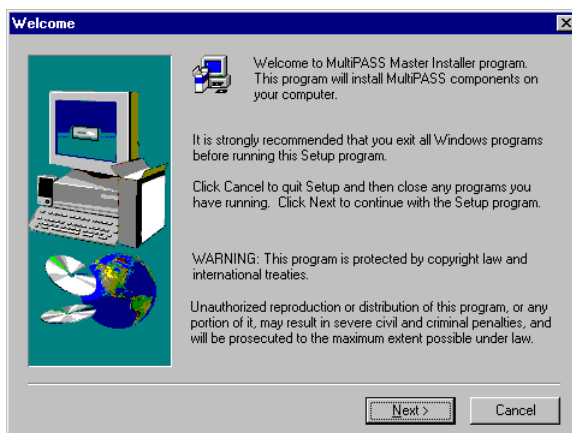

3. Follow the on-screen instructions to complete the installation process.

During installation, follow these guidelines:

- Click Next to move from one dialog box to the next.
- Make sure you click Next or OK on the current dialog box.

- Be sure to wait for Windows NT to complete each setup step. If you hear the computer working, wait until it is done.

For information about allowing the Desktop Manager software to overwrite the MultiPASS printer setup options, refer to the “Overwriting the MultiPASS Printer Options” section.

## ***Overwriting the MultiPASS Printer Options***

If you set options on the operator panel of your MultiPASS printer (such as a phone line type), they are overwritten by the Desktop Manager software under the following conditions:

- ☐ When the installation of the Desktop Manager software is completed and you select to launch the MultiPASS Status Monitor
- ☐ After installation, when you open the MultiPASS Status Monitor (which occurs automatically when you start Windows NT)
- ☐ After installation, when you save a change to the setup options in the Desktop Manager (as described in Chapter 8, “MultiPASS Printer Setup and Other Utilities in the Desktop Manager”).

When setting options, a message appears to remind you that the MultiPASS printer options set on the operator panel will be overwritten if set in the Desktop Manager.

You can choose to proceed with the update, overwriting the settings in the MultiPASS printer, or you can cancel the action. When canceling, you can first record your settings on the MultiPASS printer. This enables you to reenter them in the Desktop Manager when you resume operations.

## ***Setting the Default Printer***

 
When you install the printer driver software, the system automatically sets the MultiPASS printer as the default printer. If necessary, however, follow these instructions to set the default printer.

**To set the default printer:**

1. On the Windows NT desktop, click Start, and then point to Settings.
2. On the Settings menu, click Printers.
3. In the Printers dialog box, click the MultiPASS printer icon.
4. On the File menu, click Set As Default.

## ***Setting Default Printing Options***

You can change the device settings automatically assigned during the installation. You can select the feeder and the paper type that you want to use as your default options for all of the documents you print. The default settings that you choose, however, can be overwritten by specifying different options when you print your document.

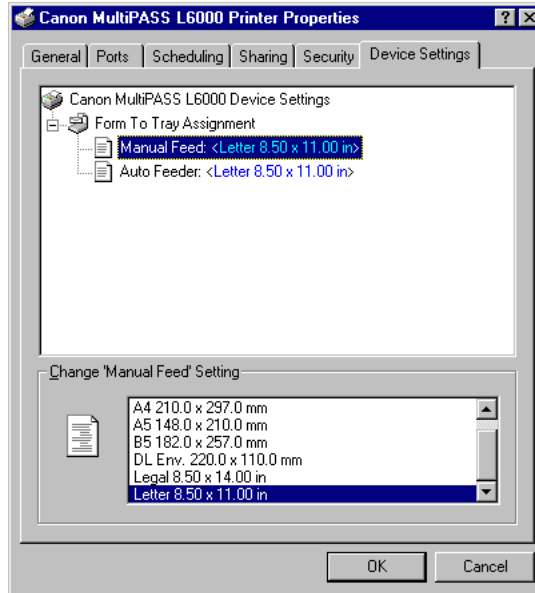

### To set default printing options:

1. On your Windows desktop, click Start, and then point to Settings.
2. On the Settings menu, click Printers.
3. In the Printers dialog box, select the Canon MultiPASS printer icon.
4. On the File menu, click Properties.
5. In the Printer Properties dialog box, click the Device Settings tab.
6. Specify your desired options. Click OK to save your changes and close the dialog box. Click Cancel to close the dialog box without saving your changes.



**Note**

---

The General, Ports, Scheduling, Sharing, and Security tabs provide standard Windows options for your printer driver. For details on these options, see your Windows user documentation.

---

# Chapter 3

## Printing with the MultiPASS Printer

---

This chapter reviews the instructions for printing a document from a Windows application with your MultiPASS printer and for changing the printer settings.

- ❑ Printing a Document .....3-2
  - Printing Envelopes .....3-3
- ❑ Changing the Printer Settings.....3-6
  - An Alternative Method for Changing Printer Settings .....3-6
  - Choosing a Print Mode .....3-7
  - Setting and Saving a Custom Print Mode .....3-9
  - Setting Paper Options .....3-15



---

For details on the paper handling features of your MultiPASS L6000, see the *Canon MultiPASS L6000 User's Manual*.

For details on the Windows NT printer driver for the MultiPASS L6000, see the information in this chapter.

---

# ***Printing a Document***

Once you have installed the software, you are ready to print a document — from any Windows NT application that supports printing, such as Word for Windows NT — using the MultiPASS printer.

Printer options are initially installed using default settings, enabling you to print immediately. These options determine what your documents look like when printed. For example, they define such settings as the paper size and page orientation. For more information on printer settings, see the “Changing the Printer Settings” section later in this chapter.

Instructions for printing a document can vary somewhat for different Windows NT applications. Therefore, for detailed instructions, refer to the user documentation for the specific application from which you are printing.

The following instructions summarize the general procedures for printing a document.

## **To print a document:**

1. With your document open, click the Print command. (In most Windows NT applications, the Print command is on the File menu, toolbar.)
2. In the Print dialog box, make sure the Canon MultiPASS printer is selected in the Printer text box.

The Canon MultiPASS printer always appears as the selected printer if you specified it as the default printer when you installed the printer driver and Desktop Manager software, as described in the previous chapter.

3. Click the command to print your document (usually OK or Print).

The document is printed to your MultiPASS printer.



## ***Printing Envelopes***

When printing envelopes, use the following guidelines to achieve the best results.

- ❑ Use the appropriate size envelope: U.S. commercial size number 10 or European size DL.

 
Although other envelope sizes might fit in the manual feed tray, using them may not provide consistent printing results.

- ❑ Avoid using the following types of envelopes. They may cause jams or smears, or may damage your printer:
  - With windows, holes, perforations, cutouts, and double flaps
  - Made with special coated or deeply embossed paper
  - With peel-off sealing strips
  - With letters enclosed.
- ❑ Avoid using the multi-purpose tray to load envelopes when temperature or humidity levels are high. The glue on the flap may become sticky and stick to the envelope, or cause a paper jam. Use the manual feed slot instead.
- ❑ Stack up to 7 envelopes in the L6000 multi-purpose tray. If you use the manual feed slot, feed envelopes one at a time.
- ❑ Be sure to use face-up delivery when printing on envelopes.


**To load envelopes:**

1. Prepare the envelopes.


Arrange the stack of envelopes on a firm surface and press down firmly on the edges to make the folds crisp.

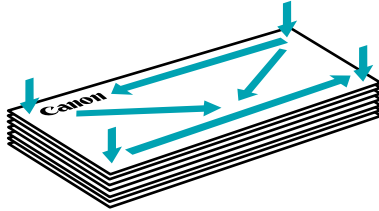

 
Press all the way around the envelopes to remove any curls and expel air from inside the envelopes. Make sure any curls are removed from the flap of each envelope.

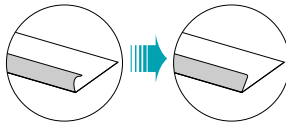

 
2. Insert the stack of envelopes, with the print side facing you, into the sheet feeder until it stops.

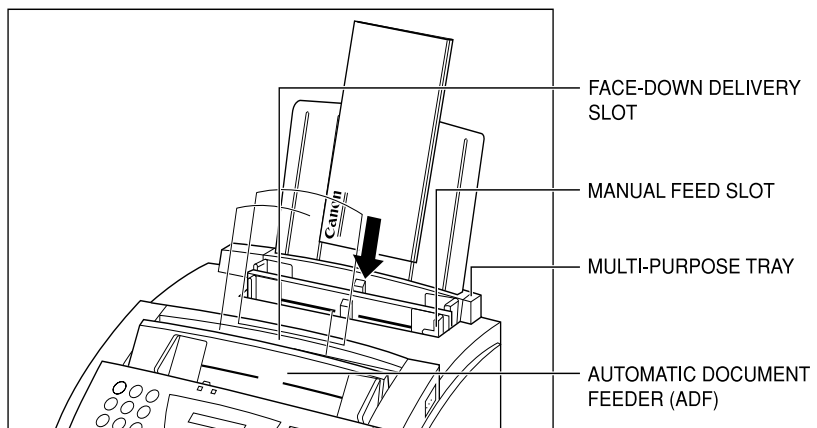

 
3. Adjust the paper guides to the stack of envelopes.

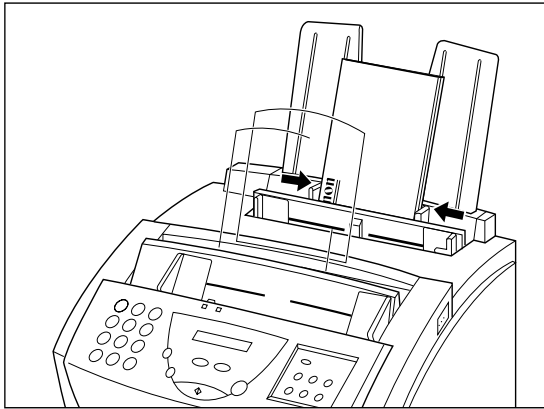

 4. Move the paper delivery selector to its lowest position.

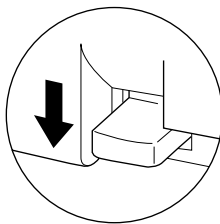

FACE-UP DELIVERY

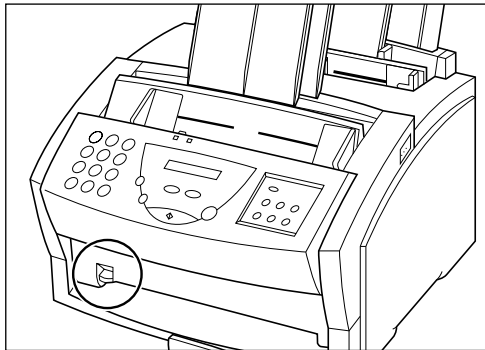 

You are now ready to begin printing your envelopes.

# ***Changing the Printer Settings***

Print options are the settings that determine how your document looks when it is printed. Print options are initially installed using default settings, allowing you to print documents immediately. However, you may want to change these settings for certain documents.

The following instructions summarize the general procedures for changing printer settings. For detailed information on specific printer options, refer to later sections in this chapter.

## **To change print options:**

1. With your document open, click the Print command. (In most Windows NT applications, this command is on the File menu or toolbar.)
2. In the Print dialog box, click Properties.
3. In the Printer Properties dialog box, on the Main and Paper tabs, specify the desired printer options.
4. To save the changes and close the dialog box, click OK.

To close the dialog box without saving any changes, click Cancel.

## ***An Alternative Method for Changing Printer Settings***

You can also access printer driver options directly from the Windows NT desktop. The following information summarizes the general method of accessing printer options. For more detailed information, see your Windows NT user documentation.

From the Windows NT desktop, click Start, point to Settings, and then click Printers. In the Printers dialog box, select the Canon MultiPASS printer icon. On the File menu, click Document Defaults. In the Printer Default dialog box, specify the appropriate changes and click OK.

## Choosing a Print Mode

When printing a document, you can choose a print mode. Print modes combine and save print quality and color settings as icons, which you can easily select. Initially, there are six predefined print modes. You can readily change settings for a particular print mode at any time. You can also add new print modes to suit the needs of a particular print job.

### To choose a print mode:

1. In the Printer Properties (or Printer Default) dialog box, click the Main tab.



2. Under Choose Print Mode, click the predefined print mode that best suits your document. The following print modes are predefined:
  - **High Quality**  
Click High Quality if you want to print your document using the optimum print settings to produce the highest quality print job.
  - **Draft**  
Click Draft if you would like to print your document quickly but with a lower print quality. The Draft print mode is ideal for longer documents and proofreading purposes.

The Printer Illustration area shows the settings for the current print mode.

The Description box displays a simple explanation or note about the selected print mode.

## ***Setting and Saving a Custom Print Mode***

You can define and save a custom print mode to fit the needs of a particular print job. Once saved, these custom options can be changed or overwritten. If you do not save a custom print mode, it is available only for the current print job.

You cannot change or delete the settings of a factory defined print mode.

 
The following instructions summarize the procedures for setting and saving a custom print mode.

### **To set a custom print mode:**

1. In the Printer Properties or Printer Default dialog box, on the Main tab, select a print mode. Then click Change.
2. In the Properties dialog box, specify your desired print mode settings on the Quality tab.
3. Click the Save tab and save your setting.
4. In the Properties dialog box, click OK to save your changes and close the dialog box. Click Cancel to close the dialog box without saving your changes.

## Setting Quality Options

For a custom print mode, you select to save toner or use the regular amount when printing and you set the paper feed.

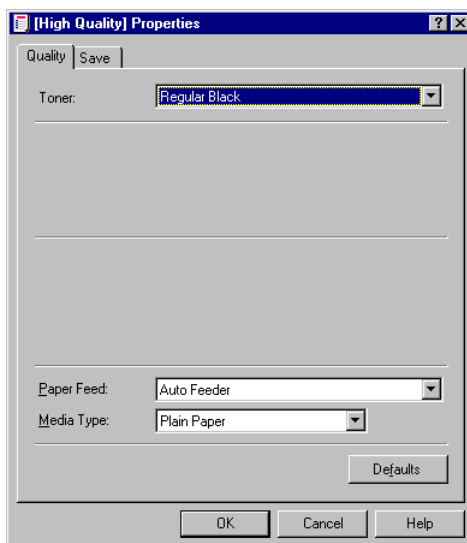

### To set Quality options:

1. In the Properties dialog box, on the Quality tab, select to save toner when printing or use the regular amount of toner from the Toner list.
2. In the Paper Feed box, select the desired method for feeding paper into the printer.

In the Media Type box, the only option available is Plain Paper. You use the Plain Paper setting for all of your print jobs despite the type of paper you print on.

 
### To restore Quality options to their defaults:

If you are dissatisfied with your changes and want to revert to the default Quality options, click Defaults.



## ***Saving a Custom Print Mode***

After you change the Quality settings, you can save print modes for future use. For example, one print mode may be appropriate when printing a Word document, and another when printing a Photoshop graphic. To quickly set print options for your next document, you can select a saved mode.

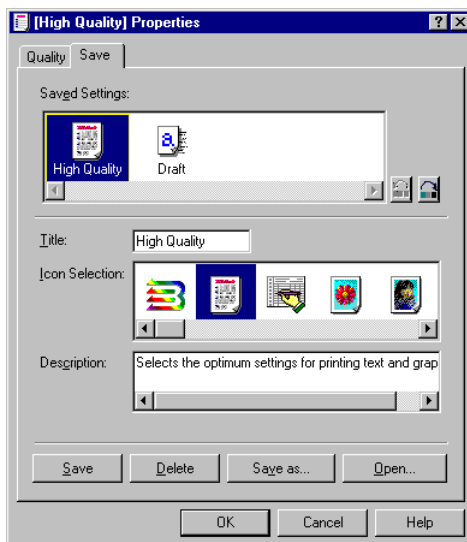

### **To save the custom print mode:**

1. In the Properties dialog box, on the Save tab enter a name for the new print mode in the Title box,.
2. In the Icon Selection box, click to select an icon for your new print mode.
3. In the Description box, type a description of the print mode. This description appears on the Main tab when your print mode is selected.
4. Click Save.

When you close the Properties dialog box, your new print mode appears in the Choose Print Mode list on the Main tab. You may have to scroll through the selections to find your new print mode.

## ***Using a Saved Custom Print Mode***

Follow these instructions to use a saved custom print mode.

### **To use a custom print mode:**

1. In your application Print dialog box, click Properties (or Options or Settings) .
2. In the Printer Properties dialog box, on the Main tab, click your custom print mode in the Choose Print Mode list.
3. Click OK.

Your document is printed using the custom print mode options.

## ***Editing a Custom Print Mode***

You can change the settings of any saved custom print mode.

### **To edit a custom print mode:**

1. In the Printer Properties dialog box, on the Main tab, click the setting in the Choose Print Mode list that you would like to edit.
2. Click Change.
3. In the Properties dialog box, on the Quality tab, make your desired changes.
4. Click the Save tab. Make sure that the print mode that you specified in step one is selected in the Saved Settings list.
5. Click Save.

Your setting is saved with your new changes.

## ***Deleting a Custom Print Mode***

When you decide that you no longer need one of your saved custom print modes, you can delete it.

### **To delete a custom print mode:**

1. In the Printer Properties dialog box, on the Main tab, select the custom setting that you want to delete in the Saved Settings list box.
2. Click Change.
3. In the Properties dialog box, on the Save tab, make sure the setting that you specified in step one is selected.
4. Click Delete.

Your custom print mode no longer appears in the Saved Settings list on the Save tab.

## ***Saving a Custom Print Mode as a File***

To keep the number of custom print modes stored on the Main tab to a minimum, you can save a print mode as a file. Once a custom print mode is saved, you can delete the print mode from the list of your saved settings. Anytime you need the print mode, however, you can retrieve the file.

### **To save a custom print mode as a file:**

1. In the Printer Properties dialog box, on the Main tab, click Change.
2. In the Properties dialog box, click the Save tab.
3. On the Save tab, in the Saved Settings list, click the print mode that you want to save as a file.
4. Click Save As.
5. In the Save File dialog box, click the folder where you want to save the file. Then type a name for the file.
6. Click OK.

## ***Retrieving a Custom Print Mode File***

Follow these instructions to retrieve a print mode previously saved as a file.

### **To retrieve a custom print mode file:**

 
1. In the Printer Properties dialog box, on the Main tab, click Change.
2. In the Properties dialog box, click the Save tab.
3. On the Save tab, click Open.
4. In the Open File dialog box, click the drive and directory where you saved your print mode. Then click the saved file that want to retrieve and click to select the appropriate icon in the Icon list.
5. Click OK.

Your retrieved print mode appears in the Saved Settings list on the Save tab.

## Setting Paper Options

When printing a document, you can set the orientation, paper size, and paper feed. The following procedures summarize how to change paper options.

1. In the Printer Properties (or Printer Default) dialog box, click the Paper tab.

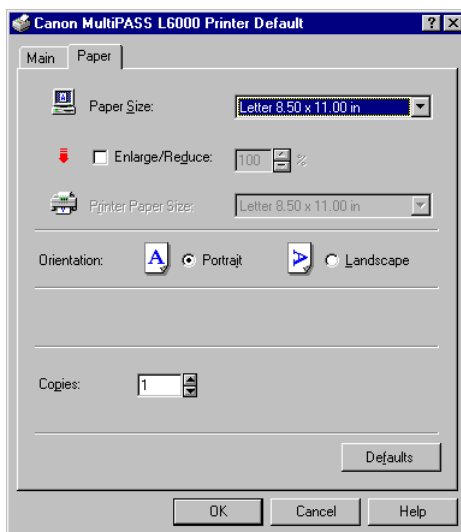

2. In the Paper Size box, select the size of the paper or envelop you want to use.

The selected paper should be identical to the paper size specified within the Windows NT application from which you want to print.

3. Select Enlarge/Reduce to enlarge your document's printing size by up to 400 percent or reduce it down to as low as 10 percent of the original document size.

For detailed information, see the "Using the Enlarge/Reduce Option" section.

4. In the Printer Paper Size box, select a paper size for the enlarging and reducing option.

When the Printer Paper Size option is selected instead of the Paper Size option, the size of the document is automatically enlarged or reduced to fit the printer paper size you selected.

5. Click the type of orientation to determine how your document is printed on the page.
  - Portrait prints the contents of your document vertically on the page.
  - Landscape prints the contents of your document horizontally on the page.
6. In the Copies box, select the number of copies you want to print.
7. Click OK to save the settings and close the dialog box.

### ***Using the Enlarge/Reduce Option***

You can use the Enlarge/Reduce option to increase your document printing size by up to 400 percent or reduce it down to as low as 10 percent of the original document size. When you change the enlarge or reduce rates, however, you also change the printable area of your document, which may result in only a partial printing of your document.

There are two ways to enlarge or reduce your document. You can either specify a different paper size from the one specified in the software application, or you can specify the rate of enlargement or reduction of the document size.

### **To enlarge or reduce by changing the printing paper size:**

1. In the Paper Size list, click the paper size specified in the software application (you can usually find this by looking at the Page Setup option in the software application).
2. Select Enlarge/Reduce.
3. In the Printer Paper Size list, select the actual paper size that is in the printer. The percent by which your document is enlarged or reduced automatically adjusts to the printer paper size you specified.
4. Click OK.

### **To enlarge or reduce by specifying the rate of enlargement or reduction:**

1. In the Paper Size list, select the paper size specified in the software application (you can usually find this by looking at the Page Setup option in the software application).
2. Select Enlarge/Reduce.
3. In the Enlarge Reduce list, select the desired rate of enlargement or reduction.
4. Click OK.



**Note**

---

When you change the paper size in your software application, the rate of enlargement or reduction automatically adjusts to reflect your change.

---

## ***Displaying Printer Driver Information***

To review information about your printer driver, on the Main tab, click About.

# Chapter 4

## Using the Desktop Manager

---

This chapter provides an overview of the basic features of the Desktop Manager.

For detailed information and instructions on Desktop Manager tasks, refer to later chapters in this guide.

- ❑ Desktop Manager: an Overview ..... 4-2
  - Features of the Desktop Manager Window ..... 4-3
  - Understanding Desktop Manager Folders ..... 4-6
  - System-Defined Folders ..... 4-6
  - User-Defined Folders ..... 4-8
  - Viewing Documents in the Desktop Manager ..... 4-8



# ***Desktop Manager: an Overview***

The MultiPASS Desktop Manager is a full-featured Windows application that enables you to use your MultiPASS printer from your computer. With the Desktop Manager, you can:

- ☐ Send and receive faxes from and to your computer
- ☐ Scan images into your computer
- ☐ Store faxes and scanned images in folders on your computer
- ☐ Import or export a document
- ☐ Manipulate stored documents by removing a page; splitting or merging it with another document; editing it by cropping, rotating or flipping; adjusting the document brightness, contrast, size, or image type; or by printing the document
- ☐ Annotate a stored document
- ☐ Set up an address book for individuals or groups to whom you repeatedly send faxes
- ☐ Design your own fax cover page
- ☐ Define system options for the MultiPASS printer
- ☐ Complete other tasks such as phoning an individual with your MultiPASS printer handset (if installed) and monitoring the status of your Desktop Manager jobs.

## **To start the MultiPASS Desktop Manager:**

 
1. On the Windows desktop, click Start, and then point to Programs.
2. In the Programs menu, point to Canon MultiPASS Desktop Manager , and then click MultiPASS Desktop Manager.

**To close the Desktop Manager:**  
On the File menu, click Exit.

When you exit the Desktop Manager, you close only the Desktop Manager window. Any documents you have set up to PC fax or print remain active. The MultiPASS Status Monitor and the Send Fax Manager, which track the progress of your active jobs, also remain open and active.

## ***Features of the Desktop Manager Window***

This section provides an overview on the basic use of the MultiPASS Desktop Manager window. Detailed instructions for using its commands and components are provided in later sections of this chapter.

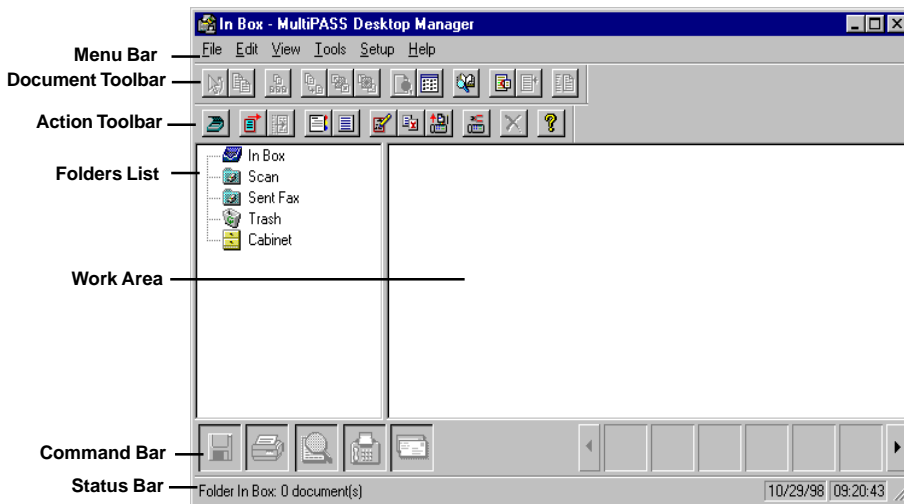


### ☐ **Menu Bar**

The menu bar contains the commands that enable you to perform the various Desktop Manager tasks. Many of the commands can also be accessed using their corresponding button on the toolbar.

Some of the menu commands are also available on shortcut menus, which are displayed by clicking the right mouse button in the Desktop Manager window.


#### ❑ Document Toolbar

 The document toolbar provides quick access for performing manipulation tasks with a selected document. In circumstances where a task is not possible, the toolbar button is unavailable, appearing dimmed.

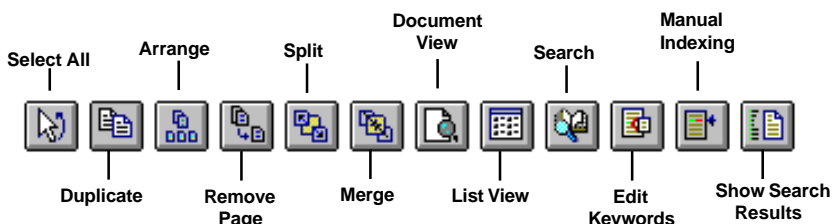

#### ❑ Action Toolbar

 The action toolbar provides quick access for performing certain Desktop Manager tasks. In circumstances where a task is not possible, the toolbar button is unavailable, appearing dimmed.

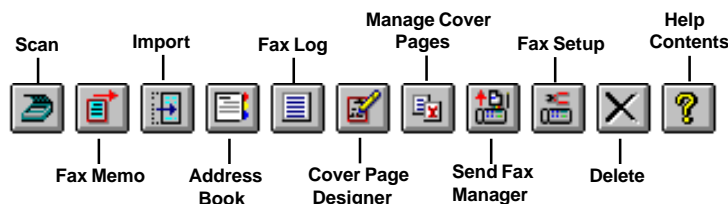

You can move the action or document toolbar anywhere on the Desktop Manager workspace to better suit your own working habits.

ToolTips are also available, providing descriptions of the toolbar buttons. To display a ToolTip, pause the mouse pointer when it is directly over a button.

#### ❑ Folders List

The folders list contains folders that store your documents. The list contains both system-defined folders, which were automatically created when you installed the software, and user-defined folders, which you create as you need them.

 
### ❑ Work Area

The work area appears to the right of the folders list and displays the documents contained in the open folder. The documents are displayed either as a graphic thumbnail of each document, or a list of the documents.

The width of the work area can be adjusted by dragging the border (the split bar) between the work area and folders list.

### ❑ Command Bar

The command bar is located at the bottom of the work area and contains buttons that perform key processing tasks. You can also launch other Windows applications such as your e-mail program, Paint or WordPad.

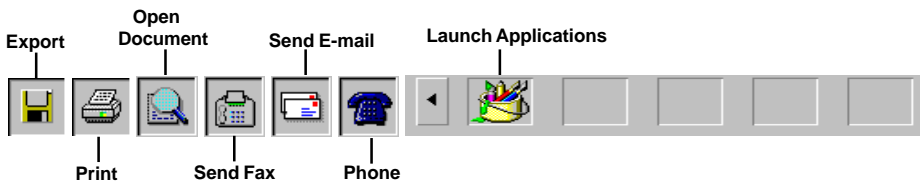

A Phone button displays if a handset is installed on your MultiPASS printer and you set the handset option in the Desktop Manager Setup Options dialog box. This is described in detail in Chapter 8, “MultiPASS Printer Setup and Other Utilities in the Desktop Manager.”

You use command bar buttons as follows:

- Drag a document to the button.  
For example, you can drag a document from a folder to the Print button in order to print the document.
- ❑ If a document is dragged to a button that cannot perform the task, the mouse pointer displays as a No icon (a circle with a diagonal bar drawn through it).
- Select a document in a folder, and then click a button.

This method activates the command for the selected document, as though the document had been dragged to the button.

- Double-click a launching icon. This starts the application as if it were started from the Windows desktop.

❑ **Status Bar**

The status bar displays information about the selected document or folder, or a description of the currently selected menu or toolbar command. It also displays the current date and time. The information is for display only, and cannot be edited.

## ***Understanding Desktop Manager Folders***

The Desktop Manager stores and organizes documents in folders. Only one folder can be open at a time. When you open another folder, the current folder closes.

You can organize your documents in any manner you want, placing documents in folders, or folders within folders as may be desirable.

## ***System-Defined Folders***

When you installed the Desktop Manager, a number of system-defined folders were automatically created — In Box, Sent Fax, Scan, Trash, and Cabinet (which contains the folders you create). You can tell which folder is open by the folder icon.

You cannot add new folders or documents to the system-defined folders. They are reserved for use by the Desktop Manager in the following ways:

- ❑ With the exception of the Trash folder, only the Desktop Manager can place documents in system-defined folders, based on faxes sent or received, or images scanned. You can rename, copy, move, delete, or manipulate documents in these folders.

- ❑ The system-defined folders, including the Trash folder, cannot be deleted or renamed.

A document remains in a system-defined folder until you move it to a user-defined folder, or delete it.

### ***In Box Folder***

The In Box folder is automatically open each time you start the Desktop Manager (even if it is empty). It stores all incoming faxes that were sent to you by other fax machines, received by your MultiPASS printer, and then uploaded to your PC.

Each received fax is displayed using a system-assigned name. You can change the name to something more descriptive.

### ***Sent Fax Folder***

The Sent Fax folder contains all documents which have been successfully sent as PC faxes and which you requested not to be deleted after sending. Each sent fax displays with a system-assigned name, which can be changed as desired.

### ***Scan Folder***

The Scan folder stores all images you scan with the MultiPASS printer from the Desktop Manager. Each document displays with a system-assigned name, which can be changed as desired.

### ***Trash Folder***

The Trash folder stores all the documents you remove from the other folders. Once a document is moved to the Trash folder, it remains there until you delete it.

You can fax, print, or open documents in the Trash folder.

## ***User-Defined Folders***

You can create an unlimited number of folders for your own use in the Cabinet. You cannot place documents directly into the Cabinet; you must place them in folders within the Cabinet.

## ***Viewing Documents in the Desktop Manager***

When you open a folder, you can view the documents which are contained in that folder in Document View or List View.

 
If the number of documents within a folder exceeds the available work area, horizontal and/or vertical scroll bars display. You can use them to scroll through the work area to view all the documents.

### **To open a folder:**

In the folders list, click the desired folder.

### ***Document View***

Document View displays each individual document as a thumbnail titled with the document name. For multiple page documents, the thumbnail also displays the page count, as well as scroll arrows at the bottom, and a scroll box at the right side. The scroll arrows and scroll box enable you to page through a multi-page document, displaying each page in turn or moving to a particular page in the document.

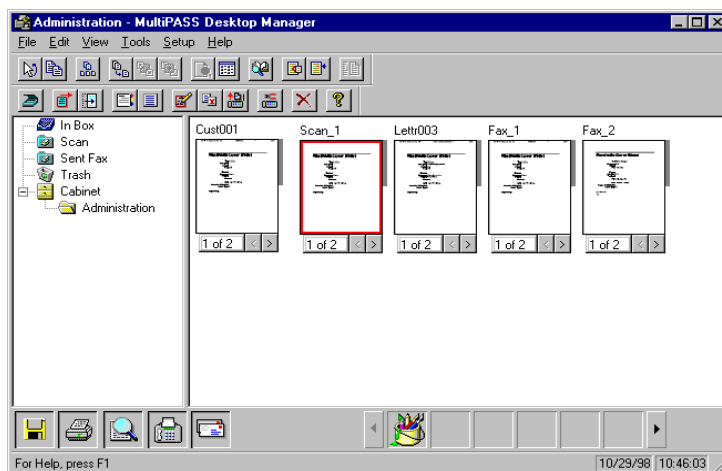

Document View allows you to work with an individual document at the page level: scrolling pages, removing a page, splitting a document, or merging two or more documents into a single document. You can rearrange the document thumbnails within the work area as needed by simply dragging them to the desired location.


#### **To view documents in a folder as thumbnails:**

 With the folder open, click Document View on the View menu or toolbar.

### ***List View***

List View displays documents within the open folder as a list. Each document in the list displays an icon representing the document type, along with other pertinent information about the document (such as its name, page count, disk storage size, date and time of creation, and its origin).



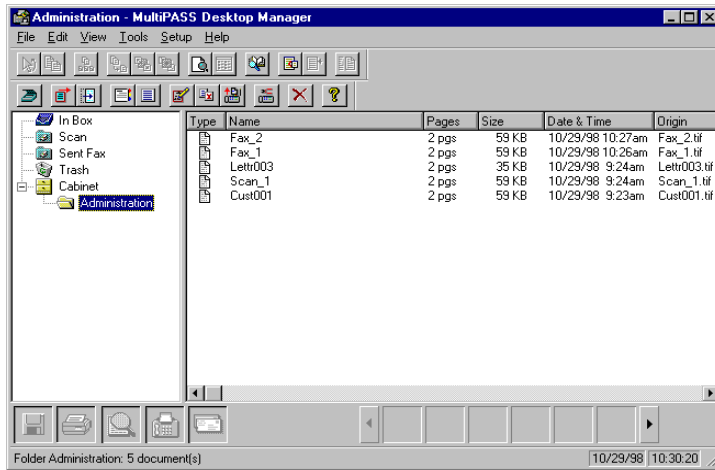

The icon designates the document type as fax, scan, or modified. A modified document is a document where the fax cover page has been removed, a scanned document that has been annotated, or a multi-page document that has been split into multiple documents.

Documents displayed in List View cannot be manipulated as in Document View, such as splitting a document or merging two or more documents.

#### **To view documents in a folder as a list:**

 




With the folder open, click List View on the View menu or toolbar.

### ***Sorting Documents in the List***

You can change the order of listed documents in both system-defined and user-defined folders using any of the column label criteria displayed at the top of the list. Sorting by page, size, or date and time displays the largest or most current document last. The list displays in the selected order until you change the sort option.

#### **To change the order of the list:**

Click the title of the appropriate column at the top of the list.

Type	Name	Pages	Size	Date & Time	Origin
	Scan_1.tif	2 pgs	59 KB	7/17/98 8:12am	Scan_1.tif
	Lettr003.tif	2 pgs	35 KB	7/17/98 8:12am	Lettr003.tif
	Fax_2.tif	2 pgs	59 KB	7/17/98 8:12am	Fax_2.tif
	Fax_1.tif	2 pgs	59 KB	7/17/98 8:11am	Fax_1.tif
	Cust001.tif	2 pgs	59 KB	7/17/98 8:11am	Cust001.tif

# Chapter 5

## PC Faxing

---

This chapter provides information and instructions for sending and receiving a fax, setting up the Address Book, and designing your own fax cover page.

❑ Faxing with Your Computer .....	5-2
• Sending a Fax from Your Computer (PC Faxing) .....	5-2
• Specifying a Fax Recipient .....	5-5
• Defining Send Fax Options .....	5-7
• Processing the Fax .....	5-9
• Creating a Fax Memo .....	5-12
• Receiving a Fax .....	5-13
• Using the Fax Log .....	5-14
• Working with Jobs in the Send Fax Manager .....	5-16
❑ Setting Up the Address Book .....	5-21
• Address Book Features .....	5-21
• Working with Address Book Entries .....	5-22
• Printing the Address Book .....	5-27
• Importing the Address Book .....	5-27
• Exporting the Address Book .....	5-29
❑ Designing a Fax Cover Page .....	5-31
• Using the Cover Page Designer .....	5-32
• Creating a New Cover Page .....	5-34
• Making Image Adjustments .....	5-48
• Adding Annotations to Your Cover Page .....	5-63
• Opening and Modifying a Fax Cover Page .....	5-65
• Reverting to the Last Saved Version .....	5-66
• Printing a Cover Page .....	5-67
• Renaming a Cover Page .....	5-67
• Deleting a Cover Page .....	5-68

# ***Faxing with Your Computer***

You can use the Desktop Manager, with your MultiPASS printer, to send and receive faxes. You can also set up an Address Book, containing fax and e-mail information for people to whom you often send faxes, and design your own fax cover page. To assist you in managing your faxes, a Fax Log maintains a record of every fax you send or receive.

You can also customize your MultiPASS printer by changing the factory default user settings. The settings include the date format that displays on your faxed documents, or how many times the MultiPASS printer calls another fax unit if the other party's line is initially busy. You can also register one-touch/coded speed dial and group numbers using the Desktop Manager and then download them to the MultiPASS printer. For details on changing setup options, refer to Chapter 8, "MultiPASS Printer Setup and Other Utilities in the Desktop Manager."

## ***Sending a Fax from Your Computer (PC Faxing)***

You can send a PC fax from any Windows application that supports document printing using the MultiPASS fax driver.

The MultiPASS Desktop Manager sends the PC fax to the Send Fax Manager, where its progress is tracked until it is actually transmitted. If you specified multiple recipients, an individual fax job for each recipient is sent to the Send Fax Manager. Once transmitted, the fax is placed in your Sent Fax folder (unless you specified that it be deleted after transmission). A record of the sent fax is also recorded to the Fax Log. If a fax fails (for example, because of an incorrect fax number), it remains in the Send Fax Manager until you attempt to resend it or delete it.

When sending the fax, you can specify that a copy be automatically moved to the Sent Fax folder for future reference, or it can be deleted as soon as the transmission is complete.



### Note

Before sending a PC fax, make sure that the date and time in your computer is correct. The system date and time displays on all PC faxes that you send. If you need to change the date and time, refer to your Windows user documentation.

The following instructions summarize the overall procedures for sending a PC fax.

### To send a PC fax:

1. With the document you want to fax open in a Windows application (such as Word), click the Print command. (In most Windows applications, the command is on the File menu or toolbar.)
2. In the Print dialog box, select Canon MultiPASS Fax as your printer in the Printer list, and then click OK.

3. In the Send Fax dialog box, enter the recipient for your fax.

- For a onetime recipient, enter the name and fax number or e-mail address in the First Name, Last Name, Fax, and E-mail Address boxes.
  - For an entry listed in your address book, click the applicable name in the To list box, and then click Add.
4. For a one time recipient, select Use Outside Dialing Prefix if you need to use a prefix (for example, 9) to access an outside line.
  5. Optionally, select and enter any of the following send fax options:
    - Enter the name of your recipients company in the Company box.
    - Enter the fax subject in the Subject box.
    - To attach a cover page to your fax, select it in the Template list. If you do not want to use a fax cover page, select None.
    - Enter your name and telephone number (the Sender) in the From and Phone boxes.
    - Enter any desired comments or notes, which display on the cover page, in the Memo box.
    - To delete the fax after it is sent, click Delete After Sending.
    - To include any annotations that were added to the fax using the MultiPASS Viewer, click Include Annotations.
  6. After completing your fax entries, process the fax as follows:
    - To send the fax or e-mail immediately, click Send Now.
    - To send the fax at a specified later time, click Send Later. This option is not available for sending e-mail.
    - To hold the fax indefinitely, preserving all fax options, click Hold. This option is not available for sending e-mail.

- To close the dialog box without sending the fax, canceling the specified fax options, click Cancel.

## ***Specifying a Fax Recipient***

To send a fax, you must insert the required recipient information in the Send Fax dialog box. The required information is your recipient's first and last name and your recipient's fax number or e-mail address.

You can insert the required information into the Send Fax dialog box by using one of three methods: you can specify a onetime fax recipient, select entries from your address book, or both. The procedures for adding a onetime recipient and selecting entries from your Address Book are described in the following sections.

### ***Specifying a Onetime Recipient***

A onetime recipient is specified by entering the name and fax number or e-mail address in the First Name, Last Name, Fax, and E-mail Address boxes.

#### **Entering a Fax Number**

In the Fax box, when you enter a fax number, use the actual numbers plus any valid characters that separate the different segments of the fax number. For example, you can use 0 through 9, dash (-), or parentheses (). For a complete list of the characters that are valid in the Desktop Manager, refer to Appendix A.

#### **Entering an E-mail Address**

If you enter an e-mail address instead of a fax number, you cannot hold the e-mail or schedule it for sending later.

## ***Including a Fax Recipient from the Address Book***

The To list box displays all recipients which have been set up in the Address Book. You can include one or more recipients by selecting the name and clicking Add. Selected names display in the Recipients list box and appear disabled in the To list box. This is to prevent the same recipient from being selected twice.

### **Removing a Fax Recipient**

You can remove a name included in the Recipients list box by clicking the name, and then clicking Remove. If the recipient was previously added to the Address Book, the name again becomes available in the To list box.

### **Adding a New Recipient to the Address Book**

If you want to add a new fax recipient to your Address Book, you can do so as follows:

1. Enter the recipient information in the First Name, Last Name, Company, Prefix, Fax, and E-mail Address boxes.
2. Click New Individual Entry.
3. Complete the fields in the New Recipient dialog box as necessary and click Add.



#### **Note**

---

You can also click the New Individual Entry button without first entering the recipient information in the Send Fax dialog box. In this case, a blank New Recipient dialog box displays. Complete the appropriate information and click Add.

---

For detailed instructions on using the New Recipient dialog box to add a new individual to the Address Book, refer to the “Working with Address Book Entries” section in this chapter.

## ***Specifying a Dialing Prefix***

In some office environments, you may need to enter a prefix for the fax number, which is the number required to connect you to an outside phone line (usually 9).



For a onetime recipient, you must select Use Outside Dialing Prefix check box in the Send Fax dialog box if you need to use a prefix (such as 9) to access an outside line.

For a recipient from the Address Book, if you selected the Use Outside Dialing Prefix in the New Entry or New Recipient dialog box used to create their entry, you do not need to select Use Outside Dialing Prefix.

## Defining Send Fax Options

The following sections provide additional information on defining options in the Send Fax dialog box.

The screenshot shows the 'MultiPASS Send Fax' dialog box. It has a title bar with the text 'MultiPASS Send Fax' and a close button. The dialog is divided into several sections. The 'To:' section has an 'Address Book:' list on the left containing 'Angela Arundi', 'Anna Maya', and 'Dwight Muller'. To the right of this list are 'Add >>' and '<< Remove' buttons. Further right is a 'Recipients:' list. Below the 'Address Book:' list are fields for 'First Name:' (containing 'Angela') and 'Last Name:' (containing 'Arundi'), with a 'New Individual Entry...' button to the right. Below these are fields for 'Company:', 'Fax:' (containing '(714) 555-2345'), and 'Email Address:'. A checkbox labeled 'Use Outside Dialing Prefix' is checked. The 'Subject:' field contains 'Welcome to the Company!'. The 'Fax Cover Page' section has a 'Template:' dropdown set to 'Generic Fax' and a 'Preview...' button. Below this are fields for 'From:' (containing 'John Smith') and 'Phone:' (containing '714-555-2211'). A 'Memo:' field contains the text 'We wanted to welcome you to the company'. At the bottom, there are two checkboxes: 'Delete after Sending' (unchecked) and 'Include Annotations' (unchecked). The bottom of the dialog features five buttons: 'Send Now', 'Send Later...', 'Hold', 'Cancel', and 'Help'.

## ***Attaching a Cover Page***

As desired, you can attach a cover page to your fax. The Desktop Manager contains a library of predefined fax cover pages, each providing a different style for both business and personal use. In addition, you can design your own cover page using the MultiPASS Cover Page Designer and add it to the library. Available cover pages are listed alphabetically in the Template list.

For instructions on designing your own cover page, refer to the “Designing a Fax Cover Page” section in this chapter.

## ***Previewing the Cover Page***

To view a selected cover page before sending the fax, click Preview. The cover page displays the specified recipients and other fax information, including memo text. This display is read only, and cannot be edited.

To print the cover sheet, click Print on the File menu or toolbar. In the Print dialog box, select your printing options and click OK.

To close the Preview window, click Exit on the File menu. For instructions on editing a cover page, refer to the “Designing a Fax Cover Page” section in this chapter.

## ***Entering Fax Sender Information***

To identify yourself as the sender of the PC fax, enter your name and telephone number in the From and Phone boxes. Once you send your first PC fax, this information is automatically displayed the next time you send a PC fax. You can then change the fax sender information as desired.

## ***Entering a Memo***

You can include a memo on the fax cover page if the cover page has been designed to accept memo text. The font, style, and size of the memo text is determined by the particular design of the selected cover page. You can change these attributes using the MultiPASS Cover Page Designer. For instructions on editing a cover page, refer to the “Designing a Fax Cover Page” section in this chapter.

## ***Deleting the Fax After Sending***

If the Delete After Sending option is selected, the fax is automatically deleted after it has been successfully transmitted. This option makes it easy to keep your computer free of unneeded documents, thereby maximizing your available disk space.

If this option is not selected, the fax is automatically moved from the Send Fax Manager to the Sent Fax folder after transmission.

## ***Including Annotations***

Using the editing capabilities of the MultiPASS Viewer (described in Chapter 7, “Working with Documents in the Desktop Manager”), you may have modified your document — for example, by adding text annotations, graphic or text stamps, or highlighting. In this case, you can select to include these modifications by clicking the Include Annotation option.

If this option is not selected, the original version of the document is faxed, without any added annotations.

## ***Processing the Fax***

 
You can send your fax — either now or later — only when at least one recipient and fax number has been specified. As necessary, you can also place a fax on hold and return to it later. The following sections provide additional information on these processing options.

## ***Sending the Fax Now***

When you click Send Now, the fax document is sent to the Send Fax Manager until it is transmitted. Once transmission is complete, the fax is either moved to the Sent Fax folder or deleted, based on whether you enabled or disabled the Delete After Sending option.

If you entered both an e-mail address and a fax number, when you click Send Now, the Select Send Preference dialog box appears.

In the Select Send Preference dialog box, specify your desired sending mode, and then click OK.

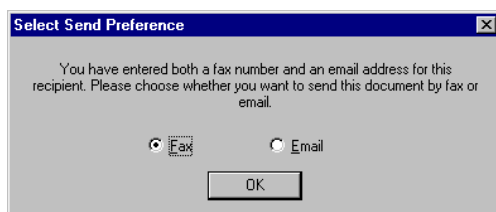

## ***Sending the Fax Later***

If you prefer to send the fax later, you can specify the date and time to send it by clicking Send Later. In the Send Later dialog box, select the desired transmission date and time from their respective lists, and click OK.



**Note**

---

The Send Later option only applies to faxes; it does not apply to e-mail messages. If you specified both a fax number and an e-mail address in the Send Fax dialog box, when you click Send Later, the fax is rescheduled, but the e-mail is sent.

---



The fax is sent to the Send Fax Manager for processing at the specified date and time.



**Note**

---

The Year list displays only whatever happens to be the current year and the next year (for example: 1998 and 1999, or 1999 and 2000).

---

## ***Holding the Fax***

You can place a fax document on hold at any time prior to sending it. The held fax is sent to the Send Fax Manager with no specified transmission time. Any fax information you entered — such as recipients or cover page information — is preserved. You can decide later whether to send the fax — revising the send information as needed — or to delete it.

If you specified both a fax number and an e-mail address in the Send Fax dialog box, in the Select Send Preference dialog box that appears, click Email or Fax. Then click OK.



**Note**

---

The Hold option only applies to faxes; it does not apply to e-mail. If you specified both a fax number and an e-mail address in the Send Fax dialog box, when you click Hold, the fax is held, but the e-mail is sent.

---

## **Canceling the Fax**

If you cancel the fax while working in the Send Fax dialog box, you are returned to the application where you originally initiated the Send Fax (or Print using the MultiPASS Fax driver) command.

## ***Creating a Fax Memo***

A fax memo is generally a brief, one-page fax sent directly from the Desktop Manager, without using another Windows application to create it. Operating directly from the Desktop Manager, you specify the same fax options as described in the previous sections of this chapter.

### **To create a fax memo:**

1. In the Desktop Manager, click Fax Memo on the File menu or toolbar.
2. In the Send Fax dialog box, specify your fax options, as described in the previous section:
  - Select a cover page from the Template list, then enter the message of your fax in the Memo box.
  - Revise the Sender name and phone number as necessary.
  - Click Delete After Sending to delete the fax after it is successfully transmitted.
3. After completing the entries in the Send Fax dialog box, process the fax:
  - To send the fax immediately, click Send Now.
  - To send the fax at a later time and date, click Send Later.
  - To hold the fax indefinitely, click Hold.
  - To close the dialog box without sending the fax or an e-mail, click Cancel.

Because the fax memo is not originating from a document created in another Windows application, be sure to enter the memo message in the Memo box. Also, since your fax memo does not originate from a document that may have been annotated in the MultiPASS Viewer, the Include Annotation option will not be available for selection.

## ***Receiving a Fax***

All incoming faxes are received by your MultiPASS printer and can be uploaded to the Desktop Manager for viewing, printing, or replying. Uploaded faxes are stored in your In Box folder. A flashing arrow in the taskbar indicates that you have received a new incoming fax. Once you open the folder to review the newly received fax, the flashing arrow no longer displays until another fax is received.

A received fax displays in the In Box folder with a system-assigned name. The fax remains in the In Box folder until you move or delete it.

You can receive faxes regardless of whether your computer is turned on or off.

### ***If Your Computer Is Turned On***

If your computer is turned on when the MultiPASS printer receives a fax, the Desktop Manager handles the fax using one of the following methods, based on how you defined your setup options:

- ☐ **Print the fax directly from the MultiPASS printer**  
You can set the MultiPASS printer to automatically print incoming faxes and not upload them to the Desktop Manager.
- ☐ **Upload the fax to the Desktop Manager**  
You can set the MultiPASS printer so that received faxes to be automatically moved to the Desktop Manager. By uploading a fax, you store a copy of it in your In Box allowing you to review, annotate, print, or resend the fax to another recipient.

### ***If Your Computer Is Off***

If your computer is turned off when the MultiPASS printer receives a fax, the MultiPASS printer handles the fax using one of the following methods, based on how you defined your setup options:

❑ **Print the fax directly from the MultiPASS printer**

If your computer is going to be off for a while, or you are expecting many incoming faxes, it is recommended that you set the MultiPASS printer to automatically print incoming faxes. This recommended setting enables you to leave the computer off for a period of time and still be assured of receiving your faxes. You can always later scan a printed fax into the Desktop Manager.

❑ **Save the fax in MultiPASS printer memory**

If you set the MultiPASS printer to save a fax in memory, it can later be printed directly to the MultiPASS printer, or sent to the Desktop Manager when your computer is turned on. Once a fax is printed, it is erased from memory.

When a fax is saved in MultiPASS printer memory, a notification message appears on the MultiPASS printer LCD display.

**To move received faxes to the Desktop Manager:**

1. Turn on your computer and start Windows.
2. Open the Desktop Manager.

Faxes are automatically moved to the In Box folder in the Desktop Manager.

## ***Using the Fax Log***

 
The Fax Log contains a list of fax activity (faxes sent and received). Each fax lists historical information, such as transmission status, date and time the fax was sent or received, the recipient of the fax, and the number of pages. You can use the Fax Log for a variety of purposes, such as reviewing the error status of a failed PC fax.

When reviewing the Fax Log, you can also print it.

**To display the Fax Log:**

1. In the Desktop Manager, click Fax Log on the Tools menu or toolbar.




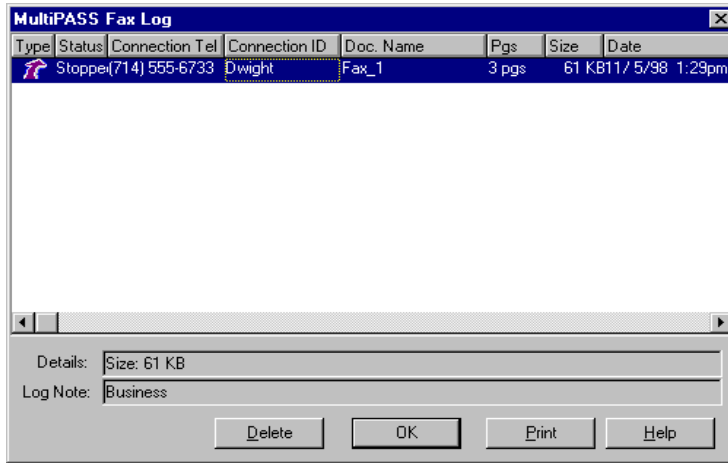

2. To display details and log notes about a particular fax document, click the fax.

#### To print the Fax Log:

 1. In the Fax Log dialog box, click Print.

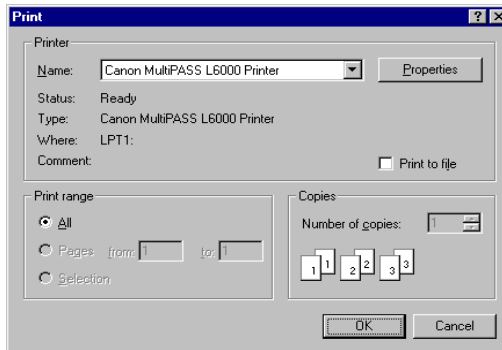

2. In the Print dialog box, specify the desired print options and click OK.

This report provides you with a hard copy of the Fax Log information.

**To delete an entry in the Fax Log:**

1. Click the entry you want to delete.
2. Click Delete.

**To close the Fax Log:**

Click OK.

## ***Working with Jobs in the Send Fax Manager***

 
For each PC fax you send, a job is created in the Send Fax Manager. The Send Fax Manager displays the current status of each job.

While working in the Send Fax Manager , you can:

- ☐ Stop an active job from PC faxing
- ☐ Send a PC fax that has been scheduled for sending later, held, or has failed
- ☐ View a PC fax that has been scheduled for sending later, held, or has failed
- ☐ Delete a job that is not active.

**To display the Send Fax Manager:**

1. In the Desktop Manager, click Send Fax Manager on the Tools menu or toolbar.
2. On the Windows desktop, click Start, and then point to Programs.
3. Point to MultiPASS Desktop Printer, and then click Send Fax Manager.

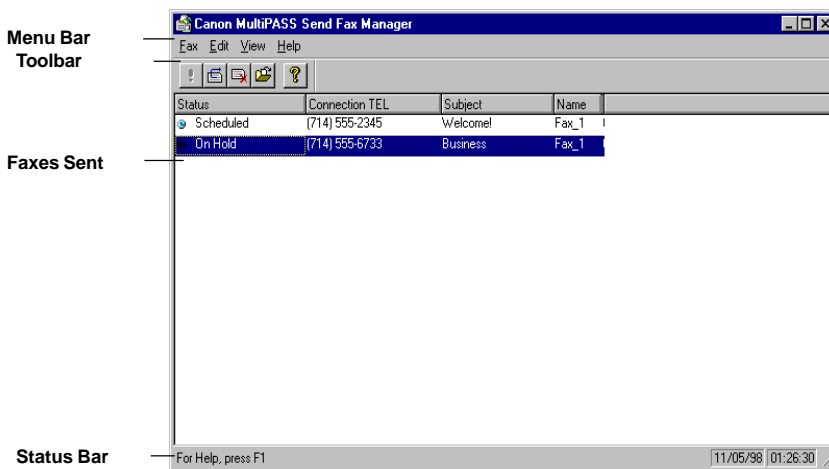

## Features of the Send Fax Manager Window

 
The Send Fax Manager window contains the following features:

### ❑ Menu Bar

The menu bar contains the commands that enable you to perform the various Send Fax Manager tasks. Many of the commands can also be accessed using their corresponding button on the toolbar.

### ❑ Toolbar

The toolbar provides quick access for performing certain Send Fax Manager tasks. In circumstances where a task is not possible, the toolbar button is unavailable, appearing dimmed.

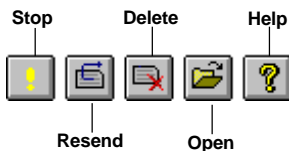

☐ **Faxes Sent Area**

The Send Fax Manager shows you the status of your faxes, the fax recipient, its subject, number of pages, and size. The job currently being processed — the active job — displays at the top of the list. A job remains in the Send Fax Manager until it has been successfully transmitted, or until you delete it.

☐ **Status Bar**

You can display additional fax information in the status bar by selecting a job. When no job is selected, the status bar displays information about all jobs.

## ***Job Status***

One of the following statuses is assigned to each job in the Send Fax Manager.

☐ **Active**

The active job is the job currently being PC faxed. When an active fax job completes successfully, it is automatically moved to the Sent Fax folder or deleted (based on whether you specified to delete after sending in the Send Fax dialog box).

☐ **Queued**

A queued job is a job waiting to be PC faxed. Queued jobs are processed in chronological order.

☐ **Scheduled**

A scheduled job is a PC fax you specified to send at a later time.

☐ **Retry**

A PC fax job receives the status Retry if:

- The MultiPASS printer is busy with another task, and unable to transmit the PC fax
- The receiving fax line is busy.

The Desktop Manager continues to try sending the fax until the transmission is successful or the Desktop Manager exceeds the defined number of retries. If a job cannot complete successfully within the specified number of retries, the job is marked with a Failed status.

❑ **On Hold**

A held job is a PC fax you chose to place on hold, rather than send it immediately.

❑ **Failed**

A job receives a Failed status because a PC fax could not be sent successfully. This occurs because the Desktop Manager exceeded the defined number of retries. For example, a PC fax may have failed because of a continuously busy fax line or an incorrect fax number.

❑ **Stopped**

A stopped job is an active job that you stopped from processing before it was completed.

### ***Stopping an Active Job***

If necessary, you can stop the active job from processing. When you do so, the Desktop Manager retains the job in the Send Fax Manager as a stopped job. You can later reprocess or delete the job.

**To stop an active job:**

Open the Send Fax Manager and click Stop on the Edit menu or toolbar.

### ***Sending a Scheduled, Held, Failed, or Stopped PC Fax***

A PC fax job remains in the Send Fax Manager if it is scheduled for sending later, if it is on hold, if it failed to transmit in the specified number of retries, or it was stopped. You can reprocess the job for sending now or reschedule it for a different time.

When you send a PC fax from the Send Fax Manager, the Send Fax dialog box displays the information you initially entered for the PC fax. You can change the information as needed. For example, for a PC fax that failed because of a wrong fax number, you can correct the fax number and resend it. Or, for a scheduled PC fax, you can specify a different time for transmission.

Additionally, if a cover page had been attached to the fax, you can edit any memo text or the cover page styles.

**To send a fax:**

1. In the Send Fax Manager, select the job you want to send. Then click Resend Fax on the Fax menu or toolbar.
2. In the Send Fax dialog box, change any fax options as needed.
3. Process the fax as follows:
  - To process the fax for immediate sending, click Send Now.
  - To schedule the fax for a later time, click Send Later.

## ***Viewing a Job***

Documents in the Send Fax Manager can be viewed, but not edited or saved.

**To view a document:**

- ☐ Click the job you want to view. Then click Open Document on the Fax menu or toolbar.
- ☐ Double-click the job.

## ***Deleting a Job***

You can delete any job other than the Active job by doing one of the following:

- ☐ Select the job you want to delete. Then press the Delete key.

 
- ❑ Select the job you want to delete. Then click Delete on the Edit menu or toolbar.

## Setting Up the Address Book

Setting up an Address Book creates an easily accessible list of names, fax and phone numbers, and e-mail addresses for all of your business and personal contacts. Using the entries from the Address Book makes sending a PC fax quick and easy.

### To open the Address Book:

On the Tools menu or toolbar, click Address Book.

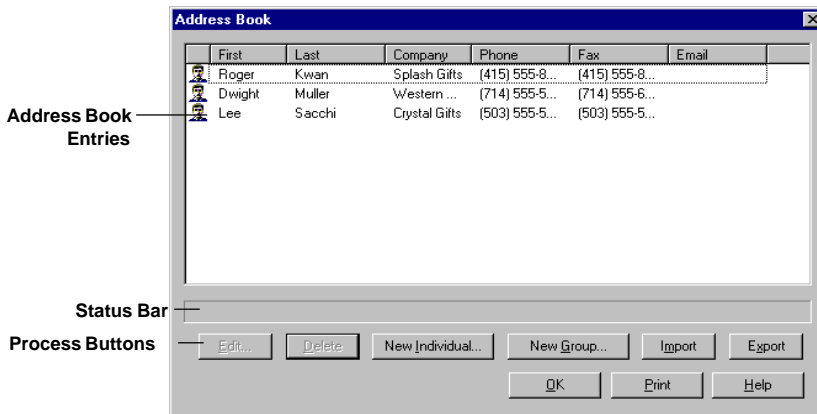

### To close the Address Book:

In the Address Book dialog box, click OK.

## Address Book Features

This section provides an overview for working in the Address Book window.

❑ **Address Book Entries**

Address Book entries are listed alphabetically by last name, displaying both group and individual names, company name, phone, fax, and e-mail information.

❑ **Status Bar**

The status bar displays additional information for a selected Address Book entry, based on whether the selected entry is an individual entry (title, street address, and comments) or group entry (comments about the group).

❑ **Process Buttons**

Use the Process buttons to perform various tasks while working with the Address Book, such as editing an entry, creating a new entry, or importing and exporting information.

## ***Working with Address Book Entries***

The Address Book contains the following types of entries:

❑ **Individual**

An individual entry allows you to identify each individual to whom you frequently send PC faxes. Once entered, you can then quickly specify the recipient of a PC fax by selecting them from the Address Book.

❑ **Group**

A group entry identifies two or more individual Address Book entries to whom you repeatedly send the same PC fax. For example, you may want to set up a group to include those individuals involved in a particular business project. When you specify the group entry as the fax recipient on your PC fax, the PC fax is sent to each individual in the group.

## ***Sorting the Address Book***

The Address Book is, by default, sorted alphabetically by last name. You can change the sort by clicking any column title. To return the sort to its previous state, click the column title again.



## Adding and Editing an Individual Address

When setting up an individual Address Book entry, at a minimum, you must specify the contact's first or last name, and a fax number.

Optionally, if you want information available to include on a fax cover page, you can enter the contact's phone number, title, company name, and address. You can also enter a comment to provide an internal reference about the recipient, and an e-mail address.

### To add or edit an individual entry:

1. With the Address Book open, click the desired command to add or edit an individual entry:
  - To add a new individual, click New Individual.
  - To edit an individual record, select the entry in the list, and then click Edit.

**Edit Individual Entry**

First: Lee Last: Sacchi

Name: Lee Sacchi

Phone: (503) 555-5600

Fax: (503) 555-5660

Email:

Preference: ☒ Fax ☐ Email

Title: Owner

Company: Crystal Gifts

Address:

Comments:

☒ Use Outside Dialing Prefix

Buttons: Replace, Cancel, Help

2. In the Individual Entry dialog box, enter or change the following information:
  - First name, last name
  - Phone number, fax number, and e-mail address
  - Whether your primary preference is to use this listing for faxing or e-mail
  - Title, company name, and address  
(if you want the information available for a fax cover page)
  - Comments  
(as an internal reference).
  - Use Outside Dialing Prefix  
(Depending on the location of your fax recipient, you may need to use the dialing prefix defined during installation or setup to access an outside line.).
3. Save your entry:
  - If adding a new entry, click Add.
  - If editing an existing entry, click Replace.
  - To cancel without saving any entry or changes which may have been made, click Cancel.

### **Entering Fax Numbers and Phone Numbers**

When you enter a fax or phone number, you use the actual numeric characters plus any valid characters that separate the different segments of the number. For example, you can use 0 through 9, dash (-), and parentheses (). For a complete list of the characters that are valid in the Desktop Manager, refer to Appendix A.

Do not include a prefix number if your phone system requires one to access an outside phone line. If required, a prefix should be defined in the Desktop Manager Fax Setup dialog box.

### Entering E-mail Addresses

 
When you enter an e-mail, you use the actual characters of the e-mail address (for example, WBurke@dtpn.com).

### Adding and Editing a Group Address

A group address consists of previously set up addresses, either individual addresses or other group addresses. When adding a new group, you assign a name to the group, and then select previously defined addresses from the Address Book to include in the new group. When editing an existing group address, you can add other addresses or delete addresses from the group.

#### To add or edit a group entry:

1. With the Address Book open, click the command to add or edit a group entry:
  - To add a new group, click New Group.
  - To edit a group, select the entry in the Address Book, and then click Edit.

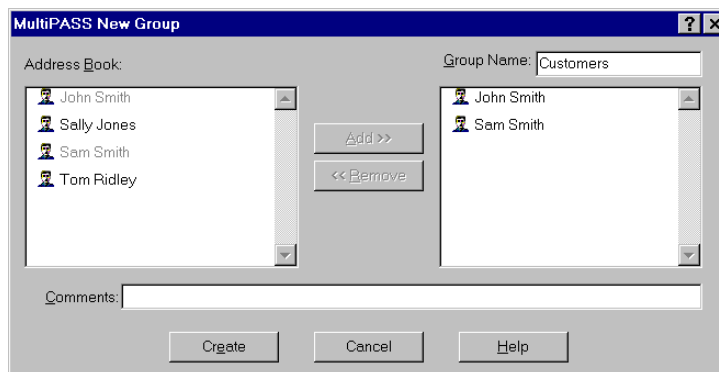

2. In the New Group or Edit Group dialog box, in the Group Name box, enter or change the name you want to assign to this group.
3. In the Address Book list, click the individual entry you want to add to the group, and then click Add.
4. Repeat step 3 for each individual or group you want to add to this group.
5. To remove an entry from the group, click the name in the group list, and then click Remove.
6. Enter any desired internal reference comments for the group in the Comments box.
7. Save your entry:
  - If adding a new group, click Create.
  - If editing an existing group, click Replace.
  - To cancel without saving any entry or changes which have been made, click Cancel.

### ***Using a Group Address***

When you specify a group address when sending a fax, the address for each individual contained in the group is listed. If you specify more than one group address for a fax, and a group contains the same individual address, the duplicate address is automatically removed. Separate fax jobs are created for each recipient in the group, meaning you can create a single fax and have it sent to multiple recipients.

### ***Deleting an Address Book entry***

When an entry in your Address Book is no longer needed, you can delete it in order to keep your entries up to date.

To delete an entry, click the name in the Address Book. Then click Delete, or press the Delete key. If prompted, confirm that you want to delete the entry.

## ***Printing the Address Book***

If you want a hard copy of the Address Book, you can print it.

1. With the Address Book open, click Print.
2. In the Print dialog box, specify your print options and click OK.

This report provides you with a hard copy of your Address Book information.

## ***Importing the Address Book***

You may have an existing address book, created by another application, containing the entries you want to use for the Address Book in the Desktop Manager. In this event, you can import your address book to the Desktop Manager.

Any ASCII text file containing information that is separated by a comma or tab can be imported into the Desktop Manager Address Book.

- ☐ If the address information in the text file is separated by a comma, the text file extension must be .CSV.
- ☐ If the address information in the text file is separated by a tab, the text file extension must be .TXT.

You must save your text file as a comma or tab separated text file *before* you import it into the Desktop Manager. If you attempt to import information from an improperly formatted text file, an error message displays alerting you to a problem and the import process stops.

 
For procedures on saving a text file in the correct format, refer to the user documentation for your text file application.

When importing, you may need to add applicable fields or remove fields that do not appear in the address book that you are importing. You can do this in the Edit Import/Export File Fields dialog box. When you add fields, you select from the fields available in the MultiPASS Address Book. Not all of those fields may appear in the address book file you are importing, however. In this case, you may need to remove fields so that your imported file will be read correctly by the MultiPASS Address Book.


In addition, if the file fields in the address book that you want to import are in a different order, you can change the order that the MultiPASS Address Book reads the fields. This prevents you from having to manually edit your address book file to get the file fields in the right order. For example, if the address book file lists the entries last name first, in the Edit Import/Export File Fields dialog box, you can move the Last Name field up in the list so that it is first in the list of file fields. As a result, your entries will be read correctly by the Address Book with the last name, appearing in the last name field, instead of in the first name field.

**To import addresses from a text file:**

1. With the Address Book open, click Import.

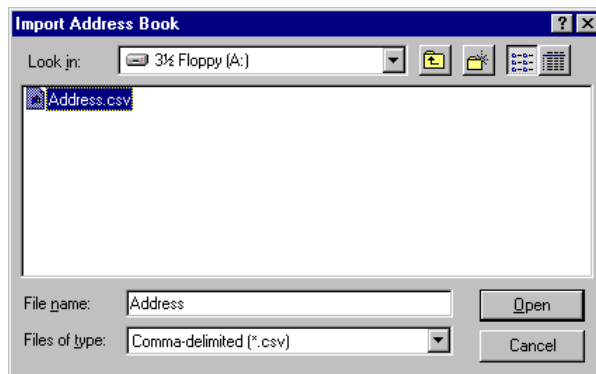

 2. In the Import Address Book dialog box, select whether you are importing a .CSV file or a .TXT file in the Files of Type list.
3. Select the file you want to import, and then click Open.

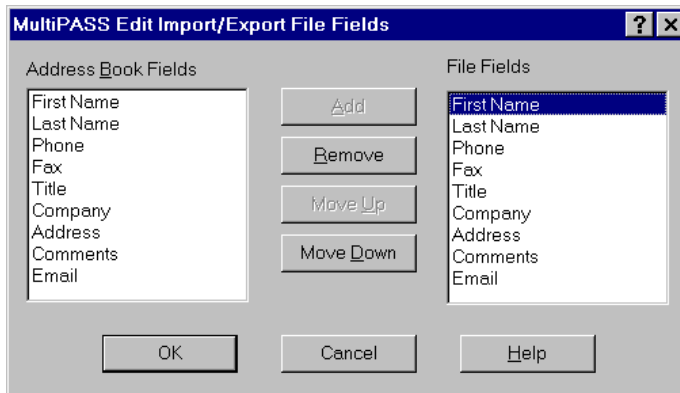

4. In the Import/Export File Fields dialog box, select the address fields you want to import from the Address Book Fields list:
  - In the Address Book Fields box, select the field, and then click Add.
  - To remove a field, in the File Fields list box, click the field, and then click Remove.
  - To rearrange the order of the fields, select the field you want to move in the File Fields box, and then click Move Up or Move Down.
5. Once you have the fields in the desired order, click OK.

## ***Exporting the Address Book***

Address Book information can only be exported for individual entries. Group addresses cannot be exported.

 
You can export the Address Book from the Desktop Manager as an ASCII text file. Exported address information can be separated by either commas or tabs.

- If you want to have address information separated by commas, select to export to the .CSV file format.
- If you want to have the address information in the text file separated by tabs, select to export to the .TXT file format.

When you export a file from the Address Book, you can use the Import/Export File Fields dialog box to specify the order that you want the file fields to appear in your saved file. For example, if you wanted your entries to be listed first by their company name, last name, and then first name; you would arrange the fields in the File Fields box in that order.

**To export the Address Book:**

1. With the Address Book open, click Export.
2. A message displays informing you that Group addresses cannot be exported. Click Yes to close the message.

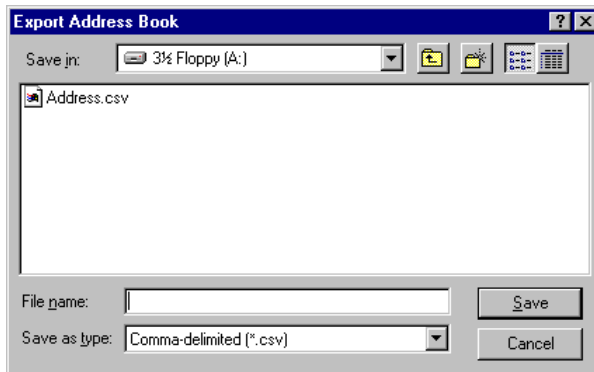

3. In the Export Address Book dialog box, select how you want to export the address book, as a .CSV file or as a .TXT file, in the Save as Type list.
4. Specify the location where you want to export the file, specify a filename, and then click Save.



5. Select the address fields you want to export from the Address Book Fields list box:
  - Select the field in the Address Book Fields box, and then click Add.
  - To remove a field, in the File Fields box, click the field, and then click Remove.
  - To rearrange the order of the fields, select the field you want to move in the File Fields box, and then click Move Up or Move Down.
6. Once you have the fields in the desired order, click OK.

## ***Designing a Fax Cover Page***

In addition to the set of predefined fax cover pages that are automatically installed into your system, you can also design your own fax cover page using the MultiPASS Cover Page Designer. Additionally, any existing cover page — either installed with the Desktop Manager software or created by you — can be edited and annotated with the Cover Page Designer.

When you create a new cover page, you define the page layout, background, graphics, and fax information fields. Fax information fields — or variable fields — provide areas where recipient and sender information for a specific fax can be placed. You can specify the size of the field, the font, font size, and style of the text displayed for each variable.

You can use a new fax cover page by attaching it when sending a fax with the MultiPASS Desktop Manager fax driver, or by printing a hard copy and using it when sending a fax directly from the MultiPASS printer.

### **To open the Cover Page Designer:**

1. In the Desktop Manager, point to Cover Pages on the Tools menu.

 
2. Click Cover Page Designer. Or click Cover Page Designer on the toolbar.

**To close the Cover Page Designer:**

In the Cover Page Designer window, click Exit on the File menu.

## ***Using the Cover Page Designer***

This section provides an overview on the basics for using the Cover Page Designer. Detailed instructions for using each of its various commands and components are covered in later sections of this chapter.

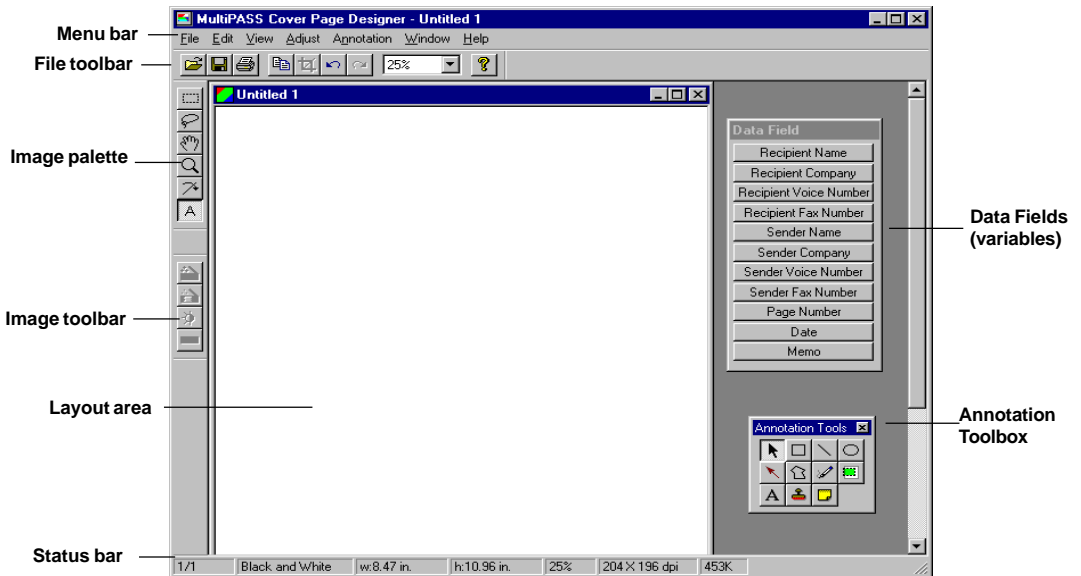


☐ **Menu Bar**

The menu bar contains commands that allow you to create, edit, and print your fax cover page. Many commands can also be accessed by corresponding buttons on the toolbars.

Some of the menu commands are also available on shortcut menus, which are displayed by clicking the right mouse button in the Cover Page Designer window.


#### ❑ **File Toolbar**

 The File toolbar provides you quick access to commands needed to open, save, copy, print, and zoom a fax cover page.

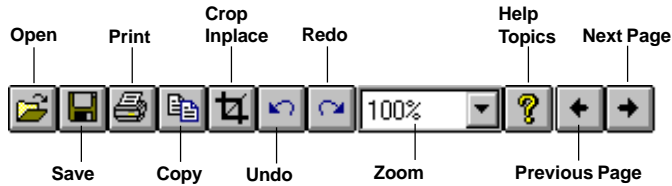


#### ❑ **Image Palette**

 The Image palette provides you quick access to commands needed to select, move, zoom, or annotate a fax cover page.

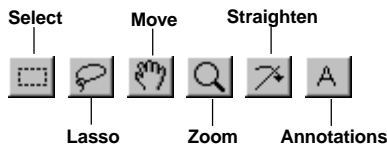


#### ❑ **Image Toolbar**

 The Image toolbar provides quick access to commands needed to make various adjustments to an image.

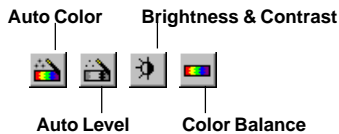

#### ❑ **Annotation Toolbox**

 The Annotation toolbox allows you to add text and graphics to your cover page. Annotations are integral elements of the cover page. Unless you select to “hide them,” they are sent with the cover page, and can be printed, edited, and saved.

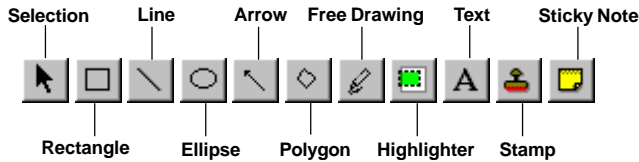

#### ❑ **Data Fields (Variables Bin)**

The Data Fields list contains the fields of information you may want to include on the fax cover page. When you use the cover page with the Desktop Manager, these fields are automatically filled in with the appropriate information for a specific fax transmission.

#### ❑ **Layout Area**

The layout area allows you to visually create and edit the features of your cover page. The size of the layout area corresponds to the size of a standard fax page. You can use the horizontal and vertical scroll bars to view different portions of the cover page, as necessary.

## ***Creating a New Cover Page***

The following instructions summarize the overall procedures for creating a new fax cover page.

#### **To create a new fax cover page:**

1. With the MultiPASS Cover Page Designer open, click New on the File menu.
2. Add text labels (such as *To:* and *From:*) and other desired text.
3. Insert the data fields you want to include using the options available in the Data Fields list.
4. Add any desired graphics (such as a company logo or signature).

5. Click Save on the File menu or toolbar.

## ***Importing a Cover Page Layout***

You can create the layout for a cover page in another application (such as Word for Windows, Paint, or Photoshop) and then import it as a TIFF file into the Cover Page Designer. Once imported, you can add the data fields and edit any layout features as if you originally created the cover page layout in the Cover Page Designer.

### **To import a cover page layout created in another application:**

1. Create your cover page in the desired application and save it as a TIFF file.
2. With the Cover Page Designer open, click Import on the File menu.



3. In the Select Image for New Cover Page dialog box, locate the cover page layout you want to import and click Open.

You can now edit and save the cover page as desired.

## ***Adding Labels and Text***

You may want to add labels for the data fields you will be using (such as *To:* or *From:*) or other text to your cover page using the Text tool on the Annotation toolbox. Once added, you can select text attributes: font, font size and color, special effects (underline, strikeout), background color and mode.

When selecting a font, font size, a color, or special effect, keep in mind that it affects the *entire* text contained in the box. If you change any of the attributes while editing text, or while the text box is selected, it changes all the text in the box.

### **To add text to the cover page:**

1. Click the Annotations button on the Image toolbar.
2. On the Annotations toolbox, click the Text tool and drag the cursor to draw an appropriately sized text box in the layout area.
3. Type the new text.

### **To edit text:**

1. On the Annotation toolbox, with the Selection tool selected, double-click the text you added. The cursor changes to an insertion point.
2. Edit the text as needed.

## ***Adding Variable Data Fields***

You can insert variable fields that are filled in with actual data when you attach the cover page to a particular fax. You can select any or all of the available fields, placing them at a desired location in the layout area. Fields are placed on top of any cover page background or images. Each field displays sample text to illustrate the current font, font size, and text attributes. Actual data is added to the field when the fax is actually sent.

Only the variable fields shown in the Data Field list are available for you to use in the cover page. You also cannot use a single field more than once on a cover page.

**To insert a field:**

1. Click the desired data field on the Data Field list.
2. Drag the cursor to draw an appropriately sized square or rectangle in the layout area.

## ***Adding Stamps***

You can insert either a text or graphic image stamp on your cover page. The Desktop Manager contains a library of available stamp image, stored as BMP files, that were installed with the Desktop Manager software. Additionally, you can add special graphics (such as a company logo or personal signature) into the stamp library, provided the graphic is saved in a BMP format.

**To select a stamp:**

1. Select Select Stamp on the Annotation menu.



2. In the Select Stamp dialog box, click Add.
3. In the Open dialog box, locate the BMP file you want to add to the Stamp library and click Open.
4. If you have multiple graphics you want to add, repeat step 3.

**To insert a stamp on the cover page:**

 
1. In the Select Stamp dialog box, click the graphic you want to insert into the cover page and click OK.
2. In the Cover Page Designer, click the Stamp tool on the Annotation toolbox.
3. Click the mouse at the location where you want to place the graphic in the layout area.
4. Adjust the size and characteristics of the graphic as desired (as described in the “Modifying a Cover Page” section in this chapter).

**Creating a Text Stamp**

You can also create and use a text stamp on your cover page.

**To create a text stamp:**

1. Click Select Stamp on the Annotation menu.
2. In the Select Stamp dialog box, click the Text Stamp tab.
3. Click Add on the Text Stamp tab.

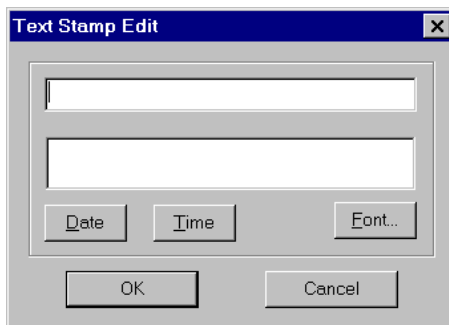

4. In the Text Stamp Edit box, type the text you want to assign to the Stamp in the upper box.
  - To add a date to the stamp, click Date. A code representing the date appears in the upper box and the date is viewable in the lower preview box.



- To add the current time to the stamp, click Time. A code representing the time appears in the upper box and the time is viewable in the lower preview box.
- To change the font and text characteristics of the text, click Font.

In the Font dialog box, specify your desired font type, style, size, and effects. Then click OK.

5. Click OK in the Edit Text Stamp dialog box to close the dialog box.
6. Click OK again in the Select Stamp dialog box to close the dialog box and save the text stamp.

**To insert a text stamp:**

1. Click Select Stamp on the Annotation menu.
2. In the Select Stamp dialog box, click the Text Stamp tab.
3. On the Text Stamp tab, click the text stamp you wish to insert into the cover page and click OK.
4. In the Cover Page Designer window, on the Annotations menu, point to Tools and then click Stamp. Or click Stamp in the Annotation toolbox.
5. Click the mouse at the location where you want to place the text stamp in the layout area.

**To edit a text stamp:**

1. Click Select Stamp on the Annotation menu.
2. In the Select Stamp dialog box, click the Text Stamp tab.
3. On the Text Stamp tab, click the stamp you want to edit, and then click Edit.
4. In the Text Stamp Edit dialog box, modify the text and click OK

5. In the Select Stamp dialog box, click OK to save your changes and close the dialog box.

**To remove an image or text stamp:**

1. Click Select Stamp on the Annotation menu.
2. In the Select Stamp dialog box, click the stamp you want to remove, and then click Delete.
3. When the confirmation message displays, click Yes.
4. In the Select Stamp dialog box, click OK to close to save your changes and close the dialog box.

## ***Creating a Drawing Graphic***

You can also annotate your cover page with one or more drawing objects that include a straight line, a single-headed arrow, a hollow rectangle, and a hollow circle or ellipse. When you draw the object, you can select the color, line thickness, and style of line for the object.

**To create a drawing object:**

1. On the Annotation toolbox, click the drawing object tool.
2. On the Annotation menu, select the color, line thickness, and style of line for the object you are drawing. For an arrow or line, also select the particular style you want to use.
3. At the desired location in the layout area, drag the cursor to draw the object. When you release the mouse button, the object is completed.

## ***Setting Preferences***

You may want to set the following preferences in the Cover Page Designer to better suit your working needs:

**To set your preferences:**

1. Click Preferences on the File menu.
2. In the Preferences dialog box, set the following options:

- Set the unit of measurement to Pixels, Inches, or Centimeters from the list.
- Click the Automatically Fit Window to Image option to automatically resize the window to your image when you make any change.
- Click High Quality When Zooming to maintain a high display quality when your document or cover page is magnified. This option takes effect the next time you start the Cover Page Designer.

3. Click OK to save your changes and close the Preferences dialog box.

**To display rulers:**

Click Show Rulers on the View menu.

## ***Adjusting Text and Variable Fields***

Once you have placed the desired text labels and variable fields into the layout area, you can adjust the appearance of any text or data field. You can resize, move, or delete text or data fields.

Additionally, you can set the text attributes for text or data fields and align two or more fields on the right, left, top, or bottom.

**To select text or data fields in the layout area:**

- ☐ To select a single text box or data field, click the Select tool on the Annotations toolbox, and then click the text box or data field.
- ☐ To select more than one text box or data field, hold down the Shift key and click the desired text and/or data fields.

**To move text or data fields:**

Drag the selected text box or data field to the new location.

**To delete a text box or data field:**

Select the text box or data field and press the Delete key.

### **Resizing a Field**

With the exception of the Memo field, most of the variable fields consist of a single line of text. If the variable information to be placed in the field is longer than the field size, the text does not automatically wrap onto the next line. Instead, the text is truncated to fit the length of the field. For this reason, you may want to resize fields to ensure that the full line of text is visible on the cover page when the fax is sent.

Since the Memo field typically contains multiple text lines, the field does provide for automatic text wrapping. However, make sure the size of the Memo field is large enough to accommodate the length of memo text that may be entered in the Send Fax dialog box. If the Memo field is not large enough, all the lines of a memo text may not be visible when the fax cover page is sent.

#### **To resize the field:**

 
Click the field and drag any sizing handle.

### ***Changing Text Attributes***

Once you have placed text labels and fields in the layout area, you can change the font and font size of the text, select a text style (bold, italic, underline), or change the font color. If you have multiple fields to which you want to assign the same attributes, you can select the fields together and make the change to all the selected fields at once.

#### **To change text attributes:**

1. In the layout area, select the labels or fields you want to change.
2. Click Select Font on the Annotation menu.

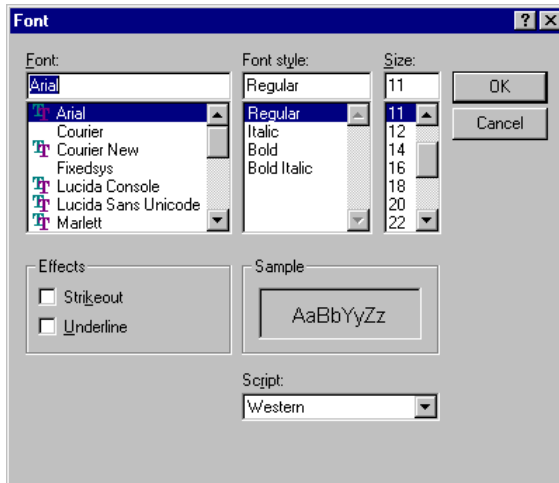

3. In the Font dialog box, select the appropriate text attributes. (Notice that a sample of your selections is displayed in the Sample box).
4. Click OK to apply the settings.

#### To change text color:

1. In the layout area, select the fields you want to change.
2. Point to Foreground Color on the Annotation menu. Then click the desired color on the displayed menu.

#### Aligning Fields

When placing labels, graphics or variable fields in the layout area, you may be concerned that they properly align, to make them more visually appealing. You can align two or more selected fields, based on the position of the first field you select. The first field selected in the set of fields to be aligned is the anchor for the alignment.

You can align fields, based on the first selected field, by their top, bottom, left, or right border.

You can also center the fields horizontally with one another, in a row, or vertically with one another in a column.

**To align fields:**

1. Select the two or more fields you want to align.
2. Point to Align on the Annotation menu. Then select the desired alignment.

## ***Adjusting the Orientation of the Layout***

When creating or editing a cover page, you may want to adjust your view of the layout. You can rotate the base page clockwise by selected increments. You can also flip the layout vertically (flipping the layout elements from top to bottom or vice versa) or horizontally (flipping the layout from left and right).

**To rotate the cover page:**

On the Edit menu, point to Rotate, and then select 90, 180, or 270.

**To flip the layout:**

 
On the Edit menu, point to Flip. Then click Horizontal or Vertical.

## ***Straightening a Cover Page Layout***

In designing a cover page, you may need to straighten the base image before you begin adding text or graphics to it. For example, you may have imported a scanned image, for the cover page layout, that was not perfectly straight.

**To straighten a document:**

1. On the Image toolbar, click the Straighten button.

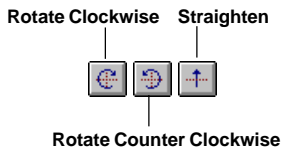

2. On the Straighten toolbar, click the Rotate Clockwise or Rotate Counterclockwise button to rotate the crosshairs until it aligns with the layout image.
3. Click the Straighten button to have the system adjust the layout image to its properly aligned position.

## ***Adjusting the Display***

The Cover Page Designer provides you with different levels of magnification allowing you to work at the most comfortable size. You can zoom in and out at predefined increments, or specify a particular size or scale. You can also use adjust the document image size so that the entire cover page is visible within the window.

### **To zoom in or zoom out on the cover page:**

Do one of the following:

- ☐ On the View menu, point to Zoom, and then select the desired level of magnification.
- ☐ On the File toolbar, select the desired level of magnification in the list.
- ☐ On the Image toolbar, click the Zoom tool, and then:
  - To increase magnification, click the document
  - To decrease magnification, hold down the Alt key, and click the document.

### **To fit the cover page to the display window:**

Click Fit Image to Window on the View menu.

## ***Scrolling Through a Zoomed Cover Page***

If you need to work on particular aspects of a cover page (for example, to modify a recurring graphic), you can scroll through the cover page while maintaining a high level of magnification.

**To scroll through a zoomed cover page:**

1. Click Show Navigator on the View menu. The Navigator window opens in the right corner of the screen. Inside the Navigator, a white rectangle indicates the area of your cover page that is currently in view.



2. On the Image toolbar, click Move.
3. While tracking your position in the Navigator window, drag the image to bring the desired area of the cover page into view.

***Editing a Selected Area of the Layout***

While working with a cover page, you may need to edit the base cover page that underlies all annotations. When editing a base cover page, you can select, crop, or flip a specific area. For example, to create a novel effect, you may want to flip an imbedded graphic on its vertical or horizontal axis.

**To select an area of a cover page:**

1. On the Image toolbar:
  - Click the Select tool for areas that fit easily inside a square or rectangle.
  - Click the Lasso tool for irregularly shaped areas.
2. Drag the cursor to draw the appropriately shaped outline for the area you want to select.



**To crop a cover page:**

1. Select the area of the cover page to which you want the entire cover page to conform.
2. Click Crop Inplace on the Edit menu or toolbar.

**To flip a selected area of a cover page:**

1. Select an area of the cover page.
2. Point to Flip on the Edit menu, and then click Horizontal or Vertical.

 
***Adjusting the Size of a Cover Page***

Adjusting the size of a cover page can be useful in planning other tasks. For example, if a document consists solely of a large graphic, you may want to reduce its size so that it can be used later in creating a background for another cover page.

Changing the size of a document involves changing the number of pixels used to represent it. Such a change permanently alters the document file.

**To adjust the size of a cover page:**

1. Click Image Size on the Adjust menu.

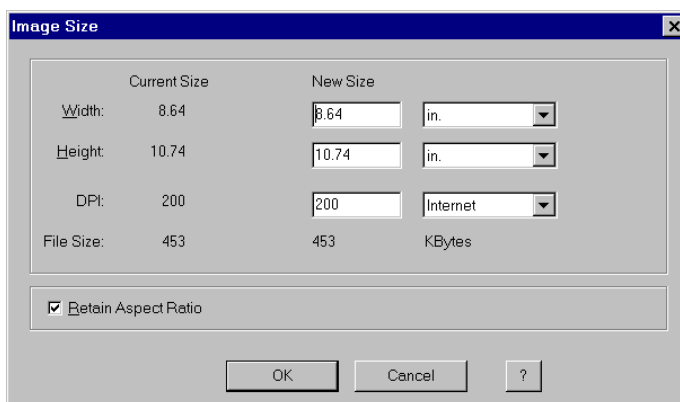

2. In the Image Size dialog box, enter the dimensions of the newly sized document.
3. Click OK. The document file is resized.

## ***Adjusting the Image Type***

You can adjust the type of image for the cover page layout.

### **To adjust the image type:**

1. Click Image Type on the Adjust menu.
2. Select one of the following image types:
  - **True Color**  
True Color images contain 8 bits per pixel for red, green, and blue channels. Each pixel contains 24 bits.
  - **Grayscale**  
Grayscale images contain 8 bits per pixel.
  - **Black and White**  
Select one of the following:  
  
Binary images are one bit per pixel.  
  
Half Tone simulates the tonal range of an image with a precise pattern of lines and dots.  
  
Text Enhanced images are grayscale images (8 bits per pixel) converted to binary images (1 bit per pixel) using Canon ImageTrust technology.

## ***Making Image Adjustments***

Adjustment features allow you to make adjustments to the cover page including contrast, brightness, sharpness, and cleanup. You can produce a wide range of visual changes in your cover page.

Image adjustment options are only available when you select True Color or Grayscale as your image type.

### ***Adjusting Color and Color Level Automatically***

You can have the system automatically adjust the color and color level for better viewing with your computer monitor or other output device.

**To adjust the color level automatically:**

Click Auto Level on the Adjust menu to adjust the color level of your cover page corrected.

**To adjust the color automatically:**

 
Click Auto Color on the Adjust menu to adjust the color of your cover page.

### ***Adjusting Brightness and Contrast***

You can adjust the brightness and contrast of a color or grayscale image.

**To adjust the brightness and contrast using variations:**

1. Select the cover page or a portion of the cover page.
2. Click Brightness and Contrast on the Adjust menu.

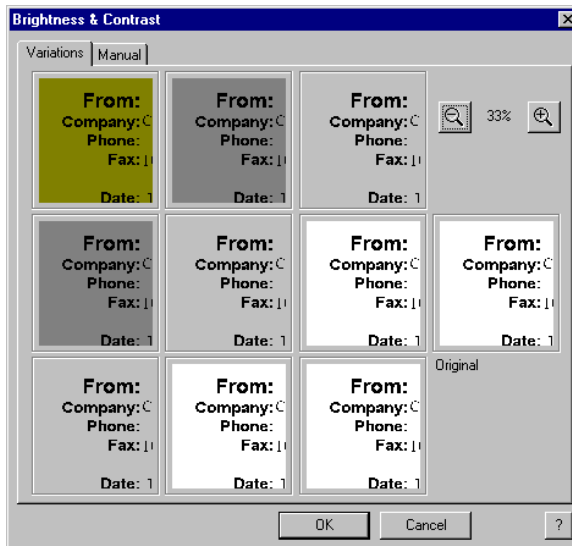

The Brightness and Contrast dialog box displays a thumbnail of the original cover page and presents nine suggested variations with modified brightness and contrast.

3. On the Variations tab, click one of the thumbnails that displays modified cover pages.

Additional suggested thumbnails, with modifications similar to your previous selection, appear.

4. Continue clicking the suggested variations until the cover page appears as you want it.
5. Click OK to apply the changes to the cover page. Click Cancel to abandon the changes.

**To adjust the brightness and contrast manually:**

1. Select the cover page or a portion of the cover page.
2. On the Adjust menu, click Brightness and Contrast.

3. In the Brightness and Contrast dialog box, click the Manual tab.

The original cover page appears on the left of the dialog box. As you modify the cover page, you can see the results in the image on the right.



 
4. Adjust the Brightness slider to the left to make the cover page darker, to the right to make the cover page brighter.
5. Adjust the Contrast slider to the left to decrease contrast, to the right to increase contrast.
6. When the Current cover page appears as you want it, click OK to accept the changes. Click Cancel to abandon the changes.

### ***Adjusting the Color Balance***

You can adjust the color components of a cover page by changing the level of red, green, and blue colors that make up the shades in your cover page.

**To adjust the color balance using variations:**

1. Select the cover page or a portion of the cover page.
2. On the Adjust menu, click Color Balance.

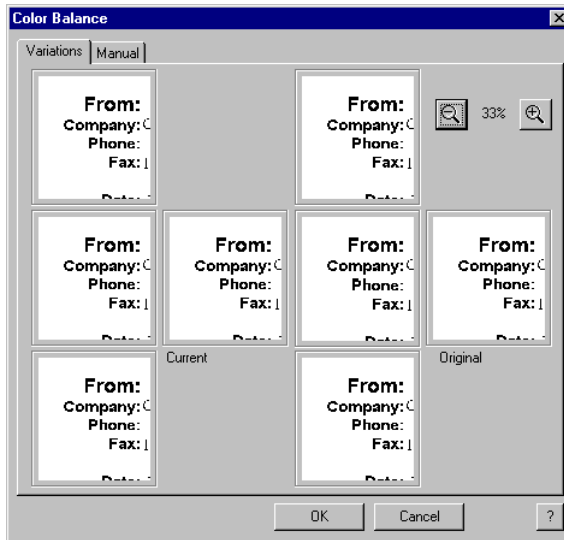

3. In the Color Balance dialog box, on the Variations tab, click one of the thumbnails that displays modified cover pages.


Additional suggested thumbnails, with modifications similar to your previous selection, appear.

4. Continue clicking the suggested variations until the cover page appears as you want it.
5. Click OK to apply the changes to the cover page. Click Cancel to abandon the changes.

**To adjust the color balance manually:**

 1. Select the cover page or a portion of the cover page.

2. On the Adjust menu, click Color Balance.
3. In the Color Balance dialog box, click the Manual tab.

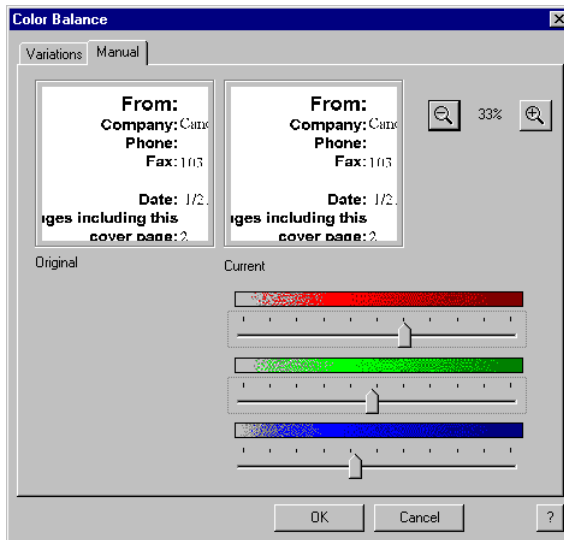

4. Adjust the Red, Green, and Blue sliders to the left for less color, to the right for more color.

As you modify the cover page, you can see the results in the cover page on the right.


5. When the Current image appears as you want it, click OK to accept the changes. Click Cancel to abandon the changes.

## ***Setting the Black Point and White Point***

 If you are not satisfied with the results of the Auto Level or Brightness & Contrast features, you may want to first manually define the contrast range of the cover page by setting the image highlight and shadow points, or the black point and white point. With this method, you specify what you consider to be the important highlight and shadow details. You can select the darkest point and the lightest point to more effectively adjust the image contrast with Auto Level or the Brightness & Contrast features. When adjusting the image level, these points define the lightest and darkest points of the range when you adjust the image contrast.

### **To set the Black Point and White Point:**

1. Select the cover page or a cover page portion.
2. On the Adjust menu, click Black Point/White Point.
3. In the Black Point/White Point dialog box, click Black Point.

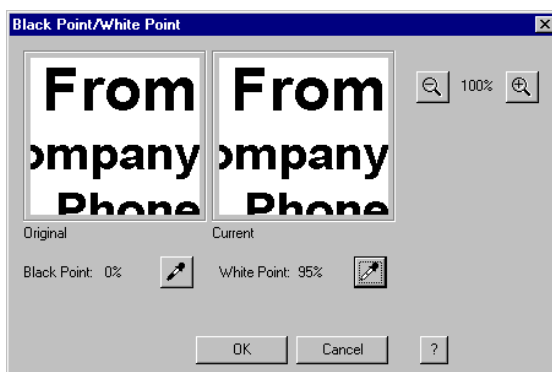

4. Move the cursor over the Original thumbnail. As you move the cursor over the cover page, the black value, expressed as a percentage of the current pixel, appears to the left of the Black Point button.
5. Move the dropper over the cover page until you find the blackest point. This point will have the value closest to 0%. Click the pixel.




6. Click White Point.
7. Move the cursor over the Original thumbnail. As you move the cursor over the cover page, the white value, expressed as a percentage of the current pixel, appears to the left of the White Point button.
8. Move the dropper over the cover page until you find the whitest point. This is the point with the value closest to 100%. Click the pixel.
9. Click OK.

## ***Blurring an Image***

 You can Blur the cover page to soften the edges and fields of a grainy color or grayscale image. Blur averages the color values of adjacent pixels, removing peaks, to make the cover page smoother.

### **To blur an image:**

1. Select the cover page or a cover page portion.
2. On the Adjust menu, select Blur.

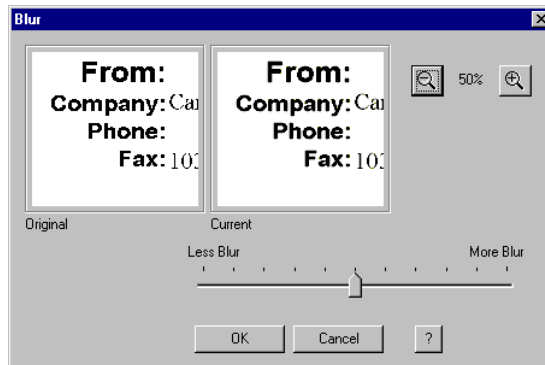

3. In the Blur dialog box, move the Blur slider to the left for less blur, to the right for more blur.

As you move the slider, the adjustments appear in the Current thumbnail.


4. Click OK to accept the changes. Click Cancel to abandon the changes.

## ***Sharpening an Image***

 You can sharpen a cover page to increase the difference between color values of adjacent pixels, sharpening the appearance of a color or grayscale cover page.

### **To sharpen an image:**

1. Select the cover page or a cover page portion.
2. On the Adjust menu, click Sharpen.

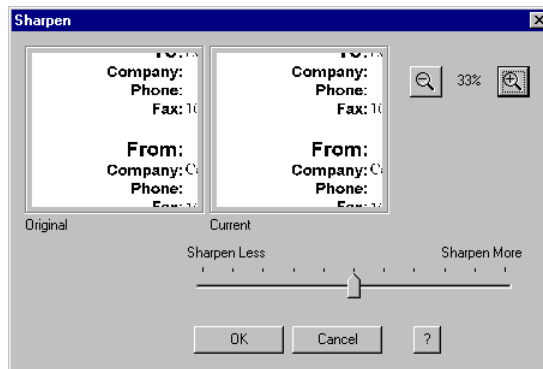

3. In the Sharpen dialog box, move the Sharpen slider to the left to sharpen less, to the right to sharpen more.

As you move the slider, the adjustments appear in the Current thumbnail.


4. Click OK to accept the changes. Click Cancel to abandon the changes.

## Removing Noise

 You can remove noise or distortions from the cover page. The Remove Noise filter averages the color values of adjacent pixels.

### To remove noise:

1. On the Adjust menu, point to Advanced, and then click Remove Noise.

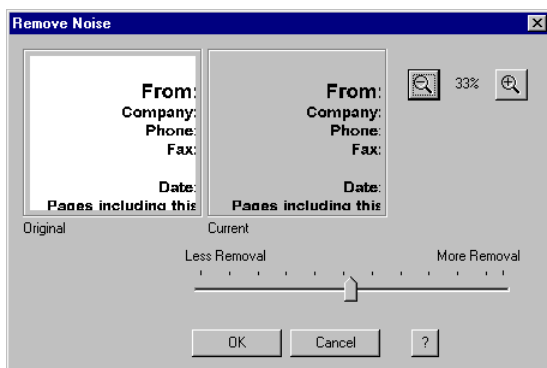

2. Drag the Removal slider to the left to remove less noise, to the right to remove more noise.

As you drag the Removal slider, your changes appear in the Current thumbnail. You can compare the changes to the Original thumbnail.


3. Click OK to accept your changes. Click Cancel to leave the cover page unchanged.

## Removing Moiré Patterns

 You can remove moiré patterns from a cover page. Because moiré patterns are caused by the intersection of lines in two directions, removing the pattern requires the following procedure to be performed twice, resetting the angle option for each set of intersecting lines.

**To remove moiré patterns:**

1. Select the cover page area where the pattern occurs.
2. On the adjust menu, point to Advanced, and then click Remove Moiré.

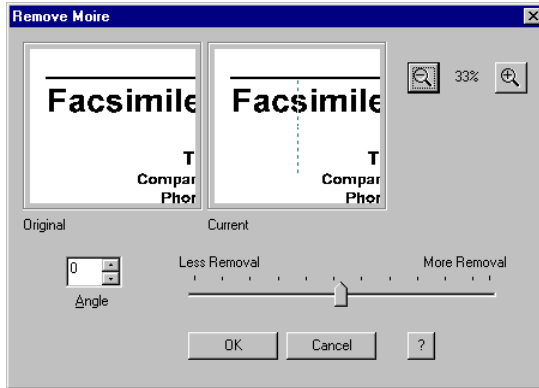

3. In the Angle box, enter the angle of the moiré lines to be removed.
4. Drag the Remove Moiré slider to the left to remove less, to the right to remove more.

As you make changes to the image, your changes appear in the current thumbnail. You can compare the changes to the Original thumbnail.

To better see your changes, you can use the zoom buttons to magnify the thumbnails.


5. Click OK to accept your changes. Click Cancel to leave the cover page unchanged.

## Removing JPEG Artifacts

JPEG images that have been compressed using maximum compression may display scattered noise, called JPEG artifacts, around the image edges. You can remove these distortions.

### To remove JPEG artifacts:

 1. Select the area of the cover page where the artifacts occur.
2. On the Adjust menu, point to Advanced, and then click Remove JPEG Artifacts.

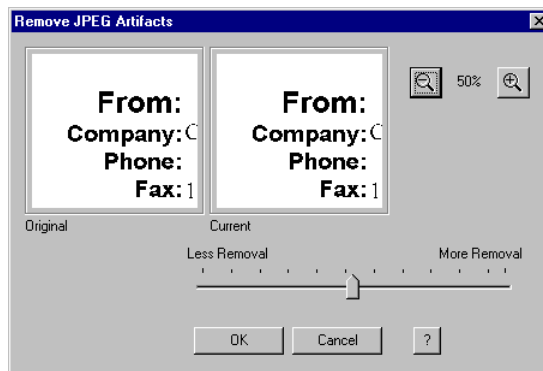

3. In the Remove JPEG Artifacts dialog box, drag the Removal slider to the left to remove less, to the right to remove more.

As you make changes to the cover page, your changes appear in the current thumbnail. You can compare the changes to the Original thumbnail.

To better see your changes, you can use the zoom buttons to magnify the thumbnails.


4. Click OK to accept your changes. Click Cancel to leave the cover page unchanged.

## Removing Show-Through

Image show-through is caused by patterns from the reverse side of a page showing through the original image. You can remove image show-through while preserving the image.

### To remove show-through:

 1. Select the cover page portion you want to adjust.
2. On the Adjust menu, point to Advanced, and then click Remove Show-Through.

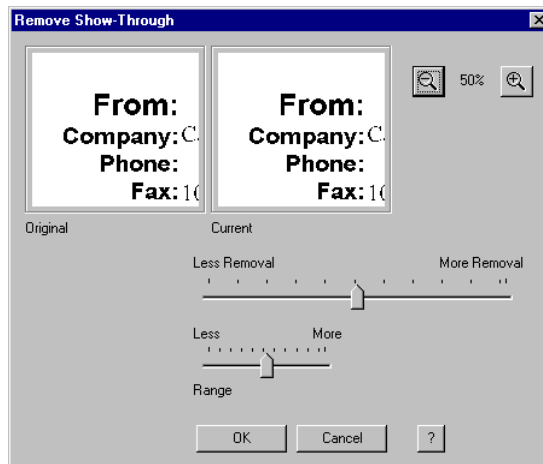

3. In the Remove Show-Through dialog box, use the Range slider to adjust Removal slider sensitivity according to the contrast of the pixels showing through to the background.

If there is a wide range between color, move the Range slider to the right. If there is little range between the pixels showing through and the background, move the slider to the left.

4. Drag the Removal slider to the left to remove less show-through, to the right to remove more show-through.


5. Click OK to accept your changes. Click Cancel to leave the cover page unchanged.

## Removing Dust

 Even if you have carefully cleaned the original cover page, there may be some dust on the image. Dust leaves small spots on your image, usually one or two pixels in size. You can easily remove dust or any small speckles from an image, by blending the color of the dots with the adjacent pixels. You can control the degree of blending.

### To remove dust:

1. Select the area of the cover page where the dust appears.
2. On the Adjust menu, point to Advanced, and then click Remove Dust.

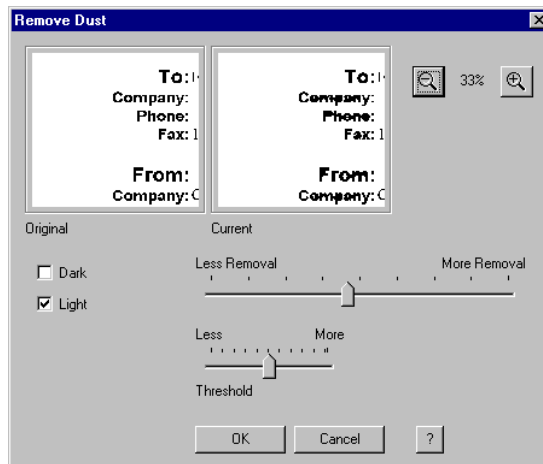

3. In the Remove Dust dialog box, click Dark and/or Light, depending on the color of the dust.
4. Drag the Threshold slider according to the deviation of the dust from dark to light.

5. Drag the Removal slider to the left to remove less dust or to the right to remove more dust.

Moving the slider to the right blends the dust more with the background color that surrounds the dust. As you drag the Removal slider, your changes appear in the Current thumbnail. You can compare the changes to the Original thumbnail.

You can also use the zoom buttons to magnify the thumbnails.


6. Click OK to accept your changes. Click Cancel to leave the cover page unchanged.

## ***Removing Scanner Noise***

 You can remove distortions associated with scanned images, such as color bands and streaks.

### **To remove scanner noise:**

1. Select the area of the cover page where the scanner noise appears.
2. On the Adjust menu, point to Advanced, and then click Remove Scanner Noise.

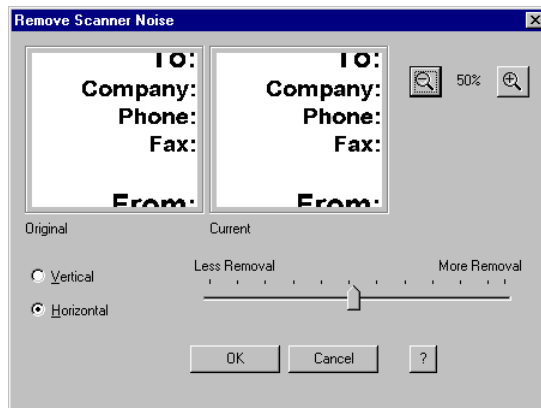



3. In the Remove Scanner Noise dialog box, select Vertical or Horizontal according to the direction of the streaks or bands.
4. Drag the Width slider according to the width of the noise. The slider ranges from 2 pixels (far left) to 20 pixels (far right).
5. Drag the Detail slider according to the brightness of the noise. Move the slider to the left for darker noise, to the right for brighter noise.
6. Drag the Removal slider to the left to remove less noise, to the right to remove more noise.

As you drag the Removal slider, your changes appear in the Current thumbnail. You can compare the changes to the Original thumbnail.

You can also use the zoom buttons to magnify the thumbnails.

7. Click OK to accept your changes. Click Cancel to leave the cover page unchanged.

## ***Adding Annotations to Your Cover Page***

The following sections describe additional ways in which you can annotate your cover page.

### ***Adding a Sticky-Note***

Rather than add text directly to a cover page, as you do with the Text tool, you can add a sticky-note on any portion of your cover page as a graphic element.

When you add a sticky-note, you can select the text attributes: font, font size and color, background color, and special effects (underline, strikeout).

You can type any text that you want for the sticky-note, editing the note later if necessary. If you select a font, font size, a color, or special effect, it affects the entire note. If you change any of the attributes while editing a note, or while the note is selected, it changes all the text in the note.

**To add a sticky-note:**

1. On the Annotations toolbox, click the Sticky-Note tool and drag the cursor to draw an appropriately sized square or rectangle.
2. Type the text of your note.

**To edit sticky-note text:**

1. On the Annotation Toolbar, with the Selection tool selected, double-click the sticky-note. The cursor changes to an insertion point.
2. Edit the text as needed.
3. Click anywhere outside the sticky-note to save your changes.

**To change the font and color:**

1. Select the sticky-note.
2. To set font properties for the text, on the Annotations menu, click Select Font. In the Font dialog box, select the font attributes and click OK.
3. To set a background color for the sticky-note, on the Annotations menu, click Background Color. Click the desired color on the displayed menu and click OK.

## ***Highlighting Your Cover Page***

You can add a color highlight to text or other images in your cover page. To do this, select a color and then draw a rectangular highlight over the desired area. All highlight colors are transparent and display in the color you specify. When you print the document, the highlighted region prints as gray shadings.

**To highlight a region:**

1. On the Annotations toolbox, click the Highlighter tool.
2. To select a highlighting background color, point to Background Color on the Annotation menu, and then click the desired color.
3. Drag the cursor over the area you want to highlight. When you release the mouse button, the highlight is completed.

## ***Removing an Annotation***

If you decide you no longer want an item to appear in your cover page, you can remove it permanently by selecting it and pressing the Delete key.

## ***Copying a Field or an Annotation***

You can copy a field or graphic item and paste it into another Windows application which supports a Paste option. When you copy a field or graphic item, it is placed in the clipboard.

### **To copy a field or graphic element:**

With the element to be copied selected, click Copy on the Edit menu or toolbar.

 
## ***Opening and Modifying a Fax Cover Page***

When you open a new cover page, you select from a list of available templates. You can then make adjustments and annotations to the cover page in the Cover Page Designer.

The following instructions summarize the basic procedures for opening and modifying a cover page. Detailed procedures for modifying a cover page follow this summary.

### **To open and modify a fax cover page:**

1. With the Cover Page Designer open, click Open on the File menu or toolbar.

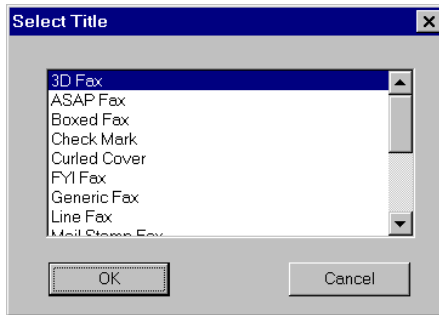

2. In the Select Title dialog box, select the desired fax cover sheet and click OK.
3. Make the appropriate adjustments, such as:
  - Adjust the text and variable fields.
  - Adjust the cover page layout.
  - Adjust the document size and type.
  - Make image adjustments.
  - Add additional annotations.
4. Click Save on the File menu to save your changes.

## ***Reverting to the Last Saved Version***

If are dissatisfied with changes that you have made to your cover page, you can discard them and return to the last saved version.

### **To revert to the last saved version:**

Click Revert to Original on the File menu. When the confirmation message displays, click Yes.

## Printing a Cover Page

You print a cover page for previewing a newly designed cover page. The printed cover page can also be used when sending a fax directly with the MultiPASS printer.

### To print a cover page:

 
1. In the Cover Page Designer, click Print on the File menu or toolbar.
2. In the Print dialog box, specify the desired print options and click OK.

## Renaming a Cover Page


You can rename a cover page at any time in the Desktop Manager.

### To rename a cover page:

1. In the Desktop Manager, on the Tools menu, point to Cover Pages. Then click Manage Cover Pages.

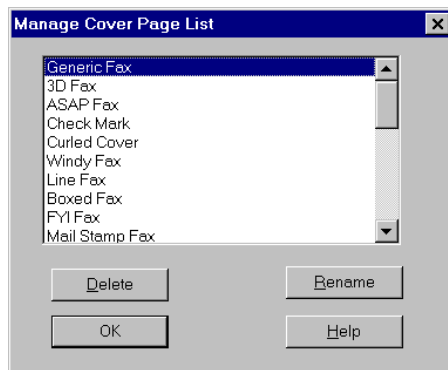

 2. In the Manage Cover Page List dialog box, select the cover page you want to rename and click Rename.

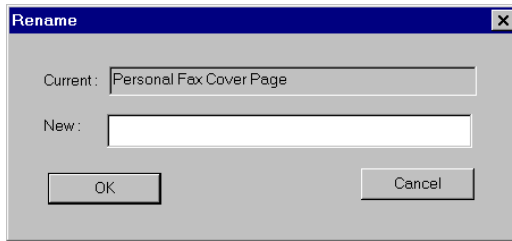

3. In the Rename dialog box, type the new name for the cover page and click OK.
4. In the Manage Cover Page List dialog box, click OK to save your changes and close the dialog box.

## ***Deleting a Cover Page***

You can delete a cover page that you no longer need from the Desktop Manager.

### **To delete a cover page:**

1. In the Desktop Manager, on the Tools menu, point to Cover Pages. Then click Manage Cover Pages.
2. In the Manage Cover Page List dialog box, select the cover page you want to delete and click Delete.

When the confirmation message appears, click Yes.

3. In the Manage Cover Page List dialog box, click OK to close the dialog box.

# Chapter 6

## Scanning

---

This chapter provides information and instructions for scanning with your MultiPASS printer.

- ❑ Scanning Overview ..... 6-2
  - Features of the ScanGear Window ..... 6-2
- ❑ Scanning with the Desktop Manager ..... 6-4
- ❑ Scanning from a Windows Application ..... 6-5
- ❑ Setting the Preview Scan Options ..... 6-6
  - Setting the Scan Mode ..... 6-6
  - Setting the Scan Resolution ..... 6-7
  - Setting Preferences ..... 6-9
  - Setting Paper Size ..... 6-11
  - Setting Black and White Options ..... 6-11
- ❑ Adjusting the Preview Image for Final Scan ..... 6-12
  - Clearing the Preview Area ..... 6-13
  - Adjusting the Preview Image View ..... 6-13
  - Adjusting the Selection Size ..... 6-14
  - Moving an Image ..... 6-15
  - Reversing the Image Tone ..... 6-15
  - Mirroring an Image ..... 6-15
  - Rotating an Image ..... 6-16
  - Scaling the Image Output Size ..... 6-16
- ❑ Adjusting the Tone of the Preview Image ..... 6-16
  - Features of the Tone Tab ..... 6-17
  - Adjusting Contrast and Brightness ..... 6-18
  - Changing Gamma Curve Values ..... 6-19
  - Adjusting Histogram Tone Levels ..... 6-20
  - Using Tone Curves ..... 6-22
  - Adjusting Contrast/Brightness for Black and White Scan Mode ..... 6-25

# ***Scanning Overview***

You can use the MultiPASS printer to scan documents from the Desktop Manager, or from any TWAIN-compliant Windows application.

When you scan a document in the Desktop Manager, the ScanGear window displays, allowing you to set certain scanning options and conditions. This chapter provides instructions on setting scan options using the ScanGear window.

 
When you scan a document in a Windows application, the application may or may not display the ScanGear window. If the ScanGear window is not displayed, refer to the documentation for the Windows application you are working in for instructions on setting scan options.

Typically, when you scan a document using the ScanGear window, you first scan a preview of the document. The preview image enables you to review the results of your scanned document and make any necessary adjustments (for example, to size, tone, and so on). When you are satisfied with the results, you then perform the final scan of the document. The system then places the final image into the Desktop Manager or your Windows application.

## ***Features of the ScanGear Window***


The section provides an overview of the basics of the ScanGear window. Detailed instructions for using the various commands and components of the window are provided in later sections of this chapter.



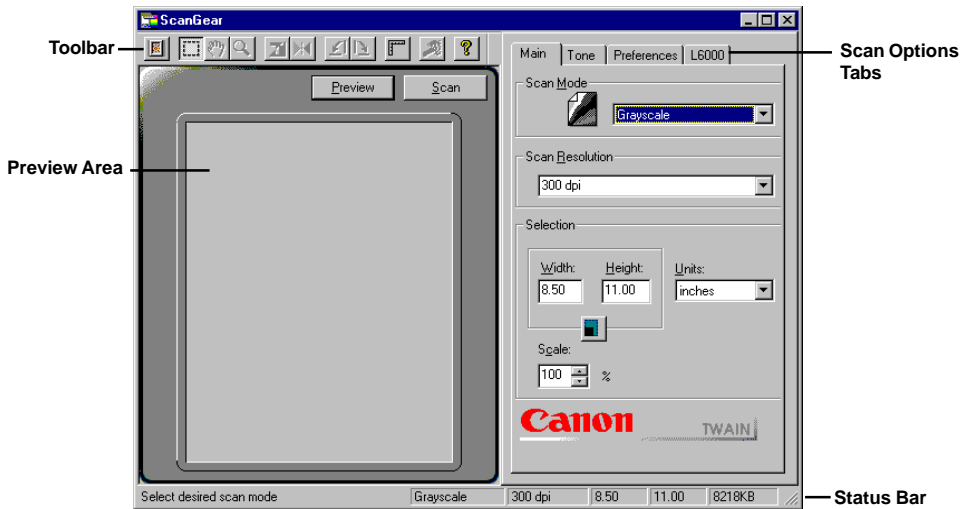

#### ❑ **Toolbar**

 The toolbar provides buttons for performing certain tasks when scanning. In circumstances where a task is not possible, the toolbar button is unavailable, appearing dimmed.

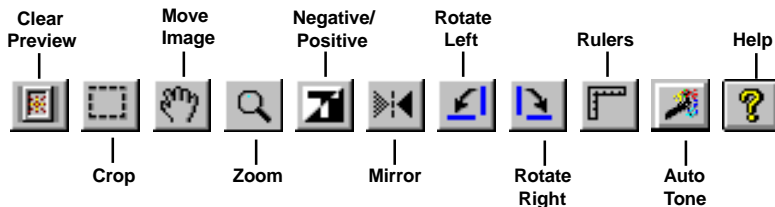

#### ❑ **Preview Area**

The preview area displays a preview image of the document you scan. A preview image enables you to adjust various document characteristics before you perform the final scan. For example, you can make adjustments to the size, the orientation, or the tone of the image.

#### ❑ **Scan Option Tabs**

The Scan Option tabs provide adjustment options when performing a preview or final scan.

❑ **Status Bar**

The status bar displays information on the scan process status. This information can include the scan mode, scan resolution, size (width and height), and the resulting file size of the scanned image.

### ***Displaying Information About the Scan Driver***

You can display version and copyright information about the scan driver using the About dialog box.

1. On the title bar in the ScanGear window, click the right mouse button.
2. On the displayed menu, click About ScanGear.
3. To close the dialog box, click OK.

## ***Scanning with the Desktop Manager***

You can use the MultiPASS printer and the Desktop Manager to scan a monochrome image of a document. The resulting document is displayed in the Desktop Manager and is automatically provided with a unique system-assigned name. You can rename the document later as desired.

Each image you scan is placed into the Scan folder as a TIFF document. A scanned document remains in the Scan folder until you move it, or delete it. A scanned document can be reviewed, annotated, printed, or sent as a fax. For more information on these tasks, refer to Chapter 7, “Working with Documents in the Desktop Manager.”

The following instructions summarize the overall procedures for scanning an image.

**To scan an image using the Desktop Manager:**

1. Place the image you want to scan face down in the ADF (automatic document feeder) of the MultiPASS printer.
2. In the Desktop Manager, click Scan on the Tools menu or toolbar.

3. In the ScanGear window, specify the following preview scan options for your document as necessary: Scan Mode, Scan Resolution, Preferences, Page Size, and Black and White options (if applicable).
4. Click Preview.
5. Review the display of the scanned preview image in the scan window. Adjust the properties of your image as necessary.
6. Replace your document in the document feeder of the MultiPASS printer.
7. Click Scan.

An indicator displays to track the progress of the scan. Once complete, the image is stored in the Scan folder, where it remains until you move or delete it.

## ***Scanning from a Windows Application***

You can use the MultiPASS printer to scan documents directly into a Windows application that supports a TWAIN interface (such as Photoshop). Some applications allow multiple page scans, while others do not. If you are unsure whether your Windows application supports this feature, refer to the user documentation for the application you are using.

The following instructions summarize the general procedures for scanning an image. For specific information on scanning with your Windows application and specifying MultiPASS as the scan device, refer to the user documentation for the application you are using.

### **To scan an image from a Windows application:**

1. Place the image you want to scan face down in the ADF (automatic document feeder) of the MultiPASS printer.
2. In your Windows application, select the command to scan a document.

In some applications, the appropriate command may be listed as Acquire or Acquire Image.

3. In the ScanGear window, specify the following preview scan options for your document as necessary: Scan Mode, Scan Resolution, Preferences, Page Size, and Black and White Options (if applicable).
4. Click Preview.
5. Review the display of your scanned preview image. Adjust the properties of the image as necessary.
6. Replace your document in the document feeder of the MultiPASS printer.
7. Click Scan.

When complete, the image appears in the display area of your Windows application.

## ***Setting the Preview Scan Options***

Before previewing a scan, set the scan mode, resolution, preferences, and paper size. Additionally, when you are scanning a black and white image, you can select one of the two black and white options.

### ***Setting the Scan Mode***

For a preview image, you specify how your source image will be acquired. Your options include the following:

- ☐ **Grayscale**  
Grayscale images contain 8 bits per pixel.
- ☐ **Text Enhanced**  
Text enhanced images are grayscale images (8 bits per pixel) converted to black and white (1 bit per pixel) using Canon ImageTrust technology.

❑ **Black and White**

Black and white images are scanned at one bit per pixel. For applications that request a black and white scan and do not use the scan driver window, the scan driver automatically uses the Text Enhanced setting if you selected the Use Text Enhanced option in the Preferences tab. For details, refer to the “Setting Preferences” section in this chapter.

**To set the scan mode:**

1. Click the Main tab.
2. In the Scan Mode list, select the desired option.

## ***Setting the Scan Resolution***

You can set the resolution of a scanned image based on the selected output device. This resolution becomes the base on which changes to image size and scale are calculated. You can select a preset resolution, or create a custom resolution.

**To set the scan resolution with a preset option:**

 
1. Click the Main tab.
2. In the Scan Resolution list, select the desired option.

## ***Creating a Custom Resolution***

You can define a custom resolution, change an existing custom resolution, or delete a previously defined custom resolution.

**To create a custom scan resolution:**

1. In the Scan Resolution list, click Custom.

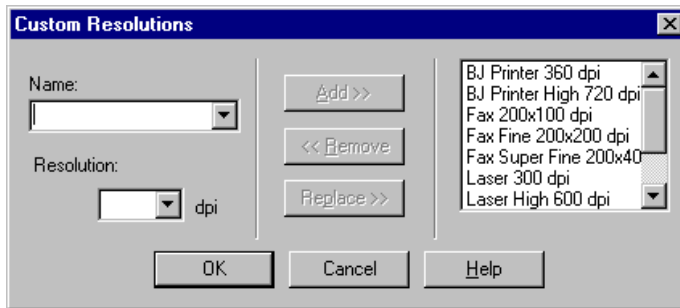

2. In the Custom Resolutions dialog box, type a name for your custom resolution setting.
3. In the Resolution text box, enter the preferred dpi setting.
4. Click Add. The new resolution name displays in the Resolution List.
5. Click OK to add the resolution setting.

Click Cancel to close the dialog box without adding the custom resolution.

### ***Deleting a Custom Resolution***

When you no longer need to use a custom resolution, you can delete it from the list. You cannot remove or replace the preset resolution settings.

#### **To delete a custom resolution:**

1. In the Scan Resolution list, select Custom.
2. In the Custom Resolutions dialog box, in the Names list, select the custom resolution setting you want to delete from the Name list.
3. Click Remove.
4. Click OK to remove the resolution setting.

Click Cancel to close the dialog box without removing the custom resolution setting.

## ***Changing a Custom Resolution***

Once you have set a custom resolution, you can change it at any time as necessary.

 
### **To change a custom resolution:**

1. In the Scan Resolution list, select Custom.
2. In the Custom Resolution dialog box, in the Names list, select an existing custom resolution from the Name list.
3. In the Name and/or Resolution text boxes, enter the desired change.
4. Click Replace. The updated custom resolution displays in the Resolution List, replacing the existing one.
5. Click OK to save your changes to the resolution setting.

Click Cancel to close the dialog box without saving your changes.

## ***Setting Preferences***

You can select a preference that governs how your source image is scanned using the Preferences tab.

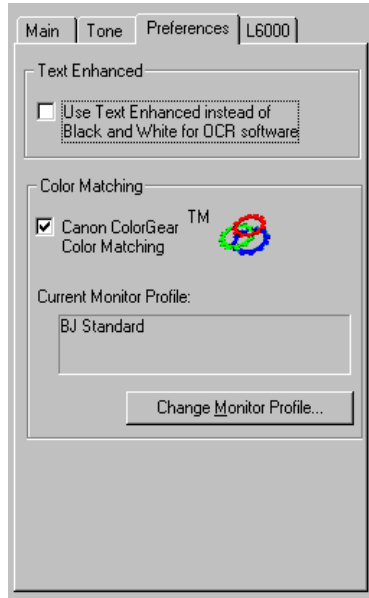

**To set a preference:**

On the Preferences tab, click the desired preference check box. You can select from the following options:

☐ **Text Enhanced**

This option is designed for use with OCR (Optical Character Recognition) software. This setting increases the contrast in black and white scanning to promote the accurate recognition of characters in OCR software. Resolution should be at least 300 dpi for OCR scans.

If selected, the text enhanced setting is used for applications that request a black and white scan and do not use the scan window (including most OCR applications).



**Note**

---

Because the L6000 does not scan in color, the Canon ColorGear™ Color Matching option has no effect upon your scan.

---



## Setting Paper Size

 
You select a paper size that corresponds to the size of your source document. If your document does not conform to one of the available sizes, you can define a custom paper size.

### To select a standard paper size:

1. Click the L6000 tab.
2. In the Paper Size list, select the desired option.

### To set a custom paper size:

1. Click the L6000 tab.

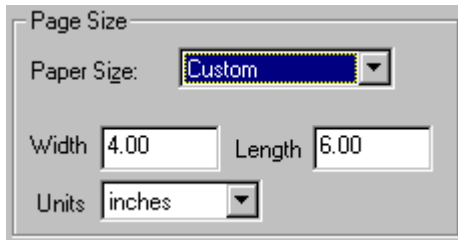

The image shows a 'Page Size' dialog box. It has a 'Paper Size' dropdown menu currently showing 'Custom'. Below this are two text input fields: 'Width' with the value '4.00' and 'Length' with the value '6.00'. At the bottom is a 'Units' dropdown menu showing 'inches'.

2. In the Paper Size list, select Custom.
3. In the Units list, select the unit of measure by which you want to define your custom size.
4. In the Width and Length text boxes, enter the dimensions of your source document.

## Setting Black and White Options

 
If you select black and white as your scan mode, you can also select one of the following black and white options from the L6000 tab:

❑ **Threshold**

The Threshold option provides a high contrast evaluation of the image in terms of blacks and whites only. This option is useful when scanning documents with text.

❑ **Halftone**

The Halftone option simulates the tonal range of an image with a precise pattern of lines and dots. This option is useful when scanning documents with many shades of gray.

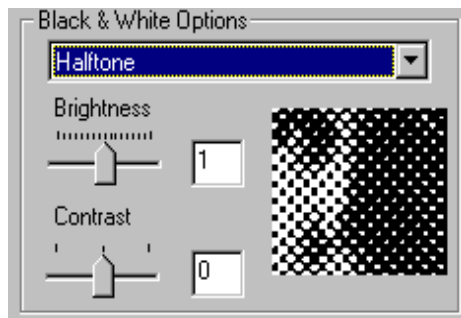

**To set a black and white option:**

1. Click the L6000 tab.
2. In the Black & White Options list, select Threshold or Halftone.

## ***Adjusting the Preview Image for Final Scan***

Once an image has been previewed, you can adjust it, as necessary, for the final scan by changing its selection size, its output size, aspects of its orientation, or aspects of its tone. For information on adjusting the tone of the preview image, see the "Adjusting the Preview Image Tone" section.

## ***Clearing the Preview Area***

If the preview image does not serve your purpose, you can quickly remove it from the preview area and rescan the image.

### **To remove the current preview image:**

On the toolbar, click Clear Preview.

## ***Adjusting the Preview Image View***

To make it easier to work with your preview image, you can change aspects of its display.

### ***Changing the View Size***

You can enlarge a preview image to better view its details. Each enlargement doubles the size of the image up to a maximum of 4 times the size of the original image.

As you enlarged the image, you can just as easily reduce it. Each reduction decreases the size of the image by one-half.

### **To resize a preview image:**

1. On the toolbar, click Zoom.
2. To enlarge, left-click the mouse pointer on the image.

To reduce, right-click the mouse pointer on the image.

### ***Displaying Rulers***

To work precisely with a preview image, you can display rulers on the top and left borders of the preview area. The rulers display in inches or centimeters, depending on what you have set as the unit of measure on the Main tab.

### **To display rulers:**

On the toolbar, click Rulers.

## Adjusting the Selection Size

When you first preview an image, the selection size is the same as your source document paper size.

You can adjust the selection size of an image in order to isolate a specific area of the image for a more selective preview scan. For example, in scanning a letter, you may want to isolate and save a company logo by itself, ignoring the rest of the letter.

 
You define the selection size of your image by drawing a border around the part of the image that you would like to isolate. Alternatively, you can define and orient the dimensions of the selection with respect to the upper left corner of the preview area. Regardless of how you define a selection, you can easily and quickly change its dimensions.

In defining the selection size, regardless of the method you select, you can maintain the current height and width proportions of the image.

For example, you set the width to 4 inches and the height to 6 inches. You change the width to 5 inches. If Keep Proportions is not selected, the height remains the same. Thus, the proportion of the page height and width changes. If Keep Proportions is selected when you change the width, the height automatically changes. The lock icon indicates that the page size will be maintained in the same proportion whenever you change either the width or the height.

### To adjust the selection size:

1. Click the Main tab.
2. If you want to preserve the current proportions of the image, click the Keep Proportions button.

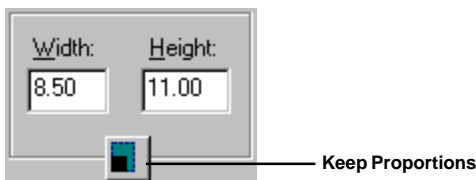

3. To draw the selected area, click Crop on the toolbar and drag the mouse diagonally across the area of the image in the preview window you want to select. The Width and Height text boxes display the new sizes.
4. To further define the dimensions of the selected area, in the Width and Height text boxes, type the appropriate values. The image selection borders change to match the specified width and height.
5. If you want to select an entirely different area of the image, click outside the crop lines to clear the current selection.
6. To preview the newly selected image area, click Preview.

## ***Moving an Image***

If the image is too large to see in its entirety, you can move the image within the preview area to locate a relevant section.

### **To move an enlarged image:**

On the toolbar, click Move Image and drag the zoomed image to display the appropriate area or detail.

## ***Reversing the Image Tone***

You can create a negative of an image for stylistic effect. A negative image is created by inverting the dark and light areas.

### **To reverse the tone of an image:**

On the toolbar, click Negative/Positive.

## ***Mirroring an Image***

By mirroring an image, you can create an alternate version. For example, you can create an alternate version of your company logo.

**To create a mirror image of the preview image:**  
On the toolbar, click Mirror.

## ***Rotating an Image***

You can rotate an image 90° left or right within the preview area to change its orientation. When you rotate an image, the entire preview area, including the rulers, rotates. For example, if the preview area is in portrait orientation, it becomes landscape.

**To rotate a preview image:**  
On the toolbar, click Rotate Left or Rotate Right.

## ***Scaling the Image Output Size***

You can scale the preview image to better fit your needs. For example, if you reduce by 50% the scale of an image that is 7 inches wide by 9 inches high, the output image will be 3.5 inches wide by 4.5 inches high.

However, in scaling an image for the final scan, keep in mind that the values in the width and height text boxes remain the same.

**To set an image scale:**

1. Click the Main tab.
2. In the Scale box, enter a new percent.

The new output size is displayed under Output Size.


## ***Adjusting the Tone of the Preview Image***

The tone of an image is its shading and combination of colors. Adjusting grayscale tones can enhance the contrast of a grayscale image. You can produce a wide range of visual effects in your preview image by adjusting the different settings on the Tone tab.

If you selected Black and White or Text Enhanced as the scan mode, the Tone tab is not available for selection. In these cases, you must adjust the tone of the image with the contrast/brightness settings on the L6000 tab.


## ***Features of the Tone Tab***

 This section provides an overview of the Tone tab. Detailed instructions on using these features are provided in later sections of this chapter.

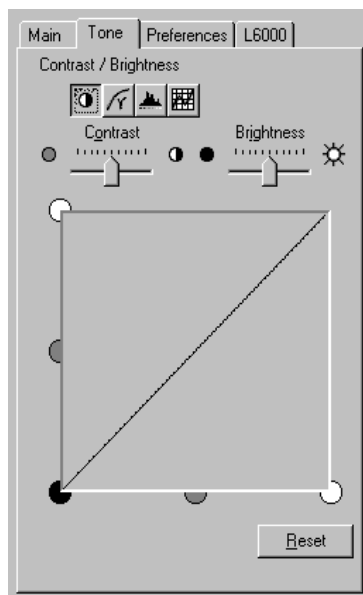

### **❑ Tone Toolbar**

 Using the buttons on the toolbar, you can access settings which affect different aspects of image tone, and give you great flexibility in manipulating your image tone before scanning the image.

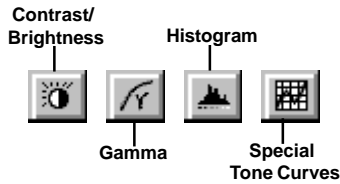

#### ☐ **Tone Graph**

Viewing the tone graph gives you more detail about the tone setting. The shape of the tone graph changes to reflect the selected channel's current tone settings. The graph is directly editable only when the Special Tone Curves button is selected.

 
## ***Adjusting Contrast and Brightness***

You can adjust the contrast and/or brightness of a grayscale image.

#### **To adjust the contrast or brightness of an image:**

1. On the Tone tab, click the Contrast/Brightness button.



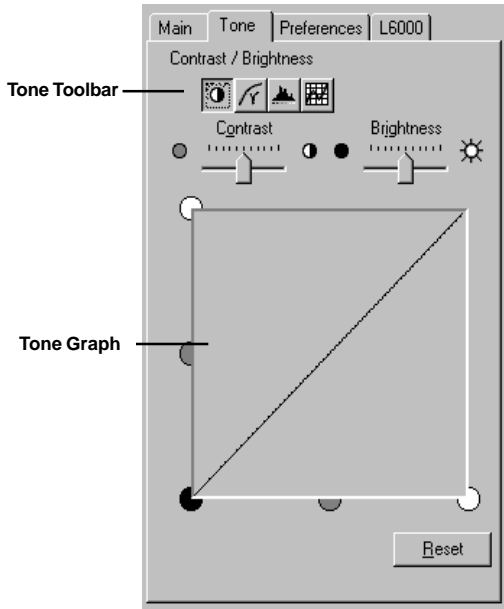

2. Move the Contrast and Brightness sliders to the left for less contrast or brightness, and to the right for more contrast or brightness, until the desired contrast is achieved.

The image in the preview area reflects your changes.


## Changing Gamma Curve Values

 With the Gamma curve, you can change the mid-tones of the image to increase its contrast, and enhance the overall image. When you increase the Gamma value, light areas are made lighter, and dark areas are made darker.

For example, if you are scanning a photograph that has many dark tones, simply adjusting the brightness and contrast may not improve the image as effectively as adjusting the Gamma value.

**To adjust the gamma value of an image:**

1. On the Tone tab, click the Gamma button.

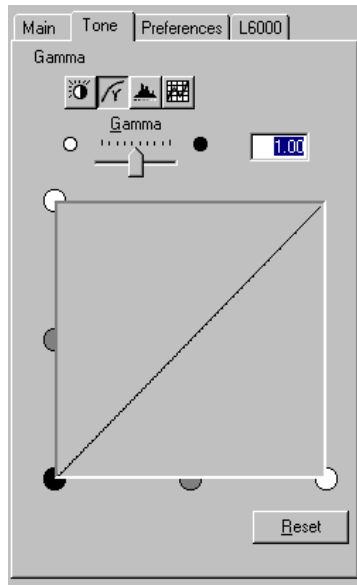


2. Move the Gamma slider to the left to decrease the mid-tone intensity, and to the right to increase the mid-tone intensity, until the desired effect is achieved. You can also type a value into the text box.
3. To return to the original Gamma curve setting, click Reset.

## ***Adjusting Histogram Tone Levels***

 You can use a histogram tool to adjust the tone shadow for the preview image.

Using the Black-point, Mid-point, and White-point buttons, you can sample the respective tone in the preview image and base the image tone settings on the sampling. You can also type a value in the Black-point, Mid-point, and White-point boxes.

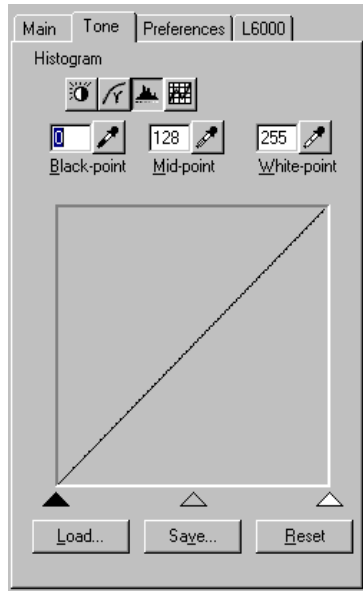

Under the histogram graph, you can slide the black, gray, and white buttons to adjust the tones. However, you cannot edit the histogram directly.

When you adjust the black-point, all tones in the image darker than the selected black-point are adjusted to black.

When you adjust the midpoint, all tones in the image between the black-point and the white-point are adjusted to the selected mid-point.

When you adjust the white-point, all tones in the image lighter than the selected white-point are adjusted to white.

When you find a combination of tone settings you like, you can save the settings in a file and use it in future scanning sessions.

**To adjust the tones using the Histogram tool:**

1. On the Tone tab, click the Histogram tool button.
2. For the black-point, midpoint, or white-point, do one of the following to make a change:
  - Click the appropriately labeled button. Then click on the portion of the image in the preview area that is darkest (for black-point), lightest (for white-point), or in the middle of the tonal range (for midpoint). Try zooming in on the specific part of the image so you can be sure you are selecting the shade you want.
  - In the appropriately labeled box, enter a tone value.
  - Drag the appropriate arrow at the bottom of the histogram to the level you want.

In the preview image, all tones are adjusted accordingly.

3. To reset to the default values, click Reset.

To save these settings to use on similar images, click Save. In the Save As dialog box, specify the file name and location where you want to save the setting, and click Save.

 
## ***Using Tone Curves***

You can use predefined tone curves to automatically correct the most common problems with images: overexposure, underexposure, or too high or too low a contrast.

You can also manipulate a curve in the Special Tone Curve graph to create your own tone curve.

**To correct an image problem with predefined tone curves:**

1. On the Tone tab, click the Special Tone Curves button.

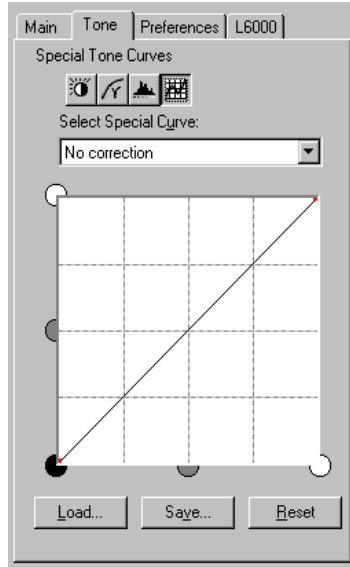

2. To automatically compensate for common problems in an image, select one of the options from the list.

### ***Using a Custom Tone Curve***

 
If you want to experiment with tones, you can create a custom tone curve. An effective way to do this is first to adjust the preview image with an appropriate predefined tone curve, and then edit the results.

Editing a tone curve involves adding handles to an existing tone curve and dragging them to change tonal levels in the image. When you drag a handle to a white area, the shape of the curve changes, and the tones of the preview image are adjusted.

All handles on the tone curve, including the end points, can be dragged anywhere within the tone graph. A handle that is dragged outside the tone graph is deleted; and the tone curve automatically conforms to the remaining points. Except for the end points, all handles can be deleted.

**To create a custom tone curve:**

1. In the Select Special Curve list, select Edit Custom Curve.

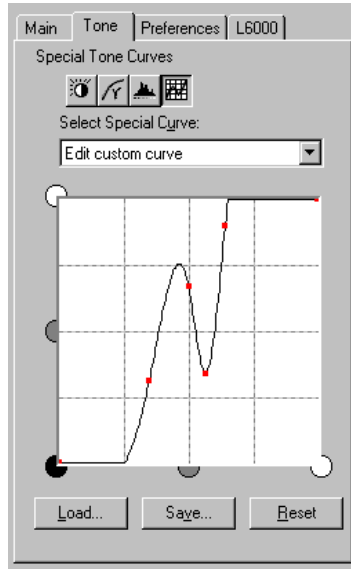

2. To add a handle to the tone curve, click on or near the curve.
3. To move a handle, drag the handle into a white area and release it.
4. To remove a handle, do one of the following:
  - Drag the handle outside the tone graph
  - Right-click your mouse pointer on the handle.
5. To undo all changes that you have made to the curve, click Reset.

To save your custom curve, click Save. In the Save As dialog box, enter a file name and directory, and click Save.

The curve is saved with the filename extension .CRV.

## ***Using a Custom Tone Curve***

Custom tone curve files are saved in the MultiPASS directory. Use the following steps to open a custom tone curve setting that you previously saved.

### **To apply a previously saved curve:**

 
1. On the Tone tab, click the Special Tone Curves button, and then click Load.
2. In the Open dialog box, select the file name you want to load and click Open.

## ***Adjusting Contrast/Brightness for Black and White Scan Mode***


For black and white scans, the contrast and brightness settings are located on the L6000 tab.

Depending on the black and white option you select for your scan, you can adjust the contrast, brightness, or both of your preview image.

If you use halftone as your scan option, you can adjust both the contrast and brightness of the image.

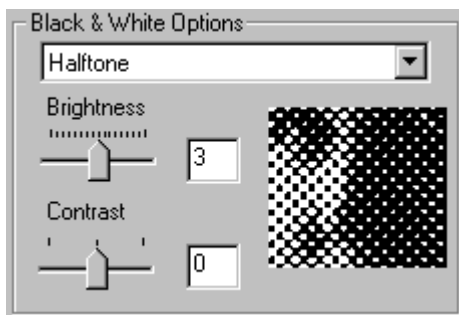

 If you use threshold as your scan option, since it is by definition a high contrast image mode, you can only adjust the brightness of the preview image.

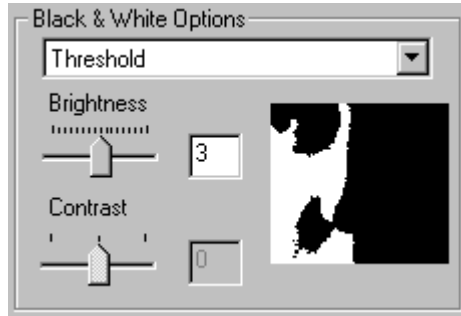

**To adjust the brightness or contrast for a black and white image:**  
On the L6000 tab, under Black and White Options, use the available slider to adjust the brightness or contrast.



**Note**

---

These tone adjustments are only for black and white images. If you select grayscale as your scan mode, you adjust the contrast and brightness of the image only on the Tone tab.

---



# Chapter 7

## Working with Documents in the Desktop Manager

This chapter contains information and instructions for managing, manipulating, and annotating your documents in the Desktop Manager.

- ❑ Managing Your Documents in the Desktop Manager ..... 7-3
  - Selecting Documents in the Desktop Manager ..... 7-3
  - Printing a Document in the Desktop Manager ..... 7-4
  - Creating a Folder ..... 7-5
  - Moving a Document ..... 7-5
  - Copying a Document ..... 7-6
  - Renaming a Document or Folder ..... 7-7
  - Deleting a Document or Folder ..... 7-8
  - Restoring a Deleted Folder or Document ..... 7-9
  - Emptying the Trash Folder ..... 7-9
  - Importing a Document ..... 7-10
  - Exporting a Document ..... 7-10
  - Attaching a Document to Electronic Mail (E-mail) ..... 7-11
  - Manipulating a Document in Document View ..... 7-12
  - Arranging Documents in Document View ..... 7-12
  - Scrolling Through a Multi-page Document ..... 7-12
  - Removing a Page from a Document ..... 7-13
  - Splitting a Document ..... 7-14
  - Merging a Document ..... 7-14
  - Indexing and Searching for Documents ..... 7-15
  - Setting Up the Search Index ..... 7-16
  - Assigning Index Criteria to Documents ..... 7-21
  - Searching Your Documents ..... 7-25
  - Redisplaying the Result of Your Last Search ..... 7-30
- ❑ Modifying a Document ..... 7-30
  - Features of the MultiPASS Viewer Window ..... 7-32
  - Adjusting the Document Image ..... 7-34
  - Making Image Adjustments ..... 7-39
  - Adding Annotations to Your Document ..... 7-54
  - Revising Your Annotations ..... 7-61

- Reverting to the Last Saved Version .....7-63
- Printing the Document .....7-63
- Adjusting the MultiPASS Viewer Default Options .....7-66






# Managing Your Documents in the Desktop Manager

Once you send a PC fax, receive a fax, or scan an image, the resulting document is available in the Desktop Manager. You can perform a variety of tasks with your documents, as described in this chapter.

## Selecting Documents in the Desktop Manager

 
To work with a document, you select it in the open folder, while in either Document View or List View. If you are in Document View, generally you can select one or more documents at a time for whatever task you need to perform.

**To select a document in List View:**  
With the folder open, click the document name in the list.

Type	Name	Pages	Size	Date & Time	Origin
	Scan_1	2 pgs	52 KB	10/16/98 10:09am	Scan_1.tif
	Lettr003	2 pgs	35 KB	10/16/98 10:09am	Lettr003.tif
	Fax_2	2 pgs	59 KB	10/16/98 10:09am	Fax_2.tif
	Fax_1	2 pgs	59 KB	10/16/98 10:09am	Fax_1.tif
	Cust001	2 pgs	59 KB	10/16/98 10:09am	Cust001.tif

**To select a document in Document View:**  
With the folder open, do one of the following:


- ☐ For a single document, click the document thumbnail.
- ☐ For multiple non-sequential documents, hold the Control key while clicking on each document you want to select.

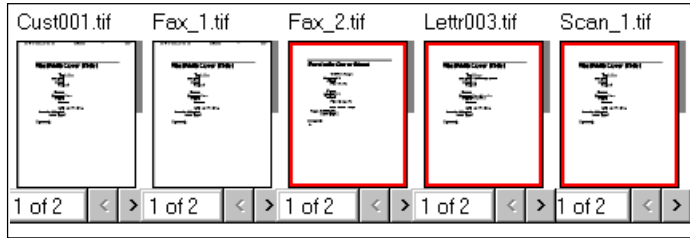

## ***Printing a Document in the Desktop Manager***

You can print a document from any folder in the Desktop Manager.

 1. In either Document View or List View, do one of the following:
  - Click the document you want to print to select it. Then, click Print on the File menu.
  - Drag the document to the Print button on the command bar.

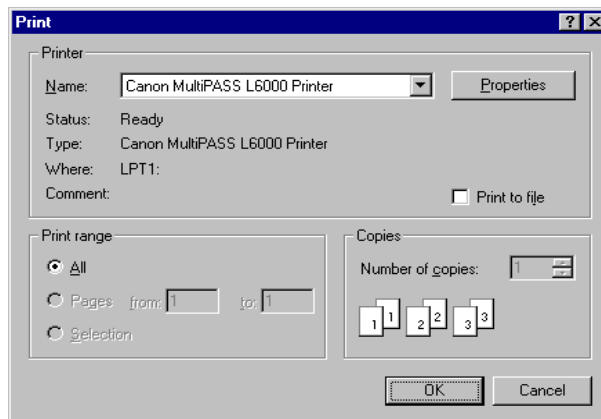


2. In the Print dialog box, specify the print options, and click OK.

## Creating a Folder

 To better organize your documents in the Desktop Manager, you can create additional folders. You create additional folders in the Cabinet. You can also create a folder within previously created folders. When you create a folder, you assign the desired name.

### To create a new folder:

1. In the Desktop Manager, click the Cabinet. If you want to store a folder within a folder, click the applicable folder.
2. Click New Folder on the File menu.

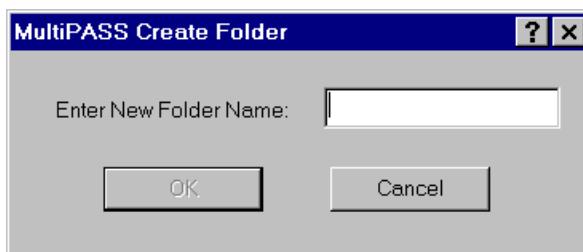

3. In the MultiPASS Create Folder dialog box, type a name for the new folder and click OK.

If you create multiple folders or place folders within folders, you can navigate among your folders and documents just like you do in Windows Explorer. To display the contents of a folder, either double-click it, or click the (+) next to the folder name. To collapse an open folder tree, double-click it, or click the (-) next to the folder name.

## Moving a Document

You can move a document from:

- ☐ A system-defined folder to a user-defined folder
- ☐ A system-defined folder or user-defined folder to the Trash folder

- ❑ One user-defined folder to another user-defined folder.

You cannot move a document into a system-defined folder other than the Trash folder.

**To move a document:**

1. In either Document View or List View, open the folder containing the document you want to move.
2. Drag the document to the desired folder.

In Document View, the document is placed in the first available grid space; in List View, in the appropriate sort order.

## ***Copying a Document***

A document can be copied within the same user-defined folder, or from one folder to a different (user-defined) folder. When you copy a document within the same folder, the copy is assigned the same name as the original document, with an added unique number. For example, if you copy a document called Document, the new copy will be named Document (1).

**To copy a document within the same user-defined folder:**

1. Open the folder with the document you want to copy.
2. Select the document, and then click Duplicate on the Edit menu or toolbar.

**To copy a document from one folder to another:**

1. Open the folder with the document you want to copy.
2. Drag the document, while holding down the Control key, to the desired folder.

## ***Renaming a Document or Folder***

 
You can rename a user-defined folder or a document at any time. Folder names must be unique within the Desktop Manager. Document names must be unique within a folder. You cannot rename a system-defined folder.

Whenever you attempt to rename a folder or document, the system verifies whether the new name is unique. In the event of a conflict, the system alerts you of the conflict. A folder or document name can contain blank spaces.

### **To rename a document:**

Do one of the following:

- ☐ Select the document. Then click Rename on the File menu. In the Rename dialog box, type the new name and click OK.

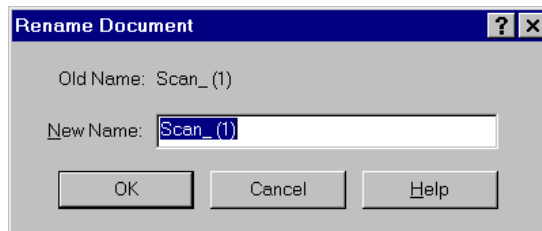

- ☐ In Document View, click the document thumbnail. Then click the document name to position the insertion point. Using the Backspace and Delete keys, edit the name of the document as desired.

### **To rename a folder:**

Do one of the following:

- ☐ Click the folder. Then, on the File menu, click Rename. In the Rename dialog box, enter the new name and click OK.
- ☐ Click the folder name. Enter the new name in the highlighted rectangle.

## ***Deleting a Document or Folder***

You can delete a document or user-defined folder when it is no longer needed.

When you delete a document or folder, it moves to the Trash folder. To permanently delete a document, you must empty the Trash folder.

### **To delete a document:**

Open the folder with the document or folder you want to delete and click the document. Then do one of the following:

- ☐ Click Delete on the Edit menu.
- ☐ Press the Delete key.

When the confirmation message displays, click Yes. The document is moved into the Trash folder.

### **To delete a folder:**

Click the folder you want to delete. Then do one of the following:

- ☐ Click Delete on the Edit menu.
- ☐ Press the Delete key.

When the confirmation message displays, click Yes.



#### **Note**

---

If the folder you are deleting contains documents, both the documents and the folder are deleted. The deleted folder and contents are moved into the Trash folder.

---



## ***Restoring a Deleted Folder or Document***

If a folder or document is in the Trash folder, you can restore it. If the location where you want to restore the folder or document already contains an item of the same name, the item that you are restoring from the Trash folder is assigned a new name. Folders and documents that have been deleted from the Trash Folder cannot be restored.

### **To restore a deleted folder or document:**

1. In the Desktop Manager, click the Trash Folder.
2. In the Trash Folder, do one of the following:
  - For a folder, drag the folder to the Cabinet or to another folder within the Cabinet.
  - For a document, drag the document you want to restore into the desired folder in the Cabinet.

## ***Emptying the Trash Folder***

Documents remain in the Trash folder until you move them to a user-defined folder, delete them individually, or empty the Trash folder and delete all documents in the folder.

To prevent out-of-date documents from unnecessarily taking up space on your hard disk, you should periodically review the Trash folder and remove the documents no longer needed.

### **To empty the Trash folder:**

Click Empty Trash on the File menu, or click the right mouse button on the Trash folder and click Empty Trash. If prompted, confirm that you want to empty the Trash folder.

 
Once emptied, all documents are permanently removed from the Desktop Manager (and your hard disk).

## ***Importing a Document***

If you have a document residing on a disk, you can import it into a user-defined folder using the Desktop Manager. You can import a document saved in any of the following formats: TIFF, BMP, FPX, JPG or PCX.

### **To import a document:**

1. Open the user-defined folder into which you want to import a document.
2. Click Import on the File menu.

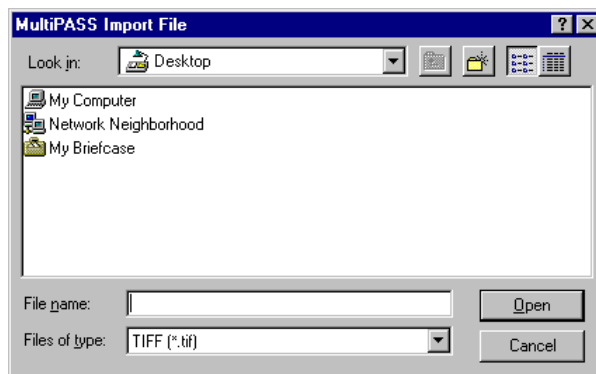

3. In the Import File dialog box, specify the drive, directory, and name of the file you want to import, and click Open.


## ***Exporting a Document***

 You can export a document from the Desktop Manager, saving it to any specified drive and directory. When you export a document, you are actually saving a copy of the original document. Documents can be exported as a TIFF, BMP, FPX, PCX or JPEG file.

If you export a multiple page document, each page must be exported as a separate document.

**To export a document:**

1. Open the folder with the document you want to export.
2. Select the document you want to export, and then click Export on the File menu or drag your document to the Export button on the command bar.

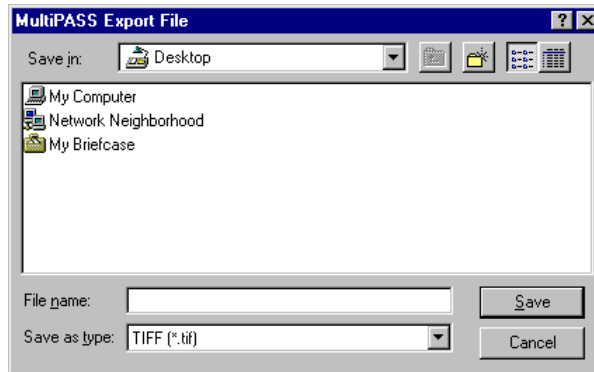

3. In the Export File dialog box, specify the drive and directory where you want to place the exported file, and click Save.

## ***Attaching a Document to Electronic Mail (E-mail)***

If you have a Messaging Application Program Interface (MAPI) - compliant e-mail application (such as Microsoft Exchange, Microsoft Outlook, Microsoft Outlook Express, and Netscape Mail) installed on your system, you can attach a document in the Desktop Manager to an e-mail message. The Desktop Manager opens your e-mail application, and attaches the selected document to a blank e-mail message. You cannot, however, open your e-mail application from the Desktop Manager if you do not plan on attaching a document.

Your e-mail application must be set as the system default MAPI client. For details, see your e-mail application documentation.

**To attach a document to an e-mail message:**

Select the document you want to attach and drag it to the Email button on the command bar. Or click Send Email on the File menu.

Your e-mail application opens, and the document appears as an icon in the body of the e-mail screen.

## ***Manipulating a Document in Document View***

If you are working in Document View with a document in the Scan or any user-defined folder, you can manipulate your documents in a variety of ways. For example, you can arrange documents within a single folder in a preferred order, remove a page from a document, split a single document, or merge one document with another.

## ***Arranging Documents in Document View***

A document thumbnail in Document View retains its position until you rearrange it. You can arrange one or more documents manually or automatically.

When you arrange documents automatically, they are positioned within a grid, with row positions filling from left to right.

**To arrange documents manually:**

With the desired folder open, select the document you want to move and drag it to the desired location within the work area.

**To arrange documents automatically:**

With the desired folder open, click Arrange on the View menu or toolbar.

## ***Scrolling Through a Multi-page Document***

 
You can scroll through a multiple-page document to position yourself at the page you want to remove or where you want to split the document.

As you scroll through pages in the document, the current page number updates instantly. After scrolling, the top page is retained even if the folder is closed and reopened.

**To scroll through pages in a document:**

For the selected document, do one of the following:

- ☐ Click the left and right scroll arrows displayed with the page numbers for the document.
- ☐ Drag the scroll tab on the right side of the document.

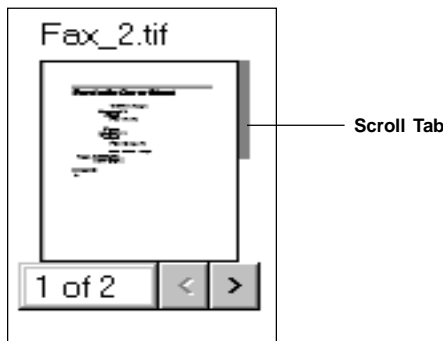

## ***Removing a Page from a Document***

You can remove the current top page of a document. For example, you may want to remove the cover page from a received fax.

1. Scroll through the document until the page you want to remove is on top.
2. Click Remove Page on the Edit menu or toolbar.

 
## Splitting a Document

You can split a document into two documents from any page *after* the first page. In other words, you cannot split a document on page 1. For example, you split a 10-page document, beginning at page 5. The original document consists of pages 1 through 4. The newly created document consists of pages 5 through 10.

The original document — consisting of at least the first page, up to the page where the split occurred — retains the original name. The newly created document is assigned a new unique name, which can be changed as desired.

### To split a document:

1. Scroll through to the page where you want to split the document. The top page represents the first page for the newly created document.
2. Click Split on the Edit menu or toolbar.

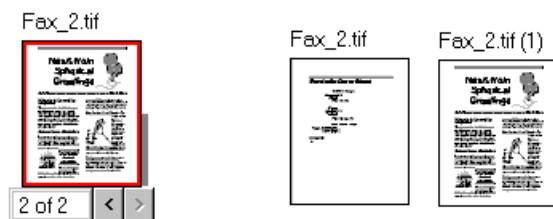

## Merging a Document

You can merge two documents to combine them into a single document. The documents are merged in the order you select them. In other words, the first document selected becomes the top pages of the second document selected. Both documents are merged into the second document.

### To merge two or more documents:

Do one of the following:

- ❑ Drag a document on top of another document. The document that you dragged is merged with the document that you dropped it into.
- ❑ Select two or more documents that you want to merge (hold down the Control key while selecting the documents). Then click Merge on the Edit menu or toolbar.

## ***Indexing and Searching for Documents***

The Desktop Manager stores key information about each document it receives in an internal document management database. This database enables you to locate documents based on certain search criteria.

The Desktop Manager enables you to search for documents:

- ❑ Automatically by date and time.
- ❑ By document text and the text contained within the document if you enabled the Automatic Indexing option in the System Setup dialog box. (For details, refer to the “Setting Up System Options” section of chapter 8, “MultiPASS Printer Setup and Other Utilities in the Desktop Manager.”)
- ❑ By creator, owner, or keyword for a document, if you first define the criteria and assign it to the desired documents.

Based on the search criteria you want to use, follow these general guidelines for searching your documents.

### **If you want to search documents by date and time, and text:**

Simply run the document search, specifying the search criteria. You do not need to define a search index for your documents first. For details about running the search, see the “Searching Your Documents” section later in this chapter.

### **If you want to search documents by creator, owner, or keyword:**

1. In the Desktop Manager, set up the search index by defining the document creator, owner, and/or keyword. For details, see the “Setting Up the Search Index” section later in this chapter.

2. Assign the index criteria to your documents. For details, see the “Setting Up the Search Index” section later in this chapter.
3. Run the search for documents based on the desired criteria. For details about running the search, see the “Searching Your Documents” section later in this chapter.

## ***Setting Up the Search Index***

If you want to search your documents by a creator, owner, or keyword, you must first create a search index.

 
### ***Setting Up a Creator to the Index***

You can set up creators in your search index that correspond to the persons or companies that send you documents in the Desktop Manager, such as faxes. After assigning the appropriate creator to each document, you can then search your documents for those from the specified creator.

#### **To set up a document creator to the index:**

1. In the Desktop Manager, point to Index By on the Tools menu, and then click Creators.



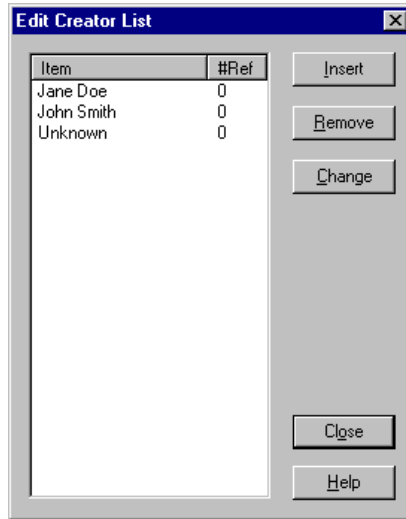

2. In the Edit Creator List dialog box, click Insert.
3. Type the creator name you want to add to the index and press Enter.
4. Repeat steps 2 and 3 for each creator you want to add.
5. Click Close to close the Edit Creator List dialog box and save your index entries.

**To change a creator:**

In the Edit Creator List dialog box, select the creator you want to change and click Change. Edit the creator as desired and press Enter.

**To remove a creator:**

 
In the Edit Creator List dialog box, select the creator you want to remove and then click Remove. When the confirmation message appears, click Yes.

## ***Setting Up an Owner to the Index***

You can set up owners in your search index that correspond to the people in your office that receive documents in the Desktop Manager, such as faxes. After assigning the appropriate owner to each document, you can then search your documents for those belonging to the specified owner.

### **To set up a document owner to the index:**

1. In the Desktop Manager, point to Index By on the Tools menu, and then click Owner.

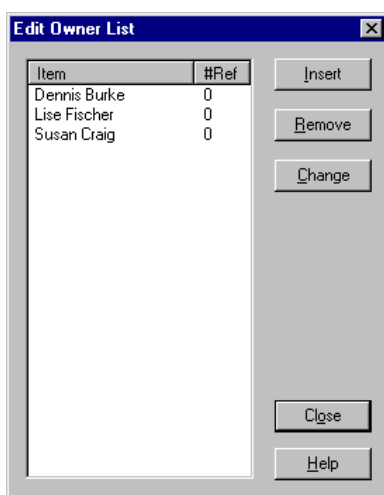

2. In the Edit Owner List dialog box, click Insert.
3. Type the name of the owner and then press Enter.
4. Repeat steps 2 and 3 for each owner you want to add.

5. Click Close to close the Edit Owner List dialog box and save your index entries.

**To change an owner:**

In the Edit Owner List dialog box, select the owner you want to change and click Change. Edit the owner as desired and press Enter.

**To remove an owner:**

In the Edit Owner List dialog box, select the owner you want to remove and then click Remove. When the confirmation message appears, click Yes.

 
## ***Setting Up Keywords to the Index***

You can set up keywords in your search index that correspond to important ideas or subjects in the documents you receive in the Desktop Manager, such as faxes.

For example, you may want to set up keywords for special projects or contacts you are negotiating. After assigning the appropriate keywords to each document, you can search your documents for those containing the specified keywords.

**To set up a document keyword to the index:**

1. In the Desktop Manager, point to Index By on the Tools menu, and click Keywords. Or click Edit Keywords on the toolbar.

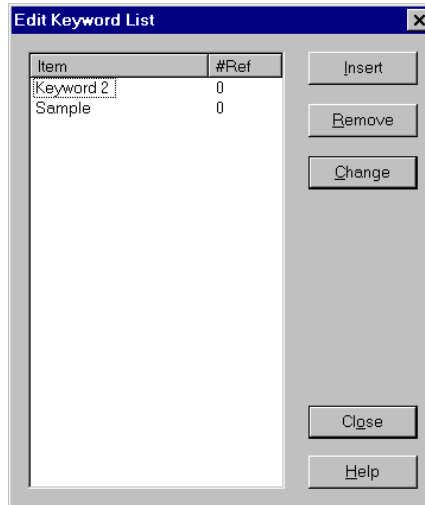

2. In the Edit Keyword List dialog box, click Insert.
3. Type the keyword you want to add and then press Enter.
4. Repeat steps 2 and 3 for each keyword you want to add.
5. Click close to save your entries and close the dialog box.

**To change a keyword:**

In the Edit Keyword List dialog box, select the keyword you want to change and click Change. Edit the keyword as desired and then press Enter.

**To remove a keyword:**

 
In the Edit Keyword List dialog box, select the keyword you want to remove, and then click Remove. When the confirmation message appears, click Yes.

## Assigning Index Criteria to Documents

After adding keywords, creators, and owners to the index, you need to assign them to your documents.

### To assign index criteria to a document:

1. In the Desktop Manager, select the document to which you want to assign index criteria.
2. Click Manual Index on the Tools menu or toolbar.

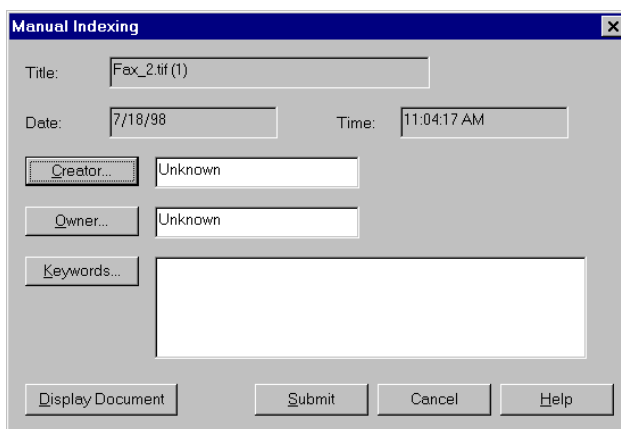


3. In the Manual Indexing dialog box, assign the creator, owner, or keyword to your document based on the instructions in the following sections.
4. Click Submit to save your index assignments.

Click Cancel to close the dialog box without saving your index assignments.

### To assign a creator index entry:

 1. In the Manual Indexing dialog box, click Creator.

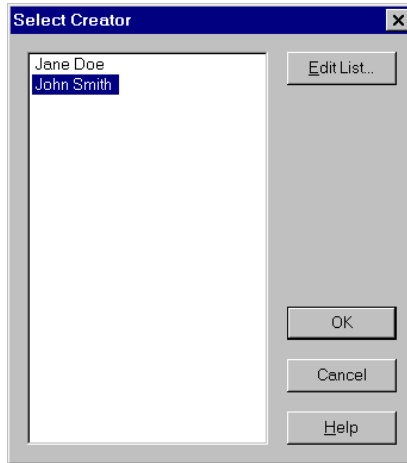


2. In the Select Creator dialog box, select the creator you want to assign to the document.

To edit the Creator list, click Edit List. For procedures, see the “Setting Up a Creator to the Index” section in this chapter.

3. After assigning a creator, click OK.

**To assign an owner index entry:**

 1. In the Manual Indexing dialog box, click Owner.

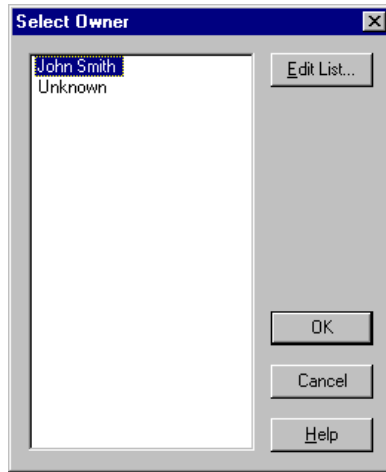


2. In the Select Owner dialog box, select the owner you want to assign to the document.

To edit the Owner list, click Edit List. For procedures, see the “Setting Up an Owner to the Index” section in this chapter.

3. After assigning an owner, click OK.

**To assign a keyword index entry:**

 1. In the Manual Indexing dialog box, click Keywords.

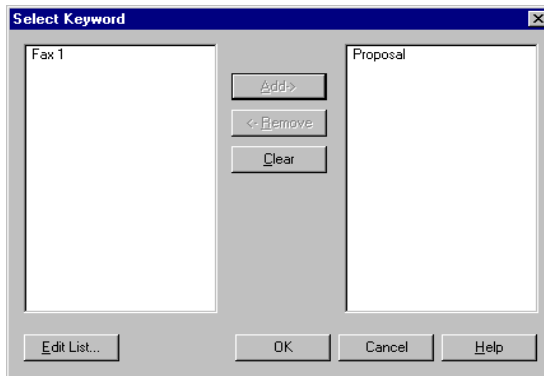

2. In the Select Keyword dialog box, select a keyword in the list on the left that you want to assign to the document, and then click Add.
3. Repeat step 2 for each keyword you want to assign.

To remove a keyword, select it in the list on the right and click Remove.

To remove all keywords, click Clear.

4. After assigning the keywords, click OK.

## ***Displaying the Document***

If you want to view the document, you can do so while assigning the search criteria. Viewing at this point enables you to check whether you are assigning the search criteria to the right document.

### **To view the document:**

In the Manual Indexing dialog box, click Display Document.

The document appears in the MultiPASS Viewer. For details, see the “Modifying a Document” section later in this chapter.

### **To return to the Manual Indexing dialog box:**

In the MultiPASS Viewer, click Exit on the File menu.



## Searching Your Documents

You can search for a document by date and time, and the text within a document. If you created the appropriate search index and assigned the search criteria to your document, you can search by creator, owner, and keyword.

When you run the search, you determine which documents you want to search:

- ☐ All the documents in the Desktop Manager
- ☐ Only the documents found from a previous search
- ☐ Only the documents you select before you begin the search.

The search is performed on all the folders in the Desktop Manager (system- as well as user-defined folders).

 
The following procedures summarize how to search for documents in the Desktop Manager.

**To search for a document:**

1. In the Desktop Manager, if you want to search only specific documents, select the documents in the desired folder.

Otherwise, proceed to step 2.

2. Click Search on the Tools menu or toolbar.

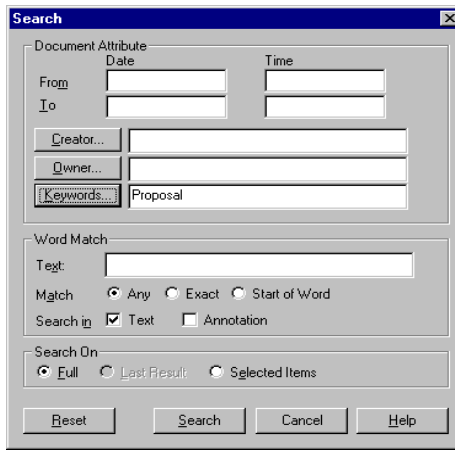

3. In the Search dialog box, specify your search criteria.

Select the Search On criteria (the documents on which you want to search). If you intend to search only selected documents, you must select the appropriate documents before you begin the search. See step 1.

4. Click Search if you are satisfied with the criteria you specified and want to begin your search.

Click Reset to clear the dialog box of any previously entered criteria and reenter criteria.

5. In the Search Results dialog box, review the result of the search.

Any documents which match the specified search criteria are included in the result list.

## ***Specifying Search Criteria***

To search for a document, you must specify the criteria by which you want the Desktop Manager to use to locate a document.

**To search documents by date and time:**

In the Search dialog box, in the From and To boxes, enter the desired dates and time.

**To search documents by creator:**

1. In the Search dialog box, click Creator.
2. In the Select Creator dialog box, select the Creator by which you want to search, and then click Add.
  - To remove a selected creator, select it in the assigned list and click Remove.
  - To remove all selected creators, click Clear.
  - To change the list of creators, click the Edit List. For details, see the “Setting Up a Creator to the Index” section in this chapter.
3. After completing your selections, click OK.

**To search documents by owner:**

1. In the Search dialog box, click Owner.
2. In the Select Owner dialog box, select the Owners by which you want to search, and then click Add.
  - To remove a selected owner, select it in the assigned list and click Remove.
  - To remove all selected owners, click Clear.
  - To change the list of owners, click the Edit List. For details, see the “Setting Up an Owner to the Index” section in this chapter.
3. After completing your selections, click OK.

**To search documents by keyword:**

1. In the Search dialog box, click Keywords.

2. In the Select Keywords dialog box, select each Keyword by which you want to search, and then click Add.
  - To remove a selected keyword, select it in the assigned list and click Remove.
  - To remove all selected keywords, click Clear.
  - To change the list of keywords, click Edit List. For details, see the “Setting Up Keywords to the Index” section in this chapter.
3. After completing your selections, click OK.

**To search documents by text string:**

1. In the Search dialog box, in the Text box, type the text by which you want to search.
2. Select the type of text match you prefer:
  - Any  
Look for the specified text in any part of a word
  - Exact  
Look for exact text matches only
  - Start of Word  
Look for the specified text in the start of a word only.
3. Select where within the document the Desktop Manager should search for a text match:
  - Text  
Search on text within the body of a document
  - Annotation  
Search on annotations you may have added to the documents in the Desktop Manager.

## ***Specifying Which Documents to Search***

 
You can specify to search on the following documents:

- ☐ **Full**  
Search all your documents within the Desktop Manager
- ☐ **Last Results**  
Search only the results of the last search you made
- ☐ **Selected Items**  
Search only those documents that are selected before you begin the search.

## ***Reviewing the Results of Your Search***

The results of your search appear as a list of documents that match the search criteria.

This list displays the document name and the folder in which the document can be found. The list also shows how closely the document matches the criteria (the match level or hit rate), expressed as a percentage.

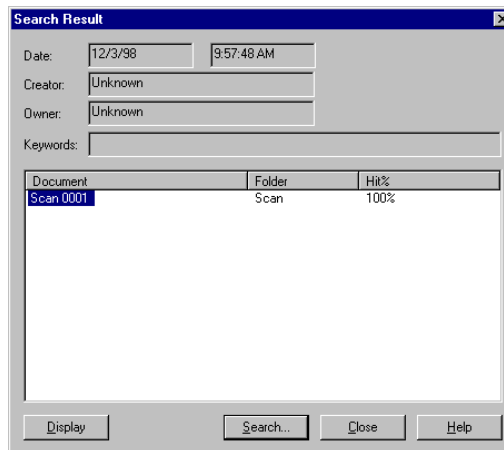

**To display a document:**

Do one of the following:

- ☐ Select the document in the list, and click Display.
- ☐ Double-click the document name.

**To run a new search:**

Click Search.

**To close the Search Results:**

Click Close.

## ***Redisplaying the Result of Your Last Search***

 
The Desktop Manager saves the result of your last search. When necessary, you can redisplay the result.

**To redisplay the result of the last search:**

Click Show Results on the Tools menu or toolbar.

## ***Modifying a Document***

You can open a document to view its contents, and then annotate it with notes, highlighting, stamps, sticky notes, or graphics (line / arrow, rectangle, circle). Although you can save the document with the annotations, they are only added markings placed on the original document, not an integral part. The original contents of the document remains intact. If you select to fax or print the modified document, you have the option not to include the annotations with the document.

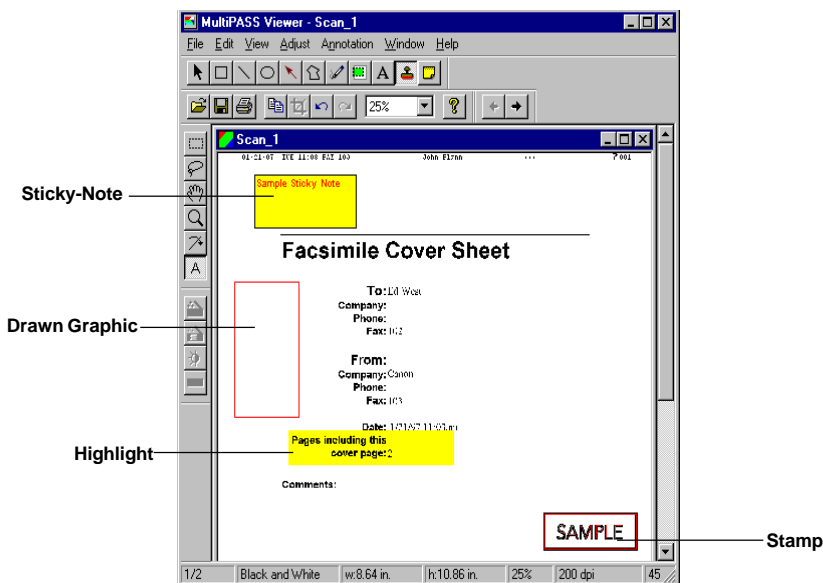

When you open a document for annotation, the document appears in the MultiPASS Viewer.

The following instructions summarize the procedures for annotating a document. For additional information, refer to later sections in this chapter.

### To open a document in the MultiPASS Viewer:

In the Desktop Manager, do one of the following:

- ☐ Double-click the document.
- ☐ Select the document you want to open, and then click Open Document on the File menu.
- ☐ Drag the document to the Open Document button on the command bar.

**To annotate a document:**

 
1. With the document open in the MultiPASS Viewer, adjust the size of your view of the document as needed.
2. Insert the desired annotations.
3. Click Save on the File menu to save the annotations with your document in the Desktop Manager.

**To close the MultiPASS Viewer:**

Click Exit on the File menu. If you neglected to save your annotations, you are prompted to do so before the program closes.

## ***Features of the MultiPASS Viewer Window***

This section provides an overview on the basics of working with the MultiPASS Viewer window. Detailed instructions for using the various commands and components of the screen are provided in later sections of this chapter.

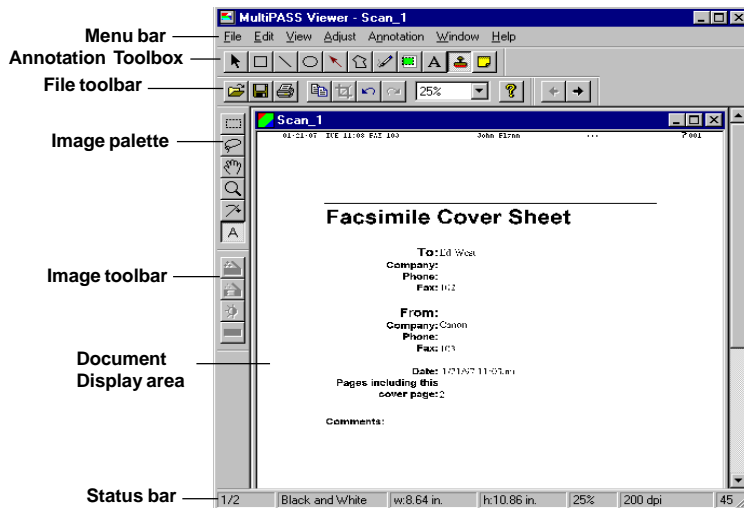




## ❑ Menu Bar

The menu bar contains commands that enable you to perform various tasks with your document. Some of the commands can also be accessed by their corresponding buttons on the toolbar.

Some of the menu commands are also available on shortcut menus, which are displayed by clicking the right mouse button in the MultiPASS Viewer window.


## ❑ File Toolbar

 The File toolbar provides you quick access to commands needed to open, save, copy, print, and zoom a document.

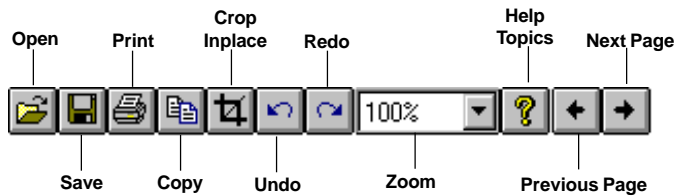


## ❑ Image Palette

 The Image palette provides you quick access to commands needed to select, move, zoom, or annotate a document.

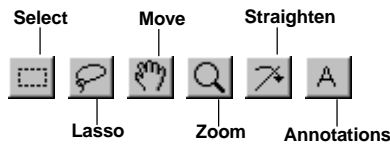


## ❑ Image Toolbar

 The Image toolbar provides quick access to commands needed to make various adjustments to an image.

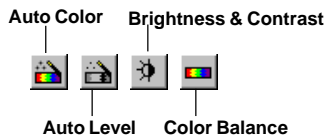

❑ **Annotation Toolbox**

 The Annotation toolbox enables you to add text and graphics to your document. Annotations are integral elements of the document. Unless you select to “hide them,” they are sent with the document, and can be printed, edited, and saved.

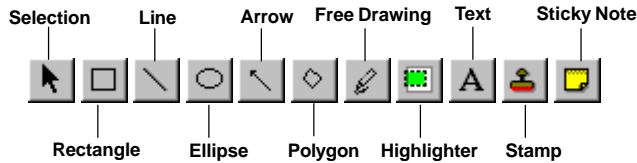

❑ **Document Display Area**

The document itself is displayed and modified in the Document Display Area. You can page or scroll through the document, enlarge or reduce the view of the document, or change the orientation. The display area also contains the results of any annotations you may make.

❑ **Status Bar**

The status bar appears at the bottom of the window. It contains useful information about the document that you are currently viewing.

## ***Adjusting the Document Image***

With different tools in the MultiPASS Viewer, you can adjust the size and image type of your document and the manner in which it appears.

 
### ***Adjusting the Size of a Document***

Adjusting the size of a document can be useful in planning other tasks. For example, if a document consists solely of a large graphic, you may want to reduce its size so that it can be used later in creating a background for a cover page.

Changing the size of a document involves changing the number of pixels used to represent it. Such a change permanently alters the document file.

**To adjust the size of a document:**

1. Click Image Size on the Adjust menu.

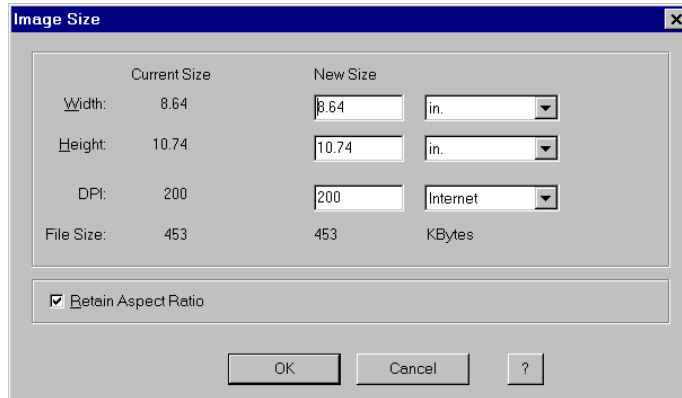

2. In the Image Size dialog box, enter the dimensions of the newly sized document.
3. Click OK. The document file is resized.

***Adjusting the Image Type***

You can adjust the type of image for the document display.

**To adjust the image type:**

1. Click Image Type on the Adjust menu.
2. Select one of the following image types:
  - **True Color**  
True Color images contain 8 bits per pixel for red, green, and blue channels. Each pixel contains 24 bits.
  - **Grayscale**  
Grayscale images contain 8 bits per pixel.

- **Black and White**

Select one of the following:

Binary images are one bit per pixel.

Half Tone simulates the tonal range of an image with a precise pattern of lines and dots.

Text enhanced images are grayscale images (8 bits per pixel) converted to binary images (1 bit per pixel) using Canon ImageTrust technology.

## ***Adjusting Your View of a Document***

In annotating a document, you may need to adjust your view of it. Among the ways you can adjust the view of an open document is hiding or showing the different components of the MultiPASS Viewer.

### **To show/hide the components of the window:**

1. On the View menu, point to Toolbars. The options displayed with check marks beside them are currently displayed in the MultiPASS Viewer.
2. Click the option that you want to show (check mark displays) or hide (no check mark displays).

## ***Adjusting the Orientation of the Document Display***

When creating or editing a document, you may want to adjust your view of the document display. You can rotate the base page clockwise by selected increments. You can also flip the document display vertically (flipping the document elements from top to bottom or vice versa) or horizontally (flipping the document from left and right).

### **To rotate the document:**

On the Edit menu, point to Rotate, and then select 90, 180 (flipping the document upside down), or 270.

### **To flip the document display:**

 
On the Edit menu, point to Flip. Then click Horizontal or Vertical.

## ***Straightening a Document Display***

You may need to straighten the document base image before you begin adding text or graphics to it. For example, you may have received a fax that was not perfectly straight.

### **To straighten a document:**

1. On the Image toolbar, click the Straighten button.

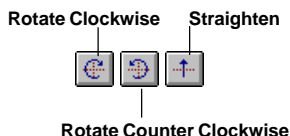

2. On the Straighten toolbar, click the Rotate Clockwise or Rotate Counterclockwise button. to rotate the crosshairs until it aligns with the document image.
3. Click the Straighten button to have the system adjust the document image to its properly aligned position.

## ***Adjusting the Display Size***

The MultiPASS Viewer provides you with different levels of magnification allowing you to work at the most comfortable size. You can zoom in and out at predefined increments, or specify a particular size or scale. You can also use adjust the document image size so that the entire document is visible within the window.

### **To zoom in or zoom out on the document:**

Do one of the following:

- ☐ On the View menu, point to Zoom, and then select the desired level of magnification.
- ☐ On the File toolbar, select the desired level of magnification in the list.

- ❑ On the Image toolbar, click the Zoom tool, and then:
  - To increase magnification, click the document
  - To decrease magnification, hold down the Alt key, and click the document.

 
**To fit the document to the display window:**  
Click Fit Image to Window on the View menu.

## ***Scrolling Through a Zoomed Document***

If you need to work on particular aspects of a document (for example, modifying a recurring graphic), you can scroll through the document while maintaining a high level of magnification.

**To scroll through a zoomed document:**

1. On the View menu, click Show Navigator. The Navigator window opens in the right corner of the screen. Inside the Navigator, a white rectangle indicates the area of your document that is currently in view.

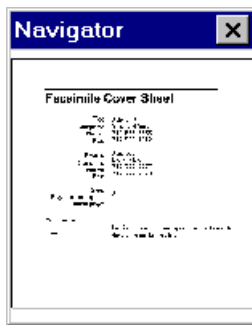

2. On the Image toolbar, click Move.
3. While tracking your position in the Navigator window, drag the image to bring the desired area of the document into view.

## ***Selecting an Area of a Document***

When editing the base image of a document, you may need to select the specific area that you want to edit.

### **To select an area of a document:**

1. On the Image toolbar:
  - Click the Select tool for areas that fit easily inside a square or rectangle.
  - Click the Lasso tool for irregularly shaped areas.
2. Drag the cursor to draw the appropriately shaped outline for the area you want to select.

## ***Cropping a Document***

You can crop a document to any size that you select.

### **To crop a document:**

1. Select the area of the document to which you want the entire page to conform.
2. Click Crop Inplace on the Edit menu or toolbar.

## ***Making Image Adjustments***

Adjustment features allow you to make adjustments to the image including contrast, brightness, sharpness, and cleanup. You can produce a wide range of visual changes in your image.

Image adjustment options are only available when you select True Color or Grayscale as your image type.

## ***Adjusting Color and Color Level Automatically***

You can have the system automatically adjust the color and color level by using the Auto Level and Auto Color options. These options adjust the image color and color level for best viewing with your computer monitor or other output device.

### **To adjust the color level automatically:**

Click Auto Level on the Adjust menu to adjust the color level of your image.

### **To adjust the color automatically:**

Click Auto Color on the Adjust menu to adjust the color of your image.

 
## ***Adjusting Brightness and Contrast***

You can adjust the brightness and contrast of a color or grayscale image.

### **To adjust the brightness and contrast using variations:**

1. Select the image or a portion of the image.
2. On the Adjust menu, click Brightness and Contrast.



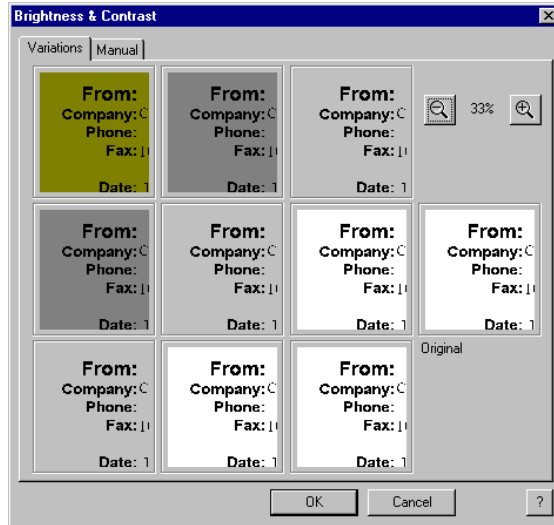

The Brightness and Contrast dialog box displays a thumbnail of the original image and presents nine suggested variations with modified brightness and contrast.

3. On the Variations tab, click one of the thumbnails that displays modified images.


Additional suggested thumbnails, with modifications similar to your previous selection, appear.

4. Continue clicking the suggested variations until the image appears as you want it.
5. Click OK to apply the changes to the image. Click Cancel to abandon the changes.

**To adjust the brightness and contrast manually:**

 1. Select the image or a portion of the image.
2. On the Adjust menu, click Brightness and Contrast.

3. In the Brightness and Contrast dialog box, click the Manual tab.

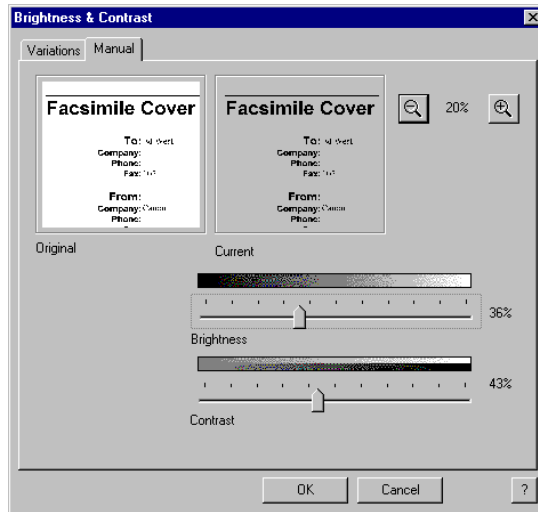

The original image appears on the left of the dialog box. As you modify the image, you can see the results in the image on the right.


4. Adjust the Brightness slider to the left to make the image darker, to the right to make the image brighter.
5. Adjust the Contrast slider to the left to decrease contrast, to the right to increase contrast.
6. When the Current image appears as you want it, click OK to accept the changes. Click Cancel to abandon the changes.

## Adjusting the Color Balance

 You can adjust the color components of an image by changing the level of red, green, and blue colors that make up the shades in your image.

**To adjust the color balance using variations:**

1. Select the image or a portion of the image.
2. On the Adjust menu, click Color Balance.

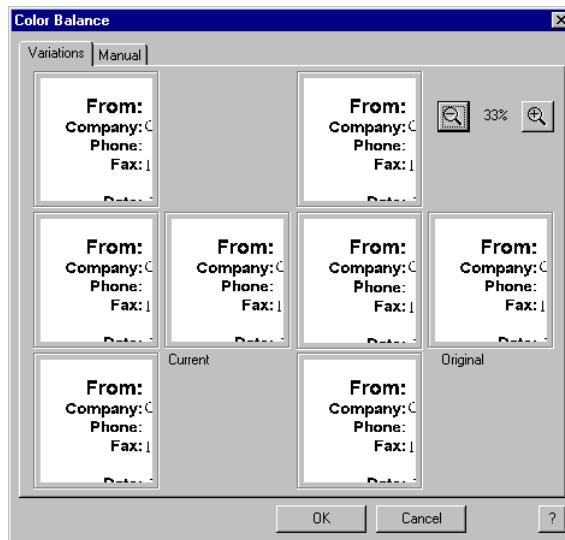

3. In the Color Balance dialog box, on the Color Balance Variations tab, click one of the thumbnails that displays modified images.


Additional suggested thumbnails, with modifications similar to your previous selection, appear.

4. Continue clicking the suggested variations until the image appears as you want it.

5. Click OK to apply the changes to the image. Click Cancel to abandon the changes.

**To adjust the color balance manually:**

 1. Select the image or a portion of the image.
2. On the Adjust menu, click Color Balance.
3. In the Color Balance dialog box, click the Manual tab.

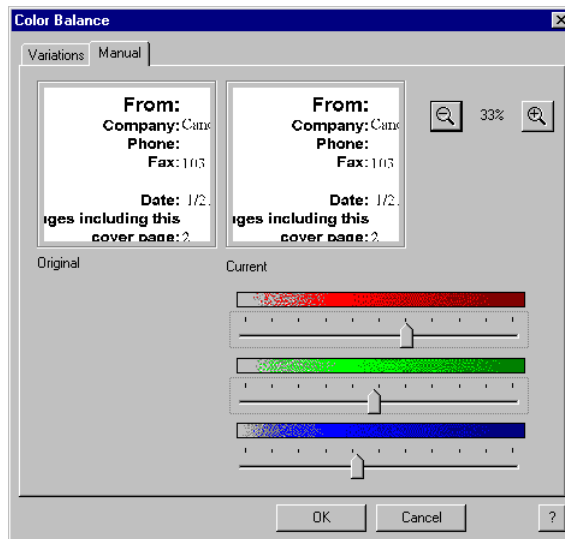

4. Adjust the Red, Green, and Blue sliders to the left for less color, to the right for more color.

As you modify the image, you can see the results in the image on the right.


5. When the Current image appears as you want it, click OK to accept the changes. Click Cancel to abandon the changes.

## Setting the Black Point and White Point

 If you are not satisfied with the results of the Auto Level or Brightness & Contrast features, you may want to first manually define the contrast range of the image by setting the image highlight and shadow points, or the black point and white point. With this method, you specify what you consider to be the important highlight and shadow details. You can select the darkest point and the lightest point to more effectively adjust the image contrast with Auto Level or the Brightness & Contrast features. When adjusting the image level, these points define the lightest and darkest points of the range when you adjust the image contrast.

### To set the black point and white point:

1. Select the image or an image portion.
2. On the Adjust menu, click Black Point/White Point.
3. In the Black Point/White Point dialog box, click Black Point.

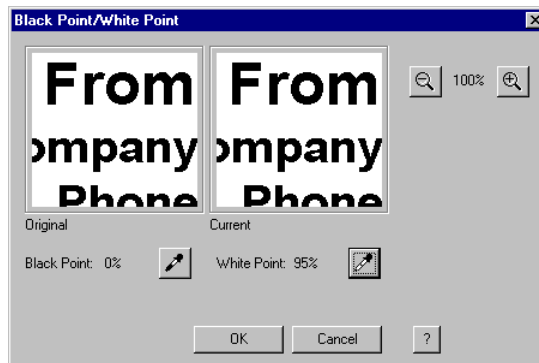


4. Move the cursor over the Original thumbnail. As you move the cursor over the image, the black value, expressed as a percentage of the current pixel, appears to the left of the Black Point button.
5. Move the dropper over the image until you find the blackest point. This point will have the value closest to 0%. Click the pixel.
6. Click White Point.

7. Move the cursor over the Original thumbnail. As you move the cursor over the image, the white value, expressed as a percentage of the current pixel, appears to the left of the White Point button.
8. Move the dropper over the image until you find the whitest point. This is the point with the value closest to 100%. Click the pixel.
9. Click OK.

## ***Blurring an Image***

You can blur the image to soften the edges and fields of a grainy color or grayscale image. Blur averages the color values of adjacent pixels, removing peaks, to make the image smoother.

 1. Select the image or an image portion.
2. On the Adjust menu, click Blur.

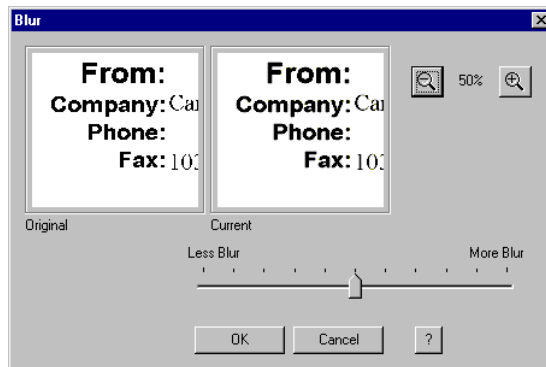

3. In the Blur dialog box, move the Blur slider to the left for less blur, to the right for more blur.


As you move the slider, the adjustments appear in the Current thumbnail.

4. Click OK to accept the changes. Click Cancel to abandon the changes.

## Sharpening an Image

You can sharpen an image to increase the difference between color values of adjacent pixels, sharpening the appearance of a color or grayscale image.

 1. Select the image or an image portion.
2. On the Adjust menu, click Sharpen.

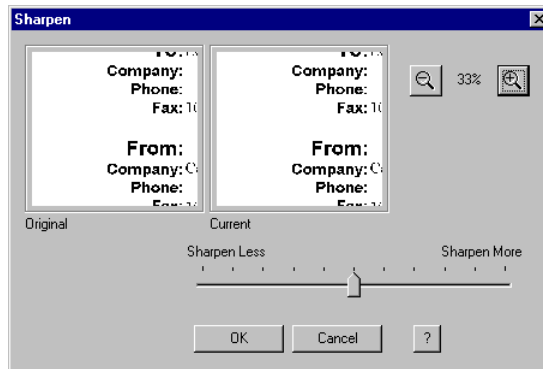

3. In the Sharpen dialog box, move the Sharpen slider to the left to sharpen less, to the right to sharpen more.


As you move the slider, the adjustments appear in the Current thumbnail.

4. Click OK to accept the changes. Click Cancel to abandon the changes.

## Removing Noise

 You can remove noise or distortions, from the image. The Remove Noise filter averages the color values of adjacent pixels.

1. On the Adjust menu, point to Advanced, and then click Remove Noise.

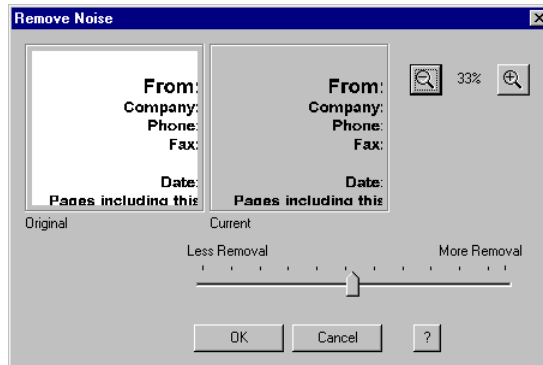

2. Drag the Removal slider to the left to remove less noise, to the right to remove more noise.

As you drag the Removal slider, your changes appear in the Current thumbnail. You can compare the changes to the Original thumbnail.

3. Click OK to accept your changes. Click Cancel to leave the image unchanged.


## ***Removing Moiré Patterns***

 You can remove moiré patterns from an image. Because moiré patterns are caused by the intersection of lines in two directions, removing the pattern requires the following procedure to be performed twice, resetting the angle option for each set of intersecting lines.

### **To remove moiré patterns:**

1. Select the image area where the pattern occurs.
2. On the adjust menu, point to Advanced, and then click Remove Moiré.



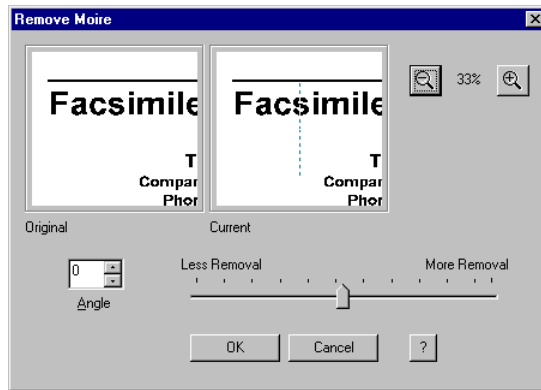

3. In the Angle box, enter the angle of the moiré lines to be removed.
4. Drag the Remove Moiré slider to the left to remove less, to the right to remove more.

As you make changes to the image, your changes appear in the current thumbnail. You can compare the changes to the Original thumbnail.


To better see your changes, you can use the zoom buttons to magnify the thumbnails.

5. Click OK to accept your changes. Click Cancel to leave the image unchanged.

## ***Removing JPEG Artifacts***

JPEG images that have been compressed using maximum compression may display scattered noise, called JPEG artifacts, around the image edges. You can remove these distortions.

 1. Select the area of the image where the artifacts occur.
2. On the Adjust menu, point to Advanced, and then click Remove JPEG Artifacts.

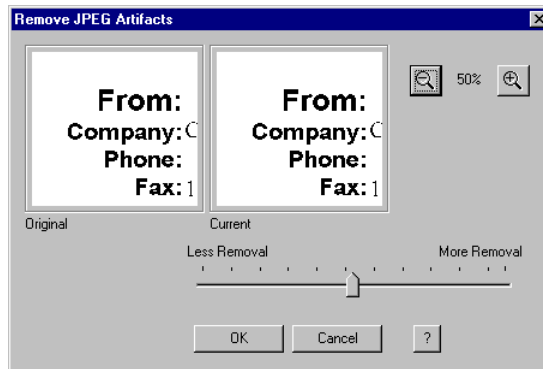

3. In the Remove JPEG Artifacts dialog box, drag the Removal slider to the left to remove less, to the right to remove more.

As you make changes to the image, your changes appear in the current thumbnail. You can compare the changes to the Original thumbnail.


To better see your changes, you can use the zoom buttons to magnify the thumbnails.

4. Click OK to accept your changes. Click Cancel to leave the image unchanged.

## ***Removing Show-Through***

Image show-through is caused by patterns from the reverse side of a page showing through the original image. You can remove image show-through while preserving the image.

 1. Select the image portion you want to adjust.
2. On the Adjust menu, point to Advanced, and then click Remove Show-Through.

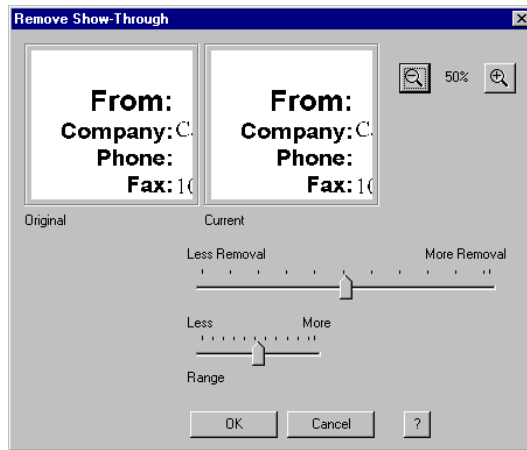

3. In the Remove Show-Through dialog box, use the Range slider to adjust Removal slider sensitivity according to the contrast of the pixels showing through to the background.

If there is a wide range between color, move the Range slider to the right. If there is little range between the pixels showing through and the background, move the slider to the left.


4. Drag the Removal slider to the left to remove less show-through, to the right to remove more show-through.
5. Click OK to accept your changes. Click Cancel to leave the image unchanged.

## ***Removing Dust***

 Even if you have carefully cleaned the original image, there may be some dust on the image. Dust leaves small spots on your image, usually one or two pixels in size. You can easily remove dust or any small speckles from an image, blending the color of the dots with the adjacent pixels. You can control the degree of blending.

1. Select the area of the image where the dust appears.

2. On the Adjust menu, point to Advanced, and then click Remove Dust.

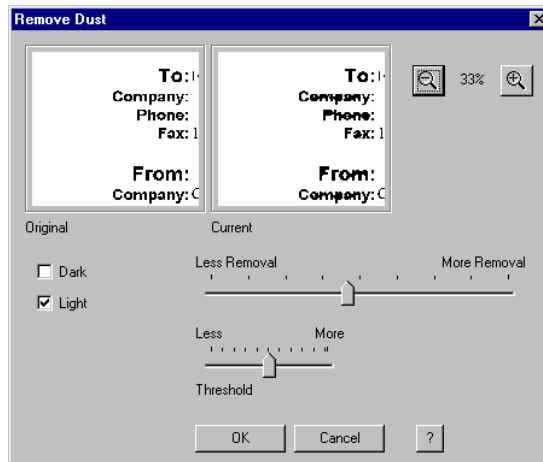

3. In the Remove Dust dialog box, click Dark and/or Light, depending on the color of the dust.
4. Drag the Threshold slider according to the deviation of the dust from dark to light.
5. Drag the Removal slider to the left to remove less dust or to the right to remove more dust.

Moving the slider to the right blends the dust more with the background color that surrounds the dust. As you drag the Removal slider, your changes appear in the Current thumbnail. You can compare the changes to the Original thumbnail.


You can also use the zoom buttons to magnify the thumbnails.

6. Click OK to accept your changes. Click Cancel to leave the image unchanged.

## Removing Scanner Noise

 You can remove distortions associated with scanned images, such as color bands and streaks.

1. Select the area of the image where the scanner noise appears.
2. On the Adjust menu, point to Advanced, and then click Remove Scanner Noise.

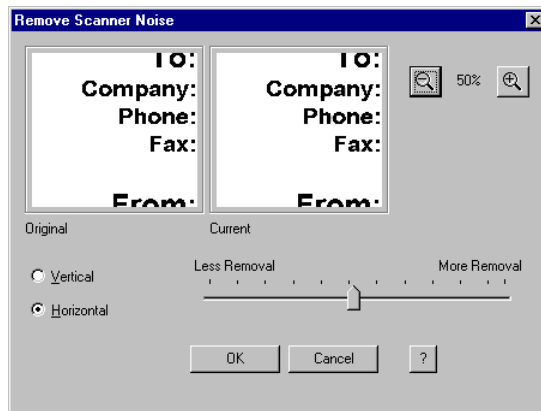

3. In the Remove Scanner Noise dialog box, select Vertical or Horizontal according to the direction of the streaks or bands.
4. Drag the Width slider according to the width of the noise. The slider ranges from 2 pixels (far left) to 20 pixels (far right).
5. Drag the Detail slider according to the brightness of the noise. Move the slider to the left for darker noise, to the right for brighter noise.
6. Drag the Removal slider to the left to remove less noise, to the right to remove more noise.

As you drag the Removal slider, your changes appear in the Current thumbnail. You can compare the changes to the Original thumbnail.

You can also use the zoom buttons to magnify the thumbnails.

- 7 Click OK to accept your changes. Click Cancel to leave the image unchanged.

## ***Adding Annotations to Your Document***

The following sections describe the various ways you can annotate your document. For a sample of annotations you can add to your document, refer to the “Modifying a Document” section, presented earlier in this chapter.

### ***Adding Text to a Document***

You can add text on any portion of your document. When you do so, you can select the text attributes: font, font size and color, and special effects (underline, strikeout), background color and mode.

You can type any text that you want, editing it later as necessary. If you select a font, font size, a color, or special effect, it affects the entire note. If you change any of the attributes while editing a note, or while the note is selected, it changes all the text in the note.

#### **To add text to the document:**

1. Click the Annotations button on the Image toolbar.
2. On the Annotations toolbar, click the Text button and drag the cursor to draw an appropriately sized square or rectangle in the document display area.
3. Enter the new text.

#### **To edit text added to a document:**

1. On the Annotation Toolbar, with the Selection tool selected, double-click the text you added. The cursor changes to an insertion point.
2. Edit the text as needed.
3. Click anywhere outside the text to save your changes.

**To change the font and color:**

 
1. Select the text.
2. To set font properties for the text, on the Annotations menu, click Select Font. In the Font dialog box, select the font attributes and click OK.
3. To set a background color for the text, on the Annotations menu, click Background Color. Click the desired color on the displayed menu and click OK.
4. To set the text color, on the Annotations menu, click Set Foreground Color. Click the desired color, and then click OK.

***Setting Font Defaults***

In adding annotations to your document, you can use a number of different text tools. Each tool includes options for adjusting font style, size, and effects. Additionally, you can also select a set of font properties to be used as defaults whenever font properties are not customized for a particular tool.

**To set font defaults:**

1. Click Select Font on the Annotation menu.

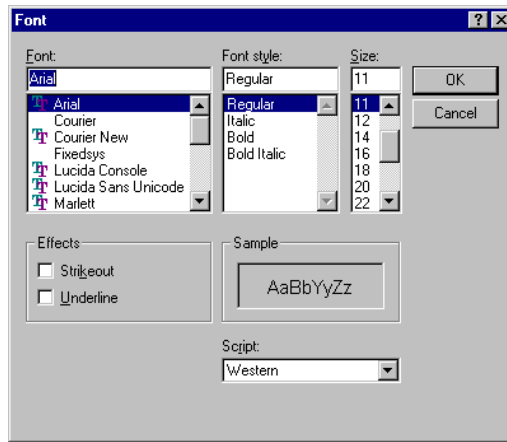

2. In the Font dialog box, select your preferred options.
3. Click OK.

## ***Adding a Sticky-Note***

Rather than add text directly to a document, as you do with the Text tool, you can add a sticky-note to any portion of the document.

When you add a sticky-note, you can select the text attributes: font, font size and color, background color, and special effects (underline, strikeout).

You can type any text that you want for the sticky-note, editing the note later if necessary. If you select a font, font size, a color, or special effect, it affects the entire note. If you change any of the attributes while editing a note, or while the note is selected, it changes all the text in the note.

### **To add a sticky-note:**

1. On the Annotations toolbox, click the Sticky-Note tool and drag the cursor to draw an appropriately sized square or rectangle.
2. Type the text of your note.



**To edit sticky-note text:**

1. On the Annotation Toolbar, with the Selection tool selected, double-click the sticky-note. The cursor changes to an insertion point.
2. Edit the text as needed.
3. Click anywhere outside the sticky-note to save your changes.

**To change the font and color:**

1. Select the sticky-note.
2. To set font properties for the text, on the Annotations menu, click Select Font. In the Font dialog box, select the font attributes and click OK.
3. To set a background color for the sticky-note, on the Annotations menu, click Background Color. Click the desired color on the displayed menu and click OK.

***Inserting a Stamp***

You can insert either a text or graphic image stamp on your document. The Desktop Manager contains a library of available stamp images, stored as BMP files, that were installed with the Desktop Manager software. Additionally, you can add graphics into the stamp library if the graphic is saved in a BMP format.

**To add a new stamp to the library:**

1. Click Select Stamp on the Annotation menu.



2. In the Select Stamp dialog box, click Add.
3. In the Open dialog box, locate the BMP file you want to add to the Stamp library and click Open.
4. If you have multiple graphics you want to add, repeat step 3.

**To insert a stamp on the document:**

1. In the Select Stamp dialog box, click the graphic you want to insert into the document and click OK.
2. In the MultiPASS Viewer, click the Stamp tool on the Annotation toolbox.
3. Click the mouse at the location where you want to place the graphic in the document display area.

 
## ***Creating a Text Stamp***

You can also create and use a text stamp.

**To create a text stamp:**

1. Click Select Stamp on the Annotation menu.
2. In the Select Stamp dialog box, click the Text Stamp tab.

3. On the Text Stamp tab, click Add.

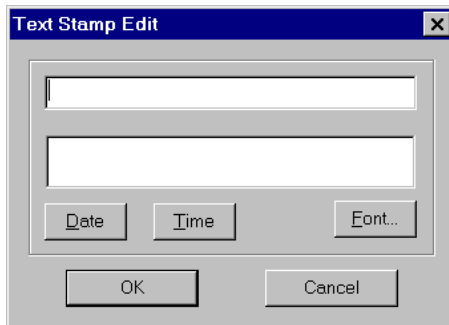

4. In the Text Stamp Edit box, type the text you want to assign to the Stamp in the upper box.
  - To add a date to the stamp, click Date. A code representing the date appears in the upper box and the date is viewable in the lower preview box.
  - To add the current time to the stamp, click Time. A code representing the time appears in the upper box and the time is viewable in the lower preview box.
  - To change the font and text characteristics of the text, click Font.

In the Font dialog box, specify your desired font type, style, size, and effects. Then click OK.
5. Click OK in the Edit Text Stamp dialog box to close the dialog box.
6. Click OK again in the Select Stamp dialog box to close the dialog box and save the text stamp.

**To insert a text stamp:**

1. Click Select Stamp on the Annotation menu.
2. In the Select Stamp dialog box, click the Text Stamp tab.

3. On the Text Stamp tab, click the text stamp you want to insert into the document and click OK.
4. In the MultiPASS Viewer window, on the Annotations menu, point to Tools and then click Stamp. Or click Stamp in the Annotation toolbox.
5. Click the mouse at the location where you want to place the text stamp in the layout area.

**To edit a text stamp:**

1. Click Select Stamp on the Annotation menu.
2. In the Select Stamp dialog box, click the Text Stamp tab.
3. On the Text Stamp tab, click the stamp you want to edit, and then click Edit.
4. In the Text Stamp Edit dialog box, modify the text and click OK.
5. In the Select Stamp dialog box, click OK to save your changes and close the dialog box.

**To remove an image or text stamp:**

1. Click Select Stamp on the Annotation menu.
2. In the Select Stamp dialog box, click the stamp you want to remove, and then click Delete.
3. When the confirmation message displays, click Yes.
4. In the Select Stamp dialog box, click OK to close to save your changes and close the dialog box.

## ***Highlighting Your Document***

You can add a color highlight to text or other images in a document. To do this, select a color and then draw a rectangular highlight over the desired area. All highlight colors are transparent and display in the color you specify. When you print the document, the highlighted region prints as gray shadings.

**To highlight a region:**

1. On the Annotations toolbox, click the Highlighter tool.
2. To select a highlighting background color, point to Background Color on the Annotation menu, and then click the desired color.
3. Drag the cursor over the area you want to highlight. When you release the mouse button, the highlight is completed.

***Creating a Drawing Graphic***

You can also annotate a document with one or more drawing objects that include a straight line, a single-headed arrow, a hollow rectangle, and a hollow circle or ellipse. When you draw the object, you can select the color, line thickness, and style of line for the object.

**To create a drawing object:**

1. On the Annotation toolbox, click the drawing object tool.
2. On the Annotation menu, select the color, line thickness, and style of line for the object you are drawing. For an arrow or line, also select the particular style you want to use.
3. At the desired location in the document display area, drag the cursor to draw the object. When you release the mouse button, the object is completed.

***Revising Your Annotations***

Once you have added annotations to your document, you can revise them as needed. For example, you may want to resize, move, or delete an annotation.

***Selecting One or More Annotations***

To revise an annotation, you must first select it. You can select one or more annotations at a time.

**To select a single annotation:**

Click the Select Annotations button on the Annotations toolbar. Then click the annotation.

**To select Multiple Annotations:**

With the Select Annotations button selected, hold down the Shift key and click each annotation. You cannot resize an annotation using this method.

## ***Moving an Annotation***

You can move an annotation from one position to another.

**To move an annotation:**

Select the annotation and drag it to the desired location.

## ***Resizing the Annotation***

When you create an annotation, you draw it to the desired size. If the original size proves unsuitable, you can resize the annotation.

To adjust the size, click the border of the annotation and drag any sizing handle.

## ***Aligning Annotations***

When placing annotations in the layout area, you may be concerned that they properly align, to make them more visually appealing. You can align two or more selected annotations, based on the position of the first field you select. The first annotation selected in the set of fields to be aligned is the anchor for the alignment.

You can align annotations, based on the first selected annotation, by their top, bottom, left, or right border.

You can also center the annotations horizontally with one another, in a row, or vertically with one another in a column.

**To align annotations:**

1. Select the two or more annotations you want to align.

2. Point to Align on the Annotation menu. Then select the desired alignment.

### ***Copying a Field or an Annotation***

You can copy a field or graphic item and paste it into another Windows application which supports a Paste option. When you copy a field or graphic item, it is placed in the clipboard.

#### **To copy a field or graphic element:**

With the element to be copied selected, click Copy on the Edit menu or toolbar.

### ***Removing an Annotation***

If you decide you no longer want an annotation to appear in your document, you can remove it permanently by selecting it, and then pressing the Delete key.

## ***Reverting to the Last Saved Version***

If are dissatisfied with changes that you have made to your document, you can discard them and return to the last saved version.

#### **To revert to the last saved version:**

 
Click Revert to Original on the File menu.

## ***Printing the Document***

You can print a copy of the document currently open in the MultiPASS Viewer, with or without any annotations you may have created. Prior to printing, you can specify certain print setup options.

#### **To define the print setup:**


1. On the File menu, click Print Setup.

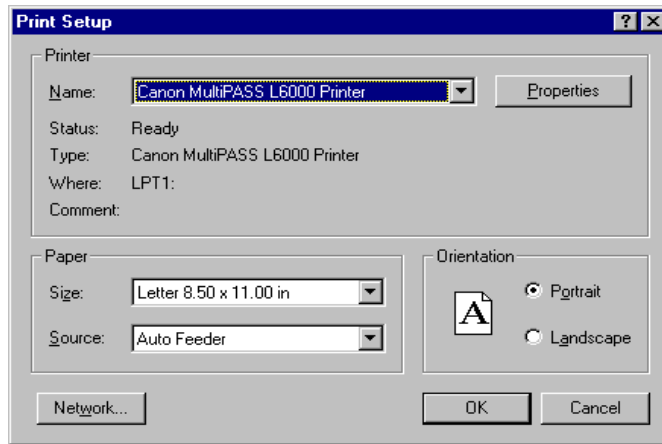

2. In the Print Setup dialog, specify your print options and click OK.

**To print the document:**

 1. Click Print on File menu or the toolbar.

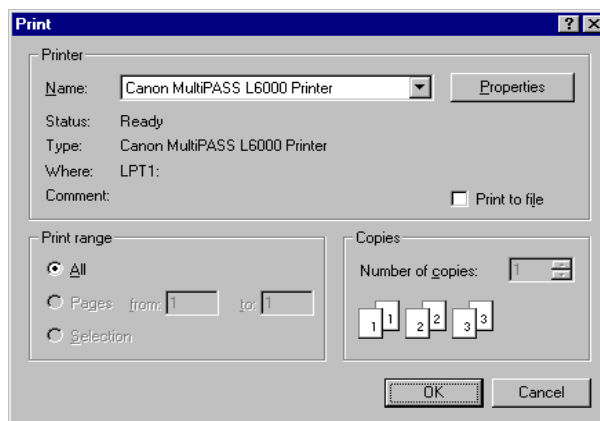


2. In the Print dialog box, specify the desired print options and click OK.



**To preview the document before printing:**

 1. Click Print Preview on the File menu.

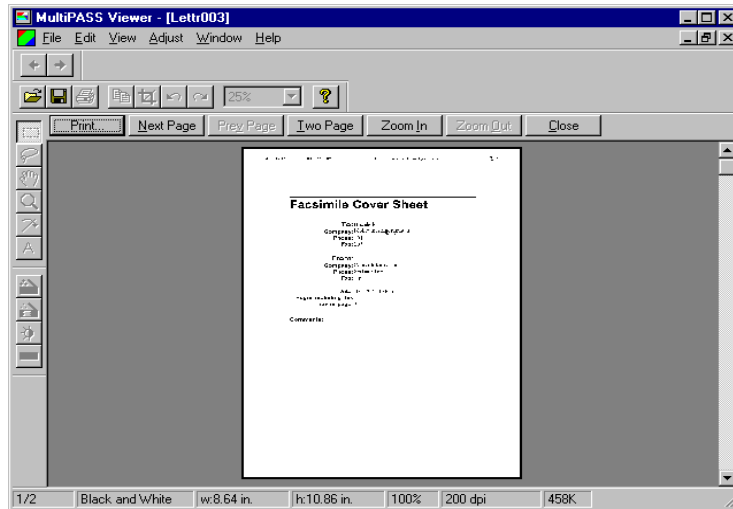

2. From the Print Preview window, you can:
  - Click Print to print the document
  - Click Next Page or Prev Page to view other document pages
  - Click Two Pages to view two pages at a time
  - Click Zoom In or Zoom Out to better view the document
  - Click Close to close the window without printing.

## ***Adjusting the MultiPASS Viewer Default Options***

As you work in the MultiPASS Viewer, you can change options that affect the view and scale of the open document.

**To adjust default options:**

1. Click Preferences on the File menu.
2. In the Preferences dialog box, set the following options:
  - Set the unit of measurement to Pixels, Inches, or Centimeters from the list.
  - Click the Automatically Fit Window to Image option to automatically resize the window to your image when you make any change.
  - Click High Quality When Zooming to maintain a high display quality when your document or coverpage is magnified. This option takes effect the next time you start the Cover Page Designer.
3. Click OK to save your changes and close the Preferences dialog box.

# Chapter 8

## MultiPASS Printer Setup and Other Utilities in the Desktop Manager

---

This chapter contains information and instructions on changing your MultiPASS printer setup options in the Desktop Manager, and using other Desktop Manager utilities.

- ❑ Setting Up Fax Options in the Desktop Manager ..... 8-2
  - Setting Up Fax Preferences ..... 8-3
  - Setting Up Send Fax Options ..... 8-4
  - Setting Up Advanced Send Fax Options ..... 8-6
  - Setting Up Receive Fax Options ..... 8-9
  - Setting Up Advanced Receive Fax Options ..... 8-11
  - Setting Up Speed Dial Assignments ..... 8-15
- ❑ Setting Up System Options ..... 8-18
- ❑ Using the Launcher ..... 8-20
- ❑ Making a Phone Call from the Desktop Manager ..... 8-23
- ❑ Using the MultiPASS Status Monitor ..... 8-25
  - Using the Minimized Status Monitor ..... 8-25
  - Using the Status Monitor Window ..... 8-26
  - Status Messages ..... 8-27
- ❑ Disconnecting the MultiPASS Printer ..... 8-28
  - Restarting MultiPASS Connection ..... 8-29
- ❑ Removing the Desktop Manager ..... 8-29
  - Reinstalling the Desktop Manager ..... 8-31

# Setting Up Fax Options in the Desktop Manager

The Desktop Manager contains setup options that define the operation of faxing with your MultiPASS printer. Although you can set MultiPASS fax options directly in the device itself, you can also set the options in the Desktop Manager. You can set options that affect general operation preferences, sending a PC fax, receiving a fax, and using the speed dial.

When you first install the Desktop Manager, setup options are set to appropriate default settings. The default settings enable you to begin using your MultiPASS printer with the Desktop Manager immediately. However, you can change option settings as needed.

Since you can make changes to most option settings either on the MultiPASS printer or in the Desktop Manager, be aware of the following:

- ❑ Any option setting you make on the MultiPASS printer does not appear in the Desktop Manager Setup Options dialog box.
- ❑ Any change you make to an option in the Desktop Manager overrides the corresponding setting you may have made on the MultiPASS printer device itself.

Therefore, before you make changes to these option settings, decide where you prefer to make your changes — on the MultiPASS printer or in the Desktop Manager. Establishing a preference for changes will help you avoid inadvertently overriding your previous settings.



**Note**

---

When the MultiPASS printer is connected to your PC, we recommend that you use the setups dialog boxes in the Desktop Manager. Do not make your changes using the operation panel of the MultiPASS printer.

---

The following instructions summarize the overall procedures for changing MultiPASS printer setup options in the Desktop Manager. For additional detailed information, refer to later sections in this chapter.

**To change setup options in the Desktop Manager:**

 
1. On the Setup menu, click Fax Setup.
2. In the Fax Setup dialog box, click the appropriate tab.
3. On the appropriate setup tab, specify your changes.
4. To save changes and close the dialog box, click OK. When prompted, select whether or not you want to overwrite the settings on your MultiPASS printer.

To exit the dialog box without saving your changes, click Cancel.

When you save your changes, MultiPASS printer setup options are saved in the Desktop Manager, as well as on the MultiPASS printer.

## Setting Up Fax Preferences

You can change the following options on the Preferences tab.

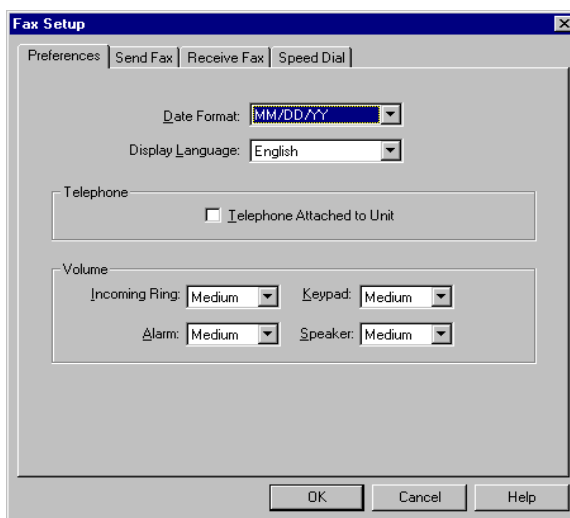

☐ **Date Format**

You can select the format used to display the date on the MultiPASS printer LCD and for printing the date on a fax.

☐ **Display Language**

You can select the language to be used on the MultiPASS printer device display.

☐ **Telephone Attached to Unit**

If you have the telephone handset installed on your MultiPASS printer, select this option. When selected, you can use the Desktop Manager to dial a phone number and place a phone call with your MultiPASS printer handset.


When you select this option, the Phone command (in the File menu and toolbar) becomes available in the Desktop Manager.

☐ **Volume**

You can set the volume level of the various sound components of your MultiPASS printer, to best suit your office environment.

## ***Setting Up Send Fax Options***

 You can change the following options on the Send Fax tab.

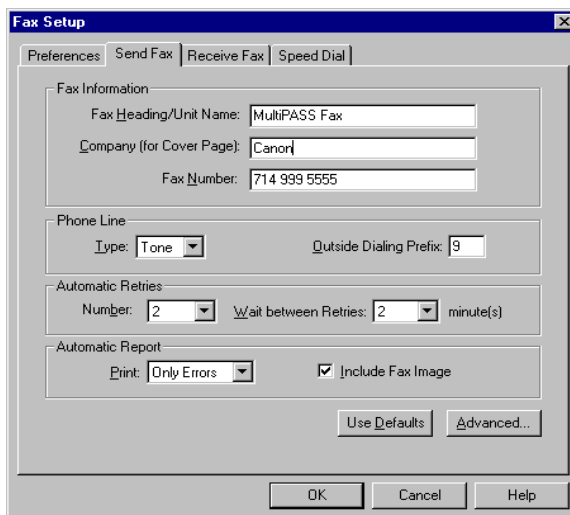

#### ☐ **Fax Information**

You can specify the following information to appear as the header for a PC fax: your name, company name, and your fax number. Initially, this information was set up when you installed the Desktop Manager.

#### ☐ **Phone Line**

You can specify the dialing method the MultiPASS printer uses: touch tone or rotary pulse. You also specify any prefix used to access an outside phone line (usually 9).

#### ☐ **Automatic Retries**

You can specify the number of retries the system should attempt when sending a fax transmission, and the length of time between each retry.

#### ☐ **Automatic Report**

 
You can specify whether or not you want a report to print with each fax transmission, or only when there is an error. You can also specify if you want an image of the first page of the fax included in the report.

## ***Restoring the Default Settings***

If you want to restore the option default settings after making changes, click Use Defaults.

## ***Setting Up Advanced Send Fax Options***

You can change the following options by clicking Advanced on the Send Fax tab.

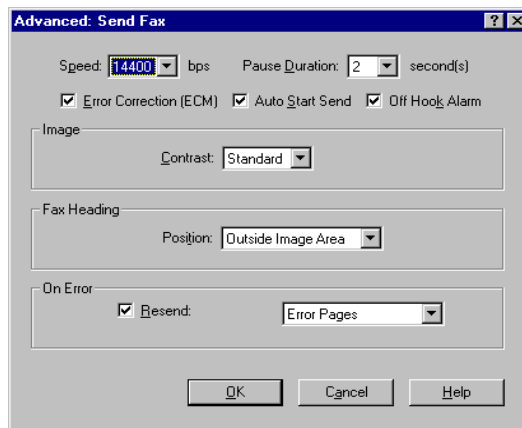

### ☐ **Speed**

You can set the transmission speed used to send faxes. The higher the setting, the faster the transmission. If you experience problems when sending faxes, try a lower speed setting.

### ☐ **Pause Duration**

You can set the length of the pause that you may have to insert when dialing a long distance number.



☐ **Error Correction (ECM)**

You can select this option to reduce system and line errors when sending a fax. With this option selected, the system checks each outgoing fax for lost data. If data has been lost from a portion of a page, the system transmits that portion again after confirming that all data within that portion can be transmitted successfully.

☐ **Auto Start Send**

When you select this option, the unit starts scanning automatically if a speed dial number is pressed, or when a destination is entered and the START/COPY button pressed. When you don't select this option, you must press START/COPY twice to scan the document.

☐ **Off Hook Alarm**

You can select this option to turn on the alarm after the MultiPASS printer has received or sent a fax if the telephone handset is off-hook.

☐ **Image Contrast**

You can select a setting that determines the level of contrast in the faxes you send. The Standard setting is usually appropriate for most documents. However, based on the lightness or darkness of your original fax document, you may prefer to lighten or darken the contrast for the fax transmission.

☐ **Fax Heading Position**

You can select where you want the sent fax heading information (your fax number, your name, and date and time) to print on the faxes you send. This information is known as the Transmit Terminal Identification (TTI).

☐ **On Error Resend**

You can select this option if you want the MultiPASS printer to automatically redial if an error occurs while sending a fax. If this option is selected, you also select which pages should be resent: only the page on which the error occurred, the page on which the error occurred and the first page of the fax, or all pages.

❑ **R-Key (Europe only)**

The R-Key options enable you to define the R-Key settings for your MultiPASS printer. The options determine whether or not you are connecting your MultiPASS printer to a PBX (Private Branch Exchange) line to send PC faxes. If you are connecting to a PBX, you also select the type of PBX line.

If you are connecting to a PBX line, you select PBX. Otherwise, you select PSTN.

If you select PBX, in the PBX box, you select the type of PBX you are operating with: Prefix, Hooking, or Earth Connection. (Note: Earth Connection may not be available in your country.)

If you select Prefix as the PBX type, in the Prefix box, you enter the prefix.

❑ **M-Key (United Kingdom only) (E-Key—Spain only)**

You may be planning on using an alternative long-distance phone service (such as 2300 Service of Mercury Communications) for sending PC faxes. In this case, you use the M-Key (E-Key) options to do the following:

- Enable you to set the One-Touch 6 button on your MultiPASS printer to turn the connection to the alternative service on and off. To do so, you select Use One-Touch Key 06 as M-Key (E-Key).
- Define the settings for the One-Touch 6 button when using this alternative service.

When defining the M-Key (E-Key) settings:

- In the Access Code box, you select the access code given to you by your service company.
- If you select 131P as your access code, in the ID Code box, enter your identification code.

### ❑ Phone Lock (Europe only)

The Phone Lock options enable you to restrict the use of the MultiPASS printer for making phone calls or sending PC faxes. You assign a password to prevent an unauthorized user from turning the Phone Lock option on and off. The Phone Lock option does not affect incoming phone calls or faxes.

 
To turn Phone Lock on, you select Lock. In the Phone Lock/Unlock Password dialog box, you enter the password you want to use.

To turn Phone Lock off, you select Unlock. When prompted, you enter the password to allow your change.

To change a password previously defined, click Change Password. In the Change Password dialog box, you enter the old password (click OK), and then enter and confirm the new password.

## Setting Up Receive Fax Options

You can change the following options on the Receive Fax tab.

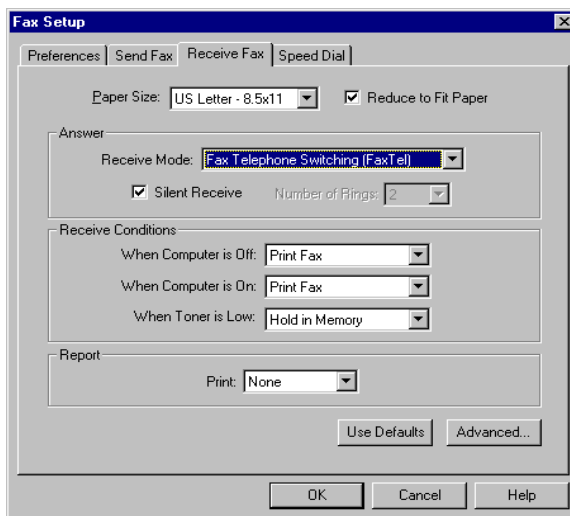

☐ **Paper Size**

You can select the size of the paper you are using for printing a fax.

☐ **Reduce to Fit Paper**

You can specify whether you want an incoming fax reduced to ensure the contents fits on the paper on which it is printed.

☐ **Answer Receive Mode**

You can select the mode by which you want the MultiPASS printer to receive incoming calls:

- Automatically switch for receiving a call either as a fax or telephone call
- Automatically receive only fax calls
- Require you to manually answer the incoming call, and then set the MultiPASS printer for an incoming fax
- Automatically receive a call with your answering machine
- Automatically switch between receiving a call either as a fax or telephone call based on the ring tone for each type of call. (U.S. only. This setting is applicable only if you subscribe to a special network service with your phone company that defines multiple ring tones for your phone line.)

☐ **Answer Silent Receive**

You select this option to set the MultiPASS printer not to ring for an incoming fax.

☐ **Answer Number of Rings**

If you cleared the Silent Receive option, indicating you want the MultiPASS printer to ring for incoming fax calls, you specify the number of times the MultiPASS printer should ring for the fax call. The MultiPASS printer only rings if you have connected a telephone handset.

### ☐ **Receive Conditions**

You can specify how the system should handle an incoming fax under the following conditions:

- If your computer is turned off:  
You set the MultiPASS printer to print the fax or save the fax in its memory.
- If your computer is turned on:  
You set the MultiPASS printer to move the fax to the Desktop Manager on your computer, or to print the fax.
- When your MultiPASS printer is low on toner:  
You can set your MultiPASS printer to hold the fax in memory until the toner cartridge is changed, or to continue printing the fax although toner is low.

### ☐ **Report Print**

You can specify whether or not you want a report to print with each fax reception, or only when there is an error.

## ***Restoring the Default Settings***

If you want to restore the option default settings after making changes, click Use Defaults.

## ***Setting Up Advanced Receive Fax Options***

To change the following Advanced Receive Send Fax options, click Advanced on the Receive Fax tab.

**Advanced: Receive Fax**

Speed:  bps ☒ Error Correction (ECM) ☐ Ink/Toner Saver

**Fax/Telephone Switching Options**

Listen Time before Ringing:  second(s)

Ring Time:  second(s) Ring Tone:

Default Action if No Answer to Telephone: ☒ Receive ☐ Disconnect

**Answering Machine Mode Options**

☐ Receive Fax if No Signal Silent Period:  second(s)

**Remote**

☒ Receive Identification Number:

**DRPD Switch Options**

Ring Pattern	Action	Fax ID	Fax Number
<input type="checkbox"/> Normal	<input type="text" value="Tel"/>	<input type="text"/>	<input type="text"/>
<input type="checkbox"/> Double	<input type="text" value="Fax/Tel"/>	<input type="text"/>	<input type="text"/>
<input type="checkbox"/> S-S-L	<input type="text" value="Tel"/>	<input type="text"/>	<input type="text"/>
<input type="checkbox"/> S-L-S	<input type="text" value="Tel"/>	<input type="text"/>	<input type="text"/>
<input type="checkbox"/> Others	<input type="text" value="Tel"/>	<input type="text"/>	<input type="text"/>

OK Cancel Help

#### ❑ **Speed**

You can set the transmission speed used to receive faxes. The higher the setting, the faster the fax is received. If you experience problems when receiving faxes, try a lower speed setting.

#### ❑ **Error Correction (ECM)**

You can select this option to reduce system and line errors when receiving a fax. With this option selected, the system checks each incoming fax for lost data. If data has been lost from a portion of a page, the system receives that portion again after confirming that all data within that portion can be received successfully.

#### ❑ **Ink/Toner Saver**

You can select this option if you want to print documents in the Desktop Manager using a reduced amount of toner, thereby saving printer toner. When using this option, the printed document may appear to be less bright or contrasted.

☐ **Listen Time Before Ringing**

When a call is received, the MultiPASS printer checks to see if the call is from a fax machine or a telephone. If the MultiPASS printer does not have enough time to detect the fax tone, it assumes the call is from a telephone. You use this option to set the appropriate amount of time to allow the MultiPASS printer to check for the type of call.

☐ **Ring Time**

When your MultiPASS printer is set to receive both fax and telephone calls, it rings to inform you of an incoming telephone call. If you do not pick up the handset within a certain amount of time, the MultiPASS printer stops ringing. You use this option to set the appropriate amount of time the MultiPASS printer should ring.

☐ **Ring Tone**

You can set the volume level of the ring tone.

☐ **Default Action If No Answer to Telephone**

You set this option to Receive if you want the MultiPASS printer to handle an incoming call, detected as a telephone call that is not answered, as an incoming fax. If no fax is received, the line is then disconnected. If you set this option to Disconnect, the MultiPASS printer automatically disconnects the unanswered call, without switching to try and receive a fax.

☐ **Manual/Auto Switch (Europe only)**

To prevent missing incoming documents when the MultiPASS printer is set to manual receiving, you can set the unit to automatically answer the phone and switch to automatic. The unit can receive the incoming fax after the specified ring time (the number of seconds you specify).

☐ **Answering Machine Mode Options**

You use this option only if: you set the receive mode on the Receive Fax tab to answering machine mode, and your fax sender may be using a fax machine that does not emit a send fax signal.

Select this option to have the MultiPASS printer automatically receive a call as a fax call if a send fax signal is not detected for the number of seconds you specify.

Clear this option to have the MultiPASS printer remain in answering machine mode even if no send fax signal is detected. If no sound is detected by the MultiPASS printer (such as the caller speaking to leave a message), the answering machine disconnects.

☐ **Remote Receive**

You select this option so that you can set the MultiPASS printer — with the telephone handset or from a telephone extension — to receive a fax if an incoming call is ringing on the MultiPASS printer. If you select this option, you must assign a remote identification number that signals the MultiPASS printer to receive the fax.

☐ **Remote Identification Number**

If the Remote Receive option is selected, you assign the identification number you will use to set the MultiPASS printer to receive a fax.

☐ **DRPD Switch Options (U.S. only)**

You can select this option if you subscribe to the Distinctive Ring Pattern Detection (DRPD) service through your phone company. You then specify each ring pattern you have been assigned, with its associated action, fax ID, and fax number.

When you select this option, the MultiPASS printer's receive mode is automatically set to receive both fax and telephone calls.

☐ **Ring Pattern (U.S. only)**

If you subscribe to DRPD through your phone company, select the ring pattern assigned to each phone number by your phone company: Normal (single-ring), Double (double-ring), S-S-L (short-short-long ring), S-L-S (short-long-short ring), or Other.

☐ **Action (U.S. only)**

If you subscribe to DRPD through your phone company, select the call type to be received for each selected ring pattern. Typically, you would specify telephone calls for one ring pattern and fax calls for the other ring pattern. However, if necessary, you can specify that a selected ring pattern switch between receiving telephone and fax calls.



❑ **Fax ID (U.S. only)**

If you subscribe to DRPD through your phone company, enter your name or company name (or some other fax recipient identification) for each selected ring pattern. This information is transmitted to the caller's fax machine and displayed in the caller's LCD as verification.

 
❑ **Fax Number (U.S. only)**

If you subscribe to DRPD through your phone company, enter the phone number assigned for receiving a call for each ring pattern. This information is transmitted to the caller's fax machine and displayed in the caller's LCD as verification.

## ***Setting Up Speed Dial Assignments***

On the Speed Dial tab, you can set up fax numbers for speed dialing with the MultiPASS printer. You use the fax recipients set up in your Address Book, assigning the desired individual to speed dial codes. If the recipient has not yet been set up in the Address Book, you can add the recipient while creating speed dial assignments. You can also set up a group speed dial, by assigning two or more individual speed dial assignments to a single speed dial assignment.

For reference, you can print the list of speed dial assignments to display near the MultiPASS printer.

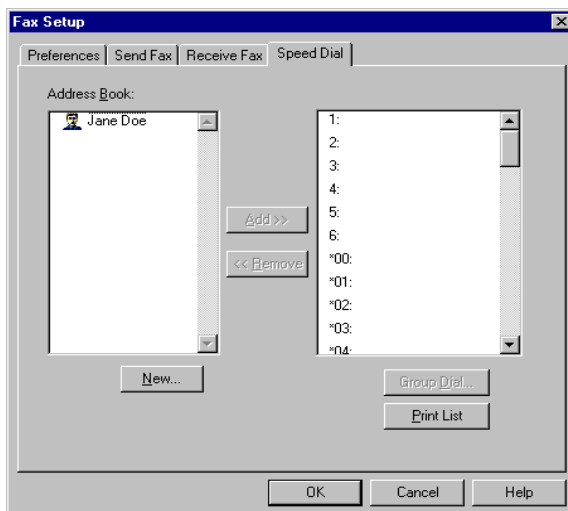

## ***Assigning an Individual to a Speed Dial Code***

This section provides instructions for assigning a single recipient to a speed dial code.

### **To assign a fax recipient to a speed dial code:**

1. In the Address Book list box, select the recipient that you want to assign to a speed dial code.
2. Select the speed dial code to which you want to assign the recipient, and click Add.

**To remove a recipient from a speed dial code:**

In the speed dial list box, select the speed dial assignment, and then click Remove.

**To print the speed dial assignment list:**

Click Print List.

Because of the width of the columns on the list, the first and last names of an address book entry may not fully appear.

 
**To add a recipient to the Address Book:**

1. Click New.
2. In the New Individual Entry dialog box, complete the appropriate information for the recipient and then click Add. For detailed instructions on completing the New Individual Entry dialog box, refer to Chapter 5, "PC Faxing."

***Defining a Group Speed Dial Code***

This section provides instructions for assigning two or more recipients to a speed dial code.

1. On the Speed Dial tab, make sure the desired recipients for your group are set up as individual speed dial assignments.
2. Select the speed dial code to which you want to assign the group of recipients, and click Group Dial.

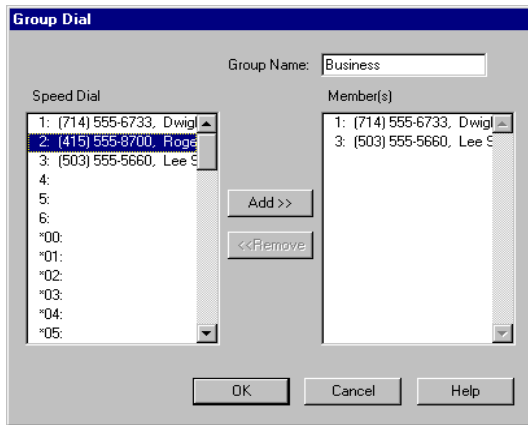

3. In the Group Dial dialog box, in the Group Name box, enter a name for the group assignment.
4. In the Speed Dial list box, select the first recipient and click Add. Repeat this procedure until the desired recipients are included in the Members list.
5. To remove a member from the group, select the member in the Members list and click Remove.
6. When all the desired members are listed in the Members list, click OK to save your group.


To close the dialog box without saving your group, click Cancel.

## ***Setting Up System Options***

 The Desktop Manager contains system setup options that define certain general operations of the Desktop Manager.

### **To set system preferences:**

1. In the Desktop Manager, click System Setup on the Setup menu.

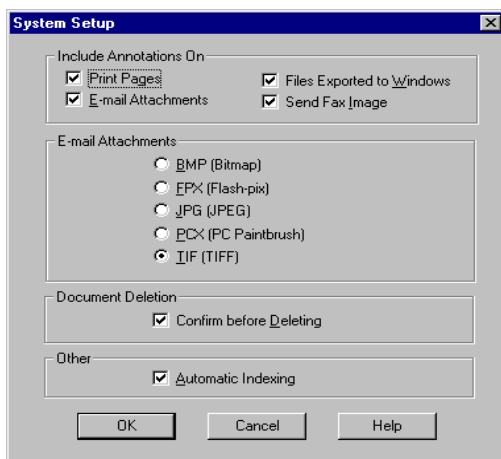


2. In the System Setup dialog box, select the option you want to use.
  - **Include Annotations On**  
You can specify what documents you want to display, or hide, document annotations: on printed pages, e-mail attachments, files exported to Windows, or sent faxes.
  - **E-Mail Attachments**  
You can specify the format you want to use for color and monochrome document e-mail attachments, such as BMP, JPG or TIF.
  - **Document Deletion**  
Click Confirm Before Deleting to display a confirmation message before deleting a document.
  - **Other**  
Select Automatic Indexing to enable the Desktop Manager to automatically index your documents based on the text within the documents.
3. To save your changes, click OK. To close the dialog box without saving your changes, click Cancel.

# Using the Launcher

 The Desktop Manager Launcher enables you to display a Desktop Manager document in another application in a specified file format. For example, dragging a document from a folder in the Desktop Manager to the Paint icon starts the Paint application and displays the selected document in a BMP file format.

When you launch a document, a *copy* of the document appears in the application with a system-assigned name. If you save the document, it is saved with the system-assigned name in your C:\Windows\Temp folder. If you want to give the document a more meaningful name, use the Save As command. Any modifications made to the document are made to the copy, and not the original document stored in the Desktop Manager.

You can also start an application (without displaying a document) by simply clicking on the application icon in the Launcher.

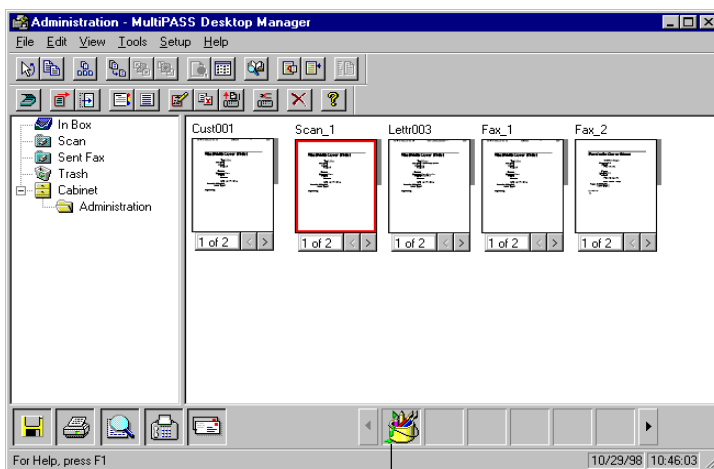

Launcher application

**To display a document in another application with the Launcher:**  
Drag the document from a folder in the Desktop Manager onto an application button in the command bar.


**To start another application with the Launcher:**  
On the command bar, click the application button.

## ***Adding Applications to the Launcher***

 
If you have another application that you would like to start from the Desktop Manager, you can add the application to the Launcher. You can add any application by adding its executable file (EXE) to the Launcher.

### **To add an application:**

1. In the Desktop Manager, click Launcher Setup on the Setup menu.

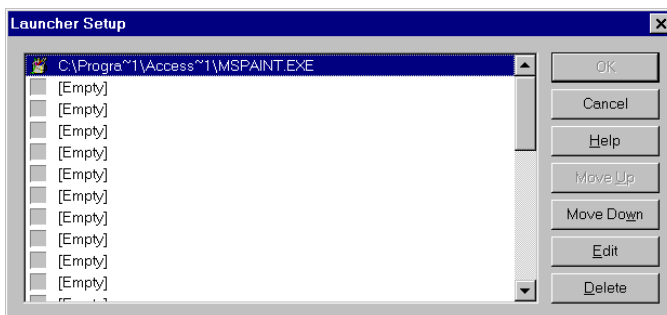

 2. In the Launcher Setup dialog box, select the next Empty location in the list, and then click Edit.

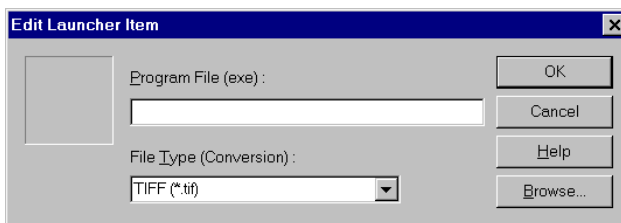

3. In the Edit Launcher Item dialog box, in the Program File box, enter the path and filename for the application EXE file.

To locate a file, click Browse. In the Browse dialog box, select the path and EXE file you want to add to the Launcher, and then click Open.

4. In the Edit Launcher Item dialog box, in the File Type Conversion list, select the file type in which you want documents to appear.
5. Click OK to close the Edit Launcher Item dialog box.
6. Click OK to close the Launcher Properties dialog box and add the application to the Launcher.

## ***Modifying the Launcher Setup***

As needed, you can modify the setup of the applications in the Launcher. You can:

- ☐ Change the sequence in which the applications appear in the command bar.

Applications appear from left to right in the command bar, based on the order they appear in the Launcher setup list.

- ☐ Edit the Launcher setup properties for an application (such as the file type)
- ☐ Delete an application from the Launcher.

### **To edit the Launcher setup for an application:**

1. In the Desktop Manager, click Launcher Setup on the Setup menu.
2. To rearrange the order of the Launcher application buttons on the command bar:

In the Launcher Setup dialog box, select the application in the list and click Move Up or Move Down. The application is repositioned in the list, thereby determining the order on the command bar.

3. To change the application setup properties:



In the Launcher Setup dialog box, select the desired application, and then click Edit.

In the Edit Launcher Item dialog box, as desired, change the path and name for the program file and the assigned file type. Then click OK.

4. To delete an application from the Launcher:

In the Launcher Setup dialog box, select the desired application, and then click Delete.

5. Click OK to save your changes and close the Launcher Setup dialog box.

## ***Making a Phone Call from the Desktop Manager***

 
You can use the MultiPASS printer and Desktop Manager to dial telephone calls if:

- ☐ You have a telephone handset installed on the MultiPASS printer
- ☐ You selected the Telephone Attached to Unit option on the Preferences tab in the Fax Setup dialog box in the Desktop Manager.

You can place a call to any individual you want, whether or not the individual has been set up in the Address Book. At the time you are attempting to make your call, you can also set up an individual in the Address Book.

### **To place a phone call from the Desktop Manager:**

1. Click Phone on the File menu or toolbar.

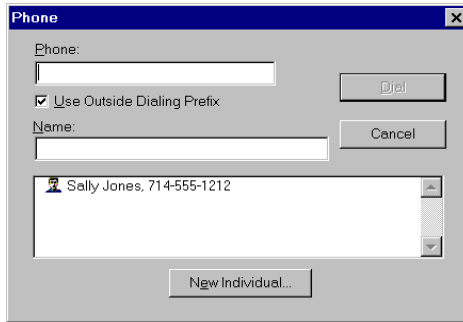

2. In the Phone dialog box, enter the phone number you want to call, or select an Address Book entry.

When you enter the phone number, you use the applicable numeric characters and any valid characters that separate the different segments of the phone number. For example, you can use 0 through 9, dash (-), or parentheses (). Other characters are also available for entering a phone number. For a complete list of the characters that are valid in the Desktop Manager, refer to Appendix A.

3. To add an individual to the Address Book, click New Individual and complete the New Individual Entry dialog box. For details on completing the New Individual Entry dialog box, refer to Chapter 5, "PC Faxing."
4. With the phone number entered or selected, click Dial.
5. When the Dialing Phone dialog box displays, you are prompted to pick up the handset.
6. When you have completed your call, click Exit.

## Using the MultiPASS Status Monitor

The MultiPASS Status Monitor is a utility that tracks the current status of the MultiPASS printer, incoming and outgoing faxes, print and scan jobs, and any error conditions needing your attention.

The Status Monitor displays as an icon in the taskbar or a window.

## Using the Minimized Status Monitor

The minimized Status Monitor starts automatically when you log into Windows and appears as an icon in the Windows taskbar.

The graphical appearance of the icon or button depicts the type of activity it is reporting. For example, the scan graphic is used to depict the status of scan activity.

You can display a menu allowing you to perform certain tasks, such as open the Status Monitor window, open the Desktop Manager, and close the Status Monitor.

If you close the Status Monitor, you will not be able to observe any activity message for job that are processing on the MultiPASS printer.



### Note

---

It is recommended that you keep the Status Monitor open while your computer is on. When you close the Status Monitor, status messages do not appear indicating possible printing or faxing errors with the MultiPASS printer (for example, if the device is accidentally disconnected from your computer).

---

### **To display the menu on the minimized Status Monitor:**

Click the right mouse button on the MultiPASS Status Monitor icon.

### **To open the Status Monitor window from the icon:**

On the Status Monitor menu, click Restore.

### **To open the Desktop Manager from the Status Monitor icon:**

On the Status Monitor menu, click Go To Manager.

**To display the port on which the MultiPASS printer is connected:**

On the Status Monitor menu, click Device Information.

**To close the Status Monitor:**

On the Status Monitor menu, click Close.

## ***Using the Status Monitor Window***

The Status Monitor window displays the status of MultiPASS printer activity *only*. You cannot use the MultiPASS Status Monitor to interrupt an activity.



You can display a menu in the Status Monitor window that enables you to perform certain tasks, such as close the window and return to the minimized MultiPASS Status Monitor, open the Desktop Manager, and close the MultiPASS Status Monitor.

**To open the Status Monitor window:**

Do one of the following:

- ☐ On the Windows desktop, click Start, and point to Programs. On the Programs menu, point to MultiPASS Desktop Manger, and then click MultiPASS Status Monitor.
- ☐ In the Desktop Manager, click MultiPASS Status Monitor on the Tools menu.

**To display the menu on the MultiPASS Status Monitor window:**

Click the right mouse button in the MultiPASS Status Monitor window.

**To open the Desktop Manager:**

In the window title bar, click the Desktop Manager button. Or, click Go To Manager on the Status Monitor menu.

**To specify the Status Monitor as the top window:**

On the displayed menu, click Always On Top.

**To reconnect the MultiPASS printer and Desktop Manager (if previously disconnected):**

On the Status Monitor menu, click Reconnect.

**To display the port on which the MultiPASS printer is connected:**

On the Status Monitor menu, click Device Information.

**To return to the MultiPASS Status Monitor icon:**

In the window title bar, click the Minimize button. Or, click Minimize on the Status Monitor menu.

**To close the MultiPASS Status Monitor:**

In the window title bar, click the Close button. Or, click Close on the Status Monitor menu.

## ***Status Messages***

The MultiPASS Status Monitor reports the following statuses for the MultiPASS printer.

☐ **Idle**

This status indicates the MultiPASS printer is currently inactive.

☐ **Scanning**

This status indicates the MultiPASS printer is scanning an image. The Status Monitor window displays the number of the page currently being scanned.

☐ **Printing**

This status indicates the MultiPASS printer is printing a document.

☐ **Sending Fax**

This status indicates the MultiPASS printer is sending a fax document. The Status Monitor window displays the number of the page currently being faxed.

❑ **Receiving Fax**

This status indicates the MultiPASS printer is receiving a fax document. The Status Monitor window displays the fax number or name of the sender (if available), and the number of the page currently being received.

❑ **Attention Needed**

This status indicates the MultiPASS printer needs your attention for situations, such as the MultiPASS printer being out of paper. The Status Monitor window describes the nature of the attention required.

When you have corrected the situation, the status message automatically clears.

❑ **Error Warning**

This status indicates the MultiPASS printer has a problem that needs your more immediate attention, such as when the Status Monitor can no longer detect the MultiPASS printer. The Status Monitor window displays the nature of the problem, with a comment indicating a corrective action.

When you have corrected the situation, the status message automatically clears.

## ***Disconnecting the MultiPASS Printer***

You can disconnect the MultiPASS printer if you want to use the parallel port for another purpose. The MultiPASS Service (MPService) automatically detects if a different device is connected to the port, and stops any communication between the MultiPASS printer and Desktop Manager. Later, when you reconnect the MultiPASS printer, you must restart the communication between the MultiPASS printer and Desktop Manager.

**To disconnect the MultiPASS printer:**

1. Turn off your computer.
2. Unplug your computer from all electrical sources.

3. Unplug the MultiPASS printer from all electrical sources.
4. On the back of your computer, remove the cable connector from the parallel printer port.
5. On the MultiPASS printer, release the wire clips and remove the cable connector from the port.
6. Plug your computer back in to the electrical source.

## ***Restarting MultiPASS Connection***

If you reconnect the MultiPASS printer to the port and want to begin using the Desktop Manager again, the MultiPASS Service automatically restarts communication between the MultiPASS printer and Desktop Manager when you restart your computer. You can also restart the MultiPASS Service without restarting your computer.

### **To restart the MultiPASS connection:**

Do one of the following:

- ☐ If not currently open, open the MultiPASS Status Monitor window.
- ☐ If the MultiPASS Status Monitor is already open, display the Status Monitor menu and click Reconnect.

## ***Removing the Desktop Manager***

If you are planning on reinstalling the MultiPASS Desktop Manager, you must first remove the current installation of the software.



**Note**

---

You must log on to Windows NT as Administrator or have Administrator privileges to remove the Desktop Manager software.

---

When you remove the software, you remove the MultiPASS Desktop Manager, and related printer and fax drivers. You do not need to remove the database. So that you can reinstall the MultiPASS Desktop Manager at a later time and continue to use your data files, address book, cover page templates, and so on, the following items are not removed automatically:

- ☐ MultiPASS directory
- ☐ Data folders and files  
(such as Fax Log and Address Book)
- ☐ System files shared with other applications.

If you choose to remove the Desktop Manager database during the removal of the Desktop Manager software, you must also remove the ODBC interface.

When you remove the Desktop Manager software, you automatically remove MultiPASS printer and fax drivers.

**To remove the Desktop Manager:**

1. Close the MultiPASS Desktop Manager and all of its components (such as the Cover Page Designer).
2. Close the MultiPASS Status Monitor.
3. On the Windows desktop, click Start, and then point to Settings.
4. On the Settings menu, click Control Panel.
5. In Control Panel, double-click Add/Remove Programs.
6. In the Add/Remove Programs Properties dialog box, click MultiPASS Desktop Manager, and then click the Add/Remove button.
7. Follow the on-screen instructions.
  - When prompted, choose whether or not you want to remove the Desktop Manager database.



- If you chose to remove the Desktop Manager database, when prompted, choose to remove the ODBC interface.
8. Repeat steps 6 and 7 to remove the scan software (ScanGear for MultiPASS).

**To complete the removal process:**

Once you have deleted the drivers, the Desktop Manager, and the scan software, be sure to restart the computer.

## ***Reinstalling the Desktop Manager***

You use the same instructions for reinstalling as described in Chapter 2, “Installing the Desktop Manager Software.”

# Chapter 9

## Frequently Asked Questions

---

This chapter contains information for questions you may have when operating Desktop Manager with your MultiPASS printer.

- ❑ MultiPASS Printer Cannot Be Initialized. .... 9-2
- ❑ MultiPASS Service Cannot Be Restarted. .... 9-2
- ❑ Faxes Are Not Being Sent Correctly. .... 9-2
- ❑ Faxes Are Not Being Received Correctly. .... 9-4
- ❑ Images Are Not Scanning Properly .... 9-5
- ❑ Documents Are Not Being Copied. .... 9-6
- ❑ Documents Are Not Printing Correctly. .... 9-6
- ❑ Paper Is Not Loading Correctly. .... 9-9
- ❑ The Print Quality Is Not Satisfactory. .... 9-10

Frequently Asked Questions

## ***MultiPASS Printer Cannot Be Initialized.***

### ***❑ Is the operation panel blank?***

You might have a power problem. Check that the power cord is plugged securely into the unit, and that your electrical source is OK. You should have the MultiPASS printer connected directly to its own AC outlet and not connected to a power strip to which your computer is connected.

### ***❑ Is the unit set to the correct parallel port?***

Make sure that the MultiPASS printer is configured for the correct parallel port in the Printer Properties dialog box. Be sure that it is the only device configured to a particular port. The MultiPASS printer operates properly only with a dedicated parallel port. Remove any switch boxes, zip drives, tape backups, docking stations, or scanners from the parallel port if necessary. Check both ends of the printer cable to be sure that it is securely fastened.

## ***MultiPASS Service Cannot Be Restarted.***

### ***❑ Is there a message indicating that the device is not found?***

If you receive a message indicating that the MultiPASS device cannot be found, be sure that the MultiPASS printer is connected correctly to the port.

### ***❑ Is there a message indicating that the device is incompatible?***

Be sure the MultiPASS printer is connected correctly to the port. Then open the MultiPASS Status Monitor window and display the menu. On the MultiPASS Status Monitor menu, click Reconnect.

## ***Faxes Are Not Being Sent Correctly.***

### ***❑ Is the operation panel blank?***

You might have a power problem. Check that the power cord is plugged securely into the unit, and that your electrical source is OK.

☐ ***Is the unit set correctly for the type of telephone line in use (pulse/tone)?***

If you have a pulse line, be sure the unit is set for pulse dialing. If you are not sure about what type of line you have, contact your local phone company.

☐ ***Is the MultiPASS printer warm to the touch?***

The unit might have overheated and shut itself off. Turn the unit off and let it cool down for several minutes but less than one hour, or you can lose information registered in memory. Try using it again.

☐ ***Did a document not feed correctly through the automatic document feeder?***

Remove the document, stack it, and feed it into the unit again.

☐ ***Are errors being reported when you send a fax?***

Use the operation panel user menu to turn on ECM sending. ECM sending or receiving should help with problems due to poor telephone lines. However, you might have to try again. If the receiving fax unit does not support ECM transmission, the document is received in the normal mode without error checking.

☐ ***Are your faxes failing to be sent?***

Make sure your phone line is active and correctly connected to the MultiPASS printer.

☐ ***Is speed dialing not working correctly?***

If you were not able to use one-touch, coded, or group speed dialing, check the contents of the one-touch or coded speed dialing button and be sure to register it correctly.

☐ ***Is the other party's fax machine having problems receiving your faxes?***

Make a photocopy. If it is clear, the other party's fax unit might be the problem. Ask the other party to check the receiving fax unit for:

- ☐ Full paper supply

- ❑ Whether the fax unit is a G3 machine
- ❑ Whether the unit supports ECM (if so, turn ECM on for your MultiPASS printer through the operation panel menu).
- ❑ ***Does the BUSY/NO SIGNAL message appear in the LCD display?***  
Make sure your phone line is active and correctly connected to the MultiPASS printer.

## ***Faxes Are Not Being Received Correctly.***

- ❑ ***Is the operation panel blank?***  
You might have a power problem. Check that the power cord is plugged securely into the unit, and that your electrical source is OK.
- ❑ ***Is the MultiPASS printer warm to the touch?***  
The unit might have overheated and shut down. Turn the unit off and let it cool down for several minutes but less than one hour, or you might lose information registered in memory. Try using it again.
- ❑ ***Is the MultiPASS printer not switching correctly between telephone and fax transmissions?***  
Make sure Receive Mode is set to Fax/Tel Mode.
- ❑ ***Are you not automatically receiving faxes?***  
Make sure Receive Mode is set to Fax/Tel Mode or Fax Only Mode.
- ❑ ***Are you not manually receiving faxes?***  
Always press START/COPY before hanging up the hand set (not after).

❑ ***Are you receiving faxes but the faxes have errors?***

In the Advanced Receive Fax setup options dialog box, in the Desktop Manager, select the Error Correction (ECM) option. ECM sending or receiving should help with problems due to poor telephone lines. However, you might have to try again. If the sending fax unit does not support ECM transmission, the document is sent in the normal mode without error checking.

❑ ***Is a received fax not printing?***

Your toner cartridge might be out of toner. Change the toner cartridge. Check your paper supply. Be sure you are using paper that meets the paper requirements for this unit.

❑ ***Is the quality of the received fax poor?***

Remember, the sending fax machine usually determines document quality. Ask the other party to check that their top cover and scanning glass are clean.

❑ ***Does the MultiPASS printer continue to ring if you pick up a voice call with another phone?***

The MultiPASS printer does not recognize an extension phone connected to another phone jack (that is, a phone connected to the same phone line, but not connected to the MultiPASS printer).

If a call comes in and you pick it up with an extension phone, the MultiPASS printer continues to ring for a time, checks for a fax, and then disconnects.

## ***Images Are Not Scanning Properly***

❑ ***Are you having problems scanning an image with your TWAIN-compliant Windows application?***

If you installed the TWAIN-compliant Windows application after installing the Desktop Manager, there may be a problem with the TWAIN system files that were overwritten. To correct the problem, reinstall the Desktop Manager software.

☐ ***Is scanning an image very slow?***

If you change the parallel port on your computer to ECP (Extended Capabilities Port), scanning speed and throughput increases.

For details on using ECP, refer to your user documentation or contact technical support for your computer.

## ***Documents Are Not Being Copied.***

☐ ***Is the operation panel blank?***

You might have a power problem. Check that the power cord is plugged securely into the unit, and that your electrical source is OK.

☐ ***Is the MultiPASS printer warm to the touch?***

The unit might have overheated and shut down. Turn the unit off and let it cool down for several minutes but less than one hour, or you might lose information registered in memory. Try using it again.

☐ ***Are you not able to make copies?***

The handset might be out of the cradle. Make sure the handset is in its cradle.

## ***Documents Are Not Printing Correctly.***

☐ ***Is the operation panel blank?***

You might have a power problem. Check that the power cord is plugged securely into the unit, and that your electrical source is OK.

❑ ***Is the MultiPASS printer warm to the touch?***

The unit might have overheated and shut down. Turn the unit off and let it cool down for several minutes but less than one hour, or you might lose information registered in memory. Try using it again.

❑ ***Is the ALARM light on?***

Turn off the MultiPASS printer unit. Wait 15 seconds and plug it in again to turn on power. The ALARM light should go out. Also check to see if paper is jammed.

❑ ***Does the MultiPASS printer LCD display read “Check Paper Size”?***

If you are printing from a Windows application, the print setup options may be conflicting. Make sure that the selected paper sizes correspond in the following:

❑ **MultiPASS printer paper feeder**

The paper in the MultiPASS printer feeder must be the same size as the settings you have selected, whether it feeds manually or automatically.

❑ **Desktop Manager**

In the Desktop Manager, on the Setup menu, click Receive Fax. On the Receive Fax tab, make sure the correct size is selected from the Paper Size list.

❑ **Windows application you are using**

In the Windows application's Print dialog box, click the setup button (usually Page Setup or Print Setup). Make sure the correct paper size is selected.

If the MultiPASS printer LCD display still reads “Check Paper Size”, access the MultiPASS printer properties from the Windows desktop. In the Canon MultiPASS Printer Properties dialog box, click the Paper tab. Make sure the correct paper size is illustrated in the Selected Paper box.



❑ ***Does paper not come out of the printer?***

Check that you have a bi-directional parallel cable connecting the MultiPASS printer unit to your PC. Check your computer's setup to be sure the primary parallel port is set to the appropriate printer port, for example, LPT1 or LPT2. Make sure the Print Setup option of your printing application shows Canon MultiPASS Printer as the printer selected.

❑ ***Is the printing not fast enough?***

The print options you have selected might be too complex. Set print options to the basics, such as draft quality.

❑ ***Does the job not print when using DOS?***

The MultiPASS printer driver can be used to print documents only in Windows NT; it cannot print a job in DOS.

❑ ***Is the document printing with undesirable results?***

You may experience undesirable results when printing a document if you have the Windows Printing System (or other bi-directional device, such as a later model laser printer) installed on your computer *and* you are attempting to use the same port on which you also have the MultiPASS printer connected. Be sure that the MultiPASS printer is the only device configured to a particular port. The MultiPASS printer operates properly only with a dedicated parallel port.

❑ ***Are more copies of the document printing than you expected?***

The MultiPASS printer may print more copies of the document than you expected if: (1) you specify more than one print copy in the Printer Default dialog box (when setting printer default properties for the MultiPASS printer); and (2) you specify more than one print copy in the Print dialog box (when printing a document using the MultiPASS printer). The number of copies that may print is the total of the two print copy settings. For example, if you set the number of print copies in the Printer Default dialog box to 2 copies, and in the Print dialog box to 2 copies, the MultiPASS printer may print 4 copies.

❑ ***Do you want to change the printer port for the MultiPASS printer?***

**To change the printer port:**

1. Close the MultiPASS Desktop Manager and any other MultiPASS programs, including the MultiPASS Status Monitor.
2. On the Windows desktop, click Start, and then Run.
3. In the Run dialog box, enter REGEDIT, and then click OK.
4. In the Registry Editor window, open the following folders in turn: HKEY\_LOCAL\_MACHINE, Software, Canon Information Systems, MultiPASS Desktop Manager, Shared, Device, LPT.
5. In the LPT folder, click (Default), which is displayed in the right-hand window pane.
6. On the Edit menu, click Modify.
7. In the Edit String dialog box, in the Value Data box, enter the desired printer port (such as 1 or 2). Then click OK.
8. Close the Registry Editor window.
9. Restart your computer.

## ***Paper Is Not Loading Correctly.***

❑ ***Does paper not load into the unit?***

The multi-purpose tray might contain too many sheets or paper might not be inserted all the way into the multi-purpose tray.

❑ ***Does paper not feed through one sheet at a time?***

Be sure to fan the stack of paper before placing it in the multi-purpose tray. Make sure the stack of paper does not exceed the paper limit mark.

❑ ***Does paper not feed through the automatic document feeder?***

If paper jams in the automatic document feeder, open the operation panel and remove the document gently; then close the operation panel.

**❑ *Is an envelope not loading correctly?***

Make sure you do not stack more than 7 envelopes in the multi-purpose tray.

## ***The Print Quality Is Not Satisfactory.***

**❑ *Are some of the characters not printing?***

If characters are not printing, check the parallel cable is securely plugged in at both ends; make sure your parallel cable is less than 6.6' (2m). Check your application's print setup to make sure Canon MultiPASS Printer is selected as the printer.

**❑ *Do characters not fit on the page?***

Make sure paper is aligned correctly in the sheet feeder. Check that margins and paper size are set correctly in your printing application.

**❑ *Is printing not clear?***

Check to see if you are printing using the Draft print quality option or if the Toner Saver mode is turned on.

**❑ *Do fonts not print smoothly?***

Bitmapped fonts designed for dot matrix printers will not look smooth when printed by high-resolution printers such as the MultiPASS printer. Choose another font. Make sure you install an outline font manager such as Adobe Type Manager or Bitstream Facelift, or that you choose a TrueType font.

**❑ *Is the printing not dark enough?***

You might be using the Draft print quality or the toner saver mode. Try setting print quality to High Quality. Try replacing the toner cartridge.

**❑ *Are blank pages printing?***

You may be running out of toner. Try replacing the toner cartridge.

# Appendix A

## Fax/Phone Characters

---

Whenever entering or setting up a fax or phone number in the Desktop Manager — when sending a PC fax, setting up an entry in the Address Book, or making a phone call — you use only the following characters.

<u>Character</u>	<u>Description</u>
0 to 9 * # +	Dialing digits
, P	Pause
P	Last Pause
T	Tone switch over function
.	DT detection function (Europe only)
R	PSTN/PBX switchover function (Europe only)
- ( ) Space	Display-only characters. Space cannot be used at the beginning of a number.

Fax/Phone  
Characters

# Glossary

---

## A

### **Application**

Software prepared for a specific function or set of functions. Examples of an application program include word processing programs and MultiPASS Desktop Manager. Developers who make application programs include drivers that support different types of printers.

### **ASCII**

Acronym for American Standard Code for Information Interchange. A set of definitions for the bit composition of characters and symbols. ASCII defines 128 symbols using 7 binary bits and 1 parity bit.

### **Automatic feed**

Method by which paper can be fed into the printer when the built-in paper feeder is used.

## B

### **Bi-directional parallel interface port**

An interface connection that is capable of both sending and receiving information. For example, when you print or send a PC fax from your computer, information is sent from your computer to the MultiPASS printer. When you scan or receive a fax into your computer, information is sent from the MultiPASS printer to your computer.

## C

### **Centronics**

An interface standard for parallel data transmission. The interface on this unit is a Centronics-type parallel interface.

## **D**

### **Default setting**

A system setting incorporated at the factory and permanently registered application. Also, a value or a setting that the software assumes until or unless you specify another value.

### **dpi**

Dots per inch. A unit of measurement for indicating a printer's resolution.

## **G**

### **Graphic**

A written, printed, or electronically displayed symbol or drawing. Also, characters or text that have been generated by a computer graphics application program.

### **Grayscale**

A color in black and white as a result of different intensities of black.

## **L**

### **Landscape orientation**

The horizontal orientation of your document or image across the length of the page. The term landscape is derived from pictures of the landscape, which are usually horizontal in format.

## **P**

### **Paper feed**

Movement of a sheet of paper into the printer's paper path.

### **PC fax**

An electronic way to send and receive faxes from your computer. A PC fax is sent from or received in a computer. Using the MultiPASS printer you can send and receive PC faxes and the MultiPASS Desktop Manager lets you save, sort, and print the PC faxes.

### **Portrait orientation**

The vertical orientation of your document or image across the width of the page (letter style). This is the opposite of landscape orientation.

**Printer driver**

Software that sends printing instructions to a printer. The printer driver keeps track of the attributes of a printer and the codes a program must send to access those attributes.

**T****TWAIN**

Both a protocol and an application programmer's interface (API) that allows you to input image data directly from any source (for example: desktop and handheld scanners, video capture boards, digital cameras, and other imaging equipment) without requiring you to switch out of the application. It provides compatibility between image input devices and applications by acting as the liaison between hardware devices and software applications. Because your MultiPASS printer supports TWAIN, you can use the scanning features of the MultiPASS printer with any Windows application that supports TWAIN. Twain, the industry standard, was developed by the TWAIN working group which consists of representatives from many leaders in the scanner hardware and software industry.

## A

- active job
  - stopping in the Send Fax Manager 5-19
- active status
  - in the Send Fax Manager 5-18
- Address Book
  - adding and editing a group entry 5-25
  - adding and editing an individual entry 5-23
  - exporting 5-29
  - group entry, described 5-22
  - individual entry, described 5-22
  - overview of the window features 5-21
  - printing 5-27
  - sorting the entries 5-22
- adjusting document size
  - described 5-47
- adjusting image type
  - described 5-48, 7-35
- Advanced Received Fax setup
  - for the MultiPASS printer 8-11
- annotations
  - including when sending a PC fax 5-9
  - moving 7-62
  - removing 5-65, 7-63
  - resizing 7-62
  - revising 7-61
  - selecting 7-61
- arrangement
  - of documents in Document View 7-12
- attaching
  - a document to an e-mail message 7-11
- Attention Needed status
  - for the MultiPASS Server 8-28

## B

- black and white scan
  - setting options 6-11

- black point
  - adjusting 5-54, 7-45
- blurring
  - an image, described 5-55, 7-46
- brightness
  - adjusting 5-49, 7-40

## C

- cable
  - system requirement, described 1-5
- color
  - adjusting 5-49, 7-40
- color level
  - adjusting 5-49, 7-40
- command bar
  - overview for the Desktop Manager 4-5
- contrast
  - adjusting 5-49, 7-40
- contrast and brightness
  - adjusting for black and white scans 6-25
- cover page
  - attaching to a PC fax 5-8
  - creating a new 5-34
  - deleting 5-68
  - designing for a fax 5-31
  - editing an existing 5-65
  - previewing 5-8
  - renaming 5-67
  - reverting to last saved 5-66
- Cover Page Designer
  - overview of the window features 5-32
- creator
  - assigning index criteria 7-21
  - searching documents by 7-27
  - setting up a search index 7-16
- custom print mode
  - setting, saving 3-9



- custom scan resolution
  - adjusting 6-9
  - deleting 6-8
  - setting 6-7
- custom tone curve
  - using to adjust scan tone 6-23, 6-25

## **D**

- date
  - searching documents by 7-27
- default printer driver
  - setting 2-7
- defaults
  - setting for printing, described 2-7
- deleting
  - a document 7-8
  - a folder 7-8
- Desktop Manager
  - features overview 1-2
  - introduction 1-1
  - overview of the window features 4-3
  - reinstalling after uninstalling 8-31
  - software package overview 1-3
  - uninstalling 8-29
- dial a phone number
  - from the Desktop Manager 8-23
- dialing prefix
  - specifying 5-6
- disconnect
  - MultiPASS printer 8-28
- document area
  - overview for the Desktop Manager 4-5, 5-18
  - viewing documents 4-8
- document display area
  - in the MultiPASS Viewer 7-34
- document size
  - adjusting 5-47
- document tasks
  - adjusting size 7-34

- annotating 5-63, 7-30
- arranging in Document View 7-12
- attaching to an e-mail message 7-11
- deleting 7-8
- exporting 7-10
- importing 7-10
- manipulating in Document View 7-12
- merging 7-14
- moving to another folder 7-5
- removing a page 7-13
- renaming 7-7
- restoring 7-9
- scrolling through multiple pages 7-12
- selecting in the Desktop Manager 7-3
- Document View
  - arranging documents 7-12
  - described 4-8
  - manipulating a document 7-12
- draw graphic
  - adding to a document 5-40, 7-61
- dust
  - removing 5-61, 7-51

## **E**

- e-mail
  - attaching a document 7-11
  - mailing a fax document, described 5-5
- Envelopes
  - printing guidelines for the L6000 3-3
- Error Warning status
  - for the MultiPASS Server 8-28
- exporting
  - a document, described 7-10
  - an Address Book 5-29

## **F**

- Failed status
  - in the Send Fax Manager 5-19
- fax cover page
  - creating a new 5-34

- deleting 5-68
- designing 5-31
- Fax Log
  - using 5-14
- fax memo
  - described 5-12
- fax number
  - specifying for a PC fax 5-5
- fax recipient
  - including from Address Book 5-6
  - specifying 5-5
- fax sender
  - specifying when sending a PC fax 5-8
- fax / phone characters
  - using in the Desktop Manager A-1
- folder
  - creating a new 7-5
  - deleting 7-8
  - In Box, overview 4-7
  - moving a document 7-5
  - opening 4-8
  - overview for the Desktop Manager 4-6
  - renaming 7-7
  - Scan, overview 4-7
  - Sent Fax, overview 4-7
  - system-defined, described 4-6
  - Trash, overview 4-7
  - user-defined, described 4-8
- folders list
  - overview for the Desktop Manager 4-4

## G

- gamma curves
  - adjusting scan tone with 6-19
- group dial assignments
  - for the MultiPASS printer 8-17
- group entry
  - adding and editing in the Address Book 5-25

- described for the Address Book 5-22
- using when sending a fax 5-26

## H

- highlighting
  - a document in the Document Viewer 5-64, 7-60
- histogram tone levels
  - adjusting for scans 6-20

## I

- Idle status
  - for the MultiPASS Server 8-27
- image tone
  - described. *See* scan tone
- image type
  - adjusting 5-48
- importing
  - a document in the Desktop Manager 7-10
- In Box folder
  - overview 4-7
- indexing documents
  - assigning index criteria 7-21
  - by creator, described 7-16
  - by keyword, described 7-19
  - by owner, described 7-18
  - described 7-15
  - overview 7-15
  - setting up the search index 7-16
- individual entry
  - adding and editing in the Address Book 5-23
  - described for the Address Book 5-22
- installation
  - overview 2-2
  - preparing for 2-3

## **J**

- job
  - in the Send Fax Manager 5-16
  - stopping in the Send Fax Manager 5-19
- job status
  - in the Send Fax Manager 5-18

## **K**

- keyword
  - assigning index criteria 7-23
  - searching documents by 7-27
  - setting up a search index 7-19

## **L**

- Launcher
  - adding application to 8-21
  - using 8-20
- layout area
  - described for the Cover Page Designer 5-34
- List View
  - described 4-9

## **M**

- manipulating a document
  - in Document View 7-12
- merge
  - two documents 7-14
- mirroring a scan image
  - explained 6-15
- moire patterns
  - removing 7-48
- moving
  - a document 7-5
- multi-page document
  - scrolling 7-12

- MultiPASS printer
  - disconnecting 8-28
  - introduction 1-1
  - reconnecting 8-29
- MultiPASS printer options
  - overwriting 2-6
- MultiPASS Status Monitor
  - status messages 8-27
  - using 8-25
- MultiPASS Viewer
  - adjusting the display size 5-45, 7-36, 7-37
  - default options 7-66
  - opening and closing 7-31
  - overview of the window features 7-32
  - printing a document 7-63

## **N**

- noise
  - removing 5-57, 7-47

## **O**

- On Hold status
  - in the Send Fax Manager 5-19
- onetime recipient
  - specifying 5-5
- options
  - Send Fax, described 5-7
  - setup, overwriting for the MultiPASS printer 2-6
- owner
  - assigning index criteria 7-22
  - searching documents by 7-27
  - setting up a search index 7-18

## **P**

- page removal
  - in a document 7-13

- paper options
    - setting in the printer driver 3-14
  - PC fax
    - deleting after sending 5-9
    - holding 5-11
    - including annotations 5-9
    - providing a memo on the cover page 5-9
    - rescheduling in the Out Box folder 5-19
    - sending from your computer 5-2
    - sending later 5-10
    - sending now 5-10
    - specifying fax send information 5-8
  - phone characters
    - using in the Desktop Manager A-1
  - phone handset
    - using from the Desktop Manager 8-23
  - port
    - for connecting the MultiPASS printer 2-3
  - Preferences setup
    - for the MultiPASS printer and Desktop Manager 8-3
  - preview area
    - ScanGear window 6-3
  - preview scan
    - adjusting 6-12
    - adjusting selection size 6-14
    - adjusting tone 6-16
    - adjusting your view of 6-13
    - mirroring an image 6-15
    - moving an image 6-15
    - reversing the tone 6-15
    - rotating an image 6-16
    - scaling the output size 6-16
    - setting options 6-6
  - print mode
    - choosing 3-7
    - custom 3-9
    - deleting 3-13
    - editing 3-12
    - quality settings 3-9
    - saving 3-11
    - saving as a file 3-13
  - printer driver
    - displaying information about 3-17
    - setting as the default 2-7
  - printer driver settings
    - changing 3-6
    - reduce or enlarge 3-16
    - setting paper options 3-14
  - printer port
    - changing 9-9
  - printing
    - a document in the Desktop Manager 7-4
    - a document with the MultiPASS printer 3-2
  - printing options
    - setting defaults, described 2-7
  - printing status
    - for the MultiPASS Server 8-27
- Q**
- queue status
    - in the Out Box folder 5-18
- R**
- Receive Fax setup
    - for the MultiPASS printer 8-9
  - Receiving Fax status
    - for the MultiPASS Server 8-28
  - reconnecting
    - MultiPASS printer 8-29
  - reinstall
    - after uninstalling the Desktop Manager 8-31
  - removing a page
    - from a document 7-13
  - removing dust
    - described 5-61, 7-51

- removing JPEG artifacts
  - described 5-59, 7-49
- removing moire patterns
  - described 7-48
- removing noise
  - described 5-57, 7-47
- removing scanner noise
  - described 7-53
- removing show-through
  - described 5-60, 7-50
- renaming
  - a document 7-7
  - a folder 7-7
- reschedule
  - a PC fax for sending 5-19
- restarting
  - MultiPASS connection 8-29
- restoring
  - a document 7-9
- Retry status
  - in the Out Box folder 5-18
- reversing scan tone
  - explained 6-15
- rotating a scan image
  - explained 6-16

## **S**

- scaling scan output size
  - explained 6-16
- scan
  - from a Windows application 6-5
  - from the Desktop Manager 6-4
- scan driver
  - displaying information about 6-4
- Scan folder
  - overview 4-7
- scan mode
  - setting 6-6
- scan options tabs
  - ScanGear window 6-3

- scan preferences
  - setting 6-9
- scan preview
  - adjusting the selection size 6-14
  - adjusting tone 6-16
  - adjusting your view of 6-13
  - mirroring an image 6-15
  - moving an image 6-15
  - reversing the tone 6-15
  - rotating an image 6-16
  - scaling the output size 6-16
- scan resolution
  - setting 6-7
- scan tone
  - adjusting 6-16
  - adjusting contrast and brightness 6-25
  - adjusting histogram levels 6-20
  - changing gamma curves 6-19
  - using a custom tone curve 6-23, 6-25
  - using tone curves 6-22
- ScanGear window
  - features 6-2
  - tone tab 6-17
- scanner noise
  - removing 7-53
- scanning
  - from a Windows application 6-5
  - overview 6-2
  - setting black and white options 6-11
  - setting preferences 6-9
  - setting scan mode 6-6
  - setting scan resolution 6-7
  - with the Desktop Manager 6-4
- scanning status
  - for the MultiPASS Server 8-27
- Scheduled status
  - in the Send Fax Manager 5-18
- scheduling
  - a PC fax for sending 5-19
- scrolling
  - through a multi-page document 7-12

- search index
    - assigning criteria to documents 7-21
    - creator index entry 7-21
    - displaying the document 7-24
    - keyword index entry 7-23
    - owner index entry 7-22
    - search results 7-29
    - searching by keyword 7-27
    - searching by owner 7-27
    - searching by text string 7-28
    - setting up 7-16
    - setting up keywords 7-19
    - setting up owner 7-18
    - specifying documents to search 7-29
    - specifying search criteria 7-26
  - search results
    - displaying last search 7-30
    - reviewing 7-29
  - searching for documents
    - overview 7-15, 7-25
  - selecting
    - annotations, described 7-61
    - documents, described 7-3
  - selection size
    - adjusting for scan 6-14
  - Send Fax Manager
    - job statuses 5-18
    - working with jobs 5-16
  - Send Fax options
    - described 5-7
  - Send Fax setup
    - for the MultiPASS printer 8-4
  - Sending Fax status
    - for the MultiPASS Server 8-27
  - Sent Fax folder
    - overview 4-7
  - setup options
    - overwriting for the MultiPASS printer 2-6
  - special characters
    - when PC faxing or phoning in the Desktop Manager A-1
  - speed dial assignments
    - for the MultiPASS printer 8-15
  - splitting
    - a document into two 7-14
  - stamp
    - adding to a document 5-37, 7-57
  - Status bar
    - ScanGear window 6-4
  - status bar
    - in the Document Viewer 7-34
    - overview for the Desktop Manager 4-6
  - status messages
    - for the MultiPASS Server 8-27
  - sticky-note
    - adding 5-63
    - adding to a document 7-54
    - editing text 5-36, 5-64, 7-54, 7-57
  - Stopped status
    - in the Send Fax Manager 5-19
  - system requirements
    - described 1-4
  - system settings
    - document deletion 8-19
  - system setup
    - e-mail attachments 8-19
    - in the Desktop Manager 8-2, 8-18
    - Include Annotations On 8-19
  - system-defined folder
    - described 4-6
- T**
- telephone handset
    - using from the Desktop Manager 8-23
  - text
    - searching documents by 7-28

- time
  - searching documents by 7-27
- tone curves
  - using to adjust scan tone 6-22
- tone graph
  - viewing 6-18
- Tone tab
  - features of the ScanGear window 6-17
- toolbar
  - described for the Cover Page Designer 5-33, 7-33
  - overview for the Desktop Manager 4-4, 5-17
  - ScanGear window 6-3
- ToolTips
  - available for the Desktop Manager 4-4
- Trash folder
  - overview 4-7

## **U**

- uninstall
  - Desktop Manager 8-29

- user-defined folder
  - described 4-8
- using the Launcher
  - described 8-20

## **V**

- variable fields
  - adjusting the appearance 5-41
  - inserting when creating a new cover page 5-36
- variables bin
  - described for the Cover Page Designer 5-34, 7-34
- viewing documents
  - as thumbnails 4-8
  - using List View 4-9

## **W**

- white point
  - adjusting 5-54, 7-45