

Compact Power Adapter CA-400

Adaptateur secteur compact CA-400




Netzadapter/Ladegerät CA-400

Alimentador de corriente compacto CA-400

Adattatore compatto CA-400

轻便型功率适配器

CA-400

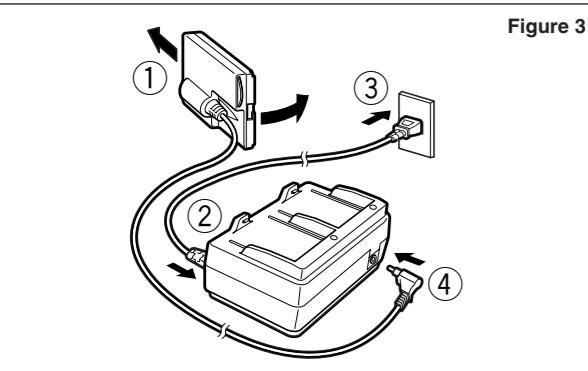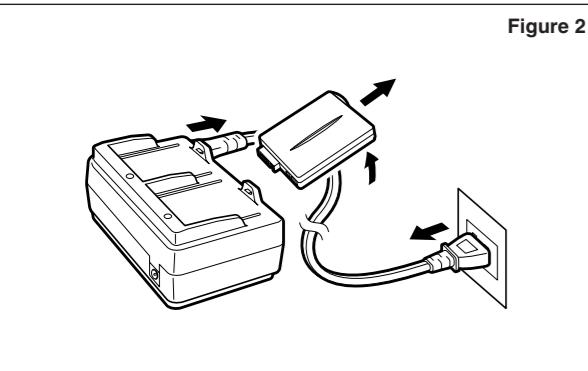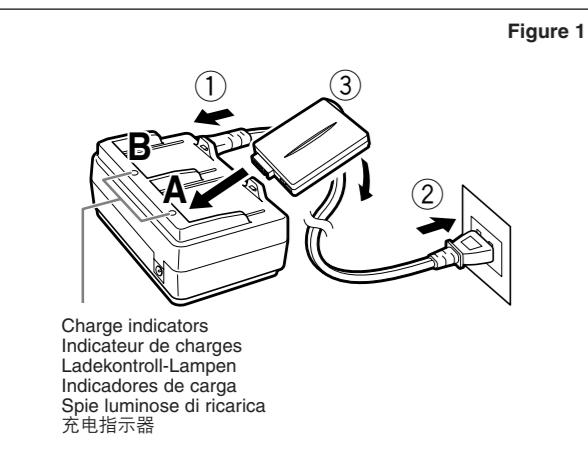

CANON INC.

CANON U.S.A., INC. NEW JERSEY OFFICE
100 Jamesburg Road, Jamesburg, NJ 08831 USACANON EUROPA N.V.
P.O. Box 2262, 1180 EG Amstelveen, the NetherlandsPUB. DIM-357 ic ©CANON INC. 2002 PRINTED IN JAPAN
0600A/AB0.6 DY8-9120-252-000 IMPRIME AU JAPON

E INSTRUCTIONS

English

Compact Power Adapter CA-400
Adaptateur secteur compact CA-400
Netzadapter/Ladegerät CA-400
Alimentador de corriente compacto CA-400
Adattatore compatto CA-400
轻便型功率适配器

Thank you for purchasing this adapter. It will charge two Canon lithium ion battery packs, and can be connected to a DC coupler to power your camcorder from a household power socket. Please check your instruction manual to make sure that your camcorder is compatible with this adapter.

To charge battery packs:

Make sure the camcorder's DC coupler is not connected to the adapter. The battery pack(s) will not charge if the DC coupler is connected to the adapter.

1. Connect the power cable to the adapter (Fig. 1-①) and plug the power cable into a household power socket (Fig. 1-②).
2. Attach one or two battery packs to the adapter (Fig. 1-③). • Insert the battery's terminals into the adapter and press the other end until it clicks into place.
- One of the two charge indicators starts flashing to show the progress of charging. Single flashes mean that the battery is less than 50% charged. Double flashes mean that it is 50-75% charged. Triple flashes mean that it is more than 75% charged. (All charging levels are approximates.) The indicator glows steadily when the battery pack is fully charged.
- If you attach two battery packs, they are charged one following the other (i.e. sequentially).
- In this case, a red charge indicator shows the progress of charging for the battery pack that you attached first. (Or for the battery pack attached to the side labelled A, if you attached both before plugging the adapter into a household power socket.) When the indicator starts to glow steadily (the first battery is fully charged), the second charge indicator shows the progress of charging for the other battery pack. When both battery packs are fully charged, both indicators glow steadily.
- To check the remaining power of a battery pack, attach a single battery pack to the adapter, and check the charge indicator.
3. Remove the battery pack. Unplug the adapter and disconnect the power cable from the adapter (Fig. 2).

To power your camcorder from a household power socket:

1. Connect the DC coupler to the camcorder (Fig. 3-①). Refer to your camcorder's instruction manual for details.
2. Connect the power cable to the adapter (Fig. 3-②) and plug the power cable into a household power socket (Fig. 3-③).
3. Connect the DC coupler to the adapter's DC terminal (Fig. 3-④).

To disconnect the adapter:

1. Turn the camcorder off and detach the DC coupler.
2. Disconnect the DC coupler from the adapter.
3. Unplug the adapter and disconnect the power cable from the adapter.

Notes:

- If the adapter does not seem to be working, this may be because its safety circuit has been activated. Unplug the adapter, wait a few minutes, and plug it again. (If it still does not work, it has malfunctioned and should be returned to a Canon Service Center for repair.)
- If the adapter is used next to a TV, it may cause the TV to emit noise—move the adapter away from the TV or the antenna/aerial cable.

Never unplug the adapter during use, and never disconnect the DC coupler from the adapter when the camcorder is being powered from a household power socket.

When powering your camcorder from a household power socket you do not need to remove the battery packs from the adapter, but charging will not take place until you remove the DC coupler from the adapter (charging then begins from the side labelled A).

Be sure to unplug the adapter when you have finished using it.

The adapter can be used with a power supply between 100 and 240 V AC. Contact your Canon dealer for information about plug adapters for overseas use.

To prevent equipment breakdowns and excessive heating, do not connect this adapter to voltage converters used by travelers, or special power sources such as on aircraft, ships or DC to AC inverters, etc.

Use only specified products with this adapter.

You can only use the BP-400 Series Battery Packs with this adapter.

Do not disassemble the adapter, do not get it wet, and do not expose it to shock or vibration, or to direct sunlight. Avoid exposure to high temperatures, such as in a closed car in hot weather, and do not leave it near heat-radiating equipment, such as a stove or heater.

Specifications:
Power supply: 100-240 V AC, 50/60 Hz
Power consumption: 40 W
Rated output: Adapter mode: 7.2 V, 2.0 A DC
Charger mode: 8.4 V, 1.0/2.5A CC (mode charge)

Operating temperature range: 0°~40°C (32°~104°F)
Dimensions: 75 x 120 x 53 mm (3 x 4 3/4 x 2 1/8 in)
Weight: 250 g (8 7/8 oz) (without power cable)

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

Canon is a trademark of Canon Inc.

When the replacement of power supply is required, please return it to the responsible nearest Canon Service Center, and please replace it with the same type number CA-400 or equivalent.

Date of Purchase
Dealer Purchased From
Dealer Address
Dealer Phone No.
Model No. CA-400
Serial No.

CAUTION:
TO PREVENT ELECTRIC SHOCK,
MATCH WIDE BLADE OF PLUG TO
WIDE SLOT, FULLY INSERT.

F INSTRUCTIONS

Français

Compact Power Adapter CA-400
Adaptateur secteur compact CA-400
Netzadapter/Ladegerät CA-400
Alimentador de corriente compacto CA-400
Adattatore compatto CA-400
轻便型功率适配器

Nous vous remercions d'avoir choisi cet adaptateur. Il vous permet de charger deux batteries lithium-ion Canon et peut être raccordé à votre caméscope pour l'alimenter à partir d'une prise secteur. Veuillez vous reporter au mode d'emploi de votre caméscope pour s'assurer que celui-ci est compatible avec cet adaptateur.

Pour charger les batteries:

Assurez-vous que le coupleur DC du caméscope n'est pas raccordé à l'adaptateur. La ou les batteries ne se chargeront pas si le coupleur DC est raccordé à l'adaptateur.

1. Connectez le câble d'alimentation à l'adaptateur (Fig. 1-①) et branchez le câble d'alimentation sur une prise secteur (Fig. 1-②).
2. Attachez une ou deux batteries au adaptateur (Fig. 1-③). • Insérez les bornes de batterie dans l'adaptateur et appuyez sur l'autre extrémité jusqu'à ce qu'elle s'encliquette.
- Un des deux indicateurs de charge commence à clignoter pour indiquer que le processus de charge est en cours. Des clignotements simples signifient que la batterie est chargée à moins de 50%. Des clignotements doubles indiquent que la batterie est chargée entre 50 et 75%. Des clignotements triples indiquent que la batterie est chargée à plus de 75%. (Tous les niveaux de charge indiqués sont approximatifs.) L'indicateur clignote rapidement lorsque la batterie est complètement chargée.
- Si vous attachez deux batteries, elles sont chargées une après l'autre (dans l'ordre).
- Dans ce cas, un indicateur de charge rouge montre la progression du chargement de la batterie installée en premier (ou de la batterie installée sur le côté A, si vous avez installé les deux batteries avant de brancher l'adaptateur sur une prise secteur.) Lorsque l'indicateur reste allumé (la première batterie est alors chargée), le second indicateur de charge s'allume pour indiquer que la seconde batterie commence à être rechargeée. Lorsque les deux batteries sont complètement chargées, les deux indicateurs sont allumés de façon continue.
- Pour vérifier la capacité restante d'une batterie, installez une seule batterie sur l'adaptateur et vérifiez l'indicateur de charge.
3. Retirez la batterie puis débranchez l'adaptateur et le cordon de l'adaptateur (Fig. 2).

Pour alimenter votre caméscope à partir d'une prise domestique:

1. Branchez le coupleur DC au caméscope (Fig. 3-①). Référez-vous au mode d'emploi de votre caméscope pour de plus amples détails.
2. Raccordez le câble d'alimentation à l'adaptateur (Fig. 3-②) et branchez le câble d'alimentation sur une prise secteur (Fig. 3-③).
3. Branchez le coupleur DC sur la borne de sortie DC de l'adaptateur (Fig. 3-④).

Pour débrancher l'adaptateur:

1. Mettez le caméscope hors tension et débranchez le coupleur DC.
2. Débranchez le coupleur DC de l'adaptateur.
3. Débranchez l'adaptateur et le cordon de l'adaptateur.

Remarques:

- Si l'adaptateur ne semble pas fonctionner, cela peut être dû au fait que son circuit de sécurité a été activé. Débranchez l'adaptateur, attendez quelques minutes et rebranchez-le. (En cas de mauvais fonctionnement, il est défectueux et devra être retourné au centre après-vente Canon pour être réparé.)

Tenez toujours l'adaptateur éloigné du téléviseur ou de l'antenne/aérienne.

Ne jamais débrancher l'adaptateur pendant son utilisation, et ne jamais débrancher le coupleur DC de l'adaptateur alors que le caméscope est alimenté par le courant secteur.

Quand le caméscope est alimenté à partir d'une prise secteur il n'est pas nécessaire d'enlever les batteries de l'adaptateur, mais le chargement ne pourra commencer que lorsque le coupleur DC aura été déconnecté de l'adaptateur (le chargement commencera alors à partir du côté marqué "A").

• Ne jamais débrancher l'adaptateur après l'emploi.

L'adaptateur peut être utilisé sur 100 et 240 V AC. Pour obtenir plus d'informations sur les adaptateurs à faire pour l'utilisation outre-atlantique, contactez votre revendeur Canon.

Pour éviter toute perte et échauffement excessif de la machine, ne raccordez pas cet adaptateur aux convertisseurs de tension de voyage, à des sources d'alimentation spéciales comme celles qui existent sur les avions et les bateaux, ni à des inverseurs CC-CA.

Utilisez seulement des produits recommandés avec cet adaptateur.

Seules les batteries BP-400 peuvent être utilisées avec cet adaptateur.

Ne démontez pas l'adaptateur, ne le mouillez pas et ne l'exposez pas aux chocs et vibrations, ou aux rayons du soleil.

Évitez toute température trop élevée, comme dans un véhicule fermé par temps chaud, et ne le laissez pas à proximité d'un appareil dégagant de la chaleur, comme un four ou un appareil de chauffage.

Spécifications:
Power supply: 100-240 V AC, 50/60 Hz
Power consumption: 40 W
Rated output: Adapter mode: 7.2 V, 2.0 A DC
Charger mode: 8.4 V, 1.0/2.5A CC (mode charge)

Operating temperature range: 0°~40°C (32°~104°F)
Dimensions: 75 x 120 x 53 mm (3 x 4 3/4 x 2 1/8 in)
Weight: 250 g (8 7/8 oz) (without power cable)

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

Canon is a trademark of Canon Inc.

When the replacement of power supply is required, please return it to the responsible nearest Canon Service Center, and please replace it with the same type number CA-400 or equivalent.

Date of Purchase
Dealer Purchased From
Dealer Address
Dealer Phone No.
Model No. CA-400
Serial No.

CAUTION:
TO PREVENT ELECTRIC SHOCK,
MATCH WIDE BLADE OF PLUG TO
WIDE SLOT, FULLY INSERT.

De ANLEITUNGEN

Deutsch

Compact Power Adapter CA-400
Adaptateur secteur compact CA-400
Netzadapter/Ladegerät CA-400
Alimentador de corriente compacto CA-400
Adattatore compatto CA-400
轻便型功率适配器

Wir danken Ihnen für das Vertrauen, das Sie Canon mit dem Kauf dieses Geräts erwiesen haben. Das CA-400 dient zum Aufladen von zwei Lithium-Ionen-Akkus und kann darüber hinaus einen Camcorder mit Netzstrom betreiben. Vergewissern Sie sich bitte anhand der Bedienungsanleitung, dass Ihr Camcorder mit diesem Gerät kompatibel ist.

ES INSTRUCCIONES

Español

Compact Power Adapter CA-400
Adaptateur secteur compact CA-400
Netzadapter/Ladegerät CA-400
Alimentador de corriente compacto CA-400
Adattatore compatto CA-400
轻便型功率适配器

Muchas gracias por su compra de este alimentador. Alimentará paquetes de batería de ión de litio de Canon, y puede ser conectado a un acoplador de CC para alimentar a su videocámara desde un tomacorriente del hogar. Consulte su manual de instrucciones para asegurarse de que su videocámara es compatible con este alimentador.

I ISTRUZIONI

Italiano

Compact Power Adapter CA-400
Adaptateur secteur compact CA-400
Netzadapter/Ladegerät CA-400
Alimentador de corriente compacto CA-400
Adattatore compatto CA-400
轻便型功率适配器

Grazie di aver acquistato questo prodotto. Si tratta di un adattatore paquetes de batería de ión de litio de Canon, y puede ser conectado a un acoplador de CC, al fin de alimentar la videocámara desde una presa doméstica. Si prega di controllare il manuale delle istruzioni e verificare che la propria videocamera sia compatibile con questo prodotto.

C 使用说明书

中文

Compact Power Adapter CA-400
Adaptateur secteur compact CA-400
Netzadapter/Ladegerät CA-400
Alimentador de corriente compacto CA-400
Adattatore compatto CA-400
轻便型功率适配器

感谢购买本适配器，对此表示谢意。本适配器用于两组佳能锂离子电池充电，也可连接直流耦合器从家用电源插座向视频摄像机供电。为使用户能顺利使用本适配器，请参阅视频摄像机的使用说明。

Para cargar paquetes de batería:

Stellen Sie sicher, dass der Gleichstromkoppler nicht angeschlossen ist. Andernfalls ist kein Aufladen möglich.

Para cargar paquetes de batería:

Asegúrese de que el acoplador de CC de la videocámara no está conectado al alimentador. El/los paquete(s) de batería no se cargarán si el acoplador de CC está conectado al alimentador.

Para cargar paquetes de batería:

Verifique que el acoplador CC de la videocámara no esté conectado al adaptador. En caso contrario, el/los grupo/i batería no se cargarán/potrán ser ricaricati.

Para cargar paquetes de batería:

1. Colgate el cable de alimentación al adaptador (Fig. 1-①) ed inserite el cable de alimentación en una presa doméstica (Fig. 1-②).

Para cargar paquetes de batería:

2. Colgate uno o dos paquetes de batería en el adaptador (Fig. 1-③).

Para cargar paquetes de batería:

3. Colgate el cable eléctrico en el adaptador (Fig. 1-④) y encufe el cable eléctrico en un tomacorriente del hogar (Fig. 1-⑤).

Para cargar paquetes de batería:

4. Instale uno o dos paquetes de batería en el adaptador (Fig.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

ATTENTION:

DISCONNECT THE MAINS PLUG FROM THE SUPPLY SOCKET WHEN NOT IN USE.

CA-400 identification plate is located on the bottom.

For Users in the USA**FCC NOTICE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual.

If such changes or modifications should be made, you could be required to stop operation of the equipment.

Important Warning**CAUTION:**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR SACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

The adapter can be used with a power supply between 100 and 240V AC. Contact your Canon dealer for information about plug adapters for overseas use.

When the replacement of power supply is required, please return it to the responsible nearest Canon Service Center, and please replace it with the same type number CA-400.

WARNING

To reduce the risk of electric shock, do not expose this product to dripping or splashing.

ATTENTION:

LORSQUE L'APPAREIL N'EST PAS UTILISE, DEBRANCHER LA FICHE D'ALIMENTATION DE LA PRISE SECTEUR.

La plaque d'identification de CA-400 est située au fond.

AVERTISSEMENT

Pour éviter tout risque de choc électrique, ne pas exposer ce produit aux écoulements ni aux aspersions d'eau.

Das Identifikationsschild befindet sich auf der Geräteunterseite.

Hinweise für Deutschland**Batterien und Akkumulatoren gehören nicht in den Haushaltsmüll!**

Im Interesse des Umweltschutzes sind Sie als Endverbraucher gesetzlich verpflichtet (Batterieverordnung), alte und gebrauchte Batterien und Akkumulatoren zurückzugeben. Sie können die gebrauchten Batterien an den Sammelstellen der öffentlich-rechtlichen Entsorgungsträger in Ihrer Gemeinde oder überall dort abgeben, wo Batterien der betreffenden Art verkauft werden. Die Batterien werden unentgeltlich für den Verbraucher zurückgenommen.

ACHTUNG:

BEI NICHTGEBRAUCH DEN NETZSTECKER AUS DER STECKDOSE ZIEHEN.

Das Typenschild von CA-400 befindet sich an der Unterseite des Geräts.

VORSICHT

Zur Verminderung der Stromschlaggefahr darf dieses Produkt keinesfalls Tropf- oder Spritzwasser ausgesetzt werden.

ATENCIÓN:

CUANDO NO LO ESTÉ UTILIZANDO DESCONECTE EL ENCHUFE DEL TOMACORRIENTE DE ALIMENTACIÓN.

La placa de identificación del CA-400 se encuentra en la parte inferior.

PELIGRO

Para reducir el riesgo de descarga eléctrica, no exponga este producto a goteo ni salpicaduras.

ATTENZIONE:

IN CASO DI NON UTILIZZO, SCOLLEGATE LA SPINA DI RETE DALLA PRESA

La targhetta d'identificazione relativa al prodotto CA-400 è collocata sulla parte inferiore.

AVVERTENZA

Al fine di ridurre il rischio di scosse elettriche, evitate di esporre il prodotto a gocce o schizzi d'acqua.

注意

当不使用适配器时, 应从电源插座拔出主插头。

警告

为了减少触电的危险, 不得将适配器放置在液体可能滴下和飞溅的地方。

IMPORTANT SAFETY INSTRUCTIONS

In these safety instructions the word "product" refers to the Compact Power Adapter CA-400A.

1. Read Instructions – All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and maintenance instructions should be followed.
5. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. The product should be cleaned only as recommended in this manual.
6. Accessories – Do not use accessories not recommended in this manual as they may be hazardous.
7. Avoid magnetic or electric fields – Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.
8. Water and Moisture – Hazard of electric shock – Do not use this product near water or in rainy/moist situations.
9. Placing or Moving – Do not place on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.
- A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Power Sources – The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Regarding other power sources such as battery power, refer to instructions in this manual.
11. Polarization – The product is equipped with a polarized 2-prong plug (a plug having one blade wider than the other). The 2-prong polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. Power Cord Protection – Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which the cords exit the product.
13. Outdoor Antenna Grounding – If an outside antenna is connected to the product, be sure the antenna is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI / NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure 3.

14. Lightning – For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, disconnect it from the wall outlet and disconnect the antenna. This will prevent damage to the product due to lightning and power-line surges.
15. Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
16. Overloading – Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
17. Objects and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Be careful not to spill liquid of any kind onto the product.
18. Servicing – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. Damage Requiring Service – Disconnect this product from the wall outlet and all power sources including battery, and refer servicing to qualified service personnel under the following conditions:
 - a. When the power-supply cord or plug is damaged.
 - b. If any liquid has been spilled onto, or objects have fallen into, the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally even if you follow the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If the product has been dropped or the cabinet has been damaged.
 - f. When the product exhibits a distinct change in performance. This indicates a need for service.
20. Replacement Parts – When replacement parts are required, be sure the service technician has used replacement parts that are specified by Canon or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating order.

