Click a tab to jump to that chapter.























Software User Guide

for Macintosh

- ImageBrowser
- PhotoStitch
- How to Use This Manual
- New Features in This Version







About this Manual

Notation Conventions

The contents of this manual are classified according to the following symbols.

IMPORTANT

• The "Important" sections contain operating precautions or important topics. Ensure that you read them.

A HINT

• The "Hint" sections contain procedural suggestions and tips for your convenience. Read them as necessary.

Operating Environment

- This manual uses Mac OS X v10.4 screen shots and procedures in the explanations. The screen shots and procedures may appear slightly different if you are using another version of Mac OS.
- The displayed screens and procedures may also differ slightly from the examples depending upon the camera or printer model in use.
- The explanations in this guide are based on the premise that a Canon compact camera will be used with the software.

Word Searches

This document is provided as an Adobe Reader document. Use Adobe Reader's Search functions to find specific words or phrases that you recall but cannot find. To access this function, in Adobe Reader click the [Edit] menu and select the [Search] option.

If you are using Adobe Reader 8 or later, you can also perform searches with the [Find] function right on the toolbar.





This page and the next present the basic functions of ImageBrowser as well as some of its special features.

To Download

Downloading (p. 10)



To Print

Printing (p. 13)



 


To View

Magnifying the Display (p. 21)



Comparing **Images** (p. 41)



- Displaying Shooting **Information** (p. 21)
- Slideshows (p. 34)



To Organize

 
Deleting (p. 19)



Using Star Ratings (p. 37)



Changing **File Names in Batches** (p. 35)



Using Comments (p. 37)



Performing Searches (p. 39)













To Edit

Adjusting
Color and
Brightness
(p. 22)



Inserting
Text
(p. 23)



Converting RAW Images (p. 29)



 
Formatting Images as Wallpaper (p. 31)



Resizing Images (p. 30)



Red-Eye Correction (p. 23)







Merging Images into Panoramas (p. 28)



Extracting Still Images from Movies (p. 32)



Editing Movies (p. 28)



To Connect to a Camera

- Uploading to a Camera (p. 46)

Configuring My
Camera Settings
(p. 44)



From the Computer (p. 42)



You can change the camera's start-up image and shutter sound.

To Send Email

Attaching Images to Email (p. 33)





You can reduce image file sizes.

Previous







Table of Contents

Contents

About this Manual	2
Basic Functions & Features	3
Things to Remember	7
The Two ImageBrowser Windows	
Download Window/Organizing Window	
Browser Window	
How to Display the Browser Window	
Names of the Browser Window Parts	
How to Perform Tasks	
Selecting and Using Functions	
Mastering the Basics	
Downloading Images	
Downloading Images by Connecting the Camera to a Computer	
Printing - Single Image on a Single Page	
Printing a Single Image on a Single PageIndex Print	
How to Use CameraWindow	
First Window to Open	
Screen Showing the Image Index List and Image View	
How to Use the Browser Window	
Browser Window	
Browser Area Tasks	
Viewer (View Image) Window	
More Advanced Techniques	
Editing Images	
Trimming–Cropping a Portion of an Image	
Red Eye Correction	
Inserting Text	
Correcting Levels	
Correcting Tone Curves	
Adjusting Sharpness–Emphasizing Outlines	
Auto Adjustment	
Attaching Sounds	
Creating Panoramic Images–PhotoStitch	
Editing Movies	
Converting RAW Images	. 29







Exporting	
Changing Image (Stills) Sizes and Types	. 30
Exporting Shooting Information	
Creating Computer Screen Saver Images	
Creating Computer Wallpaper Images	
Extracting Stills from Movies	
Email	
Attaching Images to Email	
Slide Shows	
Viewing Images in Slide Shows	. 34
Image Management	. 35
Changing File Names in Batches	. 35
Sorting Images into Folders by Shooting Date	. 35
Classifying Images Into Star Ratings Folders	. 36
Configuring Image Information Settings	
Setting Star Ratings	. 37
Inserting Comments	. 37
Assigning Keywords	. 38
Searching, Filtering and Sorting Images	
Searching Images	. 39
Filtering Images	. 40
Sorting Images	. 40
Comparing Images	. 41
Comparing Multiple Images	. 41
Remote Shooting	. 42
Operating the Camera Using Computer Commands	. 42
My Camera Settings	. 44
Changing the Shutter Sound and Start-Up Image	. 44
Uploading Images	. 46
Uploading Images to a Camera	
Preference Settings	
Customizing ImageBrowser	
Appendices	
Supported Image Types	
New Features in This Version	. 49







The Two ImageBrowser Windows

Download Window/Organizing Window

The following two windows are the main ones used for ImageBrowser procedures.



Download window, which opens when a camera is connected. CameraWindow

View of camera images



You can download all or a selection of images from the connected camera.

CameraWindow closes and the screen changes after the images are downloaded from the camera.



You can view, edit and print the images in the computer.



Click this icon in the Dock.



The Viewer Window that appears when you view an image.







Basic Functions & Contents & Things to Mastering More Advanced Appendices & Features & Techniques

Browser Window

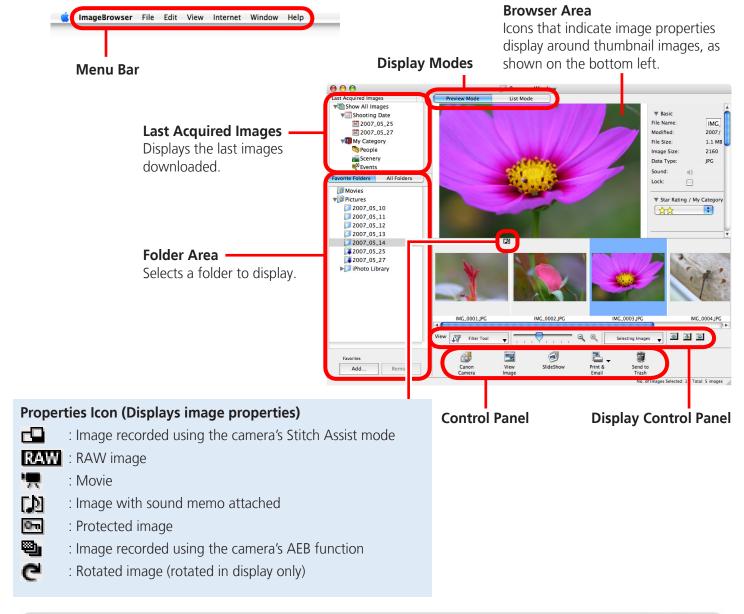
How to Display the Browser Window

The Browser Window will display after camera images are downloaded and CameraWindow closes. You can also display it by clicking the ImageBrowser icon in the Dock (the bar at the bottom of the desktop).



• If the ImageBrowser icon is not displayed in the Dock, double-click the Applications] folder, followed by the [Canon Utilities] folder, [ImageBrowser] folder and the [ImageBrowser] icon.

Names of the Browser Window Parts






Basic Functions & Contents & Things to Mastering More Advanced Appendices & Features & Techniques

How to Perform Tasks

Selecting and Using Functions

You can use many ImageBrowser functions by selecting them from the Control Panel or a menu and then following the instructions in the window that opens.

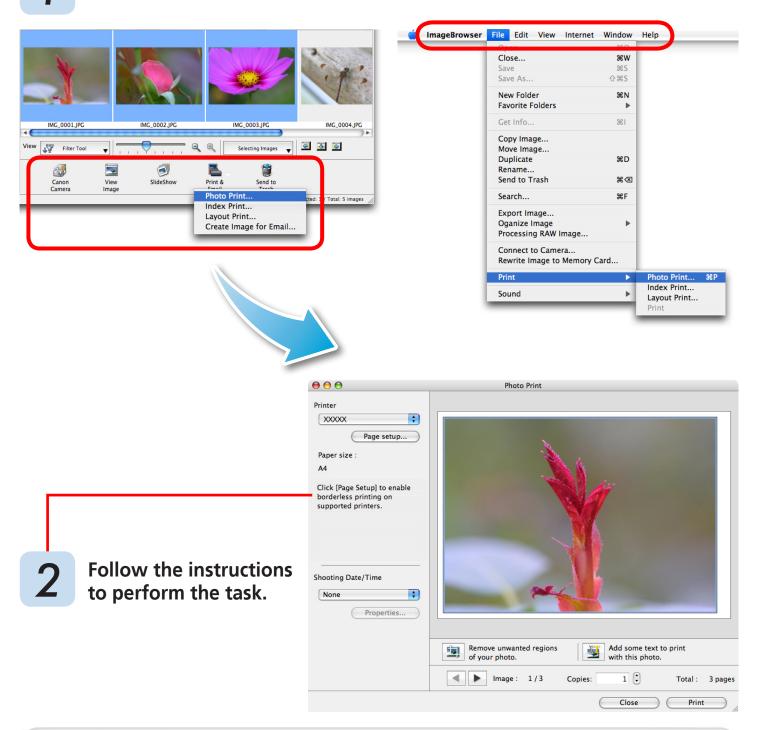Select a function from the Control Panel or a menu.









Downloading Images

Downloading Images by Connecting the Camera to a Computer

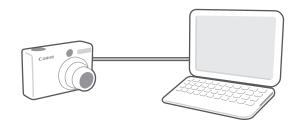
Download the camera images to the computer.




IMPORTANT

- The instructions in this software manual assume that you have correctly installed the software. See the guides supplied with your product package for software installation procedures.
- If CameraWindow fails to open when you connect the camera, click the [CameraWindow] icon in the Dock (the bar at the bottom of the desktop).
- Connect the camera to the computer with the supplied interface cable.
- 2 Set the camera to the Playback mode and switch on the power.
- Click [Transfer Untransferred Images Automatically].

The images will start to download



CameraWindow

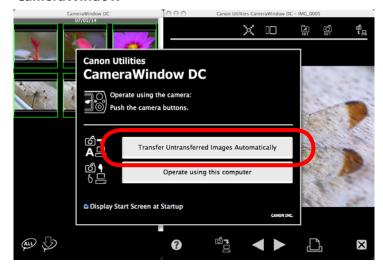








Basic Functions Contents Things to Mastering More Advanced Appendices Techniques

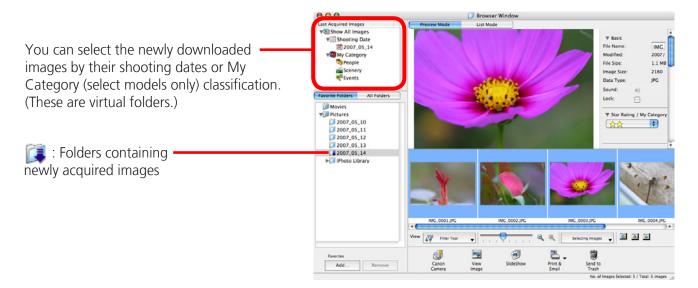When you click [OK] in the dialog that indicates the transfer is complete, the downloaded images will display in the Main Window.




• Images from memory cards with large numbers of images (more than 1,000) may not download correctly. If this happens, please use a memory card reader to download.



Changing the Download Destination Folder

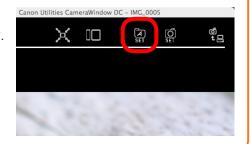The default settings save downloaded images into the [Pictures] folder. To change the destination folder, select [Operate using this computer] in CameraWindow, then click the button shown on the right, and select a folder.












Selecting Images to Download

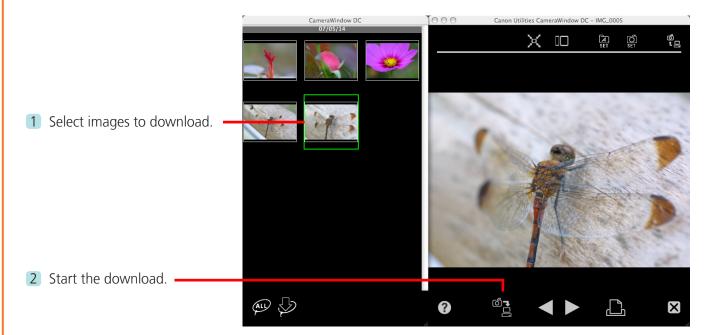To download only a selection of images from the camera, select [Operate using this computer] in CameraWindow that first appears and then perform the following procedures.




Downloading Using Camera Commands

You can use the camera's $\triangle \sim$ (Print/Share) button to download the images to the computer (Direct Transfer). See the *Camera User Guide* for Direct Transfer settings and procedures.

Downloading from a Memory Card Reader

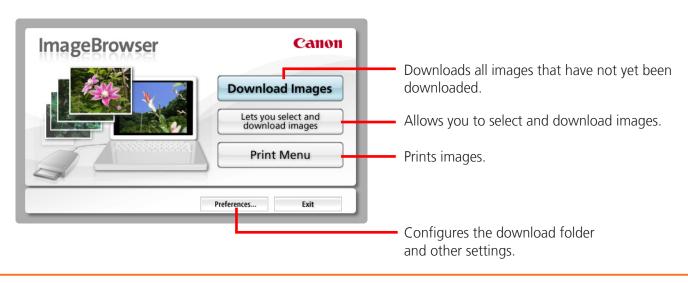ImageBrowser will start when you insert a memory card into the memory card reader, and display the following window. Use this window to perform the downloading procedures.











Printing

Printing a Single Image on a Single Page

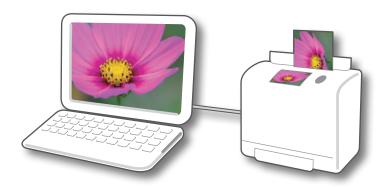
Prints one image per page.



Select images for printing.

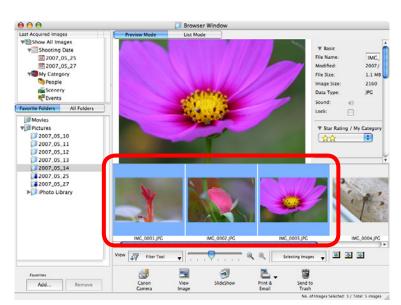

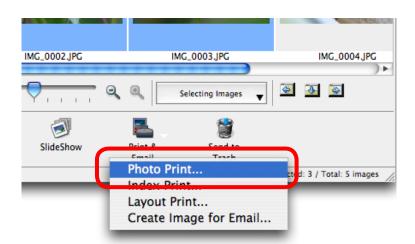Click [Print & Email], and [Photo Print].










3 Set the categories as desired.

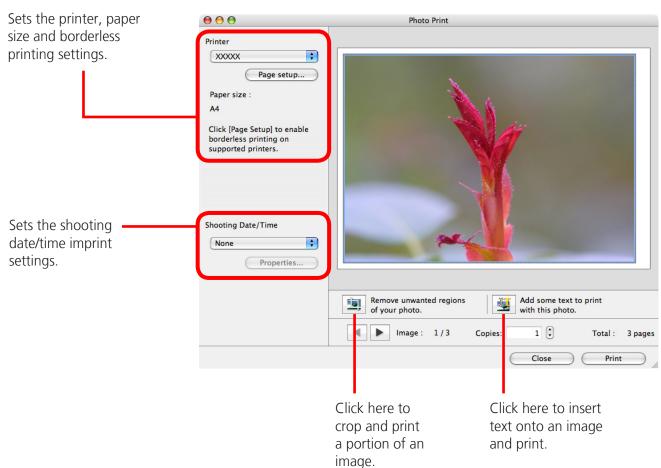



5 Click [Print].
Printing will start.

A HINT -

Laying Out and Printing

You can also select multiple images, add captions and print freely composed layouts on a single page. Click [Print & Email] in the Control Panel and select [Layout Print]. The shooting date will automatically appear when you perform a layout print if you click the [ImageBrowser] menu, followed by [Preferences] and [Layout Print], and place a check mark beside [Shooting Date].





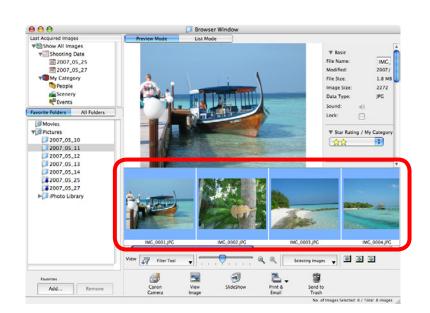


Index Print


Prints an index of the images.



7 Select images for printing.



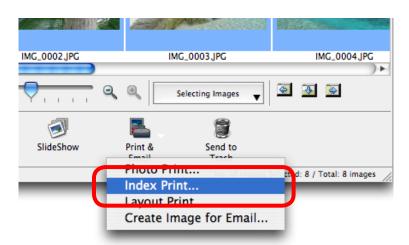Click [Print & Email], and [Index Print].












Select an image to rotate or trim.

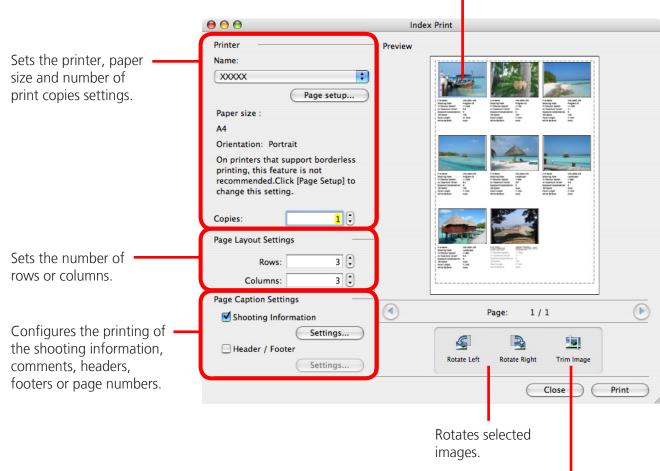

Click here to crop a portion of the selected image and print it.

- 4 Click [Print].
 Print window will display.
- Click [Print].
 Printing will start.



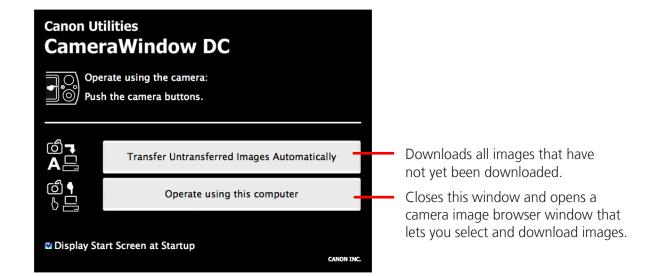




How to Use CameraWindow

First Window to Open

This is the first screen to appear in CameraWindow.










Basic Functions & Contents Things to Mastering More Advanced Appendices Techniques

Screen Showing the Image Index List and Image View

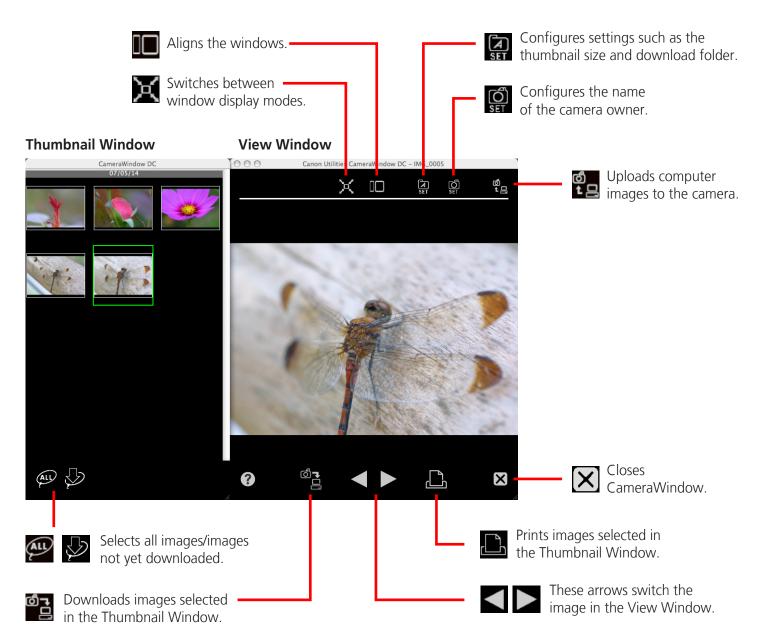The Thumbnail Window on the left of the screen displays the images on the memory card in the camera as "thumbnails" or small versions of the images in an index list. When you select an image from the Thumbnail Window, the image displays in the View Window on the right.



A HINT -

Use the Help Function

ImageBrowser is equipped with a convenient "Help" function. Use it when you are unsure how to proceed. To view it, click the [Help] menu and select [ImageBrowser Help].



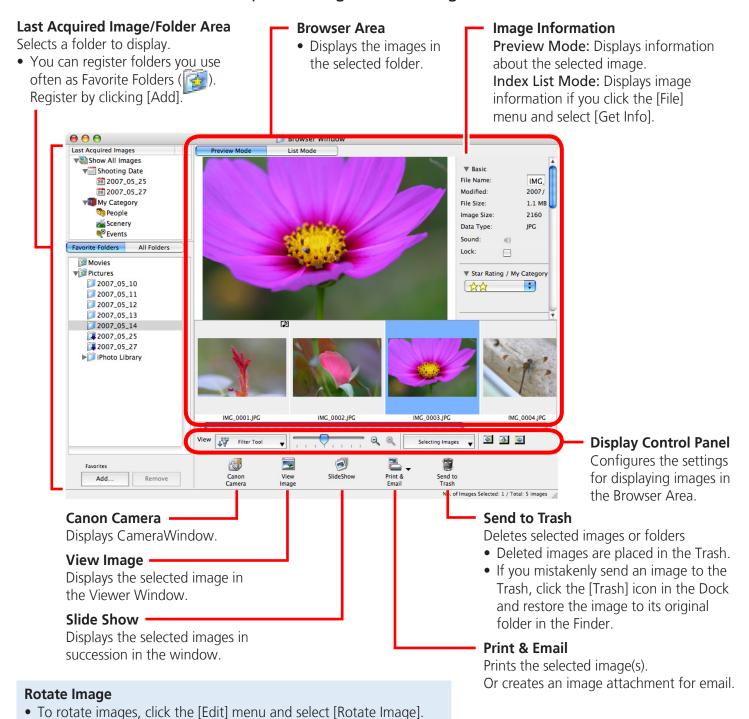




How to Use the Browser Window

Browser Window

This is the main window for performing tasks in ImageBrowser.









To rotate the original image in the displayed direction, click the [Edit] menu and select [Rotate According to Rotation Information].
Rotate movies by clicking the [Edit] menu and selecting [Movie Edit].

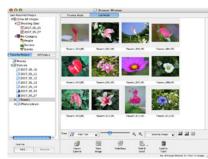
Browser Area Tasks

Display Mode

Selects a display mode for the Browser Area.



Preview Mode: allows the image information to be read while viewing the image.



List Mode: allows thumbnails to be viewed at a size suited for easy viewing.

Functions Used in the Browser Area

Create New Folder

To create a new folder in the Browser Area, click the [File] menu and select [New Folder].

Select Images

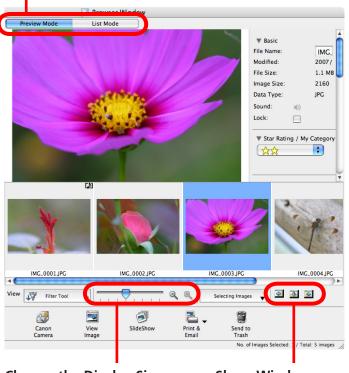
Clicking an image in the Browser Area selects that image. To select multiple images, hold down the [shift] key or [**#**] (Command) key while clicking images, or hold down the [option] and [shift] key together and click a starting and ending image to select a range of adjacent images.

Display Images

Double-clicking an image in the Browser Area (or selecting the image and clicking view limage), displays it in the Viewer Window.

Move, Copy Images

To move an image between folders, drag it over the destination folder and release the mouse button. To copy an image, hold the [option] key while releasing the mouse button as above.



Change the Display Size

You can change the display ratio (Zoom mode) or thumbnail size (Scroll mode) with the slider.

Show Window

You can switch between showing/hiding the Folder Area, Control Panel and Information Panel.



Right-Click Context Menus

Right-clicking (or [ctrl] key and clicking) over a window or image displays contextual menus. These menus contain the functions available in the current context as well as other convenient functions. Use the context menus to increase your efficiency.








Viewer (View Image) Window

Double-clicking an image in the Browser Window displays it in this window.

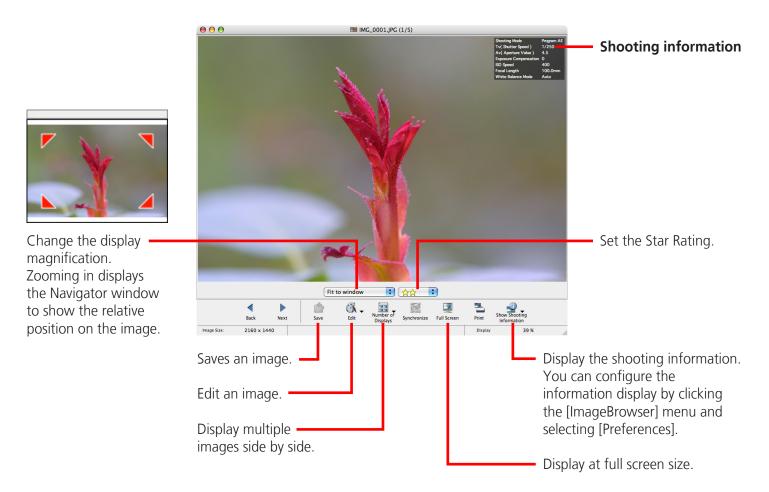

- The [Display Original Image] button will display beneath RAW images in the Viewer Window. Click this button to display the converted image in the Viewer Window.
- Buttons appear beneath movies selected in the Viewer Window, allowing you to replay the movie or adjust the sound volume. The [Save as Still Image] button will appear above the Star Rating section. Clicking this button extracts still images from the movie.







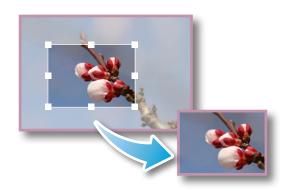
Editing Images

IMPORTANT

- The original image will be overwritten after an image is edited unless the file name is changed before saving it. To preserve the original image intact, change the file name when saving the edited image.
- This section introduces the procedures for starting from the [Edit] button in the Viewer Window, but you can also start the same process by clicking the [Edit] menu and selecting [Edit still image].

Trimming-Cropping a Portion of an Image

Use this to delete unnecessary portions of the image and leave only the necessary portions.






- You can also input values or an aspect ratio to specify the trim area.
- Movies and RAW images cannot be edited.

Color/Brightness Adjustment

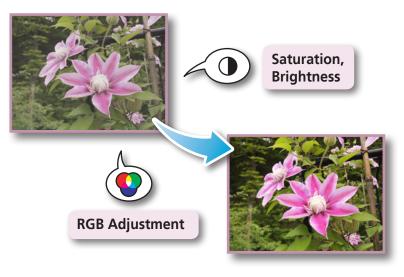Adjusts the images' RGB values (red, green, blue) and the saturation and brightness.





Movies and RAW images cannot be edited.



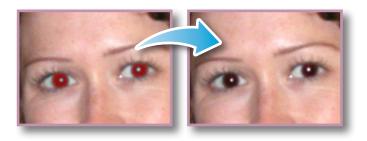




Basic Functions Things to Mastering **More Advanced Appendices** Contents Remember & Features the Basics **Techniques**

Red Eye Correction

Restores eye appearance to the original color when light reflected from the flash makes them appear red.



- Click [Start] when Auto Mode is selected.
- Switch to Manual Mode if Auto Mode cannot correct the image and select the location of the eye to correct.



Procedures

Double-click an image.

[Edit] and [Red Eye Correction].

Movies and RAW images cannot be edited.

Inserting Text

Use this to insert text onto the image.



You can freely adjust the font, size, color and text attributes.





Procedures

- Double-click an image.
- 2 [Edit] and [Insert Text].
- Placing a checkmark in the [Antialias] box causes the text edges to blend in with the underlying image.
- Movies and RAW images cannot be edited.



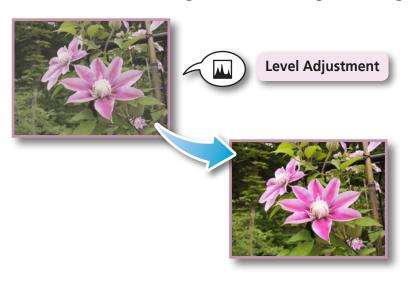




Basic Functions Things to **Mastering More Advanced** Contents **Appendices** & Features Remember the Basics **Techniques**

Correcting Levels

You can adjust the highlights (brightest portions), shadows (darkest portions) and midtone levels of an image while viewing its histogram.







Movies and RAW images cannot be edited.

Correcting Tone Curves

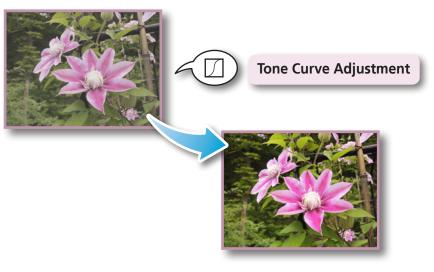 You can adjust the color balance and brightness of an image using its tone curve (input/output conversion graph of image brightness).





Movies and RAW images cannot be edited.










Basic Functions Things to **Mastering More Advanced Appendices** Contents Remember & Features the Basics **Techniques**

Adjusting Sharpness-Emphasizing Outlines

Makes images appear sharper by emphasizing the outlines of subjects, such as people and objects.

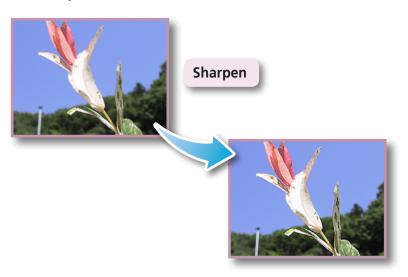




• Movies and RAW images cannot be edited.

Auto Adjustment

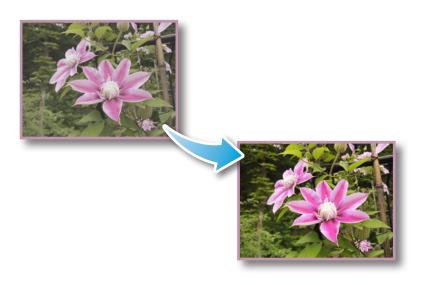Automatically adjusts the image color balance and brightness.





Movies and RAW images cannot be edited.









More Advanced Basic Functions Things to Mastering **Appendices** Contents & Features Remember the Basics **Techniques**

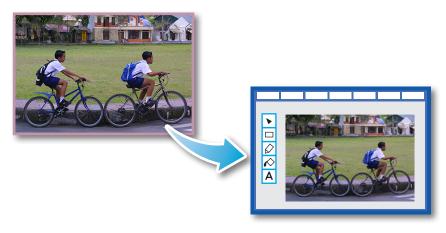
Using Other Editing Software

If you register another image editing program with ImageBrowser in advance, you can use that software to edit an image selected in ImageBrowser.

Registering an Editing Program



Editing Images with a Registered Editing Program





Double-click an image.



[Edit] and [Edit with Registered Application].

- The shooting information may be lost from images recorded with the camera and then processed and saved with another image editing program.
- Movies and RAW images cannot be edited.



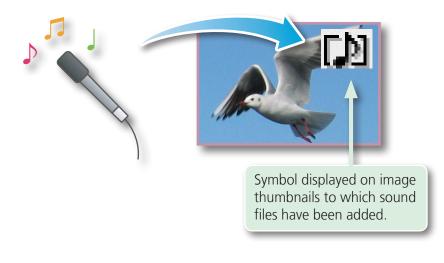


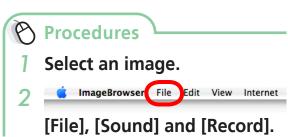


Attaching Sounds

You can add sound to images and play back the sounds.

Adding Sound






- ImageBrowser's Sound Recorder uses the Mac OS X recording function. If required, prepare such equipment as a microphone, and check that recording is enabled in the [System Preferences], [Sound] window.
- To delete a recorded sound, click the [File] menu and select [Sound], followed by [Send to Trash].
- To record a new sound for an image that already has one associated with it, click the [File] menu and select [Sound], followed by [Record].

IMPORTANT

• Sounds cannot be attached to movies.

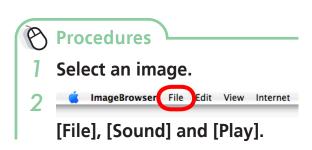Playing an Image Sound File





• You can also play sounds in the Preview Mode and the File Information Window.








Creating Panoramic Images-PhotoStitch

You can create wide panoramic images by moving the camera slightly when recording a series of images and merging them into one image.

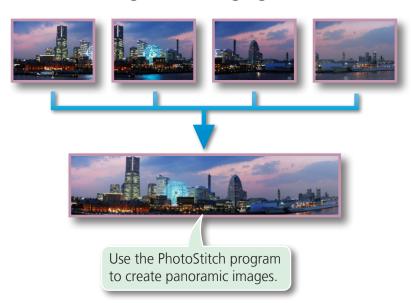



Movies and RAW images cannot be edited.

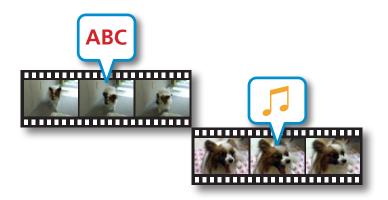
A HINT -

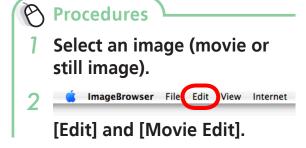
Using the Stitch Assist Mode

If you use the camera's Stitch Assist mode to record the images, PhotoStitch can automatically detect the image order and merge direction, making it easier to merge the images. (Some camera models may not feature the Stitch Assist mode.)

Editing Movies

You can create original movies by linking movie clips and still images. You can even add titles and other text, background music and various special effects to the movie.





 You can configure the default settings for editing movies by clicking the [MovieEdit Task] menu and selecting [Preferences].







Basic Functions Things to Mastering More Advanced **Appendices** Contents & Features Remember the Basics **Techniques**

Converting RAW Images

You can convert RAW images to JPEG and TIFF images.

possible



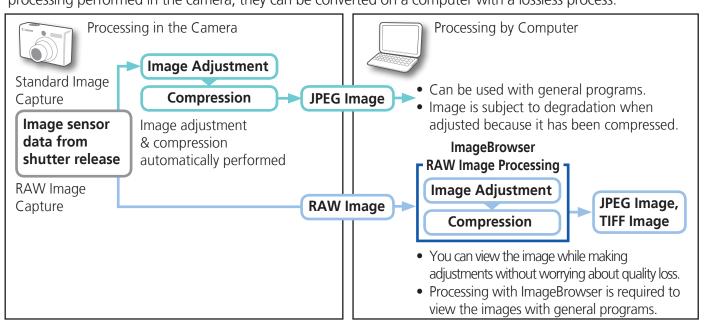
a) HINT 🤈

About RAW Images

Color adjustment

RAW images contain the data captured by the camera's image sensor without modification. Since they contain raw data that differs from the usual JPEG images by not having any image adjustment or compression processing performed in the camera, they can be converted on a computer with a lossless process.

Color space configuration



IMPORTANT

• RAW images can only be captured on certain camera models that list "RAW" as one of the data types included in the "Specifications" section of the Camera User Guide.



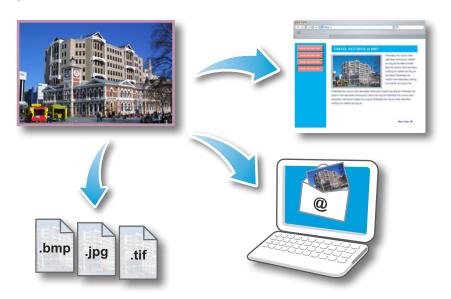


 


Exporting

Changing Image (Stills) Sizes and Types

You can change an image's size and format when exporting it so that it can be published on the Internet or attached to an email message.






- 3 [Edit and Save Image]
- 4 [Next >]
- You will lose the shooting information if you save images as a type other than JPEG.

Exporting Shooting Information

You can export the shooting information recorded with an image, such as the shutter speed and exposure, as a text file.



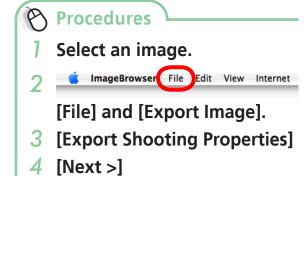failed photos or compare the settings for several images.










Creating Computer Screen Saver Images

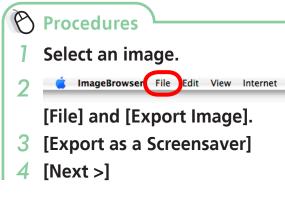You can export images to serve as computer screen savers.






Creating Computer Wallpaper Images

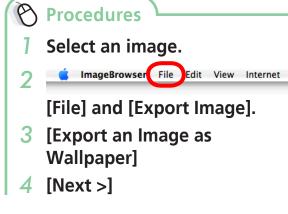You can export images to serve as computer wallpaper images.













Extracting Stills from Movies

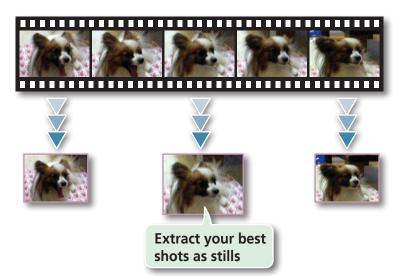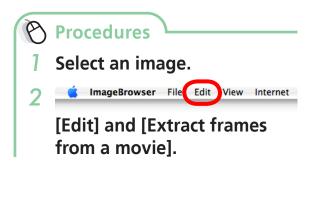You can extract and save stills from your favourite frames recorded in a movie.











Email

Attaching Images to Email

You can send images as email file attachments.





- You can configure how the email program automatically starts up after the image is created by opening the [Applications] folder, and double-clicking the [Mail] icon to start the Mail program, and clicking the [Mail] menu, followed by [Preferences] and the [General] tab.
- Images in the [Email Images] folder can be found by opening the [Users] folder on the startup disk, followed by the [User Login Name], [Library], [Preferences], [ImageBrowserUserData] and [Mail] folder.








Slide Shows

Viewing Images in Slide Shows

A multiple selection of images can be shown at full size on the screen in succession as a slide show.

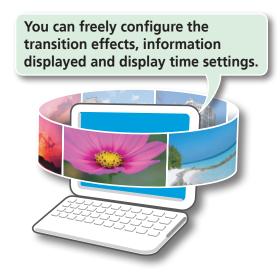



 You can configure the slide show display method by clicking the [View] menu and selecting [Slide Show Options].

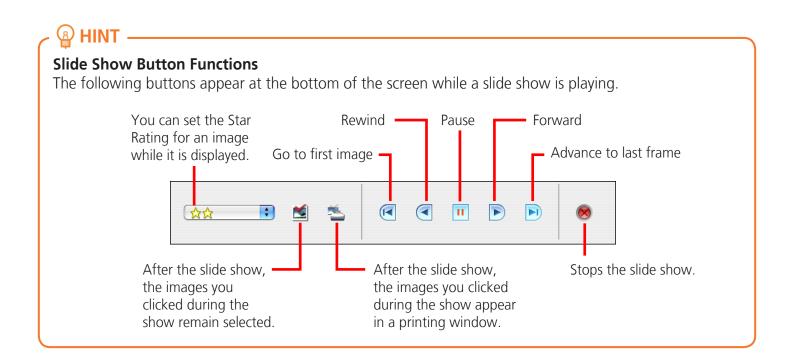




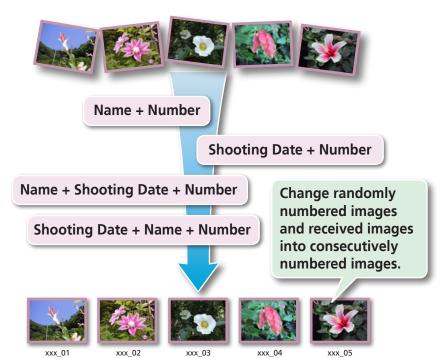


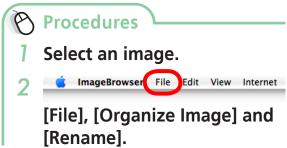


Image Management

Changing File Names in Batches

You can change the file names of multiple images in one procedure.

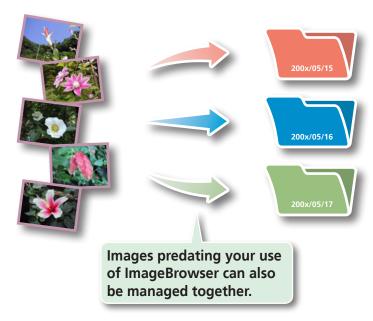




- You can change individual file and folder names by clicking on the file name in Preview mode or with the File Information Window.
- Changing the image name in ImageBrowser also changes the actual file name on the disk.

Sorting Images into Folders by Shooting Date

You can sort images into folders by their shooting dates.













Classifying Images Into Star Ratings Folders

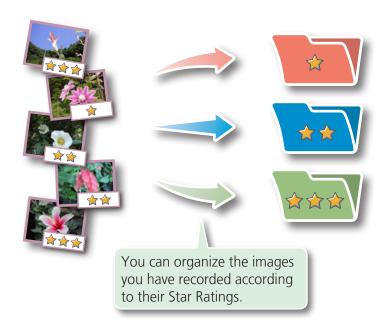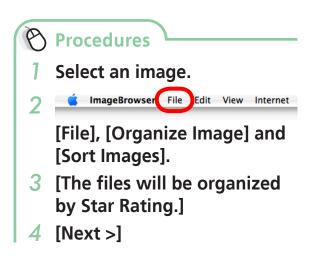You can classify images according to their Star Ratings into separate folders.











More Advanced Basic Functions Things to Mastering **Appendices** Contents & Features Remember the Basics **Techniques**

Configuring Image Information Settings

Setting Star Ratings

You can set the Star Ratings used in searching and displaying images in the index list.



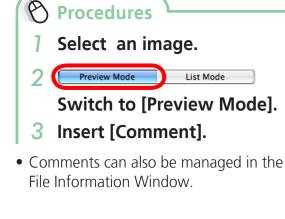


• You can also set the Star Ratings by accessing the [Edit] menu, the File Information Window or the Viewer Window.

Inserting Comments

You can freely insert your choice of text as Comments.












Assigning Keywords

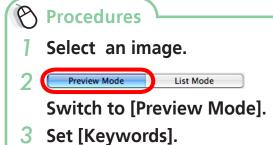You can set Keywords for use in image searches.





- Keywords can also be managed from the [Edit] menu or File Information Window.
- To add keywords, click the [Edit] menu and select [Manage] from the [Keyword] submenu.

A HINT

About the Image Information

This chart shows the information other than shooting information that can be added to images.

Information Type	My Category	Star Ratings	Comments	Keywords
Content	Categories such as People, Scenery, etc.	Rated on basis of 3 rankings: 全人	Text input without restriction regarding the shooting circumstances or associated memories.	Selections are made from a list (editable) of keywords, such as the photographic subject, place or action.
Configuration Method	Configured in Camera	Configured in ImageBrowser		
Used in Searches	_	0	0	0
Used as Filter Criteria	0	0	_	_
Display beneath Thumbnail	0	0	0	_

Categories displayed beneath thumbnails can be selected from the [View] menu and [View Settings] submenu.



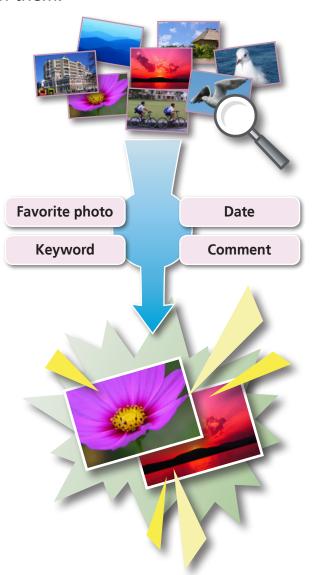


 


Searching, Filtering and Sorting Images


Searching Images

You can search images using parameters extracted from the information associated with them.





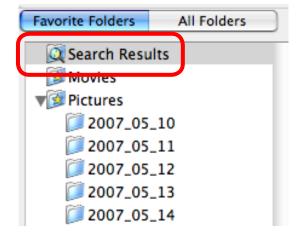 After a search, the correlated images display in the [Search Results] folder.





Tasks Related to Search Results

You can select images in the [Search Results] folder and perform operations on them, such as printing or copying them to other folders.

IMPORTANT

• Please note that deleting an image from the [Search Results] folder deletes the original image. Use caution in deleting items from this folder.





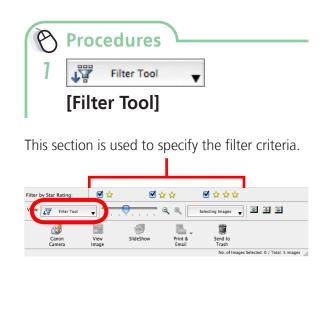


Basic Functions Things to **Mastering More Advanced** Contents **Appendices** & Features Remember the Basics **Techniques**

Filtering Images


You can use filters to display only images meeting the selected parameters in the Browser Area.





Sorting Images

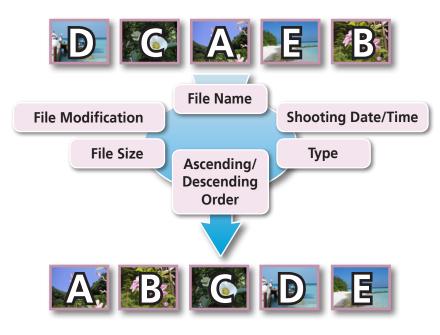You can sort images in the Browser Area based on the specified parameters.














Comparing Images

Comparing Multiple Images

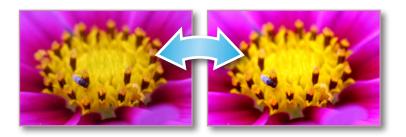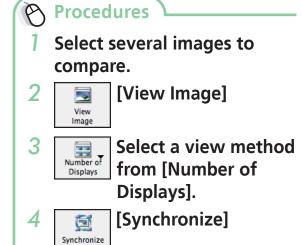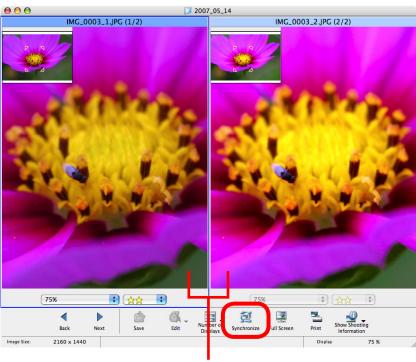
When a good photo opportunity arises, you can shoot the same subject using different shutter speeds and exposures. In ImageBrowser, it is easy to compare images so that minute differences can be detected.







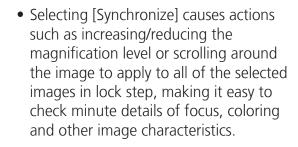Actions, such as scrolling or changing the magnification, are performed on both images no matter which image it is performed upon.










Basic Functions Things to Mastering More Advanced **Appendices** Contents & Features Remember the Basics **Techniques**

Remote Shooting

Operating the Camera Using Computer Commands

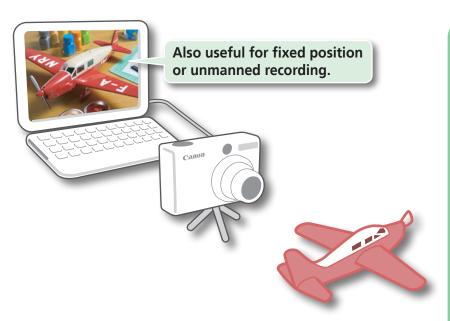You can activate the shutter of a connected camera from the computer.





Procedures Procedures

- Connect the camera to the computer.
- 2 Set the camera to the Playback mode and switch it on.
- 3 If CameraWindow opens, click [Operate using this computer], followed by $[\times]$.
- 4 Open the [Applications] folder, [Canon Utilities] folder, [CameraWindow] folder, and double-click the [RemoteCapture DC] icon.

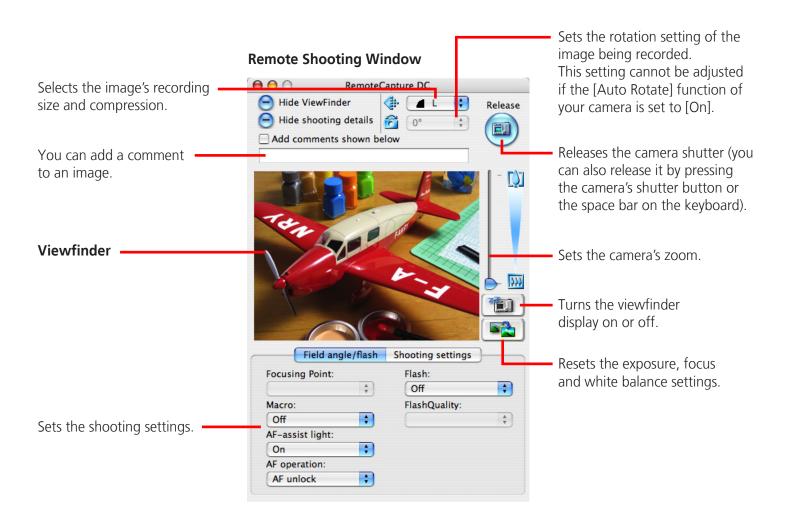
IMPORTANT

- Remote shooting is only available with certain camera models that list it as one of the features in the "Specifications" section of the Camera User Guide.
- Ensure that you turn off your computer's Sleep feature before you begin remote shooting. The results cannot be guaranteed if the computer enters Sleep mode while remote shooting.
- Except for the shutter button, the camera's buttons and switches, including the zoom, cannot be manually operated while the camera is being remotely controlled.
- The time lag between pushing the shutter button and the release of the shutter is slightly longer for remote shooting compared with the normal mode of operation.









A HINT -

Interval Timer Shooting

This method captures a set number of frames recorded at set intervals of time. Click the [Shooting] menu and select [Interval Timer Shooting]. (Short intervals may be insufficient for image transmission and saving, resulting in the failure to capture images at the specified interval.)

Timer Shooting

This method captures a single image after a set number of seconds. Click the [Shooting] menu and select [Timer shooting]. The timer interval settings range from 2 seconds to 30 seconds.

Displaying Subjects on the Camera's LCD Monitor

You can use the camera's LCD monitor or a television connected to the camera to view the subject while shooting remotely. Click the [Camera] menu and select [Camera Display Settings]. See the *Camera User Guide* for TV connection instructions.

Shooting Without Worrying about Memory Card Capacity

Clicking the [RemoteCapture DC] menu and selecting [Preferences] opens the Preferences window. If you place a check mark beside [Computer only] in the [Save Images On] section, you can continue recording without worrying about free space on the camera's memory card.





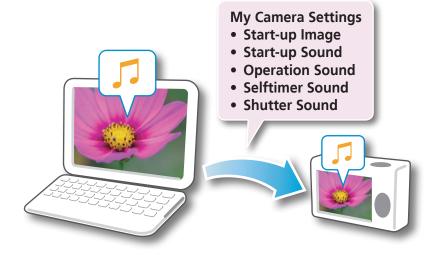


Basic Functions Things to Mastering More Advanced **Appendices** Contents & Features Remember the Basics **Techniques**

My Camera Settings

Changing the Shutter Sound and Start-Up Image

The camera's start-up image, start-up sound, shutter sound, operation sound and selftimer sound are collectively referred to as My Camera Settings. You can register your own custom images and sounds as the My Camera Settings.





Procedures

- Connect the camera to the computer.
- 2 Set the camera to the Playback mode and switch it
- 3 If CameraWindow opens, click [Operate using this computer], followed by \boxtimes .
- 4 Open the [Applications] folder, [Canon Utilities] folder, [CameraWindow] folder, and double-click the [MyCamera DC] icon.

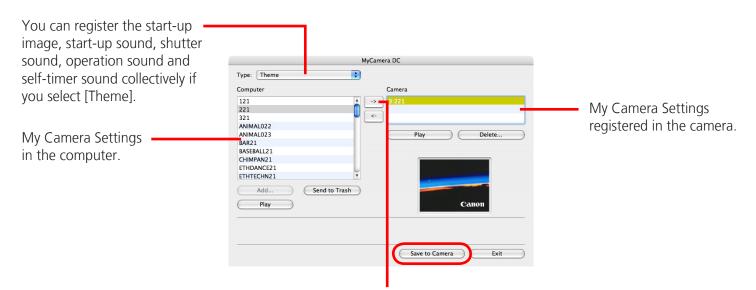
IMPORTANT

- My Camera Settings are only available with certain camera models that list them as features in the "Specifications" section of the Camera User Guide.
- Do not interrupt the connection between the camera and computer when My Camera Settings are being transmitted between them.









After selecting a My Camera Settings file from the left-hand list, select a My Camera Settings file to replace in the right-hand list and click this button, then click [Set to Camera] to register it in the camera.

A HINT

Creating My Camera Settings

Comply with the following specifications if you create My Camera Settings in image editing or sound editing software.

Start-up images: Compression Method: JPEG (Baseline JPEG)

Data Sampling: 4:2:0 or 4:2:2 Pixels (w x h): 320 x 240 pixels

Sound files: Compression Method: WAVE (Monaural)

Quantifying Bits: 8 bit

Sampling Frequency: 11.025 kHz or 8.000 kHz (Use the chart on the right as a guideline for the length of sound files recorded with the camera.)

Туре	Duration in Seconds		
	11.025 kHz	8.000 kHz	
Start-Up Sound	1.0 sec. or less	1.3 sec. or less	
Operating Sound	0.3 sec. or less	0.4 sec. or less	
Self-Timer Sound	2.0 sec. or less	2.0 sec. or less	
Shutter Sound	0.3 sec. or less	0.4 sec. or less	



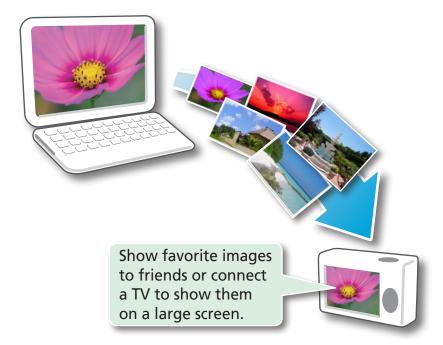




Uploading Images


Uploading Images to a Camera

You can upload images from a computer to a memory card in a camera.





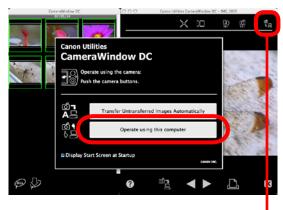- Connect the camera to the computer.
- 2 Set the camera to the Playback mode and switch it on.
- 3 Click [Operate using this computer].



- 4 Click [Send to Camera).
- If the Browser Window is open when the camera is connected (directly after downloading for instance), open CameraWindow by clicking the [Canon Camera] icon in the Control Panel of the Browser Window.

IMPORTANT

• Only images compliant with Design rule for Camera File system standards can be uploaded to your camera's memory card.



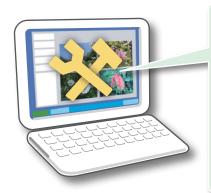




Preference Settings

Customizing ImageBrowser

You can configure ImageBrowser to operate according to your preferences.



- Overall coloring, such as window appearances
- Processing methods for images shot with the camera on end
- Categories of shooting information displayed
- Show/hide messages
- Print settings
- Registering applications









Supported Image Types

The following is a list of image types supported by ImageBrowser.

JPEG

Most cameras use this image type. It compresses at very high ratios, taking advantage of the characteristics of the human eye. However, because it is an irreversible compression method (part of the data is lost during compression), if you process and save an image repeatedly using this method, the image may become rougher. Exif JPEG is an image type that adds information such as shooting data to a JPEG image.

RAW

This is a proprietary image type provided by Canon. It allows the output of the image pixels from a digital camera without any deterioration in the quality of the image. Some cameras might not support this image type.

PICT

This is the standard image type for Macintosh. This image type is supported by most Macintosh software.

TIFF

This is a relatively popular image type. It is widely supported by non-Macintosh programs (such as Windows).

Windows Bitmap

This image type comes standard with Windows. Most Windows programs support it.

QuickTime/AVI

These are movies, which display as a movie icon in the Browser Area of ImageBrowser.







New Features in This Version

The following features were added or changed in this version of ImageBrowser. (ImageBrowser Ver. 5.8 to 6.0)

CameraWindow Makeover

CameraWindow has been completely revamped to make the linkage tighter between Canon brand cameras and ImageBrowser and to add convenience and functionality. It may not be possible to use the new CameraWindow with some camera models.

Changes to Memory Card Downloading Methods

The Camera Control Window was used in prior versions to download images from memory card readers. From this version onward, these downloads are performed as an ImageBrowser function in the Browser Window. The data reading speed has also been significantly accelerated.

Text Insertion Feature Added to Printing Functions

In addition to the ability to print such information as the shooting date with the image, you are now able to add text freely during the printing preparation. Greeting cards and photos bearing messages can now be made with ease.

Task Button Revisions

The Control Panel Buttons composition has been revised to make the tasks more intuitive.

• The starting point for the "Create Image for Email" process has shifted from the [Internet] button to the [Print & Email] button.







Software User Guide Macintosh (ImageBrowser, PhotoStitch)

Disclaimer

- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions. Canon reserves the right to change the specifications of the hardware and software described herein at any time without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon.
- Canon makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, memory cards, personal computers, peripheral devices, or use of non-Canon memory cards.

Trademark Acknowledgments

• Macintosh, the Mac logo, QuickTime and the QuickTime logo are trademarks of Apple, Inc., registered in the U.S. and other countries.

CDA-E014-010 © 2007 CANON INC.



