
 


Supplied with Camera

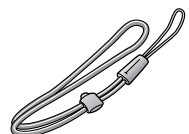

Wrist Strap
WS-DC2




Battery Pack
NB-4L^{*1}



Cover for
Battery Pack



Battery Charger
CB-2LV / CB-2LVE^{*1}

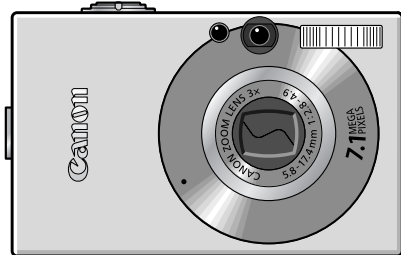

Interface Cable IFC-400PCU^{*1}



Memory Card (32MB)



Canon Digital Camera
Solution Disk

AV Cable
AVC-DC300^{*1}



Waterproof Case
WP-DC13

 


High-Power Flash
HF-DC1


AC Adapter Kit ACK-DC10



DC Coupler
DR-10



Power Cord

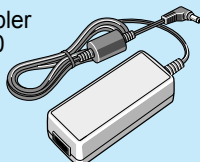

Compact Power Adapter
CA-DC10

Direct Interface Cable




USB Card
Reader




PCMCIA
Adapter



SD Memory Card^{*5}
•SDC-128M
•SDC-512MSH

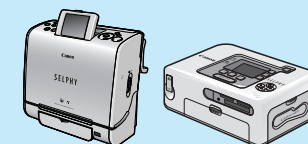


Compact Photo Printers^{*2 *3}
(SELPHY Series)

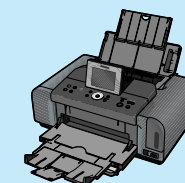

Direct Print Compatible
Bubble Jet Printer^{*4}
(PIXMA series)

USB Port


PC Card Slot

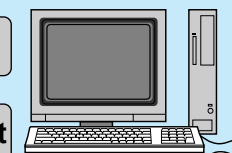

Windows/Macintosh

Video IN Terminal

Audio IN Terminal

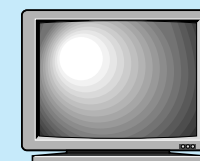

TV/Video

^{*1} Also available for purchase separately.

^{*2} See the user guide supplied with the printer for more information on the printer.

^{*3} This camera can also be connected to the Card Photo Printer CP-10/CP-100/CP-200/CP-300.

^{*4} See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.

^{*5} Not sold in some regions.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-DC2
- Battery Charger CB-2LV/CB-2LVE
- Battery Pack NB-4L
- Cover for Battery Pack
- Memory Card (32 MB)
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- System Map (this sheet)
- Warranty Card
- "Canon Customer Support" Leaflet
- "Use of Genuine Canon Accessories Recommended" Leaflet

Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

Flash

- **High-Power Flash HF-DC1**
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

Power Supplies

- **AC Adapter Kit ACK-DC10**
Kit for using power from a household electrical outlet.
Recommended to power a camera for an extended period of time or when connecting to a computer.
- **Battery Charger CB-2LV/CB-2LVE**
An adapter for charging Battery Pack NB-4L.
- **Battery Pack NB-4L**
Rechargeable lithium-ion battery.

Other Accessories

- **SD Memory Card**
SD Memory Cards are used to store images recorded by the camera.
Canon brand cards are available in 128 MB and 512 MB capacities.
- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
- **AV Cable AVC-DC300**
Use this cable to connect the camera to a TV set.
- **Waterproof Case WP-DC13**
When you attach this waterproof case to the camera, you can use it to take underwater shots at depths of up to 40 meters (130 feet), and of course it's ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
- **Bubble Jet Printers (PIXMA series)**

For more information, visit your nearest Canon retailer.