 


Supplied with Camera



 
Wrist Strap WS-700



Battery Pack
NB-3L (*1)



Cover for
Battery Pack



Battery Charger
CB-2LU / CB-2LUE (*1)



Canon Digital Camera
Solution Disk

 


Interface Cable IFC-400PCU (*1)




SD Memory Card
SDC-32M


AV Cable
AVC-DC300(*1)

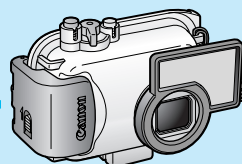

Waterproof Case
WP-DC80

 

Waterproof Case
Weight
WW-DC1

 

Soft Case
SC-DC20 (*4)



 
High-Power Flash
HF-DC1



Direct Interface Cable (*2)



PCMCIA Adapter




USB Card Reader



SD Memory Card (*4)
SDC-128M
SDC-512MSH



 
Compact Photo Printer (*3)
(SELPHY CP series)

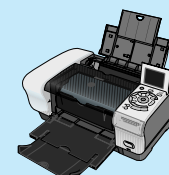


Direct Print Compatible
Bubble Jet Printer
(PIXMA series/SELPHY DS series)



 
Windows/Macintosh

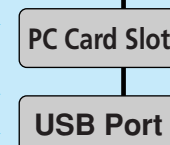

PC Card Slot
USB Port

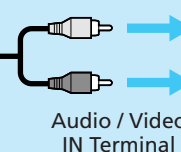 


Audio / Video
IN Terminal

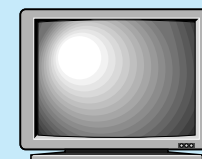 


TV / Video

 
AC Adapter Kit ACK900



DC Coupler
DR-900

 

Power Cord

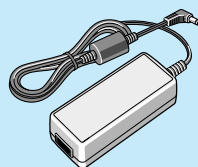 

Compact Power Adapter
CA-PS500

- (*1) Also available for purchase separately.
- (*2) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- (*3) This camera can also be connected to the Card Photo Printer CP-10/CP-100/CP-200/CP-300.
- (*4) Not sold in some regions.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-700
- Battery Charger CB-2LU/CB-2LUE
- Battery Pack NB-3L
- Cover for Battery Pack
- SD Memory Card SDC-32M
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- System Map (this sheet)
- Warranty Card
- "For Windows® XP and Mac OS X Users" Leaflet*
- "Canon Customer Support" Leaflet*
- "Use of Genuine Canon Accessories Recommended" Leaflet*

* These leaflets are printed together on one sheet of paper. Please separate them before reading.

Optional Accessories

The following camera accessories are sold separately.

Some accessories are not sold in some regions.

Flash

- **High-Power Flash HF-DC1**
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

Power Supplies

- **AC Adapter Kit ACK900**
The kit includes the following accessories.
 - **Compact Power Adapter CA-PS500**
An adapter for supplying power to operate the camera.
 - **DC Coupler DR-900**
 - **Power Cord**
- **Battery Charger CB-2LU/CB-2LUE**
An adapter for charging Battery Pack NB-3L.
- **Battery Pack NB-3L**
Rechargeable lithium-ion battery.

Connection Accessory

This connection accessory can be used with computers equipped with the following OS.

Windows: Systems running preinstalled Windows 98 Second Edition (SE), Windows Me, Windows 2000 Service Pack 4, or Windows XP (including Service Pack 1 and Service Pack 2).

Macintosh: Mac OS X (v10.2 – v10.3)
Only systems equipped with genuine built-in USB interfaces.

- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
- **Bubble Jet Printers**

For more information, visit your nearest Canon retailer.