 


# PowerShot A410 SYSTEM MAP

DIGITAL CAMERA

Canon

## Supplied with Camera

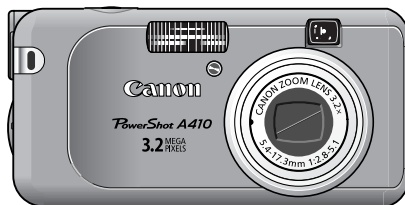

**PowerShot A410**



AA Alkaline Batteries (x2)

Interface Cable IFC-400PCU (\*1)



Multi Media Card MMC-16M

 


Canon Digital Camera Solution Disk

High-Power Flash HF-DC1




### Battery and Charger Kit CBK4-200

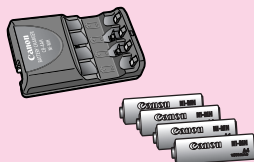

- Battery Charger CB-4AH
- AA-size NiMH batteries NB-2AH (x4)
- \* NiMH Battery NB4-200 (set of 4 AA-size) also available separately
- \* Two batteries are used for this camera

### AC Adapter Kit ACK800

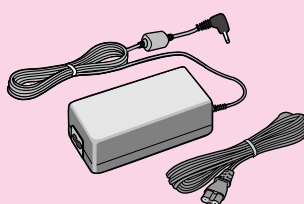 

- Compact Power Adapter CA-PS800
- Power Cord



USB Card Reader



PCMCIA Adapter

Direct Interface Cable (\*2)



SD Memory Card  
• SDC-128M  
• SDC-512MSH



 
SELPHY CP Series Compact Photo Printers (\*3)



Direct Print Compatible Bubble Jet Printer (PIXMA series/ SELPHY DS series)



Windows/Macintosh



PC Card Slot  
USB Port

- ◆ (\*1) Also available for purchase separately.
- ◆ (\*2) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- ◆ (\*3) This camera can also be connected to the Card Photo Printer CP-10/CP-100/CP-200/CP-300.

## Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-800
- AA Alkaline Batteries (x2)
- Multi Media Card MMC-16M
- Interface Cable IFC-400PCU
- Canon Digital Camera Solution Disk
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- "For Windows® XP and Mac OS X Users" Leaflet
- System Map (this sheet)
- "Canon Customer Support" Leaflet
- Warranty Card

## Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

### Flash

- **High-Power Flash HF-DC1**  
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

### Power Supplies

- **AC Adapter kit ACK800**  
This adapter lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.
- **Battery and Charger Kit CBK4-200**  
This dedicated battery charger kit includes both a charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Convenient when taking or playing back large numbers of images and playing for extended periods of time.
- **NiMH Battery NB4-200**  
A set of four rechargeable AA-size NiMH batteries. (Two batteries are used for this camera.)

### Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

Windows: System running preinstalled Windows 98 Second Edition (SE), Windows Me, Windows 2000 Service Pack 4, or Windows XP (including Service Pack 1 and Service Pack 2).

Macintosh: Mac OS X (v10.2-v10.3)  
\* Only systems equipped with genuine built-in USB interfaces.

- **Interface Cable IFC-400PCU**  
Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).

### Other Accessories

- **SD Memory Card**  
SD Memory Cards are used to store images recorded by the camera.  
Canon brand cards are available in 128 MB and 512 MB capacities.

## Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
- **PIXMA series printers**

For more information, visit your nearest Canon retailer.