 


Canon

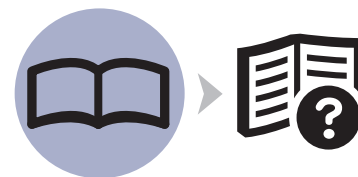

ENGLISH
繁體中文

PIXMA Pro 9500 Mark II

Getting Started

入門指南

Make sure to read this manual before using the printer. Please keep it in hand for future reference.
確保在使用印表機之前閱讀本手冊。請妥善保管以便日後使用。



Q T 5 2 1 7 8 V 0 1

Contents

目錄

1 Preparation 準備

2 Turn the Power On 開啟電源



3 Install the Print Head 安裝列印頭



4 Install the Ink Tanks 安裝墨水盒



5 Install the Software 安裝軟體



6 Loading Paper 載入紙張

After Installing the Printer
印表機安裝完成後

■ Symbols

The following symbols are used to mark important instructions. Observe these instructions.



Caution

Instructions that, if ignored, could result in personal injury or material damage.



Instructions that must be observed for safe operation.



Additional explanations.



Descriptions for operations that take some time to complete.

- Microsoft is a registered trademark of Microsoft Corporation.
- Windows is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Windows Vista is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Macintosh and Mac are trademarks of Apple Inc., registered in the U.S. and other countries.
- Adobe, Adobe Photoshop, Adobe RGB and Adobe RGB (1998) are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and or other countries.

Model Number: K10336 (Pro9500 Mark II)

■ 符號

以下符號用於標記重要的說明。請留意這些說明。



注意

如果忽視這些使用說明，會導致人身傷害或物質損毀。



為了能夠安全地操作，必須留意這些說明。



附加說明。



描述需要一段時間完成的操作。

- Microsoft為 Microsoft Corporation的註冊商標。
- Windows為 Microsoft Corporation在美國和 / 或其他國家 / 地區的商標或註冊商標。
- Windows Vista為 Microsoft Corporation在美國和 / 或其他國家 / 地區的商標或註冊商標。
- Macintosh和 Mac為 Apple Inc.在美國和其他國家 / 地區註冊的商標。
- Adobe、Adobe Photoshop、Adobe RGB和 Adobe RGB (1998)為 Adobe Systems Incorporated 在美國和 / 或其他國家 / 地區的註冊商標或商標。

 
 
 
 
型號：K10336 (Pro9500 Mark II)

1 Preparation 準備

■ Check the Included Items ■ 檢查包裝箱中包含的物品

Before turning on the printer, remove all the orange tapes and the protective sheets.


開啟印表機之前，移除所有的橙色膠帶和保護材料。

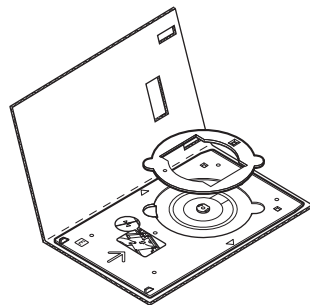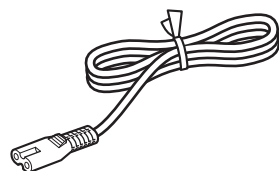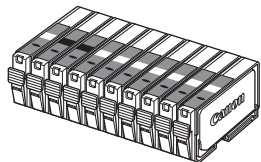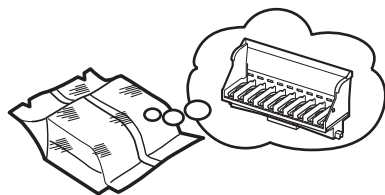

• A USB cable is necessary to connect the printer with your computer.

• USB 電纜線是連接印表機和電腦所必需的。

 
- Choosing a Location
- 選擇位置

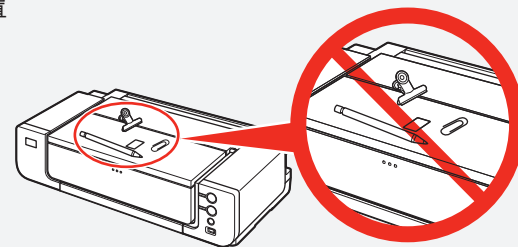

- Do not install the printer where an object may fall on it. The object may fall inside the printer, resulting in malfunction.
- Do not place any object on top of the printer. It may fall into the printer when opening covers, resulting in malfunction.
- 請勿將印表機安裝在物件可能掉落在其上的位置。物件可能會掉落到印表機中，導致出現故障。
- 請勿在印表機上放置任何物件。開啟機蓋時物件可能掉落到印表機中，導致出現故障。

- Manuals
- Warranty
- Setup CD-ROM (containing the drivers, applications and on-screen manuals)

 - 手冊
- 保固單
- 安裝光碟（包含驅動程式、應用程式和電子手冊）

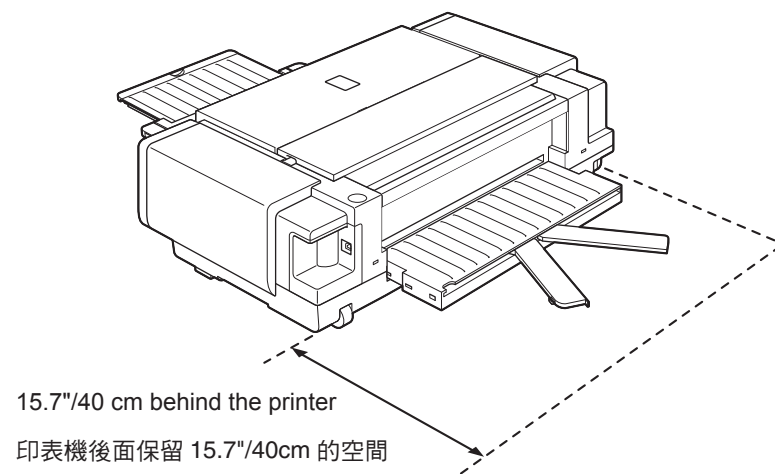

- Place the printer on a flat surface.
- Do not place any object in front of the printer.
- You can print on large size paper such as 14" x 17"/355.6 x 431.8 mm or thick paper by loading the paper in the Front Tray. In that case, keep a space of 15.7"/40 cm behind the printer.

 
- 將印表機放置在平面上。
- 請勿在印表機前放置任何物件。
- 透過在前端托盤中載入紙張，可以在大尺寸紙張 (如 14"×17"/355.6×431.8mm) 上或較厚紙張上列印。在這種情況下，在印表機後面保留 15.7"/40cm 的空間。



- There are wheels on the back corners of the printer. Lift the front of the printer to move it back and forth easily.
- 印表機後部兩角處具有滾輪。抬起印表機前端可以容易地向前和向後移動。


2 Turn the Power On 開啟電源

1 2 3 4 5 6

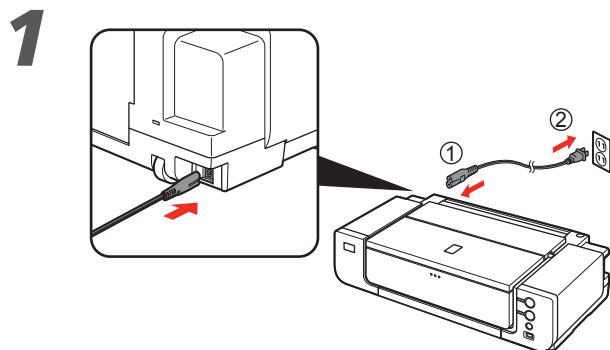


Plug the power cord into the back left of the printer, then connect the other end to the wall outlet.

 將電源線插入印表機的左後方，然後將另一端連接到壁裝電源。

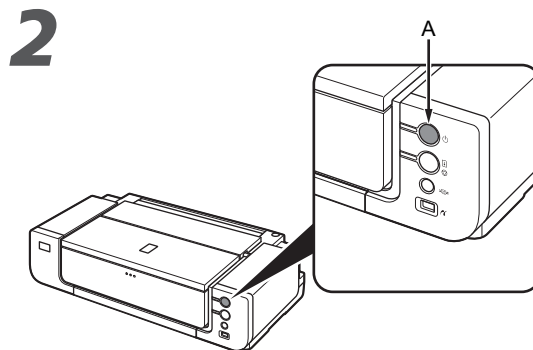

Turn on the printer (A).

 開啟印表機 (A)。

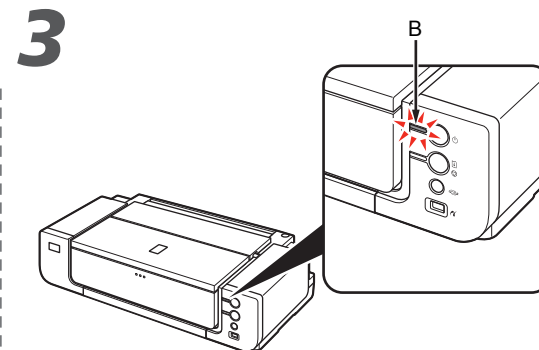

Confirm that the **POWER** lamp (B) lights blue.

 
 
確認電源指示燈 (B) 亮起藍色。



• Do NOT connect the USB cable at this stage.

• 請勿在此步驟連接 USB 電纜線。


3 Install the Print Head 安裝列印頭

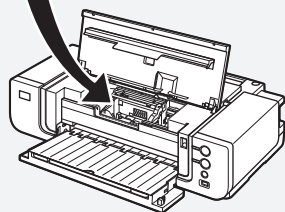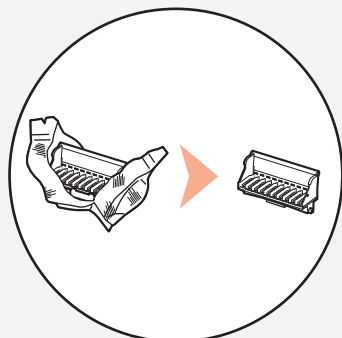

- Handle the Print Head carefully. Do not drop or apply excessive pressure to it.

- 小心處理列印頭。請勿將其掉下或過度用力擠壓。

 1

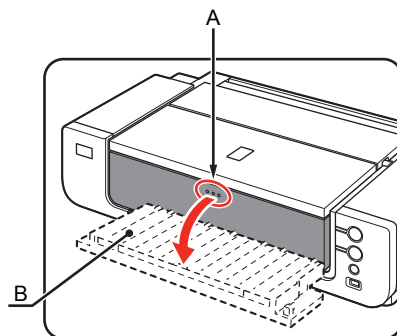


Press the ● ● ● button (A).

The Front Tray (B) opens.

按● ● ●按鈕 (A)。

開啟前端托盤 (B)。

 2

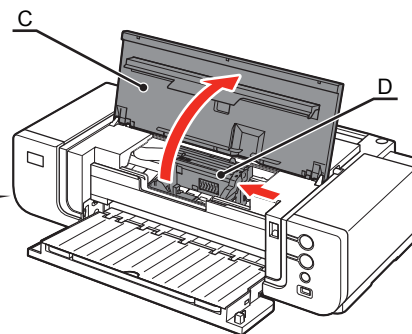

Open the Top Cover (C).

The Print Head Holder (D) comes out. (This is where you install the Print Head.)

開啟上蓋 (C)。

 
列印頭固定座 (D) 移出。(安裝列印頭的位置。)



- The Print Head Holder makes a noise as it moves. This is normal operation.
- If the Print Head Holder does not move, make sure that the printer is turned on.
- 列印頭固定座在移動時發出噪音。這是正常的運行。
- 如果列印頭固定座未移出，確保印表機已開啟。

3

3

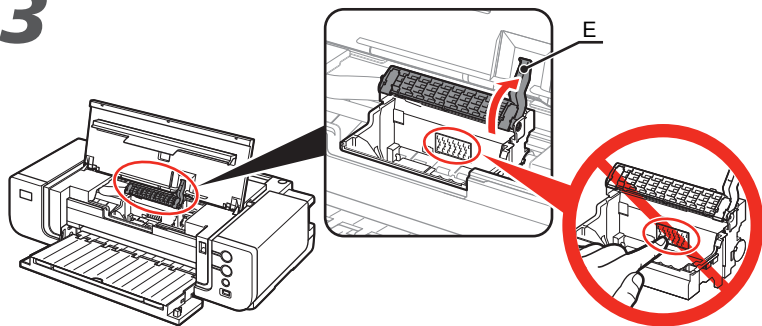

Firmly raise the Print Head Lock Lever (E) until it stops.

穩固地抬起列印頭鎖定桿 (E) 直到其停止。

 
4



Remove the Print Head from the silver package.

從銀色包裝袋中取出列印頭。

5

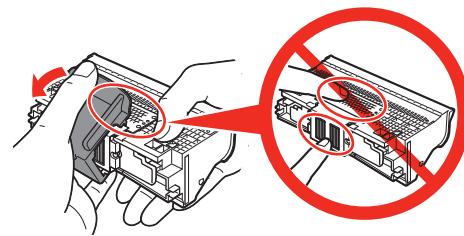


Remove the orange protective cap.

取下橙色保護蓋。



- There may be some transparent or light color ink on the inside of the bag the Print Head comes in, or the inside of the protective cap - this has no effect on print quality. Be careful not to get ink on yourself when handling these items. Be careful not to stain your hands.
- 列印頭包裝袋的內部或保護蓋的內側可能會有一些透明或淺顏色墨水——這對列印品質沒有影響。處理這些物件時，請注意不要將墨水濺到身上。注意，請勿弄髒雙手。

 6

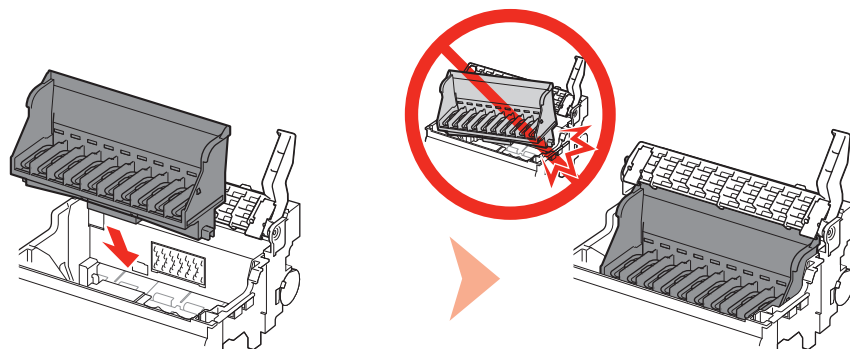


Set the Print Head in place.

將列印頭安裝在適當位置。



- Do not knock the Print Head against the sides of the holder.
- 請勿使列印頭敲擊到固定座的側面。

 7

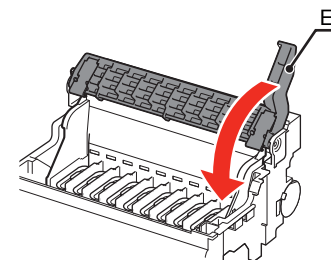


Lower the Print Head Lock Lever (E) completely.

完全地放下列印頭鎖定桿 (E)。




- Pinch the Print Head Lock Lever firmly and lower it gently.
- Once you have installed the Print Head, do not remove it unnecessarily.
- 捏緊列印頭鎖定桿並輕輕將其放下。
- 一旦安裝了列印頭，請勿將其隨意取出。

 4 Install the Ink Tanks 安裝墨水盒

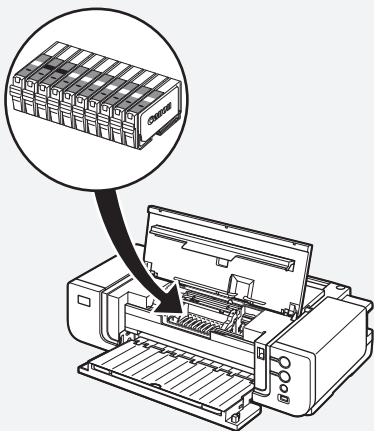

- Handle the ink tanks carefully. Do not drop or apply excessive pressure to them.
- If the Print Head Holder moves to the right, close and reopen the Top Cover.
- Be sure to use the supplied ink tanks.
- 小心處理墨水盒。請勿將其掉下或過度用力擠壓。
- 如果列印頭固定座移動至右側，關閉並重新開啟上蓋。
- 務必使用隨附的墨水盒。

 
1

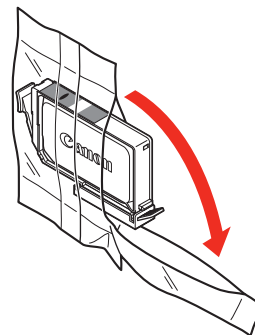

Remove the ink tank from its package.

從包裝袋中取出墨水盒。

 2

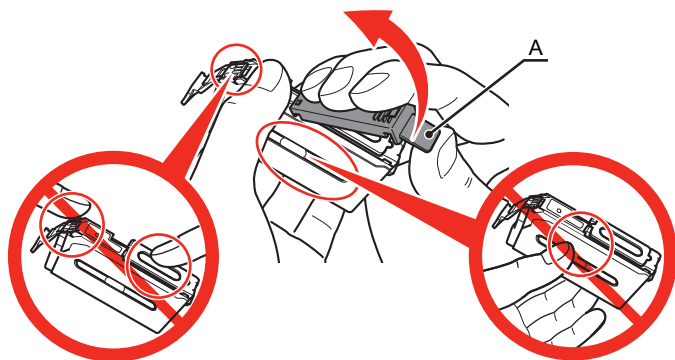

Remove and discard the orange protective cap (A) located on the bottom of the ink tank.

 
取下並丟棄墨水盒底部的橙色保護蓋 (A)。



- Do not hold the sides of the ink tank; ink may splash.
- 請勿持著墨水盒側面；墨水可能會濺出。

3

Install the ink tank
安裝墨水盒

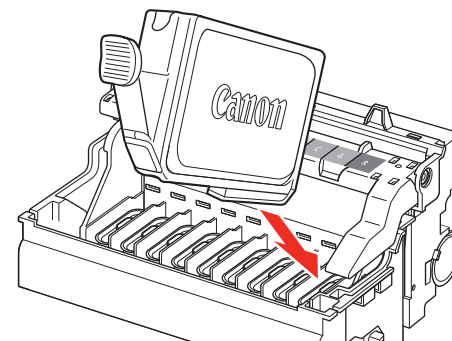


Insert the ink tank.

插入墨水盒。

4

 4

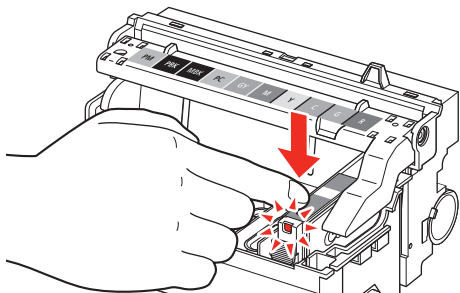


Press the **PUSH** mark on the ink tank until it clicks into place.

Make sure the **Ink** lamp lights red.

按墨水盒上的 **PUSH** 標記，直至墨水盒鎖定到位。

確保墨水指示燈亮起紅色。

 5

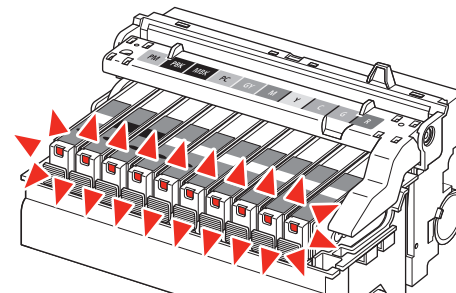

Install all the other ink tanks in the same way.

Install all the ink tanks.

Make sure all the **Ink** lamps light red.

按照相同方法安裝所有的墨水盒。

安裝所有的墨水盒。

 
確保所有的墨水指示燈亮起紅色。



- Match the labels when installing.
- Once you have installed the ink tanks, do not remove them unnecessarily.

- 安裝時與標籤一致。
- 一旦安裝了墨水盒，請勿將其隨意取出。

6

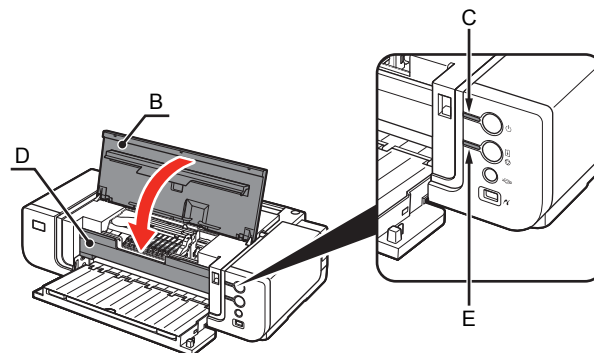

Close the Top Cover (B).

關閉上蓋 (B)。



- Wait for about 3 minutes until the **POWER** lamp (blue) (C) stops flashing and stays lit then operating noise stops, and go to the next step.
Do not open the Top Cover while the lamp is flashing.
The printer vibrates while the lamp is flashing because ink is stirred inside the printer.
- 等待大約 3 分鐘，直到**電源**指示燈 (藍色) (C) 停止閃爍並持續亮起，然後運行噪音會停止，並轉到下一步。
指示燈閃爍時，請勿開啟上蓋。
由於墨水在印表機內部進行攪動，因此指示燈閃爍時印表機會振動。



- Make sure the Inner Cover (D) is closed.
- If an **Alarm** lamp (E) flashes orange, make sure that the Print Head and the ink tanks are correctly installed.
- 確保內蓋 (D) 已關閉。
- 如果**警告**指示燈 (E) 閃爍橙色，確保列印頭和墨水盒已正確地安裝。

5 Install the Software 安裝軟體

To use the printer by connecting it to a computer, software including the drivers needs to be copied (installed) to the computer's hard disk.

The screens below are based on Windows Vista operating system Ultimate Edition (hereafter referred to as "Windows Vista") and Mac OS X v.10.5.x.

要透過連接到電腦使用印表機，需要將包括驅動程式在內的軟體複製（安裝）到電腦的硬碟。

以下螢幕基於 Windows Vista Ultimate Edition 作業系統（以下簡稱為「Windows Vista」）和 Mac OS X 10.5.x。



- Quit all running applications before installation.
- You need to log on as the administrator (or a member of the Administrators group).
- Do not switch users during the installation process.
- It may be necessary to restart your computer during the installation process. Follow the on-screen instructions and do not remove the **Setup CD-ROM** during restarting. The installation resumes from where it left off when your computer has been restarted.
- Mac OS 9, Mac OS X Classic environments, or Mac OS X v.10.3.8 or earlier are not supported.
- 在安裝之前退出所有正在運行的應用程式。
- 需要以管理員（或管理員組成員）身分登入。
- 請勿在安裝過程中切換使用者。
- 在安裝過程中可能需要重新啟動電腦。按照螢幕上的說明操作，並且請勿在重新啟動過程中取出**安裝光碟**。會從電腦重新啟動時所在的螢幕繼續安裝過程。
- 不支援 Mac OS 9、Mac OS X Classic 環境或 Mac OS X 10.3.8 或更早版本。

Windows:

Go to page 13

轉到第 13 頁

 
Macintosh:

Go to page 24

轉到第 24 頁

If the **Found New Hardware** or **Found New Hardware Wizard** dialog box appears:

如果出現**找到新硬體 (Found New Hardware)** 或**尋找新增硬體精靈 (Found New Hardware Wizard)** 對話方塊：

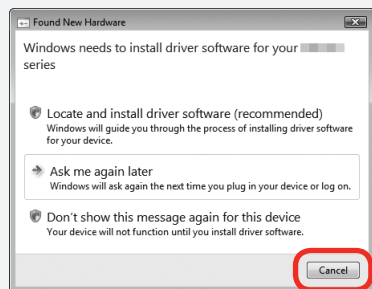


- 1 Remove the USB cable connected to your computer.
The dialog box may close. In this case, proceed from **1**.

取下連接到電腦的 USB 電纜線。

對話方塊可能關閉。在這種情況下，從**1**繼續操作。

- 2 Click **Cancel** to quit the dialog box.
按一下**取消 (Cancel)** 退出對話方塊。

 - 3 Proceed from **1**.
從**1**繼續操作。

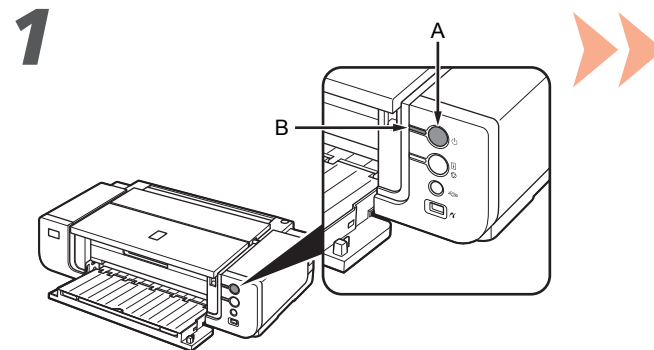

TURN OFF THE PRINTER (A).

關閉印表機 (A)。



- Make sure that the **POWER** lamp (B) has stopped flashing and is off.

 
- 確保**電源**指示燈 (B) 停止閃爍並熄滅。



- It takes about 1 minute until the printer turns off.

- 印表機關閉大約需要 1 分鐘。

2

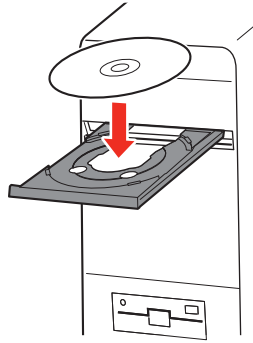

Turn on the computer, then insert the **Setup CD-ROM** into the CD-ROM drive.

The setup program should start automatically.

開啟電腦，然後將**安裝光碟**插入到光碟機。

 
安裝程式應該會自動地啟動。



- If the program does not start automatically, double-click the CD-ROM icon on the computer. When the CD-ROM contents appear, double-click **MSETUP4.EXE**.
- 如果程式未自動啟動，按兩下電腦上的光碟圖示。出現光碟機內容時，按兩下 **MSETUP4.EXE**。

3

Windows Vista

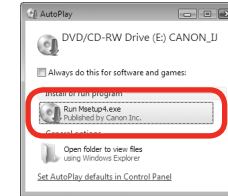


AutoPlay screen appears, click **Run Msetup4.exe**.

出現**自動播放 (AutoPlay)** 螢幕，按一下**執行 Msetup4.exe(Run Msetup4.exe)**。

4

 Windows Vista

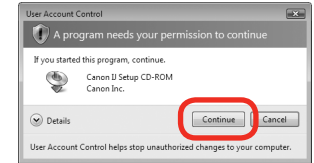


User Account Control dialog box appears, click **Continue**.

If the same dialog box reappears in subsequent steps, click **Continue**.

出現**使用者帳戶控制 (User Account Control)** 對話方塊，按一下**繼續 (Continue)**。

 如果在隨後的步驟中出現相同的對話方塊，按一下**繼續 (Continue)**。

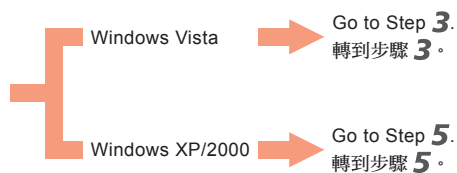

5



Select your place of residence, then click **Next**.

選擇居住地，然後按一下下一步 (Next)。



- If the **Select Language** screen appears, select a language, then click **Next**.
- 如果出現選擇語言 (Select Language) 螢幕，選擇一種語言，然後按一下下一步 (Next)。

6



Select a country or region, then click **Next**.

選擇國家或地區，然後按一下下一步 (Next)。



- Displayed only when **Europe, Middle East, Africa** or **Asia** is selected on the screen in step 5.
- 僅在步驟5中的螢幕上選擇了歐洲，中東，非洲 (Europe, Middle East, Africa) 或亞洲 (Asia) 時才會顯示。



Click **Easy Install**.

Drivers, application software, and on-screen manuals are installed automatically.

 
按一下**簡易安裝 (Easy Install)**。

將自動地安裝驅動程式、應用程式軟體和電子手冊。



- If you want to select particular items to install, click **Custom Install** and follow the on-screen instructions to proceed with the installation.
 - You can install the XPS Printer Driver from **Custom Install**. (Windows Vista SP1 only.)
 - The XPS Printer Driver is a printer driver suitable for printing High Dynamic Range images (full 16-bit workflow) using Easy-PhotoPrint Pro.
 - When installing the XPS Printer Driver, select the IJ Printer Driver at the same time.
-
- 如果要選擇某些特定項目進行安裝，按一下**自訂安裝 (Custom Install)** 並根據螢幕說明繼續安裝。
 - 可以從**自訂安裝 (Custom Install)** 安裝 XPS 印表機驅動程式。(適用於 Windows Vista SP1 或更新版本。)
 - XPS 印表機驅動程式是一個印表機驅動程式，使用 Easy PhotoPrint Pro 適用於列印高動態範圍影像 (完整 16 位元工作流程)。
 - 安裝 XPS 印表機驅動程式時，同時選擇 IJ 印表機驅動程式。


8

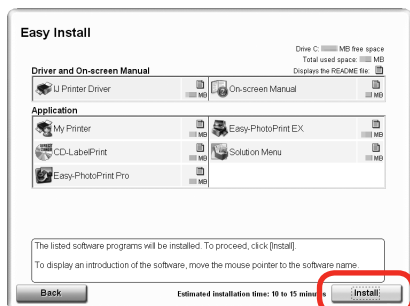

Click **Install**.

按一下**安裝 (Install)**。

 
9

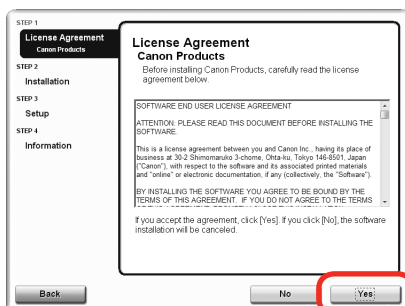

Read the **License Agreement** screen carefully and click **Yes**.

仔細閱讀**許可協定 (License Agreement)** 螢幕並按一下是 (**Yes**)。

 10

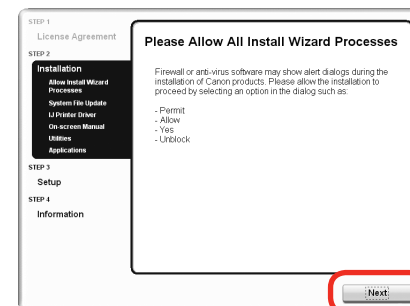

When the **Please Allow All Install Wizard Processes** screen appears, click **Next**.

Installation starts.

出現**請允許所有安裝精靈進程 (Please Allow All Install Wizard Processes)** 螢幕時，按一下**下一步 (Next)**。

安裝開始。



- Move the cursor over items to display explanations.

- 將光標移動到項目上以顯示說明。

 


- During installation, follow any on-screen instructions to install the software.

- 安裝過程中，按照螢幕上的全部說明安裝軟體。



11

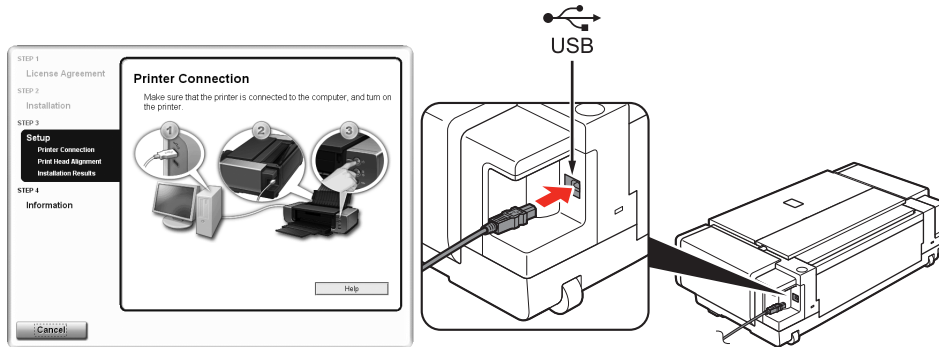


When the **Printer Connection** screen appears, connect the printer to the computer with a USB cable.

出現印表機連接 (**Printer Connection**) 螢幕時，使用 USB 電纜線將印表機連接到電腦。



- The USB port is located on the right side of the printer.
- USB 連接埠位於印表機右側。

 12

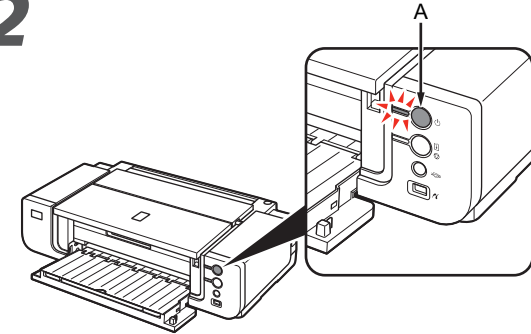

Turn on the printer (A).

When the printer is recognized by the computer, a message appears on the screen.

 
 
開啟印表機 (A)。

電腦識別出印表機時，螢幕上出現訊息。



- It takes about 30 seconds for the **POWER** lamp to light blue.
- If installation does not continue after 10 minutes, click **Help** on the screen in step **11**, then confirm the message.
- 電源指示燈亮起藍色大約需要 30 秒鐘。
- 如果 10 分鐘後仍不能繼續執行安裝，在步驟**11**中的螢幕上按一下說明 (**Help**)，然後確認訊息。

13 Align the Print Head 校準列印頭

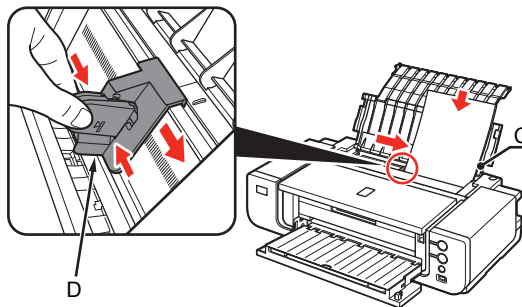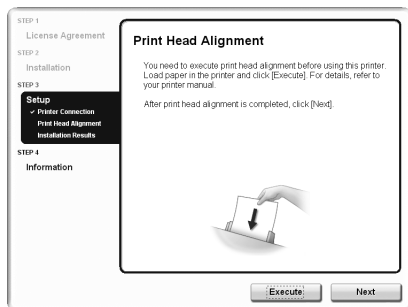

When the **Print Head Alignment** screen appears, load two sheets of A4 or Letter-sized plain paper in the Rear Tray (C) as shown.

Pinch and slide the Paper Guide (D) against the left edge of the paper.

 
出現列印頭校準 (**Print Head Alignment**) 螢幕時，如圖所示在後端托盤 (C) 中載入 A4 或 Letter 大小的一般紙張。

捏住並滑動導紙器(D)使其緊靠在紙張的左邊緣。





- For details, refer to "6 Loading Paper" on page 33.
- 關於詳細資訊，請參閱第 33 頁的「6 載入紙張」。

14

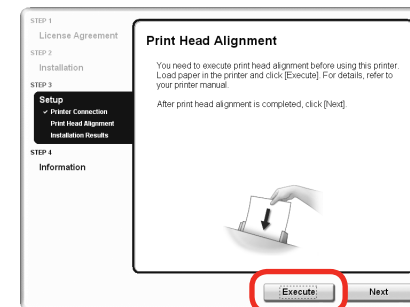

Click **Execute**.

  按一下**執行 (Execute)**。

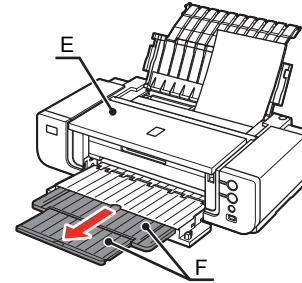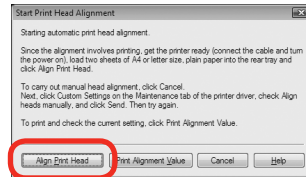

When the **Start Print Head Alignment** dialog box appears, click **Align Print Head**.

Click **OK** in the subsequent message.

Printing of the pattern starts.

開始列印頭校準 (Start Print Head Alignment) 對話方塊出現時，按一下**對齊列印頭 (Align Print Head)**。

在隨後的訊息中按一下**確定 (OK)**。

開始列印圖案。



• Wait until the pattern printing ends (about 10 minutes), and go to the next step.

• Do not open the Top Cover (E) while printing.

• 請等待至圖案列印完成 (大約 10 分鐘)，並轉到下一步。

 
• 列印時，請勿開啟上蓋 (E)。



• Pull out the Front Tray Extension (F) beforehand.

• 預先拉出前端托盤擴展架 (F)。

16

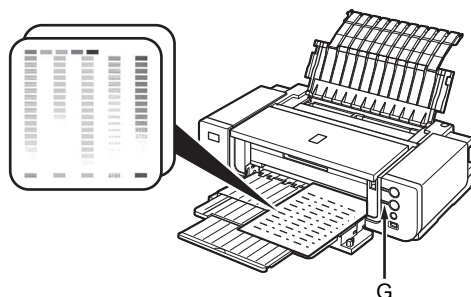

Make sure that the pattern shown is printed, then click **Next** on the **Print Head Alignment** screen.

 
Some parts of patterns printed on the first page are faint.

確保所示圖案已列印，然後在**列印頭校準 (Print Head Alignment)** 螢幕上按一下**下一步 (Next)**。


在第一頁上列印的圖案的某些部份顏色黯淡。



- If you align the Print Head automatically again, patterns different from those shown above may be printed.
- When Print Head Alignment cannot be executed properly, the **Alarm** lamp (G) will flash orange 11 times. In this case, refer to "When Printing Becomes Faint or Colors Are Incorrect" in the on-screen manual: **Basic Guide**.
- 如果重新執行自動校準列印頭，可能會打印出與上述所示不同的圖案。
- 無法正確執行列印頭校準時，警告指示燈 (G) 將閃爍橙色 11 次。在此情況下，請參閱電子手冊：《基本指南》中的「列印變得模糊不清或顏色不正確時」。

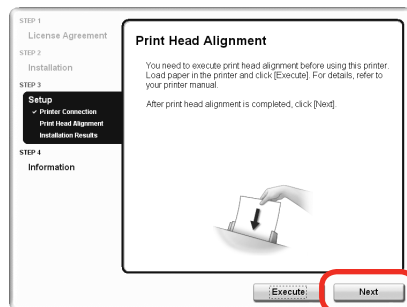

17

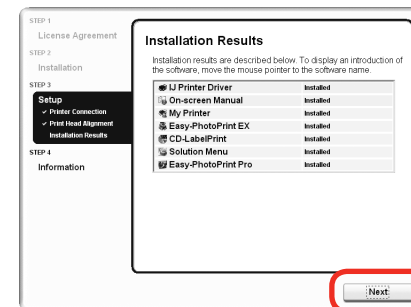 


Click **Next**.

It may take a while for the next screen to appear. Click **Next** only once.

按一下**下一步 (Next)**。

 可能需要等待一段時間才能出現下一螢幕。僅按一下**下一步 (Next)**。

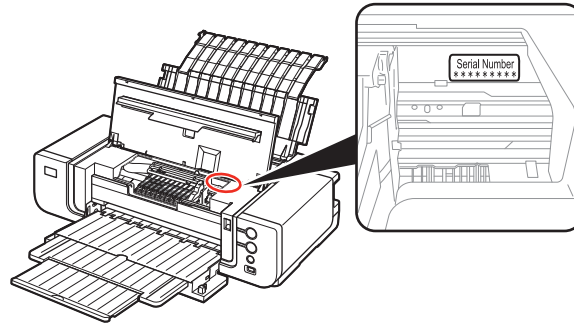

Click **Next**.

If connected to the Internet, the user registration page appears. Follow the on-screen instructions to register your printer. You will need your product serial number, which is located on the inside of the printer.

按一下下一步 (Next)。

如果連接到網際網路，則出現使用者註冊頁面。按照螢幕上的說明註冊印表機。將需要位於印表機內側的產品序列號。

 


- To register later, click **Cancel**. User registration can be started from the **Canon Solution Menu** icon. For details, refer to "Solution Menu" on page 36.
- If you are already registered, the **Product Registration** screen appears.
- The **User Registration** screen will only be displayed when **Europe, Middle East, Africa** is selected on the **Select Your Place of Residence** screen.
- 要以後註冊，按一下**取消 (Cancel)**。可以從 **Canon Solution Menu** 圖示啟動使用者註冊。關於詳細資訊，請參閱第 36 頁的「Solution Menu」。
- 如果已經註冊，則會出現**產品註冊 (Product Registration)** 螢幕。
- 僅在**選擇居住地 (Select Your Place of Residence)** 螢幕上選擇了歐洲，中東，非洲 (Europe, Middle East, Africa) 時，才會顯示**使用者註冊 (User Registration)** 螢幕。



- Internet connection is required. (Connection fees apply.)
- 需要連接網際網路。(會發生連接費用。)

19

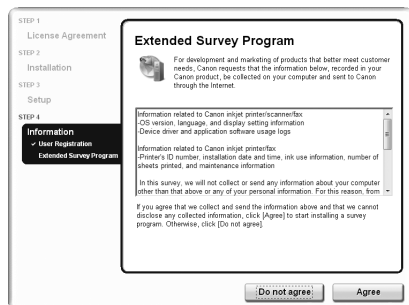

When the **Extended Survey Program** screen appears, confirm the message.

If you can agree, click **Agree**. If you click **Do not agree**, the Extended Survey Program will not be installed.

(This has no effect on the printer's functionality.)

出現 **Extended Survey Program** 螢幕時，確認此訊息。

如果同意，按一下**同意 (Agree)**。如果按一下**不同意 (Do not agree)**，將不安裝 Extended Survey Program。

(這對印表機的功能無任何影響。)

20



Click **Exit**.

If **Restart** is displayed, make sure that the **Restart the system now (recommended)** check box is selected, then click **Restart**.

After restarting the computer, remove the **Setup CD-ROM** and keep it in a safe place.

按一下**退出 (Exit)**。

 
如果顯示**重新啟動 (Restart)**，確保選擇立即重新啟動系統 (推薦)(Restart the system now (recommended)) 核取方塊，然後按一下**重新啟動 (Restart)**。

重新啟動電腦之後，取出**安裝光碟**並妥善保管。

Next, read "6 Loading Paper" on page 33!

下一步，請閱讀第 33 頁的「6 載入紙張」！

1

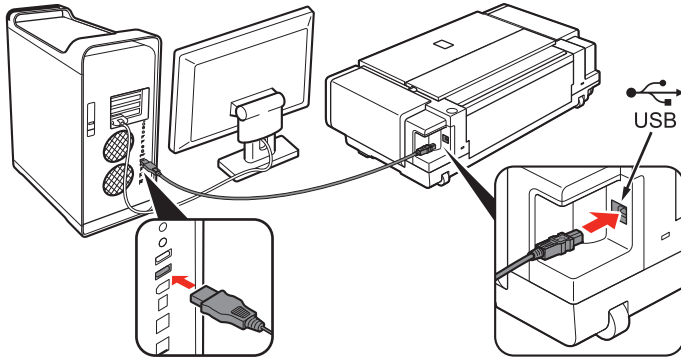


Connect the printer to the computer with a USB cable.

Make sure the printer is turned on.

使用 USB 電纜線連接印表機與電腦。

確保印表機已開啟。

 
2

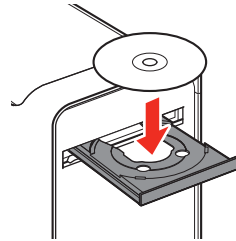

Turn on the computer, then insert the **Setup CD-ROM** into the CD-ROM drive.

開啟電腦，然後將安裝光碟插入到光碟機。

 3

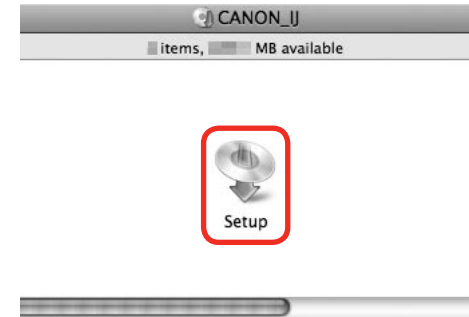

Double-click the **Setup** icon.

If the CD-ROM folder does not open automatically, double-click the **CANON_IJ** icon on the desktop.

按兩下 **Setup** 圖示。

如果光碟資料夾未自動地開啟，按兩下桌面上的 **CANON_IJ** 圖示。



- The USB port is located on the right side of the printer.
- USB 連接埠位於印表機右側。

4



Enter your administrator name and password.
Click **OK**.

If you do not know your administrator name or password, click **Help**, then follow the on-screen instructions.

輸入管理員名稱和密碼。
按一下**好 (OK)**。

如果不知道管理員名稱或密碼，按一下**說明 (Help)**，然後按照螢幕上的說明操作。

5



Select your place of residence, then click **Next**.

選擇居住地，然後按一下 **Next**。



- If the **Select Language** screen appears, select a language, then click **Next**.
- 如果出現 **Select Language** 螢幕，選擇一種語言，然後按一下 **Next**。

6



Select a country or region, then click **Next**.

選擇國家或地區，然後按一下 **Next**。



- Displayed only when **Europe, Middle East, Africa** or **Asia** is selected on the screen in step **5**.
- 僅在步驟**5**中的螢幕上選擇了 **Europe, Middle East, Africa** 或 **Asia** 時才會顯示。

7



Click **Easy Install**.

Drivers, application software, and on-screen manuals are installed automatically.

 
按一下 **Easy Install**。

將自動地安裝驅動程式、應用程式軟體和電子手冊。



- If you want to select particular items to install, click **Custom Install** and follow the on-screen instructions to proceed with the installation.
- 如果要選擇某些特定項目進行安裝，按一下 **Custom Install** 並根據螢幕說明繼續安裝。


8

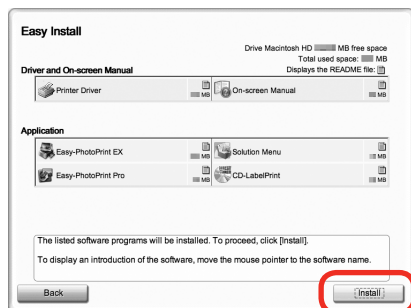

Click **Install**.

按一下 **Install**。

9

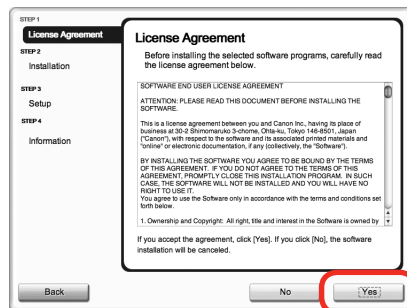

Read the **License Agreement** screen carefully and click **Yes**.

Installation starts.

 
仔細閱讀 **License Agreement** 螢幕並按一下 **Yes**。

安裝開始。



- During installation, follow any on-screen instructions to install the software.
- 安裝過程中，按照螢幕上的全部說明安裝軟體。

10

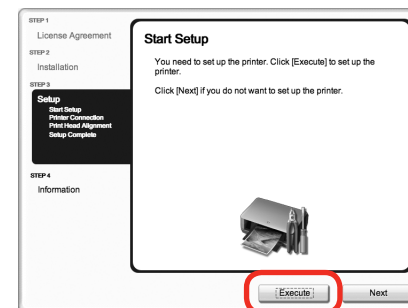

When the **Start Setup** screen appears, click **Execute**.

Start Setup 螢幕出現時，按一下 **Execute**。



- Move the cursor over items to display explanations.
- 將光標移動到項目上以顯示說明。

11



Click **Restart**.

The **Print Head Alignment** screen appears after the computer has been restarted.

 
 
按一下 **Restart**。

電腦重新啟動以後出現 **Print Head Alignment** 螢幕。

12

Align the Print Head

校準列印頭

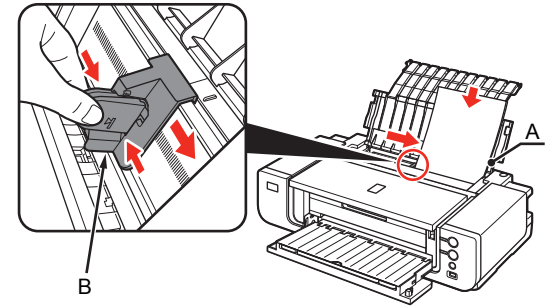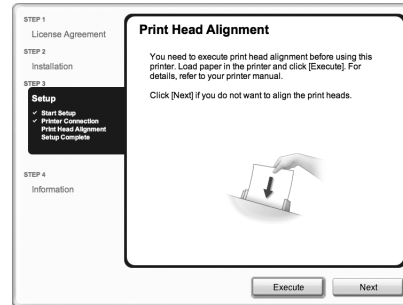

When the **Print Head Alignment** screen appears, load two sheets of A4 or Letter-sized plain paper in the Rear Tray (A) as shown.

Pinch and slide the Paper Guide (B) against the left edge of the paper.

 
出現 **Print Head Alignment** 螢幕時，如圖所示在後端托盤 (A) 中載入 A4 或 Letter 大小的一般紙張。

捏住並滑動導紙器 (B) 使其緊靠在紙張的左邊緣。



- For details, refer to "6 Loading Paper" on page 33.
- 關於詳細資訊，請參閱第 33 頁的「6 載入紙張」。



13

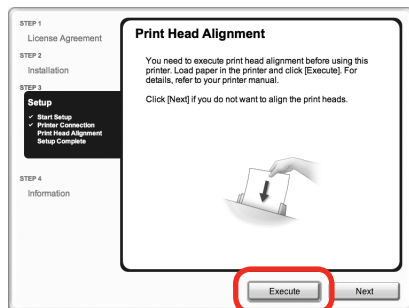

Click **Execute**.

按一下 **Execute**。

  14

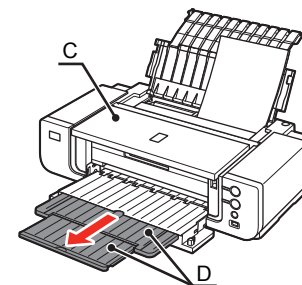

When this screen appears, click **OK**.

Printing of the pattern starts.

此螢幕出現時，按一下 **OK**。

開始列印圖案。



- Wait until the pattern printing ends (about 10 minutes), and go to the next step.
- Do not open the Top Cover (C) while printing.

 
- 請等待至圖案列印完成 (大約 10 分鐘)，並轉到下一步。
- 列印時，請勿開啟上蓋 (C)。



- Pull out the Front Tray Extension (D) beforehand.

- 預先拉出前端托盤擴展架 (D)。

15

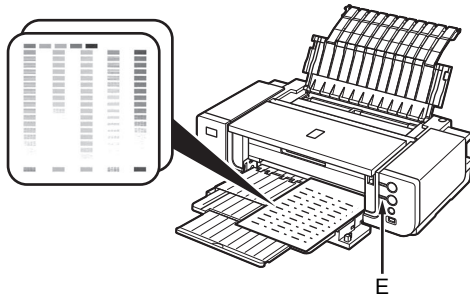


Make sure that the pattern shown is printed.
Some parts of patterns printed on the first page are faint.

確保所示圖案已列印。
在第一頁上列印的圖案的某些部份顏色黯淡。



- If you align the Print Head automatically again, patterns different from those shown above may be printed.
- When Print Head Alignment cannot be executed properly, the **Alarm** lamp (E) will flash orange 11 times. In this case, refer to "When Printing Becomes Faint or Colors Are Incorrect" in the on-screen manual: **Basic Guide**.
- 如果重新執行自動校準列印頭，可能會打印出與上述所示不同的圖案。
- 無法正確執行列印頭校準時，警告指示燈 (E) 將閃爍橙色 11 次。在此情況下，請參閱電子手冊：《基本指南》中的「列印變得模糊不清或顏色不正確時」。

 
16

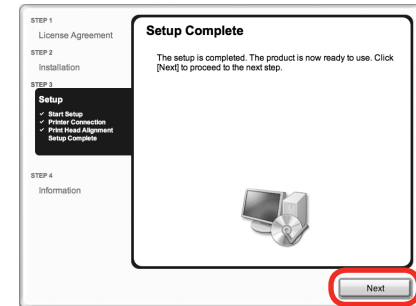

Click **Next**.

按一下 **Next**。

 17

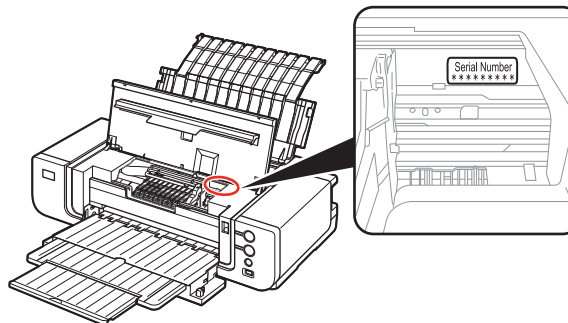Click **Next**.

If connected to the Internet, the user registration page appears. Follow the on-screen instructions to register your printer. You will need your product serial number, which is located on the inside of the printer.

按一下 **Next**。

如果連接到網際網路，則出現使用者註冊頁面。按照螢幕上的說明註冊印表機。將需要位於印表機內側的產品序列號。



 
- To register later, click **Cancel**. User registration can be started from the **Solution Menu** icon. For details, refer to "Solution Menu" on page 36.
- If you are already registered, the **Product Registration** screen appears.
- The **User Registration** screen will only be displayed when **Europe, Middle East, Africa** is selected on the **Select Your Place of Residence** screen.
- 要以後註冊，按一下 **Cancel**。可以從 **Solution Menu** 圖示啟動使用者註冊。關於詳細資訊，請參閱第 36 頁的「Solution Menu」。
- 如果已經註冊，則會出現 **Product Registration** 螢幕。
- 僅在 **Select Your Place of Residence** 螢幕上選擇了 **Europe, Middle East, Africa** 時，才會顯示 **User Registration** 螢幕。



- Internet connection is required. (Connection fees apply.)
- 需要連接網際網路。(會發生連接費用。)



18

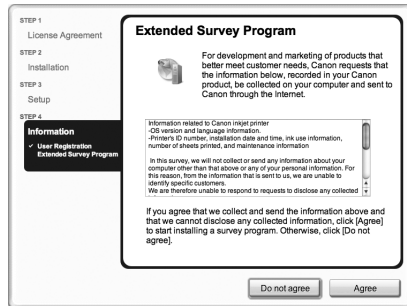

When the **Extended Survey Program** screen appears, confirm the message.

If you can agree, click **Agree**. If you click **Do not agree**, the Extended Survey Program will not be installed.
(This has no effect on the printer's functionality.)

出現 **Extended Survey Program** 螢幕時，確認此訊息。

如果同意，按一下 **Agree**。如果按一下 **Do not agree**，將不安裝 Extended Survey Program。
(這對印表機的功能無任何影響。)



- The screen does not appear on Mac OS X v.10.3.9.
- Mac OS X 10.3.9環境下不會出現此螢幕。

19



Click **Exit**.

Remove the **Setup CD-ROM** and keep it in a safe place.

按一下 **Exit**。

取出**安裝光碟**並妥善保管。

Next, read "6 Loading Paper" on page 33!

 
下一步，請閱讀第 33 頁的「6 載入紙張」！

6 Loading Paper 載入紙張

1 2 3 4 5 6


This section explains how to load paper in the Rear Tray (A).

本節說明如何在後端托盤 (A) 中載入紙張。

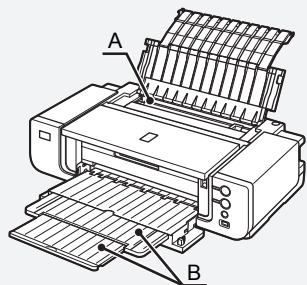


- Pull out the Front Tray Extension (B) beforehand.

 - 預先拉出前端托盤擴展架 (B)。

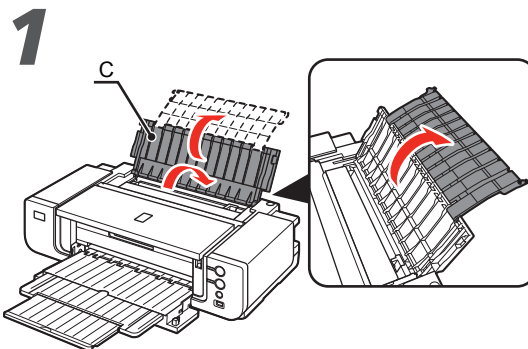

Open the Paper Support (C).

 開啟托紙架 (C)。

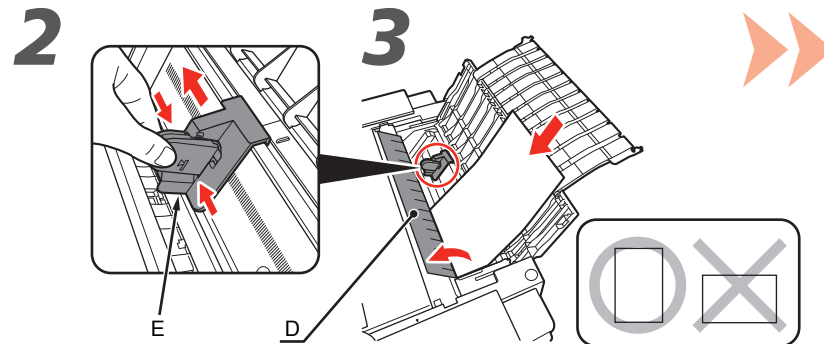

Open the Feed Slot Cover (D), then pinch and slide the Paper Guide (E).

開啟送紙口蓋 (D)，然後捏住並滑動導紙器 (E)。

 
Load paper straight along the right edge of the Rear Tray.

Load paper in portrait orientation with the printing side facing up.

沿後端托盤的右邊緣平直載入紙張。

將紙張列印面向上縱向載入。

4

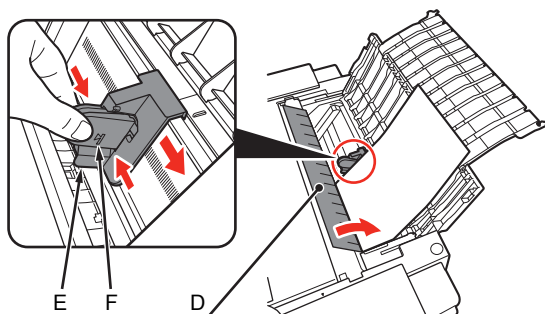

Pinch and slide the Paper Guide (E) against the left edge of the paper, then close the Feed Slot Cover (D).

Confirm that the loaded paper does not exceed the line (F).

捏住並滑動導紙器 (E) 使其緊靠紙張的左邊緣，然後關閉送紙口蓋 (D)。

確認已載入的紙張未超過標記線 (F)。

Printer installation is now complete!

至此，印表機安裝完成！



• You can print on large size paper such as 14" x 17"/355.6 x 431.8 mm or thick paper by loading the paper in the Front Tray. For details on how to load paper in the Front Tray, refer to "Loading Paper" in the on-screen manual: **Basic Guide**.

• 透過在前端托盤中載入紙張，可以在大尺寸紙張 (如 14"×17"/355.6×431.8mm) 上或較厚紙張上列印。關於如何在前端托盤中載入紙張的詳細資訊，請參閱電子手冊：《**基本指南**》中的「載入紙張」。

After Installing the Printer 印表機安裝完成後

 
For details on opening the on-screen manuals, refer to page 36.

關於開啟電子手冊的詳細資訊，請參閱第 36 頁。

■ Manuals ■ 手冊

Safety Precautions

安全注意事項

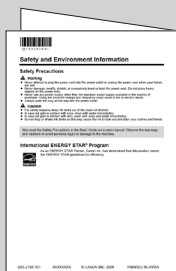

Safety and Environment Information

For proper use, read safety precautions
before using the printer.

安全與環境資訊

請在使用印表機之前閱讀安全注意事項，以便
正確使用。



Getting Started (this manual)

Describes how to set up and use your printer.
Introduces the printer and its functions, the
included manuals and application software.

《入門指南》 (本指南)

描述如何安裝並使用印表機。介紹印表機及其功
能、包含的手冊和應用程式軟體。

 


Basic Guide


Describes the basic operations and gives an
introduction to other functions available.

《基本指南》

描述基本操作並介紹其他可用的功能。

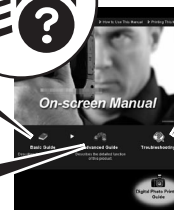

on-screen manuals

 

Advanced Guide Digital Photo Printing Guide

Describes various operating procedures to make
full use of printer. Also includes "Troubleshooting"
information for your printer.

電子手冊

《進階指南》 《數位相片列印指南》

描述各種操作步驟以充分地使用印表機。此外也包括
印表機「疑難排解」的資訊。

■ Solution Menu

■ Solution Menu

Solution Menu is a gateway to functions and information that allow you to make full use of the printer!

Solution Menu是了解印表機功能和資訊的途徑，以便充分地使用印表機！



Example: Windows Vista
示例：Windows Vista



*The buttons displayed vary depending on the country or region of purchase.

* 根據購買的國家或地區的不同，顯示的按鈕也會有所不同。

 


To open the on-screen manual, click the button shown to the left in Solution Menu.

Open various applications and on-screen manuals with a single click.

You can start Solution Menu from the **Canon Solution Menu** icon on the desktop (Windows) or on the Dock (Macintosh).

If you have a problem with printer settings, click the **Change settings or find solutions to problems.** in Solution Menu to open **My Printer** (Windows only).



要開啟電子手冊，在 Solution Menu中按一下左側顯示的按鈕。

只要按一下就可以開啟各種應用程式和電子手冊。

可以從桌面 (Windows) 或 Dock (Macintosh) 上的 **Canon Solution Menu** 圖示啟動 Solution Menu。

如果有印表機設定的問題，按一下 Solution Menu 中的**變更設定或尋找問題的解決方案**。(Change settings or find solutions to problems.) 以開啟 **My Printer**(僅在 Windows 環境下)。

■ Utilizing the Printer

■ 使用印表機

Easy-PhotoPrint Pro is one of the application software. Easy-PhotoPrint Pro allows you to print high quality photos easily by utilizing the digital photo colors.

Since ICC profiles are also available, you can print photos in colors that are closer to your ideal colors using color management.

Easy-PhotoPrint Pro 是應用程式軟體之一。Easy-PhotoPrint Pro 可以透過利用數位相片色彩輕鬆地列印高品質相片。

 
由於可以使用 ICC 描述檔，可以使用色彩管理以較接近於理想色彩的色彩列印相片。

For details on how to use the application software and the printer, refer to the on-screen manuals: **Basic Guide** and **Advanced Guide**.

For photo printing and color management, refer to the on-screen manual: **Digital Photo Printing Guide** as well.




關於如何使用應用程式軟體和印表機的詳細資訊，請參閱電子手冊：《基本指南》和《進階指南》。

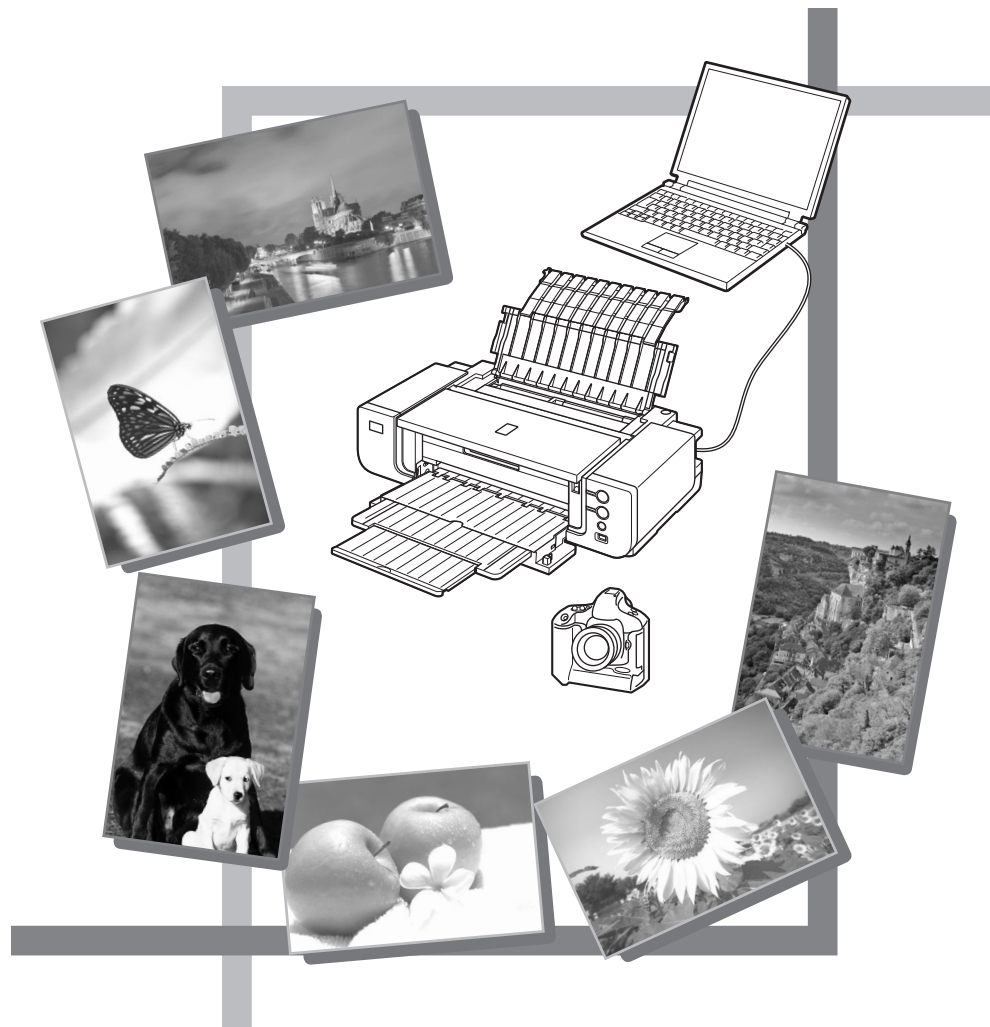

關於相片列印和色彩管理，請參閱電子手冊：《數位相片列印指南》。



Specifications

General Specifications	
Printing resolution (dpi)	4800 (horizontal) x 2400 (vertical)
Interface	USB Port: Hi-Speed USB* Direct Print Port: PictBridge * A computer that complies with Hi-Speed USB standard is required. Since the Hi-Speed USB interface is fully upwardly compatible with USB 1.1, it can be used at USB 1.1.
Print width	Rear Tray: 12.7 inches max. (322.2 mm) (for Borderless Printing: 13 inches/329 mm) Front Tray: 13.7 inches max. (348.8 mm) (for Borderless Printing: 14 inches/356 mm)
Acoustic noise level	Approx. 36.0 db (A) * When printing in the high print quality mode on Photo Paper Plus Glossy II .
Operating environment	Temperature: 5 to 35°C (41 to 95°F) Humidity: 10 to 90% RH (no condensation)
Storage environment	Temperature: 0 to 40°C (32 to 104°F) Humidity: 5 to 95% RH (no condensation)
Power supply	AC 100-240 V, 50/60 Hz
Power consumption	Printing: Approx. 14 W Standby (minimum): Approx. 1.2 W OFF: Approx. 0.9 W
External dimensions	Approx. 26.0 (W) x 14.0 (D) x 7.6 (H) inches Approx. 660 (W) x 355 (D) x 193 (H) mm * With the Paper Support, Front Tray and Front Feed Support retracted.
Weight	Approx. 15.2 kg (Approx. 33.4 lb) * With the print head and ink tanks installed.
Print Head/Ink	Total 7,680 nozzles (PM/PBK/MBK/PC/GY/M/Y/C/G/R each 768 nozzles)

Minimum System Requirements		
 Conform to the operating system's requirements when higher than those given here.		
		
Operating System	Windows 7	Mac OS X v.10.6
Processor	1 GHz or faster 32-bit (x86) or 64-bit (x64) processor	Intel processor
RAM	1 GB (32-bit)/2 GB (64-bit)	1 GB
	Windows Vista, Vista SP1, Vista SP2	Mac OS X v.10.5
	1 GHz processor	Intel processor, PowerPC G5, PowerPC G4 (867 MHz or faster)
	512 MB	512 MB
	Windows XP SP2, SP3	Mac OS X v.10.4
	300 MHz processor	Intel processor, PowerPC G5, PowerPC G4, PowerPC G3
	128 MB	256 MB
	Windows 2000 Professional SP4	Mac OS X v.10.3.9
	300 MHz processor	PowerPC G5, PowerPC G4, PowerPC G3
	128 MB	128 MB
Browser	Internet Explorer 6.0 or later	Safari
Hard Disk Space	450 MB Note: For bundled software installation.	600 MB Note: For bundled software installation.
CD-ROM Drive	Required	
Display	SVGA 800 x 600	XGA 1024 x 768
<ul style="list-style-type: none"> Windows: Operation can only be guaranteed on a PC with Windows 7, Windows Vista, Windows XP or Windows 2000 pre-installed. Easy-PhotoPrint Pro is a software plug-in for Canon Digital Photo Professional Ver. 2.1 or later, Adobe Photoshop CS4, CS3, CS2, CS and Adobe Photoshop Elements 6, 7 and 8. Adobe Photoshop Elements 8: DVD Drive is required for installation. Windows: Windows XP SP2/SP3, Windows Vista, Windows 7 only Processor: 1.6 GHz processor Additional required hard disk space: 2 GB RAM: 1 GB Display: Color monitor with 16-bit color video card 1024 x 576 monitor resolution at 96 dpi or less Microsoft DirectX 9 compatible display driver Macintosh: Mac OS X v.10.4.11 - v.10.5.8, v.10.6 only Processor: Multi-core Intel processor Additional required hard disk space: 2 GB RAM: 512 MB of RAM (1 GB recommended), 64 MB of video RAM Windows: Uninstall software bundled with the Canon inkjet printer before upgrading from Windows Vista to Windows 7, then, install the bundled software again. Macintosh: Hard Disk must be formatted as Mac OS Extended (Journaled) or Mac OS Extended. Macintosh: After upgrading from Mac OS X v.10.5 or lower to Mac OS X v.10.6, install software bundled with the Canon inkjet printer. 		

Additional System Requirements for the on-screen manuals	
	
Browser: Easy Guide Viewer Note: Microsoft Internet Explorer 6.0 or later must be installed. The on-screen manual may not be displayed properly depending on your operating system or Internet Explorer version. We recommend that you keep your system up to date with Windows Update.	Browser: Help Viewer Note: The on-screen manual may not be displayed properly depending on your operating system. We recommend that you keep your system up to date.

Specifications are subject to change without notice.

About Consumables
 Consumables (ink tanks / FINE Cartridges) are available for 5 years after production has stopped.

規格

一般規格	
列印解析度 (dpi)	4800(水平)×2400(垂直)
介面	USB 連接埠： Hi-Speed USB* 直接列印連接埠： PictBridge * 需要一台相容 Hi-Speed USB 標準的電腦。由於 Hi-Speed USB 介面完全地與 USB 1.1 相容，可以在 USB 1.1 模式下使用。
列印寬度	後端托盤：最大 12.7in(322.2mm)(對於滿版列印：13in/329mm) 前端托盤：最大 13.7in(348.8mm)(對於滿版列印：14in/356mm)
噪音水平	約 36.0db(A) * 在超光亮相片紙 II 上以高列印品質模式列印時。
操作環境	溫度：5 至 35°C(41 至 95°F) 濕度：10 至 90%RH(無冷凝)
儲存環境	溫度：0 至 40°C(32 至 104°F) 濕度：5 至 95%RH(無冷凝)
電源供應	AC 100-240V、50/60Hz
耗電功率	列印：大約 14W 待命(最小)：大約 1.2W 關機：大約 0.9W
外部尺寸	大約 26.0(W)×14.0(D)×7.6(H)in 大約 660(W)×355(D)×193(H)mm * 托紙架、前端托盤和前端送紙架收回的狀態下。
重量	大約 15.2kg(大約 33.4lb) * 安裝了列印頭和墨水盒的狀態下。
列印頭 / 墨水	總共 7,680 個噴嘴 (PM/PBK/MBK/PC/GY/M/Y/C/G/R 各 768 個噴嘴)

最低系統要求		
☞ 所用作業系統的配置高於此處要求時，請遵從所用作業系統的要求。		
	Windows	Macintosh
作業系統	Windows 7	Mac OS X 10.6
處理器	1GHz 或更快 32 位元 (x86) 或 64 位元 (x64) 處理器	Intel 處理器
RAM	1GB(32 位元)/2GB(64 位元)	1GB
	Windows Vista、Vista SP1、Vista SP2	Mac OS X 10.5
	1GHz 處理器	Intel 處理器、PowerPC G5、PowerPC G4
	512MB	(867MHz 或更快)
	Windows XP SP2、SP3	512MB
	300MHz 處理器	Mac OS X 10.4
	128MB	Intel 處理器、PowerPC G5、PowerPC G4、PowerPC G3
	Windows 2000 Professional SP4	256MB
	300MHz 處理器	Mac OS X 10.3.9
	128MB	PowerPC G5、PowerPC G4、PowerPC G3
瀏覽器	Internet Explorer 6.0 或更新	128MB
硬碟空間	450MB	Safari
	註釋：用於網綁軟體安裝。	600MB
光碟機	必需	註釋：用於網綁軟體安裝。
顯示器	SVGA 800×600	XGA 1024×768
<ul style="list-style-type: none"> Windows：只有在預先安裝了 Windows 7、Windows Vista、Windows XP 或 Windows 2000 的電腦上才能保證正常工作。 Easy-PhotoPrint Pro 是 Canon Digital Photo Professional 2.1 版或更新版本、Adobe Photoshop CS4/CS3/CS2/CS 和 Adobe Photoshop Elements 6/7/8 的外掛軟體。 Adobe Photoshop Elements 8：需要使用 DVD 光碟機進行安裝。 Windows：僅適用於 Windows XP SP2/SP3、Windows Vista、Windows 7 <ul style="list-style-type: none"> 處理器：1.6GHz 處理器 需要以下額外的硬碟空間：2GB RAM：1GB 顯示器：帶 16 位元彩色視訊卡的彩色監視器 1024×576 監視器解析度為 96dpi 或更低 Microsoft DirectX 9 相容顯示器驅動程式 Macintosh：僅適用於 Mac OS X 10.4.11-10.5.8、10.6 <ul style="list-style-type: none"> 處理器：Intel 多核處理器 需要以下額外的硬碟空間：2GB RAM：512MB RAM(推薦 1GB)、64MB 視訊 RAM Windows：從 Windows Vista 升級至 Windows 7 之前，請先解除安裝 Canon 噴墨印表機網綁的軟體，然後，重新安裝網綁的軟體。 Macintosh：必須將硬碟格式化為 Mac OS Extended (Journaled) 或 Mac OS Extended。 Macintosh：從 Mac OS X 10.5 或更低版本升級至 Mac OS X 10.6 後，請安裝 Canon 噴墨印表機網綁的軟體。 		

電子手冊的附加系統要求	
Windows	Macintosh
瀏覽器：Easy Guide Viewer 註釋：必須安裝 Microsoft Internet Explorer 6.0 或更新版本。根據作業系統或 Internet Explorer 的版本，電子手冊可能無法正確顯示。建議使用 Windows Update 保持作業系統是最新的。	瀏覽器：說明檢視器 (Help Viewer) 註釋：根據作業系統的不同，電子手冊可能無法正確顯示。建議保持作業系統是最新的。

規格如有變更，恕不另行通知。

關於耗材
耗材 [墨水盒 / 墨盒 (FINE Cartridges)] 停止生產後 5 年內還可以買到。

The following ink tanks are compatible with this printer.

以下墨水盒與本印表機相容。



CANON AUSTRALIA PTY LTD
1 Thomas Holt Drive, North Ryde, Sydney N.S.W. 2113,
Australia
canon.com.au

CANON NEW ZEALAND LIMITED
Akoranga Business Park, Akoranga Drive, Northcote,
Auckland, New Zealand
canon.co.nz

CANON SINGAPORE PTE. LTD.
1 HarbourFront Avenue #04-01 Keppel Bay Tower
Singapore 098632

CANON HONGKONG CO.LTD.
19/F., The Metropolis Tower, 10 Metropolis Drive,
Hung Hom, Kowloon, Hong Kong

www.canon-asia.com