




Image Viewing, Organizing and Editing Software

ImageBrowser

Ver. 6.7

Instruction Manual

- In this manual, IB is used for ImageBrowser.
- Click on the icons below on the bottom right of the screen to switch between pages.
 -  : Go to next page  : Go to previous page
 -  : Return to a page you had previously displayed
- Click on the chapter headings on the right side of the screen to switch to the contents page of each chapter.

Introduction

Table of
Contents

1
Basic
Operation

2
Advanced
Operation

3
High-Level
Functions

 
4
Preferences

5
Using the
Internet

Reference

Contents
Lookup

Index

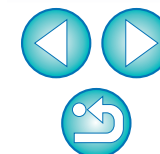

READ CAREFULLY BEFORE USING!

CANON SOFTWARE LICENSE AGREEMENT

IMPORTANT - READ THIS AGREEMENT BEFORE USING THE SOFTWARE ON THE CD-ROM IN THIS BOX. BY USING THE SOFTWARE, YOU AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT.

This is a license agreement (the [Agreement]) between you and Canon Inc. ([Canon]).

IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE PROGRAM ON THE CD-ROM AND THE USER MANUAL IN THIS BOX (COLLECTIVELY, THE [SOFTWARE]) AND RETURN THE SOFTWARE WITHIN 30 DAYS FROM THE DATE OF PURCHASE TO YOUR POINT OF PURCHASE FOR A REFUND.

In consideration of the right to use the SOFTWARE, you agree to abide by the terms and conditions of this Agreement.

1. **LICENSE:** Canon grants you the non-exclusive right to use the SOFTWARE only on a single computer. You may physically transfer the SOFTWARE from one computer to another provided that the SOFTWARE is used on only one computer at a time. You shall not install or use the SOFTWARE on a network, multiple CPU, multiple site arrangement, or any other hardware configuration where the SOFTWARE is accessible to more than one CPU or to more than one user.

YOU SHALL NOT ASSIGN, SUBLICENSE, RENT, LEASE, LOAN, CONVEY OR OTHERWISE USE, TRANSFER, COPY, TRANSLATE, CONVERT TO ANOTHER PROGRAMMING LANGUAGE, ALTER, MODIFY, DECOMPILE OR DISASSEMBLE THE SOFTWARE, IN WHOLE OR IN PART, EXCEPT AS EXPRESSLY PROVIDED IN THIS AGREEMENT.

2. **BACK-UP COPY:** You may make one copy of the SOFTWARE solely for back-up purposes, or copy the SOFTWARE onto the permanent storage device (e.g. a hard disk) of your computer and retain the original for back-up purposes. Any other copying of the SOFTWARE is a violation of this Agreement. You must reproduce and include the copyright notice on the back-up copy.

3. **SUPPORT AND UPDATES:** Canon is not responsible for providing maintenance or support for use of the SOFTWARE. No updates, fixes or support will be made available for the SOFTWARE.

4. **LIMITED WARRANTY AND LIMITATION OF LIABILITY:** It is your responsibility to choose, maintain and match the hardware and software components of your computer system. Thus Canon does not guarantee uninterrupted service or correction of errors or that the functions or performance of the SOFTWARE will meet your requirements. THE SOFTWARE IS LICENSED ON AN [AS IS] BASIS AND WITHOUT WARRANTY OF ANY KIND. The CD-ROM storing the SOFTWARE is warranted only against defective material under normal use for a period of ninety (90) days after purchase from an authorized Canon dealer as evidenced by your sales receipt. Your sole remedy for a defective CD-ROM shall be replacement of the same without charge when returned by you at your expense to your point of purchase and proven to be defective upon inspection. The replacement CD-ROM will be warranted for the remainder of the original ninety (90) day warranty period of the defective CD-ROM. The limited warranty does not apply if the failure of the CD-ROM resulted from accident, abuse or misapplication of the SOFTWARE and shall not extend to anyone other than the original user of the SOFTWARE.

EXCEPT AS SPECIFICALLY SET FORTH IN THIS PARAGRAPH 4, CANON, CANON'S SUBSIDIARIES, DISTRIBUTORS AND DEALERS DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO THE SOFTWARE.

NEITHER CANON NOR ANY OF CANON'S SUBSIDIARIES, DISTRIBUTORS OR DEALERS IS LIABLE FOR ANY DAMAGES HOWSOEVER CAUSED, INCLUDING WITHOUT LIMITATION, DIRECT, CONSEQUENTIAL OR INCIDENTAL LOSS OR DAMAGE INCLUDING LOSS OF PROFITS, EXPENSE OR INCONVENIENCE HOWSOEVER CAUSED OR ARISING OUT OF THE SOFTWARE OR THE USE THEREOF.

NEITHER CANON, NOR ANY OF CANON'S SUBSIDIARIES, DISTRIBUTORS OR DEALERS SHALL HAVE ANY OBLIGATION TO INDEMNIFY YOU AGAINST ANY CLAIM OR SUIT BROUGHT BY A THIRD PARTY ALLEGING THAT THE SOFTWARE OR THE USE THEREOF INFRINGES ANY INTELLECTUAL PROPERTY OF SUCH THIRD PARTY.

5. **TERM:** This Agreement is effective upon your using the SOFTWARE and remains in effect until expiration of all copyright interests in the SOFTWARE unless earlier terminated. You may terminate this Agreement by destroying the SOFTWARE. This Agreement will also terminate without notice to you if you fail to comply with any of the terms of this Agreement and you must then promptly return the SOFTWARE. In addition, Canon may enforce its other legal rights.

6. **U.S. GOVERNMENT RESTRICTED RIGHTS NOTICE:** The SOFTWARE is provided with restricted rights. Use, duplication or disclosure is subject to restrictions as set forth in either subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer software clause at DFARs 252.227-7013 or subparagraph (c) (1) and (2) of the Commercial Computer Software Restricted Rights Clause at FAR 52.227-19, as applicable.

7. **SEVERABILITY:** In the event that any provision of this Agreement is declared or found to be illegal by any court or tribunal of competent jurisdiction, such provision shall be null and void with respect to the jurisdiction of that court or tribunal and all the remaining provisions of this Agreement shall remain in full force and effect.

8. **CONTROLLING LAW:** The terms of this Agreement as it relates to purchases of the Software in the United States of America shall be governed and construed in all respects in accordance with the laws and regulations of the State of New York, without reference to choice of law principles. The terms of this Agreement as it relates to purchases of the Software in Canada shall be governed by the laws of the province of Ontario.

9. **OWNERSHIP:** All rights, including but not limited to copyrights and trade secret rights, to the SOFTWARE belong to Canon, its affiliated corporations and third party licensors. Your use of the SOFTWARE is subject to the United States, Canada and other applicable copyright and trademark laws and nothing in this Agreement constitutes a waiver of the rights of Canon, its affiliated corporations and third party licensors under such laws.

Nothing contained in Paragraph 1 shall be construed to give Canon any ownership rights in any images, graphics or textual material that you save in connection with the Software.

10. **ACKNOWLEDGEMENT:** BY USING THE SOFTWARE, YOU ACKNOWLEDGE THAT YOU HAVE READ THIS AGREEMENT, UNDERSTOOD IT, AND AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS. YOU ALSO AGREE THAT THIS AGREEMENT IS THE COMPLETE AND EXCLUSIVE STATEMENT OF AGREEMENT BETWEEN YOU AND CANON CONCERNING THE SUBJECT MATTER HEREOF AND SUPERSEDES ALL PROPOSALS OR PRIOR AGREEMENTS, VERBAL OR WRITTEN, AND ANY OTHER COMMUNICATIONS BETWEEN THE PARTIES RELATING TO THE SUBJECT MATTER HEREOF. NO AMENDMENT TO THIS AGREEMENT SHALL BE EFFECTIVE UNLESS SIGNED BY A DULY AUTHORIZED OFFICER OF CANON.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

Contents Lookup

Index



Main Features of IB

- Download images to your computer
- Check images
- Print images
- Organize images
- Edit images
 - Adjust images
 - Trim images
 - Insert text
 - Correct red-eye
 - Change image size and type
- Utilize images
 - Attach an image to an e-mail
 - Create wallpaper or a screen saver
- Convert images
 - Change image size and type
- Play Movies

Use your images with CANON iMAGE GATEWAY Symbols Used

▶ : Selection procedure for menus that appear on the computer screen

[] : Names of items and menus, buttons, windows, etc. that appear on the computer screen

< > : Camera switch name or icon, or a keyboard key name

p.** : Reference page (jump to page by clicking)

? : Help

💡 : Tip

⚠ : Important information



: Helpful information

Makeup of Each Chapter

Chapter 1 Basic Operation

- Starting up and quitting IB
- Downloading images to your computer
- Checking images
- Playing movies
- Printing images

Chapter 2 Advanced Operation

- Efficient checking of images
- Organizing images
- Editing images
- Editing movies
- Utilizing images
- Index printing
- Layout printing

Chapter 3 High-Level Functions

- Checking images with high-level functions
- Organizing images with high-level functions
- Advanced image editing

Chapter 4 Preferences

- Settings for all functions

Chapter 5 Using Images on the Internet

- Using CANON iMAGE GATEWAY

Reference

- Solving problems
- Uninstalling IB
- System requirements
- Supported images
- Lists of primary window functions

Table of Contents

1
Basic Operation

2
Advanced Operation

3
High-Level Functions

4
Preferences

5
Using the Internet

Reference

Contents
Lookup

Index



Table of Contents

Chapter 1 Basic Operation..... 6

Starting up IB	7
Downloading an Image to Your Computer.....	7
Downloading Images Using Your Card Reader.....	8
Viewing an Image	9
View Images as Thumbnails in the Main Window	10
Changing the Display Magnification	11
Enlarging and Viewing Images One at a Time	11
Displaying an Image Across the Whole Window (Full View Display).....	12
Playing Movies.....	13
Rewriting Images to a Memory Card	14
Printing an Image.....	15
Quitting IB	16

Chapter 2 Advanced Operation 17

Checking/Sorting Images.....	18
Enlarging and Checking Images One at a Time	18
Enlarging a Specific Part of an Image	19
Sorting Images.....	19
Sorting Images in the Main Window	20
Filtering Images You Want to Display.....	20
Arranging Images in the Main Window.....	21
Efficiently Checking/Sorting Images	21

Organizing Images	22
Creating a Folder for Saving Images.....	22
Moving Images	23
Moving Images in Folders	24
Changing File and Folder Names for Images.....	24
Deleting an Image or Folder	25
Registering Frequently-Used Folders as Favorite Folders.....	26
Deleting Favorite Folders	27
Editing an Image.....	27
Automatic Adjustment Using IB.....	27
Adjusting Color and Brightness	29
Trimming an Image.....	29
Inserting Text into Images	30
Adjusting Sharpness.....	31
Correcting Red-Eye Automatically.....	32
Correcting Red-Eye Manually	33
Editing Movies	34
Cutting Movies.....	38
Using the Video Snapshot Album Window	39
Playing Video Snapshot Albums	39
Editing Video Snapshot Albums	40
Changing the Order of Video Snapshots.....	40
Adding Background Music to Video Snapshot Albums	41
Saving Edited Video Snapshot Albums	42
Exiting the Video Snapshot Album Window	42

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

Contents
Lookup

Index



Utilizing Your Images	42
Viewing Images as a Slide Show	42
Sending an Image by E-Mail	44
Creating Wallpaper from an Image	45
Creating a Screen Saver from an Image	46
Printing Multiple Images on One Sheet of Paper (Index Printing)	48
Arranging Images Freely and Printing (Layout Printing) .	49

Chapter 3 High-Level Functions..... 50

Comparing Multiple Images	51
Viewing Shooting Information for an Image	52
Changing the Size and Type of an Image and Saving ...	52
Exporting Shooting Information	53
Extracting Still Images from a Movie	54
Organizing Images Using High-Level Functions.....	56
Setting Keywords in Images	56
Entering Comments into Images	56
Saving Multiple Images with New File Names	57
Classifying Images by Shot Date	57
Searching for Images	59

Performing Advanced Editing	60
Adjusting the Color of an Image in RGB	60
Adjusting the Brightness Level	61
Adjusting the Tone Curve	61
Transferring Images to Other Image Editing Software	62
Merging Images to Create Panorama Images	63
Adding Sound to Images/Playing Back	64
Adding Sound to Images	64
Playing Back Sound	64

Chapter 4 Preferences..... 65

Preferences	66
Browser Window Settings	66
Viewer Window Settings	67
Confirmation Dialog Box Settings	67
Processing When Rotating Settings	68
Layout Print Settings	68
Photo Print Settings	68
Register Application Settings	68

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

 
Preferences

Using the
Internet

Reference

Contents
Lookup

Index

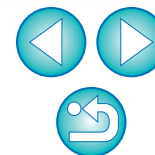

Chapter 5 Using Images on the Internet..... 69

Uploading a Movie to YouTube	70
Using CANON iIMAGE GATEWAY	71
Membership Registration.....	71
Displaying the Top Page of CANON iIMAGE GATEWAY.....	71
Uploading Images in a CANON iIMAGE GATEWAY Album.....	72
Displaying a Registered CANON iIMAGE GATEWAY Album.....	72

Reference 73

Troubleshooting	74
Deleting the Software (Uninstalling)	75
System Requirements	76
Supported Images	76
List of Main Window Functions	77
Preview Mode	77
List Mode	78
List of Viewer Window Functions.....	79
List of Cut Movie Window Functions	80
List of Video Snapshot Album Window Functions	81
List of Photo Print Window Functions	82
List of Index Print Window Functions.....	83
List of Layout Print Window Functions.....	84

Contents Lookup	85
Index.....	86
About This Instruction Manual.....	88
Trademark Acknowledgments.....	88

Introduction

Table of
Contents

1
Basic
Operation

2
Advanced
Operation

3
High-Level
Functions

 
4
Preferences

5
Using the
Internet

Reference

Contents
Lookup

Index

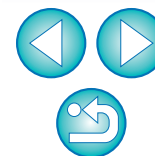

1 Basic Operation



Starting up IB.....	7
Downloading an Image to Your Computer	7
Downloading Images Using Your Card Reader.....	8
Viewing an Image	9
View Images as Thumbnails in the Main Window	10
Changing the Display Magnification	11
Enlarging and Viewing Images One at a Time	11
Displaying an Image Across the Whole Window (Full View Display)	12
Playing Movies	13
Rewriting Images to a Memory Card	14
Printing an Image	15
Quitting IB.....	16

Introduction

Table of Contents

1
Basic Operation

2
Advanced Operation

3
High-Level Functions

 
4
Preferences

5
Using the Internet

Reference


Contents Lookup

Index

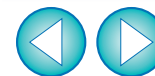

Starting up IB

 Click the icon on the Dock.

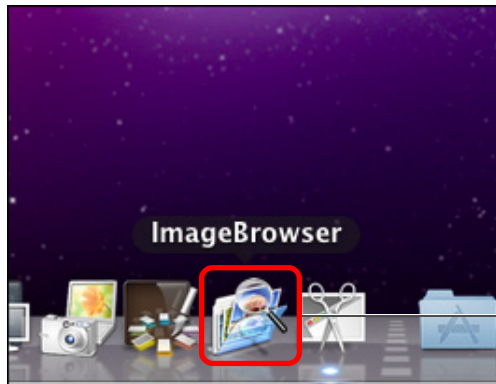


Click

→ IB starts up and the main window (browser window) appears.



 Main window (browser window)

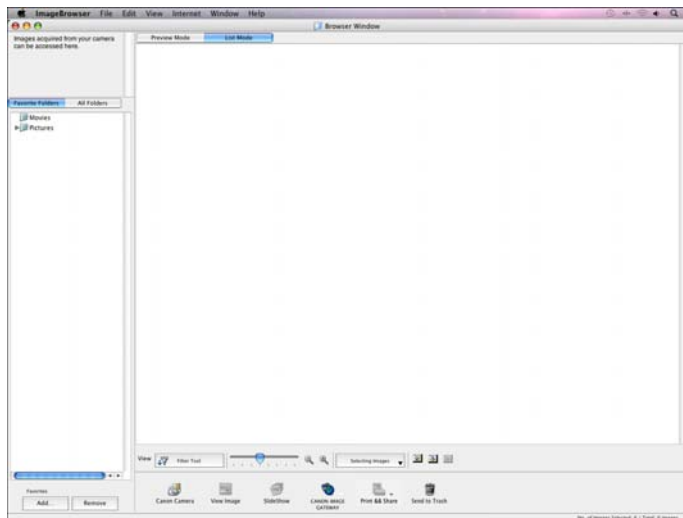


Downloading an Image to Your Computer

Connect the camera and computer with the cable provided and download the images saved on the memory card inserted in the camera. For downloading images, start up the camera software “EOS Utility” and use.

1 Connect your camera and computer and turn the camera on.

 - When IB starts up, connect the camera and your computer with the interface cable provided with the camera and turn the camera on.
- For detailed instructions on connecting your camera and computer, refer to the “EOS Utility Instruction Manual” (PDF electronic manual).

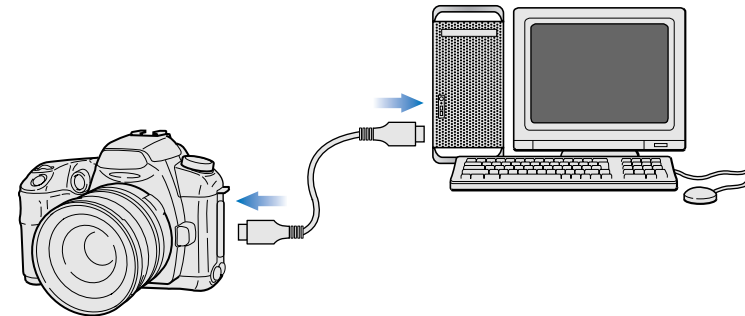

→ EOS Utility starts up automatically.

EOS Utility



Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup

Index

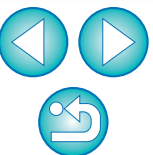

2 Download images.



Click

- Downloading of images begins.
- The downloaded images are saved in the [Pictures] folder and are displayed in the main window of IB.
- The downloaded images are sorted into folders by date and saved.
- Click the EOS Utility [Quit] button to quit EOS Utility and turn the camera's power switch to < OFF >.



 
Advantages of using EOS Utility to download images

Using EOS Utility to download images makes it easier to organize your images as they are downloaded, sorted and saved into folders by date.

Downloading Images Using Your Card Reader


You can also download images to the computer using a third-party card reader.

- 1 Start up IB and then select the save destination for the images in the folder area at the left of the main window.

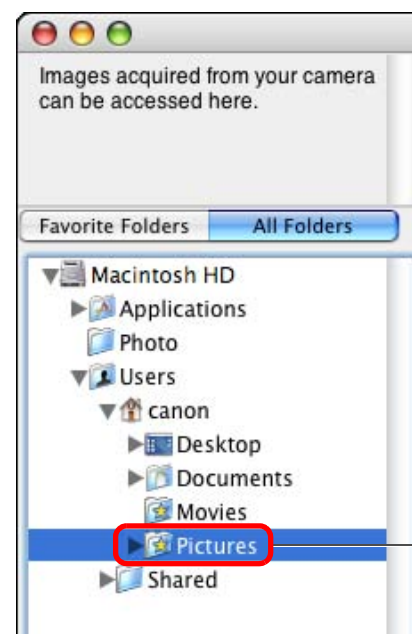

Click

 - 2 Load the memory card into the card reader.

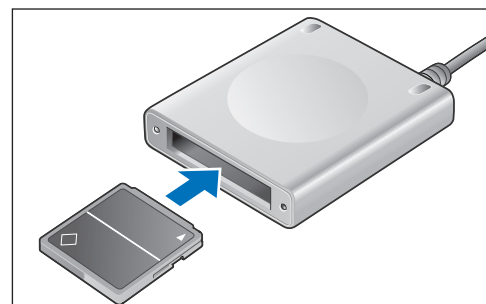


- Download images window appears.



3 Download images.

 Download images window

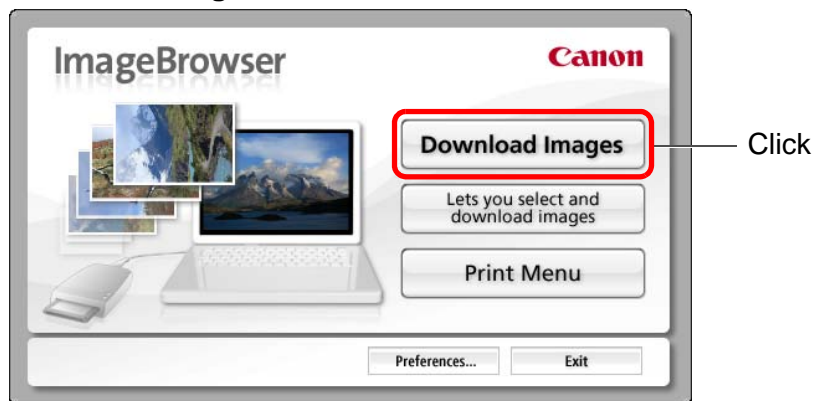

- Downloading of images begins.
- The downloaded images are saved in the folder selected in step 1 and are displayed in the main window of IB.
- The downloaded images are sorted into folders by date and saved.
- Click the [Exit] button to quit Download images window.

💡 Advantages of using IB to download images


Using IB to download images makes it easier to organize your images as they are downloaded, sorted and saved into folders by date.

⚠ Depending on the card reader and computer OS used, SDXC cards might not be correctly detected. In such a case, connect your camera and computer with the provided interface cable, and transfer the images to your computer.

Viewing an Image

Images and movies downloaded to your computer are displayed as thumbnail images in the main window. You can double-click a thumbnail to open the viewer window and display an image at a larger size or play a movie.

 Main window

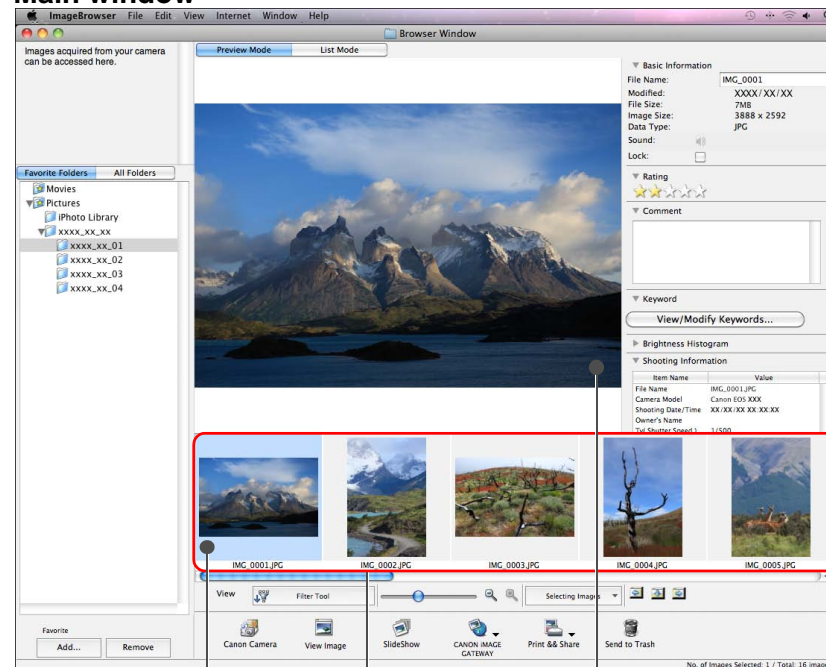

Click to select the image

The clicked image is enlarged and displayed in the center of the window

Displays the images in the folder that was selected from the folder area on the left of the window

- To select multiple images, click on the images while holding down the < ⌘ > key or < shift > key on the keyboard.
- You can select all images in a folder by clicking the [Selecting Images] button and then selecting [Select All] from the menu that appears.
- When you have selected a movie, the first frame shot is displayed in the center. For playing movies, refer to [p.13](#).

📖 For a list of main window functions, refer to [p.77](#).

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup


Index

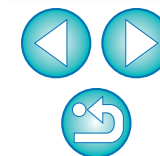

View Images as Thumbnails in the Main Window

You can change the display mode of the main window to show only a list of the thumbnail images.

 
Click the [List Mode] tab sheet.

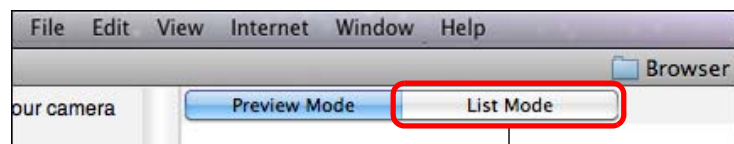

Click

→ The main window display changes to List Mode.

 Main window (List Mode)

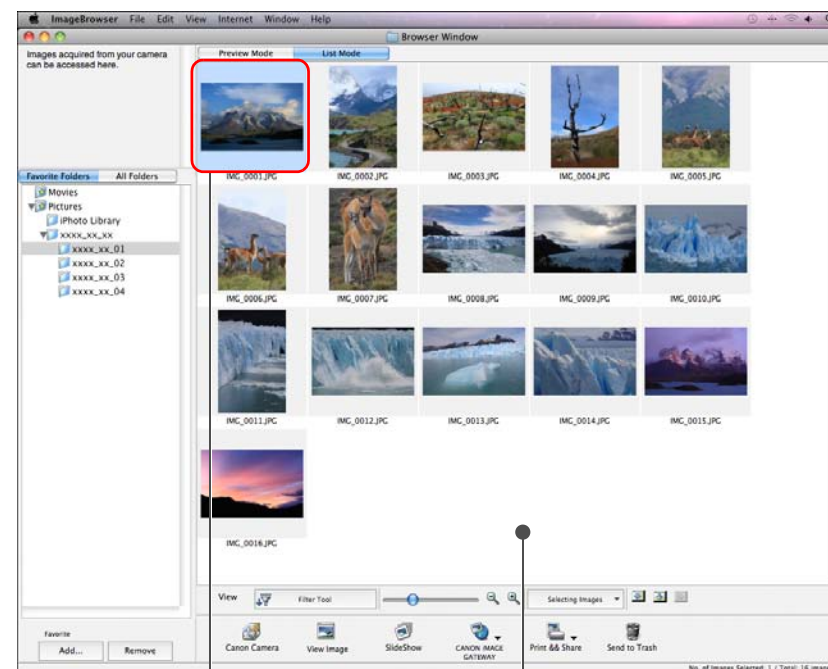


Click to select the image

Displays the images in the folder that was selected from the folder area on the left of the window

- To select multiple images, click on the images while holding down the < ⌘ > key or < shift > key on the keyboard.
- You can select all images in a folder by clicking the [Selecting Images] button and then selecting [Select All] from the menu that appears.



 
For a list of List Mode functions, refer to [p.78](#).

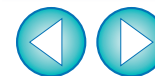

Changing the Display Magnification

You can change the display magnification of the thumbnail images displayed in Preview Mode (p.77) and List Mode (p.78).

 
Change the display magnification.

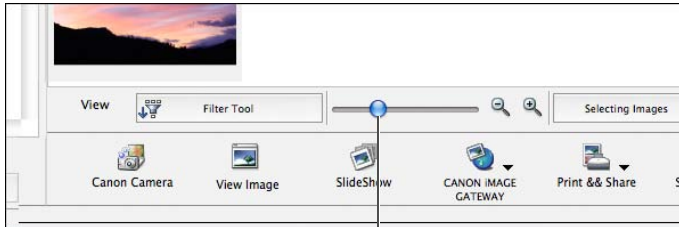

Drag left or right

- You can also change the display magnification by clicking [] or [].

 
→ The display magnification of the images changes.

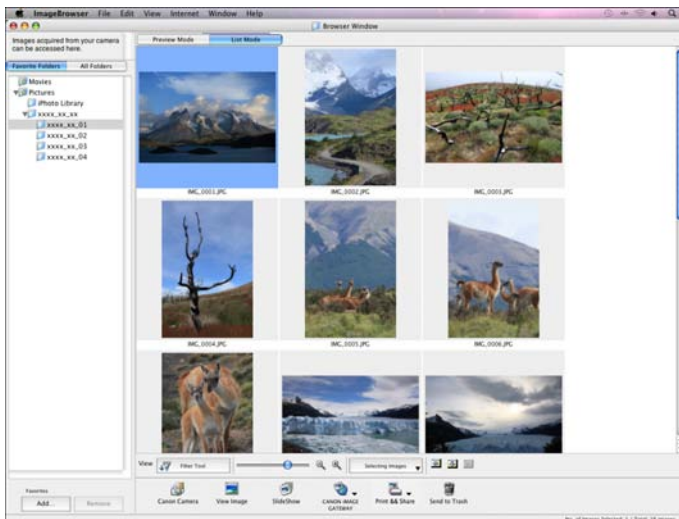

Enlarging and Viewing Images One at a Time

1 Double-click an image to enlarge.

 
Double-click

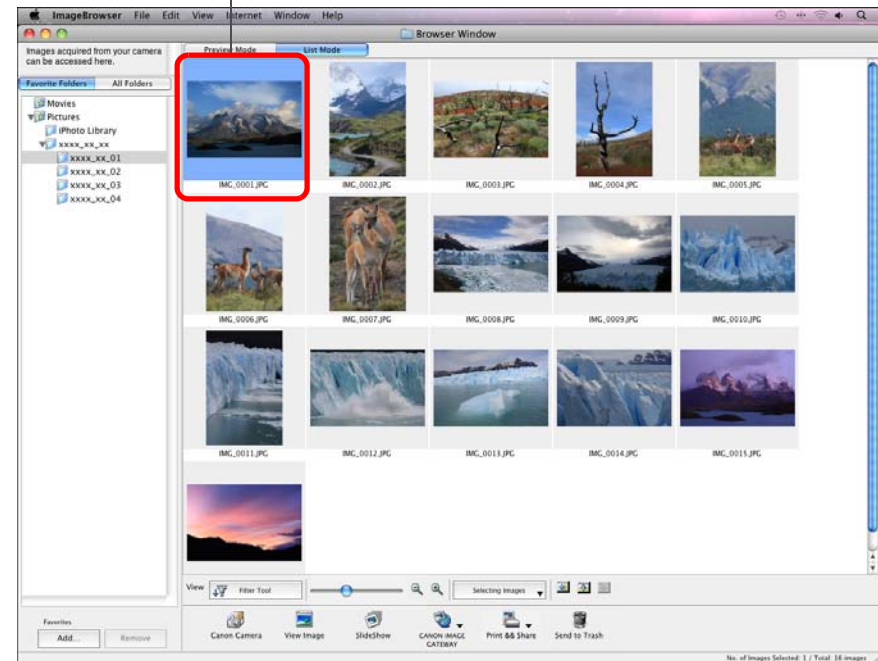

→ The viewer window appears.

2 Click [◀] or [▶] to switch to the image you want to display.

 Viewer window

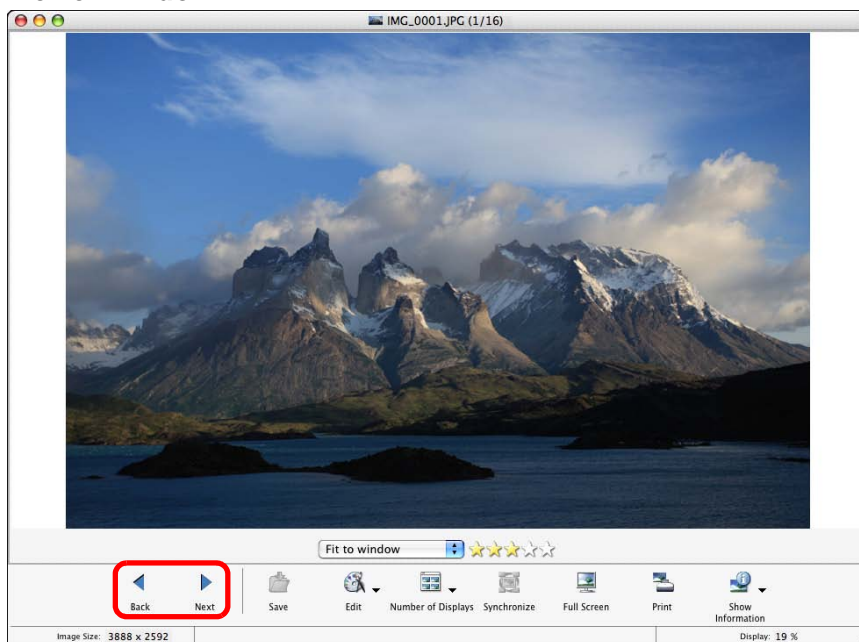

- The shooting information is displayed if you click [ⓘ] (Show Shooting Information) and select [Show Shooting Information] from the menu that appears.
- To quit the viewer window, click [⌵] on the top left of the window.

? When you display RAW images in the viewer window

In the viewer window, the JPEG embedded in the RAW image is displayed instead of the actual RAW image. In some cases, displayed images may be grainy.

To check the actual RAW image, use the bundled software Digital Photo Professional.

For a list of viewer window functions, refer to [p.79](#).

Displaying an Image Across the Whole Window (Full View Display)

Double-click on the image you want to display across the whole window.





- You can also display the image across the whole window by clicking [⌵] (Full Screen) on the bottom of the window.
- The image is enlarged and displayed across the whole window.





- To return to the viewer window, click on the window or press the < esc > key on the keyboard.

 


Playing Movies

You can play movies and Video Snapshot Albums that you have shot. Movie files are marked with the [] icon and Video Snapshot Albums with the [] icon in the thumbnail image frame in the main window.


- 1 In the main window, double-click a movie (image marked with the [] icon) or a Video Snapshot Album (image marked with the [] icon).


Double-click

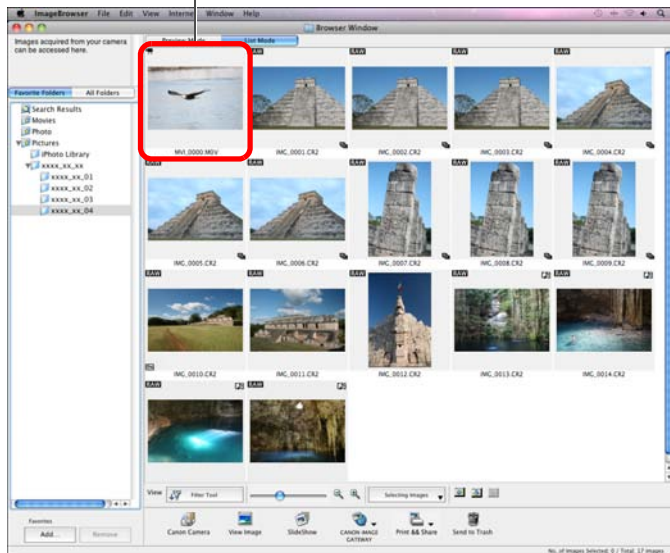

→ A viewer window appears.

 - 2 Click the [] button.

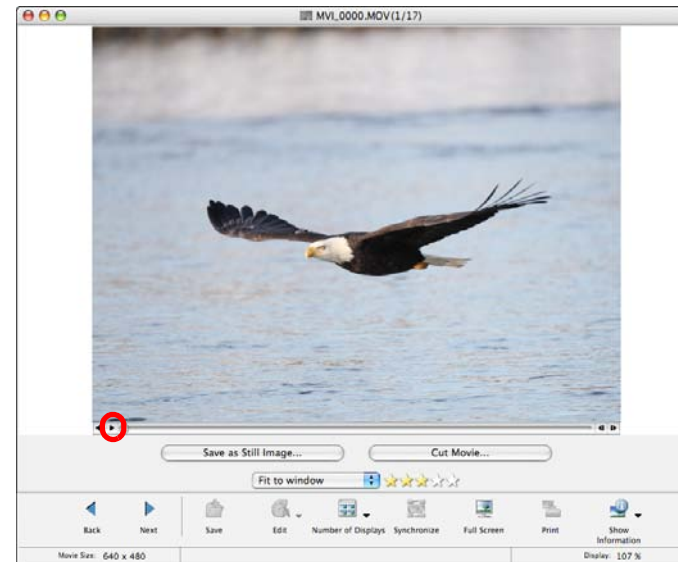


- The movie begins to play.
- Playback stops automatically when the movie ends.
- To play the same movie again, click the [] button.
- You can save the currently displayed scene as a still image by clicking the [Save as Still Image] button.

Rewriting Images to a Memory Card

You can rewrite images and MOV movies that you have saved on a computer to a memory card and then play them back on the camera. Use a third-party card reader to rewrite your images or movies to a memory card.


1 Insert a memory card that has been formatted on the camera into the card reader.

 2 Select the image or movie you want to rewrite.

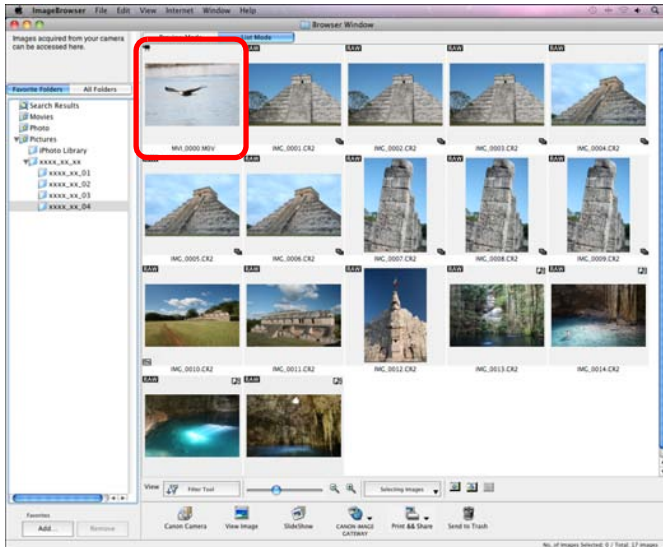


3 Rewrite the image or movie.

 - Select the [File] menu ► [Rewrite Image to Memory Card].

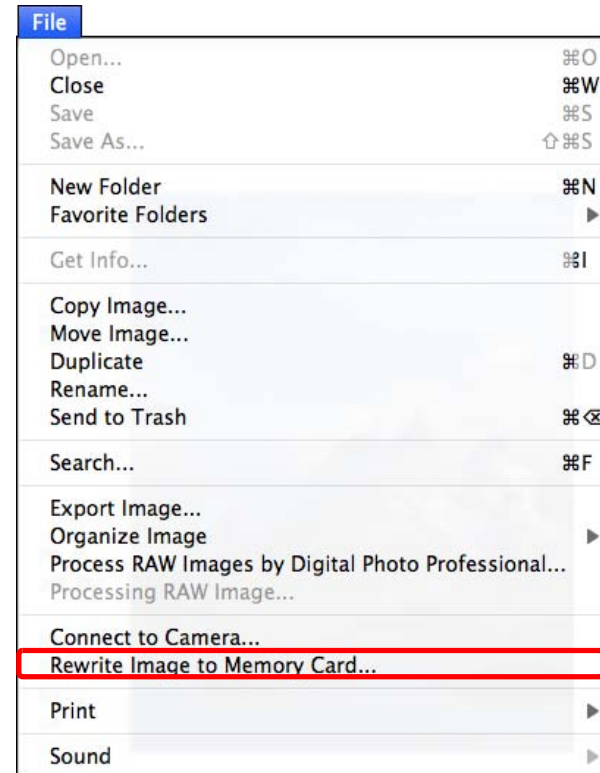

 4 Select the destination memory card and click the [OK] button.

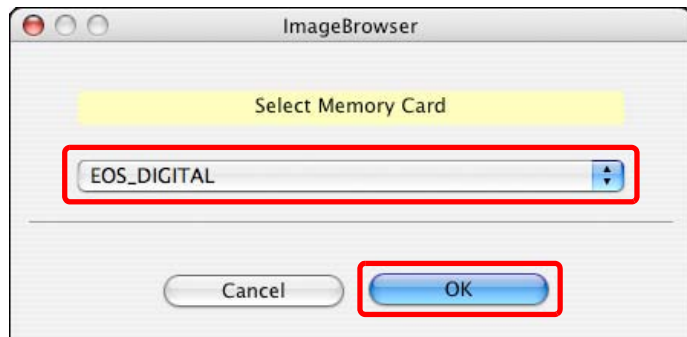

→ A confirmation window appears.

5 Click the [Transfer] button in the confirmation window.

 
→ Image or movie exporting begins.

- ! You cannot rewrite MOV movies that have undergone movie editing (p.34) to a memory card.
- AVI movies cannot be rewritten to a memory card.

Printing an Image

This section explains how to print one image on one sheet of paper.


1 Select the image to be printed.

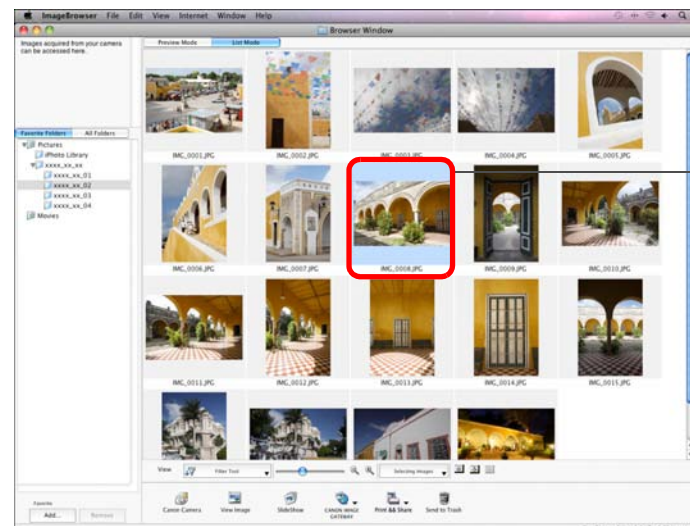

- To select multiple images, click on the images while holding down the < ⌘ > key or < shift > key on the keyboard.
- You can select all images in a folder by clicking the [Selecting Images] button and then selecting [Select All] from the menu that appears.

2 Display the print settings window.

 - Click the [Print & Share] button and then select [Photo Print] from the menu that appears.

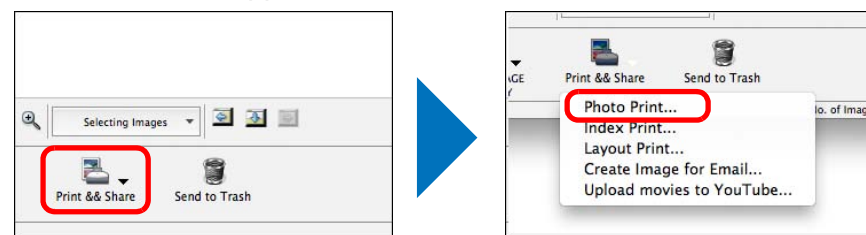

→ The [Photo Print] window appears.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference


Contents Lookup

Index



3 Set the paper size and other settings, and then click the [Print] button.

 Photo Print window

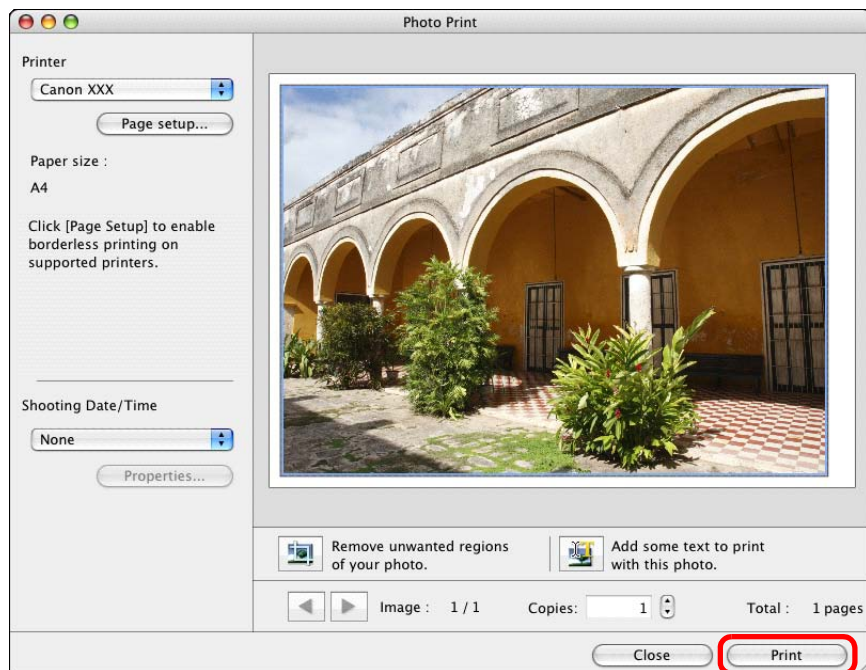

→ Printing begins.

! When printing RAW images, the JPEG embedded in the RAW image is printed instead of the actual RAW image. In some cases, printed images may be grainy.

For a list of photo print window functions, refer to [p.82](#).

Quitting IB

In the main window, select the [ImageBrowser] menu ► [Quit ImageBrowser].



→ IB quits.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup

Index

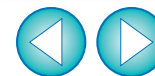

Checking/Sorting Images	18
Enlarging and Checking Images One at a Time	18
Enlarging a Specific Part of an Image	19
Sorting Images.....	19
Sorting Images in the Main Window	20
Filtering Images You Want to Display	20
Arranging Images in the Main Window	21
Efficiently Checking/Sorting Images.....	21
Organizing Images	22
Creating a Folder for Saving Images.....	22
Moving Images	23
Moving Images in Folders.....	24
Changing File and Folder Names for Images	24
Deleting an Image or Folder	25
Registering Frequently-Used Folders as Favorite Folders	26
Deleting Favorite Folders.....	27
Editing an Image	27
Automatic Adjustment Using IB	27
Adjusting Color and Brightness	29
Trimming an Image.....	29
Inserting Text into Images	30
Adjusting Sharpness.....	31
Correcting Red-Eye Automatically.....	32
Correcting Red-Eye Manually.....	33

Editing Movies	34
Cutting Movies.....	38
Using the Video Snapshot Album Window	39
Playing Video Snapshot Albums	39
Editing Video Snapshot Albums	40
Changing the Order of Video Snapshots.....	40
Adding Background Music to Video Snapshot Albums	41
Saving Edited Video Snapshot Albums	42
Exiting the Video Snapshot Album Window	42
Utilizing Your Images.....	42
Viewing Images as a Slide Show	42
Sending an Image by E-Mail	44
Creating Wallpaper from an Image.....	45
Creating a Screen Saver from an Image.....	46
Printing Multiple Images on One Sheet of Paper (Index Printing)	48
Arranging Images Freely and Printing (Layout Printing)	49

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

Contents
Lookup

Index




Checking/Sorting Images

You can enlarge images one at a time from a list in the main window, check what they look like in detail, and sort them with ratings.

Enlarging and Checking Images One at a Time

- 1 Double-click on the image on the top left of the main window.

 
Double-click

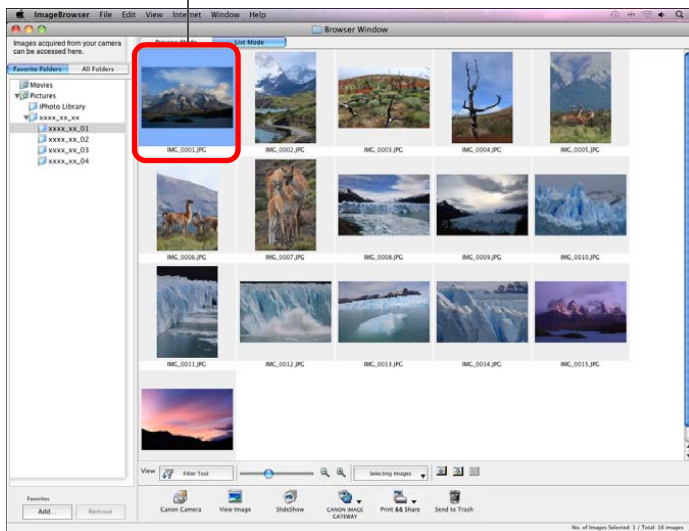

→ The viewer window appears.

- 2 Click [◀] or [▶] to switch to the image you want to display.

 Viewer window

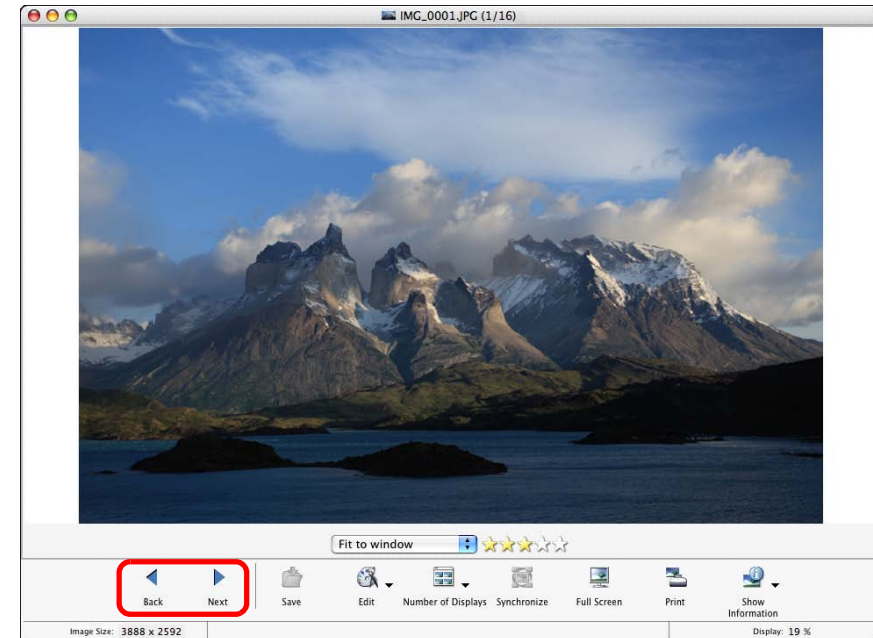

- The shooting information is displayed if you click [ⓘ] (Show Shooting Information) and select [Show Shooting Information] from the menu that appears.
- To quit the viewer window, click [⌵] on the top left of the window.
- When a RAW image is displayed in the viewer window, the JPEG embedded in the RAW image is displayed instead of the actual RAW image. In some cases, displayed images may be grainy. To check the actual RAW image, use the bundled software Digital Photo Professional.



To display only selected images in the viewer window

Select multiple images in the main window (p.10) and then click on [ⓘ] (View Image) (p.78) on the bottom of the main window to display only the selected images in the viewer window.



For a list of viewer window functions, refer to p.79.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup


Index

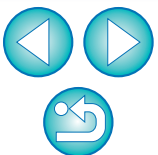

Enlarging a Specific Part of an Image

1 Enlarge an image.

 - Click the list box and then select the display magnification.

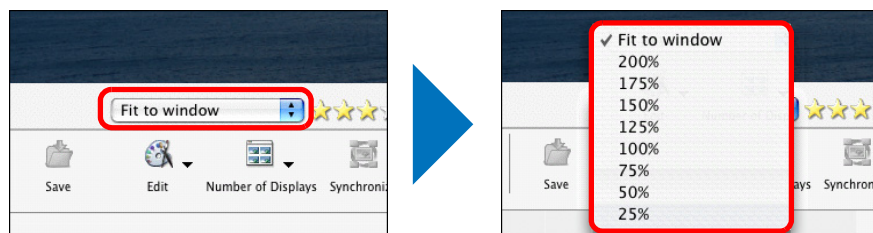

- The image enlarges and the navigator window appears.
- RAW images cannot be enlarged.

2 Display the part of the image you want to check.

- Drag the enlargement display position in the navigator window and display the part of the image you want to check.



- To return to full view, select [Fit to window] from the list box.


Sorting Images

You can sort images into one of seven groups by setting ratings according to the photo subject or a theme.

Ratings can be set from the following seven types.

☆ (none), [★], [★★], [★★★], [★★★★], [★★★★★], [Reject]

 Increase or decrease [★].

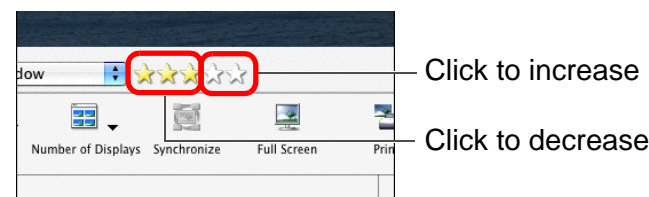


- [Reject] cannot be set in the viewer window. Set [Reject] in the main window.

- You can display and change rating settings set in IB version 6.6 or later with other bundled software or on an EOS 60D, EOS REBEL T3i/600D, or EOS REBEL T3/1100D camera.
 - EOS Utility version 2.9 or later:
Ratings set in IB version 6.6 or later are displayed on image thumbnails in the viewer window. However, [Reject] is not displayed and you cannot change rating settings.
 - Digital Photo Professional version 3.9 or later:
Ratings set for still images in IB version 6.6 or later are displayed on image thumbnails in the main window, etc. You can also change rating settings.
 - On an EOS 60D, EOS REBEL T3i/600D, or EOS REBEL T3/1100D camera:
Ratings set in IB version 6.6 or later are displayed in the playback screen. You can also change rating settings. However, you cannot display or change settings for [Reject].
- Reversely, you can also display and change with IB version 6.6 or later the rating settings set for still images in Digital Photo Professional version 3.9 or later or on an EOS 60D, EOS REBEL T3i/600D, or EOS REBEL T3/1100D camera.



Sorting Images in the Main Window

 Select images in the main window, and then select the [Edit] menu ► [Change Rating] ► select the setting.

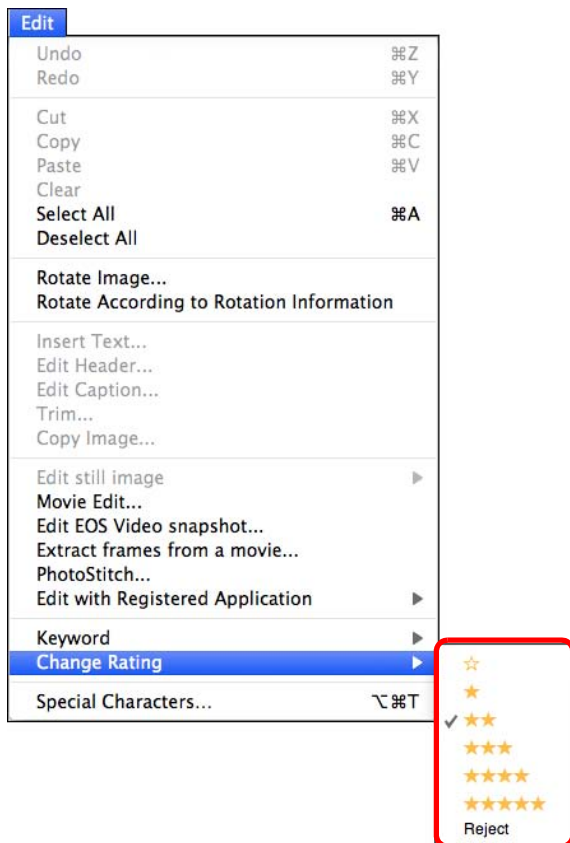


- You can also click on a thumbnail image in the main window while holding down the <control> key on the keyboard, and then from the menu that appears select [Change Rating] ► select the setting.

Filtering Images You Want to Display


You can filter images displayed in the main window by the ratings you have attached to them.

 
- 1 Click the [ Filter Tool] button.

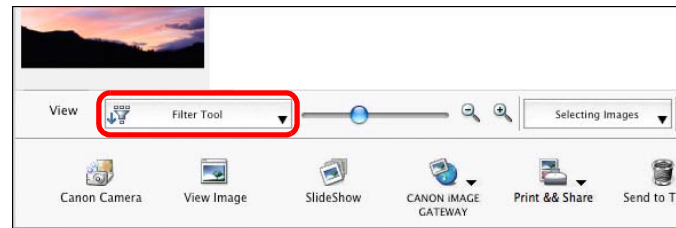

→ The filter function appears.

 - 2 Set the criteria to filter images.

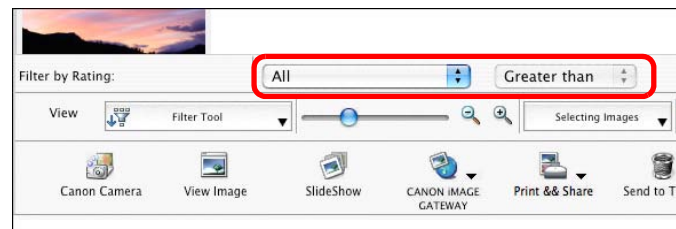

- Only the images with the criteria you have set are displayed in the main window.
- To quit the filter display, click the [ Filter Tool] button again and then select [Select All].

! To users of ImageBrowser ver. 6.5 and earlier
The method for setting ratings has greatly changed starting with ver. 6.6.
Accordingly, a rating may be displayed differently even for the same image between ver. 6.6 or later and ver. 6.5 and earlier.
For detailed information, refer to the Help for ImageBrowser ver. 6.6 or later.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup


Index

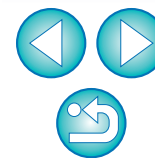

Arranging Images in the Main Window

You can arrange images in the order of file size or shot date and time.

 Select the [View] menu ► [Sort] ► desired item.

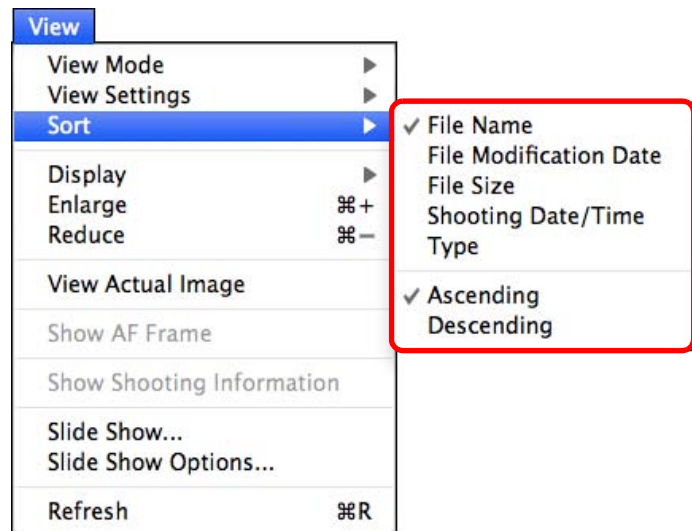

→ The images are arranged in the order according to the selected item.

Sort item	Description
File Name	Image file names are arranged in the order of 0 – 9 → a – z.
File Modification Date	Images are arranged in the order of most recently updated.
File Size	Images are arranged in the order of the smallest file size.
Shooting Date/Time	Images are arranged in the order of most recently shot.
Type	Images are arranged in the order of BMP images → RAW images → JPEG images → MOV movies → PICT images → TIFF images.
Ascending	Images are arranged from top to bottom in order of sorting criteria.
Descending	Images are arranged from bottom to top in order of sorting criteria.

Efficiently Checking/Sorting Images

With the Preview Mode that displays images as thumbnails and single images in the same window, you can efficiently check the images. You can also check the images' shooting information or sort them by setting their ratings.

1 Enable Preview Mode.



Click

→ The main window display switches to Preview Mode.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

Contents Lookup

 
Index



2 Click on a thumbnail image to switch to the image you want to check, and then sort by setting ratings.

Click to increase or decrease

Preview Mode

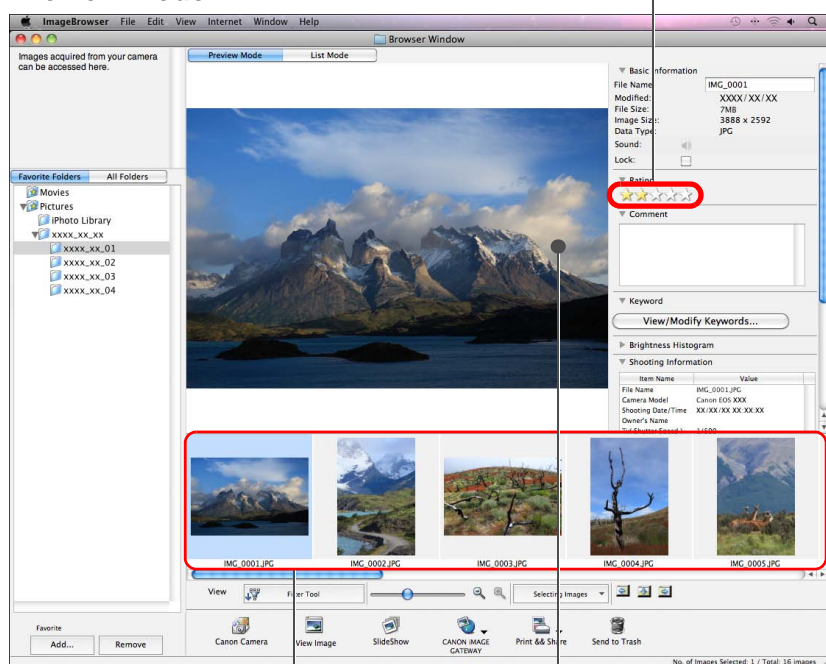

Thumbnail image display area

The selected image in the thumbnail image display area is enlarged in the center of the window

- When a RAW image is displayed, the JPEG embedded in the RAW image is displayed instead of the actual RAW image. In some cases, displayed images may be grainy. To check the actual RAW image, use the bundled software Digital Photo Professional.
- When you have selected a movie, the first frame shot is displayed in the center. For playing movies, refer to [p.13](#).
- To set [Reject] for ratings, select the [Edit] menu ► [Change Rating] ► [Reject], or click on a thumbnail image while holding down the <control> key on the keyboard and then select [Change Rating] ► [Reject] from the menu that appears.

 For a list of Preview Mode functions, refer to [p.77](#).

 
Organizing Images

This section explains functions that are useful for organizing images such as creating new folders for saving sorted images, moving and copying images and deleting unwanted images.

Creating a Folder for Saving Images

You can create a folder to save sorted images.

- 1 In the folder area, select the location where the new folder is to be created.

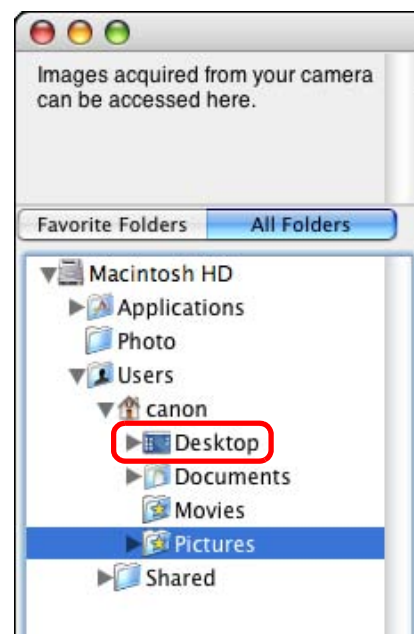

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet


Reference

Contents Lookup

Index

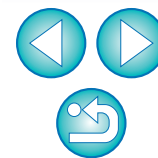

 2 Select the [File] menu ► [New Folder].

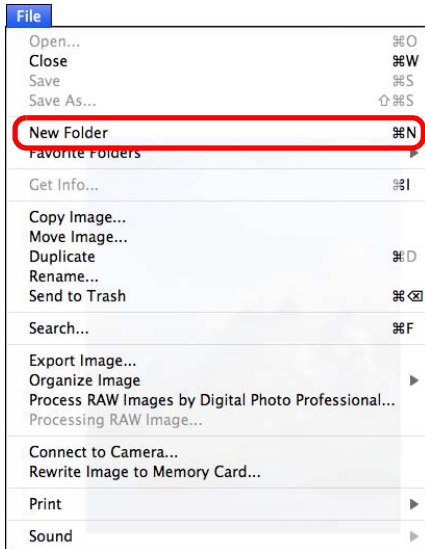

→ The [New Folder] window appears.

3 Enter a folder name and click the [OK] button.

 
→ The new folder is created in the folder selected in step 1.

Moving Images

You can move or copy images to separate folders and organize them according to shot date or theme.

Drag the image to be moved or copied.

- To move: Drag the image and release when the image is in the destination folder.
- To copy: Drag the image while holding down the < option > key and release when the image is in the destination folder.

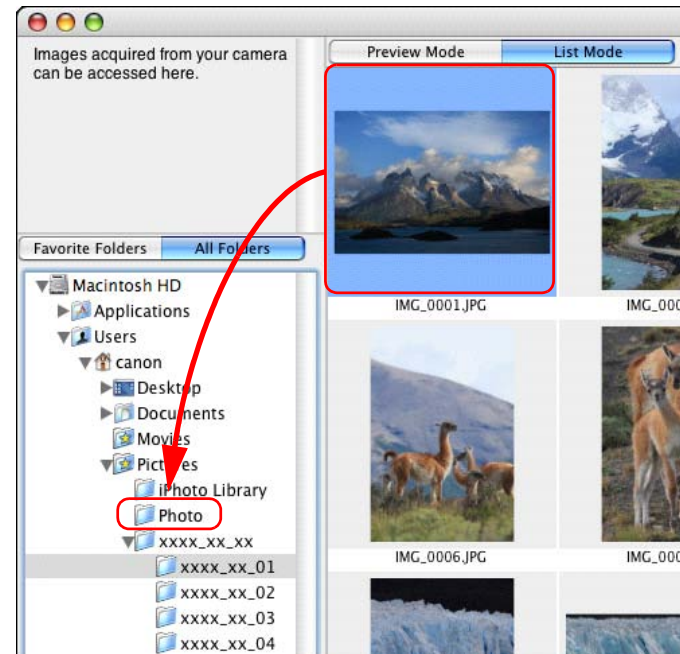

→ The image is moved or copied to the folder it was dragged to.

 


Moving Images in Folders

You can move or copy folders that contain images, and organize images in folders.

Drag the folder to be moved or copied.


- To move: Drag the folder and release when the folder is in the destination folder.
- To copy: Drag the folder while holding down the < option > key and release when the folder is in the destination folder.

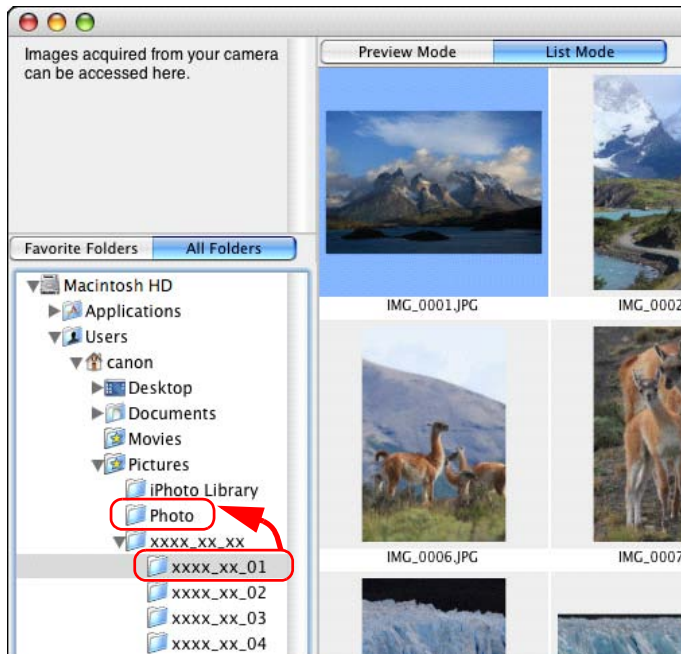

→ The folder is moved or copied to the folder it was dragged to.

Changing File and Folder Names for Images

 
- 1 In the main window, select the image whose name you want to change, or, in the folder area, select the folder whose name you want to change.
- 2 Select the [File] menu ► [Rename].

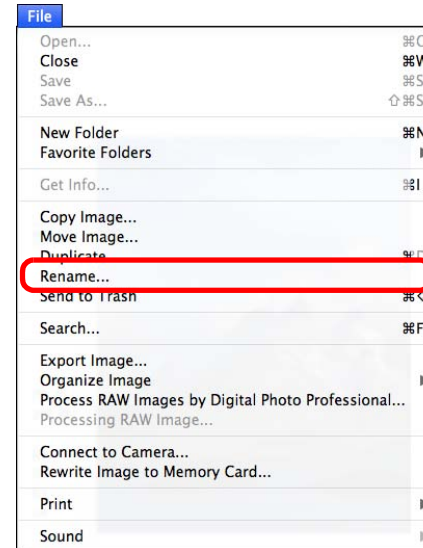

→ The [Rename] window appears.

3 Enter the file or folder name of the image and then click the [OK] button.

 Rename window

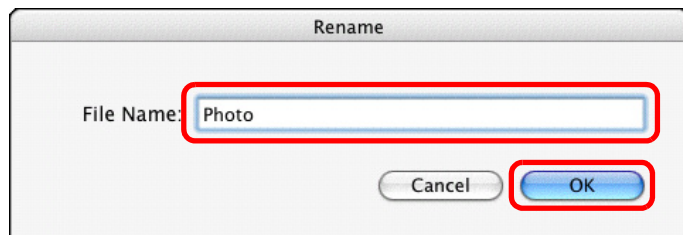


→ The file or folder name changes to the new one.

Deleting an Image or Folder

Deleted images and folders cannot be recovered. Also, take care when deleting folders as all the images inside a folder will also be deleted.

1 In the main window, select the image you want to delete, or in the folder area, select the folder you want to delete.

 2 Click [Send to Trash].

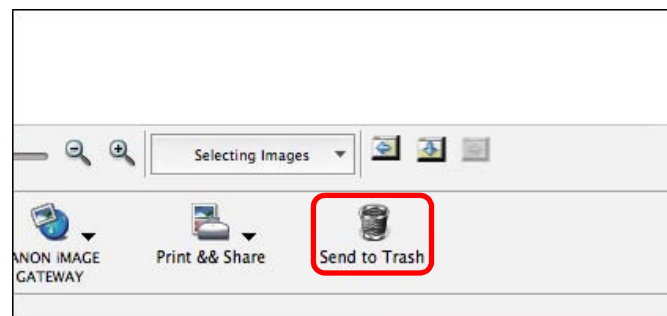


→ The image or folder is moved to the [Trash] and is deleted from IB.

- If the [Move to Trash?] dialog box appears, click the [Yes] button.
- To delete an image or a folder from your computer, on the desktop, select the [Finder] menu ► [Empty Trash].

 


- You can also change the file name in the [File Information] window (p.52) or in the information display area (p.77) in Preview Mode.
- You can also change the folder name in the [File Information] window (p.52).


Registering Frequently-Used Folders as Favorite Folders

You can register shortcuts for frequently-used folders in the [Favorite Folders] tab sheet in the folder area to make images easier to find. Please note that because the [Pictures] folder is registered as a favorite folder by default, the folder icon appears as [].

1 Select the folder you want to register.

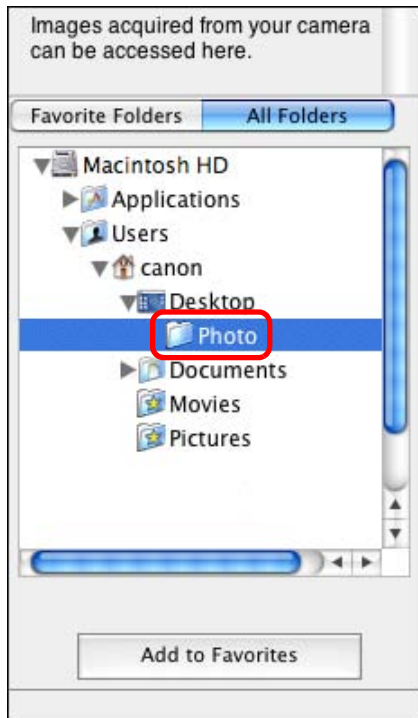

2 Click the [Add to Favorites] button.

→ The folder icon changes to [] and the folder is registered as a favorite folder.

3 Select the [Favorite Folders] tab sheet.

4 Select the registered folder to display the images inside the folder.



→ The images inside the folder appear.

 
? If you have edited or deleted images in folders you have registered as favorites

Any changes done to images inside registered folders will be applied to the original images. Therefore, please be aware that by editing or deleting images inside registered folders, you are in fact editing or deleting the original images.

Deleting Favorite Folders

If you no longer need a folder you have registered in the [Favorite Folders] tab sheet, you can delete it from this tab sheet. Please note that as registered folders are shortcuts, the original folder will not be deleted when you delete the shortcut.

In the [Favorite Folders] tab sheet, select the folder you want to delete and then click the [Remove] button.

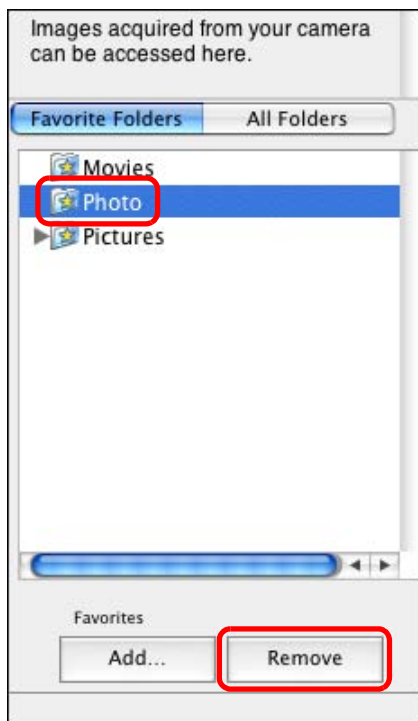

→ The folder is deleted.

Editing an Image

If the brightness or color of images is different from what you visualized when you shot the photo, you can adjust an image using the editing functions to bring them closer to what you visualized.

This section explains about automatic adjustment of images, adjustment of brightness/saturation, trimming images, inserting text into images, adjustment of sharpness, red-eye correction, and cutting movies.

JPEG images deteriorate slightly when edited and saved, and the image before editing cannot be recovered. For this reason, an edited JPEG image should be saved as a separate image from the original image.

Chapter 3 explains about high-level editing functions other than those described above.

 


You can edit RAW images in Digital Photo Professional (hereinafter, “DPP”). Select the RAW image in the Main Window and select the [File] menu ► [Process RAW Images by Digital Photo Professional], which will start up DPP. For detailed instructions on using DPP, refer to “Digital Photo Professional Instruction Manual” (PDF electronic manual).

Automatic Adjustment Using IB

The brightness and colors, etc. of the image are automatically adjusted.

- 1 Display the image to edit in the viewer window (p.18).
- 2 Click [Edit] and then select [Auto Adjustment] in the menu that appears.

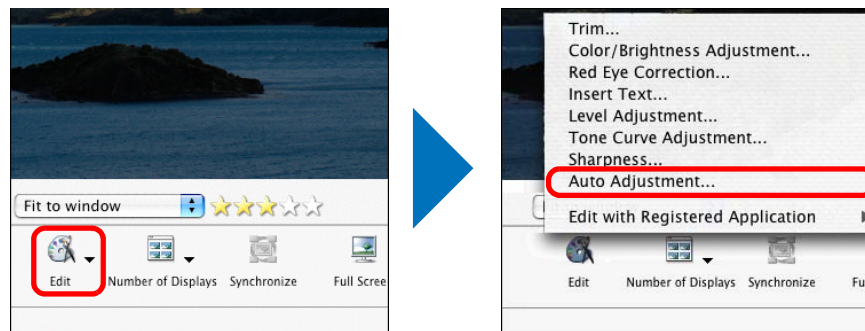

→ The [Auto Adjustment] window appears.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

 
Contents Lookup

Index




3 Click the [Auto Adjust Image] button.

Auto Adjustment window

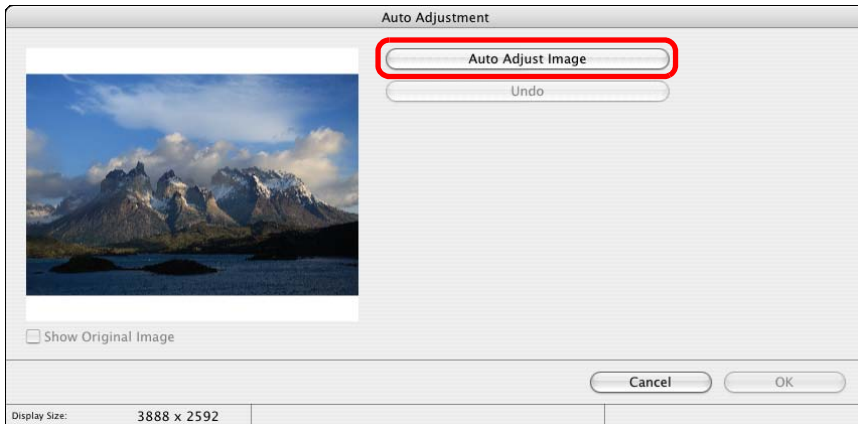

→ The image is adjusted.

 4 Check the adjustments.

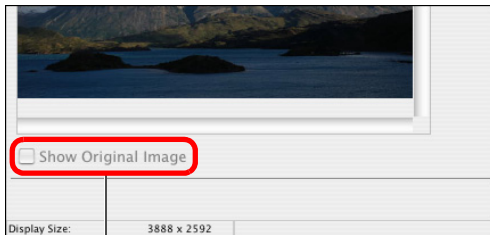


Checkmark to display the image before adjustments

5 Click the [OK] button.

→ The [Auto Adjustment] window closes.

6 Save as a separate image.

 - In the viewer window, click [Save].

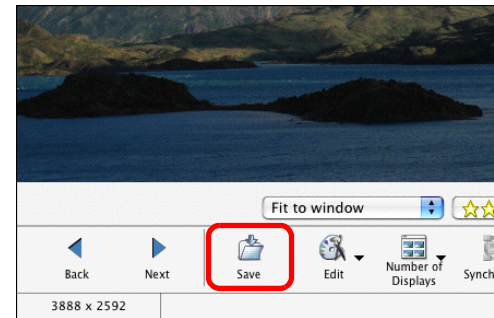


→ The save dialog box appears.

7 Enter a new name, specify the save location and then click the [Save] button.

Enter the new name

 Specify the save location

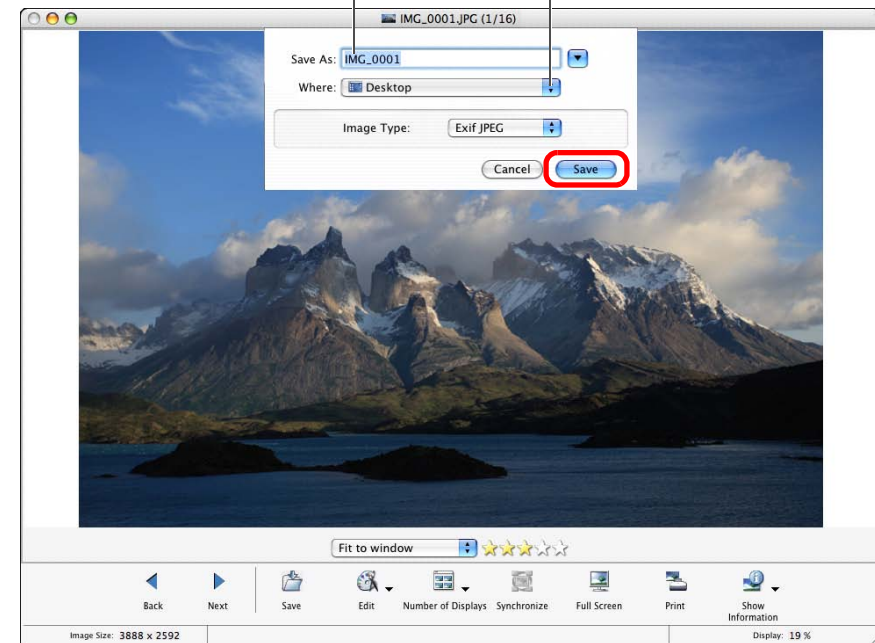

→ The edited image is saved as a separate image from the original image.

 


Adjusting Color and Brightness

You can adjust the brightness and color (saturation) of images.

- 1 Display the image to edit in the viewer window (p.18).
- 2 Click [Edit] and then select [Color/Brightness Adjustment] in the menu that appears (p.27).
→ The [Color/Brightness Adjustment] window appears.
- 3 Select the [Color Adjustment] tab sheet and adjust the image.

Color/Brightness Adjustment window

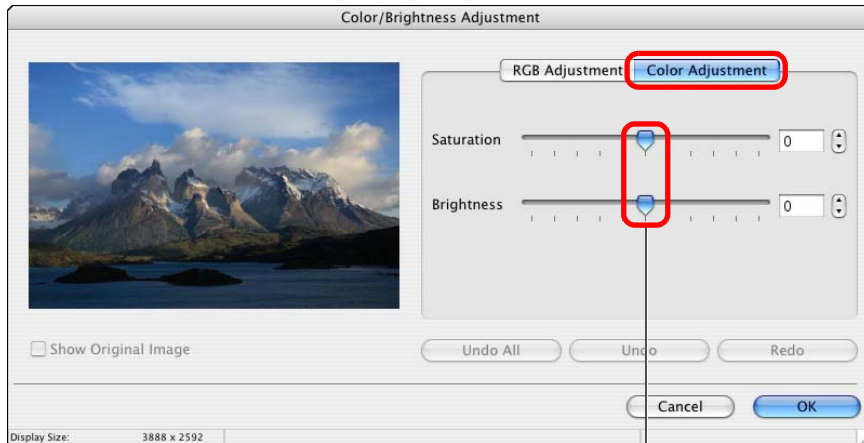

Drag to the left or right to adjust

- Move the slider to the right to make the [Saturation] of an image to appear more vivid and the [Brightness] appear brighter. Move the slider to the left to make the [Saturation] of an image weaker, and the [Brightness] of an image appears darker.

 
→ The image is adjusted.

- 4 Check the adjustments and then click the [OK] button.
- 5 Save the image as a separate image (p.28).

Trimming an Image

You can trim only the part of an image you need, or change the composition of an image where an image shot horizontally becomes vertical.


- 1 Display the image to edit in the viewer window (p.18).
- 2 Click [Edit] and then select [Trim Image] in the menu that appears (p.27).
→ The [Trim Image] window appears.
- 3 Drag the trimming range.

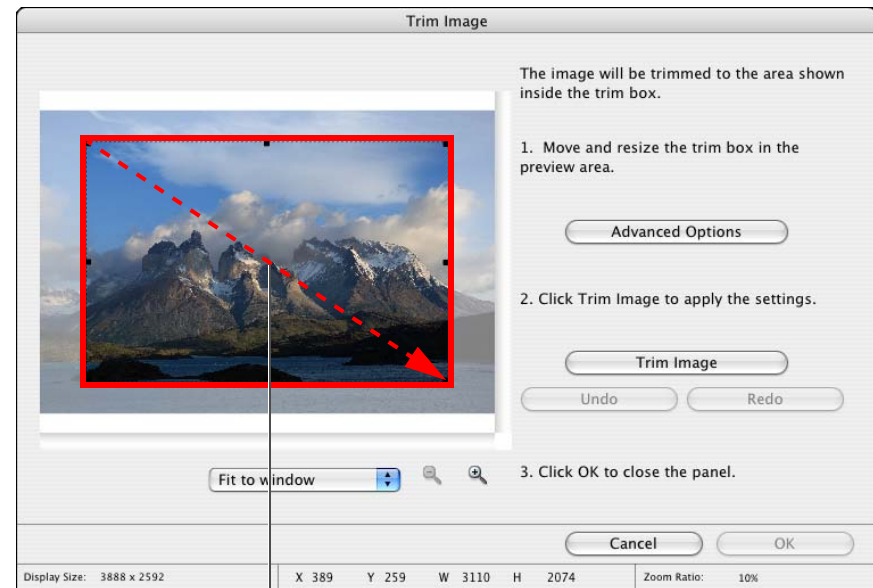

Drag

- The trimming range can be moved by dragging.
- You can change the trimming range by dragging the four corners and the four sides of the trimming range.

 4 Click the [Trim Image] button.

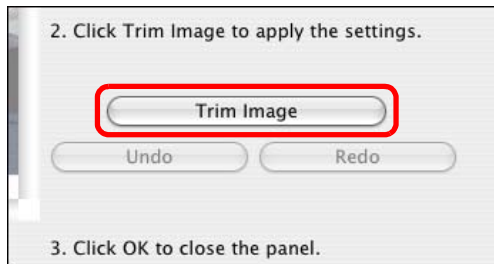

→ The image is trimmed.

5 Check the trimming and then click the [OK] button.

6 Save the image as a separate image (p.28).

Inserting Text into Images

 
You can insert the date and time you shot an image and text into an image as text.

1 Display the image to edit in the viewer window (p.18).

2 Click [Edit] and then select [Insert Text] in the menu that appears (p.27).

→ The [Insert Text] window appears.


3 Drag the range for inserting text. Insert Text window

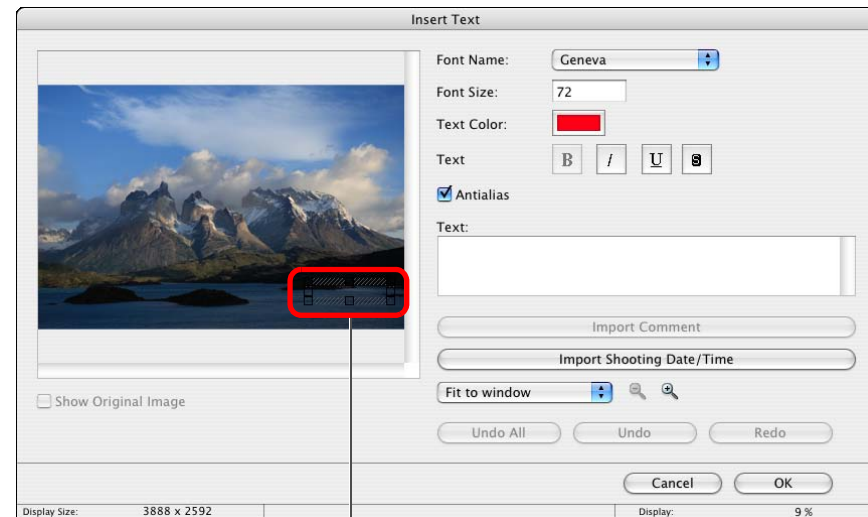

Drag

- The text insertion range can be moved by dragging.
- You can change the text insertion range by dragging the four corners and the four sides of the text insertion range.

 4 Using the keyboard, enter the text you want to insert.

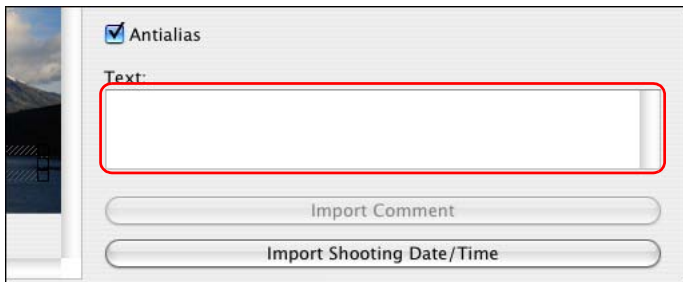

→ The text you enter appears in the window.

5 Check your entry and then click the [OK] button.

6 Save the image as a separate image (p.28).

Adjusting Sharpness

 
You can make the overall atmosphere of an image harder or softer.

1 Display the image to edit in the viewer window (p.18).

2 Click [Edit] and then select [Sharpness] in the menu that appears (p.27).

→ The [Sharpness] window appears.

3 Adjust the image. Sharpness window

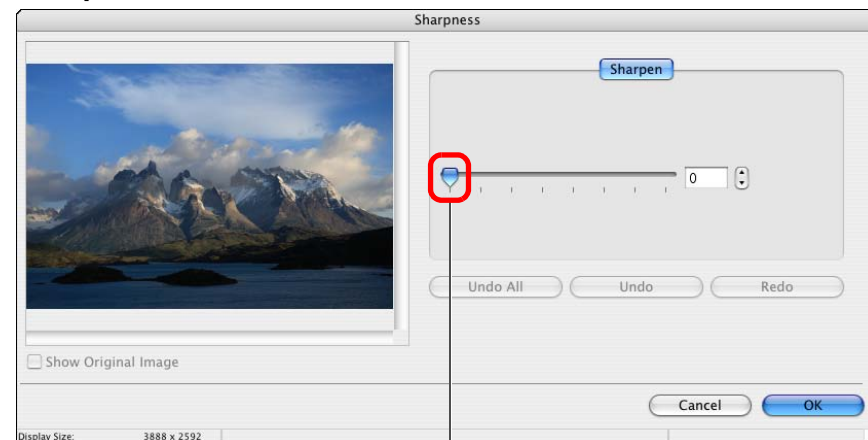

Drag right to adjust

- Move the slider to the right to make an image harder and to the left to make an image softer.

→ The image is adjusted.

4 Check the adjustments and then click the [OK] button.

5 Save the image as a separate image (p.28).

Correcting Red-Eye Automatically

 
You can automatically detect and correct red-eye that occurs when you photograph people using a flash.

1 Display the image to edit in the viewer window (p.18).

2 Click [Edit] and then select [Red Eye Correction] in the menu that appears (p.27).

→ The [Red Eye Correction] window appears.

3 Click the [Start] button.
Red Eye Correction window

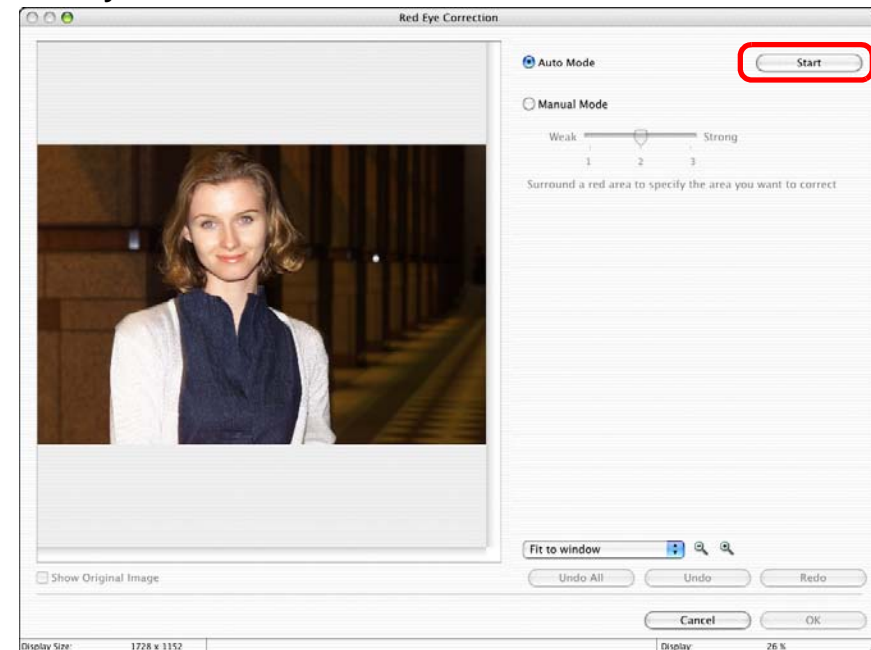

→ The image is corrected.

4 Check the corrections and then click the [OK] button.

5 Save the image as a separate image (p.28).

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

Contents
Lookup

 
Index



Correcting Red-Eye Manually


You can manually correct red-eye that cannot be corrected automatically.

- 1 Display the [Red Eye Correction] window (p.32).
- 2 Select [Manual Mode] and then enlarge the image.

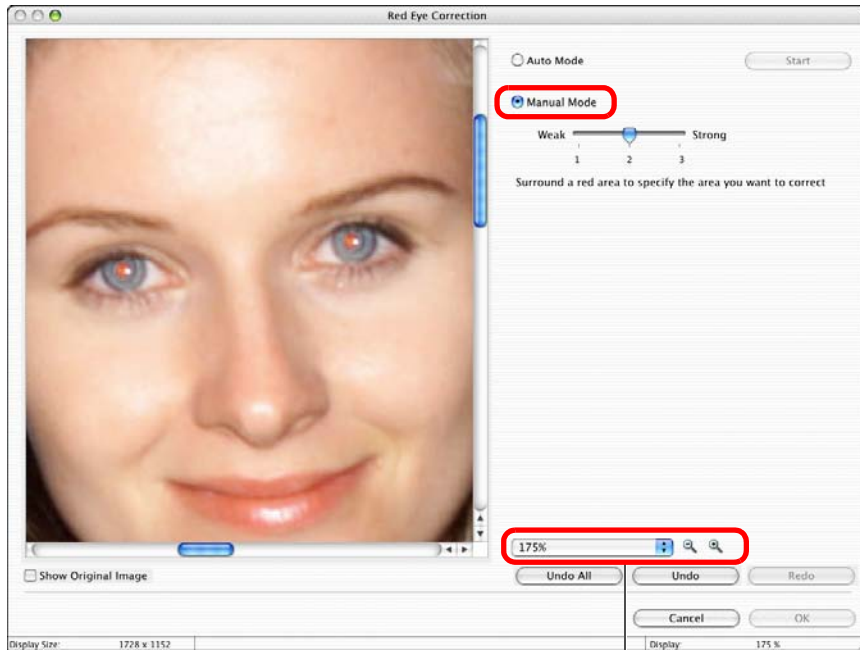


Enlarge image display

 - 3 Set the amount of correction.

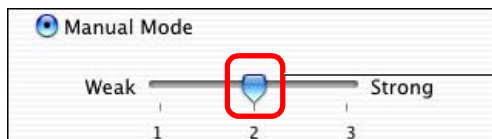

Drag to the left or right to adjust

 - 4 Drag and place a box around the place in the image you want to correct and then click [OK].

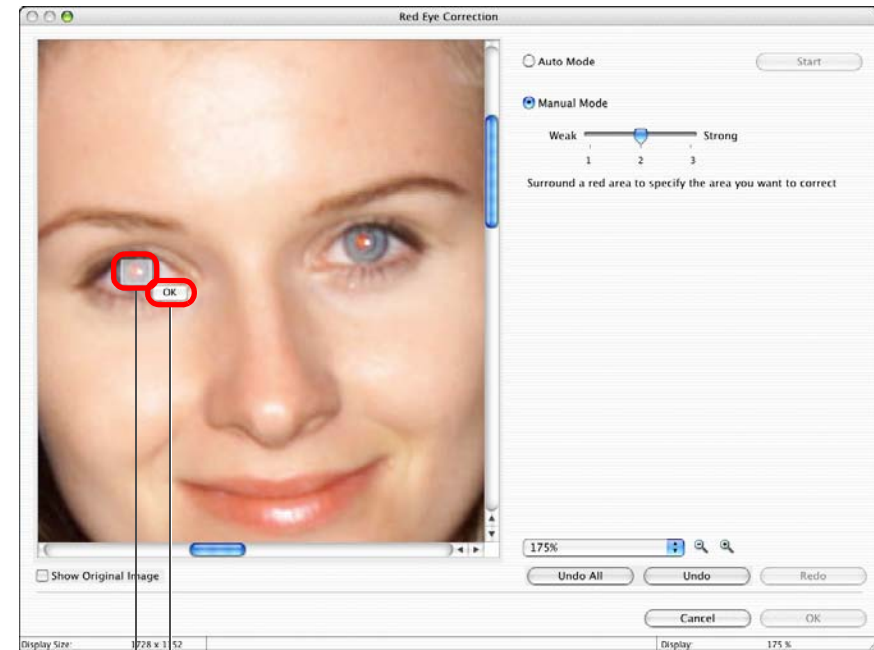

Click [OK]

Drag a box on the place to correct

→ The image is corrected.

- 5 Correct other places in the same way.
- 6 Check the correction and click the [OK] button.
- 7 Save as a separate image (p.28).

 


Editing Movies

You can edit the movies you have downloaded to your computer in a number of ways, including joining movies together and adding special effects such as titles and background music.


- ! When editing 1920 x 1080 MOV movies with a function other than “Cutting Movies” (p.38), a temporary file is created for editing and it may take some time before you can start editing.
- Once you have edited movies using these functions, you cannot play them back on the camera.
- You cannot edit MOV movies on a computer with a PowerPC CPU.

1 Select the movie.

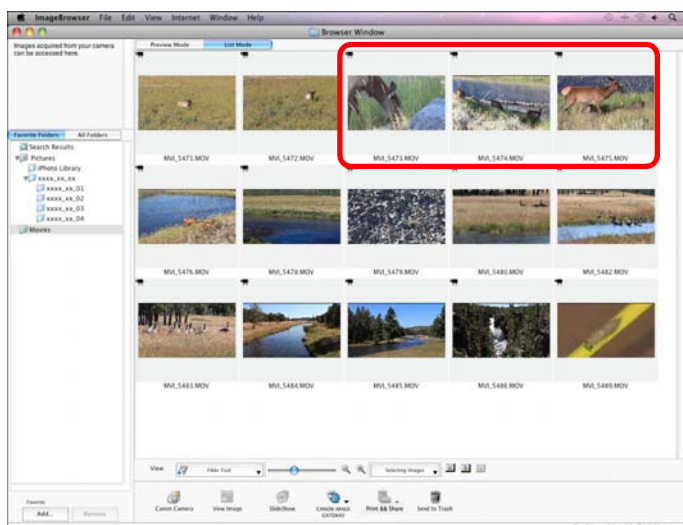

- ! There is a limit on the number of files when you are editing MOV movies. When you edit 1920 x 1080 MOV movies and save them in the same image type (format)/size, keep the number of files within 20 files. Similarly, for 1280 x 720 and 640 x 480 MOV movies, keep it around 25 files.

 2 Select the [Edit] menu ► [Movie Edit].

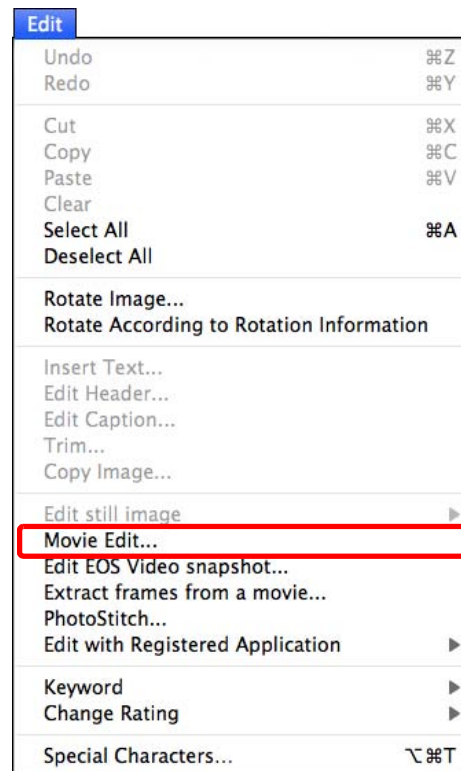

→ The movie editing window appears.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet


Reference

Contents Lookup

Index

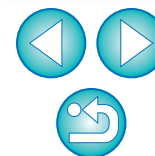

 
3 Click the tab to select an editing task, and then edit the movie.

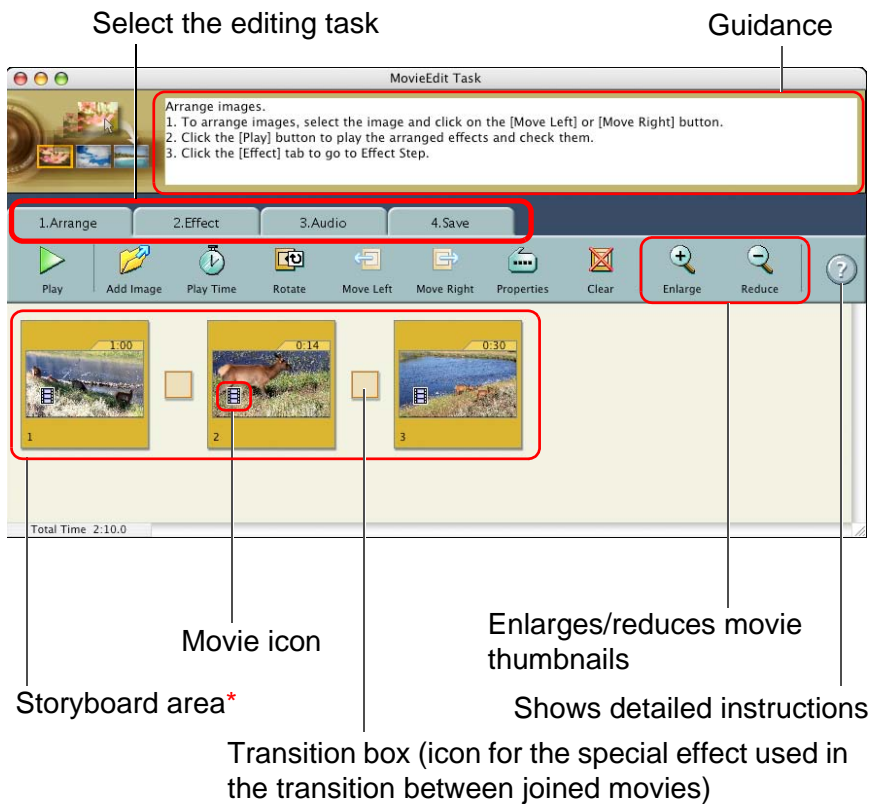

* Selected movies are shown as thumbnails. Movies are joined together sequentially starting from the leftmost movie.

• [Arrange] tab sheet functions

 Set the playback range for the movie (playback start and end)*

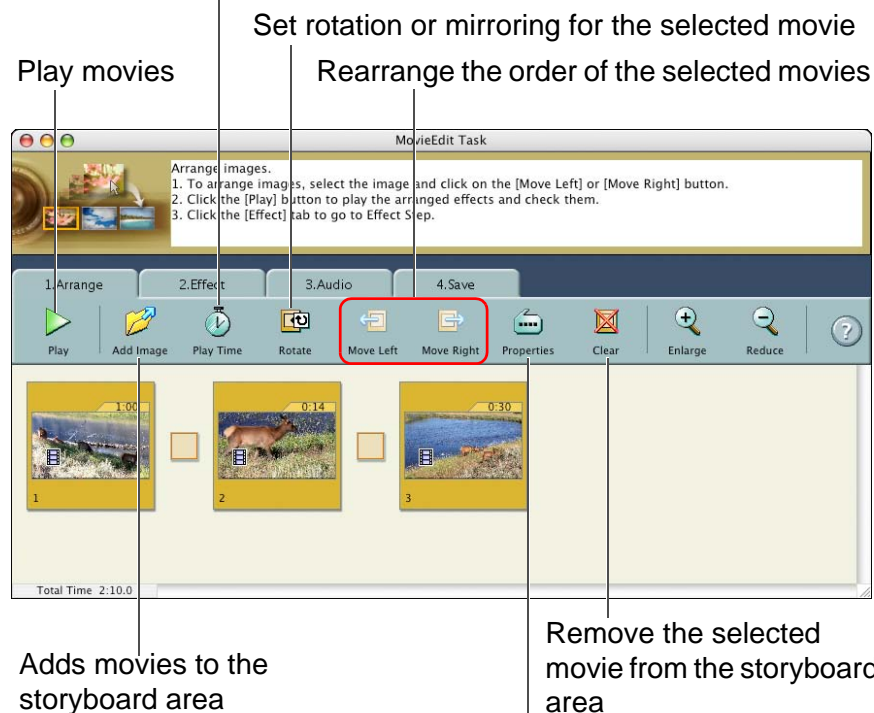

Show information for the selected movie

* When a still image is selected in the storyboard area, you can select the display period for the still image.



When you add to the storyboard area an image with recorded audio that has been shot with a EOS-1D series camera, the audio is not automatically attached. Add the audio file in the [Audio] tab sheet on the next page.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup


Index

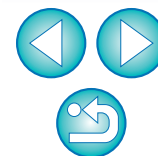

● [Effect] tab sheet functions

Add text to the selected movie

 Set the effect used in the transition between movies (transition box)*

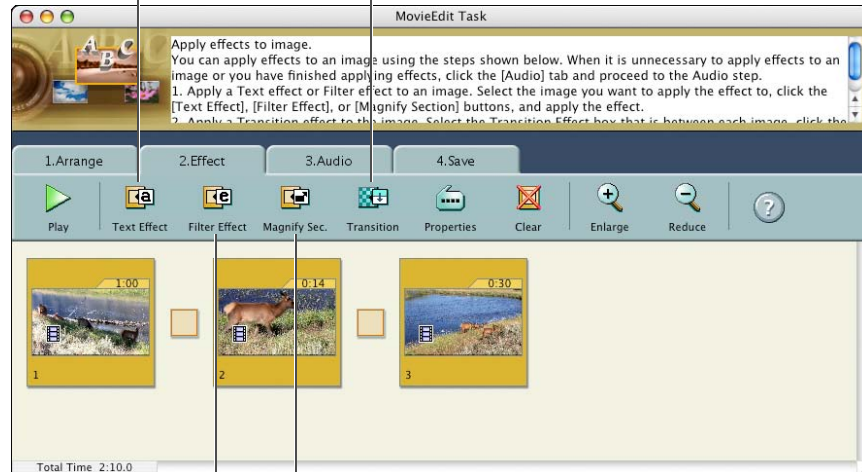


Enlarge part of the selected movie

Convert the selected movie to sepia tone or monochrome

* Select the transition box in the storyboard area and then click [Transition] to set the effect used.

● [Audio] tab sheet functions

 
Add an audio file to the selected movie*

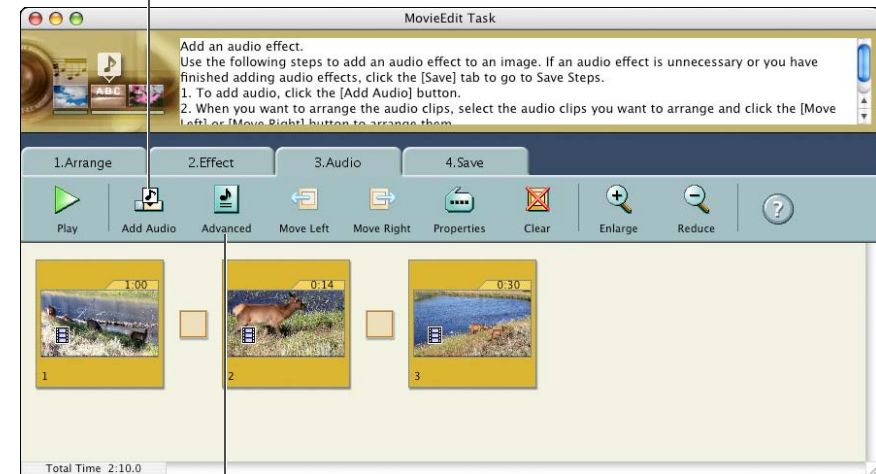

Adjust the audio volume for the selected movie and set "Fade-in" (gradually increasing volume) and "Fade-out" (gradually decreasing volume)

* You can add an MP3, AIFF or WAV audio file as background music (BGM) or as an effects tone. When you add audio to a movie in this window, a bar showing the duration of the audio file appears under the movie's thumbnail in the storyboard area.

 
4 Click the [Save] tab sheet.

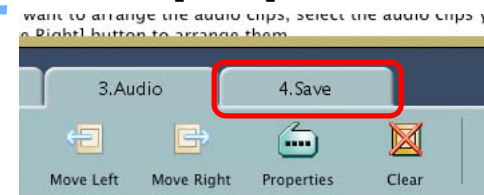

→ The [Save] tab sheet appears.



 5 Click [Save] and specify the required settings (destination, etc.) in the window that appears. Then click [Save].

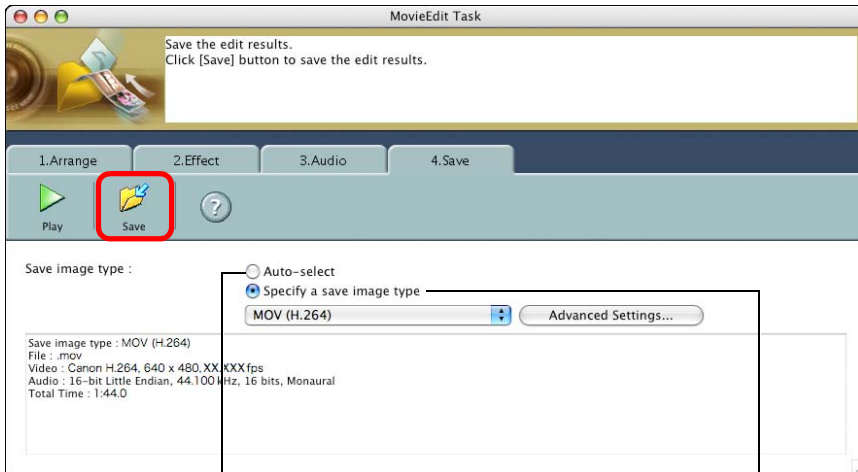

Set the format of the saved movie

Automatically set the optimal size and frame rate for saved movies

- When an image type is selected in the [Specify a save image type] list box, clicking the [Advanced Settings] button allows you to specify the [Image Size], [Frame per Second]* and [Quality] (sound quality) settings. The [Quality] (sound quality) sampling frequency for edited MOV movies is fixed at 48 kHz.

* Frame rate : number of frames recorded per second

→ The edited movie is saved.

6 Select the [MovieEdit Task] menu ► [Quit MovieEdit Task].



! If you convert the frame rate of a movie after editing, some scenes may not playback smoothly.

- When [MOV (H.264)] is selected in the [Specify a save image type] list box in the window in step 5, the movie durations that can be saved are as shown below.

Image size	Movie durations that can be saved	
	23.976 fps / 25 fps / 29.97 fps*	50 fps / 59.94 fps*
1920 × 1080	Under 10 min.	—
1280 × 720	Under 20 min.	Under 10 min.
640 × 480	Under 30 min.	Under 20 min.
320 × 240	Under 60 min.	—

If you attempt to save a movie that is longer than the times shown above, a message appears. When this happens, shorten the movie or reduce the image size.

* The frame rates 23.976 fps, 29.97 fps and 59.94 fps are respectively displayed as 24 fps, 30 fps and 60 fps in the camera menu.

- Saving movies may take some time. Saving movies takes a particularly long time when [MOV (H.264)] is selected in the [Specify a save image type] list box.

E.g.) Saving a 1-minute movie with an image size of 1920 × 1080 takes about 7 minutes depending on the system requirements (p.76).

Time taken to save varies largely with factors including computer performance and image size, and may take an even longer time.

 


Cutting Movies

You can cut any favorite scene from a movie you have shot.


1 Double-click the movie you want to play.

Double-click

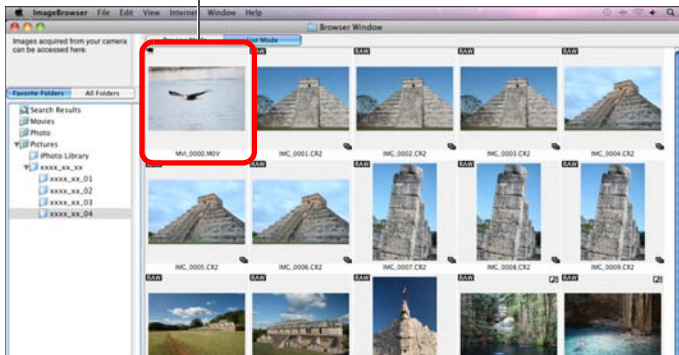


→ The viewer window appears.

 2 Click the [Cut Movie] button.

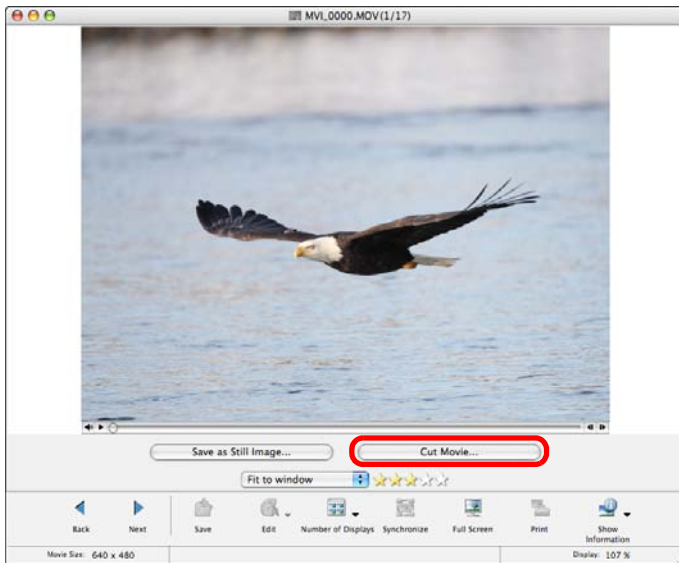

→ The [Cut Movie] window appears.

 3 Click the [▶] button. Cut Movie window

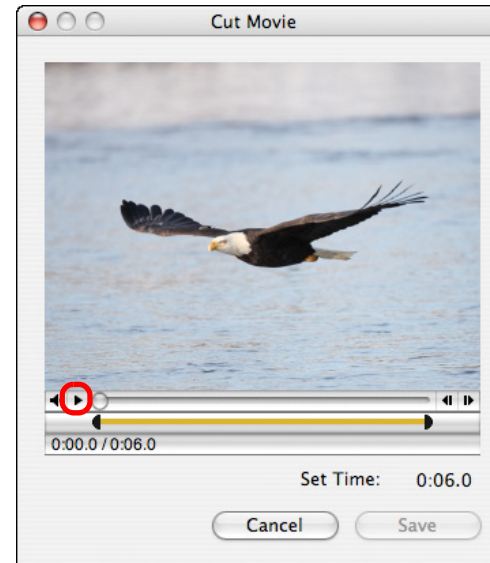


→ The movie begins to play.

4 Drag [■] at the position you want to set as the start point, and drag [■] at the position you want to set as the end point.

→ The movie is cut.




 5 Click the [Save] button.

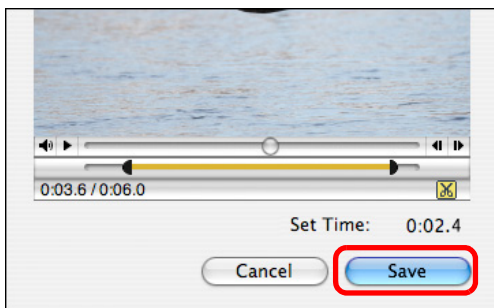

→ The save dialog box appears.

 6 Specify the file name and save destination and then click the [Save] button.

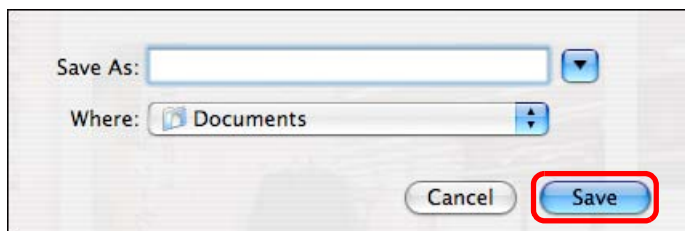

→ The cut movie is saved as a separate movie from the original movie.

Using the Video Snapshot Album Window

You can both play and edit Video Snapshot Albums that were shot on an EOS DIGITAL camera and downloaded to your computer. Edition functions include changing the order or deleting Video Snapshots and adding background music to Video Snapshot Albums.

 
This function cannot be used to edit movies other than Video Snapshot Albums.

Playing Video Snapshot Albums

1 Select an image (Video Snapshot Album) in the main window.

- Images with [📺] on the thumbnail are EOS Video Snapshot Albums.

2 Select the [Edit] menu ► [Edit EOS Video snapshot].

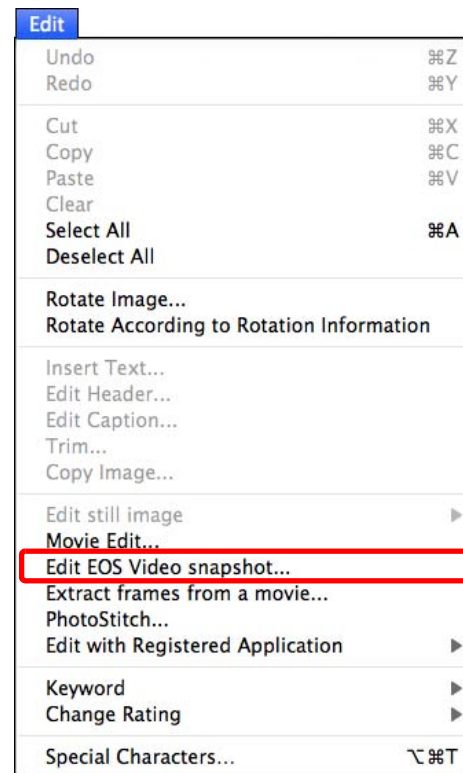

→ The Video Snapshot Album window appears.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

Contents Lookup

Index

 


3 Click the [⏮] button.

Opens another Video Snapshot

Displays detailed instructions

Displays Video Snapshot selected in Thumbnail area

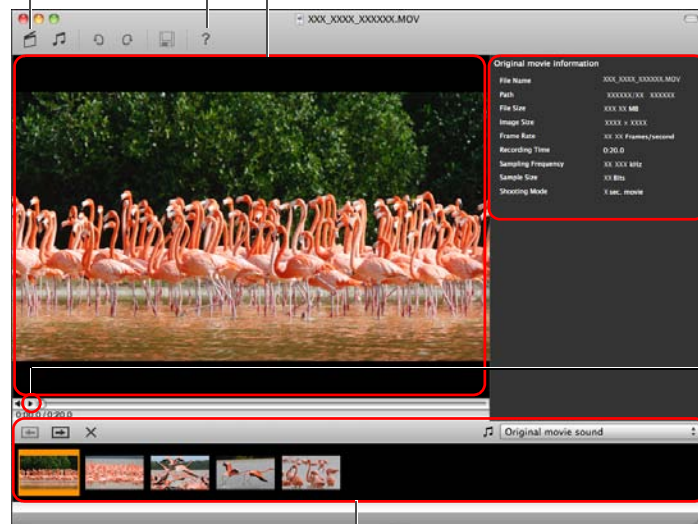

Displays Video Snapshot information

Adjusts playback volume

 
Thumbnail area

→ A Video Snapshot Album plays.

Editing Video Snapshot Albums


Changing the Order of Video Snapshots

1 Select a Video Snapshot in the Thumbnail area.

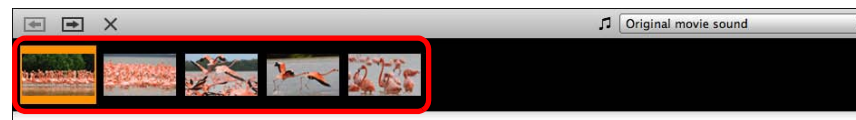

2 Click the [⬅] or [➡] button.

 - Clicking the [⬅] button switches order with the left Video Snapshot, clicking the [➡] button switches with the right Video Snapshot.

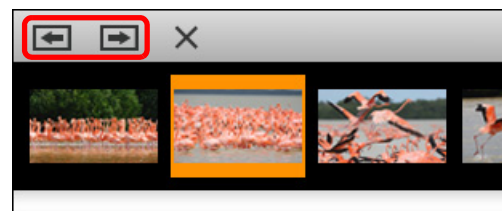

- You can delete a Video Snapshot by selecting a Video Snapshot and clicking the [X] button.
- You can undo an edit by clicking the [↶] button on the top left of the window, and redo it by clicking the [↷] button.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

 
Contents Lookup

Index




Adding Background Music to Video Snapshot Albums

- 1 Select [Choose music file] in the [🎵] list box in the Thumbnail area.

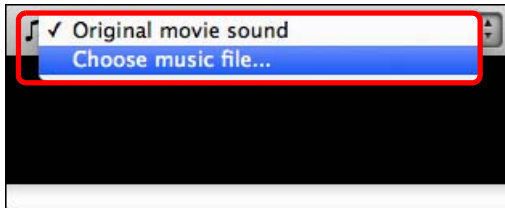

- You can also display a dialog box for opening a music file by clicking the [🎵] button on the top left of the Video Snapshot Album window.
- A dialog box appears for opening a music file.
(When you display the dialog box for opening a music file, the [EOS Sample Music] files open.)

 - 2 Select a music file and click the [Open] button.
→ Music is added and the music file information is displayed.

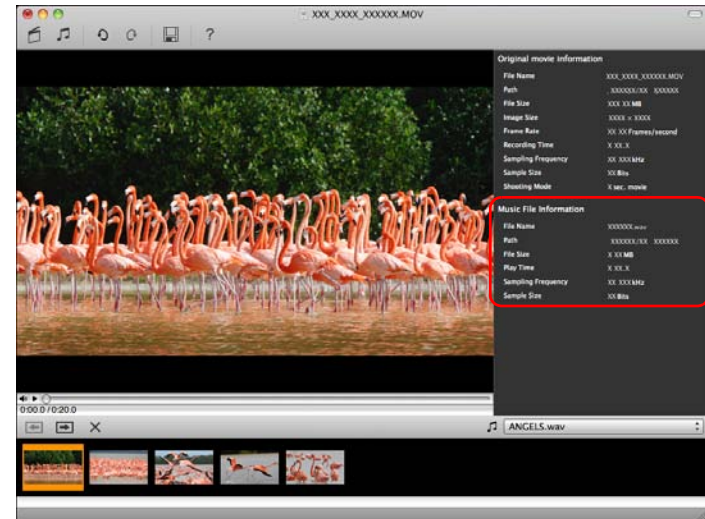

- When [Original movie sound] is selected in the [🎵] list box in step 1, music file information is not displayed.



Video Snapshot Albums that have been edited other than with this function cannot be re-edited.

 


Video Snapshot Albums edited with this function can be played on EOS REBEL T3i/600D.



Saving Edited Video Snapshot Albums

- 1 Click the [] button on the top left of the window.

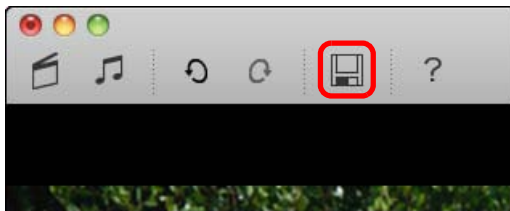


→ The [Save As] window appears.

- 2 Specify a save destination, enter a filename, and click the [Save] button.

Exiting the Video Snapshot Album Window

 - 1 Select the [EOS Video Snapshot Task] menu ► [Quit EOS Video Snapshot Task].

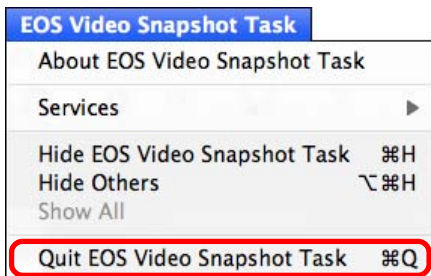

→ The Video Snapshot Album window exits.


Utilizing Your Images

You can view your images as a slide show, send them in an e-mail or use them as wallpaper or screen savers for your computer.

Viewing Images as a Slide Show

You can display selected images in full screen and switch between them as a slide show.

 - 1 Select images.
- 2 Select the [View] menu ► [Slide Show Options].

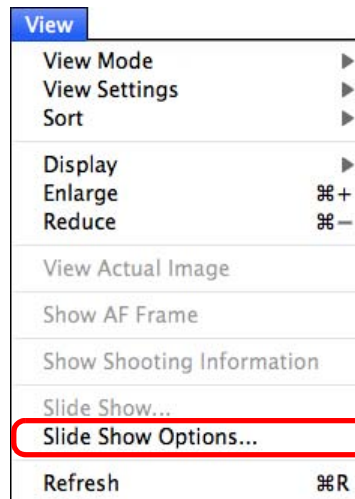

→ The [Slide Show Options] window appears.

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

 
Contents
Lookup

Index




3 Set the play method and transition effect for the slide show and then click the [OK] button.

Slide Show Options window

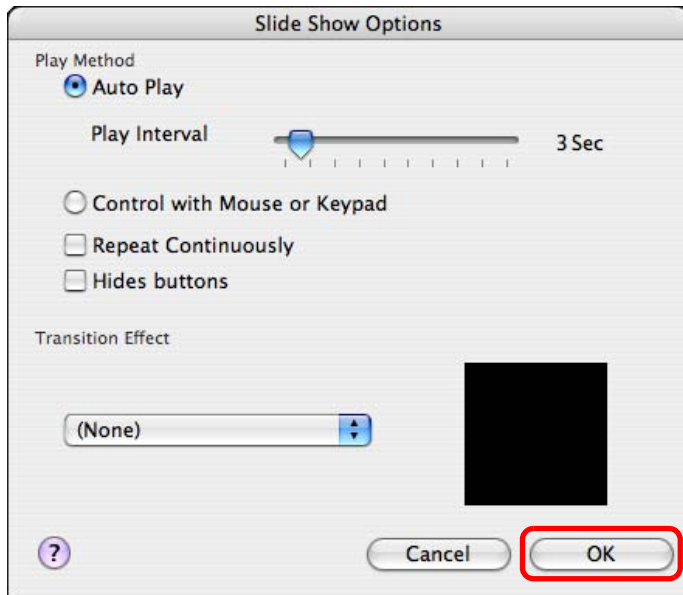


→ The [Slide Show Options] window closes.

 4 Click [SlideShow].

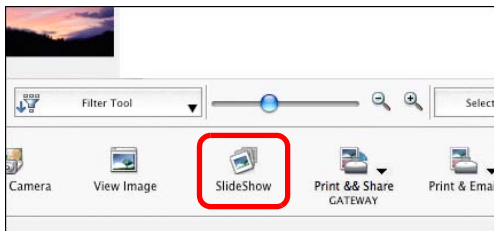

→ The Slide Show window appears and the slide show begins.

 Slide Show window

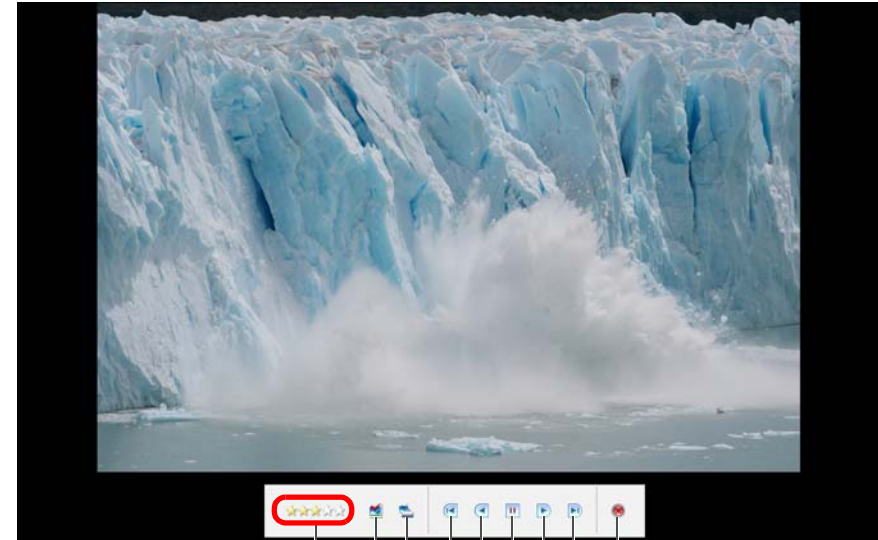

Rating setting —
 Selects the image*1 —
 Prints the image*2 —
 Switches to the first image —
 Switches to the previous image —
 Switches to the next image —
 Pauses the slide show —
 Ends the slide show —
 Switches to the last image —

*1 The image is selected. When the slide show ends and returns to the main window, the image is displayed as being selected.

*2 The image is selected for printing. When the slide show ends and returns to the main window, the print dialog box is displayed.

→ When all the images have been displayed, the Slide Show window closes and returns to the main window.

 
● To end the slide show half-way through, click [].



Sending an Image by E-Mail

You can attach a selected image to an e-mail and send it.
The attached image to be sent is a copy of the original image and therefore the original image remains unaffected on your computer.


- 1 Select an image.
- 2 Click [Print & Share] and then select [Create Image for Email] in the menu that appears.

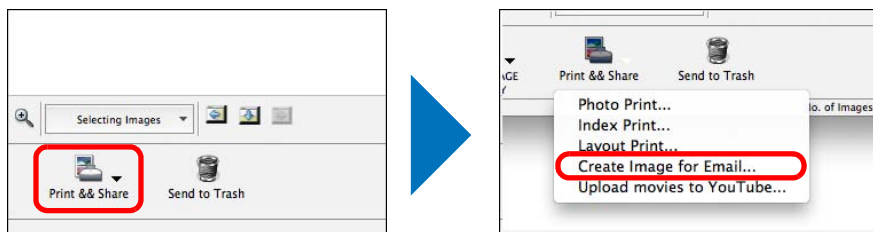

→ The [Create Image for Email] window appears.

- 3 Select [Using the recommended settings.] and then click the [Finish] button.

 Create Image for Email window

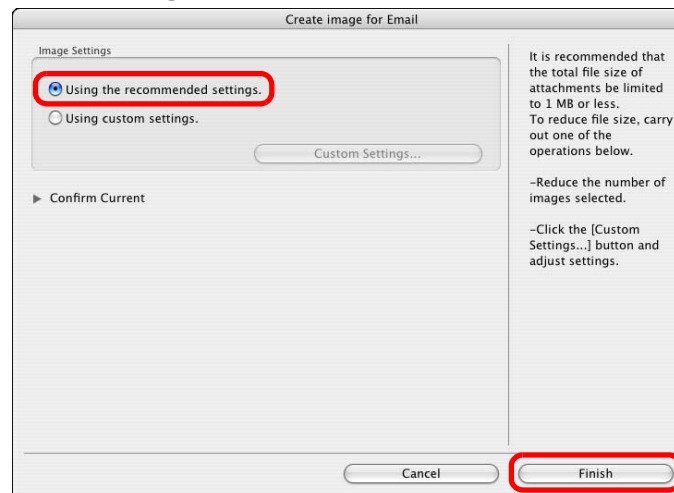


- The image is displayed in the main window and the e-mail software starts up.
- Attach to the e-mail [Email Images] in the folder area and then send the e-mail.

Creating Wallpaper from an Image

You can make a selected image wallpaper for your computer. The JPEG image for the wallpaper (extension “.JPG”) is created using a copy of an image and therefore the original image remains unaffected.

1 Select an image.

 
2 Select the [File] menu ► [Export Image].

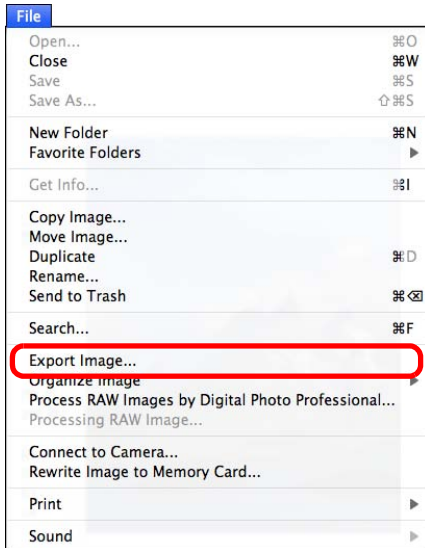

→ The [Write a still image] window appears.

3 Select [Export an Image as Wallpaper] and then click the [Next] button.

 
Write a still image window

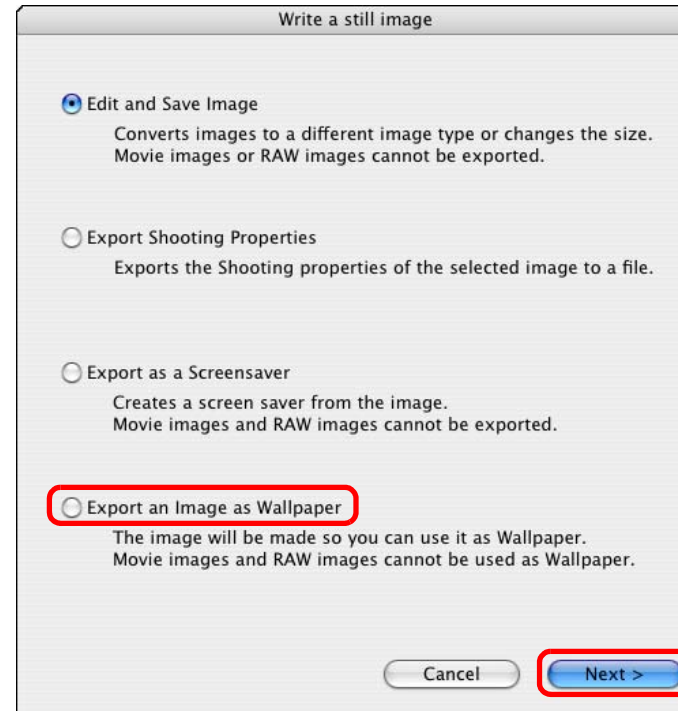

→ The [Set Image as Wallpaper] window appears.

4 From the list box, select the wallpaper display method and then click the [Finish] button.

 
Set Image as Wallpaper window

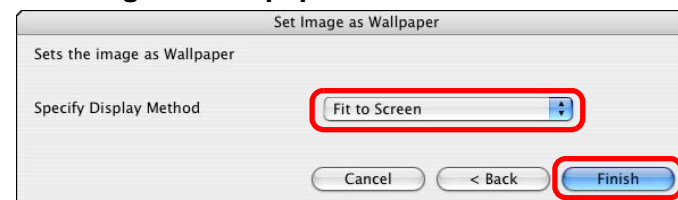

→ The image you selected for your wallpaper is applied as wallpaper.



 
? To revert to the original wallpaper

- 1 On the desktop, launch [System Preferences] from the Dock and then click [Desktop & Screen Saver].
- 2 Select the [Desktop] tab sheet.
- 3 Select the file for the wallpaper and then click [] to close the dialog box.

Creating a Screen Saver from an Image

You can make a selected image a screen saver for your computer. The data for the screen saver (extension “.SLIDESAVER”) is created using a copy of an image and therefore the original image remains unaffected.

- 1 Select an image.
- 2 Select the [File] menu ► [Export Image].

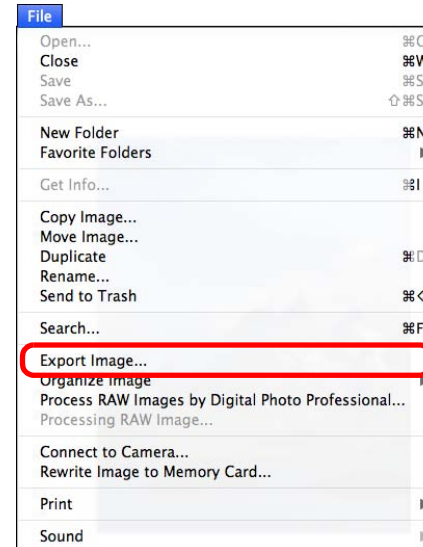


→ The [Write a still image] window appears.

3 Select [Export as a Screensaver] and then click the [Next] button.

→ The [Export as a Screensaver] window appears.

4 Using the keyboard, enter a name and then click the [Finish] button.

 
Export as a Screensaver window

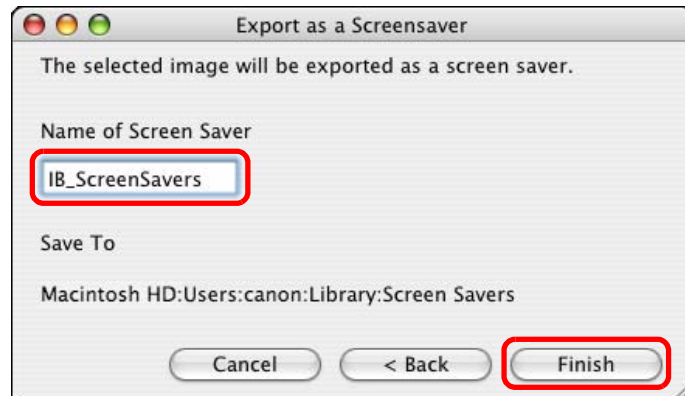

● The screen saver data is saved in the [Screen Savers] folder.

5 Specify the saved screen saver on your computer.

 ● On the desktop, launch [System Preferences] from the Dock and then click [Desktop & Screen Saver] ► [Screen Saver] tab sheet to display the [Screen Saver] tab sheet.

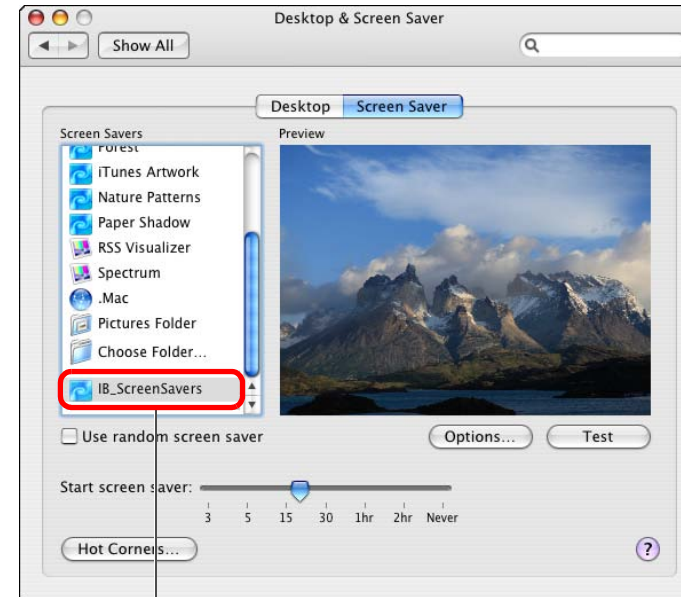

Select the saved screen saver data

6 Close the [Desktop & Screen Saver] window.

● Click [] on the top left of the dialog box.

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

Contents
Lookup

Index




Printing Multiple Images on One Sheet of Paper (Index Printing)

You can arrange multiple images in index format and print them on one sheet of paper.

1 Select the images.

 
2 Click the [Print & Share] button and then select [Index Print] from the menu that appears.

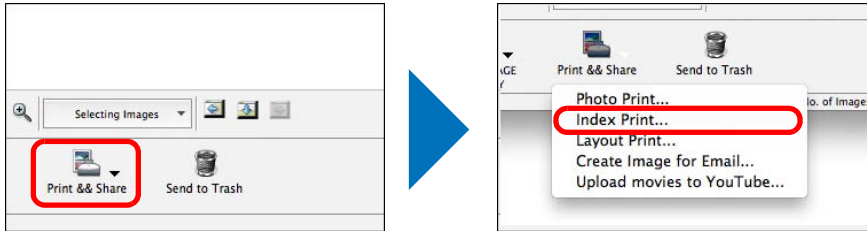

→ The [Index Print] window appears.

3 Specify settings such as the paper type and the number of prints, and then click the [Print] button.

 Index Print window

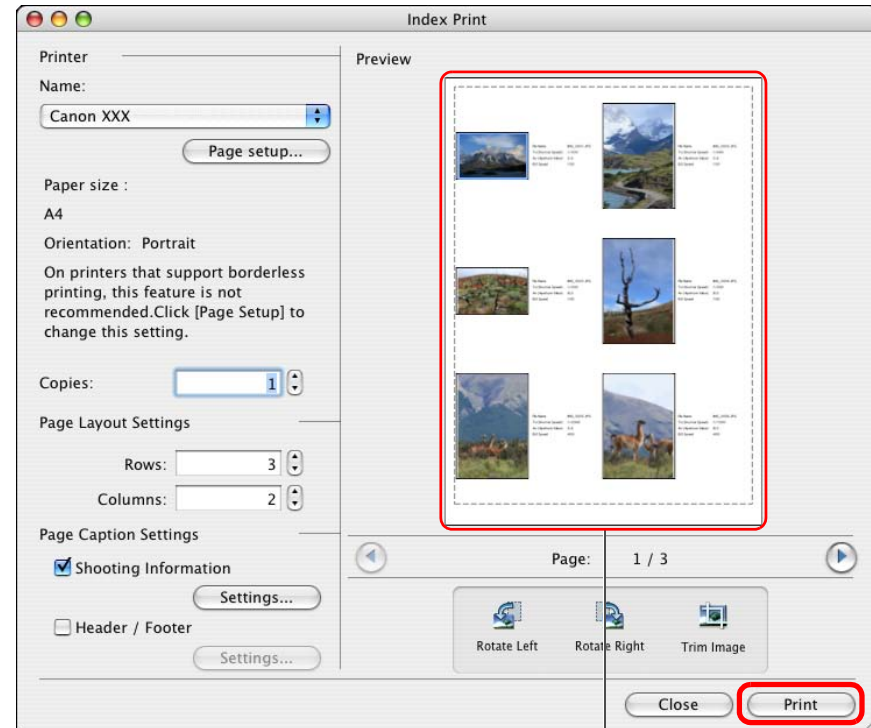

Print preview

→ Printing begins.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

Contents Lookup

Index

 


Arranging Images Freely and Printing (Layout Printing)

You can lay out images freely and then print them.

1 Select the images.


2 Click the [Print & Share] button and then select [Layout Print] from the menu that appears.

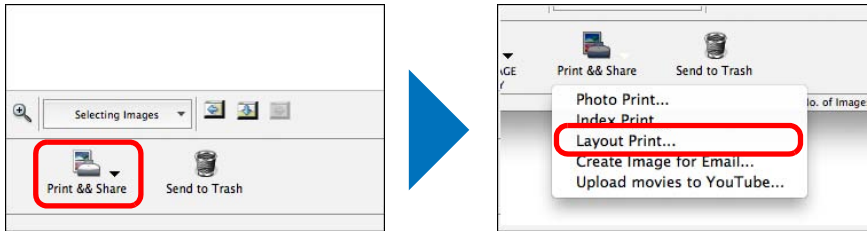

→ The [Layout Print] window appears.

3 Lay out your images by dragging them and then click the [Print] button.

 Layout Print window

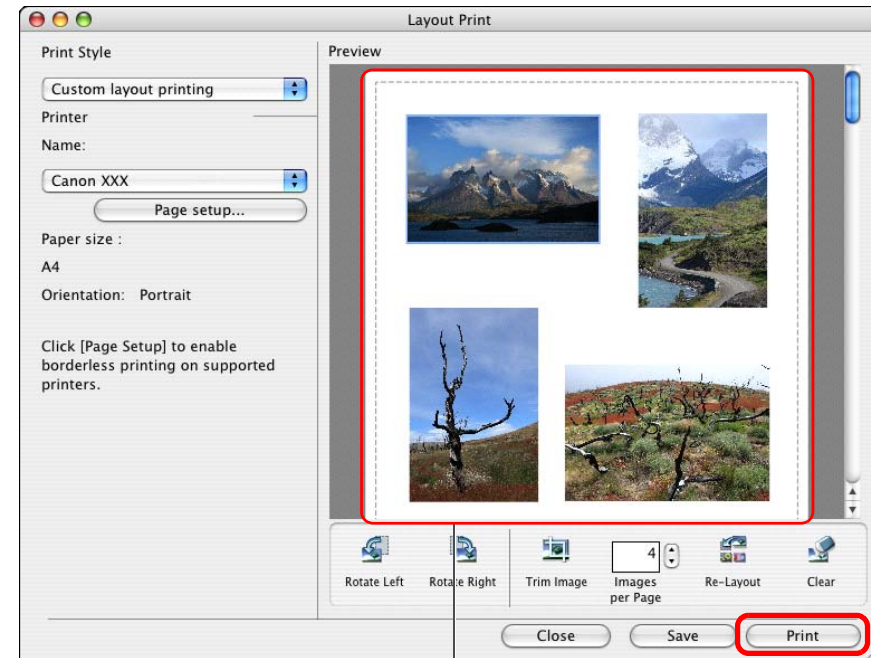

Print preview

→ Printing begins.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

Contents Lookup

Index



3 High-Level Functions



Comparing Multiple Images.....	51
Viewing Shooting Information for an Image.....	52
Changing the Size and Type of an Image and Saving	52
Exporting Shooting Information	53
Extracting Still Images from a Movie	54
Organizing Images Using High-Level Functions	56
Setting Keywords in Images	56
Entering Comments into Images	56
Saving Multiple Images with New File Names.....	57
Classifying Images by Shot Date.....	57
Searching for Images	59
Performing Advanced Editing	60
Adjusting the Color of an Image in RGB.....	60
Adjusting the Brightness Level	61
Adjusting the Tone Curve	61
Transferring Images to Other Image Editing Software...	62
Merging Images to Create Panorama Images.....	63
Adding Sound to Images/Playing Back	64
Adding Sound to Images	64
Playing Back Sound	64

Introduction

Table of Contents

1 Basic Operation

2 Advanced Operation

3 High-Level Functions

4 Preferences

Using the Internet

Reference


Contents Lookup

 
Index



Comparing Multiple Images


To compare multiple images, you can split the viewer window into two, three or four and display multiple images at the same time. You can also align the display position of enlarged images and compare.

- 1 In the main window, select the images you want to compare (p.10).
- 2 Click [] (View Image) (p.78).
→ The viewer window appears.
- 3 Click [Number of Displays] and select the number of images you want to display at the same time.

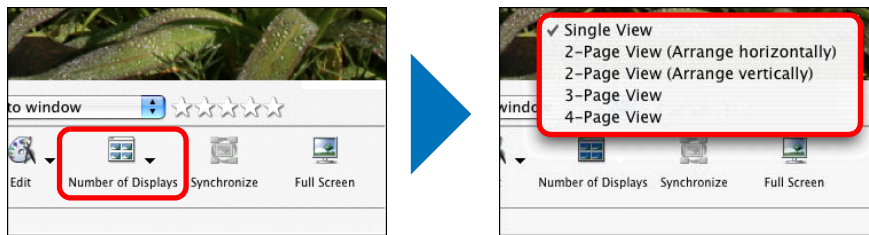


→ The viewer window is split and the multiple images are displayed at the same time.

 
Example of display when [4-Page View] is selected

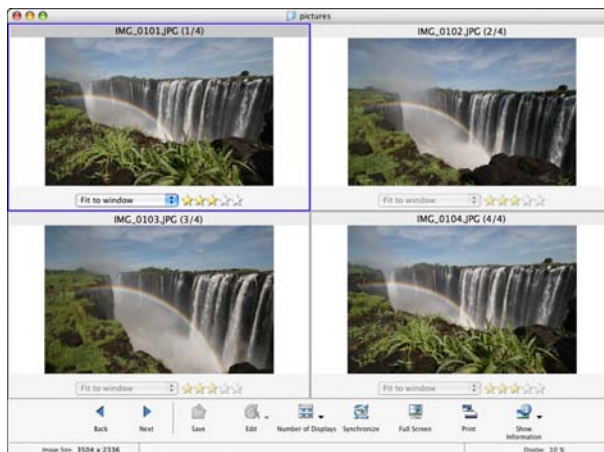

 - 4 Click [Synchronize] and then enlarge the image.

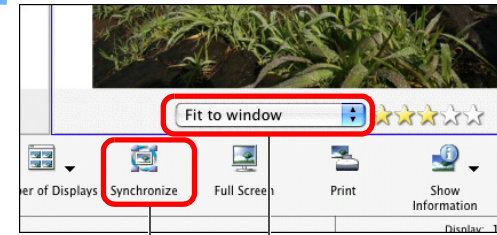

Click Select the display magnification

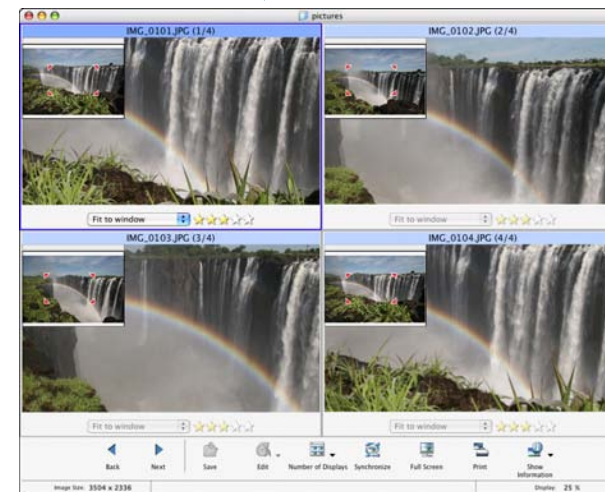 

- The synchronize display appears and all the images are displayed at the same display magnification and in the same position.
- The navigator window that displays the enlargement display position appears and you can check and move the enlargement display position (p.19).
- Click [Synchronize] again to cancel the synchronize display. You can now change the display magnification and move the enlargement display position for each image.
- To return to full view, select [Fit to window] from the list box under each image.
- To cancel the split display, click [Number of Displays] at the bottom of the window and then select [Single View] from the menu that appears.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference



Contents Lookup

Index

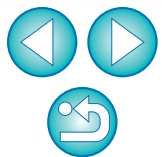

Viewing Shooting Information for an Image

  - 1 Display List Mode (p.78).
- 2 Select the image for which you want to view the information.
- 3 Select the [File] menu ► [Get Info].
→ The [File Information] window appears.
- 4 Click the [Advanced View] button.

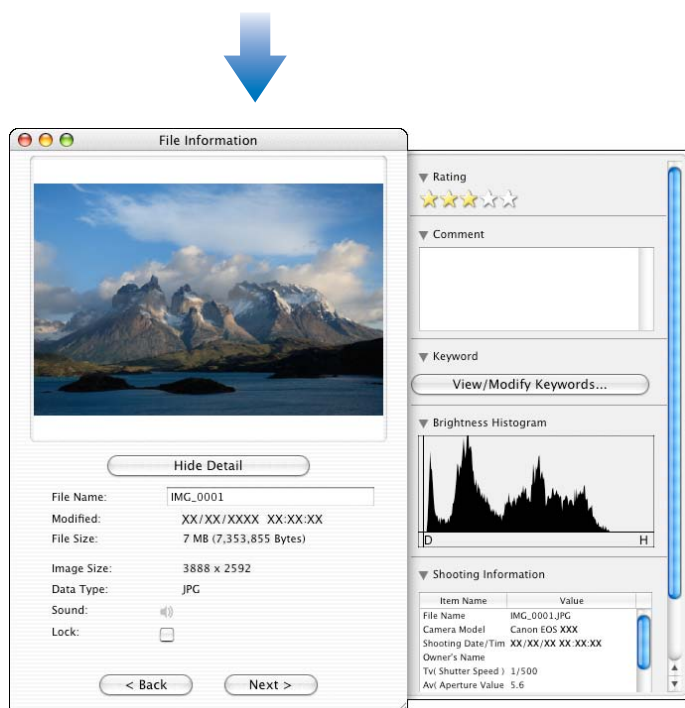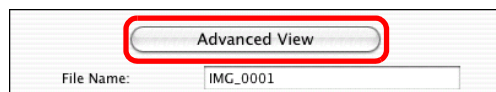


In Preview Mode, the same information as the [File Information] window is displayed on the information display area (p.77).

Changing the Size and Type of an Image and Saving

You can change the size of an image or convert it to a TIFF image (extension “.TIFF”) or a PICT image (extension “.PCT”) and save it. Because the image is saved as a separate image, the original image remains unaffected.

 - 1 Select an image.
- 2 Select the [File] menu ► [Export Image].
→ The [Write a still image] window appears.
- 3 Select [Edit and Save Image] and then click the [Next] button.

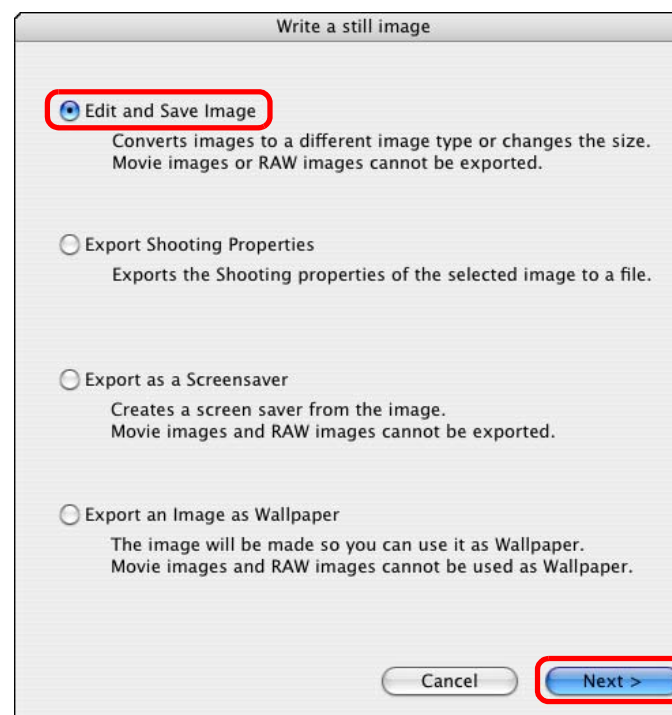

→ The [Edit and Save Image] window appears.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

 
Reference

Contents Lookup

Index



4 Specify the image size, type, file name and save destination, and then click the [Finish] button.

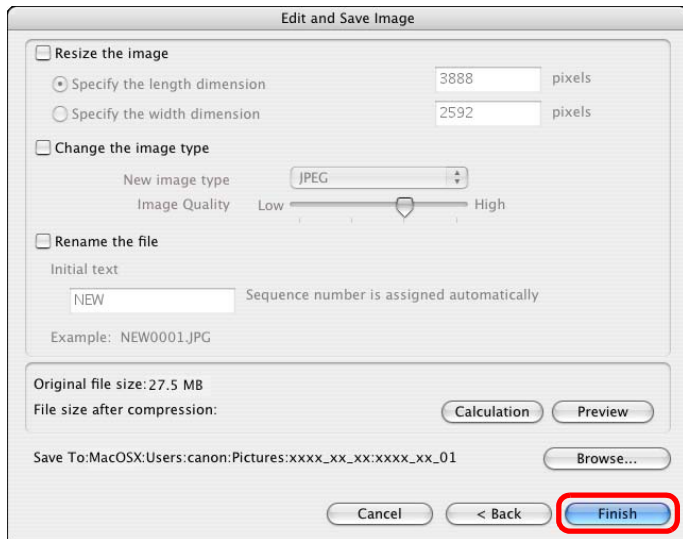


→ The image is saved as an image separate from the original image.

Exporting Shooting Information

You can export as a text file the shooting information recorded to the image.

 - 1 Select an image.
- 2 Select the [File] menu ► [Export Image].
→ The [Write a still image] window appears.
- 3 Select [Export Shooting Properties] and then click the [Next] button.
→ The [Export Shooting Properties] window appears.
- 4 Specify the export shooting information, the file name, and the save destination, and then click the [Finish] button.

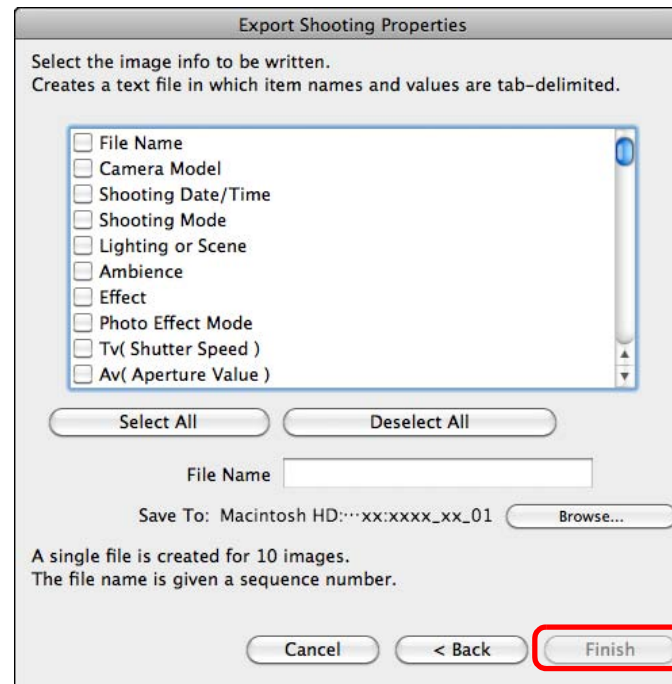

→ The shooting information is saved as a text file (extension ".TXT").

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup

Index

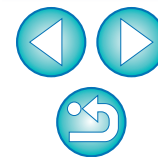


Extracting Still Images from a Movie


You can extract still images from a movie and save them as image files.

- ! When extracting still images from 1920 x 1080 MOV movies, a temporary file is created for editing and it may take some time before you can extract still images.

 1 Select the movie.

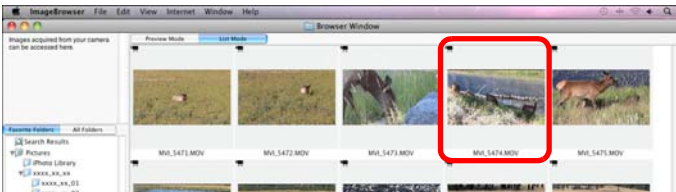


 2 Select the [Edit] menu ► [Extract frames from a movie].

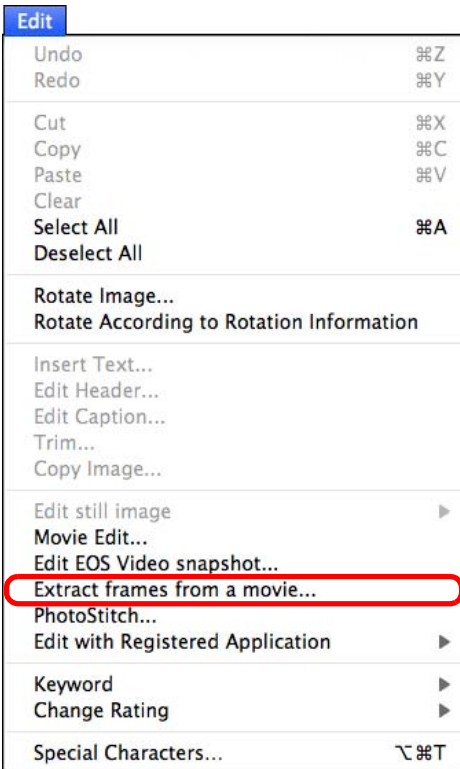

→ The [Settings] tab sheet for [MovieFrame Task] appears.

 3 Set the extraction method and click the [Preview] tab sheet.

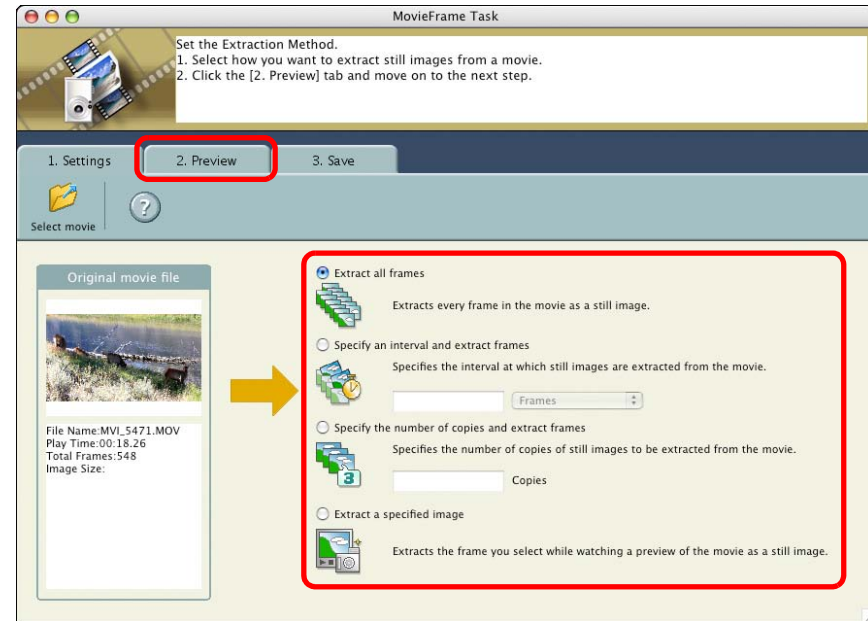

- **[Extract all frames]**
This option extracts all the frames in a movie as still images.
 - **[Specify an interval and extract frames]**
This option extracts still images from a movie at intervals of a set number of frames or seconds.
 - **[Specify the number of copies and extract frames]**
This option extracts a specified number of still images from the frames of a movie. The interval at which each of the specified number of images is extracted is calculated evenly across the movie's number of frames.
 - **[Extract a specified image]**
This option extracts a still image of a scene of your choice during movie playback.
- The [Preview] tab sheet appears.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup

Index

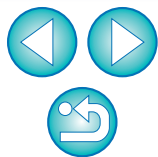


4 Check the extracted images and click the [Save] tab sheet.

- When [Extract a specified image] is selected in step 3, you can play the movie on the left of the window and extract an image by clicking [→] when you reach a scene you like.

Rotate all the images

Add/remove all the check marks

 Resize the thumbnails

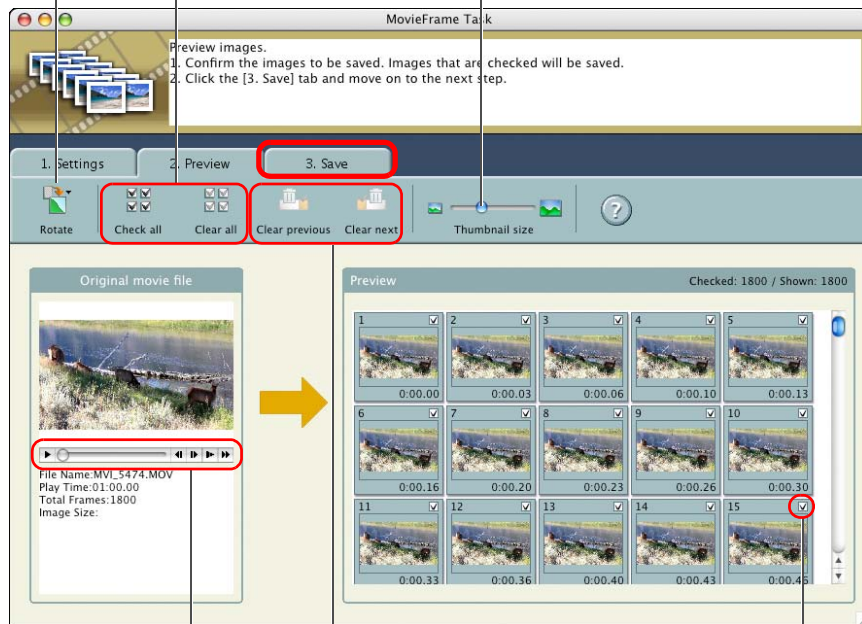


Remove the check mark from the images before and after the selected image

Playback/pause, frame back, frame forward, half-speed playback, double-speed playback

Save the images with check marks

→ The [Save] tab sheet appears.

 5 Click [Save] and specify the required settings (destination, etc.) in the window that appears. Then click [Choose].

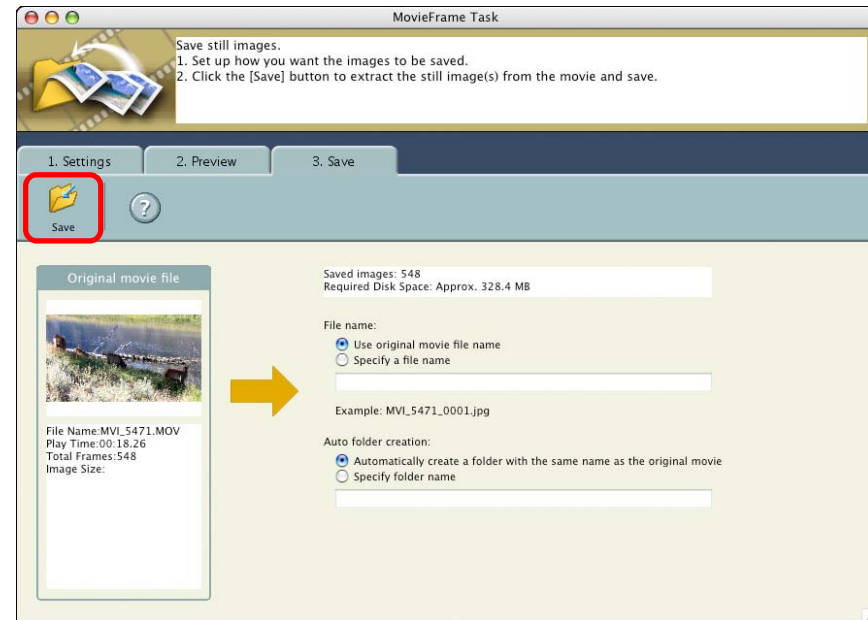

→ Still image extraction begins.

6 Select the [MovieFrame Task] menu ► [Quit MovieFrame Task].

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup

Index

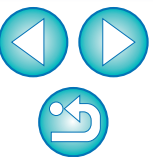


Organizing Images Using High-Level Functions

You can organize images using high-level functions such as setting keywords and entering comments, renaming multiple files in a single operation and classifying images by shot year/month/date, all of which are useful when organizing your images.

Setting Keywords in Images

You can set keywords to identify images. The set keywords are also useful when searching for images (p.59).

 - 1 Select an image.
- 2 Select the [Edit] menu ► [Keyword] ► [Settings].
→ The [Keywords Setting] window appears.
- 3 Select the keyword(s) and then click the [OK] button.

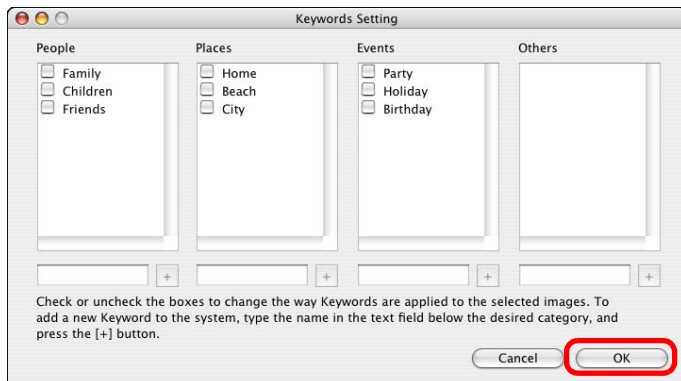


→ The keyword is set in the image.

Entering Comments into Images

You can enter information relating to images as comments. The entered comments are also useful when searching for images (p.59).

 - 1 Display the [File Information] window (p.52).
- 2 Click the [Advanced View] button.
→ A field for entering comments is displayed.
- 3 Enter text and then press the < return > key on the keyboard.

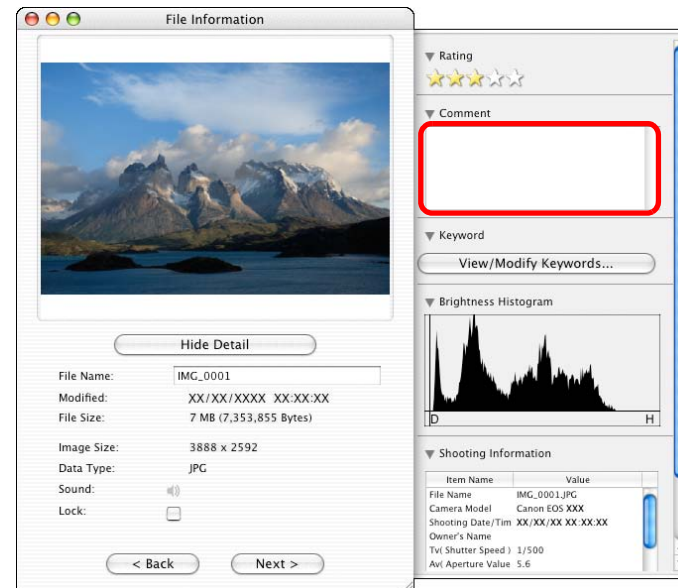

→ The entered text is saved in the image.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

 
Using the Internet

Reference

Contents Lookup

Index

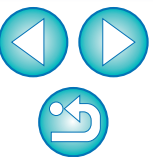

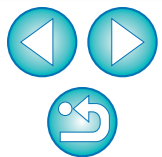

Saving Multiple Images with New File Names

You can copy multiple images and save them with new file names in a single operation.

- 1 Select all the images you want to save with new file names (p.10).
- 2 Select the [File] menu ► [Organize Image] ► [Rename].
→ The [Rename] window appears.
- 3 Enter the file name and click the [OK] button.

Rename

Select the post-conversion file name type.

☒ Copy Image

☒ New Name + Number

☐ Shooting Date + Number

☐ New Name + Shooting Date + Number

☐ Shooting Date + New Name + Number

New Name:

Number:

Specify Number of Digits:

Specify a Start Number:

Example:
_001.xxx

(The same extension as the original is entered in xxx)

→ Images separate from the original images are saved with the new names.

Classifying Images by Shot Date

Multiple images can be classified into different folders according to shot date.

- 1 Select all the images to be classified (p.10).
- 2 Select the [File] menu ► [Organize Image] ► [Sort Images].
→ The [Sort Images] window appears.
- 3 Select [The files will be separated into folders for each shooting date.] and then click the [Next] button.

Sort Images

Select the sort method for the selected image's folder.

☒ The files will be separated into folders for each shooting date.

☐ The files will be organized by rating.

→ The [Organize by Shooting Date] window appears.

4 Specify the folder structure, the file names, and the save destination, and then click the [OK] button.

Organize by Shooting Date

The files will be separated into folders for each shooting date.

Save To:

A new folder will be created in this folder.

MacOSX:Users:canon:Pictures:xxxx_xx_xx:xx... Browse...

Sort Folder Settings:

Based on the following settings, a new folder is created, and the images are sorted by each of their shooting dates.

Folder Name: YearMonthDate

New Name: Edit...

MacOSX:Users:canon:Pictures:
xxxx_xx_xx:xxxx_xx_01:2006_12_12

Copy/Move Images Setting

☒ Copy
☐ Move

Cancel < Back OK

→ Images are classified by shot date.

Settings for Folder Structure

Setting Item	Description
YearMonthDate	Classifies images by creating a first-level folder according to shot year/month/date.
Year/YearMonthDate	Classifies images by creating a second-level folder for the shot year, and the month and date.
Year/Month/YearMonthDate	Classifies images by creating a third-level folder for the shot year, the month, and the date.
Year/ newName	Classifies images by creating a new folder with a new name inside the shot year folders.
newName/YearMonthDate	Classifies images by creating folders for shot year/month/date inside a folder with a new name.
YearMonthDate/ newName	Classifies images by creating a new folder with a new name inside the shot year/month/date folders.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup


Index

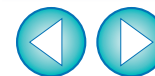

Searching for Images

You can search for images by ratings (p.19), shot date, comments (p.56) and keywords (p.56).

 - 1 **Select the [File] menu ► [Search].**
→ The [Set Search Criteria] window appears.
- 2 **Specify the search criteria and then click the [Search Now] button.**

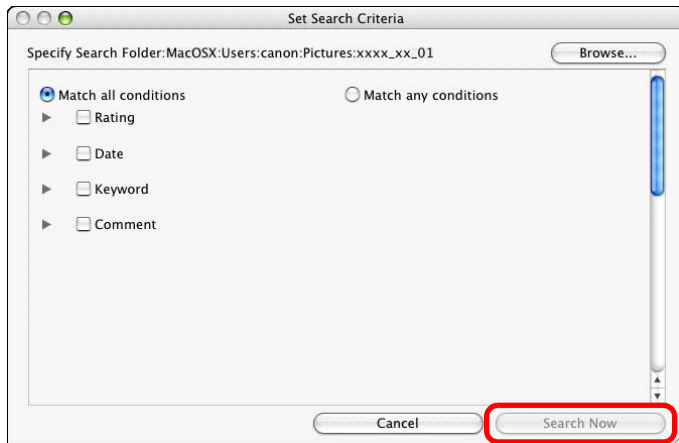

→ The search begins and the images that match the criteria are displayed in the [Search Results] window.

- 3 **Click the [Finish] button to close the [Search Results] window.**

→ The display returns to the main window.

4 Check the searched images in the main window.

- The searched images are displayed in the main window. Also, the [Search Results] folder is displayed in the folder area, and by selecting this folder, you can display the searched images at any time.



- The images inside the [Search Results] folder are stored until you either perform another search or quit IB.
- Any work you do on images inside the [Search Results] folder will be applied to all the original images. Therefore, please be aware that if you edit or delete images inside the [Search Results] folders, the original images will be edited or deleted also.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup

Index

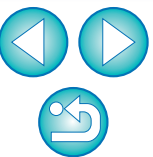

Performing Advanced Editing

This section explains image editing using high-level functions based on the assumption that you are familiar with handling standard image editing software.

JPEG images deteriorate slightly when edited and saved, and the image before editing cannot be recovered. For this reason, an edited JPEG image should be saved as a separate image from the original image.



 
You can edit RAW images in Digital Photo Professional (hereinafter, “DPP”). Select the RAW image in the Main Window and select the [File] menu ► [Process RAW Images by Digital Photo Professional], which will start up DPP. For detailed instructions on using DPP, refer to “Digital Photo Professional Instruction Manual” (PDF electronic manual).

Adjusting the Color of an Image in RGB

You can adjust the color of an image in RGB (red, green, blue).

- 1 Display the image to edit in the viewer window (p.18).
- 2 Click [Edit] and then select [Color/Brightness Adjustment] in the menu that appears (p.27).
 - The [Color/Brightness Adjustment] window appears.

- 3 Select the [RGB Adjustment] tab sheet and adjust the image.

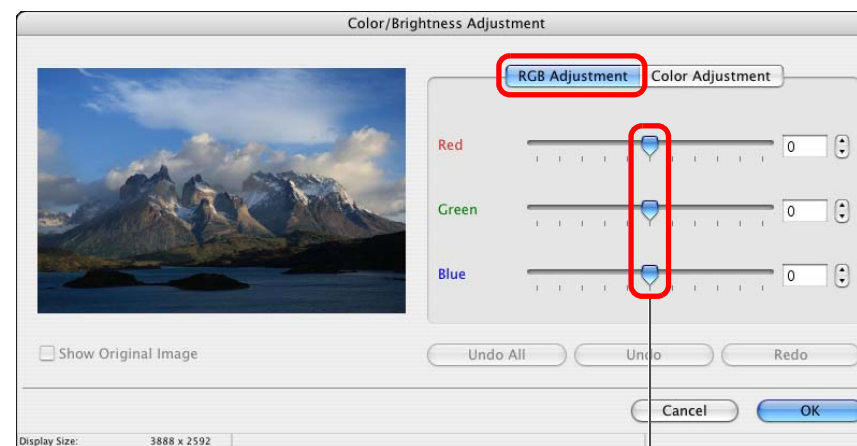

Drag to the left or right to adjust

→ The image is adjusted.

- 4 Check the adjustments and then click the [OK] button.
- 5 Save the image as a separate image (p.28).

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

Contents Lookup

 
Index



Adjusting the Brightness Level

You can adjust the level of brightness (balance).

- 1 Display the image to edit in the viewer window (p.18).
- 2 Click [Edit] and then select [Level Adjustment] in the menu that appears (p.27).
→ The [Level Adjustment] window appears.
- 3 Adjust the image.

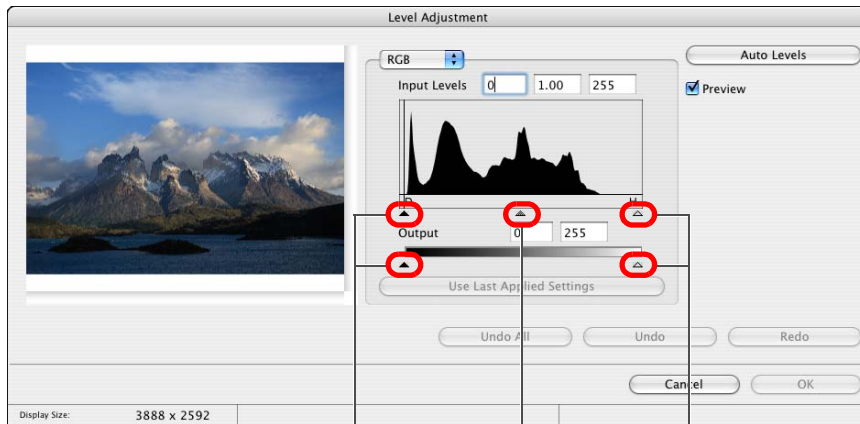

Drag right to adjust

Drag left to adjust

Drag to the left or right to adjust

 
→ The image is adjusted.

- 4 Check the adjustments and then click the [OK] button.
- 5 Save as a separate image (p.28).

Adjusting the Tone Curve

You can adjust the brightness, contrast and color of a specific area by changing the tone curve.

- 1 Display the image to edit in the viewer window (p.18).
- 2 Click [Edit] and then select [Tone Curve Adjustment] in the menu that appears (p.27).
→ The [Tone Curve Adjustment] window appears.
- 3 Adjust the image.

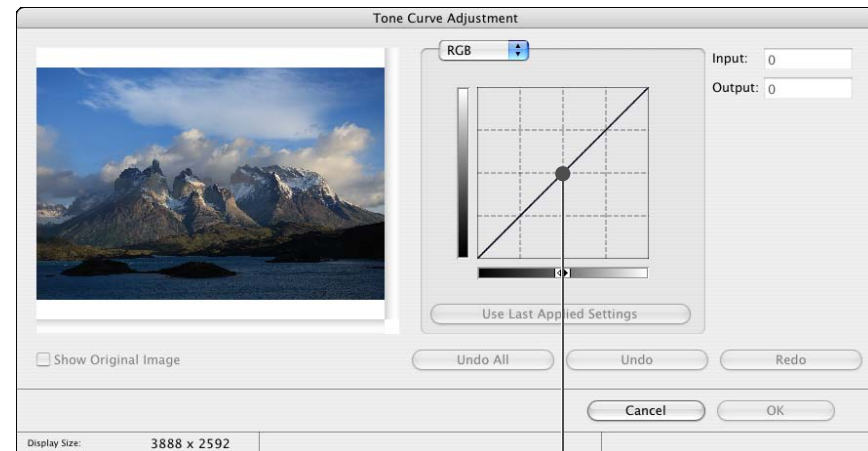

Click to add a [■] (point)
Adjust by dragging [■]

- The image is adjusted.
- The horizontal axis shows the input level and the vertical axis shows the output level.
 - The maximum number of [■] is 10.
 - To delete a [■], press the < delete > key on the keyboard.



4 Check the adjustments and then click the [OK] button.

5 Save as a separate image (p.28).

Transferring Images to Other Image Editing Software

You can transfer images to image editing software other than IB.

- 1** In the main window, select the [ImageBrowser] menu ► [Preferences].
→ The [Preferences] window appears.
- 2** From the menu, select [Register Application] and then click the [Add] button.
→ The [Application Selection] window appears.
- 3** Select the image editing software to transfer to, and then click the [Open] button
→ The selected software is registered.
- 4** Click the [OK] button and then close the [Preferences] window.
- 5** Select the image you want to transfer to the image editing software.
- 6** Select the [Edit] menu ► [Edit with Registered Application] ► image editing software to transfer to.
→ The selected image editing software starts up and then image is displayed.

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

 
Preferences

Using the
Internet

Reference

Contents
Lookup

Index

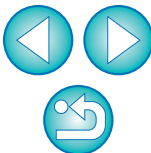

Merging Images to Create Panorama Images

You can merge up to four JPEG images to create panorama images. For merging images, start up the image-merging software “PhotoStitch” from IB and use.

 
1 Select multiple images to merge (p.10).

2 Select the [Edit] menu ► [PhotoStitch].

→ PhotoStitch starts up and the main window appears.


3 Check the arrangement of the images to be merged and click the [2. Merge] tab sheet.

- If the arrangement of the images to be merged is not correct, drag the images to rearrange them.

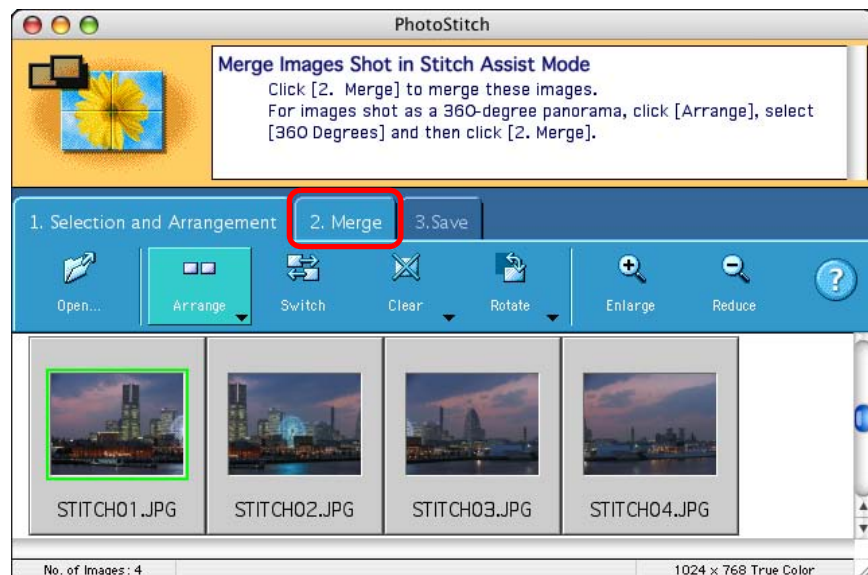

→ The window switches to the [2. Merge] tab sheet.

 4 Click [Start] to merge.

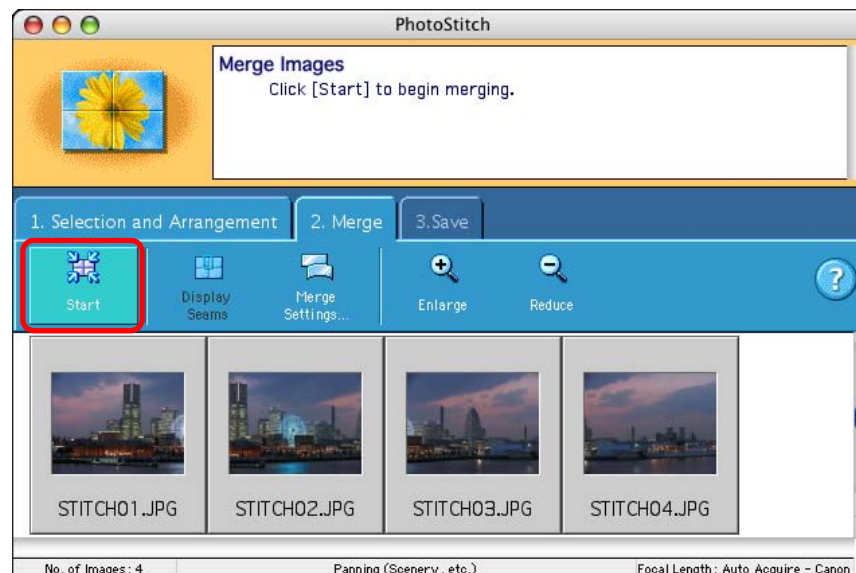

→ The images are merged and displayed.

5 Click the [3. Save] tab sheet.

→ The display switches to the [3. Save] tab sheet.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet


Reference

Contents Lookup

Index

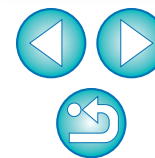

 6 Check the save range and then click [Save].

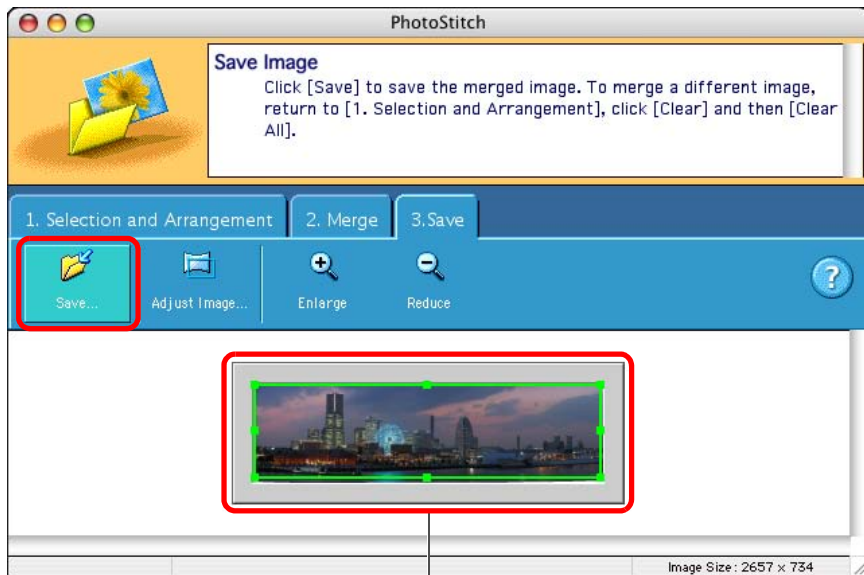

Save range
Drag [■] to change the range

→ The [Save As] dialog box appears.

7 Specify the save destination and then click the [Save] button.

→ The merged images are saved.

8 Select the [PhotoStitch] menu ► [Quit PhotoStitch].

→ PhotoStitch quits.



See also the Help that are displayed when you click [?] on the right of the window for information on operating PhotoStitch and PhotoStitch functions.

Adding Sound to Images/Playing Back

You can add sound to images and play back sound which you have added to images with a camera that has a sound record function.

Adding Sound to Images

You can add a sound file to an image.

A Mac OS X function is used for sound recording. When inputting sound from external equipment, connect the external equipment to your computer beforehand.

- 1 Select an image to which you want to add sound.
- 2 Select the [File] menu ► [Sound] ► [Record].
→ The audio recording dialog box appears.
- 3 Click [●] (recording button) and begin recording the sound to be added to the image. Click the [Save] button to stop recording.
→ The recorded sound file is added to the image. The [🔊] icon is displayed in the image to which the sound file was added.

Playing Back Sound

You can play back sound files that are attached to images.

- 1 Select an image to which a [🔊] icon is attached.
- 2 Select the [File] menu ► [Sound] ► [Play].
→ The sound is played back.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

Contents Lookup

Index



4 Preferences



Preferences	66
Browser Window Settings.....	66
Viewer Window Settings.....	67
Confirmation Dialog Box Settings.....	67
Processing When Rotating Settings.....	68
Layout Print Settings	68
Photo Print Settings.....	68
Register Application Settings.....	68

Introduction

Table of
Contents

1
Basic
Operation

2
Advanced
Operation

3
High-Level
Functions

4
Preferences

5
Using the
Internet

Reference

Contents
Lookup

 
Index



Preferences


You can change any of the IB functions in the preferences window. Check the settings displayed for each window before making changes.

- 1 Select the [ImageBrowser] menu ► [Preferences].
- 2 From the menu, select the dialog box you want to display, specify your settings, and then click the [OK] button.

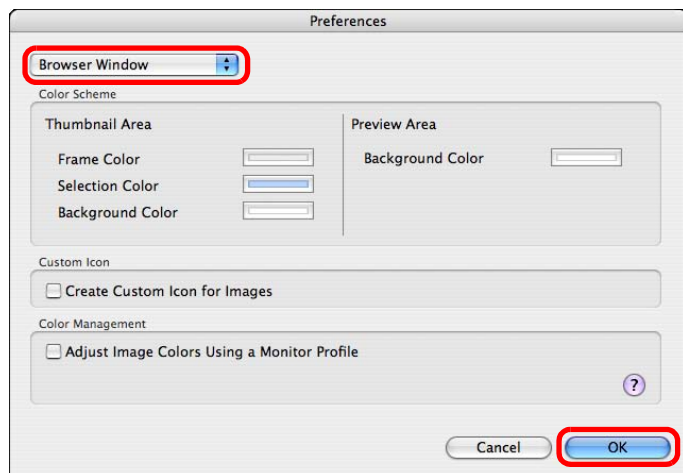

Browser Window Settings

 You can change the background color of the main window (browser window) as well as the color of the thumbnail image frames. You can also make settings for color management.

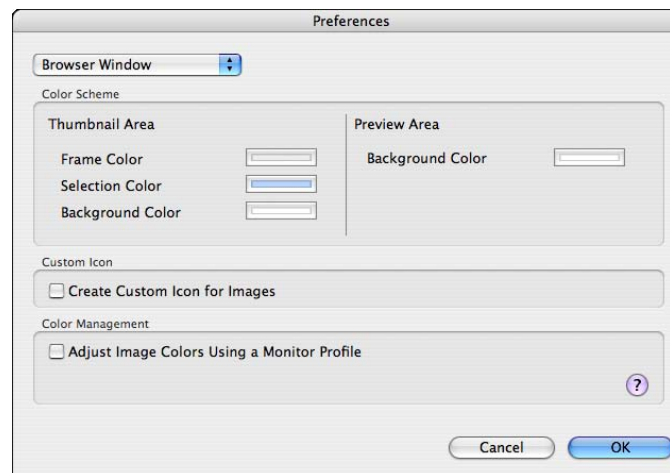

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

 
Contents
Lookup

Index




Viewer Window Settings

You can set the shooting information displayed in the viewer window (p.79).

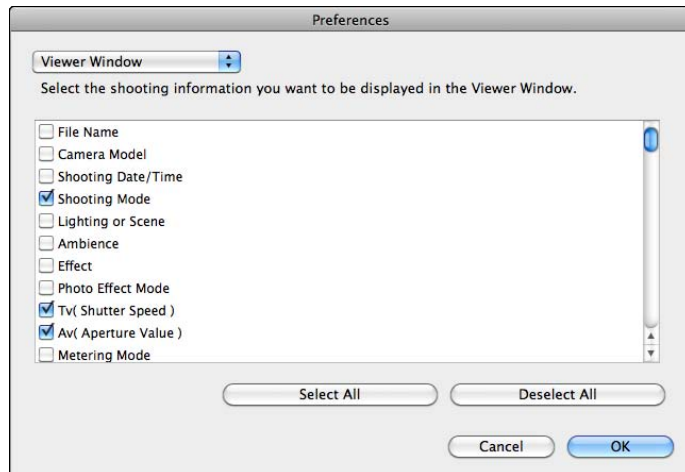

Confirmation Dialog Box Settings

 You can set the software so that confirmation dialog boxes displayed after each operation are not displayed. The items you uncheck are not displayed.

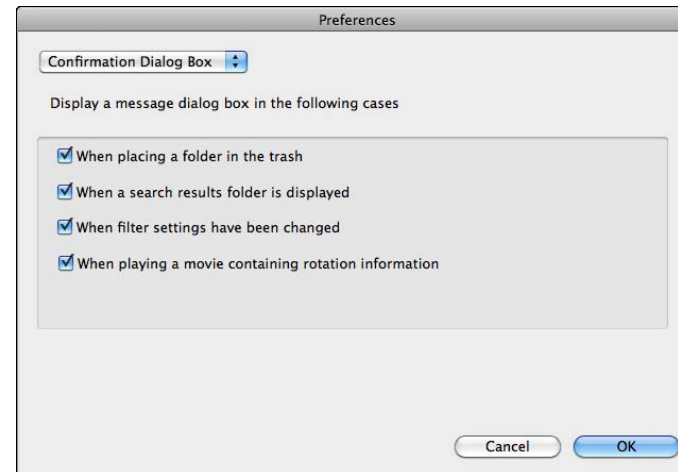


? To display the shooting information in the viewer window

In the viewer window, click the [Show Shooting Information] button (p.79) and in the menu that appears, select [Show Shooting Information] to display the shooting information.



Processing When Rotating Settings

 You can make settings related to image rotation.

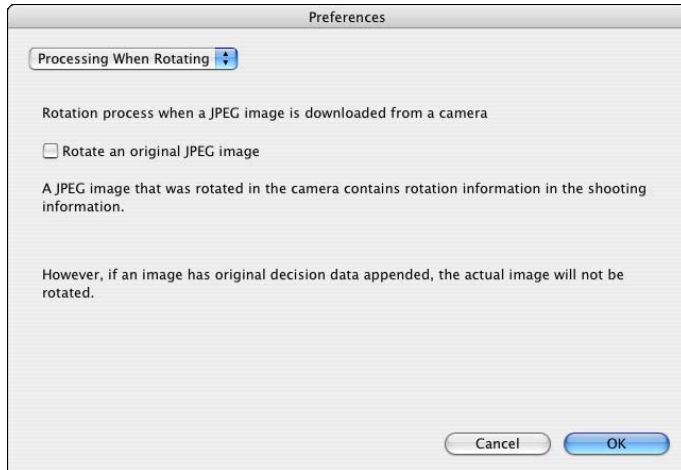


Layout Print Settings

You can make settings for layout printing.




Photo Print Settings

 When printing with the [Photo Print] window (p.16), you can set whether to trim the image and print with no borders around the paper, or to print as is without trimming.

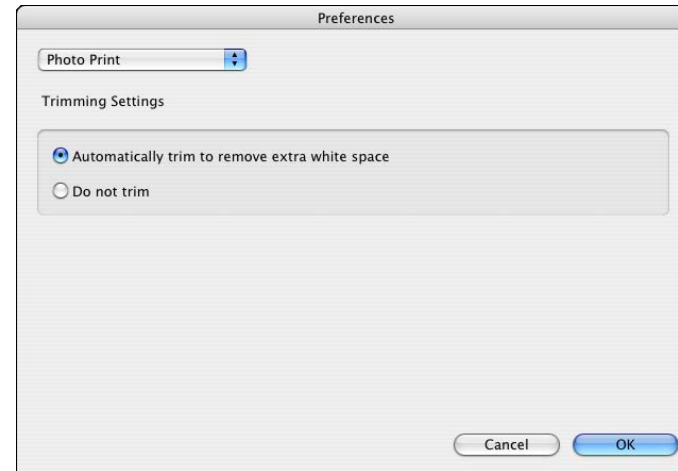

Register Application Settings

 You can register other editing software.

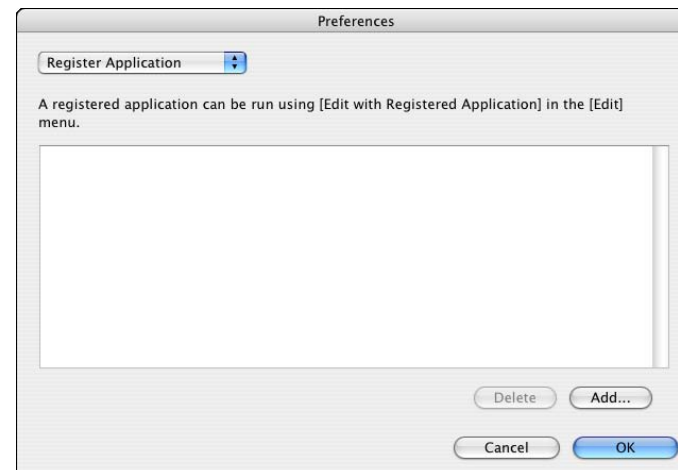

5 Using Images on the Internet



Uploading a Movie to YouTube	70
Using CANON iIMAGE GATEWAY	71
Membership Registration.....	71
Displaying the Top Page of CANON iIMAGE GATEWAY	71
Uploading Images in a CANON iIMAGE GATEWAY Album	72
Displaying a Registered CANON iIMAGE GATEWAY Album	72

Introduction

Table of
Contents

1
Basic
Operation

2
Advanced
Operation

3
High-Level
Functions

4
Preferences

5
Using the
Internet

Reference


Contents
Lookup

Index



Uploading a Movie to YouTube

You can upload movies saved in your computer to YouTube.

- 1 Select a movie to upload in the main window.**
- 2 Select the [Internet] menu ► [Upload movies to YouTube].**
→ The [Upload Movies to YouTube] window appears.
- 3 Select the movie from [List], enter the title and other information, and click the [] (Upload) button.**
→ The [YouTube login] window appears.
- 4 Enter your YouTube username and password and click the [Login] button.**



- Smooth operation is not guaranteed with regard to future YouTube specifications or specification changes.
- Uploadable movies can be up to 10 minutes long and have a file size of up to 1 GB.
- You cannot upload movies that you have edited on your computer (except Video Snapshot Albums).
- An environment enabling Internet access (subscription with a provider as well as installed browser software, an in-place line connection, etc.) is required.
- Provider connection fees and transmission fees to provider access points are incurred separately.

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

Contents
Lookup

Index



Using CANON iMAGE GATEWAY

CANON iMAGE GATEWAY is a free Internet online service restricted to users who have purchased a Canon digital camera (no membership or annual fee).

To connect to CANON iMAGE GATEWAY, it is necessary to register as a member beforehand. Insert the EOS DIGITAL Solution Disk provided into your computer and perform registration in the CANON iMAGE GATEWAY member registration window that appears after installing the software that includes IB. You can also use the following procedure to register as a member.

For detailed information on CANON iMAGE GATEWAY, refer to the CANON iMAGE GATEWAY Help.

 
! To use this function, an environment enabling Internet access (subscription with a provider as well as installed browser software, an in-place line connection, etc.) is required.

Membership Registration

You can register as a member of CANON iMAGE GATEWAY. When you have finished registering, you can also change the connection information or add cameras.

1 Register as a member.

- Click [CANON iMAGE GATEWAY] and in the menu that appears, select [Register/Add Product].

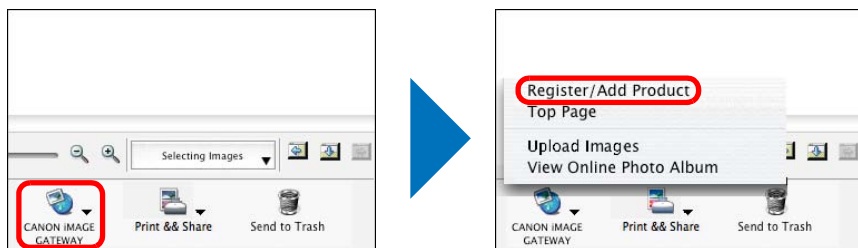

→ The [Register/Add Product] dialog box appears.

2 Click the [Register] button.


- The browser software starts up and the CANON iMAGE GATEWAY membership registration page is displayed.
- Perform membership registration by following the on-screen instructions.
- When you have finished registering, you can also change the connection information or add cameras.

Displaying the Top Page of CANON iMAGE GATEWAY

The CANON iMAGE GATEWAY top page is displayed with the browser software.

1 Connect to the top page.

 - Click [CANON iMAGE GATEWAY] and in the menu that appears, select [Top Page].

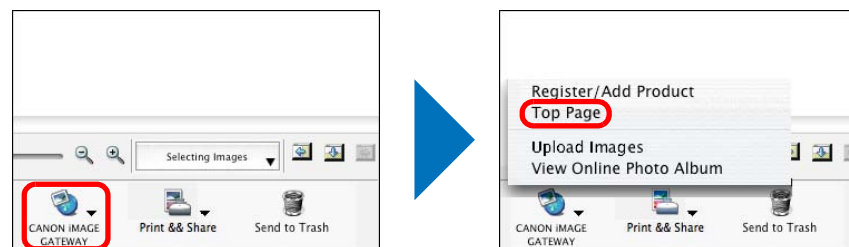

→ The [Enter registration information.] dialog box appears.

2 Enter your user name and password and then click the [OK] button.

- When the connection dialog box is displayed and connection is completed, the browser software starts up and the top page of CANON iMAGE GATEWAY is displayed.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup

Index

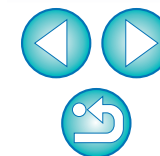

Uploading Images in a CANON iIMAGE GATEWAY Album

 
You can upload images selected in IB in a CANON iIMAGE GATEWAY Online photo album. You can also show images in a registered album to specified people.

The images uploaded in an album are copies, so the original images remain unaffected on your computer.

1 Select images to be uploaded in an album.

2 Connect to CANON iIMAGE GATEWAY.

- Click [CANON iIMAGE GATEWAY] and in the menu that appears, select [Upload Images].

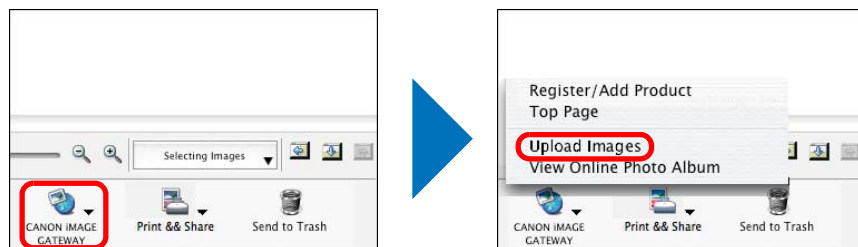


3 Upload the images selected in step 1 to a new album by following the on-screen instructions.

Displaying a Registered CANON iIMAGE GATEWAY Album

You can display images that have been uploaded in a CANON iIMAGE GATEWAY Online photo album with the browser software.

1 Display an album.

 - Click [CANON iIMAGE GATEWAY] and in the menu that appears, select [View Online Photo Album].

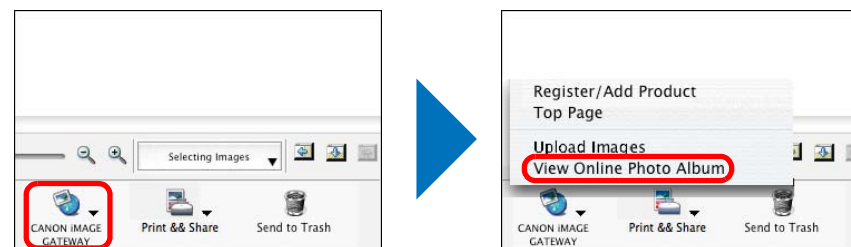

→ The [Enter registration information.] dialog box appears.

2 Enter your user name and password and then click the [OK] button.

→ When the connection dialog box is displayed and connection is completed, the browser software starts up and the CANON iIMAGE GATEWAY album page is displayed.





Troubleshooting..... 74

Deleting the Software (Uninstalling) 75

System Requirements 76

Supported Images 76

List of Main Window Functions..... 77

 Preview Mode..... 77

 List Mode 78

List of Viewer Window Functions..... 79

List of Cut Movie Window Functions 80

List of Video Snapshot Album Window Functions... 81

List of Photo Print Window Functions..... 82

List of Index Print Window Functions 83

List of Layout Print Window Functions 84

Contents Lookup 85

Index..... 86

 About This Instruction Manual 88

 Trademark Acknowledgments 88

Introduction

Table of Contents

1 Basic Operation

2 Advanced Operation

3 High-Level Functions

 
4 Preferences

Using the Internet

Reference

Contents Lookup

Index

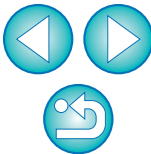

Troubleshooting

If IB is not operating correctly, refer to the items below.

Also refer to the Help from the [Help] menu or click the [?] button at the top of each window and refer to the Help displayed.

Installation could not be completed correctly

- You cannot install software unless you are logged into an account with Administrator privileges. Log in again into an account with Administrator privileges.
For how to log in and how to specify Administrator settings, refer to the User's Manual for the Macintosh computer or for Mac OS X.

IB does not work

- IB does not operate correctly on a computer if its system requirements are not met. Use IB on a computer with compatible system requirements (p.76).
- Even if your computer has the RAM capacity (memory) described in the system requirements (p.76), if other applications are running at the same time as IB, you may not have sufficient RAM (memory). Quit any applications other than IB.
- The software preferences file may be corrupted. Quit all applications and follow the procedure below to delete the preferences file from the [Preferences] folder before restarting IB.
In the hard disk drive where the system is saved, open the [Users] folder ► folder of the logged in user ► [Library] folder ► [Preferences] folder, and delete the preferences files below.

Preferences	Description
com.canon.ImageBrowser.plist	Preferences file for the ImageBrowser
com.canon.RAWImageTask.plist	Preferences file for the RAW Image Task
com.canon.PhotoStitch.plist	Preferences file for the PhotoStitch

Images do not display properly

- Images that are not supported by IB (p.76) do not display. There are various types of JPEG and TIFF images, so JPEG images other than Exif 2.2, 2.21 or 2.3 compatible images and TIFF images other than Exif compatible images may not display properly.
- With initial settings, the color of images that have been shot in Adobe RGB appear weak. In this case, check the [Browser Window] window in preferences and checkmark [Adjust Image Colors Using a Monitor Profile] (p.66). Color management is performed and the color of the image shot with an Adobe RGB setting and the image shot with an sRGB setting are matched.

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

Contents
Lookup

Index



Deleting the Software (Uninstalling)

- Quit any applications before uninstalling the software.
- To uninstall the software, log into the account used when installation was performed.
- To prevent computer malfunctions, always restart your computer after you have uninstalled the software.

1 Display the folder in which the software is saved.

→ Open the [Canon Utilities] folder.



2 Drag the [ImageBrowser] folder to the Trash.

3 Select the [Finder] menu on the desktop ► [Empty Trash].

→ The software is deleted.

4 Restart your computer.



- You cannot retrieve data that you have emptied into the Trash and deleted, so be particularly careful when deleting data.
- You cannot install the software again if you have just moved the [ImageBrowser] folder to the trash. Be sure to select the [Finder] menu ► [Empty Trash].

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

 
Preferences

Using the
Internet

Reference

Contents
Lookup

Index

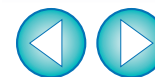

System Requirements

Even though the following are recommended system requirements, not all computer functions can be guaranteed.

OS	Mac OS X 10.5 to 10.6
Computer	Macintosh with one of the above OS installed
CPU*	Intel processor (Mac OS X 10.5 to 10.6)
RAM*	Minimum 512MB (Mac OS X 10.5), Minimum 1GB (Mac OS X 10.6)
Display	Resolution : 1024 × 768 or more Colors : Thousands or more

● This software program is not compatible with UFS (UNIX File System) formatted disks.

* Use a Core 2 Duo 2.6GHz or higher CPU and 2GB or more RAM when working with MOV movies. However, even if there is nothing wrong with a movie file, it may drop frame and not play smoothly during playback, depending on your computer specifications.

Supported Images

Image type		Extension
JPEG images	JPEG images shot with a Canon digital camera (Exif 2.2, 2.21 or 2.3-compatible JPEG images)	.JPG, .JPEG
RAW images* ¹	RAW images shot with a EOS DIGITAL camera excluding EOS D6000, EOS D2000, EOS DCS1, EOS DCS3	.CR2 .TIF .CRW
TIFF images	Exif-compatible TIFF images	.TIF, .TIFF
BMP images	Bitmap images	.BMP
PICT images	PICT images	.PICT
MOV movies	MOV movies shot with a Canon digital camera	.MOV .MOV + .THM* ²
AVI movies	AVI movies shot with a Canon digital camera	.AVI + .THM* ²

*¹ For RAW images, the JPEG embedded in the RAW image is displayed and printed instead of the actual RAW image. In some cases, displayed and printed images may be grainy.

*² A “.THM” file is a (thumbnail) file generated and saved together with a movie file when shooting movies with some of Canon digital cameras. It has the same file name as the movie and includes shooting information, etc. When you play on the camera a movie file that was saved together with a “.THM” file, both the movie file and the “.THM” file are required.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

 
Contents Lookup

Index



List of Main Window Functions

Preview Mode

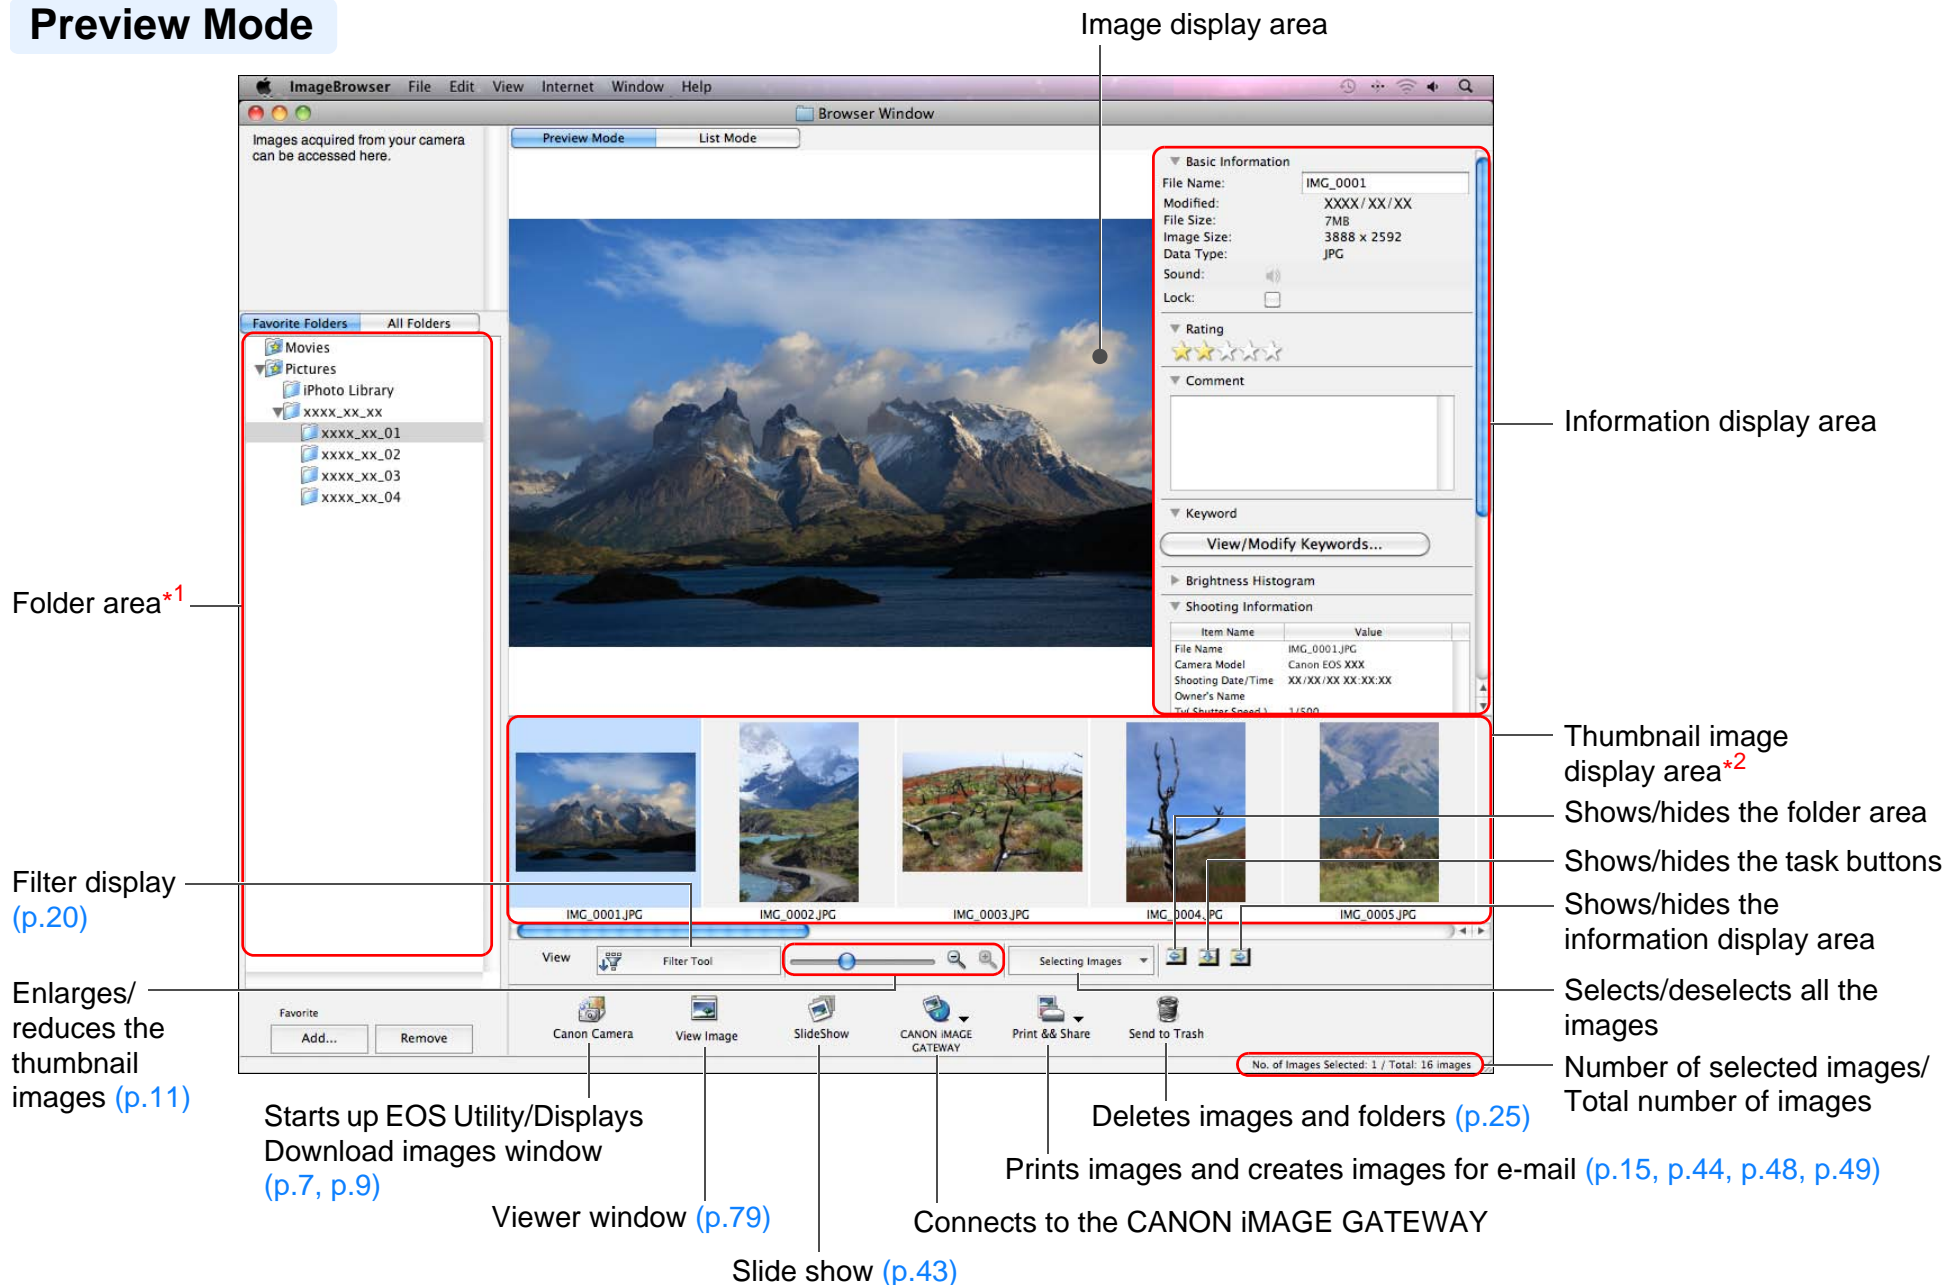

^{*1} Images in folders selected here are displayed on the thumbnail image display area.

^{*2} Images selected here are displayed on the image display area.

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference


Contents Lookup

Index

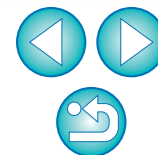


List Mode

 Movie icon Video Snapshot icon

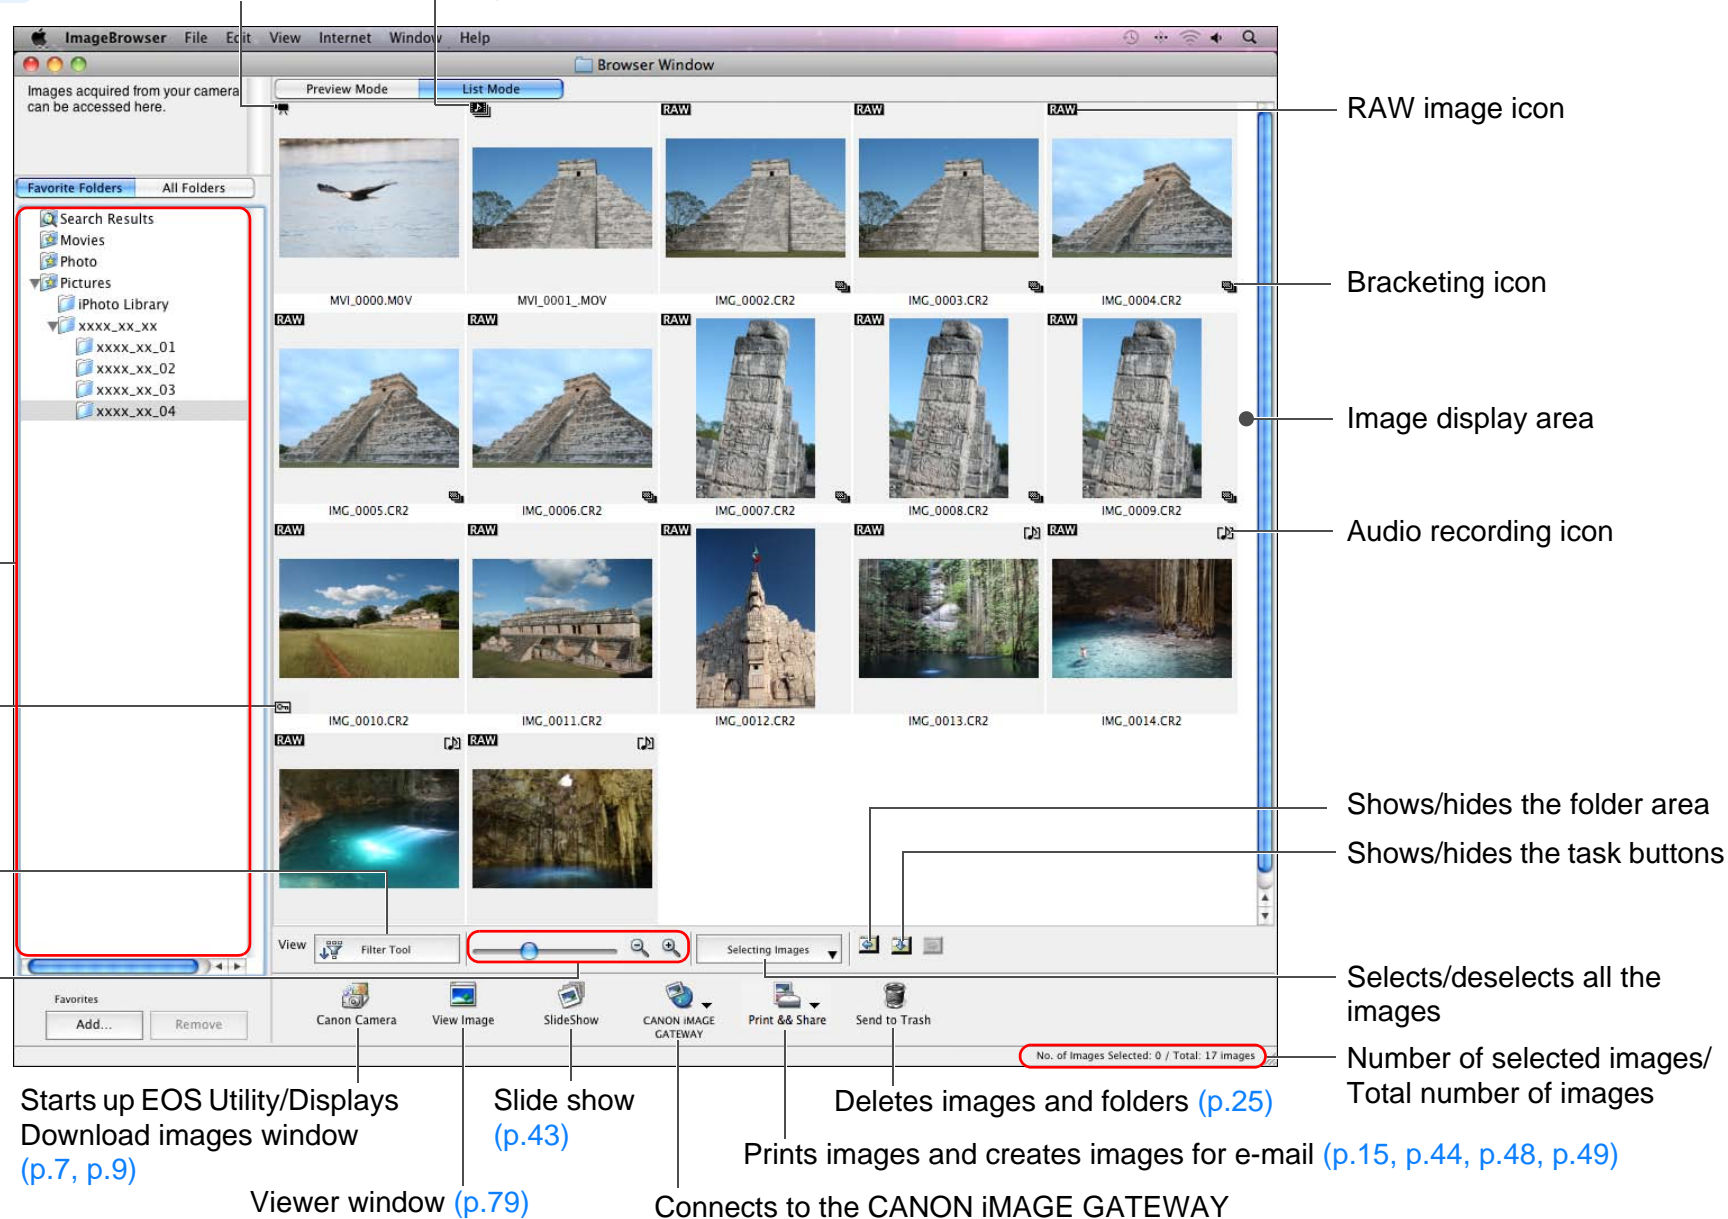

 * Images in folders selected here are displayed on the image display area.

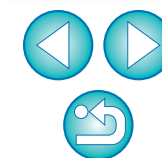

List of Viewer Window Functions

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

Preferences

Using the Internet

Reference

Contents Lookup

Index

Display magnification
(p.19)

Switches
between images

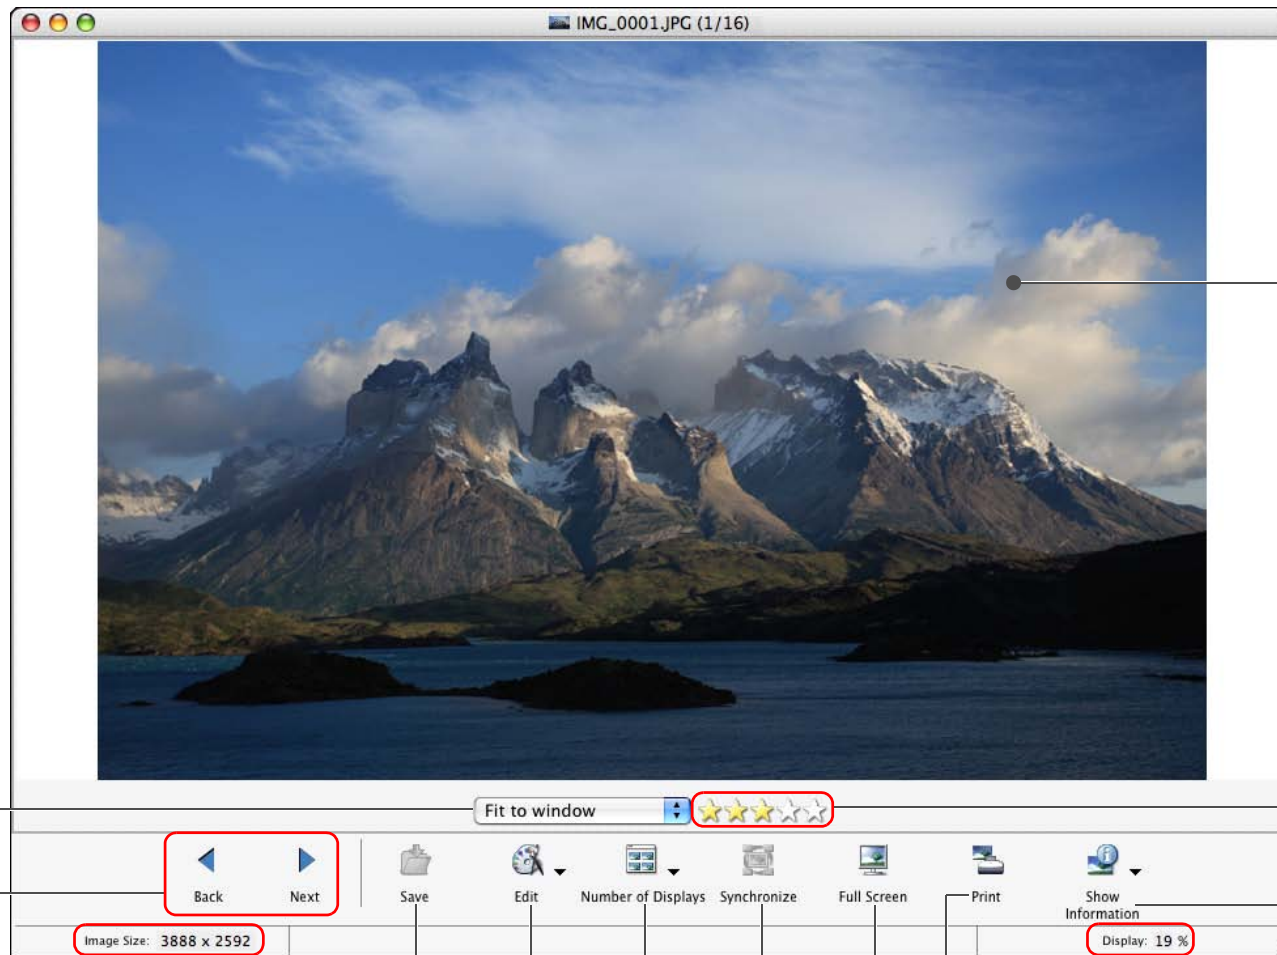 


Image display area

Rating (p.19)

Shows/hides the
shooting information
and AF point
(p.12, p.18)

Displayed image size

Saves the images (p.28)

Edits the images (p.27)


Split displays (p.51)

Synchronize (p.51)


Photo print window (p.82)

Full view display (p.12)

 Display magnification

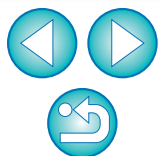

 List of Cut Movie Window Functions (p.38)

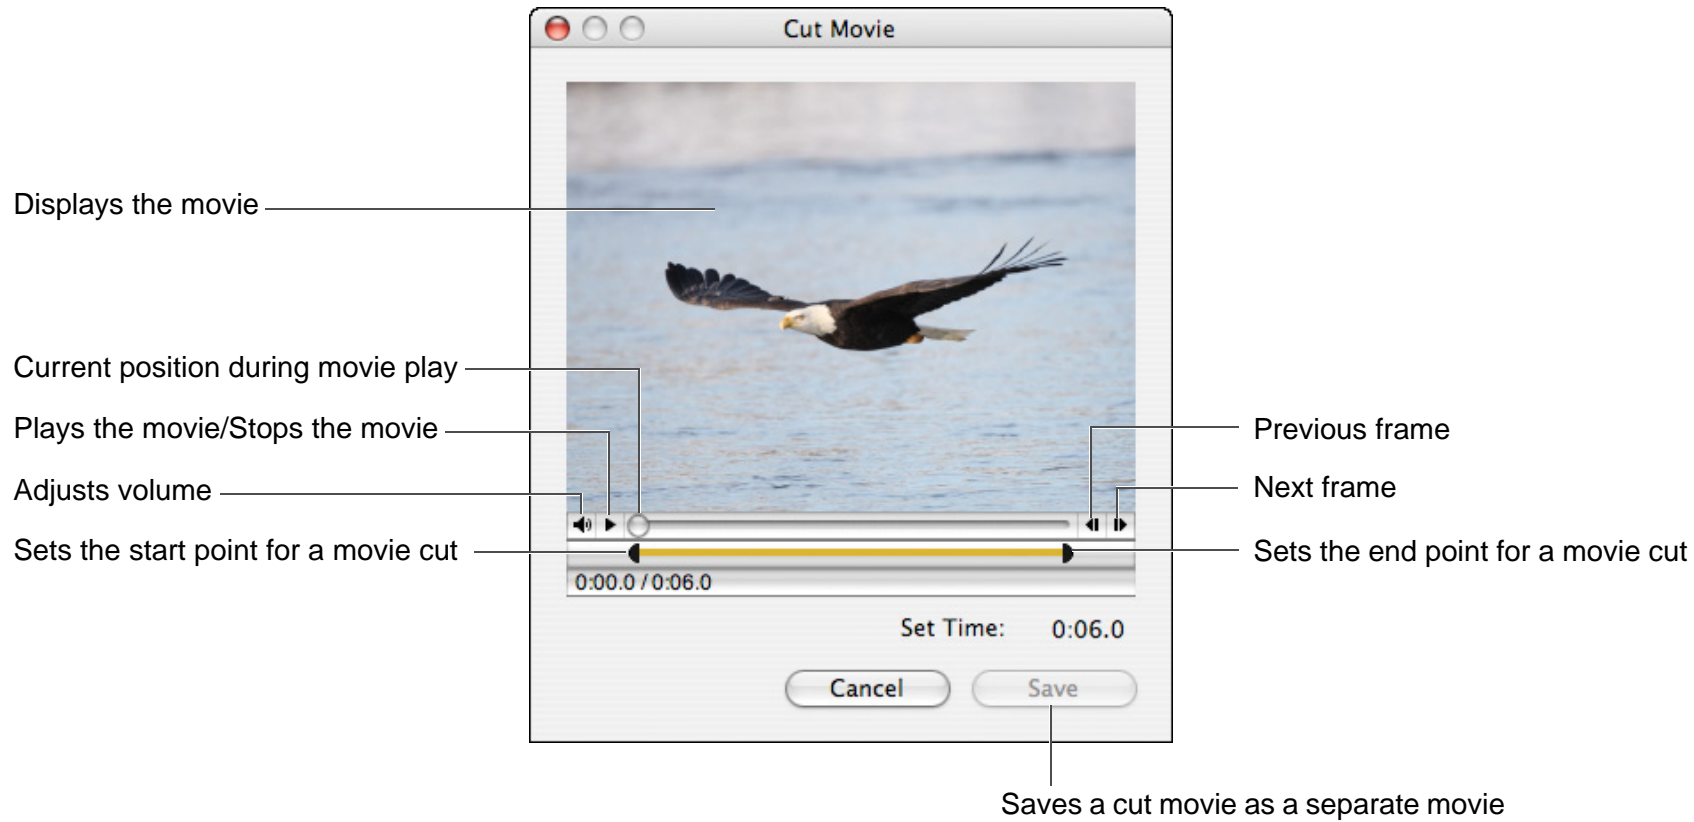

Introduction

Table of
Contents

1
Basic
Operation

2
Advanced
Operation

3
High-Level
Functions

 
4
Preferences

5
Using the
Internet

Reference

Contents
Lookup

Index

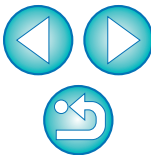

List of Video Snapshot Album Window Functions (p.39)

The screenshot shows a software window titled 'XXX_XXXX_XXXXXX.MOV'. The interface includes a menu bar with icons for opening a music file, undoing and redoing edits, saving the album, and displaying a detailed description. The main area is split into a video player and a sidebar. The video player shows a large group of pink flamingos in a pond. The sidebar contains two panels: 'Original movie information' and 'Music File Information', both listing technical details like file name, path, size, and frame rate. Below the video player is a timeline with a play button and volume controls. At the bottom is a thumbnail area with five small video frames; the first frame is highlighted with a yellow border. Labels with leader lines point to various parts of the interface, explaining their functions.

Opens Video Snapshot Album

Opens music file

Undoes edit

Redoes edit

Saves Video Snapshot Album

Displays detailed description

Video Snapshot selected in Thumbnail area

Deletes Video Snapshot from Thumbnail area

Plays Video Snapshot Album

Adjusts volume

Changes order of Video Snapshots

Movie information

Music file information

Selects audio


Presently selected Video Snapshot

Thumbnail area


File Name	XXX_XXXX_XXXXXX.MOV
Path	, XXXXXX/XX XXXXXX
File Size	XXX XX MB
Image Size	XXXX x XXXX
Frame Rate	XX XX Frames/second
Recording Time	X XX.X
Sampling Frequency	XX XXXkHz
Sample Size	XX Bits
Shooting Mode	X sec. movie

File Name	XXXXXX.wav
Path	XXXXXX/XX XXXXXX
File Size	X XX MB
Play Time	X XX.X
Sampling Frequency	XX XXXkHz
Sample Size	XX Bits

 - Introduction
- Table of Contents
- 1 Basic Operation
- 2 Advanced Operation
- 3 High-Level Functions
- 4 Preferences
- Using the Internet
- Reference
- Contents Lookup
- Index

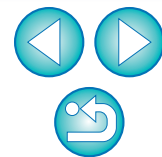

List of Photo Print Window Functions

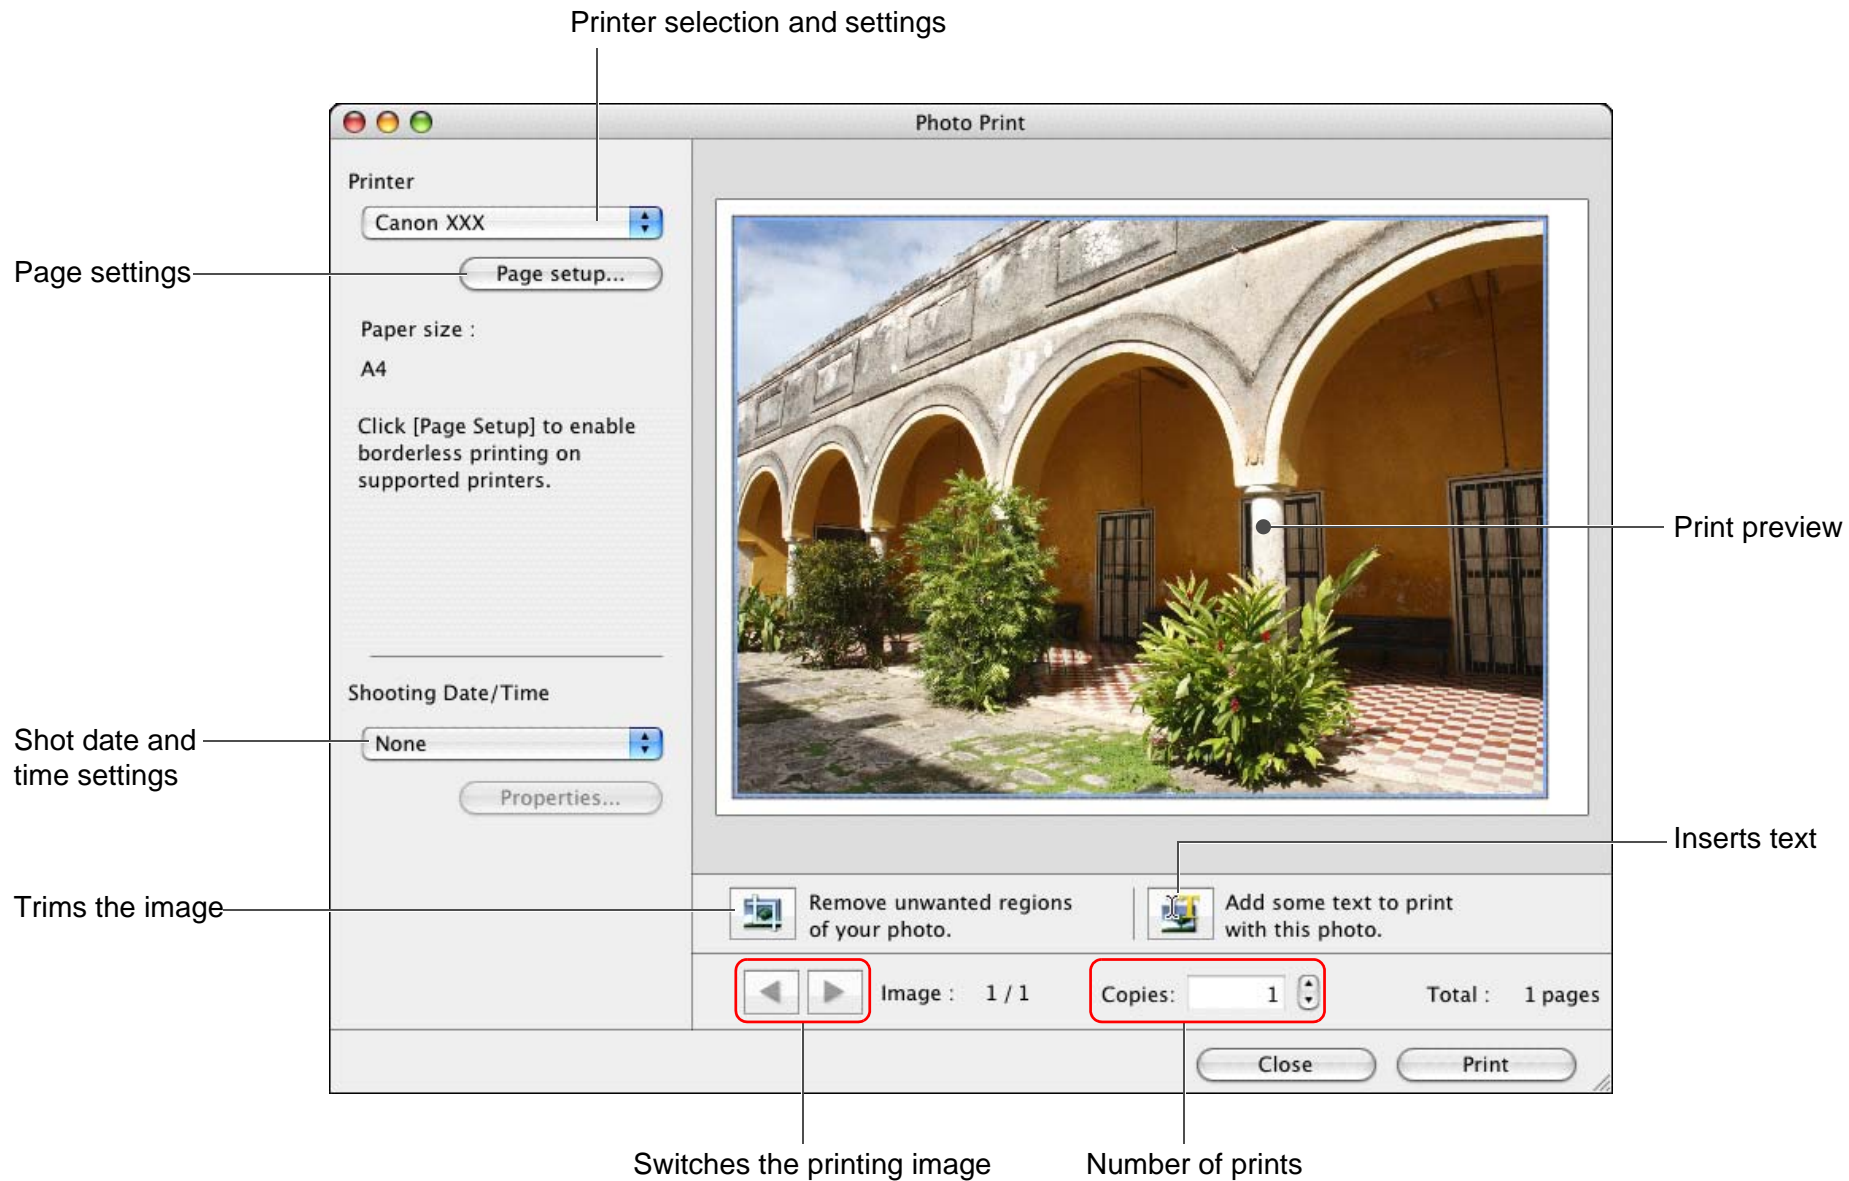 

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet


Reference

Contents Lookup

Index

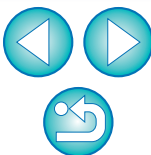

List of Index Print Window Functions

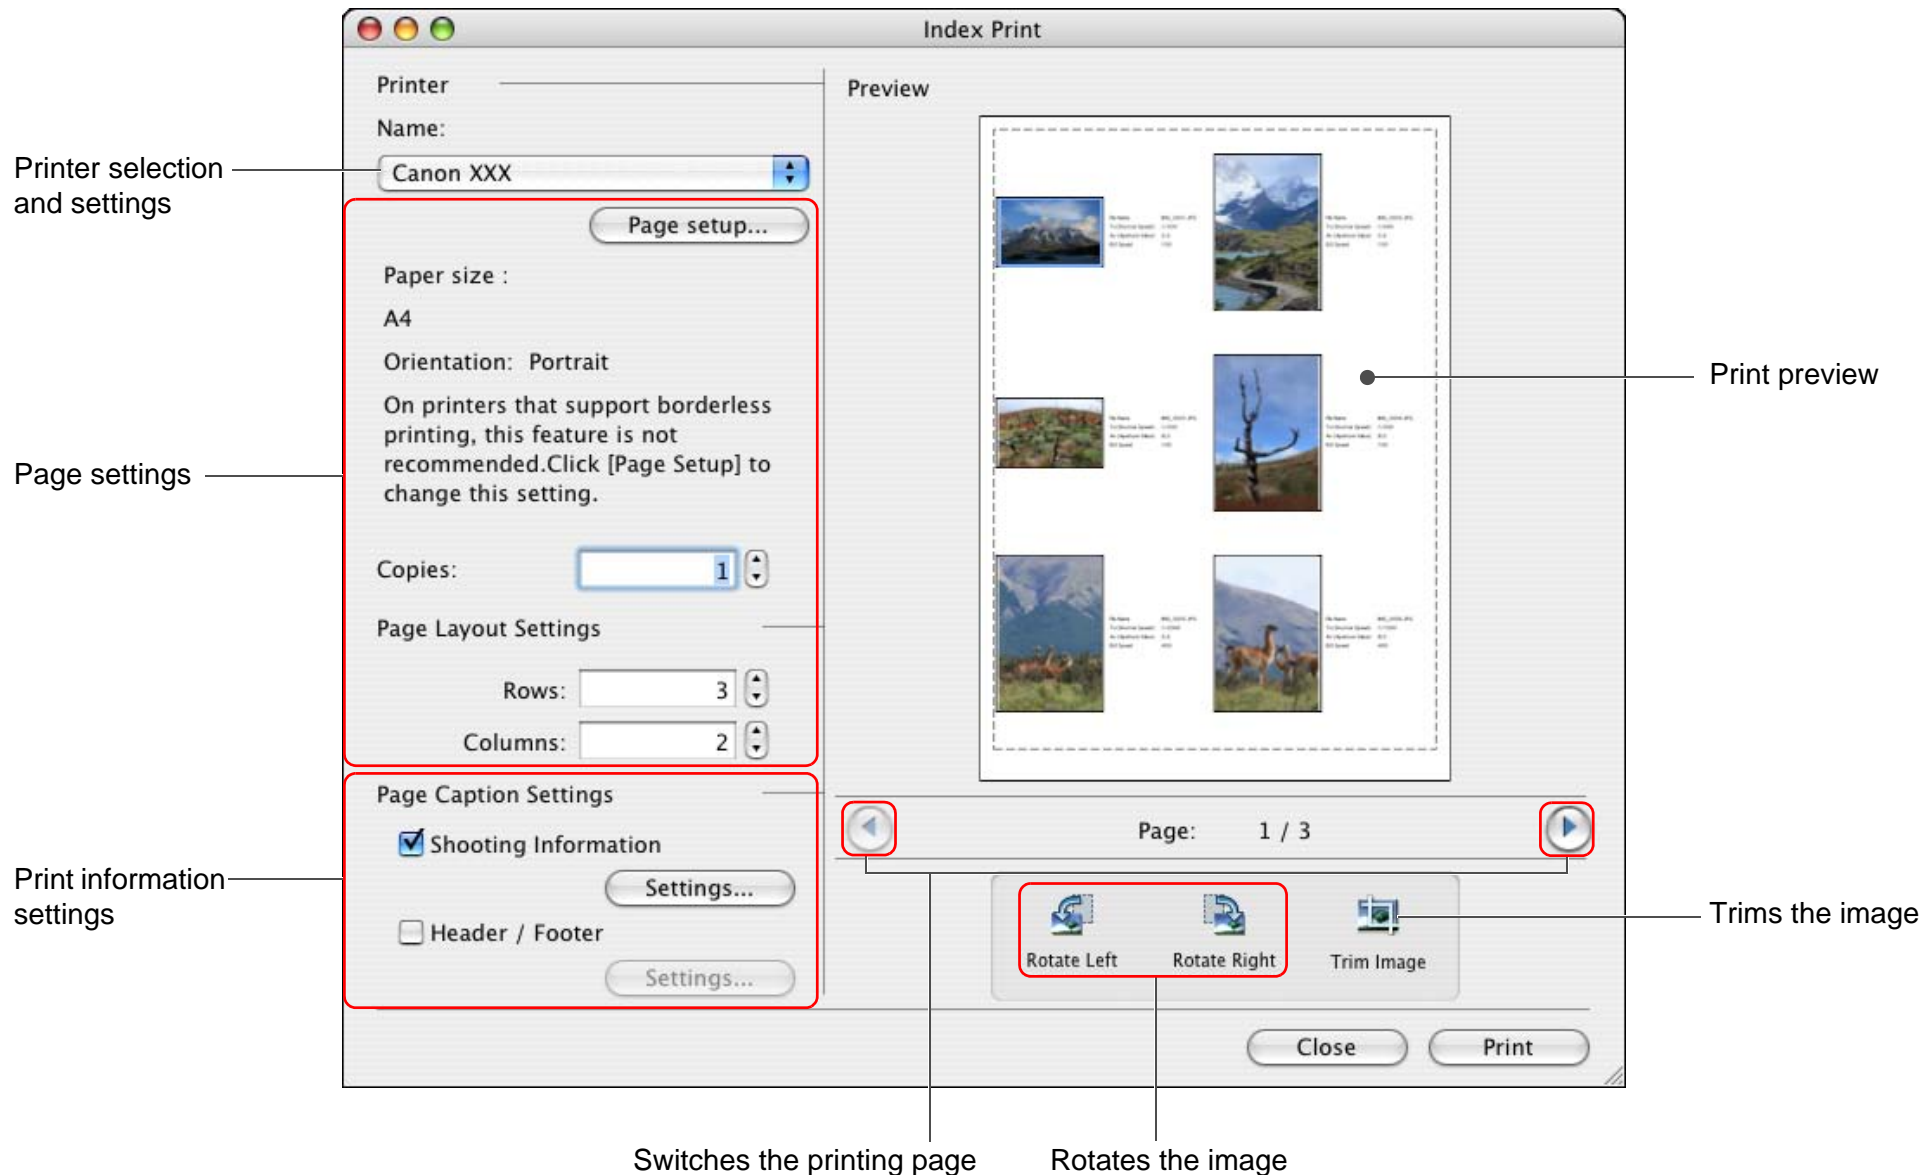 

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup

Index

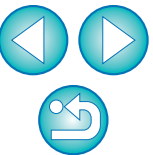


List of Layout Print Window Functions

Sets the printing style

Printer selection and settings

 Page settings

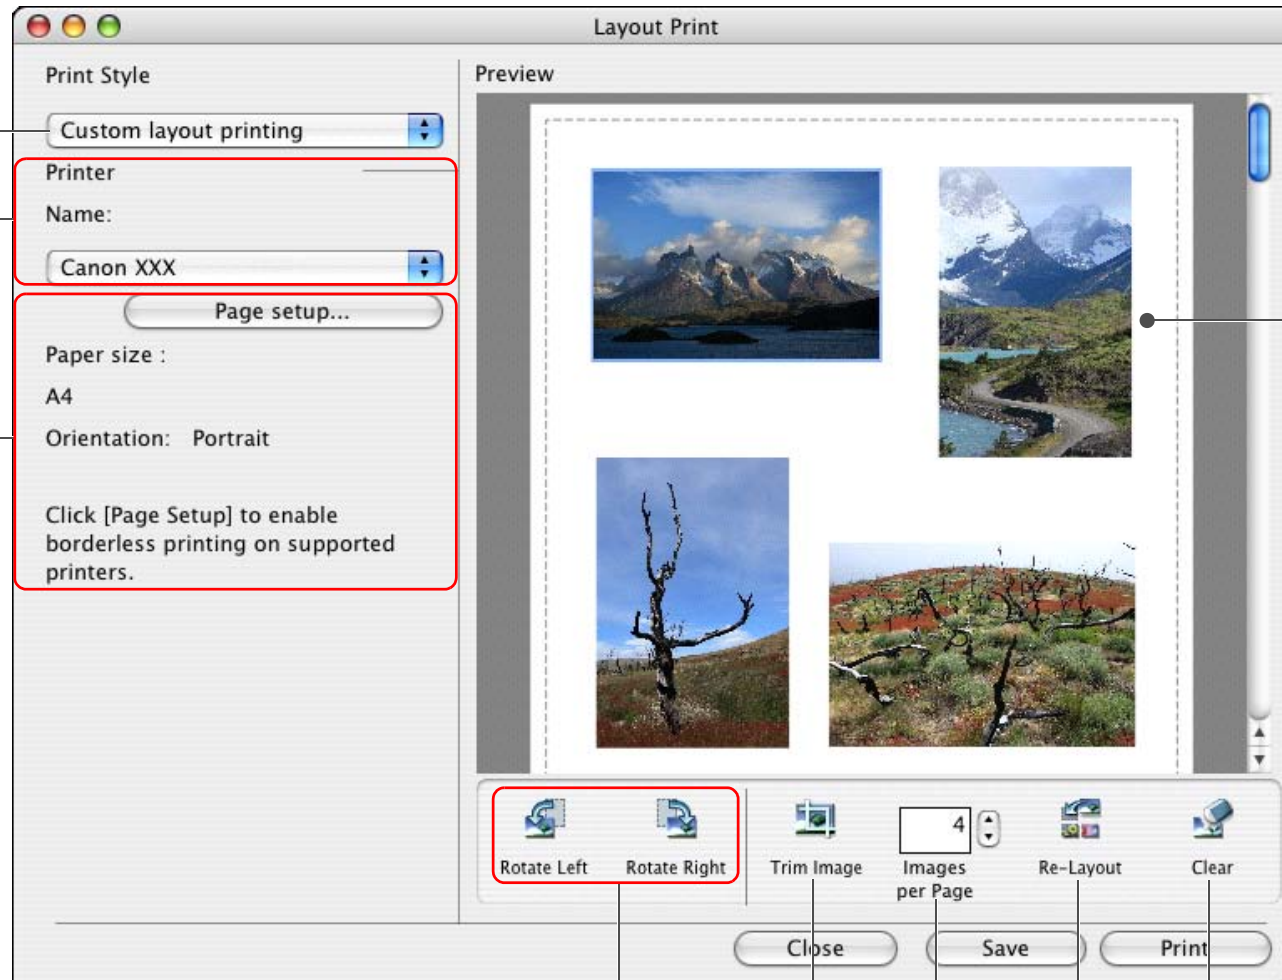

Print preview

Rotates the image

Trims the image

Number of images per page

Reverts to the original condition

Deletes an image

Introduction

Table of Contents

Basic Operation

Advanced Operation

High-Level Functions

 
Preferences

Using the Internet

Reference

Contents Lookup

Index

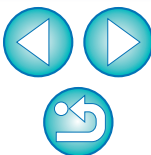

Contents Lookup

Downloading Images to Your Computer

- Download images by connecting your camera and computer → p.7
- Download images using a card reader → p.8

Image Checking

- Look through → p.10
- Enlarge and view → p.11, p.18
- Play a movie → p.13
- Play Video Snapshot Albums → p.39
- Check efficiently → p.21
- Compare multiple images → p.51
- Check the shooting information such as shot date → p.52
- View as a slide show → p.42

Image Printing

- Print one image on one page → p.15
- Arrange multiple images on one page and print → p.48
- Arrange images freely and print → p.49

Organizing Images

- Sort by rating → p.19
- Move to a different location → p.23
- Move by entire folder to a different location → p.24
- Change the file name → p.24
- Delete → p.25
- Classify by shot date → p.57
- Search → p.59

Image Editing

- Use automatic adjustment → p.27
- Adjust brightness/darkness → p.29
- Make colors more vivid → p.29
- Trim parts of an image → p.29
- Specify an aspect ratio that matches the size of the paper on which an image is to be printed → p.29
- Make an image sharp → p.31
- Insert text → p.30
- Correct red-eye → p.32
- Merge → p.63
- Edit movies → p.34
- Cut a favorite scene from a movie → p.38
- Extract still images from movies → p.54
- Edit Video Snapshot Albums → p.40

Utilizing Images

- Attach an image to an e-mail → p.44
- Make into computer wallpaper → p.45
- Make into a computer screen saver → p.46
- Upload a movie to YouTube → p.70
- Use CANON IMAGE GATEWAY → p.71

Converting Images

- Change the size → p.52
- Convert to a different type → p.52

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

Contents
Lookup

Index



Index

A

Adding Sound to Images.....	64
Adjust JPEG Images.....	27, 60
Adjusting (JPEG or TIFF Image).....	27, 60
Adjusting in RGB.....	60
Adjusting the Brightness.....	29
Adjusting the Brightness Level.....	61
Adjusting the Saturation.....	29
Adjusting the Sharpness.....	31
Adjusting the Tone Curve.....	61
Automatic Adjustment.....	27
Correcting Red-eye.....	32
Adjusting the Brightness.....	29
Adjusting the Brightness Level.....	61
Adjusting the Saturation.....	29
Adjusting the Sharpness.....	31
Adjusting the Tone Curve.....	61
Attach an Image to an E-mail.....	44
Automatic Adjustment.....	27

B

Batch Change the File Name of Images.....	57
Browser Window.....	→Main Window
Browser Window Settings (Preferences).....	66

C

CANON iIMAGE GATEWAY.....	71
Displaying an Album.....	72
Membership Registration.....	71
Uploading Images in an Album.....	72
Change File Name.....	24
Change Folder Name.....	24
Change the Display Magnification.....	11
Changing the Size and Type of an Image and Saving.....	52
Checking the Shooting Information.....	52
Classifying the Images by Shot Date.....	57
Color Management.....	66
Compare Multiple Images.....	51

Confirmation Dialog Box Settings (Preferences).....	67
Correcting Red-eye.....	32
Creating a Folder.....	22
Cutting a Movie.....	38

D

Delete.....	
Delete Folders.....	25
Delete Images.....	25
Delete the Software.....	75
Delete Folders.....	25
Delete Images.....	25
Delete the Software (Uninstalling).....	75
Deleting the IB (Uninstalling).....	75
Displaying Images Shot with Adobe RGB.....	74
Downloading an Image to Your Computer.....	7
Downloading Images from a Camera.....	7
Downloading Images from a Card Reader.....	8
Downloading Images.....	7
Downloading Images from a Card Reader.....	8

E

Editing.....	→Adjusting
Editing Movies.....	34
Enlarge Images.....	11, 19
Entering Comments.....	56
Exporting Shooting Information.....	53
Extracting Still Images from a Movie.....	54

F

Favorite Folders.....	26
Full View Display.....	12

I

Index Printing.....	48
Insert Text.....	30
Inserting Text into Images.....	30

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

Contents
Lookup

Index



K	
Keywords Settings	56
L	
Layout Print Settings (Preferences)	68
Layout Printing	49
List Mode (Main Window)	10, 78
M	
Main Window (Browser Window)	7, 77, 78
Merging Panorama Images.....	63
Move or Copy Folders.....	24
Move or Copy Images.....	23
N	
Navigator Window.....	19
O	
Operating with EOS Utility	7
P	
Photo Print Settings (Preferences)	68
Photo Printing	15
Playing a Movie.....	13
Playing Back Sound.....	64
Preferences.....	66
Browser Window Settings	66
Confirmation Dialog Box Settings.....	67
Layout Print Settings	68
Photo Print Settings.....	68
Processing When Rotating Settings.....	68
Register Application Settings	68
Viewer Window Settings.....	67
Preview Mode (Main Window)	9, 22, 77
Printing	
Index Printing	48
Layout Printing	49
Photo Printing.....	15
Processing When Rotating Settings (Preferences).....	68

Q	
Quitting IB.....	16
R	
Ratings	19
Register Application Settings (Preferences).....	68
Rewriting Images to a Memory Card.....	14
S	
Searching for Images	59
Setting a Screen Saver.....	46
Setting a Wallpaper	45
Setting an Image as a Screen Saver.....	46
Setting an Image as Wallpaper	45
Slide Show.....	42
Starting up IB.....	7
Supported Images	76
Synchronize Display	51
System Requirements	76
T	
Thumbnail Display (Main Window)	10
Transfer Images to other Image Editing Software	62
Trimming.....	29
Trimming an Image.....	29
U	
Using the Video Snapshot Album Window	39
Editing Video Snapshot Albums.....	40
Playing Video Snapshot Albums.....	39
Saving Edited Video Snapshot Albums	42

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

 
Preferences

Using the
Internet

Reference

Contents
Lookup

Index

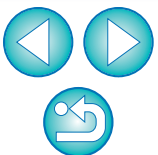

V

View an Image	9
Viewer Window	12, 18, 79
Viewer Window Settings (Preferences)	67

About This Instruction Manual

- It is prohibited to reproduce, in whole or part, the contents of this Instruction Manual without permission.
- Canon may change without notice the software specifications and contents of this Instruction Manual.
- The software screens and displays printed in this Instruction Manual may differ slightly from the actual software.
- The content of this Instruction Manual has been reviewed thoroughly. However, if you should notice any errors or omissions, please contact a Canon Service Center.
- Please note that irrespective of the above-mentioned, Canon does not take responsibility for the outcome of the operation of the software.

Trademark Acknowledgments

- Macintosh is a trademark of Apple Inc., registered in the United States and other countries.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.

Introduction

Table of
Contents

Basic
Operation

Advanced
Operation

High-Level
Functions

Preferences

Using the
Internet

Reference

Contents
Lookup

Index

