



Easy Operation Guide

imageRUNNER
1750i / 1740i / 1730i / 1730

Keep this guide near the machine for future reference.


CONTENTS

Preface	
Manuals for the Machine	01
What You Can Do with This Machine	03
Control Panel.....	05
Copying Function	
Making a Copy	07
Basic Copying Functions	09
Advanced Copying Functions	13
Printing Function	
Printing from a Computer.....	17
Specifying the Printer Driver Settings.....	19
Printing from a USB Memory Media Device (Media Print)	21
Sending/Facsimile Functions	
Sending a Document (E-mail, I-fax, File Server, and USB Memory Media Device)	23
Sending a Fax	25
Send and Fax Functions	27
Scanning Function	
Scanning from a Computer (Remote Scan)	37
Other Functions & Troubleshooting	
Operating the Machine from a Computer (Remote UI).....	39
Customizing the Machine Settings	41
Troubleshooting	43

Manuals for the Machine

The manuals included with the machine and optional equipment are listed below. Please read them as necessary to make full use of the machine.


Paper Manual



Easy Operation Guide

Basic Operations and Function Overview


Read this manual to quickly learn the basic operations and functionality of the machine. Always keep this manual near the machine for future reference.



Starter Guide

Installation of the Machine

Read this manual to learn how to install the machine.

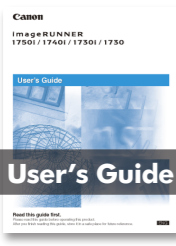


User's Guide

Startup and Safe Use of the Machine

Read this manual first to learn important information regarding safe use of the machine. This manual also contains the setup flow describing the required settings to make the machine fully functional.

- ▶ Safety Instructions
- ▶ Routine Maintenance
- ▶ Setup Flow
- ▶ Troubleshooting

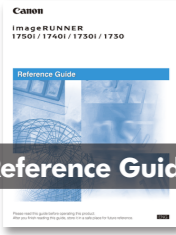


Reference Guide

General Instructions on How to Use the Machine

Read this manual to learn the basic operations common to the functions of the machine. Also read to learn routine maintenance and how to troubleshoot the problems.

- ▶ Operating the Touch Panel Display
- ▶ Refilling/Replacing Consumables
- ▶ Specifying the Machine's Basic Settings
- ▶ Clearing Paper Jams
- ▶ Optional Equipment
- ▶ Identifying and Isolating Problems




System Settings Guide

Network Connectivity and Security Management

Read this manual to learn how to connect the machine to a network and perform security management.

- ▶ Instructions for the System Administrator
- ▶ Security Management
- ▶ Specifying the Network Settings
- ▶ Troubleshooting

PDF on User Manual CD-ROM




Copying Guide

Copying a Document

Read this manual to learn how to copy originals.

- ▶ Basic Copying Functions
- ▶ Managing Copy Jobs
- ▶ Advanced Copying Functions
- ▶ Customizing the Copy Settings




Printer Guide

Using the Machine as a Printer

Read this manual to learn how to use the machine as a printer.

- ▶ Basic Printing Functions
- ▶ Customizing the Printer Settings
- ▶ Managing Print Jobs
- ▶ Troubleshooting

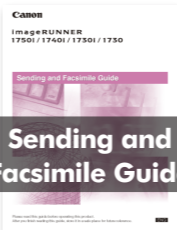


Sending and Facsimile Guide

Sending a Document

Read this manual to learn how to send scanned documents by e-mail, I-fax, and fax, or to a file server and USB memory media device.

- ▶ Basic Send and Fax Functions
- ▶ Editing Address Book
- ▶ Receiving Documents
- ▶ Customizing the Send and Fax Settings
- ▶ Managing Send/Receive Jobs
- ▶ Troubleshooting

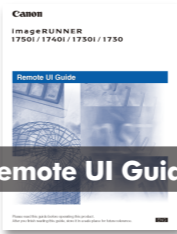

Remote UI Guide

Operating the Machine from a Computer

Read this manual to learn how to access the machine from a computer by using the Remote UI (Remote User Interface).

- ▶ Starting the Remote UI
- ▶ Managing Department/User IDs
- ▶ Managing Jobs
- ▶ Customizing the Machine Settings

Windows Printer Driver Guide

Mac Printer Driver Guide

Printing from a Computer

Read this manual to learn how to use the printer driver that enables you to print documents from a computer.

Network ScanGear Guide

Using the Machine as a Scanner

Read this manual to learn how to use the Color Network ScanGear that enables you to scan originals and load the scanned images to a computer.

Windows Fax Driver Guide

Using the Fax Function on a Computer

Read this manual to learn how to use the fax driver that enables you to send faxes from a computer.

Included with the Barcode Printing Kit-B1

Bar Code Printing Guide

Printing a Bar Code

Read this manual to learn how to print bar codes from a computer.


What You Can Do with This Machine

The imageRUNNER 1750i/1740i/1730i/1730 incorporates a rich array of input and output features that can greatly enhance your efficiency. Equipped with features that meet the needs of document work in a digitized office, the imageRUNNER 1750i/1740i/1730i/1730 represents the ultimate in digital multitasking machines.

Preface


- 01 Manuals for the Machine
- 03 What You Can Do with This Machine
- 05 Control Panel

Copying Function

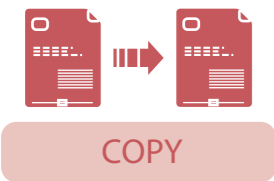


- 07 Making a Copy
- 09 Basic Copying Functions
 - Making Enlarged/Reduced Copies
 - Adjusting the Density of Copied Images
- 10 Optimizing the Copy Output Quality
- Using Paper Not Loaded in the Drawers
- 11 Copying on Both Sides of the Paper
- Stapling Collated Copies
- 12 Making Copies in Sets Arranged in Page Order
- Making Copies Grouped by Page
- 13 Advanced Copying Functions
 - Copying Multiple Originals on One Sheet of Paper
- 14 Erasing Dark Borders When Copying Bound Originals
- 15 Adjusting the Sharpness of Copied Images
- Copying ID Cards
- 16 Storing and Recalling Frequently Used Settings

Printing Function

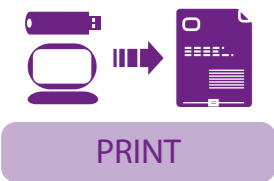

- 17 Printing from a Computer
- 19 Specifying the Printer Driver Settings
 - Configuring the Page Settings
 - Selecting the Finishing Style
- 20 Selecting the Paper Source
- Selecting the Print Output Quality
- 21 Printing from a USB Memory Media Device (Media Print)

Sending/Facsimile Functions

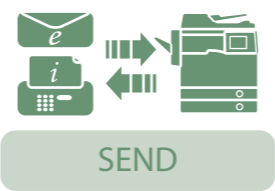


† Optional for the imageRUNNER 1730



† Optional


- 23 Sending a Document (E-mail, I-fax, File Server, and USB Memory Media Device)
- 25 Sending a Fax
- 27 Send and Fax Functions
 - Specifying Destinations Easily and Quickly
- 28 Specifying the File Format for Sending Documents
- 29 Printing the Sender Information When Sending I-Faxes/Faxes
- 30 Setting the Send Screen to Suit Your Needs
- Automatically Forwarding Received Documents
- 31 Scanning Documents Containing Photos Clearly
- 32 Specifying the Scanning Area to Cover the Original Size
- Scanning Fine Text and Images Clearly
- 33 Scanning Two-Sided Originals
- 34 Adjusting the Background Color of Sent Documents
- 35 Adding the Reply Destination to Sent Documents
- 36 Specifying the Time to Start Sending
- Recalling the Most Recent Settings

Scanning Function

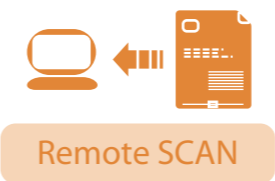

- 37 Scanning from a Computer (Remote Scan)

Other Functions & Troubleshooting

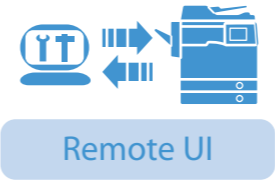

- 39 Operating the Machine from a Computer (Remote UI)
 - What is the Remote UI?
- 40 Accessing the Remote UI
- 41 Customizing the Machine Settings
- 43 Troubleshooting

SECURITY


For security-related functions and settings, see the System Settings Guide on the User Manual CD-ROM.

NETWORK


Send, Remote Scan, and Remote UI are the network-based functions.

Control Panel

The control panel consists of the touch panel display, physical keys for various operations, numeric keys, and indicators.

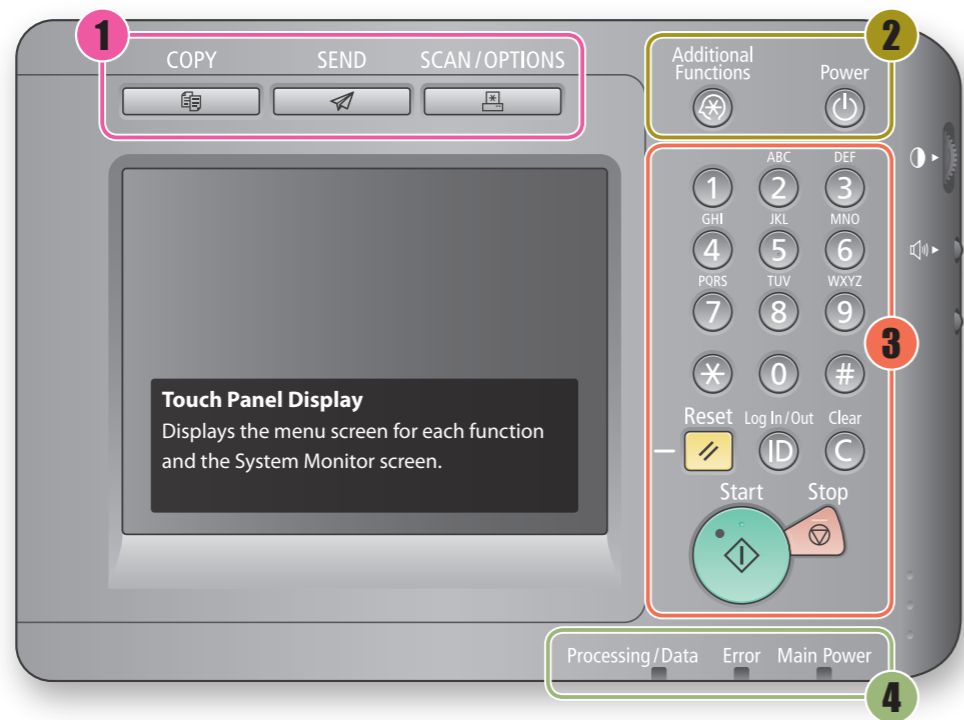

Right Side

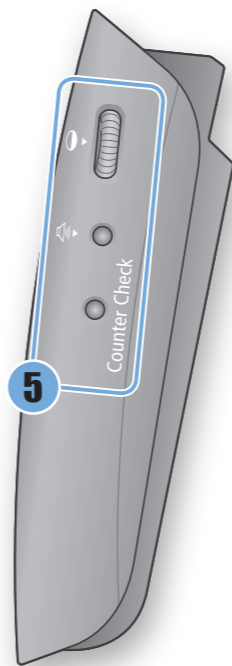

The angle of the control panel is adjustable as shown.

- 1

COPY key

Press to switch to the top screen of the Copy function.

SEND key

Press to switch to the top screen of the Send and Fax functions.

SCAN/OPTIONS key

Press to use functions such as Remote Scan, Media Print, Secure Printing, etc.

- 2

Additional Functions key

Press to access the Additional Functions menu.

Control panel power switch (Sub power supply)

Press to clear or enter the Sleep mode.

If no messages or menu are displayed on the touch panel display with the Main Power Indicator lighting up, the machine is in the Sleep mode.

- 3

0-9 Numeric keys

Press to enter numbers.

Reset key

Press to cancel the specified settings and return to the top screen.

ID (Log In/Out) key

Press to log in to/out of the machine, such as when it is managed with Department ID/User ID Management.

Clear key

Press to clear entered numbers or characters.

Start key

Press to start an operation such as copying and scanning.

Stop key

Press to stop a job in progress such as copying and scanning.

- 4

Processing/Data indicator

Flashes or lights up green when the machine is performing operations.

Error indicator

Flashes or lights up red if an error occurs in the machine.

Main Power indicator

Lights up green when the main power is turned ON.

- 5

Display Contrast dial


Turn to adjust the brightness of the touch panel display.

Volume Control key

Press to display the screen for the machine's audible tone settings.

Counter Check key

Press to display the Counter Check screen.

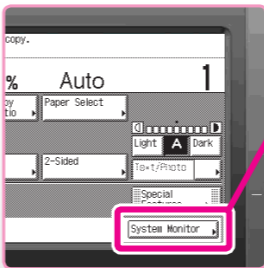

System Monitor


Viewing and Canceling Jobs

Checking the Machine Status

Press [System Monitor] to view the job status or cancel jobs. You can also check the machine status such as the amount of remaining paper.


Making a Copy

This section describes the basic operation procedure for copying originals.

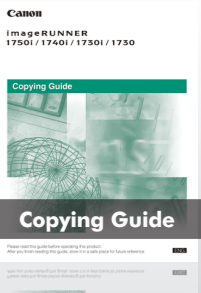

1

Display the Copy Screen

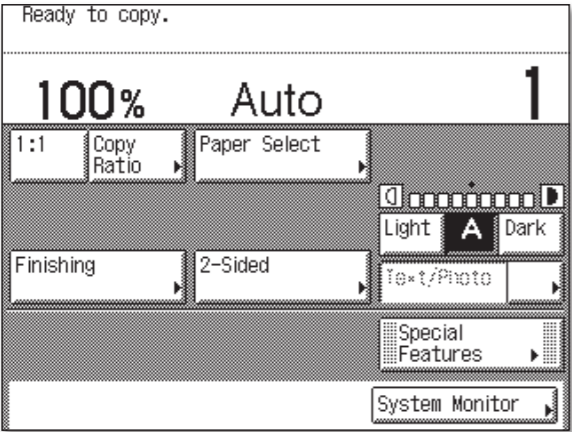


Press (COPY) to display the top screen of the Copy function.

▶ If the machine is in the Sleep mode, press (Power).

2

Place Your Originals

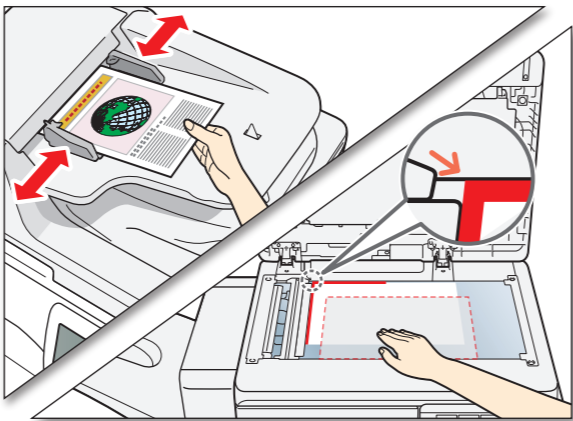


Place your originals in the feeder or on the platen glass.

▶ Lower the feeder after placing your originals on the platen glass.


3

Specify the Number of Copies

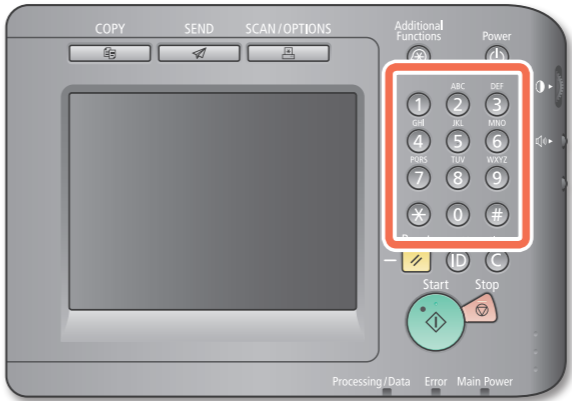

Enter the desired number of copies (1 to 999) using – (numeric keys).

- ▶ To change the value you have entered, press (Clear) → enter the correct value.
- ▶ The number of copies you specify is displayed on the upper right side of the touch panel display.

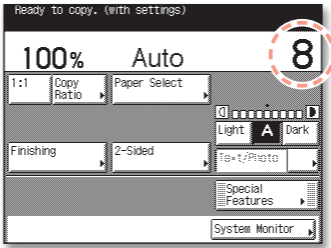


4

Start Copying



Press (Start).




- ▶ When the screen below appears, select the original size → press [OK] → (Start).

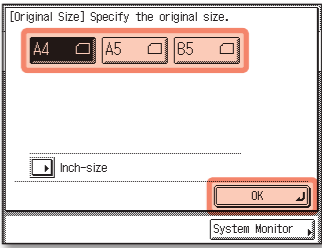

- ▶ To cancel copying, press (Stop). You can also cancel the current copy job by pressing [Cancel] on the screen indicating the copy processing status.*

* The canceling procedure differs depending on the job status. For more information, see Chapter 1, "Introduction to Copy Function," in the Copying Guide.

How to Log in to the Machine

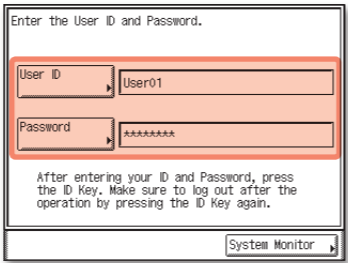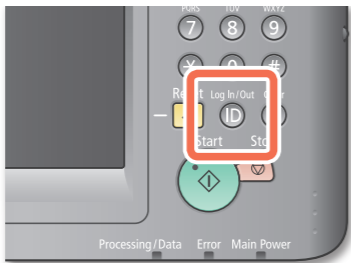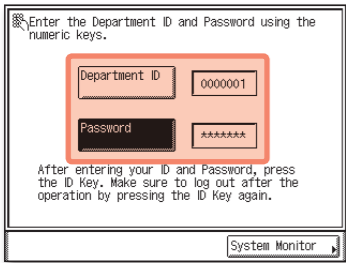


- ▶ Enter your Department ID and password if the screen prompts you to do so → press (Log In/Out).
- ▶ Enter your User ID and password if the screen prompts you to do so → press (Log In/Out).
- ▶ Insert the control card if the screen prompts you to do so.
- ▶ When you have finished the operations, press (Log In/Out) or remove the control card to log out.

For more information, see Chapter 2, "Basic Operations," in the Reference Guide.

Basic Copying Functions

This section describes the operation procedures for the Copy functions you can access from the top screen of the Copy function.

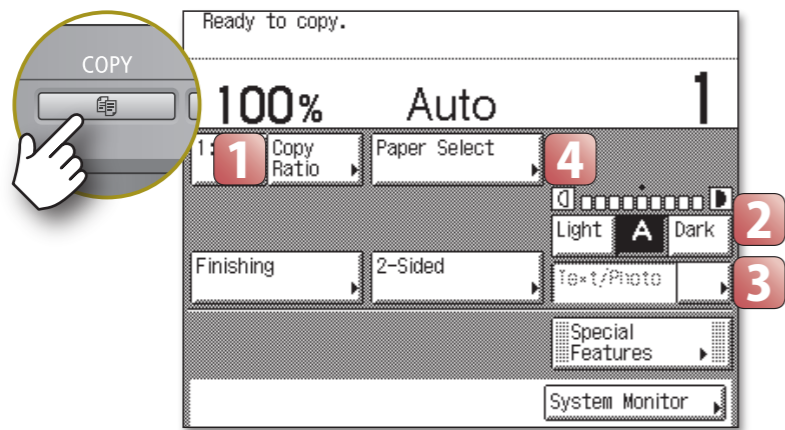

Making Enlarged/Reduced Copies



You can make an enlarged or reduced copy from the original of a standard paper size, such as A5 original to A4 or A4 original to A5. The optimal copy ratio is automatically set by selecting the desired paper size from the paper size keys.


You can also set the copy ratio from 25% to 400% in 1% increments on the Copy Ratio screen.

Chapter 2 ♦ Copying Guide

1 Copy Ratio Press [Copy Ratio] → select or set the desired ratio → press [Done] as indicated on the touch panel display.

You can automatically set the copy ratio by pressing [Auto] on the Copy Ratio screen.

Adjusting the Density of Copied Images

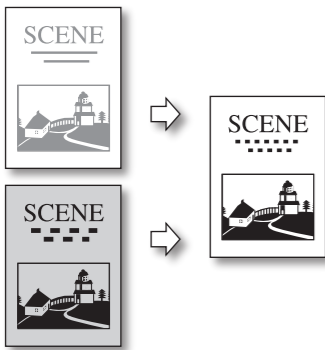

You can optimize the copy density level for the original, automatically or manually.

Chapter 2 ♦ Copying Guide

2 Light A Dark Press [Light] to make the density lighter or press [Dark] to darken to the desired level. Press [A] (Auto) to automatically set the density level.

Optimizing the Copy Output Quality




You can set the machine to optimize the copy output quality by selecting the type of your original. If your original contains both text and photo images, select [Text/Photo].

Chapter 2 ♦ Copying Guide


3 Text/Photo Press the original type drop-down list box → select the original type from [Text], [Text/Photo], or [Photo].

Using Paper Not Loaded in the Drawers

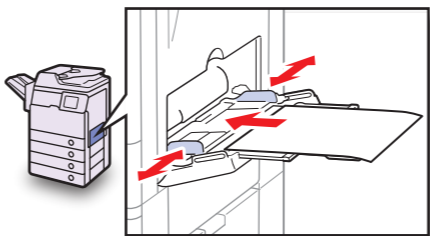

You can use the stack bypass as a temporary paper source for the size of the paper that is not loaded in any paper drawers.

Chapter 2 ♦ Copying Guide

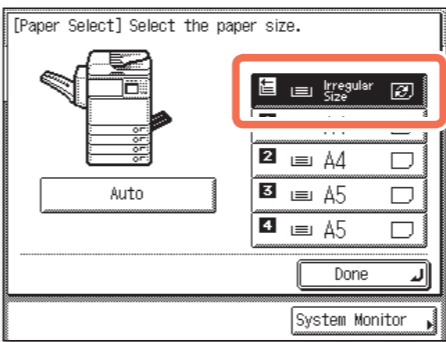

To specify the paper size and type:

Load the paper in the stack bypass as illustrated → select the paper size → press [Next] → select the paper type → press [OK] → [Done] as indicated on the touch panel display.*

The stack bypass is now chosen as the paper source.

To manually select the stack bypass as the paper source after the paper is loaded and its size and type are specified:

4 Paper Select Press [Paper Select].

Select the key for the stack bypass as shown left → press [Done].**

* Disable the Stack Bypass Standard Settings if the screens for specifying the paper size and type are not displayed even when you load paper in the stack bypass. See Chapter 3, "Configuring the Machine's Basic Settings," in the Reference Guide.
** The specified paper size and type are displayed on the key.


Stack Bypass—A Multi-purpose Paper Tray

● The stack bypass is a versatile paper source that enables you to print on special sizes and types of paper.


- ▶ You can use it as a temporary paper source, as described above.
- ▶ You can use special sizes and types of paper that are not available in the paper drawers:
 - Non-standard size paper
 - Special types of paper such as thicker paper or labels

● You can specify the default paper size/type for the stack bypass.

Specifying the paper size and type is required when you use the stack bypass. To skip this procedure, you can set and store the default paper size and type by specifying Stack Bypass Standard Settings from the Additional Functions menu. For more information, see Chapter 3, "Configuring the Machine's Basic Settings," in the Reference Guide.

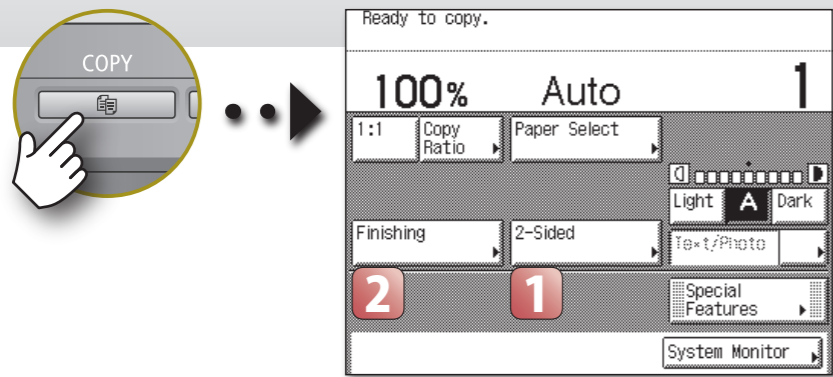

Copying on Both Sides of the Paper

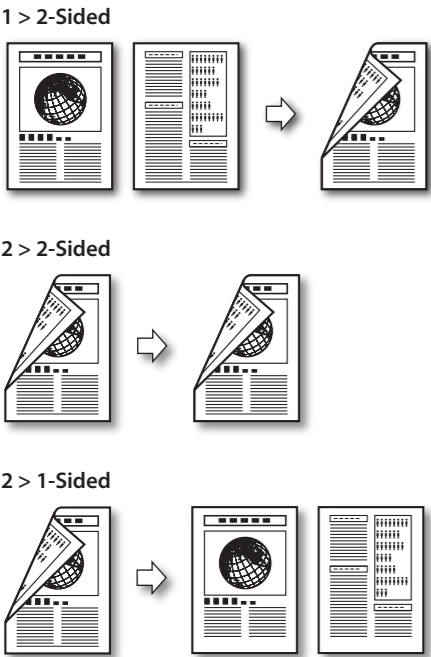


You can copy two-sided originals or multiple one-sided originals on both sides of the paper.

Chapter 2 ♦ Copying Guide

1 2-Sided Press [2-Sided] → select the 2-Sided mode you want to use → press [OK] as indicated on the touch panel display.

Stapling Collated Copies

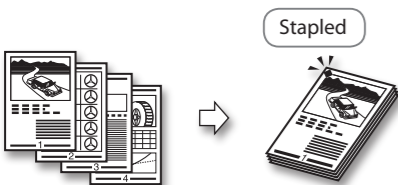


You can set the machine to staple the collated copies.

† The Staple mode is available only when the optional Staple Finisher-H1 is attached to the machine.

Chapter 2 ♦ Copying Guide

2 Finishing Press [Finishing] → [Staple] → [Next] → select the orientation of the originals → press [OK] as indicated on the touch panel display.

Making Copies in Sets Arranged in Page Order

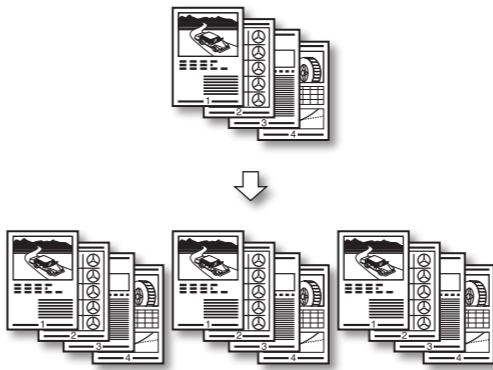


You can set the machine to output the copies in sets arranged in page order.

Chapter 2 ♦ Copying Guide

2 Finishing Press [Finishing] → [Collate] → [OK] as indicated on the touch panel display.

Making Copies Grouped by Page

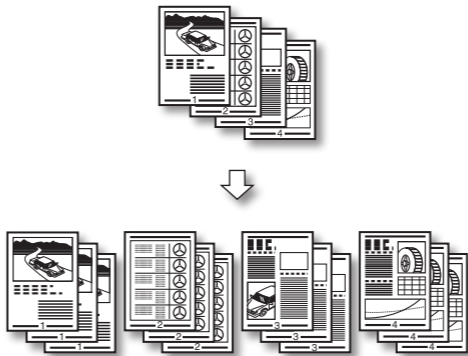


You can set the machine to output the copies in groups of individual pages.

Chapter 2 ♦ Copying Guide


2 Finishing Press [Finishing] → [Group] → [OK] as indicated on the touch panel display.

Offset Mode

When performing Collate or Group copying, you can use the Offset mode as the output option. You can combine the Offset mode with the Collate or Group modes, such as Offset + Collate mode. (Available when the optional Staple Finisher-H1 is attached to the machine.)

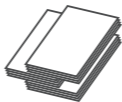


When Offset is selected, each printout group is output with staggered and alternating layers.

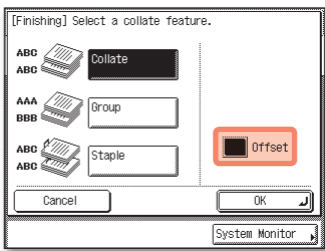


Press [Offset] → [OK] to use the Offset mode.

Advanced Copying Functions

This section describes the operation procedures for the Copy modes you can access from the [Special Features] key on the top screen of the Copy function.

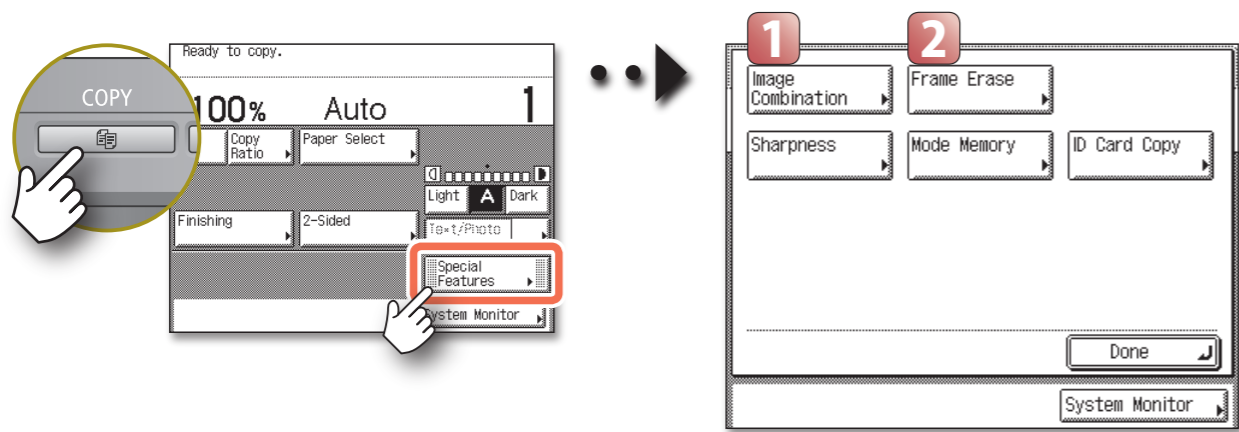

Copying Multiple Originals on One Sheet of Paper

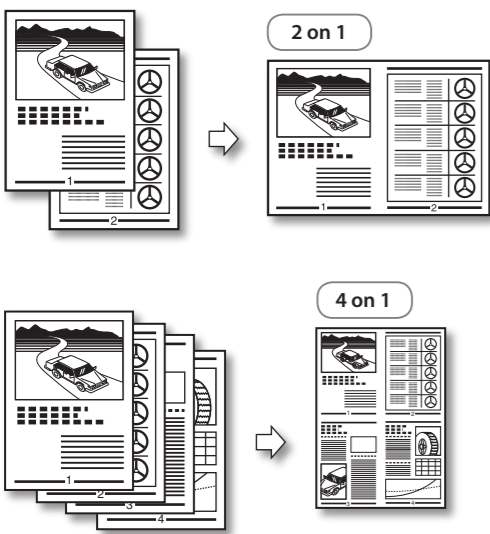


You can reduce two or four original images to fit on one sheet of paper.

Chapter 3 ♦ Copying Guide

- 1** Image Combination
- Press [Image Combination] → select the original size → press [Next] → select the combination mode → press [Next] → select the paper source → press [OK] → [Done] as indicated on the touch panel display.

Erasing Dark Borders When Copying Bound Originals

Original Frame Erase mode:
Erases shadows on the edges of the copy.

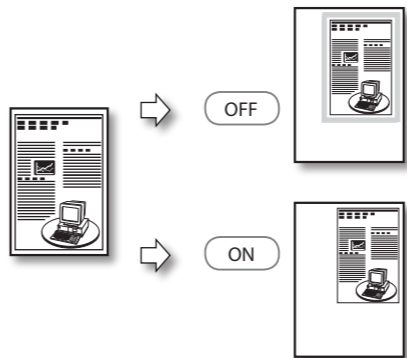


You can erase shadows and lines that may appear on the copy. Select the erase mode depending on the type or condition of the original.

Chapter 3 ♦ Copying Guide


- 2** Frame Erase
- Press [Frame Erase] → select the mode you want to use → press [Next] → select the original size → press [Next] → specify the erase width(s) → press [OK] → [Done] as indicated on the touch panel display.


† For the Binding Erase mode, select the side of the original on which to erase the shadow, instead of selecting the original size.

Book Frame Erase mode:
Erases shadows on the edges and in the center of the copy of the bound original.

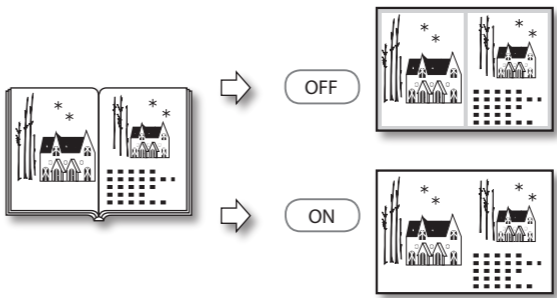


Binding Erase mode:
Erases shadows of punch holes.

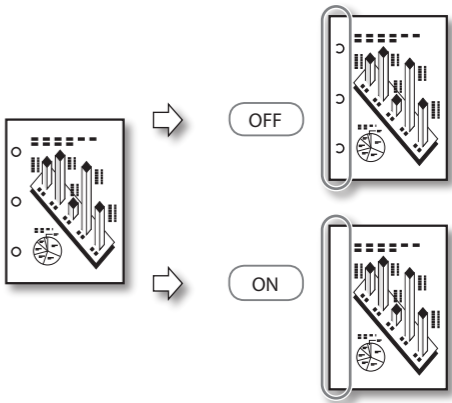

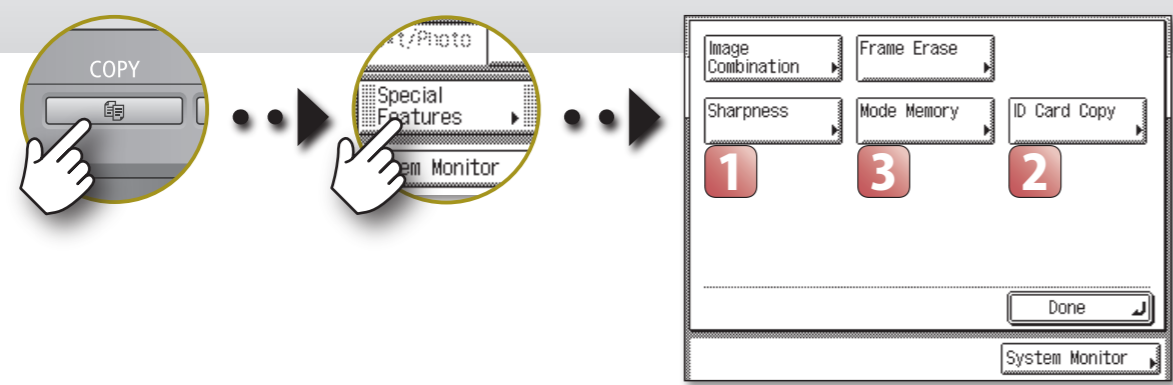

Adjusting the Sharpness of Copied Images

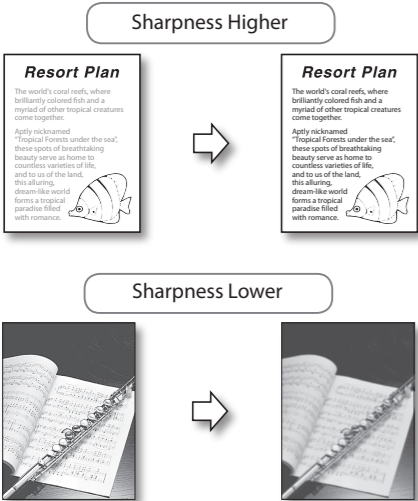


You can adjust the sharpness level. To make the text or lines sharper, increase the sharpness level. To make the halftone images softer, decrease the sharpness level.

Chapter 3 ♦ Copying Guide

1 **Sharpness** Press [Sharpness] → [Low] or [High] to adjust the sharpness level → [OK] → [Done] as indicated on the touch panel display.

Copying ID Cards

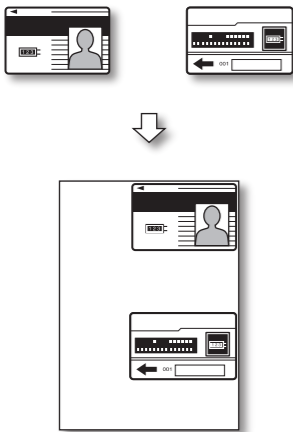


You can copy both sides of an ID card on one side of paper at actual size.

Chapter 3 ♦ Copying Guide

2 **ID Card Copy** Press [ID Card Copy] → [Next] → select the paper source → press [OK] → [Done] as indicated on the touch panel display.

Storing and Recalling Frequently Used Settings

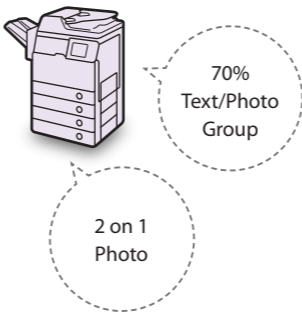

You can store the possible combinations of the copy settings to recall when you make a copy with the setting combination.

Chapter 3 ♦ Copying Guide

3 **Mode Memory**

To store the setting combination:
First make a combination of the copy settings you want to store.
Press [Mode Memory] → [Store/Erase] → select [Store] → select the memory key which you want to store the setting in → press [Next]. Confirm the setting and press [Yes] → [OK] → [Done] as indicated on the touch panel display.

To recall the setting combination from the memory:
Press [Mode Memory] → select the memory key containing the settings you want to recall → press [OK] → [Done].

Printing from a Computer

This section describes the basic operation procedure for printing a document from a computer.

† The operation procedure in this section is for a Windows computer. For instructions on how to print from a Macintosh computer, see the Mac Printer Driver Guide.

‡ The printer driver screens shown below may differ from the ones displayed on your computer, depending on the machine and optional equipment, type and version of printer driver, or operating system you are using.


PDF on User Manual CD-ROM

Windows Printer Driver Guide

Mac Printer Driver Guide

1


Open the [Print] Dialog Box

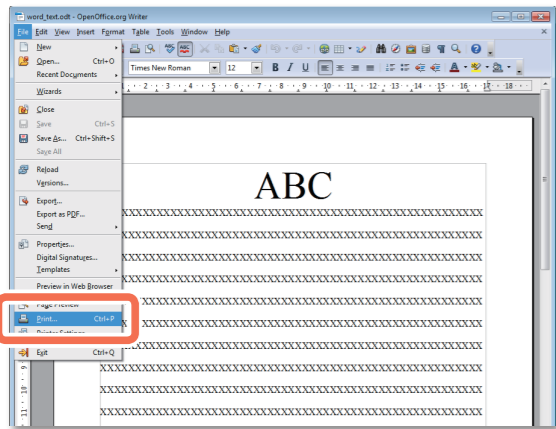

In the application you open the document to print from, click the [File] menu → select [Print].

2

Select the Printer

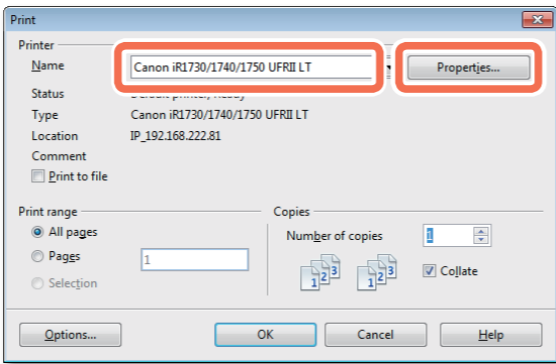

In the [Print] dialog box, select your printer → click [Properties]*.


▶ On this screen, you can specify the number of prints, and pages to print. If you need no detailed settings, click [OK]** to start printing.

* The name of the button to display the printer setting sheet shown on step 3 may vary depending on the application you are using.
** The name of the button to start printing may vary depending on the application you are using.

† The dialog boxes for print settings shown in steps 2 and 4 may vary depending on the application you are using.

3

Specify the Print Settings

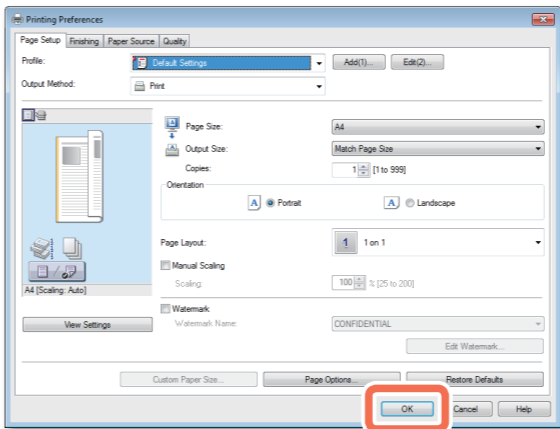


In each sheet of the printer setting dialog box, specify the print settings that suit your preferences → click [OK].

For more information on the print settings, see p. 19 and p. 20.

4

Start Printing

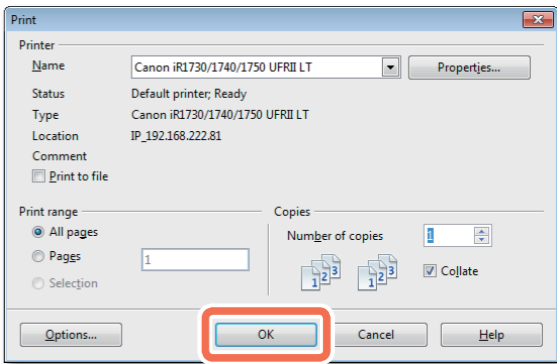


Specify the number of prints and pages to print as necessary → click [OK].*

▶ To cancel printing on your computer, click [Cancel] in the dialog box that appears when the print data is being processed.
▶ To cancel printing on the machine's control panel, use the System Monitor screen displayed by pressing (Stop) or [System Monitor]**.

* The name of the button to start printing may vary depending on the application you are using.
** The canceling procedure differs depending on the job status. For more information, see Chapter 3, "Managing Print Jobs," in the Printer Guide.

Printer Driver

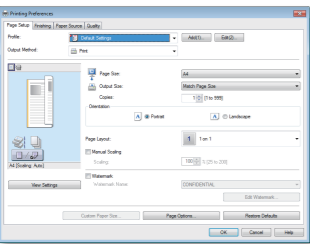

The printer driver installed on your computer enables the machine to print the documents from the applications on your computer. The printer driver also enables you to specify the various print settings such as paper size and finishing style.

▶ For more information on the printer driver settings, see p. 19 and p. 20.

Secure Printing


On the printer driver screen, you can select Secure Printing as the output method when printing your documents. Secure Printing enables you to hold your print jobs until the appropriate password assigned on the printer driver is entered at the machine. This way, confidential documents are not left lying on the machine's output tray.

▶ For more information on Secure Printing, see "Printing from a Computer," in Chapter 1 of the Printer Guide.

Specifying the Printer Driver Settings


This section describes the instructions on how to specify printer driver settings, such as the finishing style and print quality.

† The screen shots and the descriptions are for the Windows printer driver. For instructions on how to configure the settings on the Macintosh printer driver, see the Mac Printer Driver Guide or the help on the printer driver.
‡ The printer driver screens shown below may differ from the ones displayed on your computer, depending on the machine and optional equipment, type and version of printer driver, or operating system you are using.

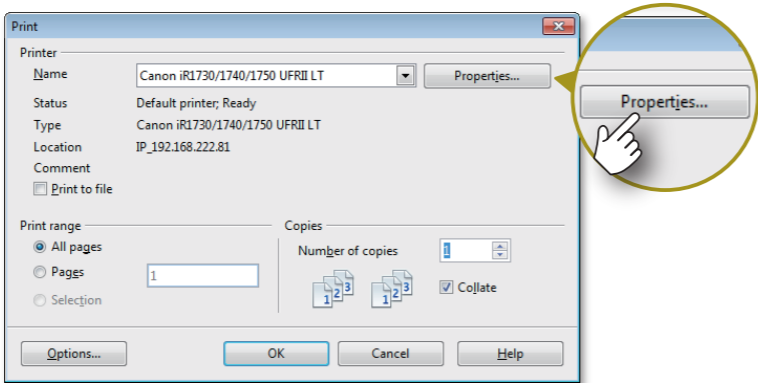

Configuring the Page Settings

On the [Page Setup] sheet, you can specify the page settings.

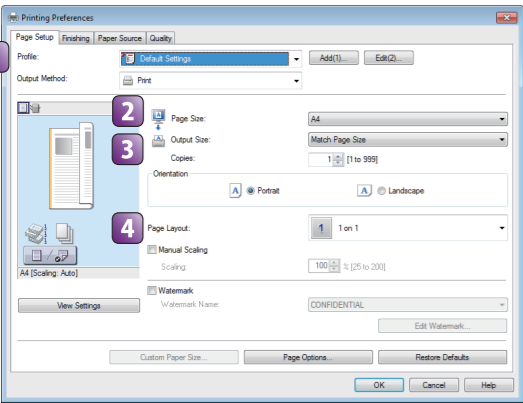


- 1 Profile**
Enables you to set the printer driver simply by selecting it from the list. Printer driver settings for different purposes are registered.
- 2 Page Size**
Enables you to select the size of the document you have created in an application.
- 3 Output Size**
Enables you to select the size of the paper to print on.
- 4 Page Layout**
Enables you to print multiple pages onto one sheet of paper, or in other multiple layouts.

Windows Printer Driver Guide

Selecting the Finishing Style

On the [Finishing] sheet, you can specify the finishing style.

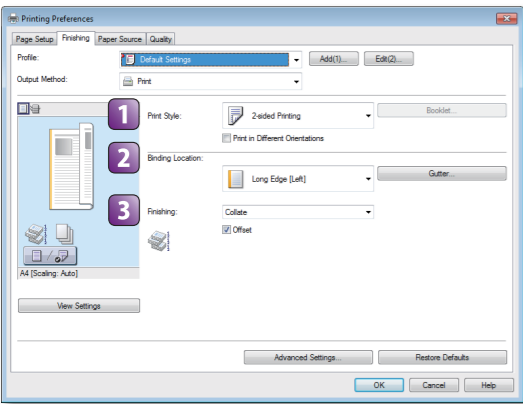


- 1 Print Style**
Enables you to select the print style such as 1-sided or 2-sided Printing.
- 2 Binding Location**
Enables you to select the binding location such as Long Edge (Left) or Short Edge (Top).
- 3 Finishing**
Enables you to select the finishing style such as Collate or Group.

Windows Printer Driver Guide

Selecting the Paper Source

On the [Paper Source] sheet, you can specify the paper source and type.

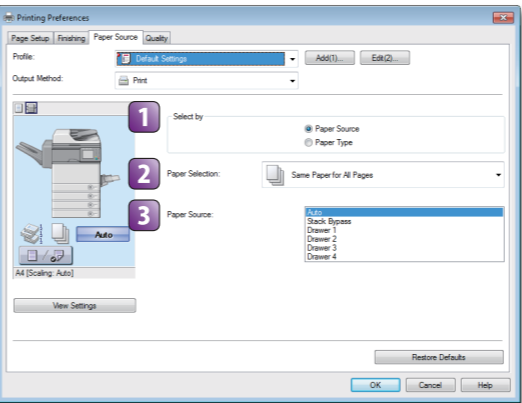


- 1 Select by**
Enables you to select the paper supply method from Paper Source or Paper Type.
- 2 Paper Selection**
Enables you to select either you use the same paper source or type for all pages or use a different paper source or type for the specified pages. This setting is useful, for example, when you want to print the covers of your document on a different kind of paper.
- 3 Paper Source/Paper Type***
Enables you to select a desired paper source or type when making prints.

* When you select [Paper Type] on <Select by>, [Paper Type] is displayed instead of [Paper Source], allowing you to select the paper type to print your document on.

Windows Printer Driver Guide

Selecting the Print Output Quality

On the [Quality] sheet, you can specify the print output quality to match the purpose of the printing.

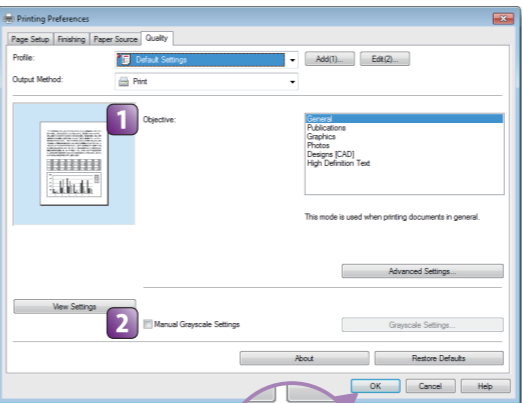


- 1 Objective**
Enables you to print a document with the print settings that best suit the content of the document. When you select an item, a comment is displayed below the list.
- 2 Manual Grayscale Settings**
Enables you to manually specify the settings such as brightness or contrast for your grayscale prints.

Windows Printer Driver Guide

On each sheet, click [OK] to return to the [Print] window after you have specified the settings.

[Help] Button

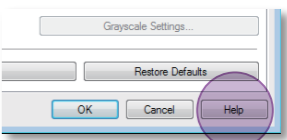

Click [Help] on each sheet to display the further information about the print settings.

Printing from a USB Memory Media Device

(Media Print)


This section describes the basic operation procedure for printing JPEG or TIFF files stored in the USB memory media device directly connected to the machine.

† The Media Print function is available only when it is enabled by the System Settings of the machine. See Chapter 7, "Other System Settings," in the System Settings Guide.



1

Prepare

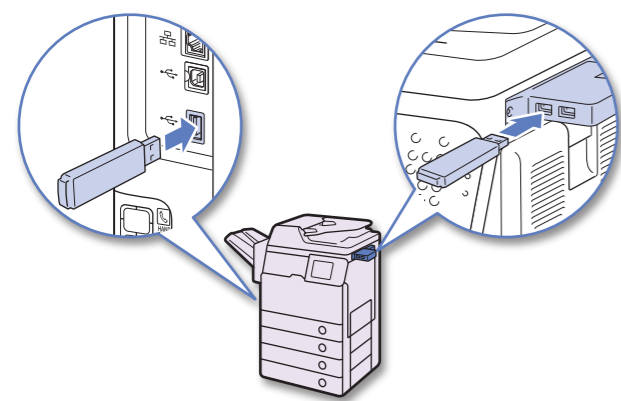

Insert the USB memory media device containing the file you want to print into the USB port on the left or right side of the machine.*


- ▶ When a screen indicating the USB memory media device has been inserted appears, press [Done] and proceed to the next step.
- ▶ If the machine is in the Sleep mode, press (Power).
- ▶ Enter your ID and password or insert the control card if the screen prompts you to do so. For more information on logging in to the machine, see "How to Log in to the Machine," on p. 07.

* The USB ports on the right side of the machine are optional (USB Application 3-Port Interface Kit-B1). The left side USB port is not available when the above option is attached.

† Some USB memory media devices are not compatible with the machine. For more information, see Chapter 2, "Printing from USB Memory Media (Media Print)," in the Printer Guide.

2


Display the Memory Media Print Screen

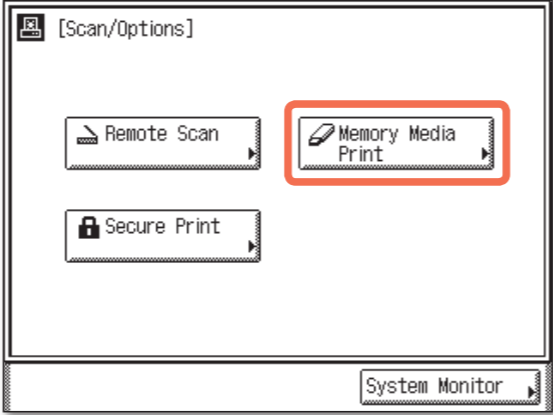

Press (SCAN/OPTIONS) to display the Scan/Options screen → press [Memory Media Print].

3


Select the file to print

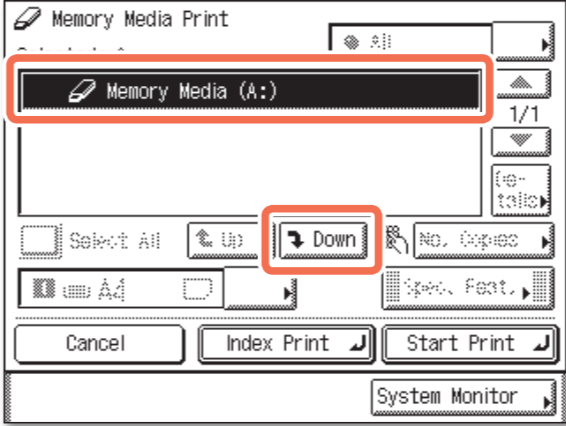

Select the USB memory media device containing the file you want to print → press [Down] to display the files in the media device.

4

Start Printing

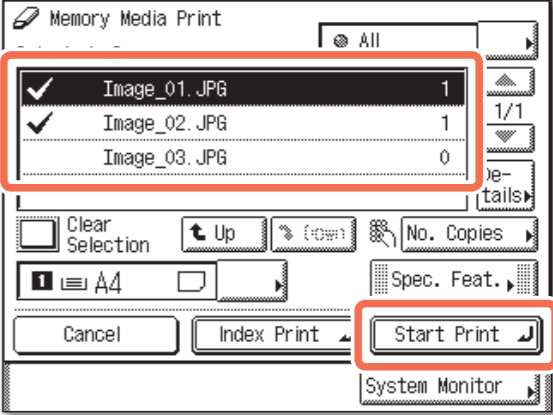


Select the files you want to print → press [Start Print].

- ▶ To select the file in a folder, select the folder → press [Down] to display the files → select the file.
- ▶ To cancel printing, press (Stop). You can also cancel the current print job by pressing [Cancel] on the screen indicating the print processing status.*

* The canceling procedure differs depending on the job status. For more information, see Chapter 3, "Managing Print Jobs," in the Printer Guide.

- ▶ When printing is complete, remove the USB memory media device from the USB port.

Print Setting Options

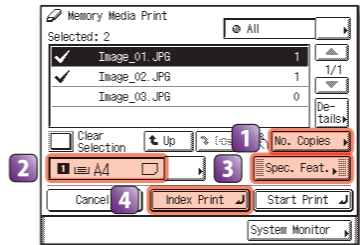

- 1 Press to specify the print quantity.
- 2 Press to select the paper source.
- 3 Press to specify the optional settings for printing JPEG files.
- 4 Press to print the list of the JPEG files stored in the USB memory media device.


Sending a Document

(E-mail, I-fax, File Server, and USB Memory Media Device)

This section describes the basic operation procedure for sending a document.


† To use the Send function with the imageRUNNER 1730, the optional Color Send Kit-Z1 is required.

PDF on User Manual CD-ROM

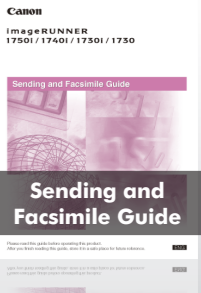


1

Display the Send Screen

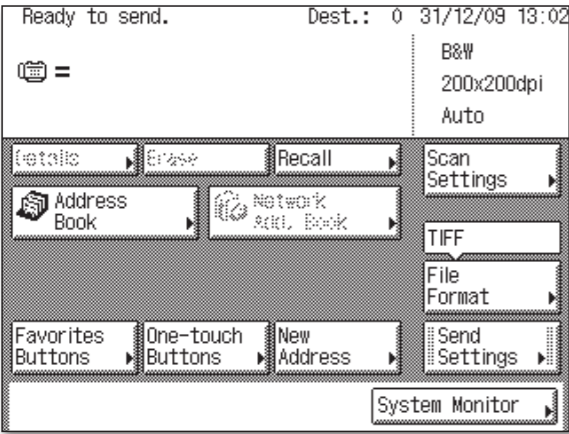


Press (SEND) to display the top screen of the Send and Fax functions.

- ▶ If the machine is in the Sleep mode, press (Power).
- ▶ Enter your ID and password or insert the control card if the screen prompts you to do so. For more information on logging in to the machine, see “How to Log in to the Machine,” on p. 07.
- ▶ If the screen shown below appears, enter your user name and password and specify the login destination → press [Log In].

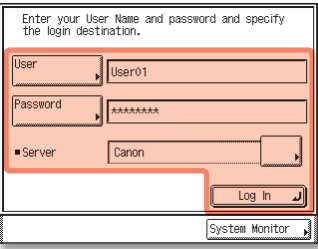

2

Place Your Originals

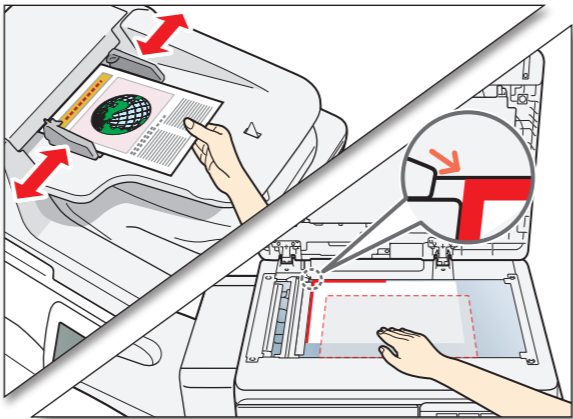


Place your originals in the feeder or on the platen glass.

- ▶ Lower the feeder after placing your originals on the platen glass.

3

Specify the Destination

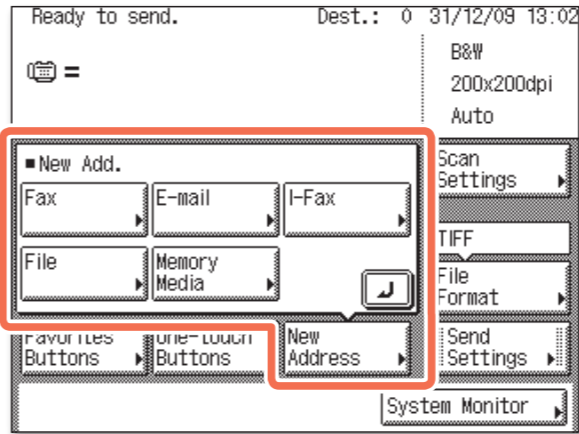

Press [New Address] → select the sending method* → specify the destination.

- ▶ You can also specify the destination by using [Address Book], [Favorites Buttons], or [One-touch Buttons]. These functions save you the effort of entering a destination each time you send documents.

For information on specifying destinations, see p. 27.

* The available sending methods displayed on the screen may vary, depending on the settings.

† Some USB memory media devices are not compatible with the machine. For more information, see Chapter 2, “Sending Documents,” in the Sending and Facsimile Guide.


4

Start Sending



Press (Start).

- ▶ When the screen below appears, select the original size → press [OK].

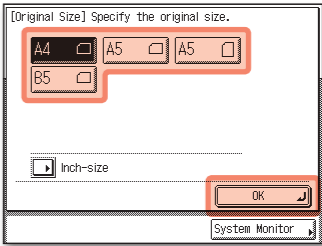

- ▶ Enter your user name and password → press [OK], if the machine prompts you to do so when you press (Start).
- ▶ To cancel scanning originals, press (Stop). You can also cancel scanning originals by pressing [Cancel] on the screen indicating the send processing status.


For instructions on how to cancel sending a document during transmission, see Chapter 2, “Sending Documents,” in the Sending and Facsimile Guide.

Sending a Fax

This section describes the basic operation procedure for sending a fax.


† The Fax function is available only when the optional Super G3 Fax Board-AJ1 is attached to the machine.
‡ Even when the above option is attached, using the Fax function can be restricted by the settings of Authorized Send. See Chapter 4, “Customizing Settings,” in the Remote UI Guide.

PDF on User Manual CD-ROM

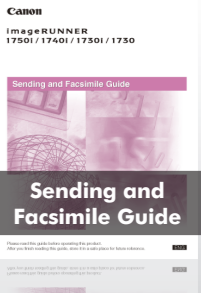


1

Display the Send Screen

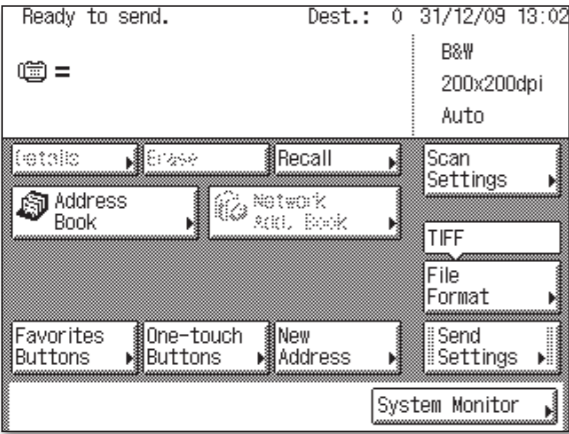


Press (SEND) to display the top screen of the Send and Fax functions.

- ▶ If the machine is in the Sleep mode, press (Power).
- ▶ Enter your ID and password or insert the control card if the screen prompts you to do so. For more information on logging in to the machine, see “How to Log in to the Machine,” on p. 07.
- ▶ If the screen shown below appears, enter your user name and password and specify the login destination → press [Log In].

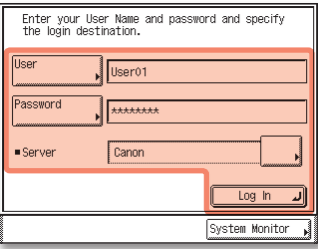

2

Place Your Originals

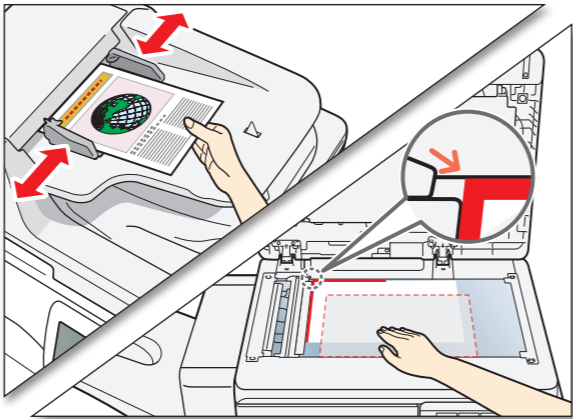


Place your originals in the feeder or on the platen glass.

- ▶ Lower the feeder after placing your originals on the platen glass.

3

Enter the Fax Number

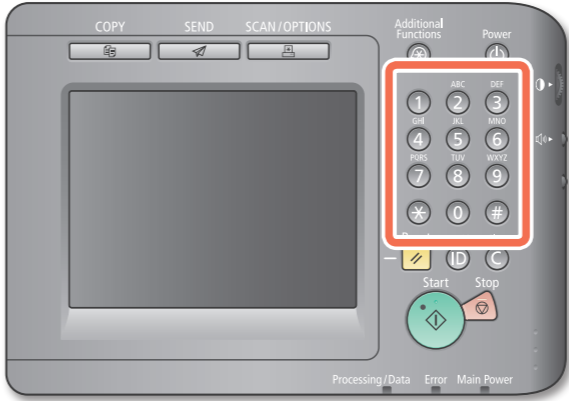

Enter the fax number using - (numeric keys).

- ▶ You can also specify the destination by using [Address Book], [Favorites Buttons], or [One-touch Buttons]. These functions save you the effort of entering a fax number each time you send documents.

For information on specifying destinations, see p. 27.


4

Start Sending



Press (Start).

- ▶ When the screen below appears, select the original size → press [OK].

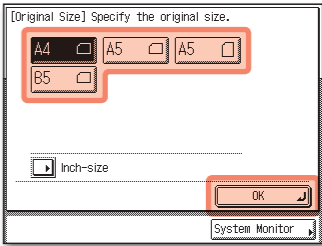


- ▶ To cancel scanning originals, press (Stop). You can also cancel scanning originals by pressing [Cancel] on the screen indicating the fax processing status.

For instructions on how to cancel sending a document during transmission, see Chapter 2, “Sending Documents,” in the Sending and Facsimile Guide.

Send and Fax Functions

This section describes the operation procedures for the Send and Fax functions you can access from the top screen of the Send and Fax functions.

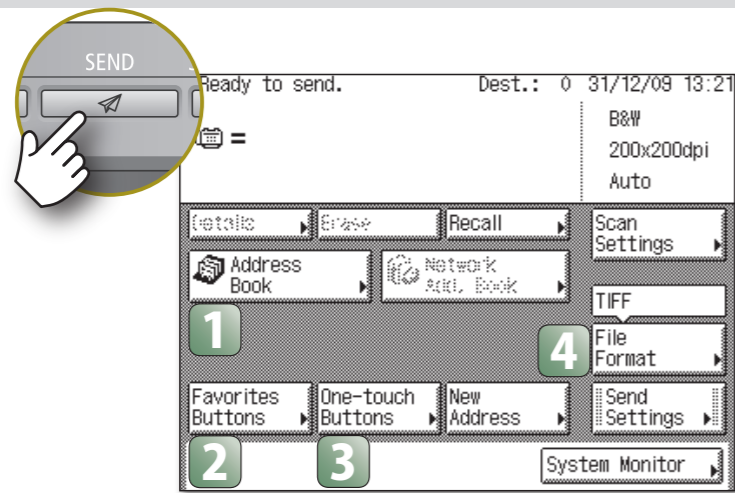

Specifying Destinations Easily and Quickly

[Address Book], [One-touch Buttons], and [Favorites Buttons] enable you to streamline and customize the procedures for specifying destinations. These functions enable you to register recipient destinations so that you can send documents by pressing only a few keys.

† The destinations you can specify may vary, depending on the settings of Authorized Send.
See Chapter 4, "Customizing Settings," in the Remote UI Guide.

Chapter 4 ♦ Sending and Facsimile Guide

1

Address Book

Press [Address Book].

[Address Book]

Dest.: 0

Type All

Canon(e-mail) john@example.com 0017 001

Canon(fax) jane@example.com

Canon(FTP) starfish.organization

Canon(fax) 0300000000

Canon(group) 2

Cancel Register OK

System Monitor

Select the desired destination → press [OK].

2

Favorites Buttons

Press [Favorites Buttons].

[Favorites Buttons]

Select a Favorites Button and press the Start key to send.

Sales John M2 M3

M4 M5

1/2 Done

System Monitor

Select the desired favorites button → press [Done].

3

One-touch Buttons

Press [One-touch Buttons].

[One-touch]

Dest.: 0

John(e-mail) Jane(fax) Canon(FTP)

Canon(fax) Canon(group)

1/14 Done

System Monitor

Select the desired one-touch button → press [Done].

Specifying the File Format for Sending Documents

You can send documents in a variety of file formats, including TIFF, PDF, and JPEG. This gives you the freedom to send documents in a manner that is suited to the purpose of the document, as well as the recipient's document handling environment. Scanned original images are converted to the specified file format and sent via e-mail or to a file server or USB memory media device.

Chapter 3 ♦ Sending and Facsimile Guide

4

File Format

Press [File Format].

[File Format]

B&W TIFF PDF PDF(OCR)

Color JPEG PDF PDF(Compact)

PDF(OCR) PDF(Compact+OCR)

Divide into Pages Done

System Monitor

Select the desired file format.
† You cannot select the file format when sending I-faxes or faxes.

[File Format]

B&W TIFF PDF PDF(OCR)

Color JPEG PDF PDF(Compact)

PDF(OCR) PDF(Compact+OCR)

Divide into Pages Done

System Monitor

If you want to separate multiple images and send them as separate files, press [Divide into Pages] → [Done].

File Formats

In addition to standard TIFF, PDF, and JPEG file formats, the machine also supports PDF (Compact) and PDF (OCR) files.

- ▶ PDF (Compact) files are archived with a higher compression ratio than normal PDF. The resulting file data size is smaller than normal PDF, and therefore recommended for jobs that are to be sent over the network.
- ▶ PDF (OCR) files perform OCR (Optical Character Recognition) on scanned documents to create a PDF with searchable text.

† PDF (OCR) is available only when the optional Color Send Searchable PDF Kit-E1 is activated.

>> Send and Fax Functions

This section describes the operation procedures for specifying the useful Additional Functions settings related to the Send and Fax functions.




Printing the Sender Information When Sending I-Faxes/Faxes

You can add the sender information at the top of the documents that you send via I-fax/fax. Information such as your I-fax address, name and fax number is printed, enabling the recipient to know who sent the document.

Chapter 7 ♦ Sending and Facsimile Guide

Press (Additional Functions).

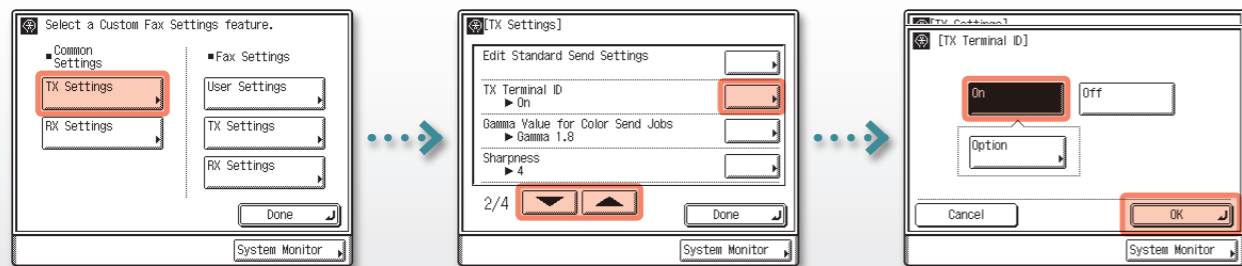

Press [Communication Settings] → [TX Settings] under <Common Settings>.

Press [▼] or [▲] until [TX Terminal ID] appears → press [TX Terminal ID].


Press [On] → [OK].
To return to the top screen, press (Reset).

Setting the Send Screen to Suit Your Needs

You can specify the screen to display first when you press (SEND). You can select Favorites Buttons screen, One-touch screen, or the top screen of the Send and Fax functions as the screen to display first.

Chapter 7 ♦ Sending and Facsimile Guide

Press (Additional Functions).

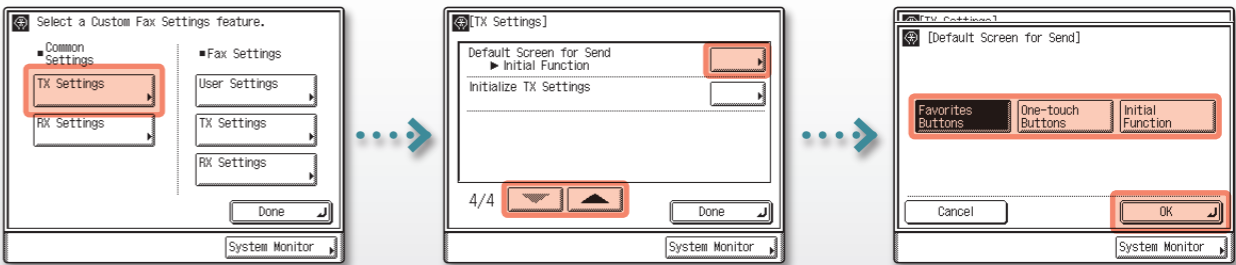

Press [Communication Settings] → [TX Settings] under <Common Settings>.

Press [▼] or [▲] until [Default Screen for Send] appears → press [Default Screen for Send].


Select the desired setting item → press [OK].
To return to the top screen, press (Reset).

Automatically Forwarding Received Documents

You can set the machine to automatically forward the received I-fax/fax documents to any desired destination. If a received document matches the forwarding conditions you set, it is forwarded to the destination. You can also specify a forwarding destination for received documents that do not match the forwarding conditions.

Chapter 4 ♦ System Settings Guide

Press (Additional Functions).

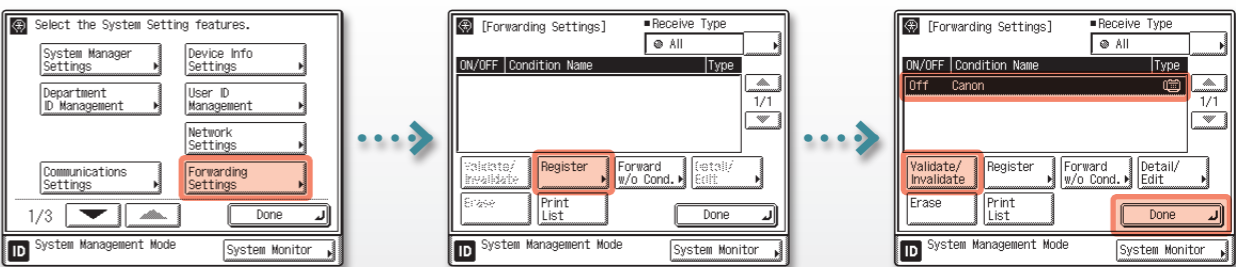

Press [System Settings]* → [Forwarding Settings].


* To make changes to the System Settings, log in to the machine as the System Manager.

Press [Register] → register the forwarding conditions and destinations as indicated on the touch panel display.

Select the desired forwarding setting → press [Validate/Invalidate] → [Done].
To return to the top screen, press (Reset).

>> Send and Fax Functions


This section describes the operation procedures for the Send and Fax functions you can access from the [Scan Settings] key on the top screen of the Send and Fax functions.

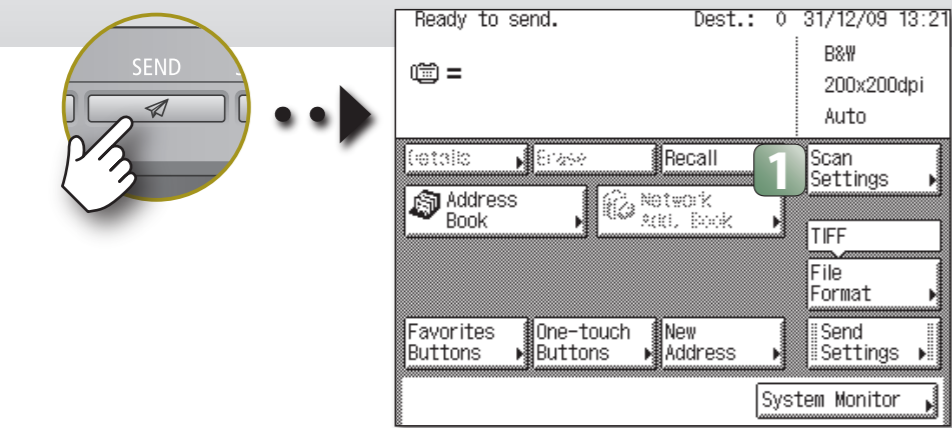

Scanning Documents Containing Photos Clearly

You can improve the image quality of scanned images by selecting the original type setting that best suits your originals. When originals containing photos are not scanned clearly, select [Photo] or [Text/Photo] from the original type drop-down list box to obtain better results.

Chapter 3 ♦ Sending and Facsimile Guide

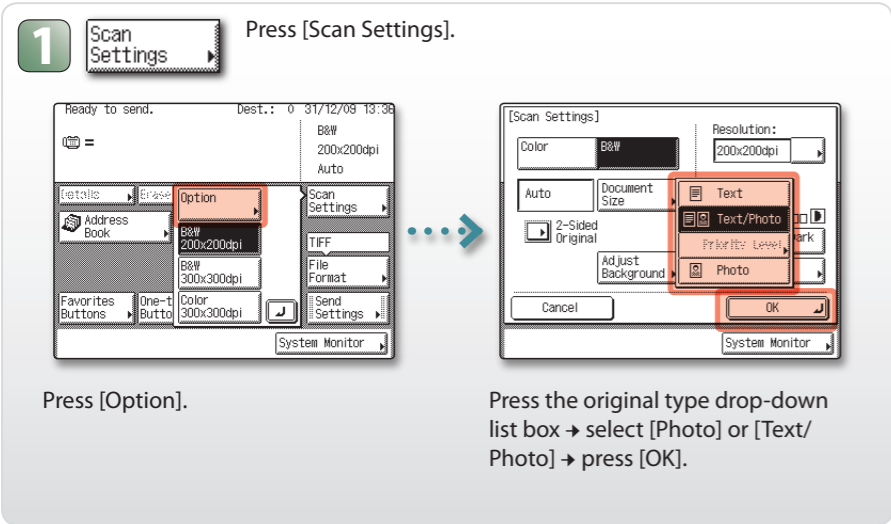


Press [Option].

Press the original type drop-down list box → select [Photo] or [Text/Photo] → press [OK].

Specifying the Scanning Area to Cover the Original Size

When the edges of the scanned image are missing, change the Document Size setting to a size that is larger than the actual original size.

Chapter 3 ♦ Sending and Facsimile Guide

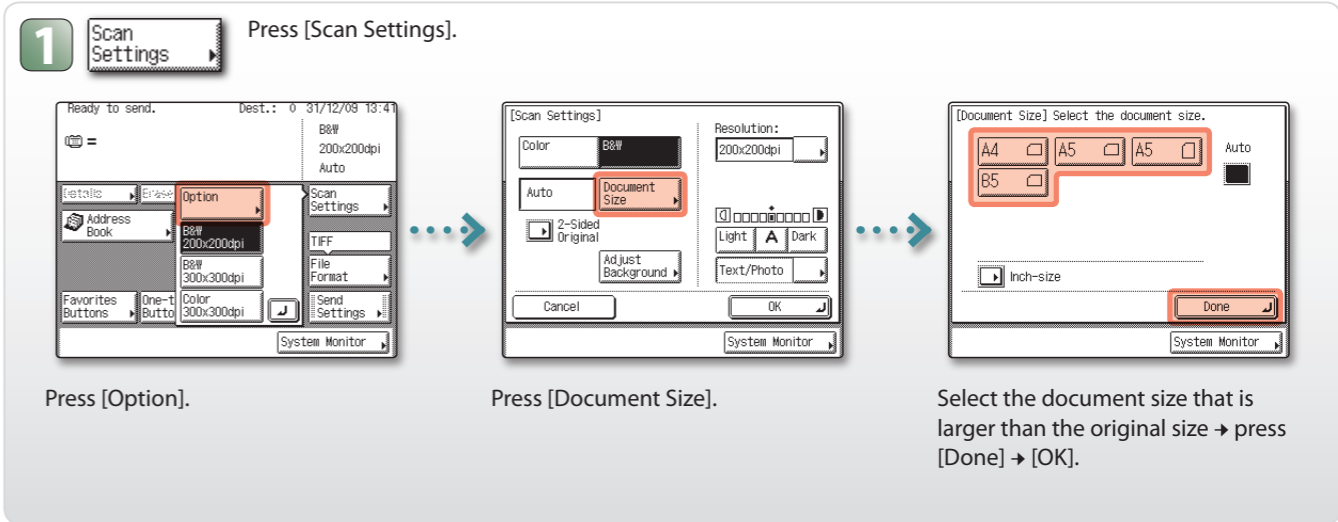

Press [Option].


Press [Document Size].

Select the document size that is larger than the original size → press [Done] → [OK].

Scanning Fine Text and Images Clearly


You can scan fine text in documents more clearly by setting a higher resolution. Note, however, that the file size increases as you increase the resolution.

Chapter 3 ♦ Sending and Facsimile Guide

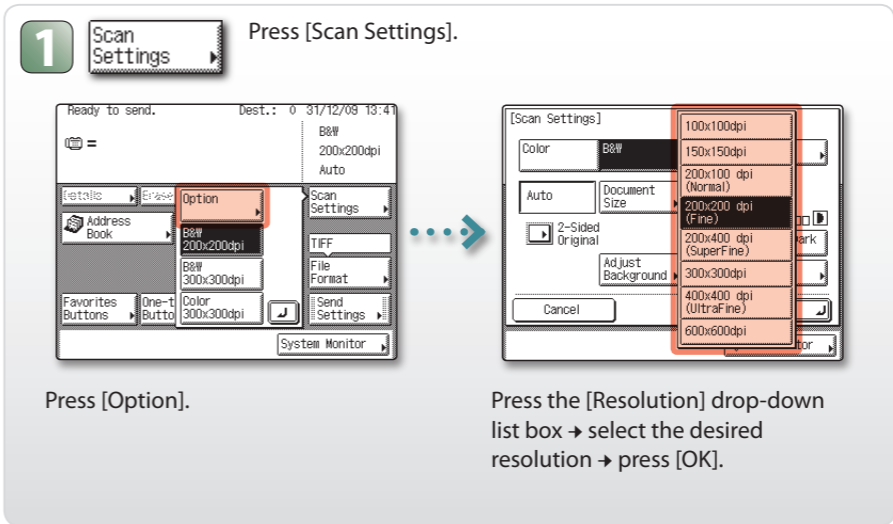

Press [Option].

Press the [Resolution] drop-down list box → select the desired resolution → press [OK].

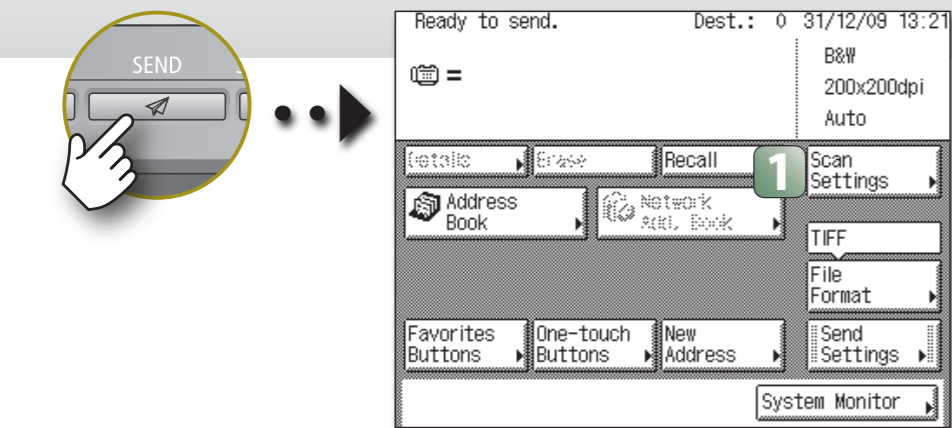

Scanning Two-Sided Originals

You can scan both sides of the originals set in the feeder.

Chapter 3 ♦ Sending and Facsimile Guide

1 Scan Settings

Press [Scan Settings].

Ready to send. Dest.: 0 31/12/09 13:4

Color B&W Resolution: 200x200dpi Auto

Address Book Network Scan Settings

Option B&W 200x200dpi TIFF

B&W 300x300dpi File Format

Color 300x300dpi Send Settings

System Monitor

Press [Option].

[Scan Settings]

Color B&W Resolution: 200x200dpi

Auto Document Size

2-Sided Original Adjust Background

Light A Dark

Text/Photo

Cancel OK

System Monitor

Press [2-Sided Original].

[2-Sided originals] Select the type of original.

Book Type Calendar Type

Cancel OK

System Monitor

Select [Book Type] or [Calendar Type] → press [OK] → [OK].

Adjusting the Background Color of Sent Documents

You can adjust the density of the background color when scanning color originals. You can adjust red, green, and blue separately.

Chapter 3 ♦ Sending and Facsimile Guide

1 Scan Settings

Press [Scan Settings].

Ready to send. Dest.: 0 31/12/09 13:42

Color B&W Resolution: 200x200dpi Auto

Address Book Network Scan Settings

Option B&W 200x200dpi TIFF

B&W 300x300dpi File Format

Color 300x300dpi Send Settings

System Monitor

Press [Option].

[Scan Settings]

Color B&W Resolution: 200x200dpi

Auto Document Size

2-Sided Original Adjust Background

Light A Dark

Text/Photo

Cancel OK

System Monitor

Press [Adjust Background].

[Adjust Background] Adjust the density of the background color.

Red Green Blue

Adjust amount of each color


Cancel OK

System Monitor

Press [-] or [+] to adjust the amount of each color → press [OK] → [OK].

>> Send and Fax Functions

This section describes the operation procedures for the Send and Fax functions you can access from the [Send Settings] and [Recall] key on the top screen of the Send and Fax functions.

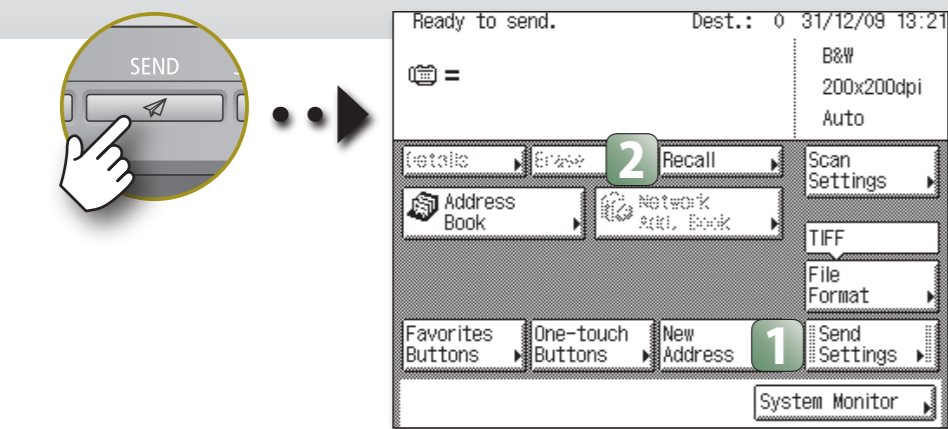

Adding the Reply Destination to Sent Documents

You can specify the reply-to address for your e-mails/faxes.

Chapter 2 ♦ Sending and Facsimile Guide

First, register the e-mail address you want to use as the reply-to address.

1 **Send Settings**

Press [Send Settings].

Press [▼].

Press [Reply-to].

Select the reply-to address → press [OK] → [Done].

Specifying the Time to Start Sending

You can specify the time for sending the document. This function is useful, for example, when you want to send a document at a future time when you may not be near the machine.

Chapter 2 ♦ Sending and Facsimile Guide

1 **Send Settings**

Press [Send Settings].

Press [Delayed Send].

Enter the time to send the document using 0-9 (numeric keys) → press [OK].

Press [Done].

Recalling the Most Recent Settings

The Recall function enables you to send a document using any of the last three addresses, scan settings, and send settings that were used.

Chapter 4 ♦ Sending and Facsimile Guide

2 **Recall**

Press [Recall].

Select [1 Before], [2 Before], or [3 Before].

Confirm the settings → press [OK].


Scanning from a Computer


(Remote Scan)


This section describes the basic operation procedure for scanning originals to load the scanned images to a computer.

† The screen shots shown below may differ from the ones displayed on your computer, depending on the application or operating system you are using.

1 Switch the Machine Online

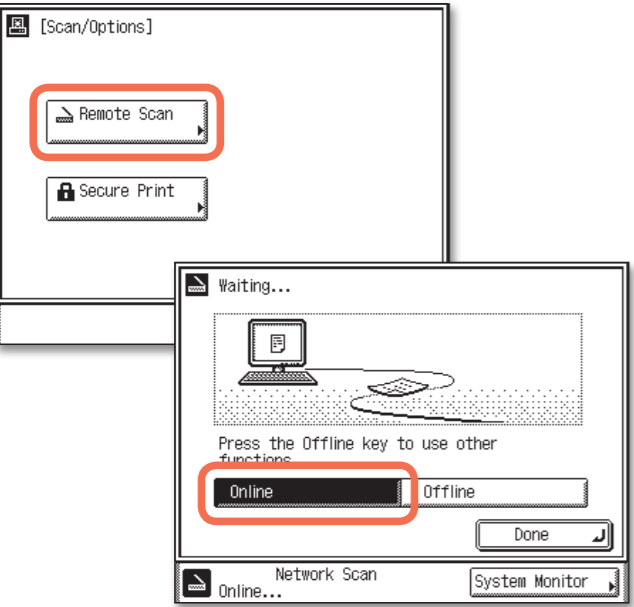


Press  (SCAN/OPTIONS) to display the Scan/Options screen → press [Remote Scan] → [Online].

- ▶ If the machine is in the Sleep mode, press  (Power).
- ▶ Enter your ID and password or insert the control card if the screen prompts you to do so. For more information on logging in to the machine, see “How to Log in to the Machine,” on p. 07.

† If you want to use the machine as a network scanner, it must be connected to a computer over an IPv4 network.


2 Place Your Originals

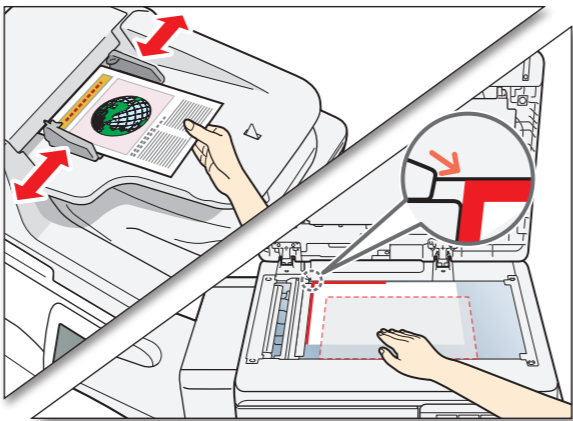

Place your originals in the feeder or on the platen glass.

- ▶ Lower the feeder after placing your originals on the platen glass.

3 Open the Color Network ScanGear

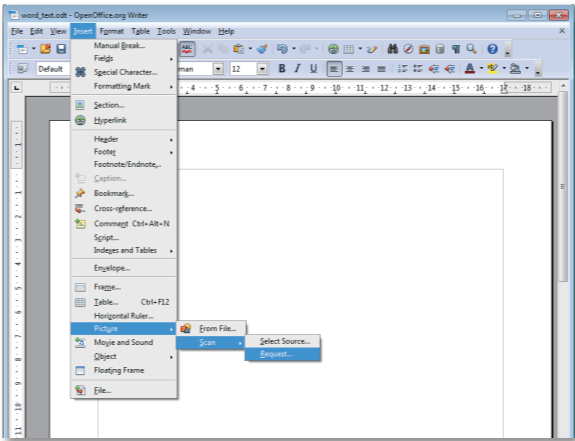


From the menu of the application, select the command* to start the scanning operation.

- ▶ Make sure that the Color Network ScanGear is selected as the scanner to be used.

For more information, see the documentation that comes with your TWAIN-compliant application.

* Command names include [Scan New], [Acquire], and others, depending on the application you are using.

4 Start Scanning

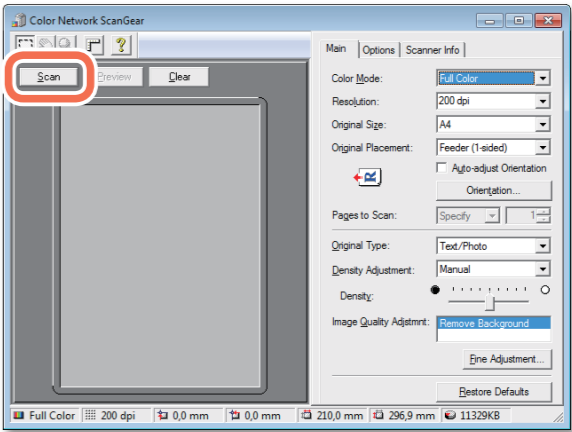

Specify the scan settings that suit your preferences → click [Scan].


- ▶ On the Color Network ScanGear dialog box, specify the settings such as the color mode and resolution.
- ▶ To cancel scanning, click [Cancel] in the dialog box that appears when the scan data is being processed.
- ▶ When scanning is complete, switch the machine offline.

For instructions on how to specify the settings on the Color Network ScanGear dialog box, see the Network ScanGear Guide or the help on the Color Network ScanGear.

Operating the Machine from a Computer

(Remote UI)

This section describes the basic operation procedure for accessing the machine from a computer by using the Remote UI.

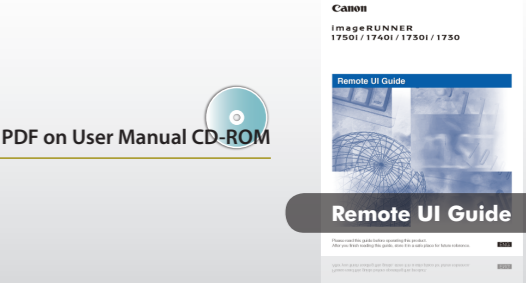


What is the Remote UI?

The Remote UI (Remote User Interface) is software built into the machine that enables users to access machine functions and settings from a web browser on a computer. Some examples of what you can do on the Remote UI include:

- ▶ Checking the machine status such as paper or toner amount
- ▶ Checking the job status
- ▶ Registering or editing the addresses.*


*The Address Book can be protected by a password.

If you log in to the Remote UI as the System Manager, you can use further functions such as setting Department ID/User Management and customizing the various machine settings.

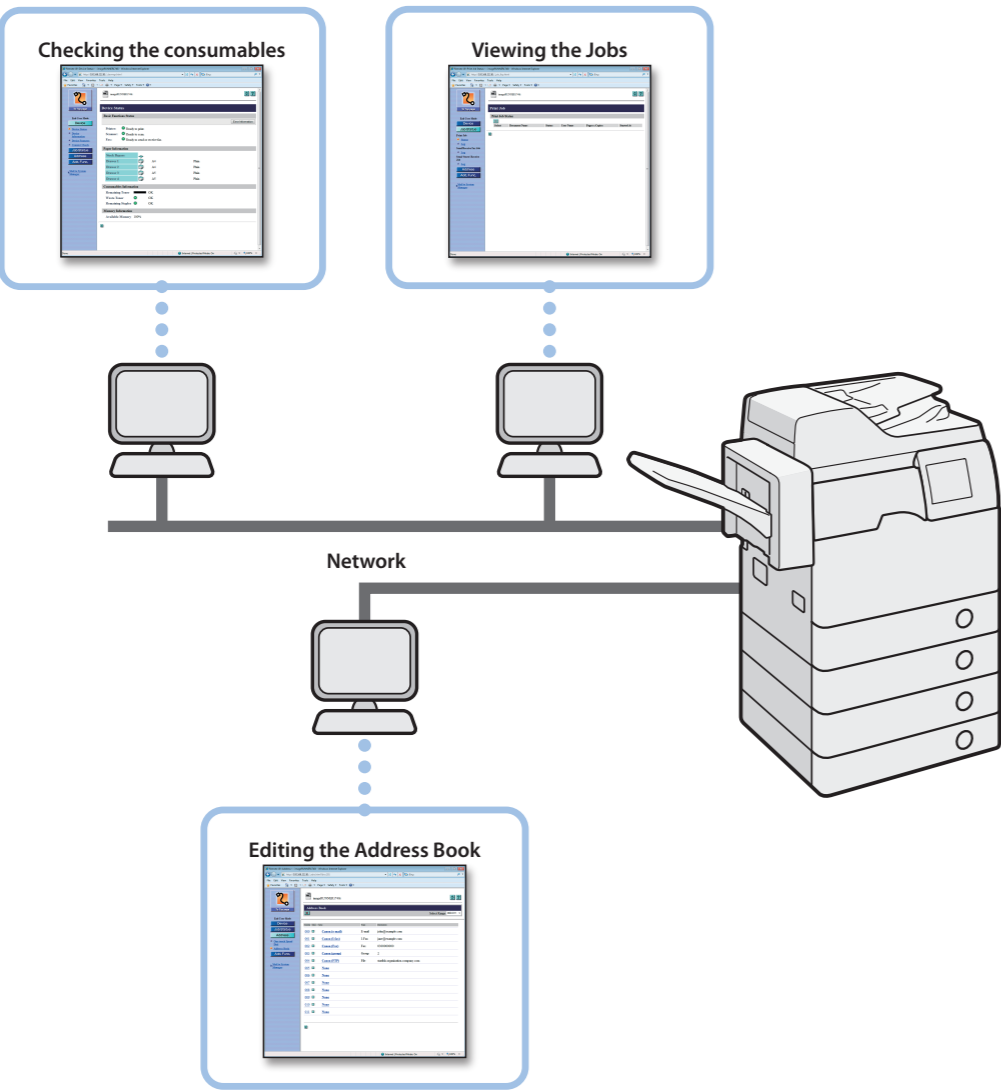

Accessing the Remote UI


1 Start Your Web Browser

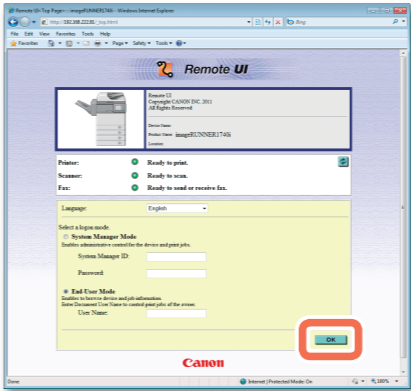

Start your web browser → enter the IP address* of the machine into the Web browser on your computer to access the Remote UI → press [ENTER] key on your computer keyboard.


* The IP address in the screen shots in this section is for illustrative purposes only. Ask your network administrator for the IP address of your machine.

2 Log in to the Remote UI

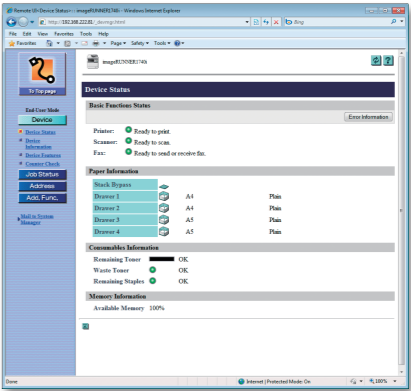

On the Remote UI top page displayed in step 1, enter your Department ID or User ID and password* → click [OK].


- ▶ After successfully logging in, the Device Status page is displayed. Go to other pages as necessary by using the menu on the left side of the page.

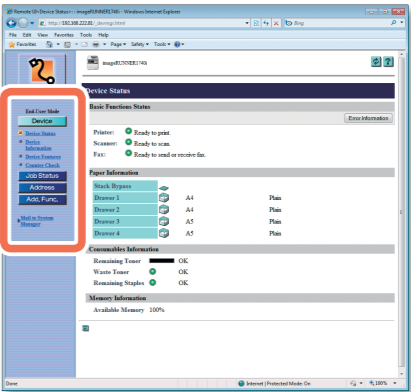

* The ID and password you have to enter when logging in depend on the Remote UI setting. Ask your system administrator for your ID and password.

Customizing the Machine Settings

From the Additional Functions screen, you can customize the machine settings to suit your needs.

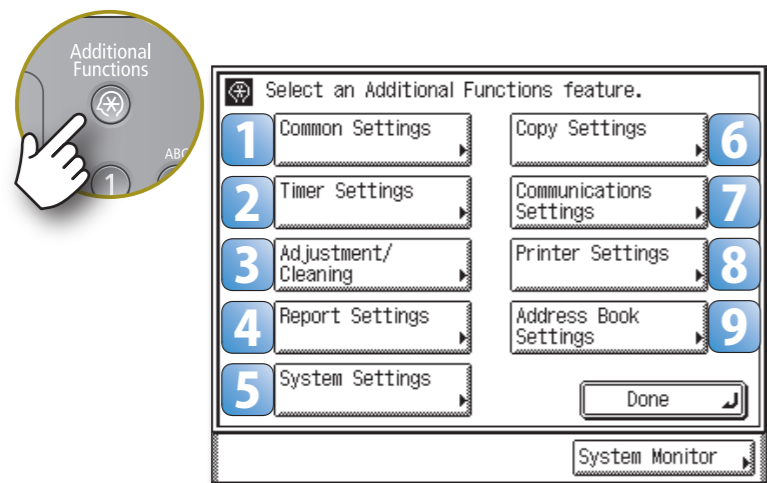

The Additional Functions screen is displayed by pressing (Additional Functions) on the machine's control panel. From this screen, you can change and customize the machine's various settings. When these settings are changed or specified, they are saved as default settings and remain in effect until they are changed again.

- 1 [Common Settings]**
Enables you to specify the settings that are fundamental to the machine operations.
▶ Chapter 3 in the Reference Guide
- 2 [Timer Settings]**
Enables you to specify the timer-related settings for the machine, such as the time for the machine to enter the Sleep mode.
▶ Chapter 3 in the Reference Guide
- 3 [Adjustment/Cleaning]**
Enables you to adjust and optimize the machine settings for better results when printing on special paper or under other conditions. Also enables you to perform automatic machine cleaning.
▶ Chapter 5 and 6 in the Reference Guide
- 4 [Report Settings]**
Enables you to print various reports such as the User's Data List.
▶ Chapter 2 in the Reference Guide
▶ Chapter 8 in the Sending and Facsimile Guide
- 5 [System Settings]***
Enables you to specify the machine's system settings such as the network- or security-related settings. Mainly used by the administrator.
*To make changes to the System Settings, log in to the machine as the System Manager.
▶ System Settings Guide
(Chapters to refer to depend on the setting items.)
- 6 [Copy Settings]**
Enables you to specify the settings for the Copy function.
▶ Chapter 4 in the Copying Guide
- 7 [Communications Settings]**
Enables you to specify the settings for the Send and Fax functions.
▶ Chapter 7 in the Sending and Facsimile Guide
- 8 [Printer Settings]**
Enables you to specify the settings for the Print function.
▶ Chapter 4 in the Printer Guide
- 9 [Address Book Settings]**
Enables you to register, edit, or delete destinations.
▶ Chapter 4 in the Sending and Facsimile Guide

Examples of Useful Settings

Displaying the screen for the function you frequently use

If you frequently use the Copy function, for example, you can set the Copy screen to be displayed first.

1 Common Settings

▶

Press [Initial Function] and make the desired settings.

Chapter 3 in the Reference Guide

Saving electricity or toner

There are two settings for saving electricity and toner.

To save electricity:

1 Common Settings

▶

Press [Energy Consumption in Sleep Mode] and make the desired settings.

Chapter 3 in the Reference Guide

To save toner:

1 Common Settings

▶

Press [Toner Save Mode] and make the desired settings.

Chapter 3 in the Reference Guide

Setting the time for the machine to enter the Sleep mode

You can adjust the time for the machine to enter the Sleep mode.

2 Timer Settings

▶

Press [Auto Sleep Time] and make the desired settings.

Chapter 3 in the Reference Guide

Preventing misdialing when sending a fax

When you dial a fax number, the machine prompts you to enter the fax number again, which will prevent dialing mistakes.

5 System Settings

▶

Press [Restrict the Send Function] → [Confirm Entered Fax Numbers] and make the desired settings.

Chapter 4 in the System Settings Guide

Storing and recalling the copy settings you prefer

Various settings for the Copy function can be stored and recalled as a setting combination.

6 Copy Settings

▶

First make the copy settings as you prefer. Press [Standard Settings] and make the desired settings.

Chapter 4 in the Copying Guide

41 Easy Operation Guide Other

Customizing the Machine Settings Easy Operation Guide 42

Preface
Copy
Print
Send/Fax
Scan
Other

Troubleshooting

This section describes which other guides to check when seeking solutions to problems that you may experience when using the machine. The list also includes where to find descriptions of the procedures for replacing or refilling the consumables such as paper, toner, and staples.

Problem	Section Title	Chapter	Guide
Paper			
Paper has run out.	Paper Drawers	5	Reference
A paper jam has occurred.	Clearing Paper Jams	6	Reference
Paper jams occur frequently.	Identifying and Isolating Problems	6	Reference
Toner			
Toner has run out.	Replacing the Toner	5	Reference
Staples			
A staple jam has occurred.	Clearing Staple Jams	6	Reference
Staples have run out.	Replacing the Staple Cartridge	5	Reference
Scanning			
The scanned images of the originals scanned with the platen glass/feeder have marks or stains.	Routine Cleaning	5	Reference
Memory becomes full during scanning.	If Memory Becomes Full during Scanning...	6	Reference
Printing			
The density of a copy or print is different from the original.	Specifying Common Settings	3	Reference
	Settings Menu	4	Printer
Printouts are dirty.	Routine Cleaning	5	Reference
Communications			
Cannot send documents.	Identifying and Isolating Problems	9	Sending and Facsimile
Cannot receive documents.	Identifying and Isolating Problems	9	Sending and Facsimile
Transmissions are slow.	Identifying and Isolating Problems	9	Sending and Facsimile

Problem	Section Title	Chapter	Guide
Other			
The power does not turn ON.	Turning ON/OFF the Machine	2	User's
A message appears on the touch panel display.	Self-diagnostic Display	6	Reference
An error code like "E*****" appears on the touch panel display.	Service Call Message	6	Reference

**CANON INC.**

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

CANON U.S.A., INC.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

CANON CANADA INC.

6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada

CANON EUROPA N.V.

Bovenkerkerweg 59-61 1185 XB Amstelveen, The Netherlands
(See <http://www.canon-europe.com/> for details on your regional dealer)

CANON LATIN AMERICA, INC.

703 Waterford Way Suite 400 Miami, Florida 33126 U.S.A.

CANON AUSTRALIA PTY. LTD

1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia

CANON CHINA CO., LTD

15F Jinbao Building No.89 Jinbao Street, Dongcheng District, Beijing 100005, China

CANON SINGAPORE PTE. LTD.

1 HarbourFront Avenue #04-01 Keppel Bay Tower, Singapore 098632

CANON HONGKONG CO., LTD

19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong

