

Preparing to Use the Printer

- Using a network connection **LAN**
Begin setup from Step 1.
- Using a USB connection **USB**
Begin setup from Step 2.

Step 1 Configuring the network

LAN

(1) Open the folder, and execute [xxxx.exe].

- **32-bit version**


Open [Network_Setting_Tool] - [32bit], and execute [CNAN1STK.exe].

- **64-bit version**

Open [Network_Setting_Tool] - [64bit], and execute [CNAN1STD.exe].


If the [User Account Control] dialog box appears

Click [Yes] or [Continue].

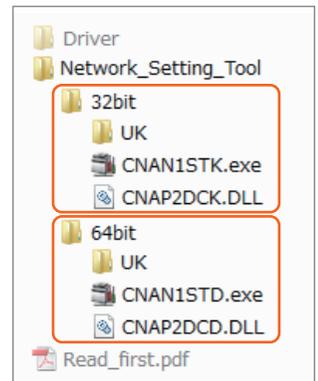

(2) Follow the on-screen instructions to configure the settings.

When the message "Configuration of the network settings for the printer has ended" appears, click [Exit] to close the message, and then continue to Step 2.

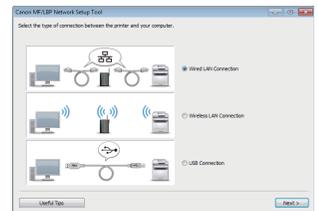

Step 2 Installing the printer driver

USB LAN


(1) Open the folder, and execute [Setup.exe].

- **32- and 64-bit versions**

Open [Driver], and execute [Setup.exe].

If the [User Account Control] dialog box appears

Click [Yes] or [Continue].

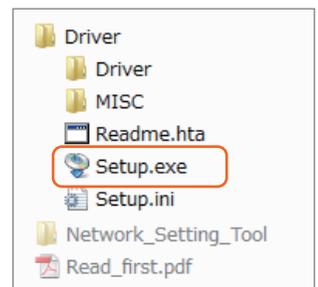

(2) Follow the on-screen instructions to configure the settings.

