 





Canon PIXMA MG3500 series


1

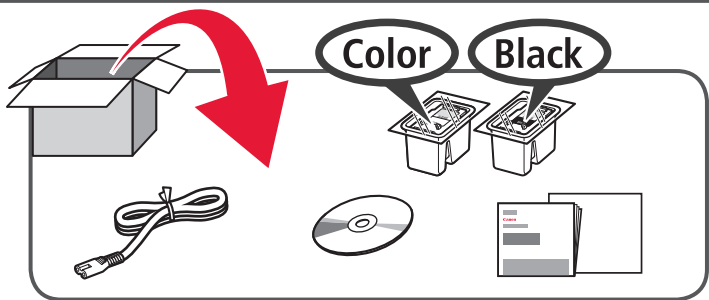

 
2

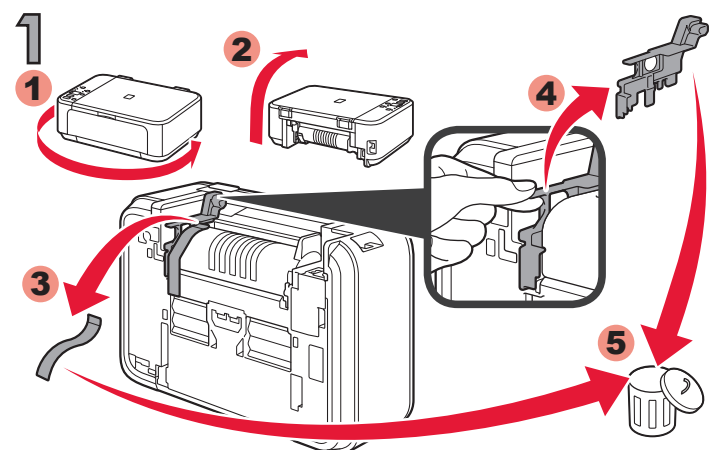


2

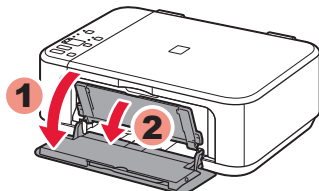 

3

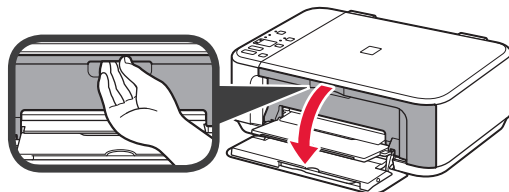 


4

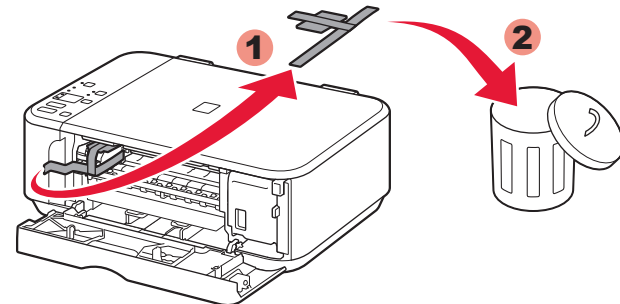 


3


 
1

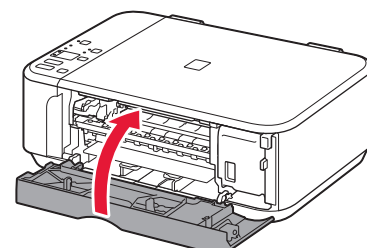


2

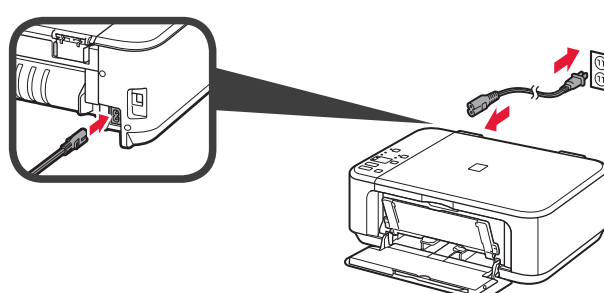 


3

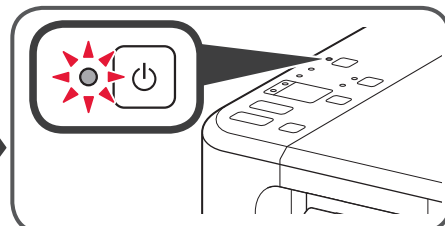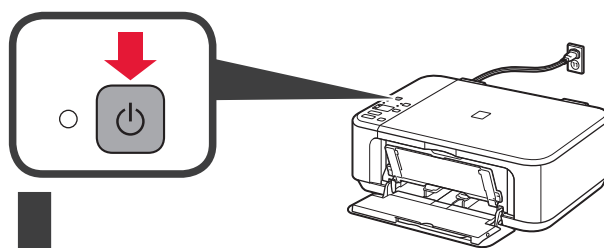  


4 1

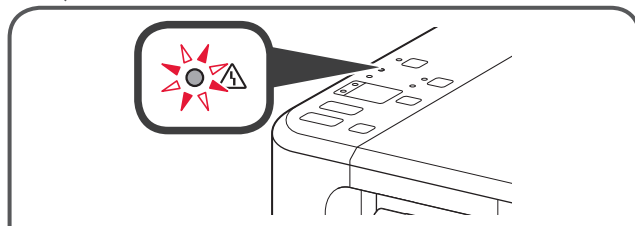 

1

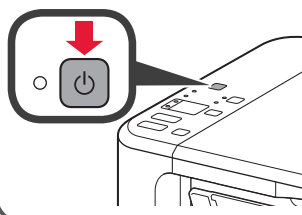 


2

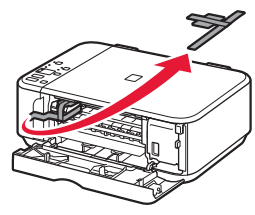 



3 1

4


 
1

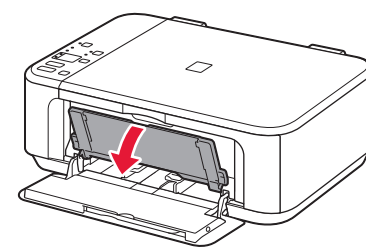

2

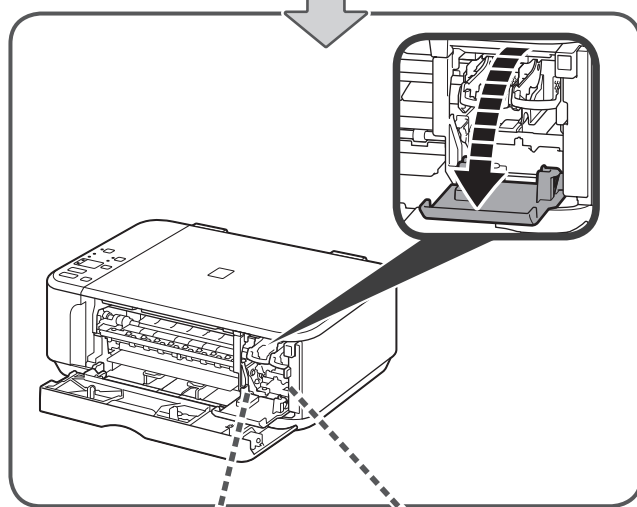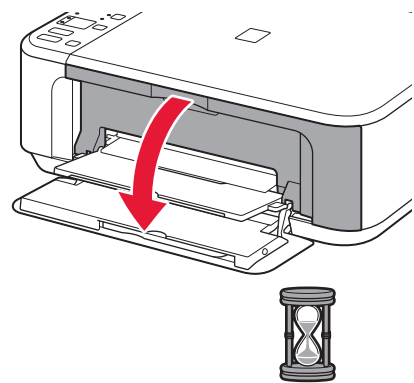  


3

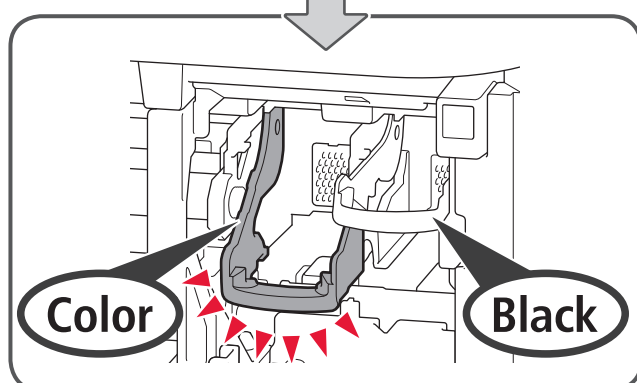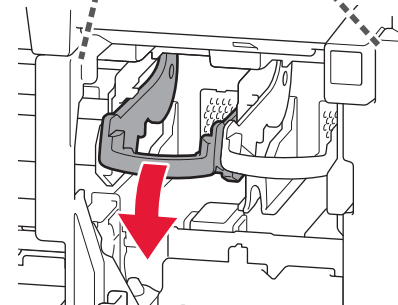  

Color


Black

 4

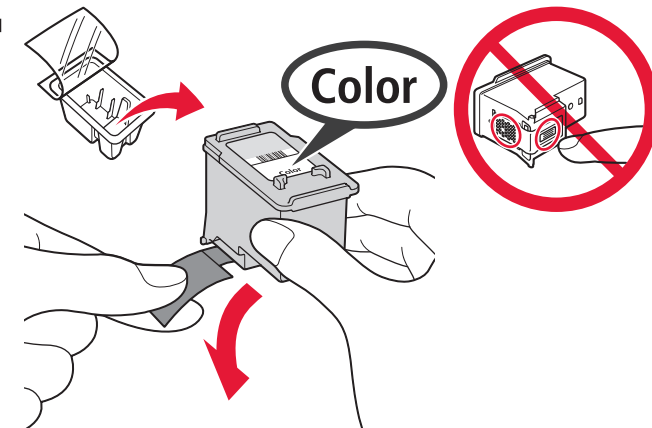



Color

 5


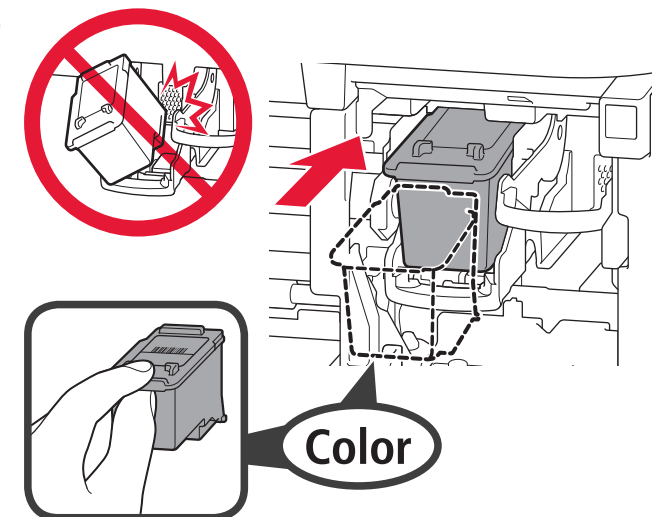


Color

  
6

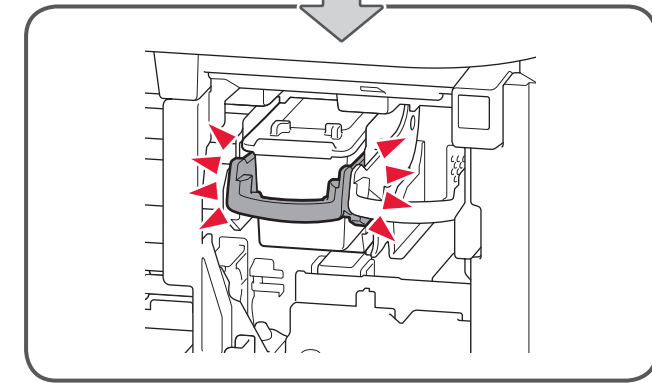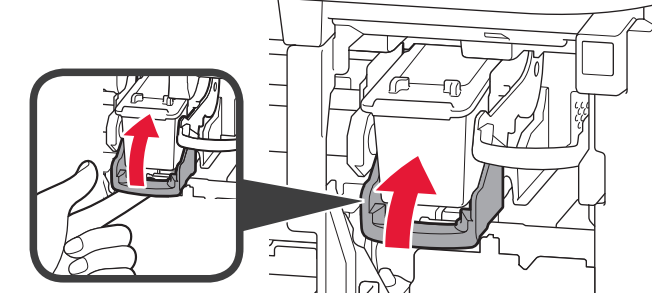


7

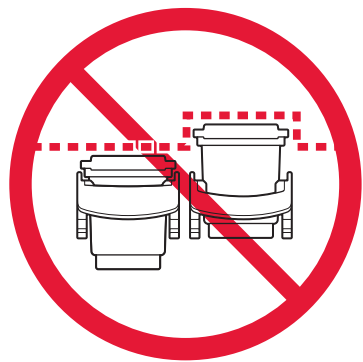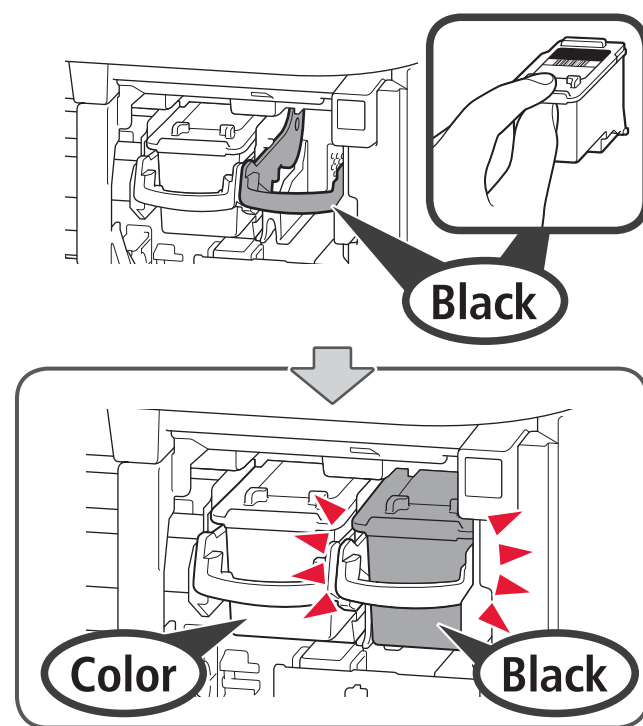  

8

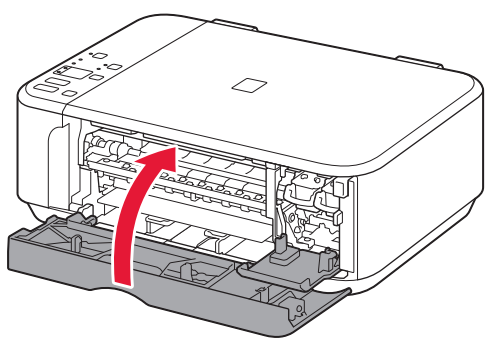 


9

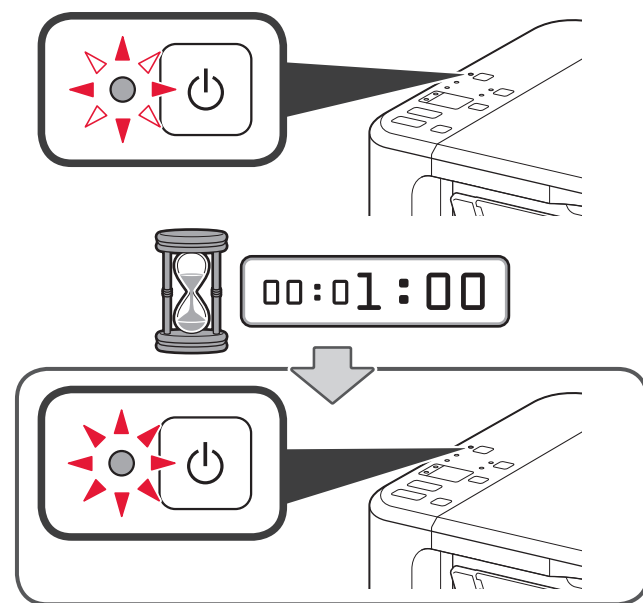 


5

 
1

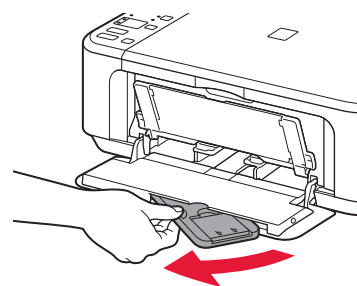


2

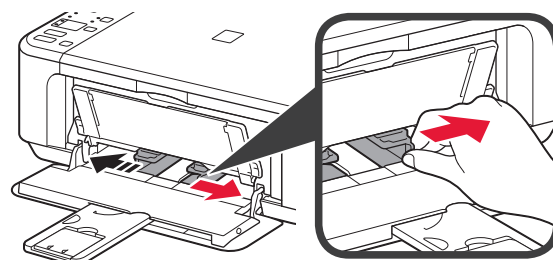 


3

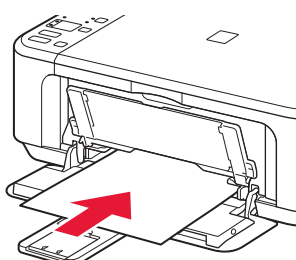 


4

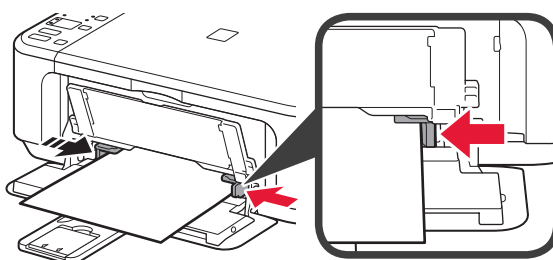 


5

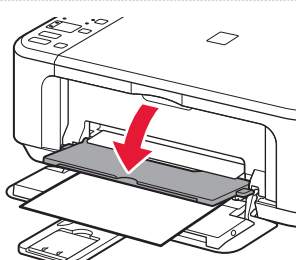 

6

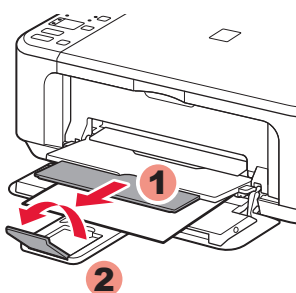 

6

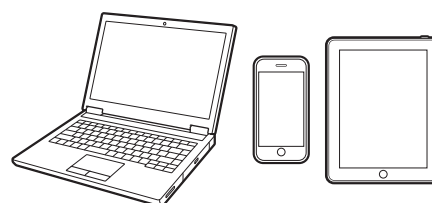 
canon.com/ijsetup

 

Windows PC



Quick Menu



http://

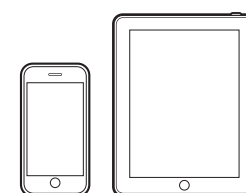
canon.com/ijsetup


http://

