

Starter Guide

Please read this guide before operating this product.

 
 
After you finish reading this guide, store it in a safe place for future reference.



Set Up the Machine


Unpacking the Machine

- Remove all shipping tape and packing material from the machine.

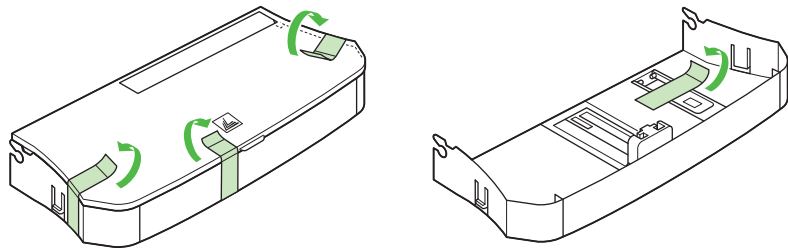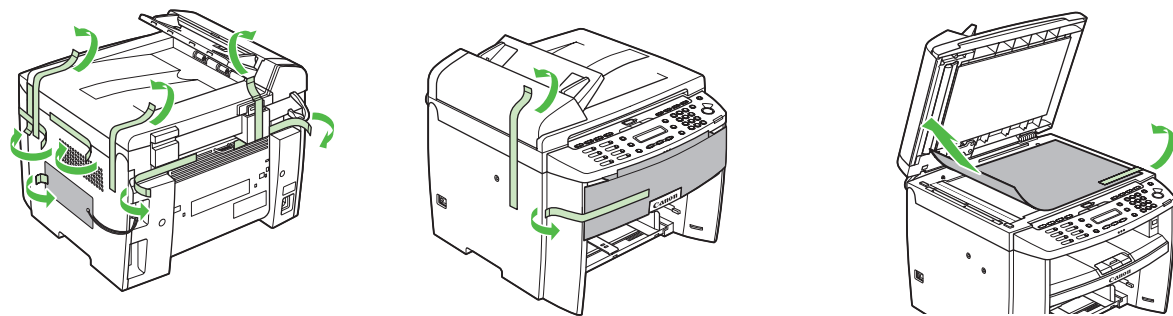


Before Setting Up the Machine

 
- When moving the machine, grip the handles on both left and right sides of the machine and lift it carefully, as shown in the illustration right.
- The shapes of your machine and supplies may differ slightly from those illustrations listed in this manual.

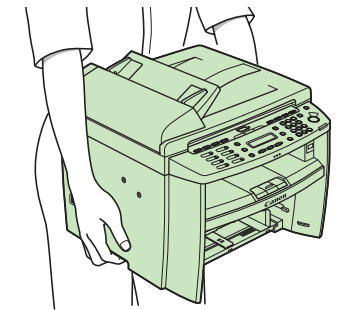


Do You Have Everything?

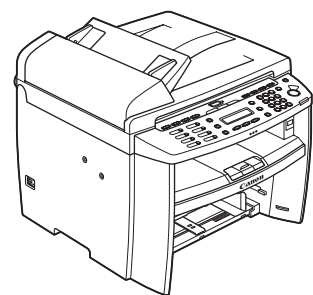 


●Machine

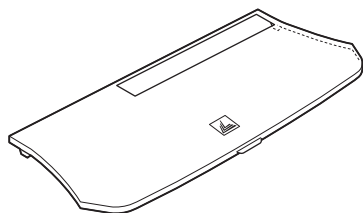 


●Dust Cover

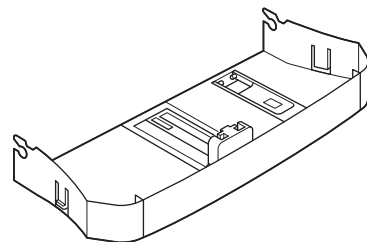 


●Paper Cassette

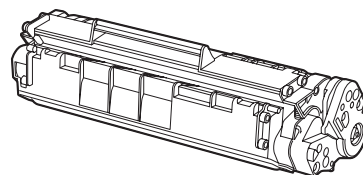 


●Toner Cartridge

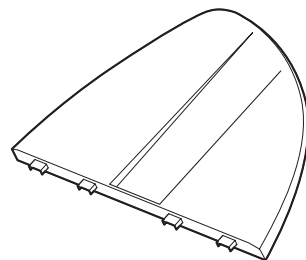 


●Document Feeder Tray

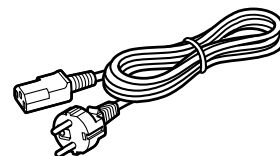 


●Power Cord

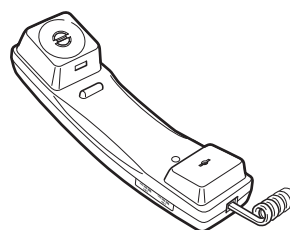 


●Handset (optional)

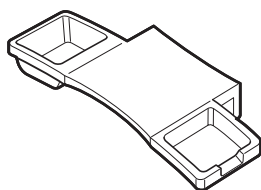 


●Handset Cradle (optional)

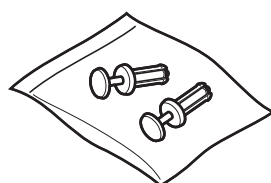 

●Plugs with Pins (optional)

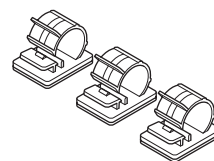 

●Handset Clamps

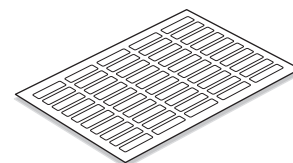 

●Destination Labels

 
- Telephone Cable
 - USB Cable
 - Starter Guide (This Document)
 - Basic Operation Guide
 - User Software CD
 - Limited Warranty Notice*
- * Not available depending on the country of purchase

Manuals for the Machine

- Starter Guide (This Document): Machine set-up and software installation
- Basic Operation Guide: Basic features, maintenance, machine settings, and specifications
- Reference Guide (located on the User Software CD): Advanced features, system monitor, and reports and lists
- Scanner Driver Guide (located on the User Software CD): Scanner settings from a computer


Install Toner Cartridge

1

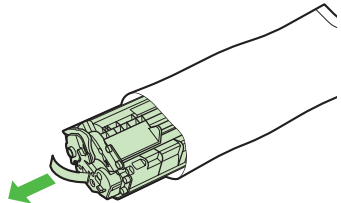


Remove the toner cartridge from the bag. Keep the bag for future use.

 2

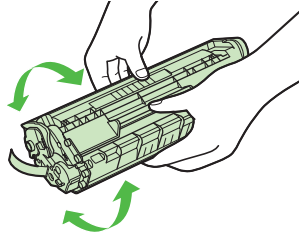

Gently rock the toner cartridge several times to distribute toner inside.

 3

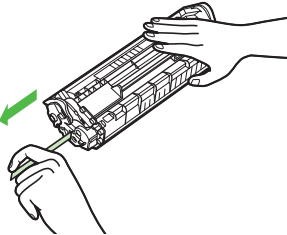


Pull the seal completely out.

NOTE


Do not pull the seal out at an angle.

 4

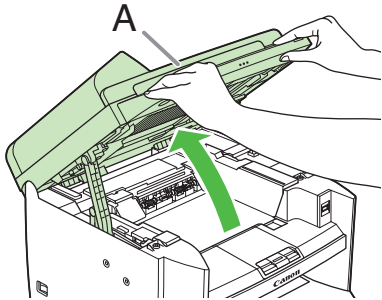


Lift the scanning platform (A) until it is locked. (You will hear an audible “click.”)

 5

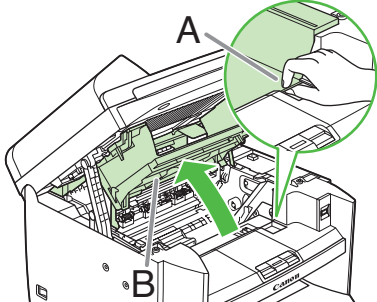


Open the toner cover (B), using the tab (A) which covers over on dent.

 6

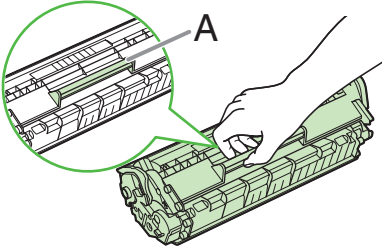


Hold the toner cartridge by its handle (A).

 7

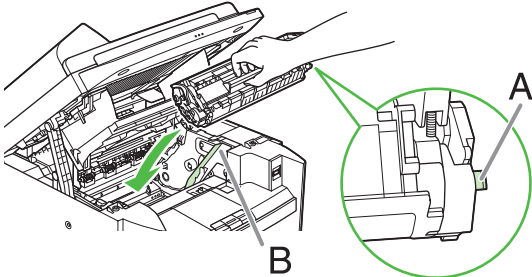


Insert the cartridge so that the protrusion on the right side of the toner cartridge (A) fits into the guide (B) located on the right side of the machine and slide it down parallel to the guide.

 8

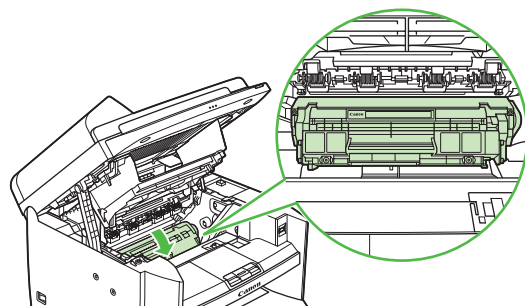


Push the toner cartridge to make sure it is properly set in the machine.

 9

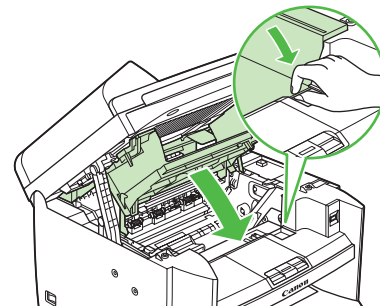

Close the toner cover using the tab.

 10

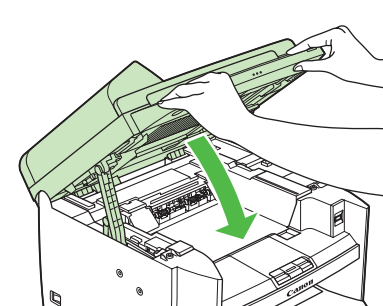


Close the scanning platform.

CAUTION

- Be careful not to get your fingers caught.
- If you cannot close the toner cover, do not force it to close. Open the cover and make sure the toner cartridge is properly set in the machine

Set Up the Paper Cassette and Load Paper

 1

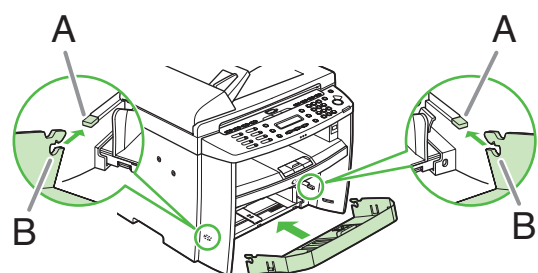


Align the guides (B) on the both edges of the paper cassette to the protrusions (A) inside the machine.

NOTE


Install the paper cassette with the front end tilted upwards.

 2

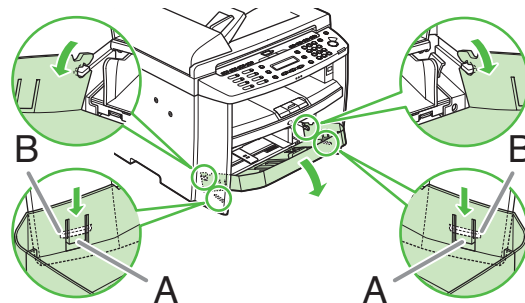


Push the paper cassette down until the hooks (A) on both sides of the paper cassette engage the protrusions (B) inside the machine.

 3

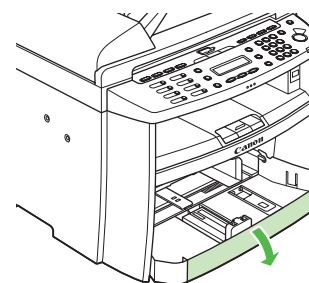


Open the front panel of the paper cassette.

 4

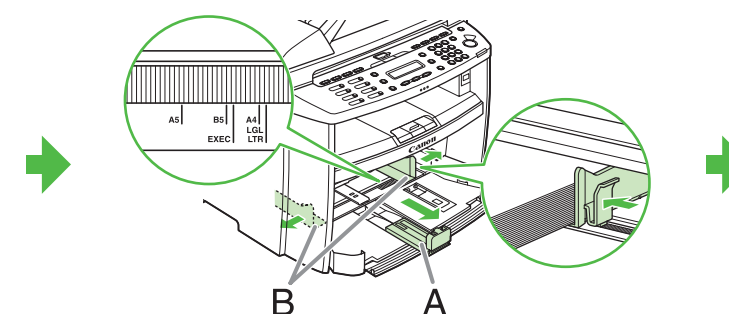


Slide the paper guide rail (A), and then pinch and slide the side paper guides (B) to match the size of paper.

 5

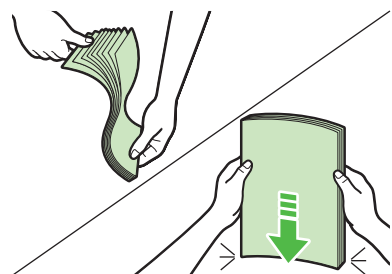


Fan the paper stack and even the edges.

 6

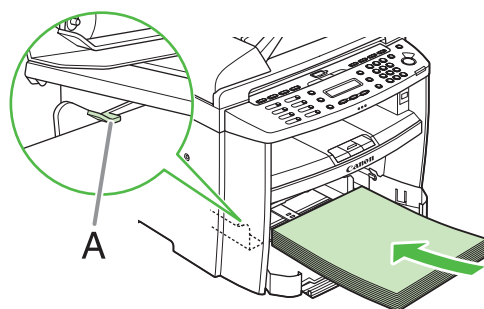


Load the paper into the paper cassette with the print side up. Make sure the paper stack sits below the small fin (A) on the side paper guide.

 7

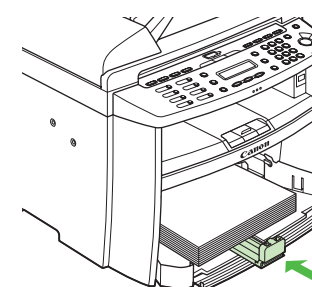


Adjust the paper guide rail to match the size of paper.

 8

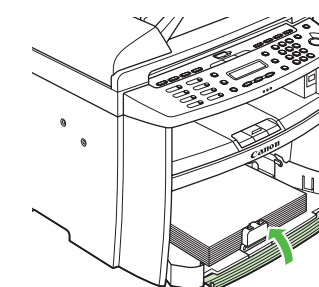


Close the front panel of the paper cassette.

 9

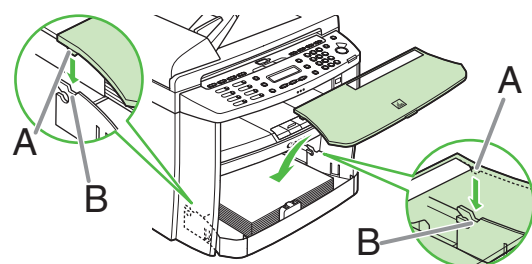

Connect the edge of dust cover (A) and the edge of paper cassette (B).

 10

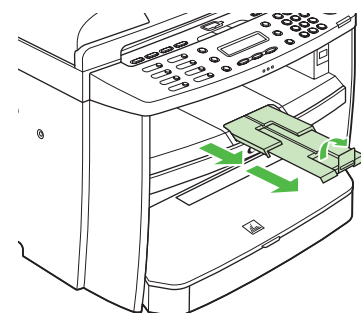

Slide the output tray extension on the front of the machine, and lift the paper stopper.

11



 
Attach the document feeder tray on the document feeder.

NOTE

- The default paper size/type setting is <A4> and <PLAIN PAPER>. When you load other size and/or type of paper, change the paper size/type setting. For details, see Chapter 2, "Document and Paper," in the Basic Operation Guide.
- For loading paper in the multi-purpose tray, see Chapter 2, "Document and Paper," in the Basic Operation Guide.


Connect the Power Cord, Turn On the Machine

1

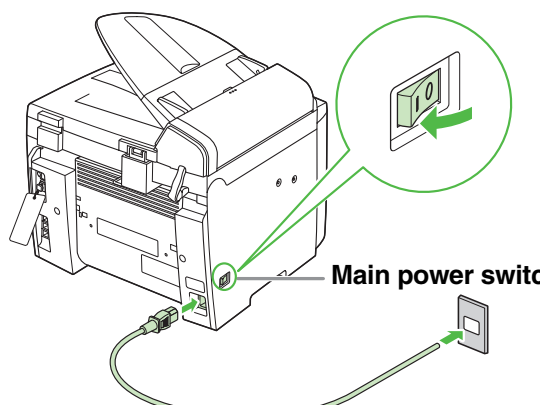

Main power switch

2



Connect the power cord into the rear socket on the back side of the machine and the wall outlet, and press the [I] side of the main power switch to ON.

The machine enters the standby mode.

What if...

- **<TONER COVER OPEN/CLOSE COVER> is displayed:**
Make sure that the toner cover and scanning platform are closed properly. (See "Install Toner Cartridge," on p. 5.)
- **<TONER IS NOT SET/INSERT TONER> is displayed:**
Make sure that the toner cartridge is installed properly. (See "Install Toner Cartridge," on p. 5.)
- **<LOAD PAPER/CASSETTE :A4> is displayed:**
Make sure that paper is loaded in the machine. (See "Set Up the Paper Cassette and Load Paper," on p. 7.)

 
⚠ WARNING

This product emits low level magnetic flux. If you use a cardiac pacemaker and feel abnormalities, please move away from this product and consult your doctor.

🔧 NOTE

- During electrical storms, disconnect the power cord from the power outlet. (Please note that any documents stored in the machine's memory will be deleted when you unplug the power cord.)
- Whenever you unplug the machine, wait at least five seconds before you plug it in again.
- Do not plug the machine into an uninterruptible power supply (UPS).


Connect Telephone Cables

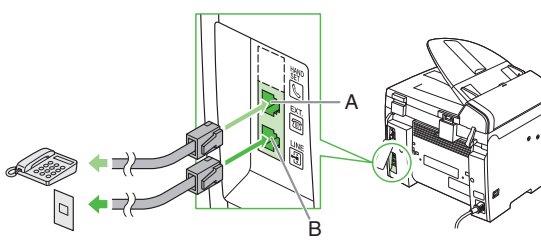

Connect the optional handset to the handset jack (A) on the back side of the machine.
Connect your external telephone to the external device jack (B) on the back side of the machine if required.
Connect the supplied telephone cable to the telephone line jack (C) on the back side of the machine and the wall jack.


Install Handset (Optional)

 1

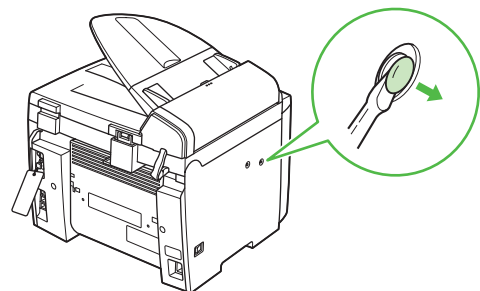

Use a screwdriver to remove the covers on the left side of the machine.

 2

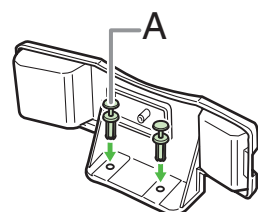


Insert the plugs with pins (A) into the holes on the handset cradle.

NOTE


Do not insert the pins all the way into the plugs at this point.

 3

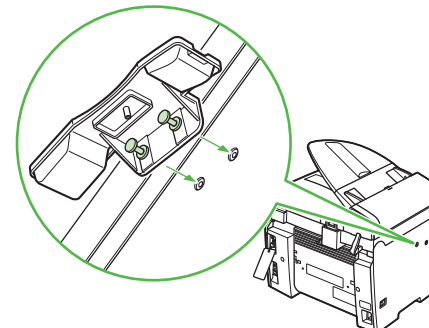


Insert the plugs (with the cradle) into the holes on the machine.

 4

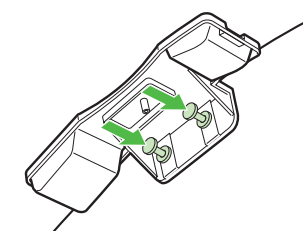


Carefully push the pins into the plugs as far as they will go.

 5

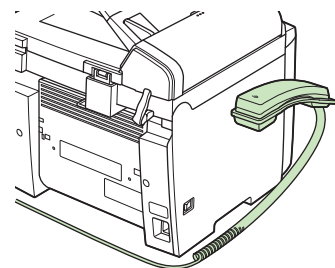


Place the handset on the cradle.

 6

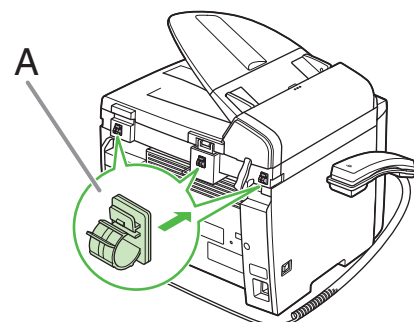

Attach the handset clamps (A) to the back side of the machine.

 7

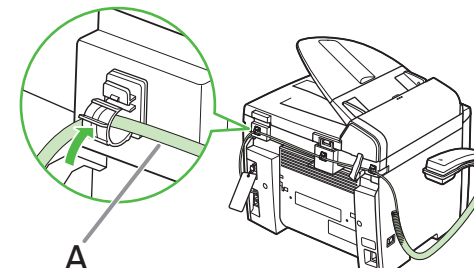


Set the handset cable (A) in the clamps, and close the clamps.

NOTE

If using the handset or an external telephone, make sure to set the fax receive mode to <FaxTel> or <Manual>. For how to set the receive mode, see "Set the Receive Mode," on p. 22.

 Set the Date and Time

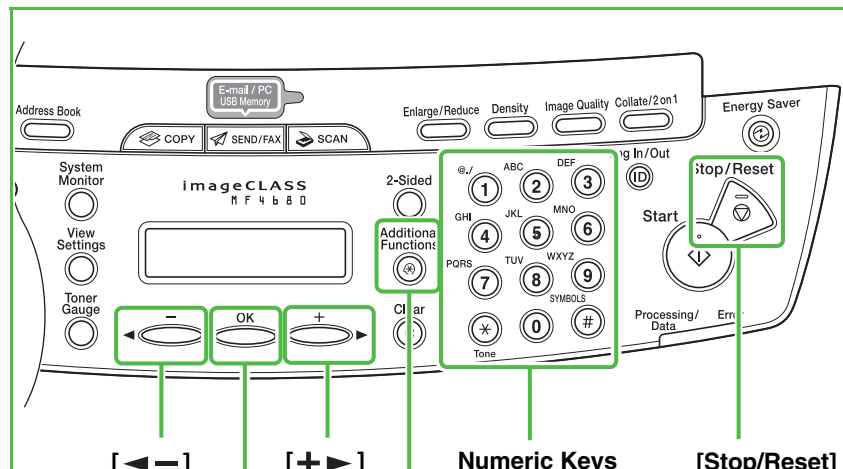

Entering Information

- Numeric keys: Enters numbers.
- [◀] or [▶]: Moves the cursor position.
- [OK]: Confirms the entry.

1 Press [Additional Functions].

2 Use [◀] or [▶] to select <8. TIMER SETTINGS>, then press [OK].

3 Use [◀] or [▶] to select <1. DATE&TIME SETTING>, then press [OK].

4 Use the numeric keys to enter the date (day/month/year) and time (in 24-hour format/military time format), then press [OK].

5 Press [Stop/Reset] to return to the standby mode.

NOTE
You can select the date format among three types listed below at <3. DATE TYPE SELECT>.

- <DD/MM YYYY>
- <YYYY MM/DD>
- <MM/DD/YYYY>

Ex.
DATE&TIME SETTING
31/12/07 23:19

Set the Telephone Line Type

1 Press [Additional Functions].

2 Press [◀] or [▶] to select <5. TX/RX SETTINGS>, then press [OK].

3 Press [◀] or [▶] to select <2. FAX SETTINGS>, then press [OK].

4 Press [◀] or [▶] to select <2. USER SETTINGS>, then press [OK].

5 Press [◀] or [▶] to select <2. TEL LINE TYPE>, then press [OK].

 
6 Press [◀] or [▶] to select the telephone line type, then press [OK].
<TOUCH TONE>: Tone dialing (default)
<ROTARY PULSE>: Pulse dialing

7 Press [Stop/Reset] to return to the standby mode.

Set the Machine for Sending Faxes

Guidelines for Entering Information


The sender information you register in the machine appears in the header of each page received by your recipient.

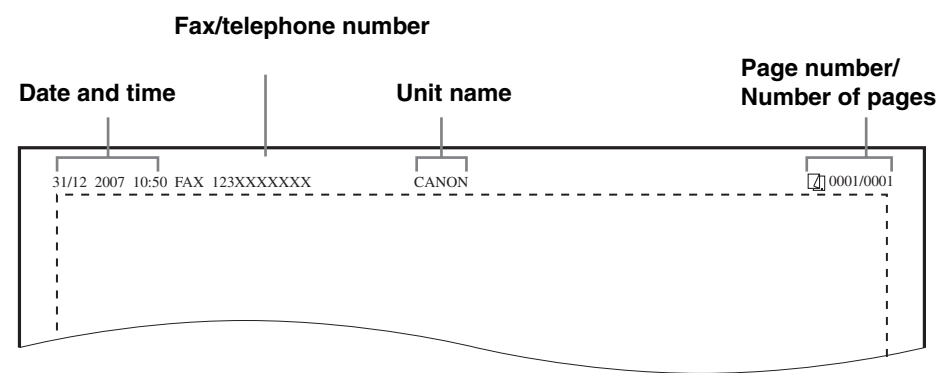

NOTE
Before sending a fax, you MUST register your fax number, unit name, and the current date and time in the machine.

Entering Information

 Use the following keys to enter information in the machine.

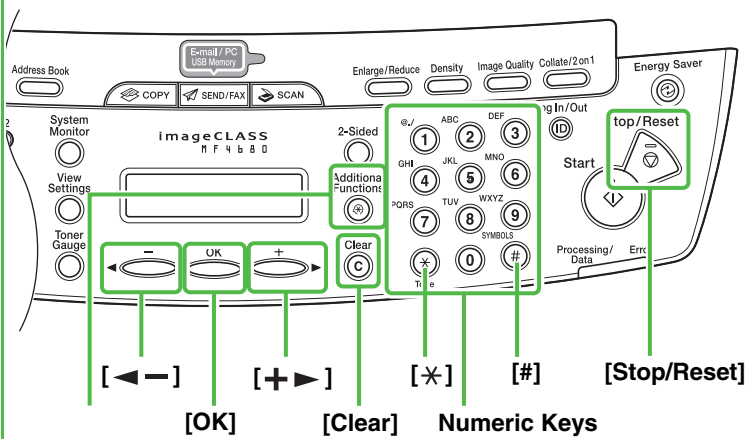


[Additional Functions]

- Use the numeric keys to enter characters. Press the numeric key repeatedly until the required character appears.
- Press [#] to enter symbols.
- Press [*] to switch among input modes:
 - [:A]: Letter (uppercase) mode
 - [:a]: Letter (lowercase) mode
 - [:1]: Number mode
- Press [+>] to move the cursor position right.
- Press [Clear] or [<-] to delete the character before the cursor position. Hold [Clear] to delete the entire entry. Pressing [<-] and [Clear] for entering the unit name moves the cursor left and deletes the character at the position.
- Press [OK] to confirm the entry.

You can enter the following characters in each input mode:

	:A	:a	:1
[1]	@ . - _ /	@ . - _ /	1
[2]	ABC	abc	2
[3]	DEF	def	3
[4]	GHI	ghi	4
[5]	JKL	jkl	5
[6]	MNO	mno	6
[7]	PQRS	pqrs	7
[8]	TUV	tuv	8
[9]	WXYZ	wxyz	9
[0]			0
[*]	↶ :1 → :a → :A ↷		
[#]	- . * # ! " , ; : ^ ` _ = / ' ? \$ @ % & + \ ~ () [] { } < >		

 
Register Sender Information

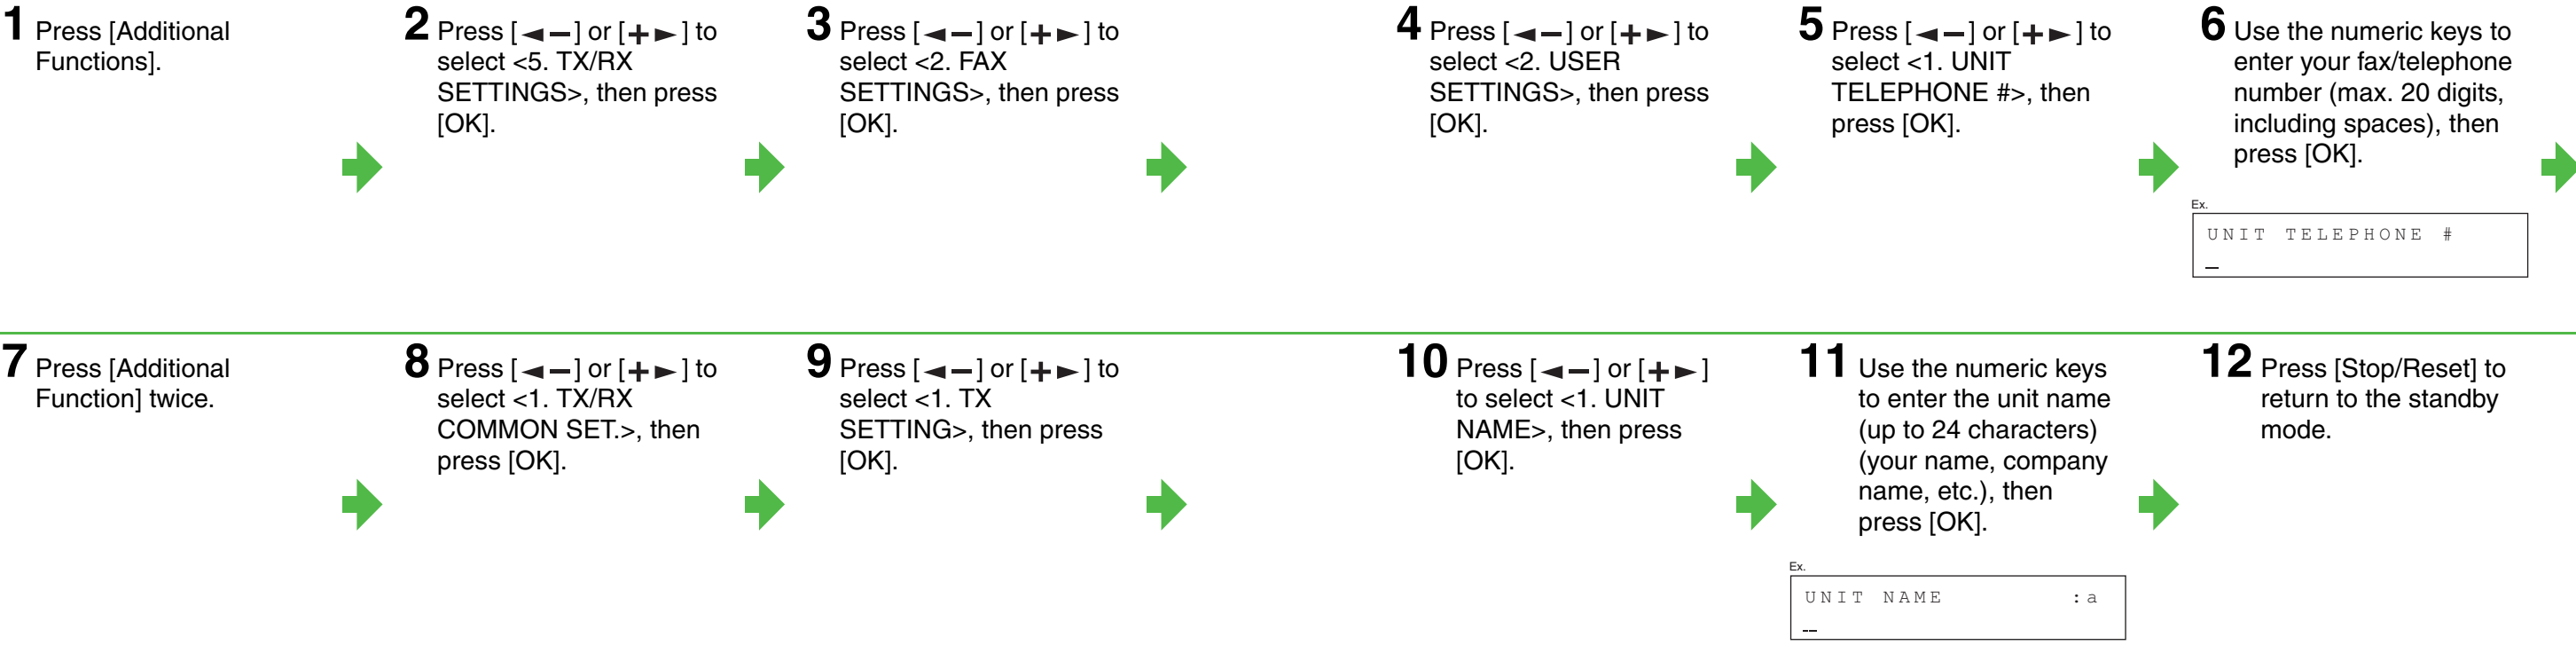

Set the Machine for Receiving Faxes

Select the Receive Mode that Suits Your Needs

 
Follow the chart below to determine the correct receive mode for your needs.

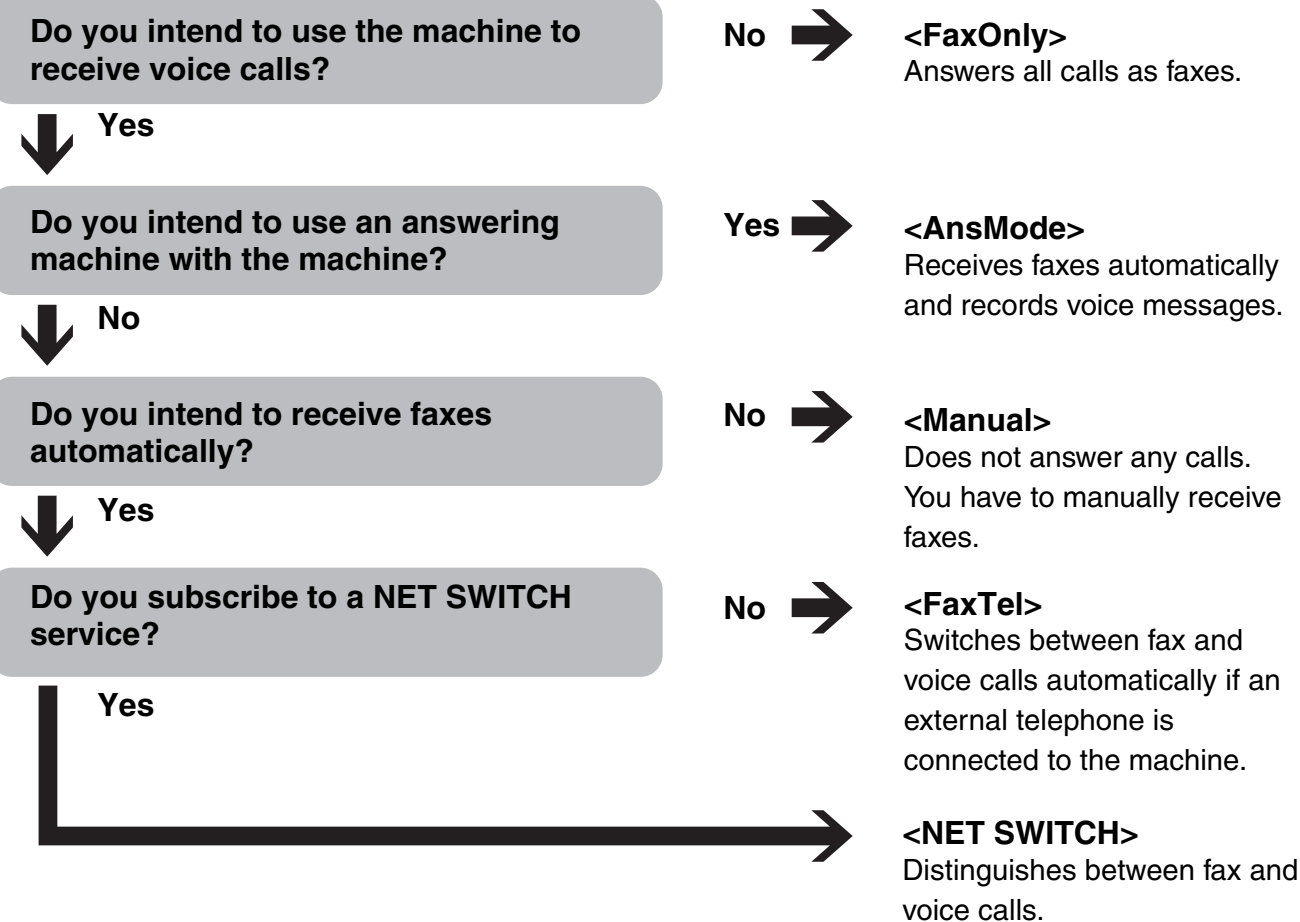

NOTE

- The answering machine must be connected directly to the machine for <AnsMode> to work. (See “Connect Telephone Cables,” on p. 12.)
- The external telephone must be connected to the machine for <FaxTel> or <Manual> to work. (See “Connect Telephone Cables,” on p. 12.) By default, if <FaxOnly> is selected in <RX MODE> and external telephone is connected to the machine, the external telephone rings. If you want to change the setting to silent, select <OFF> in <TX/RX SETTINGS> → <FAX SETTINGS> → <RX SETTINGS> → <INCOMING RING> from [Additional Function].
- **Voice mail is not supported with <AnsMode>.**
- The <NET SWITCH> mode is available for certain countries only and requires subscription to a network switch service. Contact your telephone company for availability.

 Set the Receive Mode

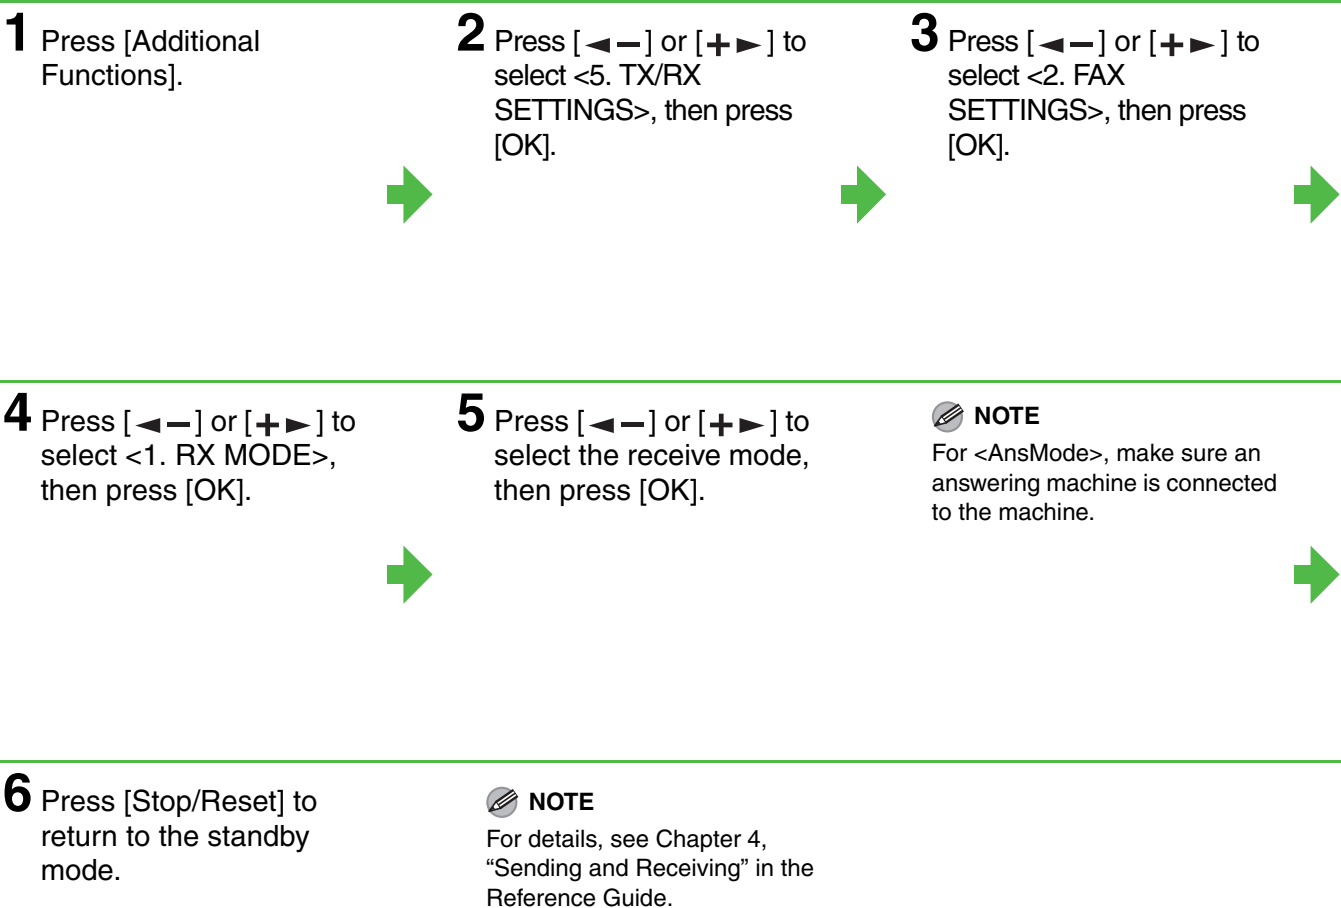

Set the Machine for Network Usage

 
Connect the Machine to a Network

This machine has a USB connector and LAN connector. If the machine is connected to a network using a LAN cable, you can print the documents sent from a computer, send documents to a file server, and send document attached to an e-mail through a network.

NOTE

The machine does not come with a LAN cable.

- 1 Connect a Category 5 or greater twisted pair LAN cable to the 10Base-T/100Base-TX port on the back of the machine. Connect the other end of the cable to a network router or a hub.

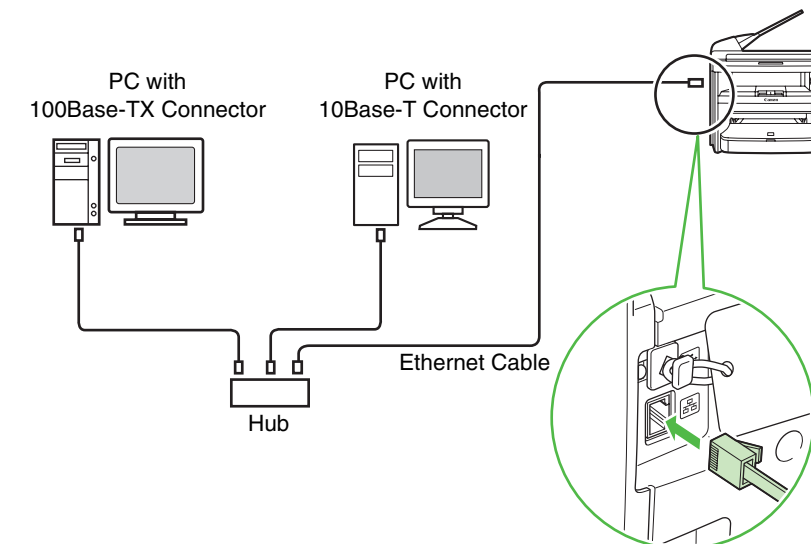

NOTE

If you use the machine as a local printer, connect the machine directly to a computer using a USB cable. (See "Installing/Uninstalling Software," on p. 27.)

Specify the IP Address Settings

 
An IP address must be specified in order to enable communication between the machine and a computer.

NOTE

- It is recommended that the network administrator perform the following procedures.
- Before performing the following procedure, make sure that the machine is turned on and connected to a network.
- This machine is set by default to automatically draw an IP address using DHCP. If your network server or router is configured to provide a DHCP address, all you need to do is connect a network cable and turn on the machine. The machine will draw an IP address automatically.
- This machine also supports automatic IP addresses using BOOTP and RARP protocols. If you use these protocols, select <ON> at step 6 of the following procedures, then specify the <2. BOOTP> or <3. RARP> settings.

Specify the IP Address Manually

- 1 Press [Additional Functions].
- 2 Press [◀] or [▶] to select <11. SYSTEM SETTINGS>, then press [OK].
- 3 Press [◀] or [▶] to select <5. NETWORK SETTINGS>, then press [OK].

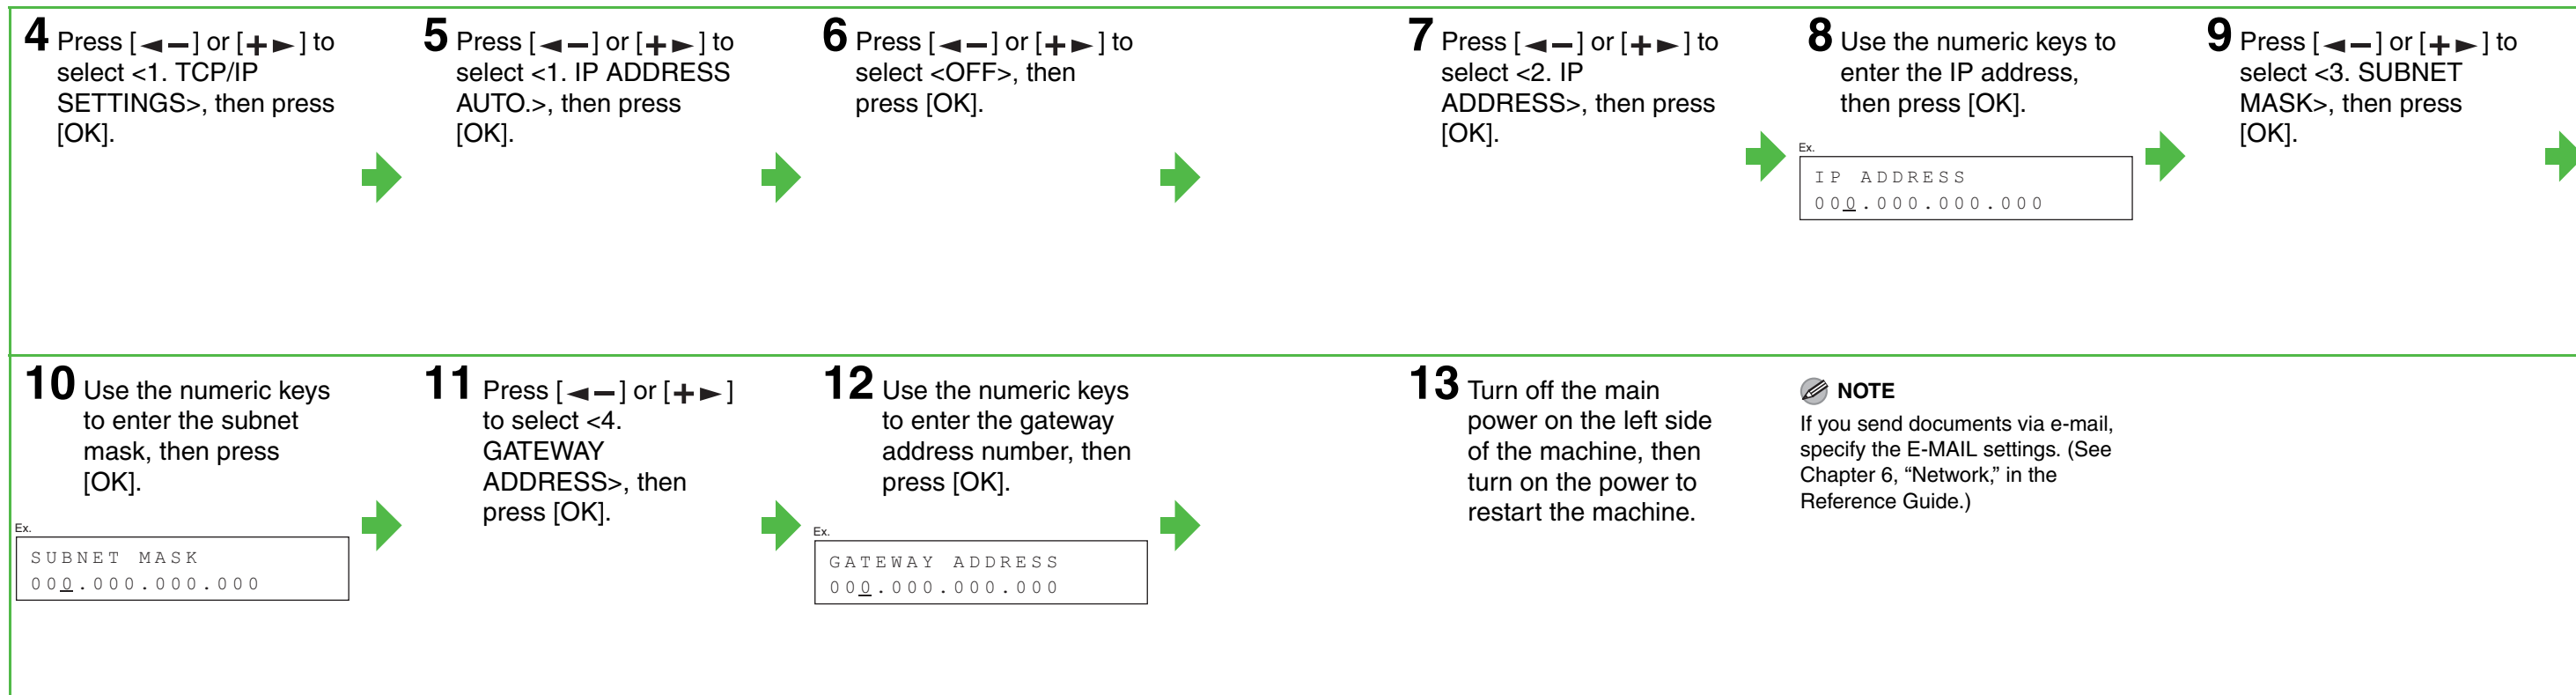

Installing/Uninstalling Software

Installation Procedure

Before Installation:

- Do not connect the USB cable before installing the software. If you connect the USB cable before installing the software and the Found New Hardware Wizard screen appears, click [Cancel].
- For Windows 2000/XP/Server 2003/Vista, logon as Administrator to install the software.
- Make sure the machine is turned on before connecting the USB cable.
- On the screen shown at each step, click on the circled button to proceed.

System Requirements

Microsoft Windows 98/98SE

CPU: Intel Pentium/90 MHz or faster
Memory: 128 MB or more

Microsoft Windows Me

CPU: Intel Pentium/150 MHz or faster
Memory: 128 MB or more

Microsoft Windows 2000

(32bit Version)
CPU: Intel Pentium/133 MHz or faster
Memory: 128 MB or more

Microsoft Windows XP (32bit Version)

CPU: Intel Pentium/Celeron series
300 MHz or faster
Memory: 128 MB or more

Microsoft Windows Server 2003* (32bit Version)

 
CPU: Intel Pentium/Celeron series
133 MHz or faster
Memory: 128 MB or more
* Only for network connection.

Microsoft Windows Vista (32bit Version)

CPU: Intel Pentium 800 MHz or faster
Memory: 512 MB or more

USB Connection

1

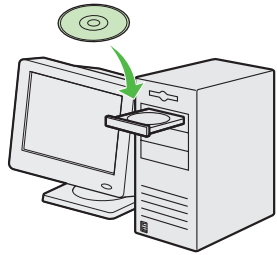


2




If the MF4600 Series CD-ROM Setup screen is not displayed, click [start] on the Windows task bar → [My Computer].
Windows Vista: click [Start] on the Windows task bar → [Computer].
Windows 98/Me/2000: double-click [My Computer] on the Windows desktop. Open the CD-ROM icon, then double-click [MInst] ([MInst.exe]).

 3

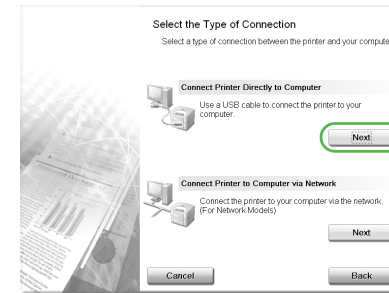


4

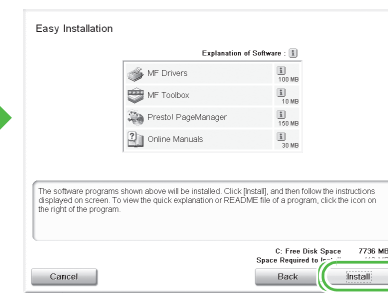 


NOTE

If the disk space is insufficient to install the software, an error message is displayed. Free the disk space, and then try again.

 
5

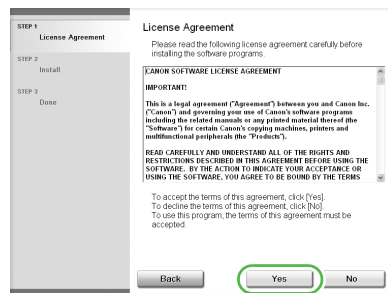

6

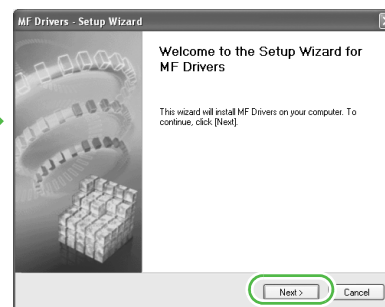 


7

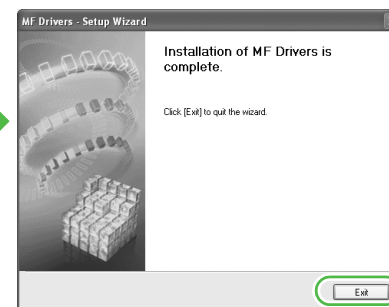 


8



 
9

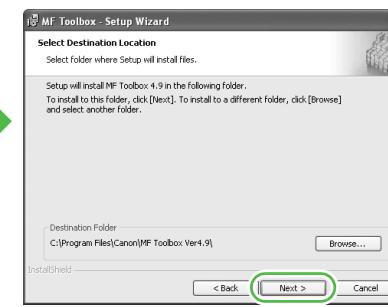


10

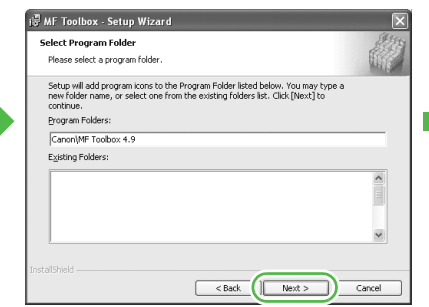 

11

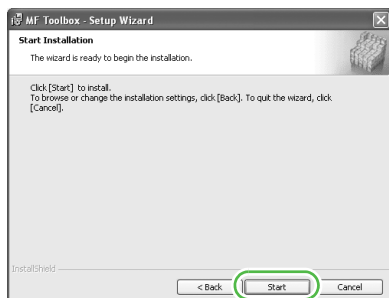 


12

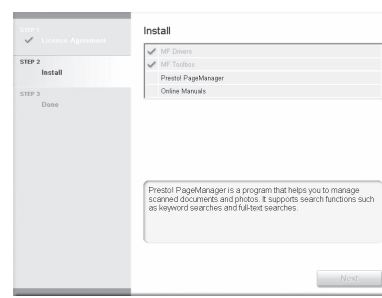 


When you install Presto! PageManager, follow the on-screen instructions.

 13

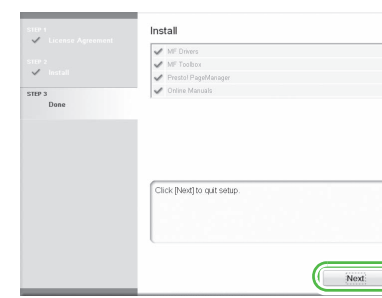


14

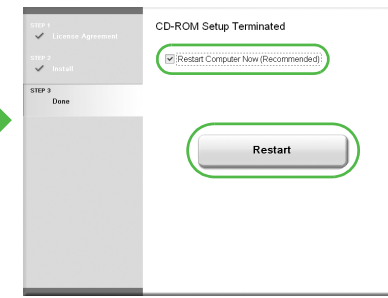 


After checking [Restart Computer Now (recommended)] button, you can restart your computer by clicking the [Restart] button.

 15

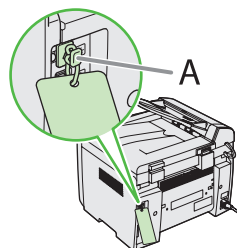

The machine has a cap (A) that covers the USB port on the back of the machine. Remove the cap (A) by pulling the string.

 16

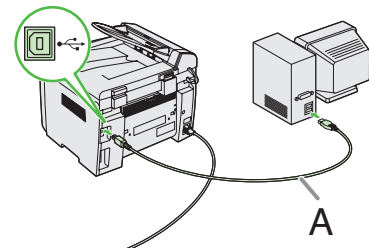


After restarting your computer, connect the machine and your computer with a USB cable (A).

NOTE

If you are using Windows 98/Me, Version Conflict messages may appear during the installation. In this case, click [YES] and continue.

 
17

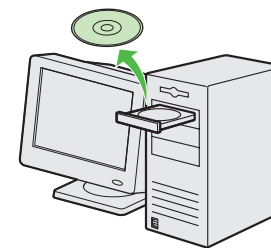

You have now completed installation.

Network Connection

 1

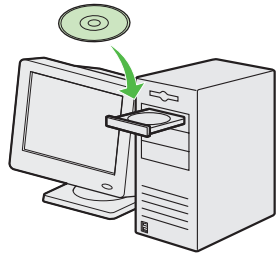


2



If the MF4600 Series CD-ROM Setup screen is not displayed, click [start] on the Windows task bar → [My Computer].

 
3

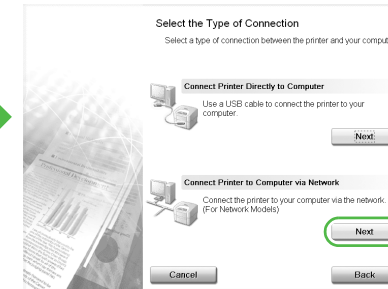


Windows Vista: click [Start] on the Windows task bar → [Computer].
Windows 98/Me/2000: double-click [My Computer] on the Windows desktop. Open the CD-ROM icon, then double-click [MInst] ([MInst.exe]).

While installing the software on a computer running Windows Server 2003, the display in this step does not appear.

 4

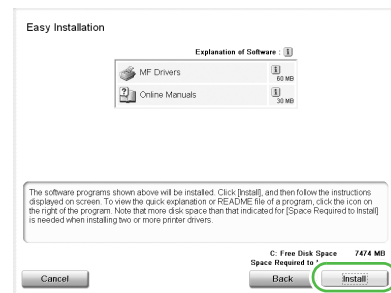


5

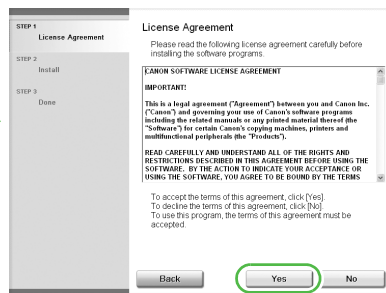 


6



 
7

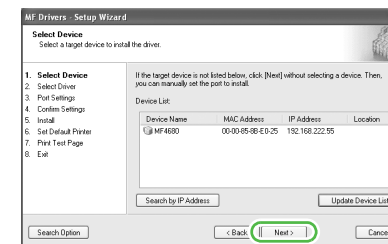


8

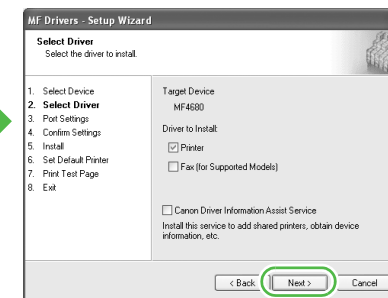 

9

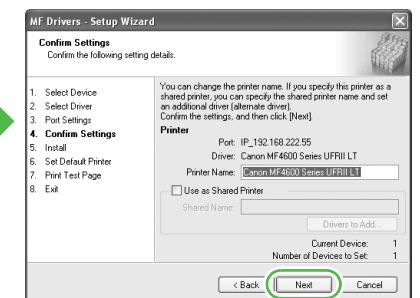 

 Repeat this step for each driver that you have selected.

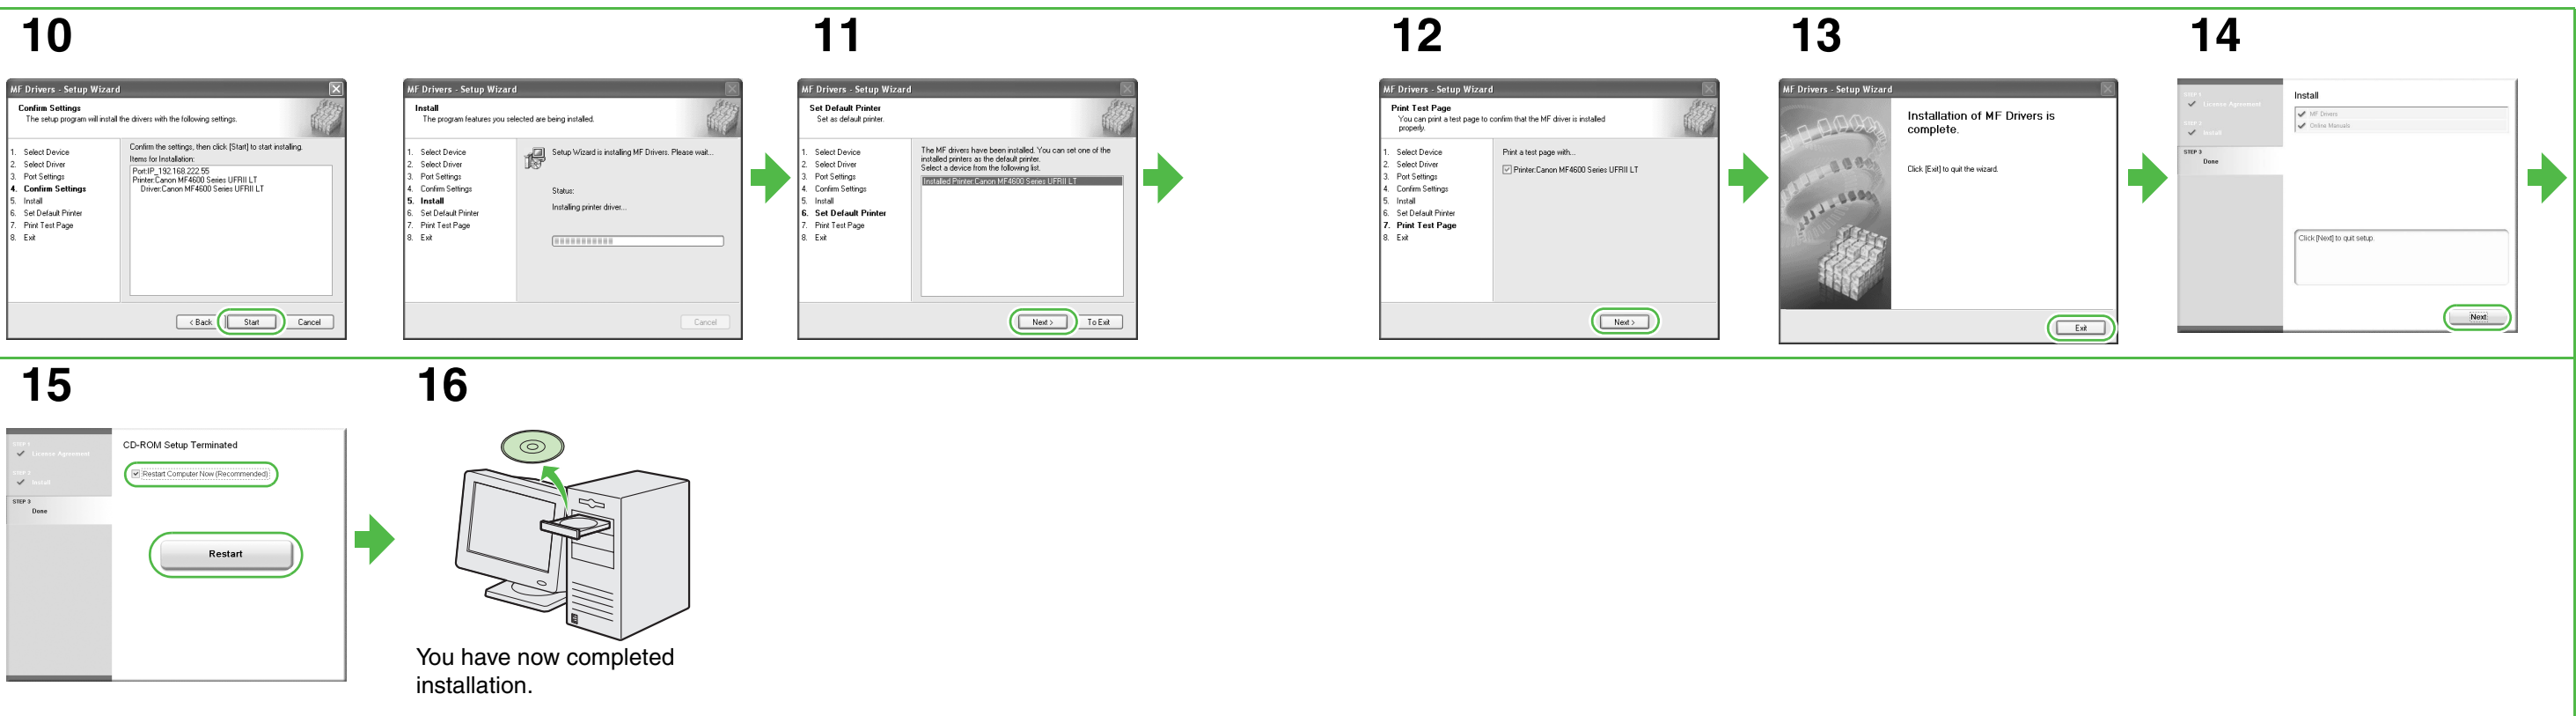

Checking installation

Check if the drivers are installed successfully and that the machine is selected as the default printer.

NOTE

If your machine is selected in the [Printer] area when you open the [Print] dialog box from an application, your machine is set as the default printer.

1 Open the [Printers and Faxes] folder (Windows 98/2000: the [Printers] dialog box).

Windows XP/Server2003: Click [start] on the Windows task bar → select [Printers and Faxes].
Windows Vista: Click [Start] on the Windows task bar → select [Control Panel] → [Hardware and Sound] → double-click → [Printer].
Windows 98/Me/2000: [Start] → [Settings] → [Control Panel] → double-click [Printers].
Make sure the corresponding printer driver icon is displayed.

2 Set as default printer.

Click the printer icon of this product.
Click [Set as Default Printer] from [File] menu.

3 Open the [Scanners and Cameras] folder (Windows 98/2000: the [Scanners and Cameras Properties] dialog box).

Windows XP/Server2003: Click [start] on the Windows task bar → select [Control Panel] → [Printers and Other Hardware] → [Scanners and Cameras].
Windows Vista: Click [Start] on the Windows task bar → select [Control Panel] → [Hardware and Sound] → double-click → [Scanners and Cameras].
Windows 98/Me/2000: [Start] → [Settings] → [Control Panel] → double-click [Scanners and Cameras].
Make sure the corresponding scanner driver icon is displayed.

4 Check if there is the [Canon MF Toolbox 4.9] icon on the Windows desktop.

If the [Canon MF Toolbox 4.9] icon is displayed on the Windows desktop, installation of the MF Toolbox 4.9 has been successful.

Uninstallation Procedure

- Before uninstallation, make sure of the following:
- You have the installation software available for installation.
 - No application is running on your computer.

NOTE

- For uninstallation in Windows 2000/XP/Server2003/Vista, you must be logged on as an administrator.
- For uninstallation, first uninstall the MF Toolbox, and then the MF drivers.
- If you want to remove the manuals installed from [Easy Installation], you can manually uninstall them by selecting the [Additional Software Programs] on the MF4600 Series CD-ROM Setup screen and click the [Uninstall] button for Manual Uninstaller.

Uninstalling the MF Drivers

3 Click [Exit].

1 Click [start] on the Windows task bar → [(All) Programs] → [Canon] → [MF4600 Series] → [Uninstall Drivers].

The [MF Drivers Uninstaller] dialog box appears.

2 Click [Delete].



Uninstalling the MF Toolbox

 
1 Click [start] on the Windows task bar → [(All) Programs] → [Canon] → [MF Toolbox 4.9] → [Toolbox Uninstall].

2 Follow the on-screen instructions.

When the Repair or Remove program selection screen is displayed, check [Remove], then click [Next >]. If asked to confirm removal of an application etc., click [Remove]. Restart your computer if asked to do so.

3 Click [Yes].

Uninstallation proceeds automatically and next dialog box appears.



4 Click [Exit].



NOTE

Restart your computer if asked to do so.

Bundled Programs on the User Software CD

To install the following programs, load the User Software CD into a computer, click on the [Easy Installation] or [Custom Installation] button on the CD-ROM Setup (Software Programs) screen, then follow the instructions that appear on the screen. If the CD-ROM Setup (Software Programs) screen is not displayed, click [Start] on the Windows task bar → [My Computer] (Windows Vista: click [Start] on the Windows task bar → [Computer]. Windows 98/Me/2000: double-click [My Computer] on the Windows desktop). Open the CD-ROM icon, then double-click [MInst] ([MInst.exe]).

● **Presto! PageManager**

Presto! PageManager makes it easy to scan, share and organize photos and documents. For details, see the online manual and online help for this program.

● **NetSpot Device Installer (NSDI)**

NetSpot Device Installer enables you to set up the machine for network operations. When you start this program, click on the [Additional Software Programs] button in step 2 of “Installation Procedure – For USB Connection” or in step 2 of “Installation Procedure – For Network Connection – Install Software,” then follow the instructions that appear on the screen. For details, see the Readme file and online help for this program.



NOTE

 
NetSpot Device Installer is not supported on Windows Vista.

Using Help


The user software CD includes programs (driver software and application software) which the supplied instruction guides do not cover. When you utilize such programs, refer to online help and context sensitive help following the instructions below.

Online Help


You can locate additional help in the online help file provided with the driver software. In the [Properties] dialog box, you can click [Help] to display information about every feature and option in the drivers.

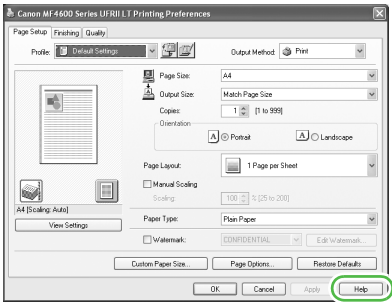

 In the help dialog box, you can click [Contents], then double-click your desired title to display information.

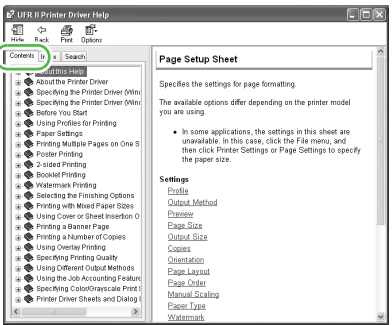

 In the help dialog box, you can click [Index], then double-click your desired keyword in the list to display information. To search the desired keyword quickly, enter a keyword in the upper text box. The nearest keyword is located in the list below.

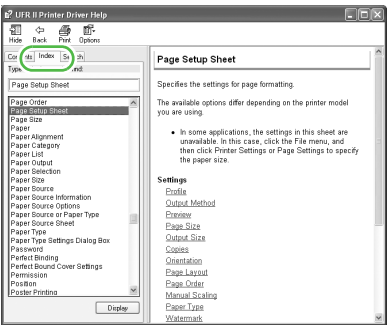

Important Safety Instructions

The following symbols are used throughout the manuals for the machine and indicate the warnings, cautions and notes you should keep in mind when using the machine.

WARNING

Indicates a warning that may lead to death or serious injury if not observed.

CAUTION

Explains how to avoid actions that could injure you or damage your machine.

NOTE

Explains operating restrictions and how to avoid minor difficulties.

Handling and Maintenance

- Follow all warnings and instructions marked on the machine.
- Do not subject the machine to strong physical shocks or vibrations.
- Always unplug the machine before moving or cleaning it.
- To avoid paper jams, never unplug the power cord, open the cartridge cover, or add or remove paper in the machine while printing.
- When transporting the machine, be sure to remove the toner cartridge from the machine.
Place the toner cartridge in its original protective bag or wrap it in a thick cloth to prevent exposure to light.
- Always hold the bottom when you lift the machine. Never lift it by any of its trays or attachments.
- Do not insert any objects into the slots or openings on the machine since they may touch dangerous voltage points or short out parts. This could result in fire or electric shock.
- Do not allow small objects (such as pins, paper clips, or staples) to fall into the machine. If something does fall into it, unplug the machine immediately and contact your local authorized Canon dealer or the Canon help line.
- To avoid spillage in or around the machine, do not eat or drink near it. If you spill liquid or if any substance falls into it, unplug the power cord immediately and contact your local authorized Canon dealer or the Canon help line.
- Keep the machine clean. Dust accumulation can prevent the machine from operating properly.
- Unplug the machine from the wall outlet and contact your local authorized Canon dealer or the Canon help line in any of the following cases:
 - When the power cord or plug is damaged or frayed.
 - If liquid has spilled into the machine.
 - If the machine has been exposed to rain or water.
 - If the machine does not operate normally when you have followed the instructions in this guide. Adjust only those controls that are covered by the instructions in this guide. Improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
 - If the machine has been dropped.
 - If the machine exhibits a distinct change in performance, indicating a need for servicing.

Location

- Place the machine on a flat, stable, vibration-free surface that is strong enough to support its weight.
- Place the machine in a cool, dry, clean, well ventilated place.
- Make sure the area is free from dust.
- Make sure the location is not exposed to high temperature or humidity.
- Keep the machine away from direct sunlight as this can damage it. If you have to place it near a window, install heavy curtains or blinds.
- Do not use the machine near water. Make sure that no wet or humid objects come into contact with the machine.
- Do not use or store the machine outdoors.
- Do not install the machine near devices that contain magnets or generate magnetic fields, such as speakers.
- If possible, place the machine near an existing telephone line outlet for easy connection of the telephone line cord, and to avoid the expense of installing a new outlet.
- Place the machine near a standard 220–240 V AC (50/60 Hz) power outlet.
- To ensure reliable operation of the machine and to protect it from overheating (which can cause it to operate abnormally and create a fire risk), do not block the exhaust vent. Never block or cover any openings on the machine by placing it on a bed, sofa, rug, or other similar surface. Do not place the machine in a cupboard or built-in installation, or near a radiator or other heat source unless proper ventilation is provided. Leave enough space around all sides of the machine.
- Do not stack boxes or furniture around the power outlet. Keep the area free so you can reach the outlet quickly. If you notice anything unusual (smoke, strange odors, noises) around the machine, unplug the power cord immediately. Contact your local authorized Canon dealer or the Canon help line.
- Do not allow anything to rest on the power cord, and do not place the machine where the cord will be walked on. Make sure the cord is not knotted or kinked.

WARNING

Except as specifically described in the manuals of the machine, do not attempt to service the machine yourself. Never attempt to disassemble the machine: opening and removing its interior covers will expose you to dangerous voltages and other risks. For all service, contact your local authorized Canon dealer or the Canon help line.

Model Names
F149300 (MF4680)



As an ENERGY STAR Partner, Canon Inc. has determined that this product meets the ENERGY STAR Program for energy efficiency.

The International ENERGY STAR Office Equipment Program is an international program that promotes energy saving through the use of computers and other office equipment.

The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business proprietors can participate voluntarily.

The targeted products are office equipment, such as computers, displays, printers, facsimiles, and copiers. The standards and logos are uniform among participating nations.

Laser Safety Information

Laser radiation could be hazardous to the human body. For this reason, laser radiation emitted inside this equipment is hermetically sealed within the protective housing and external cover. No radiation can leak from the machine in the normal operation of the product by the user.

This machine is classified as a Class 1 Laser Product under IEC 60825-1: 2007 and EN60825-1: 2007.

220–240 V Model

The label shown below is attached to the laser scan unit on the machine.



This machine has been classified under IEC60825-1:2007 and EN60825-1:2007 and conforms to the following classes:

CLASS 1 LASER PRODUCT
LASER KLASSE 1
APPAREIL A RAYONNEMENT LASER DE CLASSE 1
APPARECCHIO LASER DI CLASSE 1
PRODUCTO LASER DE CLASE 1
APARELHO A LASER DE CLASSE 1

This machine is confirmed as the class 1 laser product in IEC60825-1:2007.

- Laser Diode Information
- wavelength: 775-795 nm
 - maximum power: 5 mW

CAUTION

Use of controls, adjustments, or performance of procedures other than those specified in the manuals for the machine may result in hazardous radiation exposure.

Trademarks

Canon, Canon logo, imageCLASS, and NetSpot are trademarks of Canon Inc.
Microsoft, Windows and Windows Server are registered trademarks of Microsoft Corporation in the United States and other countries.
Windows Vista is a trademark of Microsoft Corporation in the United States and other countries.
All other product and brand names are registered trademarks, trademarks or service marks of their respective owners.

Copyright

Copyright © 2010 by Canon Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon Inc.

Disclaimers

The information in this document is subject to change without notice. CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR NON-INFRINGEMENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

Legal Limitations on Usage of Your Product and the Use of Images

Using your product to scan, print or otherwise reproduce certain documents, and the use of such images as scanned, printed or otherwise reproduced by your product, may be prohibited by law and may result in criminal and/or civil liability. A non-exhaustive list of these documents is set forth below. This list is intended to be a guide only. If you are uncertain about the legality of using your product to scan, print or otherwise reproduce any particular document, and/or of the use of the images scanned, printed or otherwise reproduced, you should consult in advance with your legal advisor for guidance.

 
- Paper Money
- Traveler's Checks
- Money Orders
- Food Stamps
- Certificates of Deposit
- Passports
- Postage Stamps (canceled or uncanceled)
- Immigration Papers
- Identifying Badges or Insignias
- Internal Revenue Stamps (canceled or uncanceled)
- Selective Service or Draft Papers
- Bonds or Other Certificates of Indebtedness
- Checks or Drafts Issued by Governmental Agencies
- Stock Certificates
- Motor Vehicle Licenses and Certificates of Title
- Copyrighted Works/Works of Art without Permission of Copyright Owner

Considerable effort has been made to make sure that the manuals for the machine are free of inaccuracies and omissions. However, as we are constantly improving our products if you need an exact specification, please contact Canon.




A Tip for Saving Paper

The machine comes with useful features that can be combined to reduce the volume of paper used when copying.

Copying regularly

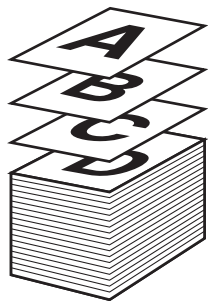

Copying with features combined

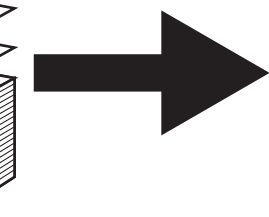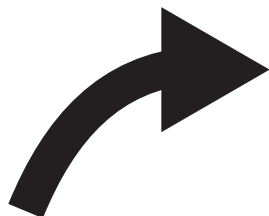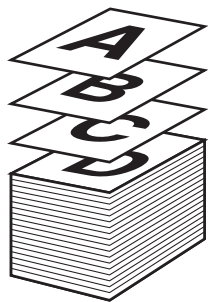   

■ Collate Copying

 
 
(See the Reference Guide.)

■ Two-Sided Copying

(See the Reference Guide.)

■ 2 on 1 Combination

(See the Reference Guide.)

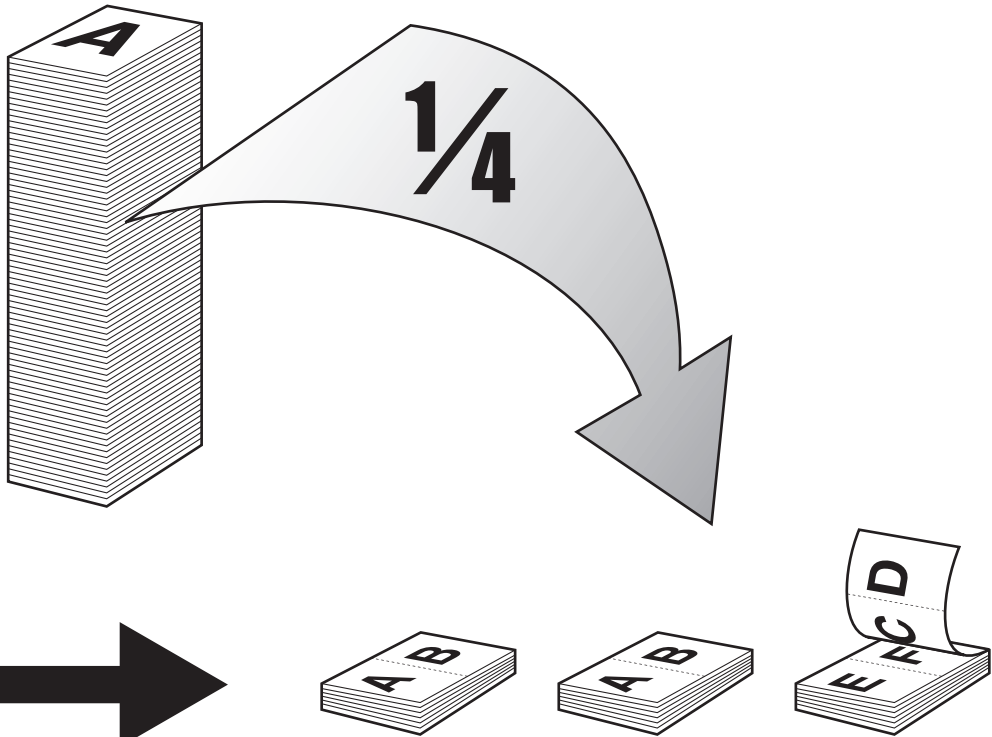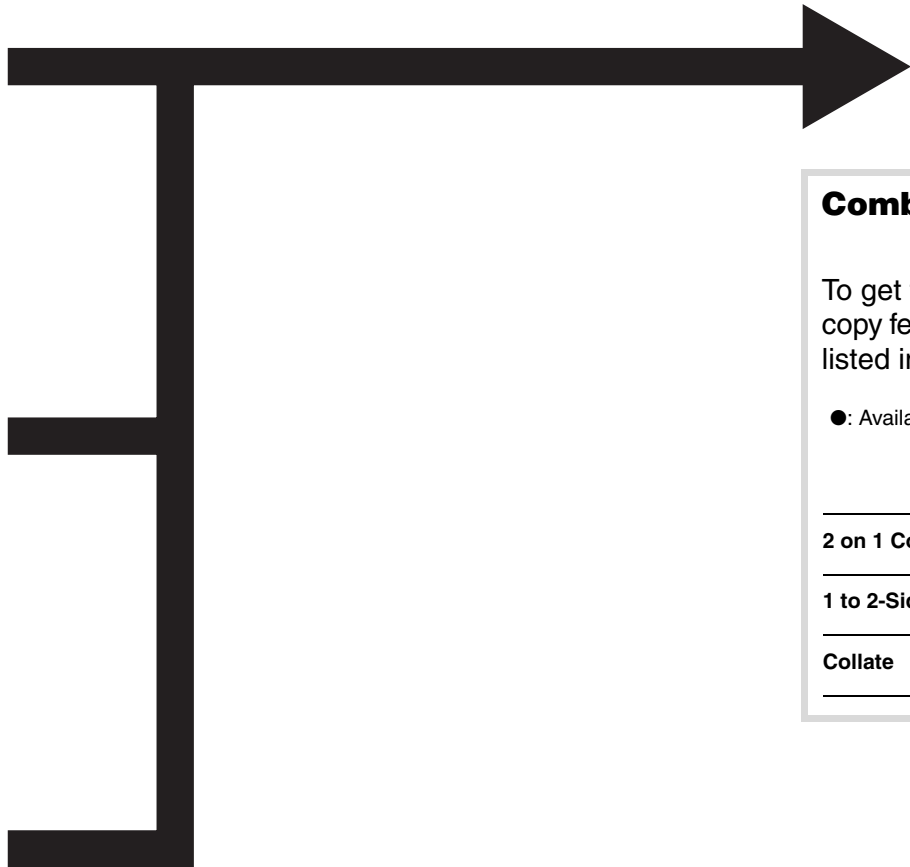

Combinations of Features

To get the best use of the machine's copy features, try other combinations listed in this table.

●: Available

	2 on 1 Combination	1 to 2-Sided	Collate
2 on 1 Combination	●	●	●
1 to 2-Sided	●	●	●
Collate	●	●	●

**CANON INC.**

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

CANON U.S.A., INC.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

CANON CANADA INC.

6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada

CANON EUROPA N.V.

Bovenkerkerweg 59-61 1185 XB Amstelveen, The Netherlands

CANON FRANCE S.A.S.

17, quai du Président Paul Doumer 92414 Courbevoie Cedex, France

CANON COMMUNICATION & IMAGE FRANCE S.A.S.

12, rue de l'Industrie 92414 Courbevoie Cedex, France

CANON (U.K.) LTD.

Woodhatch, Reigate, Surrey, RH2 8BF, United Kingdom

CANON DEUTSCHLAND GmbH

Europark Fichtenhain A10, 47807 Krefeld, Germany

CANON ITALIA S.p.A.

Via Milano, 8 20097 San Donato Milanese (MI) Italy

CANON ESPAÑA, S.A.

c/ Joaquín Costa 41, 28002 Madrid, Spain

CANON LATIN AMERICA, INC.

703 Waterford Way Suite 400, Miami, Florida 33126 U.S.A.

CANON AUSTRALIA PTY. LTD

1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia

CANON CHINA CO., LTD

15F Jinbao Building No.89 Jinbao Street, Dongcheng District, Beijing 100005, China

CANON SINGAPORE PTE. LTD.

1 HarbourFront Avenue #04-01 Keppel Bay Tower, Singapore 098632

230V